

# שואב אבק רובוטי



OVAC

מדריך למשתמש, דגם D58

www.ecovacs.co.il

# תודה על שרכשתם את אחד משואבי האבק הרובוטיים

של Deebot <u>שכסע בכסעת</u> אנו מאחלים לכם שתהנו ממנו!

תודה על שבחרתם בנו!

# תוכן עניינים

הנחיות בטיחות 3	.1
מדריך למשתמש 3	
אספקת חשמל למוצר 3	
טווח השימוש במכשיר 4	
הערות לפני הניקוי5	
הנחיות בטיחות5	
החלפת סוללה 6	
ניצול מקסימלי של הסוללה 6	
6 כאשר המוצר אינו פועל	
תכולת האריזה המקורית ופרמטרים	.2
0	
שמות החלקים 9	.3
6 המכשיר	
פאנל LCD ופאנל שליטה 10	
טעינת הרובוט 10	.4
הרכבת יחידת הטעינה 10	
11	
הפעלה/עצירה/כיבוי12	.5
הפעלה 12	
עצירה 12	
ניבוי 12	
בחירת מצב 13	.6
מצב ניקוי אוטומטי	
מצב ניקוי פינות14	
מצב ניקוי נקודות קבועות14	
מצב ניקוי יסודי	
חזרה לעמדת הטעינה14	
טעינה אוטומטית	.7

זמן הפעולה15	.8
קביעת זמן הפעולה	
תכנות השעה 16	
קביעת תדירות וביטול תזמון 17	
שלט רחוק 17	.9
התקנת הסוללות17	
השימוש בשלט הרחוק 18	
קירות וירטואליים	.10
התקנת סוללות 18	
השימוש בקיר הוירטואלי 19	
20 סרט תיחום	.11
אחסון יומיומי	.12
תחזוקה 21	.13
ניקוי המכשיר 21	
ניקוי קופסת האבק 21	
ניקוי מסנן הספוג ומיכל האבק 22	
החלפת מסנן הספוג 23	
ניקוי המברשת הראשית 23	
ניקוי המברשת הצדדית 24	
החלפת המברשת הצדדית 24	
ניקוי הגלגלים 24	
ניקוי חיישן הגובה 24	
ניקוי חיישן האבק 25	
התרעות 25	.14
תקלות נפוצות 26	.15
בעיות נוספות 27	.16

# 1. הנחיות בטיחות





אזהרה: כאשר יש ירידה בגובה המשטח המנוקה, עקב מדרגה או שינוי גובה, יש להפעיל את המכשיר ולוודא שהוא אכן מזהה את הפרשי הגובה מבלי ליפול. ייתכן ויהיה צורך להציב מחסום פיזי בקצה, כדי למנוע מהמכשיר מליפול, אבל יש לוודא שהמחסום גבוה מספיק, כדי שאתם ובני משפחתכם לא תמעדו ממנו ותיפצעו. כמו כן, חשוב לדאוג שחיישני האבק וחיישני המדרגות יהיו נקיים מאבק, כיוון והדבר עלול להשפיע על היכולת של המכשיר לזהות מדרגות והפרשי גובה.

### אזהרות 🖄

- אין לפתוח את המכשיר. הרכיבים שבתוך הרובוט, כמו גם השלט רחוק והקירות -הוירטואליים, לא נועדו לתיקון על ידי המשתמש.
- המוצר נועד לשימוש ביתי בלבד ואינו מותאם לשימוש תעשייתי או מחוץ לבית. ◄
  - .LCD אין ללחוץ על ה-

#### מדריך למשתמש

אנא פעלו על פי הנחיות הבטיחות הבסיסיות שלהלן:

- קראו את המדרך למשתמש בקפידה והתקינו את הרובוט בהתאם להנחיות המפורטות.
- שמרו על המדריך. אם אתם מעבירים את המכשיר לאדם אחר, אנא וודאו שאתם מצרפים אליו את המדריך.
  - כל הפעלה שאינה על פי ההנחיות במדריך תגרום, קרוב לוודאי, לנזק חמור גם למפעיל וגם למכשיר.



### אספקת חשמל למוצר

- בתוך הרובוט, Ni-MH אספקת החשמל למוצר היא מסוללה נטענת Ni-MH בתוך הרובוט, לה מותאמת במיוחד עמדת הטעינה, לטעינה חוזרת.
- אנא בדקו היטב את המתח החשמלי הנדרש לעמדת הטעינה וודאות
   שהיא מחוברת בהתאם להנחיות.
- אל תשתמשו בכבל חשמלי או בתקע חשמלי פגומים. לקבלת כבל או תקע תקינים, פנו אל היבואן.
- כיוון שעמדת הטעינה כבדה, לעולם אל תגררו אותה באמצעות הכבל החשמלי.
  - זכרו לא לסובב או לעקם את הכבל החשמלי וגם לא לחסום אותו כאשר הדלת סגורה.

אין להניח עליו דברים כבדים.

- אין להניח לכבל החשמלי לגעת במשטחים חמים או חדים.
  - אין להוציא את התקע באמצעות משיכה בכבל.
  - . אין לגעת בתקע, בכבל או במכשיר בידיים רטובות.
- יש להוציא את התקע מהשקע כאשר אין כוונה להשתמש בעמדת הטעינה במשך זמן מה.
- יש להשתמש במטלית יבשה כדי לנגב את האבק מהתקע לעיתים קרובות.

#### ECOVACS

#### טווח השימוש במוצר











- הרובוט נועד לניקוי אבק בייתי, כולל רצפות עץ, רצפות גומי, אריחים קרמיים, לינולאום ושטיחים בעלי שיערות קצרות עד בינוניות. לא ניתן להשתמש בו בשטיחים בעלי שיער ארוך.
  - לא ניתן להשתמש בו ברצפות במקרים שלהלן:
  - מים על פני המשטח (כולל נוזלים דליקים), כגון רצפה רטובה.
    - בתוך השירותים, חדרי האמבטיה או מקומות לחים אחרים.
      - מדרגות.
      - חדר שבו יש אח או אש.
      - החפצים שלהלן אסורים בתכלית האיסור:
- אש שלא כובתה, בדלי סיגריות או גפרורים בוערים, כיוון שחפצים
   אלה עשויים לגרום לשריפה.
  - חפצים חדים כגון שברי זכוכית, סיכות, אטבי נייר, אבנים, גבס
     ופיסות נייר גדולות. הם עשויים לחסום את המכשיר.
- מים או כל נוזל אחר, במיוחד חומרי ניקוי, נפט, דלק, צבע, אלכוהול, בושם וכן תכשירים לניקוי רצפות או שטיחים. הם ירטיבו את חלקו הפנימי של המכשיר ויגרמו לקצר חשמלי.
  - מיכלים של מדפסות ומכונות צילום לייזר, עשויים להתלקח ולגרום לפיצוץ.
    - יש להרחיק את המכשיר ממשטחים חמים, כגון תנור או אח, כיוון שהחום עשוי לעוות את הציפוי.
    - אין להשתמש במכשיר בסביבה שבה סכנת התלקחות או פיצוץ.
       לדוגמה, בתחנות דלק, מחסני שמן, מפעלים כימיים וכדומה.
  - אין להשתמש במכשיר מחוץ לבית. הגשם או האבק והפסולת עשויים להיכנס לתוך המכשיר ולגרום לו לנזק.
    - אין לתקן או לשנות את המכשיר בעצמכם.
      - אין לזרוק או לכופף את המכשיר.
    - אין להרטיב את המכשיר, כיוון שהדבר יגרום לקצר חשמלי ולסכנת התלקחות או התחשמלות.
      - . טפלו במכשיר בקביעות ושמרו אותו במקום נקי.
- אין לחשוף את המכשיר לחום או קור קיצוניים. אין להשאיר את המכשיר
   במקום בו יהיה חשוף לטמפרטורה מתחת לאפס או מעל 30 מעלות
   למשך זמן ממושך.
  - אין להשאיר את המכשיר חשוף לנוזלים או ללחות גבוהה.
    - אין לקרב את המכשיר לחפצים בוערים.

# הערות לפני הניקוי









- היזהרו במיוחד כאשר מפעילים את הרובוט בפעם הראשונה. אנא הסירו כל מכשול שנמצא מעבר להישג ידו של הרובוט. נסו להימנע ממצבים שבהם הרובוט מפסיק לעבוד.
  - נסו לפתור מראש בעיות שעשויות להקשות על הניקוי, כגון:
    - אחסנו חפצים שיכולים לגרום למעידה במקום בטוח.
      - קצוות של שטיחים.
      - . וודאו שמפות שולחן ווילונות אינם נוגעים ברצפה.
        - יש לנתק מכשירים דליקים ממקור אש.
        - יישרו את הכבל החשמלי שעל הרצפה.
- בדקו האם המברשת הראשית מותקנת כיאות במקומה בתוך הרובוט לפני הניקוי.
- בדקו האם קופסת האבק נקייה וודאו שהיא מותקנת במקומה כיאות.
  - ראו אם חיישן הגובה וחיישן האבק נקיים.

### הנחיות בטיחות



המכשיר אינו מיועד לשימוש על ידי בני אדם (כולל ילדים) עם מוגבלויות פיזיות, חושיות או מנטליות או כאלה שחסר להם הניסיון והידע, אלא אם הם קיבלו הנחיות ומשגיחים עליהם בעל הפעלת המכשיר.





- טפלו היטב במכשיר והרחיקו אותו מילדים ומאנשים שאינם יכולים לזהות סכנה קרובה. יש להקפיד ולהשגיח על המכשיר בתחילת הפעולה.
- יש ליידע את האנשים בחדר כאשר המכשיר פועל, כדי להימנע מנזק יש ליידע את האנשים בחדר כאשר המכשיר פועל, כדי להימנע מנזק ידי-אדם, כגון מעידה.
- אין להתייחס אל הרובוט כאל משחק. יש להקפיד ולשים לב כאשר יש
   ילדים או בעלי חיים בסביבה.
- אריזת הפלסטיק עשויה להוות סכנת חנק ויש להרחיק אותה מילדים.

# החלפת סוללה



- במקרה של צורך בהחלפת סוללות, אנא פנו אל היבואן. אם תחליפו את הסוללות בסוללות של דגם אחר, הדבר עשוי לגרום לפיצוץ.
  - אסור בתכלית האיסור להשתמש בסוללות או במטען של יצרן אחר. הנזק שייגרם מכך אינו באחריותנו.
    - יש למחזר סוללות שאינן פועלות עוד, כדי למנוע פגיעה בסביבה. 🕚

#### הגנת הסביבה



- יש להשליך את האריזה לפח המיועד לה.
  - מומלץ למחזר את חומרי האריזה.

• כאשר המוצר	•	אין לתקן או לפרק את המכשיר כאשר נגרם נזק לכבל החשמל או
אינו פועל		כאשר המכשיר אינו פועל.
•	•	יש ליצור קשר עם היבואן לשם תחזוקה ותיקון מקצועי.



הטעינה	יחידת הטעינה		המכ	
AC220-240V	מתח כניסה	DC14.4V	מתח פעולה	
DC17.5V	מתם וועוער	30W	עוצמה	
DC17.5V	מתח יציאה	0.25 מטר/שנייה	מהירות	
50Hz	תדר	0.7 ליטר	קיבולת קופסת האבק	
30W	עוצמה	≤62dB	רעש	
0.8A	תדר יציאה	בערך 3 שעות	משך הטעינה	
קיר וירטואלי		בערך 60 דקות	משך הזמן עד לטעינה	
DC3V	מתח כניסה	בערך סט רקות	מלאה של הסוללה	
רחוק	שלט רחוק		כיסוי מקסימלי כאשר	
DC3V	מתח כניסה	120-150M <sup>2</sup>	הסוללה טעונה לגמרי	
		100×330×330 מ"מ	גודל	
ב 5 מטר ≤	מרחק השלט הרחוק	2.8 ק"ג	משקל נטו	



9

ECOVACS



### 4. טעינת הרובוט

#### התקנת יחידת הטעינה



יש להציב את יחידת הטעינה על משטח שטוח וישר ולוודא שהיא אנכית לקרקע. בו-זמנית, יש להסתכל על המתח החשמלי המצוין, כדי לוודא שאתם משתמשים במוצר על פי ההנחיות.



כרכו את כבל החשמל על הוו ואל תדחפו אותו מאחורי יחידת הטעינה או מתחת לבסיס, כדי שהרובוט לא ייתקל בו כשהוא חוזר לעמדה לטעינה.



טעינת הרובוט



יש לוודא שאין חפצים במרחק של לפחות 1.5 מטר מול יחידת הטעינה. בנוסף, כל דבר בעל מחזיר אור חזק אינו אמור להיות מוצג מול חיישן האינפרא-אדום. לדוגמה, זכוכית מחוסמת, אגרטל קרמיקה חלק וכדומה. אחרת, המכשיר לא יקלוט את עמדת הטעינה.

# הערה

עצות

אין להציב את יחידת הטעינה בסמוך למדרגות, כדי להימנע מסכנת נפילה.

- יש לטעון את הרובוט לפני ההפעלה הראשונה. יש להוציא ממנו את הסוללות כאשר הן טעונות במלואן, על מנת להבטיח פעולה יעילה. משך הטעינה ינוע סביב ה- 3 שעות.
- הטעינה מורשית רק בטמפרטורות הנעות בין 0 ל- 45 מעלות. חום או קור קיצוניים יאריכו את משך הטעינה ועשויים לגרום נזק לסוללה.





- על מנת לוודא שהרובוט פועל בתנאי לחות, אנו ממליצים להשאיר את המטען מחובר גם כאשר נורית הטעינה מראה שהסוללה טעונה במלואה. כך, המערכת תוליך את הזרם החלש לשם טעינה מספקת.
  - על פי המצב הקיים, הרובוט יכול להמשיך לעבוד בערך 60 דקות לאחר שהוא טעון במלואו.
- יכולת הסוללה, כאשר אינה בשימוש במשך זמן רב, תפחת במידה מסויימת ולכן משך השימוש עשוי להתקצר בהתאם.

#### ECOVACS

# 5. הפעלה / עצירה / כיבוי

### חיבור לחשמל והפעלה



לחצו על הלחצן שבתחתית המכשיר כדי להפעילו.



- לחצו על לחצן ה- 💿 שביחידה המרכזית וחברו אותה לחשמל. אמור להישמע צליל קצר ובו-זמנית, נוריות ה- LCD יידלקו למשך 2 שניות ולאחר מכן יכבו.
  - לאחר מכן, לחצו על לחצן ה- 🖬 כדי להפעיל את הרובוט.



#### עצירה



 לחיצה על לחצן ה- זו יכולה לעצור את פעולת הרובוט ולגרום לו להישאר במקומו.

### עצות

- במצב עצירה, ניתן לאפס את מצב הניקוי ולאחר מכן ללחוץ שוב 🗸 🚺 על לחצן ה- 📊 והמכשיר יחזור לפעול.
  - דרך נוספת לעצור היא כאשר הרובוט עובד, ניתן ללחוץ על כל לחצן שהוא ביחידה המרכזית או להרים אותו.

#### כיבוי





- אם ברצונכם לגרום לרובוט להפסיק לעבוד, באפשרותכם ללחוץ על
   הלחצן סער המכשיר במצב עצירה ולאחר מכן לכבות אותו.
- החזירו את הרובוט ליחידת הטעינה לאחר שהוא מפסיק לעבוד, כדי
   למנוע מקרה שבו אנשים ייתקלו בו וייפלו.

### עצות

- חברו את הרובוט ליחידת הטעינה והניחו לו להיטען כאשר הוא מסיים לנקות את הבית.
  - אין להשאיר את הרובוט במצב עצירה למשך זמן ממושך, כיוון שבמצב זה, הסוללה יכולה להחזיק מעמד רק 20 שעות. אנו ממליצים להחזיר אותו למקומו כאשר הוא אינו בפעולה.

# 

מצב ניקוי אוטומטי אעומטי

# הנחיות למצבים השונים

המשמעות בה הנעשה שימוש לעיתים קרובות במדריך זה אודות שלושת מצבי הפעולה היא כלהלן: מצב פעולה: הרובוט עובד ומנקה. מצב מוכן לפעולה (סטנד-ביי): מקרה ראשון: לחצו על לחצן ה- 💽 ואל תפעילו. מקרה שני: לחצו על 📩 או על כל לחצן שהוא ביחידה המרכזית כאשר הרובוט פועל והוא ייעצר. מקרה שלישי: הרמת הרובוט. מצב כיבוי: אין מדובר בהפעלת המכשיר או בלחיצה עליו כאשר המכשיר פועל.

כאשר לוחצים על לחצן ה- 📼 במצב המתנה, המכשיר יכבה.

# AUTO







תיאור נתיב הניקוי: ראשית, המכשיר ינוע קדימה. הוא יפנה רק כאשר ייתקל במכשול. מצב זה ייוותר על כנו עד שהרובוט יאתר שהסוללה הולכת להתרוקן ואז הוא יחזור לעמדת הטעינה.

אם הרובוט מאתר שיש אבק רב בנקודת ההתחלה, הוא יבחר בנתיב בצורת מניפה או בנתיב ספירלי.

- בנסיבות רגילות, המכשיר יבחר בנתיב ספירלי כאשר הוא מאתר שיש חלקיקים גדולים רבים והוא יבחר בנתיב בצורת מניפה כאשר יש רק מעט חלקיקים קטנים.
  - אם הוא יבחר במצב זה, כיסוי הניקוי יהיה מקסימלי בהשוואה לאזור בגודל זהה. אנו ממליצים על מצב זה כמצב הניקוי הרגיל לבית.

### מצב ניקוי פינות 🛅



תיאור נתיב הניקוי: במצב זה, ברגע שהרובוט מזהה חפצים, הוא ינקה לאורכם, למשל לאורך קיר, עד שהוא ייתקל במכשול ואז הוא ישנה את מסלולו המקורי.

במצב זה, הרובוט יעזור לנקות את פינות הבית, השולחן, הספה והמיטה, מקומות שמצב הניקוי האוטומטי אינו מגיע אליהם. הפעלה במצב זה אורכת כ- 25 דקות ולאחר מכן, הרובוט חוזר לעמדת הטעינה בעצמו.

### מצב ניקוי נקודות קבועות 🕂



תיאור הנתיב: במצב זה, הרובוט מהמרכז כלפי חוץ בצורה ספירלית ומתמקד בנקודה מסויימת, לניקוי חד-פעמי. כיסוי הניקוי הוא מעגל בקוטר של 1.2 מטר.

- א מצב זה נכון לאזורים מסויימים שבהם אבק רב.
- במצבים רגילים, מחזור ניקוי אחד אורך לא יותר מ- 6 דקות. במהלך הפעולה, אם הרובוט ייתקל שוב ושוב במכשור או יזהה מדרגות, הוא ישנה את מסלולו כדי להימנע מהמכשור או מהמדרגות, כדי לחזור לעבוד באותו המצב.
  - . הרובוט יישאר במקום שבו הוא יעצור וישמיע צליל לאחר שיסיים.

### מצב ניקוי יסודי 🔎



תיאור הנתיב: במצב זה, הרובוט פועל בנתיב בו הוא פועל במצב ניקוי אוטומטי. הוא יחפש את עמדת הטעינה בעצמו, כאשר הסוללה מתרוקנת.

- במצב ניקיון זה, הניקיון הוא במיטבו. ◄
- אם המקום מלוכלך למדי, אנו ממליצים להפעיל את המכשיר במצב זה. ◄

### מצב חזרה לעמדת הטעינה 🖻



תיאור הנתיב: הרובוט יחפש את עמדת הטעינה אוטומטית כאשר הוא מבחין שהסוללה עומדת להתרוקן. נורית ירוקה תהבהב ברגע שהמכשיר יתחבר למטען.

# 7. טעינה אוטומטית



חדר צר

X

- כאשר הוא מסיים לנקות או כאשר הסוללה מתרוקנת, המכשיר יחפש את המטען באותו הנתיב בו הוא פועל בניקוי אוטומטי. על מנת להקל על הרובוט למצוא את עמדת הטעינה, עליכם להשעין את העמדה כנגד קיר ולוודא שאין מכשולים במרחק של 1.5 מטר לפני מקלט האינפרא-אדום. וודאו שאין מחזיר אור בוהק מול המטען, כגון זכוכית מחוסמת, אגרטל קרמיקה חלק וכדומה.
  - נדרש לרובוט זמן למצוא את המטען. זמן החזרה שונה בהתאם למצב המשטח.
  - הרובוט יכול לחזור אל המטען אם מצב המשטח אינו מורכב. בנסיבות מורכבות, כגון בית גבוה ותצורה ממורכבת, קרוב לוודאי שהרובוט יתקשה למצוא את המטען. במצב כזה, עליכם לעזור לו ולהחזיר את הרובוט למקומו.



- במצב 🖻, המברשת הראשית תפסיק לפעול והרובוט לא יוכל לנקות.
- הרובוט יישאר במטען כאשר הוא מסיים לטעון ויעבור למצב של זרם נמוך, על מנת להישאר טעון עד תחילת הפעולה. אם קבעתם זמן מסויים לפעולה, הוא ייצא מהמטען כדי לנקות כאשר יגיע זמן הפעולה.

# 8. תזמון פעולה

### קביעת זמן פעולה תזמון בפעם הראשונה

#### :עצות

- היקף הבחירה: ניתן לבחור שעות בין 0 ו- 23,
   ודקות בין 0 ו- 59.
- בנסיבות רגילות, השעה המוצגת ב- LCD תהיה השעה במקום מגוריכם.

- 1. לאחר שהמכשיר דולק, המשיכו ללחוץ על ♥ במשך כ- 3 שניות, עד שנורית ה- ₪ בצג ה- LCD תידלק והמספר עם קביעת הזמן יופיע ויהבהב.
- 2. קבעו שעה ודקות באמצעות ▲ ו- ▼. בכל פעם שתלחצו על ▲ השעה או הדקות יעלו, בעוד שכאשר תלחצו על ע, השעה או הדקות יפחתו.
- 3. כאשר אתם מסיימים לקבוע את הזמן. לחצו שוב על ♥ ועיברו לקביעת התזמון השני.



15



#### ECOVACS

#### תזמון בפעם השניה



#### עצות:

- היקף הבחירה: ניתן לבחור שעות בין 0 ו- 23,
   ודקות בין 0 ו- 59.
- בנסיבות רגילות, השעה המוצגת ב- LCD תהיה השעה במקום מגוריכם.

- .1. כעת, ה- 🖽 דולק והמספר עם קביעת הזמן מהבהב.
- 2. קבעו את השעה והדקות באמצעות ▲
   ו- ▼. בכל פעם שתלחצו על ▲ השעה
   או הדקות יעלו, בעוד שכאשר תלחצו על
   ▼, השעה או הדקות יפחתו.
- 3. לחצו שוב על 🍳 ועיברו לקביעת השעה הנוכחית.



#### קביעת השעה הנוכחית



 בנסיבות רגילות, השעה המוצגת ב- LCD תהיה השעה במקום מגוריכם.

- 1. לאחר קביעת התזמון השני, עיברו לקביעת השעה הנוכחית. ה- ₪ ייעלם והמספר עם קביעת השעה יהבהב.
- 2. קבעו שעה ודקות באמצעות ▲ ו-▼. בכל פעם שתלחצו על ▲ השעה או הדקות יעלו. לאחר מכן, לחצו על לאישור.
  - 3. לאחר מכן, עברו לקביעת התדירות.



- אם אתם מבקשים לבטל את התזמון הראשון או השני, אנא חזרו על קביעת זמן הניקוי וקבעו 🔸 את השעה ל- 00:00. לאחר מכן, הסמל 🖽 ייעלם.
  - פרק הזמן בין שני התזמונים צריך לעלות על 4 שעות. ◄

### אזהרות 🖄

- כאשר המתח מנותק, הרובוט לא יתחיל לפעול בזמנים שנקבעו לו. אם כבר קבעתם מועד לניקוי, אנא הפעילו את הרובוט והשאירו אותו במצב המתנה, למרות שהוא אינו פועל. נסו לגרום לו להישאר במטען וודאו שהוא מחובר.
- וודאו שהשקע מחובר לתקע, אחרת הרובוט לא יוכל לפעול במועד שנקבע לו במצב המתנה, כיוון שהסוללה לא נטענה.

#### קביעת תדירות וביטול התזמון

#### עצות

- לא משנה באיזה מצב פעל הרובוט בפעם האחרונה, כאשר המועד שנקבע מתקרב, הרובוט •
  יעבוד בהתאם למצב האוטומטי.
  - אם הרובוט פועל במצב ניקוי פינות או במצב ניקוי נקודה קבועה, כאשר המועד שנקבע -מתקרב, הרובוט לא יעבוד עד שהמועד הבא יגיע.

ניתן לקבוע תדירות זמן ניקוי באמצעות לחיצה על 堅 ושחרורו.

- . כדי לנקות במועד שנקבע באופן חד-פעמי 🛈
- . כדי לנקות במועד שנקבע בכל יום מעתה ואילך  $\mathbb C$
- כדי לבטל מועד שנקבע. הרובוט יעבוד רק כאשר יפעילו אותו 🟵 ידנית.



# 9. שלט רחוק

### החלפת סוללה



- (מס' 7) המכשיר מגיע עם שתי סוללות אלקליין AAA (מס' 7)
- וודאו שאתם מכניסים אותן כיאות למקומן, בהתאם לסימונים.
- החליפו את הסוללות כאשר אתם מבחינים שהסוללה מתרוקנת וודאו שאתם משתמשים באותו סוג סוללות, כיוון שאסור להשתמש בסוגי סוללות שונים.
- הוציאו את הסוללות אם אינכם משתמשים בשלט הרחוק במשך זמן ממושך, כדי למנוע נזילת אלקטרוליטים, דבר העשוי לגרום לתקלה במכשיר.
  - אל תניחו את השלט הרחוק במקום חם או לח מאוד. ◄
  - אין להכניס לשלט הרחוק כל רכיב נוסף, במיוחד כאשר מחליפים סוללות. ◄
  - אסור לחשוף את משדר האותות לאור השמש או לציוד תאורה, אחרת הוא עשוי להיפגם. ◄

#### השימוש בשלט הרחוק



באפשרותכם לשלוט ברובוט באמצעות השלט הרחוק.

- הסיעו את הרובוט לאזור אותו אתם מבקשים לנקות באמצעות שימוש בלחצן
   השליטה וההכוונה.
  - בחרו מצבי פעולה שונים, בהתאם לבחירתכם.

אנב ניקוי אוטומטי / 🗋 מצב ניקוי פינות / 🔶 מצב ניקוי נקודה קבועה / 🕀 מצב ניקוי נקודה קבועה / 🖗 מצב ניקוי יסודי / 🖻 מצב חזרה לטעינה

לחצן עצירה: עוצר זמנית את הפעולה המתבצעת וגורם למכשיר להישאר במקום שבו הוא נמצא.

לחצן הכוונה: על השלט ארבעה לחצני הכוונה- קדימה, אחורה, שמאלה וימינה. באפשרותכם להשתמש בשלט הרחוק בכל אזור מבוקש, כאשר הוא במצב המתנה.

- באפשרותכם לשלוט במצב הניקוי, להחזיר את המכשיר לטעינה ולכוון
   אותו ממרחק של חמישה מטר, באמצעות לחצני התפקוד שעליו.
  - אם הרובוט נמצא במצב ניקוי או שהוא חוזר לטעינה, אנא לחצו על עצירה קודם כל ורק לאחר מכן המשיכו בהכוונה באמצעות הלחצנים.
    - במהלך ההכוונה, הרובוט לא יוכל לנקות.
- וודאו שאספקת החשמל לשלט הרחוק פועלת לפני שאתם משתמשים
   בו. כאשר אתם משתמשים בו, התאימו את משדר האותות לחיישן
   האותות שעל המכשיר.
  - אם הרובוט מתקרב למטען, לקיר וירטואלי או למשדר אינפרא-אדום אחר, האותות עשויים לבלבל אותו והוא לא יוכל לקלוט את האות מהשלט הרחוק. במצב זה, אנא הפעילו את המכשיר ידנית.

# 10. קיר וירטואלי

### החלפת סוללה



- (מס' 1) המכשיר מגיע עם שתי סוללות אלקליין AAA (מס' 1)
- 🕨 וודאו שאתם מכניסים אותן כיאות למקומן, בהתאם לסימונים.
- החליפו את הסוללות כאשר אתם מבחינים שהסוללה מתרוקנת וודאו שאתם משתמשים באותו סוג סוללות, כיוון שאסור להשתמש בסוגי סוללות שונים.
- הוציאו את הסוללות אם אינכם משתמשים בקיר הוירטואלי במשך זמן ממושך, כדי למנוע נזילת אלקטרוליטים, דבר העשוי לגרום לתקלה במכשיר.
  - אל תניחו את הקיר הוירטואלי במקום חם או לח מאוד. ◄
  - אין להכניס לקיר הוירטואלי כל רכיב נוסף, במיוחד כאשר מחליפים סוללות.
- אסור לחשוף את משדר האותות לאור השמש או לציוד תאורה,
   אחרת הוא עשוי להיפגם.







### הערות 🖄

- על מנת לחסום את ECOVACS כאשר משתמשים בקיר וירטואלי, אנא הציבו את הסימון ECOVACS, על מנת לחסום את האזור אותו אתם מבקשים לחסום.
  - . הציבו את הקיר הוירטואלי מחוץ לחדר שאתם מבקשים לחסום.
- המערכת תבטל את הקיר הוירטואלי לאחר שהוא מוצב במקומו במשך שעתיים, כדי לחסוך בסוללה. כתוצאה, בכל פעם שהרובוט יתחיל במשימה חדשה ויהיה צורך להשתמש בקיר וירטואלי, אנא בדקו שהמתג שבקיר הוירטואלי במצב הפעלה ושהנורית דולקת.
- אם עצרתם את המכשיר למשך זמן ממושך במהלך הפעלתו, אנא בדקו בתדירות גבוהה אם המתג נמצא על מצב כיבוי, כדי למנוע סכנה.



הפעלה: לחצו על לחצן זה והקיר הוירטואלי יתחיל לעבוד וימנע מהרובוט מלהיכנס לאזור החסום. נורית: אדומה כאשר הקיר הוירטואלי פועל ומסמנת כי הקיר הוירטואלי שולח קרן בלתי נראית, כדי למנוע מהרובוט מלהיכנס לאזור החסום. משדר אינפרא-אדום: שולח קרן בלתי נראית. חיישן אינפרא-אדום: קולט את הקרן הבלתי נראית.

#### השימוש בקיר הוירטואלי



ניתן להשתמש בו כדי לשלוט בעבודת הרובוט בתוך חדר או באזור מסויים אותו אתם רוצים לנקות. הוא שולח קרן אינפרא-אדומה בלתי נראית, המייצרת פס אופטי ברוחב 2 מטר, אשר יוצר חסימה באזור פתוח, כגון דלת של חדר, מסדרות ומדרגות. באפשרותכם להציב את הקיר הוירטואלי כדי לעצור את הרובוט מלהתקרב לכבל של מכשיר חשמלי, מחשב או חפצים אחרים.

- ניתן להציב את הקיר הוירטואלי כדי לחסום אזור מסויים. באפשרותכם לשלב מספר קירות וירטואליים יחד, לפי הצורך.
- הקרן של הקיר הוירטואלי תיצור אזור בצורן קונוס, שיחסום את הרובוט.
  - הקיר שולח קרן סביב עצמו, כדי למנוע מהרובוט מלהתקרב אליו.

אם אתם מגלים שהנורית נחלשת או שהרובוט מסוגל להיכנס לאזור חסום, אנא בדקו את הסוללה של הקיר הוירטואלי והחליפו אותה בסוללה חדשה, לפי הצורך.

# 11. סרט תיחום

#### השימוש בסרט התיחום



סרט התיחום נועד לתחום אזור ניקוי מסויים. Deebot לא ימשיך מעבר לפס התיחום, דבר שיאפשר לו לנקות אזור מסויים.

1. נקו את האזור שבו אתם מתכננים להציב את סרט התיחום באמצעות מטלית יבשה.



2. פרסו את סרט התיחום וחתכו אותו באורך הרצוי לכם.



 הדביקו את סרט התיחום על הרצפה לאחר שהורדתם ממנו את השכבה הלבנה מצד אחד.



4. שפשפו את סרט התיחום באמצעות הכלי לשיפור הגבולות.

#### הערות

- אל תדביקו את סרט התיחום ברדיוס של 1.5 מטר מעמדת הטעינה, אחרת הרובוט לא יהיה מסוגל לחזור להיטען.
  - 2. וודאו שהאזור יבש או שהסרט לא יידבק היטב וייפרד מהמשטח.
- 3. כאשר השדה המגנטי נחלש, אנא השתמשו בכלי לשיפור הגבולות ושפשפו את סרט התיחום.
  - 4. אם המשטח הוא בגבהים שונים, הדביקו תמיד את הסרט על הצד הגבוה יותר.
- 5. ניתן להדביק את סרט התיחום על רצפה אריחי קרמיקה או על פרקט. אנא אל תדביקו אותו על שטיחים, אחרת הוא ירד בקלות.
  - .6. אנא שמרו על סרט התיחום במקום קריר ויבש.

# 12. אחזקה ביום יום



- עליכם להשאיר את הרובוט במטען למרות שהוא סיים להיטען ולנקות, כיוון שהוא יעבור לזרם נמוך, לשמירה על טעינה מלאה של הסוללה.
- טענו את הרובוט עד שהסוללה טעונה במלואה והחזירו אותה בחזרה לאריזה אם אינכם צריכים להשתמש בה לפרק זמן ממושך (מעל שלושה חודשים). שמרו על האריזה במקום יבש והימנעו מאור שמש או לחות.

# 13. תחזוקה

### ניקוי היחידה המרכזית



- כבו את המכשיר לפני שאתם מנקים אותו.
- . הוציאו את התקע מהמטען לפני שאתם מנקים את יחידת הטעינה.
- אל תשתמשו בדלק או בנוזלים על בסיס שמן כדי לנקות את המשטח. באפשרותכם להשתמש במים או בתכשיר ניקוי נייטרלי. וודאו שאתם משתמשים במטלית יבשה לניגוב, כיוון שמים הנותרים על המכשיר יכולים לחדור אליו ולפגום בו.

### ניקוי קופסת האבק



אנא פעלו על פי השלבים שלהלן:

- כבו את המכשיר.
- לחצו על לחצן הפתיחה.
- הסירו את מכסה קופסת האבק.

#### ECOVACS



החזיקו את ידית קופסת האבק, הרימו והוציאו אותה החוצה.



כדי להימנע פיזור של האבק, הרימו את החלק כלפי מעלה כאשר אתם מוציאים את קופסת האבק. אנא פעלו לאט.



חברו את התחתית לפח וסובבו את קופסת האבק בעדינות. באפשרותכם להקיש קלות על קצות הקופסה, כדי לשחרר את האבק.



אם אתם מבחינים שיש יותר מדי אבק על סנן הספוג, באפשרותכם לפתוח את הנעילה ולהוציא את הכיסוי.



הסירו את האבק מסנן הספוג.



סגרו את המכסה ותשמעו צליל "קאקא", אשר מציין כי הוא במקומו. החזירו את קופסת האבק למקומה בתוך היחידה המרכזית וכסו אותה.

עצה אם קופסת האבק אינה מוחזרת למקומה או שאינה מוכנסת כיאות, הרובוט יתריע ונורית אדומה תידלק.

### ניקוי סנן הספוג וקופסת האבק





פתחו את הנעילה שבתחתית קופסת האבק.

שפכו את האבק שעל מסנן הספוג.



אם אתם מבחינים שיש יותר מדי אבק בתוך המכשיר, לצידי קופסת האבק, באפשרותכם לשטוף את הקופסה במים זורמים ולנקות את כל האבק (לאחר מכן, יבשו אותה בשמש במשך 24 שעות). החזירו את הקופסה ומסנן הספוג למקומם ביחידה המרכזית רק לאחר שהם יבשים לחלוטין.

### החלפת סנן הספוג





- 1. פתחו את מכסה ה- Deebot והוציאו את קופסת האבק.
- 2. הזיזו הצידה את הסוגר של
- קופסת האבק, פתחו ונקו אותה. 3. החליפו את סנן הספוג סגרו את המכסה והכניסו אותה בחזרה לתוך המכשיר.

### ניקוי המברשת הראשית



הוציאו את הבורג הקבוע על המברשת הראשית









הסירו שיערות ואבק אשר נלכדו ברצועה.







החזירו את המברשת הראשית ליחידה המרכזית ונקו את החיבורים של הרצועה.



עצה: נקו את המברשת הראשית לאחר כל 4 או 5 מחזורים.

הוציאו את המסגרת של המברשת הראשית.



הסירו שיער מהמברשת הראשית (עם המברשת הגלילית המצורפת), כדי להסיר שיער מהמסילות.



הכניסו את המסגרת ליחידה המרכזית.



הוציאו צד אחד של המברשת הראשית מהרצועה.



נגבו את האבק על הגליל והחזירו אותו למקומו.



הבריגו את הבורג.



#### ניקוי המברשת הצדדית



המברשת הצדדית היא חלק שמתבלה בקלות. אנו ממליצים לבדוק אותה בכל פעם שהיא מנקה. אנא החליפו אותה לפי הצורך.

אזהרה 🗥 היחידה המרכזית תתריע כאשר סביב המברשת הצדדית כרוך לכלוך ועל צג ה- LCD יופיע הסימן ₪ֿ.

החלפת המברשת הצדדית



הבריגו החוצה את הברגים והוציאו את המברשת הצדדית.

אנא החליפו את המברשת הצדדית כאשר היא מתבלה.



הכניסו את המברשת הצדדית החדשה למקומה המדויק.



הבריגו את הברגים.

#### ניקוי הגלגלים



השתמשו במברשת הגלילית כדי להסיר אבק ושיערות מהגלגלים.



הערה הערה אם שיער או לכלוך הסתבכו סביב הגלגלים, היחידה תתריע והסימן 🙆 יופיע על צג ה- LCD.

#### ניקוי חיישן הגובה



חיישן הגובה נמצא בחזית המכשיר, בתחתיתו. הוא יכול להבחין בהפרשי גובה של מעל 8 ס"מ. אנו ממליצים שתנגבו את הלוח האופטי עם צמר גפן יבש בתום הפעולה של המכשיר, כדי למנוע הצטברות אבק, דבר שיפגע ביעילותו.

- כבו את המכשיר והשליכו את האבק שהצטבר בקופסה.
- 2. הפכו את הרובוט ולאחר מכן, הניחו אותו על משטח ישר ונקי.
- 3. השתמשו בצמר גפן יבש כדי לנגב את שלושת החלקים של הלוח האופטי של חיישן מד-הגובה.

#### ניקוי חיישן האבק



חיישן האבק נמצא בחזית פתח האבק. הוא מסוגל לזהות ריכוזי אבק, על מנת לבחור מצב פעולה יעיל. אנו ממליצים לנקות את חיישן האבק בכל פעם שאתם מנקים את קופסת האבק, כדי לשפר את יעילותו.



- 1. כבו את המכשיר.
- . הוציאו את קופסת האבק ונקו אותה.

# 14. התרעות

אזהרה 🖄

הנחיות	פיתרון	סיבת התקלה	סמל
כדי להאריך את חיי המכשיר,	1. נקו את קופסת האבק	1. יש יותר מדי אבק	
הרובוט יתריע לאחר מספר מחזורי		בקופסת האבק	
ניקוי, גם אם אין הרבה אבק בתוך	2. נקו את חיישן האבק או	2. יש יותר מדי אבק על	
קופסת האבק.	מד הגובה	חיישן האבק	
	1. הכניסו את קופסת	1. קופסת האבק	
	האבק ליחידה	אינה בתוך היחידה	
	המרכזית	המרכזית	
	2. הכניסו מחדש את	2. קופסת האבק אינה	
	קופסת האבק למקומה	מותקנת כיאות	
	ולחצו עליה בו-זמנית		
	1. נקו את המברשת	1. סביב המברשת	5
	הראשית	הראשית או הגלגלים	
	2. נקו את המברשת	יש סבך שיער או	
	הצדדית והחזירו אותה	לכלוך	
	למקומה. יש להחליף	2. המברשת הצדדית	
	אותה לפי הצורך	חסומה.	
פעולה זו נועדה למנוע סכנה,	החזירו את הרובוט למטען	הגלגל תלוי באוויר	$\bigcirc$
במקרה שבו ילד או בעל חיים מרים	והניחו לו להיטען		
את הרובוט כאשר הוא פועל.			
	החזירו את הרובוט למטען	הסוללה מתרוקנת	
	ידנית		

# 15. תקלות נפוצות

מספר	בעיה	פתרון
1	הרובוט ממשיך להתקדם או לנוע לאחור ברגע שהוא מופעל	כבו את המכשיר: 1. בדקו אם יש אבק על חיישן הגובה, דבר שיכול לגרום
		לרובוט לקבל אותות שגויים. השתמשו במטלית יבשה למחצה כדי לנקות אותו.
		2. החיישן נגד התנגשות אינו פועל. הניחו את הידיים
		שלכם בצד שמאל, באמצע ובצד ימין כדי לראות אם המכשיר יכול להתאפס בעצמו.
2	הרובוט נתקל בבעיה	יכול להיות שהרובוט ייתקל בבעיה כאשר הוא פועל. במקרה כזה, הוא ינסה להתגבר על הבעיה בכל דרך אפשרית, אבל אם הוא ייכשל, הוא יישאר במקום אחד ויתריע על כך. עליכם לעזור לו להתגבר על הבעיה. ייתכן והבעיה היא כלהלן: 1. הוא הסתבך בוילון תלוי או בשוליים פרומים 2. הוא הסתבך בוילון תלוי או בשוליים פרומים
3	הרובוט אינו מזהה מדרגות	הרובוט מסוגל לזהות את מרבית המדרגות שההפרש ביניהן הוא 8 ס"מ ומעלה. יחד עם זאת, כאשר הרצפה חלקה, כאשר הפרשי הגובה נמוכים מ- 8 ס"מ או שהרצפה מחזירה אור בוהק, הוא עשוי שלא לפעול כיאות. במצבים כאלה, באפשרותכם להציב קיר וירטואלי כדי למנוע ממנו מליפול במדרגות.
4	יכולת הניקוי פוחתת	כבו את המכשיר והוציאו את קופסת האבק. לאחר מכן, פעלו על פי השלבים שלהלן: 1. בדקו האם יש יותר מדי אבק או מסנן הספוג ואם כן, החליפו אותו. 2. וודאו שאין אבק אשר חוסם את פתח היניקה 3. הוציאו את המברשת הראשית ונקו אותה. וודאו ששני הקצוות של המברשת הראשית נקיים משיערות וסיבים. התקינו אותה במקומה כאשר היא נקייה. 4. בדקו האם יש אבק או לכלות בסמיכות לגלגלים. 5. נקו אבק מהחיישנים. אם הבעיה ממשיכה לאחר שביצעתם את כל השלבים שלהלן, אנא צרו קשר עם היבואן.

פתרון	בעיה	מספר
כבר את המכשיר והוציאו את קופסת האבק. לאחר	כאשר הרובוט פועל הוא משמיע	5
שניקיתם אותה מלכלוך, הפכו את הרובוט.	רעש רב	
<ol> <li>בדקו האם חלק מהמברשת הראשית חסום.</li> </ol>		
2. בדקו ונקו את המברשת הראשית (בשני הקצוות).		
3. בדקו ונקו את המברשת הצדדית.		
אם הבעיה ממשיכה לאחר שביצעתם את כל השלבים		
שלהלן, אנא צרו קשר עם היבואן.		

### 16. בעיות נוספות

- כמה זמן יכול לפעול הרובוט לפני שהוא צריך לשוב לטעינה? תשובה: משך הזמן תלוי במצב המקום אותו הוא מנקה.
- כמה זמן יכול לפעול הרובוט כאשר הסוללה טעונה במלואה? תשובה: משך הזמן תלוי במצב המקום אותו הוא מנקה. נדרשות לו כ- 60 דקות לנקות רצפה ישרה, כגון רצפת עץ או אריחי קרמיקה ו- 20 דקות לשטיחים בעלי שיער קצר.
- 3. האם מותר להפעיל את הרובוט עצמאית, מבלי השגחה? תשובה: כן. אבל, יש להודיע לאנשים בחדר על כך שהרובוט פועל, כדי שלא ייתקלו בו וימעדו.
- 4. באיזה סוג של ציוד נעשה שימוש בתוך הרובוט כדי להתמודד עם מכשולים? תשובה: הרובוט מצויד ברכיבים רגישים לאור, אשר יכולים לאתר מדרגות בגובה של למעלה מ- 8 ס"מ, כדי למנוע ממנו מליפול.
  - האם הרובוט מסוגל לנקות את תחתית
     הרהיטים?

תשובה: הרובוט שטוח בעיצובו. במהלך ניקוי רגיל, הוא יכול להיכנס מתחת לשולחן ולמקומות שגובהם למעלה מ- 10 ס"מ, כגון

מיטות, שידות, ספות ושולחנות תה.

6. מדוע הרובוט אינו מצליח לעבוד במצב נתון?
תשובה: כאשר הסוללה שלו כמעט ריקה,

הוא יחזור לעמדת הטעינה באופן אוטומטי.

- 7. מהו טווח הניקוי שלו כאשר הוא טעון במלואו? (במצב ניקוי אוטומטי) תשובה: בדרך כלל, טווח הניקוי הוא 120-150 מ"ר, אבל הדבר משתנה על פי תנאי המשטח.
- 8. מדוע הרובוט מפסיע לעבוד כאשר הוא נתקל במכשול?

תשובה: בדרך כלל, כאשר הרובוט נתקל במכשול, הוא יחזור או יחפש דרך אחרת. אבל, אם הוא נשלט על ידי השלט הרחוק, הוא אינו מסוגל לשנות את הנתיב במקרה של התקלות במכשול.

9. מדוע יוצא לכלוך מהמכשיר בזמן שהרובוט פועל?

תשובה: א. בדקו האם יש יותר מדי לכלוך בקופסת האבק (אם יש יותר מדי לכלוך על הרצפה, הרובוט לא מסוגל להתריע לאחר שעבד במשך זמן מה, למרות שיש יותר מדי לכלוך בקופסת האבק). ב. בדקו האם המברשת הראשית לא נוקתה זמן רב והסתבכו בה שיערות ולכלוכים.

10. מדוע הרובוט אינו מצליח להתחיל לנקות בזמן שנקבע לו?

תשובה: וודאו שהסוללה טעונה. כאשר הרובוט חוזר לטעינה לאחר ניקוי, הוא לא ינקה בזמן שנקבע לו. ב. בדקו האם הרובוט במצב המתנה.

11. מדוע הרובוט אינו טוען כאשר מחברים. אותו למטען?

גם נורית החיווי אינה דולקת. תשובה: א. בדקו האם הסוללה בתחתית מותקנת במקומה כיאות או אם אחד הברגים של המכסה משוחרר ויש צורך להדקו. ב. בדקו האם יש מתח חשמלי בשקע. ג. צרו קשר עם היבואן אם התקלה לא נפתרת.

- 12. מדוע השלט הרחוק אינו פועל? תשובה: א. מרחק השליטה הוא בטווח של 5 מטר. אם המרחק גדול ממנו, המכשיר לא יגיב. ב. בדקו את הסוללות בשלט וודאו שהן מונחות במקומן כיאות. ג. וודאו שהרובוט מופעל והטעינו אותו כאשר אתם רואים שנורית החיווי ב- LCD נדלקת. ד. השתמשו שנורית נקייה כדי לנגב את המשדר בשלט ואת המקלט ברובוט. ה. אם המכשיר קרוב מדי לקיר וירטואלי או למטען, האות מהשלט לא יתקבל.
- 13. מדוע הקיר הוירטואלי אינו פועל? תשובה: א. וודאו שהאזור נחסם על ידי אור בלתי נראה מהקיר הוירטואלי הוא האזור שאותו אתם רוצים שהרובוט לא ינקה. ב. האות יופרע אם הקיר הוירטואלי קרוב מדי למטען. ג. בדקו האם האזור שאתם מדי לנקות אמצע מעבר לקיר הוירטואלי ואם כן, אנו ממליצים על רכישה של קירות וירטואליים נוספים, לפי הצורך.
- **14. האם הרובוט יתקשה לנקות את הפינות, אם עיצוב המקום מעוגל?** תשובה: הרובוט יכול לאתר קיר בעצמו. הוא מסוגל לנקות לאורך פינות של קיר במצב ניקוי פינות אוטומטי. המברשת הצדדית שלו

יכולה לנקות אבק לאורך פינות של קירות ביעילות, אך ייתכן ויישארו אזורים קטנטנים בחיבורים בין שני קירות, אותם תאלצו לנקות ידנית.

- **.15 מדוע הרובוט מאט ממהירותו לפעמים?** תשובה: כאשר הרובוט מאתר שיש יותר מדי לכלוך ואבק על הרצפה, הוא יעבור למהירות איטית וימשיך לנקות אוטומטית.
- .16 האם יש סכנה לרהיטים וילדים כאשר הרובוט בפעולה? תשובה: לא. סביב הרובוט יש חוצץ גומי רך. כאשר הוא יגע ברהיט או בילד, הוא יחפש נתיב אחר.
- .17 האם הרובוט ישפיע על חיות מחמד? תשובה: הרובוט משמיע קול נמוך בזמן שהוא פועל, ולכן הוא אינו אמור ליצור בעיה או קול חד, שיגרום לחיות המחמד לאי-שקט או בעיה. אם אתם מחזיקים חיית מחמד בבית, אנו ממליצים להשגיח עליה כאשר אתם מפעילים את הרובוט בפעם הראשונה.
- 18. למה כדאי לשים לב כאשר מנקים שטיח? תשובה: הרובוט אינו מסוגל לנקות שטיח ששערותיו באורך של למעלה מ- 2 ס"מ. יש לוודא שהשטיח פרוש במלואו לפני שמנקים אותו.
- 19. האם כדאי לשמור על הרובוט מחובר למטען כאשר הוא אינו בשימוש? תשובה: כן. הרובוט מועבר למצב מתח נמוך, כדי לשמור על מצב טעון. אנא הימנעו מהפעלה בטעות על ידי ילד.
- 20. האם יש סכנה בנגיעה בטעות באלקטרודה שבין המכשיר והמטען בזמן טעינה? תשובה: לא בשתי האלקטרודות של המטען אין מתח במצב פלט (כאשר הן אינן מחוברות למקור מתח). המתח המקסימלי שלהן הוא 24 וולט, מתח בטוח לשימוש במצב קלט (כאשר המכשיר נטען).

21. כיצד למנוע מהמברשת הראשית מלהיכרך סביב חוטים?

תשובה: הרובוט עשוי להסתבך בחוטים מפוזרים על הרצפה כאשר הוא פועל. במקרה כזה, הוא ינסה לחזור לאחור כדי לצאת מהסבך וישמיע קול אזעקה במקרה של כשלון לאחר מספר ניסיונות.

- 22. כיצד באפשרותי להפסיק את פעולתו של הרובוט בזמן הקבוע, כיוון שלא אהיה בבית באותו זמן? תשובה: ניתן לבטל ניקיון קבוע מראש.
  - 23. כיצד באפשרותי להעביר את הרובוט ממקום למקום?

תשובה: ניתן להרים את הרובוט בידיים ולהניח אותו על הרצפה במהירות. האבק והלכלוך שבקופסת האבק יתפזרו אם לא תניחו אותו בחזרה במהירות.



24. כיצד להשתמש ברובוט ביעילות המירבית?

תשובה: לשים את הרובוט ואת המטען באותו החדר, כיוון שהדבר יקצר את זמן החיפוש ויכול להאריך את משך הפעולה. אם יש צורך שהרובוט ינקה את כל החדרים בבית, יש לשים את המטען במרכז הבית, לשם חזרה קלה ונוחה אל המטען.

25. מה לעשות אם הרובוט שאב נוזלים? תשובה: א. לכבות את המכשיר ולהוציא את קופסת האבק, לרוקן אותה ולנגב אותה עד שתתייבש. ב. להוציא את מסנן הספוג ולנגב אותו היטב, עד שיתייבש. ג. להוציא את המברשת הראשית ולנקות אותה ולאחר מכן, להשתמש במטלית יבשה כדי לנגב את

המברשת ואת החלק הפנימי של המכשיר. להמתין עד שהמברשת מתייבשת ולהחזיר אותה למקומה. ד. להניח למכשיר להתייבש במשך 12 שעות לפחות (לוודא שלוח המעגלים יבש ולאחר מכן להפעיל אותו). אם לאחר כל הפעולות שלעיל המשיר עדיין איננו פועל, אנא צרו קשר עם היבואן.

#### לאחר ביצוע הפעולות שלעיל, אם הרובוט עדין לא פועל כיאות, אנא צרו קשר עם היבואן:



רחוב נגבה 41, רמת גן 03-6745988

# להנות מחיים חכמים יותר!



# **Enjoy smarter life!**



D58-000IM201101

# 21. How does main brush avoid being tangled by power cord?

Answer: Robot is probably get tangled by the wire scattered on the floor when it is operating. At that time, robot will try to turn back to get rid of it, and it will make alarm sound when it fails after trying several times.

#### 22. How can I stop the robot from operating on appointment time since I will be away from home for sometime?

Answer: You can cancel appointment cleaning.

#### 23. How can I transfer my robot?

Answer: You can lift it up with both your hands and lay on the ground quickly, dust and garbage in dust box will come out if it is not place back in time.



#### 24. How to use robot most effectively?

Answer: Put the robot and charger in the same room, because it would shorten seeking time and it can extend the working time. If you need robot to clean every room of house, you should put the charger in the middle of house for the convenience of go back to the charging block.

#### 25. What should do if robot sucked liquid?

Answer: a. Turn off the power and take out dust box, then empty it and wipe it dry. b. Draw out the sponge filter and wipe it dry. c. Take out main brush and clean it, then use day cloth to wipe the brush and its interior. Wait until the brush is day and place it back. d. Let the product dry by itself for at least 12hours(make sure circuit board is dry and then get power on). If the procedures above still do not make it work, please contact our after-sales service.

# 10. Why does robot fail to start cleaning on appointment time?

Answer: a.Confirm whether there is much remaining battery. Appointment timing is not applicable when robot is returning to charge after operating cleaning. b. Check if robot is under standby status.

# 11. Why robot is not charging as it is put in the charger? The charging indicator does not light as well.

Answer: a. Examine whether the battery at the bottom is installed in place, if cover screw is loose, you need to fasten it. b. Check if there is power supply for the socket. c. Please contact our after-sales service when the failure is still there.

#### 12. Why does not the remote control work?

Answer: a. The control distance is within 5 meters. It would be insensitive if longer distance. b. Check battery in remote control and make sure it is placed correctly. c. Insure robot power supply is on, please get it charged when you notice it shows low battery on LCD. d. Use clean cloth to wipe infrared transmitter on remote control and infrared receiver on robot. e. If the host is too close to virtual wall or charger, the signal of remote control will get interfered.

#### 13. Why does not virtual wall work?

Answer: a. Insure the region blocked by invisible light from virtual wall, which is the region you do not want robot to get across. b. The signal will get interfered if virtual wall is too close to the charger. c. Check whether the region you want is beyond the virtual wall, we suggest you to purchase additional virtual wall if necessary.

# 14. Would it be difficult for robot to clean the corner as it is a round design?

Answer: Robot can detect wall by itself. It is able to clean along the edge of wall under automatic and border cleaning mode. Its side brush can remove dust along bottom edge efficiently; there would be dust beyond robot in the tiny area formed by two walls which need to be removed by hand.

# 15. Why does the speed of robot slow down sometimes?

Answer: When robot detects there is much garbage and dust on the floor, it would turn to low speed proceeding automatically.

# 16. Is there any danger to furniture and child when robot is proceeding?

Answer: No. There is a soft rubber buffer made of PPC in front of the host. It would try other route once it touches furniture or child.

#### 17. Would robot affect pet?

Answer: Robot makes low noise when operating, so there would be no shrill sound which may cause pet restless or even distrust. If you keep pet at home, we suggest you to notice the first time the robot operating.

# 18. What should be noticed when cleaning the carpet?

Answer: Robot is not able to clean long hair over 2 centimeters. Fold the banding first when you start cleaning.

# 19. Does it matter to keep the robot at the charger when not using it?

Answer: Yes. Robot will transfer to small currency to supplement charging. Please avoid wrong operation by child.

# 20. Is there any danger to wrongly touch the docking electrode film between the host and charger?

Answer:No.The two electrodes of charger is of no voltage under output mode(when there is no power supply); it's maximum voltage is 24V which is safe one under input mode(when it is charging)

		Turn off the power supply, and then take out of dust box. After removing the garbage, overturn the robot.		
5 There is much noise when the robot works.	<ol> <li>Check whether the suction of main brush is blocked.</li> </ol>			
	<ol> <li>Examine and clean the main brush(at both ends).</li> </ol>			
		3. Examine and clean the side brush.		
	If the failure is still there after operating according to the above procedure, Please contact out after-sales service.			

#### **16**. Other Problems

# 1. How much reserve time for robot go back charging?

Answer: It differs from the ground situation,

# 2. How long can robot last working under full battery?

Answer: It differs from the ground situation,

It takes around 60 minutes for even floor such as wooden floor and ceramic tile, and 20 minutes for short-haired carpet.

# 3. Is it allowed for the robot to work independently without taking care of?

Answer: Yes. However, you should keep person in the room informed about robot operating to avoid tripping.

# 4. What kind of equipment inside the robot is used for dealing with failure?

Answer: It is equipped with photosensitive components which can detect the stair over the height of 8 centimeters; for fear that it would fall over.

# 5. Is robot able to clean the bottom of the furniture?

Answer: It is flat design, during normal cleaning, it can go into table and bed corner whose height is over 10 centimeters, such as bed, wardrobe, sofa and tea table.

#### mode?

Answer: Because when there is low battery, it will do back to charging mode automatically.

# 7. What's the cleaning coverage once it is charged full?(under automatic cleaning mode)

Answer: Under normal circumstance, it is around 120-150 sq, but it differs from the ground situation.

# 8. Why does robot stop working once it meets obstacle?

Answer: Under normal circumstance, robot will return or seek other route when it meets obstacle. However, if it controlled by remote control, it is not able to change route in case of obstacle.

# 9. Why there is garbage leaking from the machine while robot operating?

Answer: a. Please check whether there is too much garbage in dust box(if there is too much dust on the floor, robot is not able to alarm after working for some time even though there is too much garbage in dust box.). That's why you need to clean dust box. b. See whether main brush is not cleaned for long time, as it is tangled with much hair and dust.

6. Why does robot fail to work under set
## 15. Common Failure

No.	Problem	Solution
1	Robot keeps proceeding or moving backward once power is on.	<ul> <li>Turn off the power.</li> <li>1. Check if there is dust on up-ground height sensor, which cause robot to make wrong signal. Use half dry cloth to clean it.</li> <li>2. Buffer collision is out of control. Put your hand at left, middle and right in turn to see if it can rebound by itself.</li> </ul>
2	Robot is in trouble.	<ul> <li>Robot may fall in trouble when it is working. In such case, it will try every possibility to get out of trouble, but it shall stay at a certain place when it fails and starts alarm. You should help it and get rid of the obstacle.</li> <li>The trouble may be as follows: <ol> <li>It is tangled by power cord.</li> </ol> </li> </ul>
3	Robot fails to detect the stairs.	Robot is able to detect most of the stairs within 8 centimeters height difference. However, its performance will weaken when it is smooth floor with height difference or the floor with strong reflector. You can put virtual wall under this situation to prevent it from falling off.
4	The capacity to clean weaken.	<ul> <li>Turn off power and take out the dust box., then follow the steps as below:</li> <li>1. Check whether there is too much dust on sponge filter so that it needs to change it.</li> <li>2. Make sure there is no dust which blocks the suction.</li> <li>3. Take out main brush and clean it. Insure the both ends of main brush is not tangled by hair or fiber. Fix it back after it is been cleaned.</li> <li>4. Examine if there is dust or debris near driving wheels.</li> <li>5. Clean dust sensor</li> <li>If the failure still there after following the steps above, please contact our after-sales.</li> </ul>

## **Dust sensor cleaning**



The dust sensor is located at the front of dust entrance. It is able to detect the concentration of dust so that it can choose efficient mode to work. We suggest you to clean dust sensor once you clean dust box to improve work efficiency.

- 1. Turn off power.
- 2. Take out dust box and clean it.



## 14. Alarm Function

## Note:

The robot will stop working under following circumstance; there will be alarm and tip sound at the same time. What's more, LCD will have red light flashing. Please notice the tip on LCD.

lcon	Cause of failure	Solution	Instruction
	<ol> <li>There is too much dust in dust box.</li> <li>There is too much dust on dust sensor.</li> </ol>	<ol> <li>Clean dust box.</li> <li>Clean dust on up- ground height sensor.</li> </ol>	In order to extend use life, robot will alarm even though there is not much dust inside,after several cycles cleaning.
	<ol> <li>Dust box is not fixed into host.</li> <li>Dust box is not fixed properly.</li> </ol>	<ol> <li>Put dust box back into host.</li> <li>Re-install dust box and press it down at the same time.</li> </ol>	
•Q	<ol> <li>Main brush or driving wheel is tangled by hair or cloth.</li> <li>Side brush is blocked.</li> </ol>	<ol> <li>Clean main brush</li> <li>Clean side brush and put it back. Must change it if necessary.</li> </ol>	
	Driving wheel is suspended.	Put the robot back on the charging block to charging.	This function can prevent danger of child or pet lifting the robot when it is operating.
	Low battery.	Put the robot back manually.	



## Side brush cleaning



**Replace sidebrush** 



Please remove the screws, and take out the side brush.

## Driving wheel cleaning



## Up-ground height sensor cleaning



Side brush is a kind of easy wear part. We suggest you to check it every time it takes cleaning task. Please change it if necessary.

#### /Note:

The host will alarm when the side brush tangles and it will show on LCD as  $\ensuremath{\textcircled{}}$  .

Please replace the side brush when it is destroyed.



Please push the new side brush into the correct position.



Tight the screws.

Use roll brush to remove the dust or hair on driving wheel.

## Note:

If the wheel is tangled by hair or cloth, the host will alarm and it will show on LCD as  $\bigcirc$  .

Up-ground height sensor is on the front bottom of robot. It can detect the height difference within 8 centimeters. We suggest you to wipe the optical board with dry cotton cloth after it finishes task to prevent the dust piling on it which would affect its performance.

- 1. Turn off the power and remove the trash inside dust box.
- 2. Invert the robot, then put it on the even and clean platform.
- 3. Use dry cotton cloth to wipe three pieces of optical board of upground height sensor.

## **Sponge Filter Replacement**



- 1. Open the cover of the Deebot, take out the dust box.
- Push aside the lock catch of the dust box ,then open the dust box and clean it.
- 3. Extract the axle of the dust box's cover.
- 4. Replace the sponge filter and fix the cover ,then put it back into Deebot.

## Main brush cleaning



Undo the screw fixed on the main brush.



Remove the hair and dust which is in-between the belt.



Put the main brush back to the host and take care of the anastomosis of belt.

**Tips:** Clean the main brush after it has operated for 4 or 5 recycles.



Take off the frame of main brush.



Rip off the hair on main brush (with equipped roll brush cleaning gadget to break off the hair on main crush along the groove.



Fix the frame into host.



Take out one side of main brush from the belt.



Wipe the dust on the roller and put it back.

. 9

Tie up the screw.





Hold the handle of dust box and lift it to take out.



In order to avoid dust leaking, lift the suction up when you take out dust box. Please mind your speed doing this step.



Match the bottom with trash can and swing dust box gently. You can mildly beating it along the edge of the can to get the dust out.



If you notice that there is too much dust on sponge filter, you can open the lock and take off the cover.



Pour out the dust on sponge filter.



Close the cover and hear "kaca" sound which shows that it is placed. Put the dust box back into the host and cover it.

#### Tips:

If the dust box is not placed back or not properly placed, robot will alarm and show red indicator on LCD.

## Sponge filter and dust box cleaning



Open the lock at the bottom of dust box.



Pour out the dust on sponge filter.



If you notice that there are too much dust on inside along dust box, you can put the box under running water to get rid of the dust. (make it dry under sunshine for 24 hours)Put it back into the host after the box and sponge filter is completely dry.

22

## 12. Day-to-day Storage



- You should keep robot stay at charger even though it finishes charging and cleaning task, because it will change to small currency to supplement charging.
- Charge the robot until full battery and put it back to the package if you do not need to use it for long time(at least over three months). Keep the package in dry surroundings to avoid sunshine or humidity.

## 13. Maintenance

## **The Host Cleaning**



- Turn off the power before cleaning the host.
- Draw out the plug of charger before cleaning the block.
- Do not use petrol or oil-like to clean the surface, while you can use water or neutral detergent to scrub. Make sure you use dry cloth to wipe, because any water is not allowed to infiltrate into the machine.



## **Dust box cleaning**



Please follow belowing steps:

- turn off power.
- press "open" button.
- Take off the cover of dust box.

#### FCOVAC

## 11. Border Tape

### **Border Tape Instruction**

Border Tape is used to confine the cleaning area. Deebot will not proceed beyond the border, allowing Deebot to clean a designated area.

- 1 Clean the area where you plan to paste the Border Tape with a dry cloth.

- 2 Unroll the Border Tape and cut the length according to your needs.

Paste the Border Tape on the floor after tearing off the white layer on 3 one side.



Rub the Border Tape with Border Enhancement Tool. 4

#### Note:

- 1. Do not paste the Border Tape within a 1.5-meter radius vicinity of the Charging Station, or Deebot will not be able to return for charging.
- 2. Please make sure the area is dry, or the Border Tape might come off.
- 3. When the magnetic field deteriorates, please use Border Enhancement Tool and rub on the Border Tape.
- 4. If surface that have different heights, always paste the Border Tape on the higher side.
- 5. Border Tape can be pasted on the floor, ceramic tiles, or any hard floor. Please do not paste it on carpets, as it will come off easily.
- 6. Please keep the Border Tape in a dry and cool place.







## Note:

- ▶ When you use virtual wall, please face marked ECOVACS to the block area you expect.
- > Put virtual wall outside of the room you want to block to get best effect.
- ▶ The system would cancel virtual wall after it is set for two hours in order to save battery. As a result, every time the robot start new task and there needs to use virtual wall, please do and check whether the switch on virtual wall is on and there is indicator.
- If you have paused the host for long time during its operation, please examine frequently that if the switch is off to prevent from danger.



## Use of virtual wall



Power: Press this key and virtual wall starts work which will prevent robot from entering the blocked region.

Indicator: It is red when the power is on, and it shows virtual wall is ejecting invisible beam to prevent robot form entering the blocked region.

Infrared transmitter: Ejecting invisible beam.

Infrared receiver: Receive invisible beam.

It can be used to control the robot working within room or the certain region you want it to clean. It applies invisible infrared beam to get 2 meters optical band, which forms a blocked open area, such as doorway of the room, corridor and staircase. You can apply virtual wall to stop robot getting close to the wire of domestic appliances or computer and precision object.

- Virtual wall can be put at the entrance of block region. You are allowed to combine several walls together if necessary.
- The beam of virtual wall would form a conical-shaped region to block robot. The virtual wall shall have beam around itself to prevent robot from getting closer to it.

If you find the indicator becomes weaker or that robot is able to enter blocked region, please examine the battery of virtual wall. Change into new battery if necessary.

## **Use of Remote Control**





## 10. Virtual Wall

## **Battery Placement**



You can control the robot via remote control.

- Drive robot to appointed area via using direction control button.
- Choose certain working mode according to different

AUTO Automatic Cleaning Mode/  $\frown$  Border Cleaning Mode/ - Fixed Point Cleaning Mode/  $\square$  Intensive cleaning mode/  $\frown$  Go Back Charging Mode

Pause key: temporarily stop current operating and make it stay where it is.

Direction control key: There are four direction control, ahead, backward, left hand and right hand. You can use remote control to drive robot to any appointed area.

- You can control cleaning mode, going back charging and direction within five meters through the function key on it.
- If the robot is under cleaning mode or going back charging, please press pause first and then can proceed direction control.
- During the direction control, robot is not able to operate cleaning.
- Make sure the power supply of remote control is on before you use it. When you use it, match the signal transmitter with signal receiver on the host.
- If robot is near charger, virtual wall or other infrared transmitter, it would be interfered by infrared and fails to receive the signal of remote control, under this situation, please manually operate the mode on the host.

- It applies two units of alkaline batteries (1#).
- Please note the positive and negative when place the battery.
- Change the battery when you notice it is in low battery and make sure you use the same kind of battery as mixture is forbidden.
- Take out the battery if you do not use remote control for long time to avoid electrolyte from leaking which may cause failure.
- Do not put the remote control in extremely hot or humid surroundings.
- Do not fill any other substance into remote control, especially when you change battery.
- Never expose the signal transmitter under sunshine or lighting equipment, or else it would cause failure.
- The deposal of used battery should conform with local environmental legislation.

#### \land Note

- When power is off, robot will not start work on appointment time .If you have already set appointment time cleaning, please turn on the robot and keep it on standby status, even though it is not operating. Try to make it stay at the charger and check whether it is connected.
- Make sure the socket is connected to power supply. Or else, robot will fail to work on appointment time under standby status because of running out of battery.

## Set Frequency and Cancel Timing

#### Tips:

- No matter what kind of mode the robot operated in the last time, when the appointment time coming, robot will work according to the Automatic mode.
- If the robot is operating in Border cleaning mode, Fixed point cleaning mode, when the appointment time coming, robot will not work until the next appointment time.

You can set appointment cleaning frequency via press 🧐 then release.

- to clean on appointment time for one time.
- C to clean on appointment time everyday hereafter.
- to cancel appointment timing, robot only works upon your manual operation.



## 9. Remote Control

## **Battery Placement**



- ▶ It applies two units of alkaline batteries (7#).
- Please note the positive and negative when place the battery.
- Change the battery when you notice it is in low battery and make sure you use the same kind of battery as mixture is forbidden.
- Take out the battery if you do not use remote control for long time to avoid electrolyte from leaking which may cause failure.
- Do not put the remote control in extremely hot or humid surroundings.
- ▶ Do not fill any other substance into remote control, especially when you change battery.
- Never expose the signal transmitter under sunshine or lighting equipment, or else it would cause failure.
- ▶ The deposal of used battery should conform with local environmental legislation.



#### Second time setting



• Under normal circumstance, time display on LCD shows current time.

#### Current time setting



 Under normal circumstance, time display on LCD shows current time.

- 1. Now, the 🖽 label high light, and the number with time setting is flashing.
- Set hourandminute via ▲ and ▼, each time press ▲ will increase one hour or minute. While decrease one hour and minute for ▼.
- 3. Press again, and then go to current time setting.



- 1. After second time setting, and then go to the current time setting. The disappeared, and the number with time setting flashing.
- Set hour and minute via ▲ and ▼, each time press ▲ will increase one hour or minute. While decrease one hour and minute for ▼, and then press ♥ to confirm.
- 3. Then go to the frequency setting.

For example:	IIII		V	-
Set current time as 12:07 pm, time display on LCD	Θ	12:0	רנ	▶ <b>В</b> АUTO — - ф-
should be:	Ĵ	0	$\otimes$	<b>R Ú</b>

- ▶ If you need to cancel first or second timing, please repeat set cleaning time, set the time as 00:00. Then the label 🖽 will disappear.
- The time interval between two time setting should be more than 4 hours.

## 7. Automatically Charging



- When it finishes cleaning or there is low battery, it would seek charger in same route as automatic cleaning. To make it easy for robot to search for charging block, you need to put the block back to the wall and make sure there is no obstacle within 1.5 meters ahead of the infrared receiver. Check carefully whether there is strong reflector in front of the charger, such as ground glass, smooth ceramic vase and so on.
- It takes time for robot to seek the charger. The reserve time differs from the ground situation.
- Robot can return to the charger if the ground situation is not too complicated. Under extreme circumstance, such as, huge house and complex layout would probably bring difficulty for robot to seek for charger. In such case, you should help to put the robot back to charger.
- Take care of the first automatic charging, if you find that the robot keeps turning in the certain area after trying several times to seek back, you can help to place it on the charger and look through the charging.
- Under mode, main brush will stop working and robot cannot do the cleaning.
- Robot shall stay at the charger when it finishes charging and it transfer to small currency to charge until you start operating. If you have set appointment timing cleaning, it would go out of the charger to do cleaning when it comes to appointment time.

## 8. Appointment Timing

## **Appointment Time Setting**

#### First time setting



- Selection scope: hour is between 0 and 23, minute is between 0-59.
- Under normal circumstance, time display on LCD shows current time.

- After power is on, keep press for around 3 seconds then on LCD is light and the number with time setting is flashing.
- Set hour and minute via ▲ and ▼, each time press ▲ will increase one hour or minute. While decrease one hour and minute for ▼.
- 3. When you finish setting time, press equation again, and then go to second time setting.



### Border Cleaning Mode



Route description: under this mode, once the robot detects objects, it would run along it, like wall, to clean until it meets obstacle and change the former route.

- Under this status, robot helps to remove the corner of wall, table, sofa and bed where it is beyond the mode of automatic cleaning.
- The operation of this mode takes around 25 minutes and then robot goes back to charging block by itself.

### Fixed Point Cleaning Mode



Route description: under this mode, robot runs from inside out shaping spiral and focuses on the certain point to clean for one time. The cleaning coverage is a round shape with diameter of 1.2 meter.

- ▶ This mode is applicable to certain area with plenty of dust.
- Under common circumstance, the cycle of one fixed point cleaning takes not more than 6 minutes. During operation, if robot continually meets obstacle or detects staircase, it would shift to avoid obstacle and staircase to turn back to work under this status.
- Robot shall stay where it stops and give tip music after finishing.

#### Intensive Cleaning Mode



Route description: under this mode, robot takes the same route as automatic cleaning. It would search for charging block by itself before it runs of battery.

- Under the same ground circumstance, the cleaning effect is the best.
- ▶ If the ground is quite dirty, we recommend this mode.

#### Go Back Charging Mode



Route description: robot will search for charging block automatically when it detects low battery, what's more, green light flashed once the charger is connected.



## Automatic Cleaning Mode







Route description: first going straight ahead, it turns when it meets obstacle. This status will last until the robot detects that it shall run of battery and it would turn to back charging status.

If robot detects that there is plenty of dust on the staring point, it will take the route as fan-shaped or spiral route.

- Under normal circumstance, it will take spiral rout when it detects plenty of large particles, and take fan-shaped route when few of small particles.
- If take this mode, the cleaning coverage would reach maximum compared by the same size area. We recommend this mode as common domestic one.

#### ECOVACS

## 5. Power On/Pause/Power off

#### Get power supply and power on







- Press the or key on host and get power supply. There would be a short music tip and at the same time LCD lights for roughly 2 second and goes off.
- Then press key to start robot.

#### Pause



Press key, it can pause the operation of robot and keep it stay where it is.

#### Tips:

- On the status of pause, you can reset the cleaning mode, then press key again, it will go back to work.
- Another way to pause is that, when the robot is working you can press any key on the host or lift it.

#### Power off



Press key, power is off and the robot stops running.

- ▶ If you want the robot to stop running, you can press or key under pause status, then power is off.
- Put the robot back to the charging block after it stops working for fear that others would trip or step on.



Tangle the power cord on the pothook and do not scatter it besides the block or hold it under the base, in case that robot would get impeded when it turns back.



## **Robot Charging**







There should not be any object at least 1.5 meter in front of the charging block. Besides, anything with strong reflector is not supposed to stay ahead of the infrared receiver. For example, ground glass, smooth ceramic vase and so on. Other wise, the machine shall not detect the charging block.

#### Note:

Please do not put the charging block near to the staircase to avoid accidental cases.

- You need to charge the robot the first time it works. Put away the fullcharged battery for use to ensure it's performance.
- Charging duration should be around 3 hours.
- Charging is only allowed under the temperature between 0 and 45 degree and extreme hot or cold would extend charging duration or even cause damage to the battery.

- To make sure the robot is working in saturation, we suggest you to keep charging connected even though the charging indicator lasts lighting. At the same time, the system would transfer to weak current for supplementary charging.
- According to actual ground situation, robot can keep working for around 60 minutes after being charged full.
- The capacity of battery, which is not used for long time, will get certain decrease, so the use time can be shorten accordingly.

### LCD and Control Panel



## 4. Robot Charging

## Placement of charging dock



Put the block at an even place and make the base perpendicular to the ground. Meanwhile, take a look at the marked electricity voltage to make sure the product is used under instruction.



technique parameter			
The	e host	The char	rging block
Working voltage	DC14.4V	In-put voltage	AC220-240V
Rated power	30W	rated out-put voltage	DC17.5V
Speed	0.25meter/second	rated frequency	50Hz
Capacity of dust box	0.7L	rated power	30W
Noise	≤62dB	rated out-put	
Charging duration	About 3 hours	currency	0.8A
Duration upon full		Virtual wall	
battery 60 minutes	About 60 minutes	In-put voltage	DC3V
Max Coverage upon	· · · · · · · · · · · · · · · · · · ·	Remote control	
full battery	120-150M <sup>2</sup>	In-put voltage	DC3V
Size	330×330×100mm	Remote control	< Emotoro
Net weight	2.8Kg	distance	≤5meters







- Take good care of the product and keep it beyond child and people who can not judge danger nearby. Extra attention should be paid when it starts working.
- You should get the person inside the room know that the machine is working, in order to avoid man-made damage like tripping.
- Do not take robot as toy. Carefully attention should be paid when child or pet is around.
- The plastic package may bring danger of asphyxia and is supposed to keep away from child.

## **Battery Replacement** and **Disposal**

$\square$	

- You need to contact our after-sales when you want to change the battery. It will cause explosion if you use replacement battery of wrong model.
- There is potential danger if you use other producer's battery and charging block. The damage cause hence is not within the warranty.
- Please dispose the spent battery properly, because there is hazardous substance which may pollute the environment.
- Conform with local environmental legislation and dispose it at the recovery site.

## **Resource Utilization**



- Do not take the package material as domestic garbage and discard it freely.
- Please deliver the package material to proper recovery site for recycle.

- When Product is in Failure Do not repair or disassemble the machine when there is damage of the power cord or failure of the host.
  - Contact our after-sales service or our designate maintenance organization for professional repair.

## Notes before Cleaning









- Take extra care of the robot when the first it works. Please remove the obstacles when it is beyond the robot. Try to avoid the situation that the robot stops working.
- Make precautions to solve the problem which may make the cleaning in trouble, such as:
  - ---- Keep the easily knock over objects in a safe place.
  - ---- Permian the edge of the carpet.
  - ---- The hanging table cloth and curtain should not touch the ground.
  - ---- The flammable object should be cut from the fire source.
  - ---- Sort out the tangled power cord on the floor.
- Check whether the main brush is correctly fixed inside the robot before cleaning.
- Examine if the dust box is empty and insure it is fixed before it works.
- See if up-ground height sensor and dust sensor are wiped clean.

## **Child Safety**



• Child, physically or mentally disabled and inexperienced are not allowed to use it, unless their safety supervisor is there to give instruction.

## The Spectrum of the Product Use











- This robot is applicable to domestic sweeping, including wooden floor, rubber floor, ceramic tile, linoleum and medium or short-haired carpet however, it is inapplicable to long-haired carpet.
- It can not be used for the floor as below:
  - $^{----}$  Have water on the surface  $(\mbox{including flammable liquids})\,,\,\,\mbox{such}$  as wet floor.
  - ---- Inside toilet, shower room or other humid situation.
  - ---- Staircase
  - ---- The room with furnace or flame
- The following objects are definitely forbidden:

---- Not extinguished soot, burning cigarette butts or match, because these objects would cause fire.

---- Sharp objects like glass debris, pin, paper clip, stones, gypsum, and large piece of paper. These things may block the machine.

---- Water or other kind of liquid, especially detergent, kerosene, petrol, paint, alcohol, perfume, as well as carpet or floor cleaning solution. It would make the interior of the machine wet, so that may cause short-circuit.

---- The toner of laser printer and copier which may bring fire and explosion.

- Please keep the machine away from hot source such as oven and fireplace, because the hot can distort the crust.
- Do not use the machine in the surroundings with any explosion risk. For example, at gas station, oil depot, chemical plant and so on.
- Never use the machine outdoors. As rain or solid dust may get inside it and cause damage.
- Do not repair or change any performance by yourself.
- Do not throw or bend the machine.
- Do not dampen it, or else the short-circuit would cause fire or electric shock accident.
- Take care of routine maintenance and keep it in a clean place.
- Do not expose the machine in the extreme hot or cold surroundings. This product is not allowed to long-time kept in the temperature below zero or over thirty degree.
- Do not keep the machine in the liquid or expose it to high humidity.
- Do not place the machine close to burning cigarette or fire.

## 1.Safety Instruction





**Warning**: Where there is a drop off in the cleaning area due to a step or stairs and they are not carpeted, you should operate the unit to see that the unit can detect the step without falling over the edge. It may become necessary to place a physical barrier at the edge to keep the unit from falling over the drop but make sure the physical barrier is high enough so that you or a family member will not trip on the barrier and cause themselves injury.

#### ▲ Note:

► Do not open the equipment. The components inside the robot host are beyond repair by user himself, such as remote control and virtual wall.

This product is only for domestic use, not suitable for industry or outdoor surroundings.
 Please do not press LCD.

## The User Guide

Please conform to the basic safety precautions as follows:

- Read the content in this user guide carefully and install the robot according to the detailed instructions.
- Safekeeping this guide. If you transfer this machine to another person, please make sure attach this booklet.
- Any inconsistent operation with this guide would probably cause serious damage to both human being and the machine itself.

## Power Supply for the Product









- The power supply is from a Ni-MH chargeable battery inside the host of the robot and it is specially assigned with a charging block to do recyclable charge.
- Please double check the marked supply voltage on the charging block and make sure it is applied according to the instructions.
- Do not use the damaged power cord or plug, while contact our after-sales service or find our authorized supplier to maintain.
- As the charging block is heavy, please never drag the block via pulling it's power cord.
- Remember never to twist and swing or screw the power cord excessively, neither to block it when close the door.
   We should not put heavy things on it as well.
- Do not let power cord touch hot or sharp surfaces.
- Do not draw out the plug by pulling the cord.
- Keep wet hands away from the plug or machine.
- Pull the plug out of socket when you no longer use the charging block for some time.
- Use dry cloth to wipe the dust on the plug frequently.

## Content

1.	Safety Instruction3
	User Guide3
	Power Supply for the Product3
	The Spectrum of Product Use4
	Notes before Cleaning5
	Child Safety5
	Battery Replacement and Disposal6
	Resource Utilization6
	When Product is in Failure6
2.	Content in the Original Package and Technical Parameter7
3.	Name of Parts9
	The Host9
	LCD and Control Panel10
4.	Battery Charging10
	Assembly Charging Block10
	Charging11
5.	Power On/Pause/Power Off12
	Power On12
	Pause12
	Power Off12
6.	Mode Selection13
	Automatic Cleaning Mode13
	Border Cleaning Mode14
	Fixed Point Cleaning Mode14
	Intensive Cleaning Mode14
	Go Back Charging Mode14
7.	Automatic Charging15
8.	Appointment Timing15
	Set Appointment Time15
	Set Current Time16

Set Frequency and Cancel Timing17
9. Remote Control17
Battery Placement17
Use of Remote Control18
10.Virtual Wall18
Battery Placement18
Use of Virtual Wall19
11. Border Tape20
12. Day-to-Day Storage
13. Maintenance21
The Host Cleaning21
Dust Box Cleaning21
Cotton Filter and Filters Cleaing22
Sponge Filter Replacement23
Main Brush Cleaning23
Side Brush Cleaning24
Side Brush Replacement24
Driving Wheel Cleaning24
Up-Ground Height Sensor Cleaning24
Dust Sensor Cleaning25
14. Alarming25
15. Common Failure26
16. Other Problems27

Thanks for purchasing **ECOVACS** Deebot patented Robot Vacuum Cleaner products. Hope you can enjoy it ! Thanks again for your choice!

# Thank you for your choice!



## **Robot Vacuum Cleaner**

ECOVACE



## D58 User Guide