

LAVAZZA ESPRESSO MAXI POINT OPERATION MANUAL



Service & Sales:
1300 622 126



supported by
The **BLUE POD** Coffee Co.

COMPONENTS

Power light

Coffee dispenser button



Cartridge insertion opening

See following pages for detailed images

Cartridge load lever grip

Water tank window

Dispensing spout

Cup-support rack

Used cartridge/drop collection drawer

Rear tank cover

Steam/hot water dispenser LED

Steam/hot water dispenser knob

Steam/hot water arm

Power cord

On/off switch

Power cord point



Service & Sales:
1300 622 126



supported by
The **BLUE POD** Coffee Co.

PREPARING THE MACHINE

Congratulations on selecting the Lavazza Espresso Point Maxi coffee machine. With years of experience and relentless attention to detail Lavazza are now the world leaders in coffee pods, producing over 20 million a day.

The Espresso Point Capsule used in this machine is an innovative vacuum packed system. It seals in the freshness and quality of superior Lavazza coffee beans and produces fresh, rich tasting coffee every time. Used with Lavazza's state-of-the-art Italian designed coffee machines - it enables anyone to enjoy an excellent Italian espresso, at any time, anywhere. We trust you will enjoy.

TURNING ON THE MACHINE



Position the machine on a flat and stable surface well away from water, flames and sources of heat. Unplug from the electricity mains if plugged in. When on, never cover the machine with tea towels or similar.

- 1** To remove the tank lift it and turn slightly. Rinse with clean water & replace.



- i** Using a water filter (optional accessory) improves the quality of the water and increases the life of the machine. Use the AquaAroma Crema Brita® filter for Lavazza. To insert the filter follow the instructions booklet that comes with the accessory. It is advisable not to modify the filter default setting.

- 2** Fill the water tank up to the MAX level indicated using only fresh non-sparkling drinkable water.



The water must never go above the MAX indicator line and should always remain above the MIN marking. Only use fresh drinkable, non-sparkling water. Warm water and other liquids may damage the tank. Do not attempt to use the machine if there is no water in the tank. Check that the water level is above the MIN level indicated.

- 3** The tank may only be filled via the side opening.



- 4** Plug the power cord into the electricity mains and turn on/off switch to the ON position.



- 5** Wait until the power light remains lit and the machine emits an acoustic sound.



Service & Sales:
1300 622 126

LAVAZZA
ESPRESSO POINT
MAXI

**BLUE
POD**
The BLUE POD Coffee Co.

supported by
The **BLUE POD** Coffee Co.

PREPARING THE MACHINE

ENERGY SAVING

- 1 After a period of inactivity, the machine will go into stand-by mode and the power light will flash.



- 2 To re-start the machine simply lift and lower the cartridge load lever.




- 3 The machine is ready for use when it emits an acoustic signal and the power light remains lit.




PREPARING A COFFEE

- i **Regulating the dispensing spout:**
Espresso coffee: dispensing spout out, facing down
Large cup of coffee: dispensing spout back, facing up

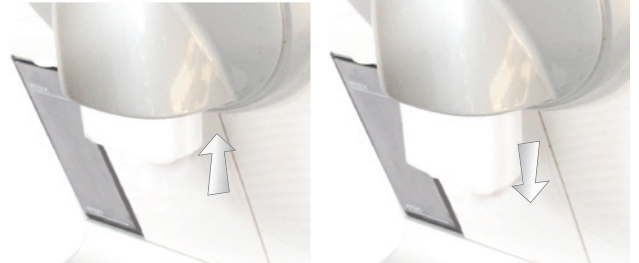

- i **Regulating the cup-support rack:**
Espresso coffee: rack rotate 180°
Large cup: rack down (standard position)

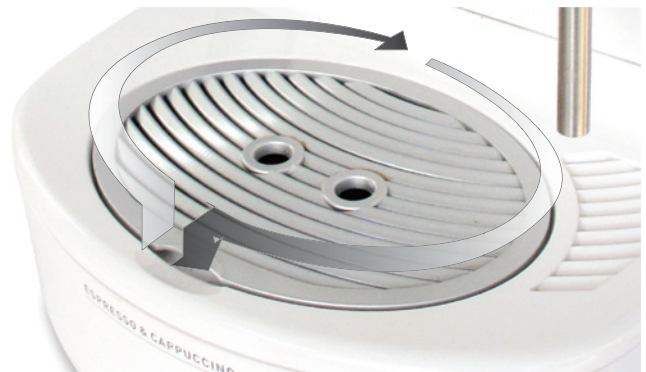

Only Lavazza ESPRESSO POINT MAXI cartridges may be inserted into the cartridge slot

TECHNICAL CHARACTERISTICS

- Voltage: 220 - 240V 50Hz
- Total power: 1000W
- Capacity water tank: 1.4L
- Dimensions: Height: 36cm
- Width: 23cm
- Depth: 34cm
- Weight: 5,6kg
- Collection drawer capacity: 12 capsules
- Materials used for the machine body: Thermoplastic

Service & Sales:
1300 622 126



supported by
The **BLUE POD** Coffee Co.

PREPARING COFFEE

DISPENSING COFFEE

- 1** Position the cup in the centre of the rack.



- 2** Lift the cartridge load lever and insert the coffee pod into the slot.



Step1 - Using the lever grip, open cartridge lever



Step2 - view *empty* cartridge opening



Step3 - insert new coffee pod



Step4 - close lever, coffee pod will drop into place



*Always use the grip.
Do not put your fingers
or other objects
into the cartridge slot*



If the cartridge does not enter, empty the used cartridge/drop collection drawer

- 3** Press the coffee dispensing button: the light flashes.



- 4** When you have the desired quantity of coffee in your cup, press the coffee dispenser button again to **stop** the machine.

REMOVE USED PODS

- 1** Gently unclip the cartridge/drop collection drawer.



- 2** Remove the lid and remove the used coffee pods. Place the drawer back into place.



TROUBLE SHOOTING

Problem	Possible causes	Solution
The machine doesn't turn on.	<ul style="list-style-type: none"> Machine not plugged into the electricity source. 	<ul style="list-style-type: none"> Check it is plugged in correctly.
LEDs flash quickly.	<ul style="list-style-type: none"> The machine has broken down. 	<ul style="list-style-type: none"> Contact customer services or a service centre.
The cartridge load lever will not return to a central position.	<ul style="list-style-type: none"> Used cartridge/drop collection drawer is full. Incorrectly inserted cartridge. 	<ul style="list-style-type: none"> Empty the used cartridge/drop collection drawer. Lift the cartridge load lever and correctly insert the cartridge.
The pump is noisy.	<ul style="list-style-type: none"> The tank needs filling with water. Filter inserted incorrectly. 	<ul style="list-style-type: none"> Refill with fresh drinkable water. Check that the Brita® filter is correctly inserted (see instructions supplied with filter)
The machine doesn't dispense any coffee.	<ul style="list-style-type: none"> Unsuitable temperature. Hot water/ steam option selected. Cartridge load lever in raised position. 	<ul style="list-style-type: none"> Wait until the ideal temperature has been reached. Return the hot/steam dispenser button to a central position. Lower the cartridge load lever.
Coffee is not hot enough.	<ul style="list-style-type: none"> Cups are cold. The machine was not at the correct temperature when the coffee dispenser button was pressed. 	<ul style="list-style-type: none"> Pre-heat the cups using hot water. Wait until the machine light remains lit.
The coffee does not come out or comes out in drops.	<ul style="list-style-type: none"> Blocked dispensing spout. 	<ul style="list-style-type: none"> Clean the dispensing spout.
The coffee comes out too quickly, the espresso crema does not form.	<ul style="list-style-type: none"> The cartridge has already been used. 	<ul style="list-style-type: none"> Insert a new cartridge.
Milk or cappuccino froth doesn't form.	<ul style="list-style-type: none"> Milk unsuitable. Milk is not cold enough. Steam dispensing spout is clogged. 	<ul style="list-style-type: none"> Use fresh semi-skimmed milk. Use milk at refrigerated temperature. Clean the steam dispensing spout with a needle and clean the arm.
No hot water or steam dispensed.	<ul style="list-style-type: none"> Clogged steam/hot water arm. Insufficient water in the tank. Filer not inserted correctly. 	<ul style="list-style-type: none"> Clean the arm. If the problem persists clean the dispenser hole with a thin needle, making sure that it is free of blockages. Then turn on the machine and dispense a small quantity of steam. Refill with fresh drinkable water. Check that the Brita® filter is correctly inserted (see instructions supplied with filter).

Service & Sales:
1300 622 126



supported by
The **BLUE POD** Coffee Co.