

Gas-fired wall-mounted condensing boiler
25 to 230 MBH/7 to 67 kW
Multi-boiler installation 344 to 920 MBH/

Technical Data Manual

Model Nos. and pricing: see Price List



Vitodens 200, WB2-24C/24/32





Vitodens 200, WB2-44/60
(with preinstalled vent pipe adaptor)

Vitodens 200

WB2 Series

Gas-Fired Wall-Mounted Condensing Boiler
with modulating MatriX-compact gas burner
for room air independent operation
(using a direct vent system and room air
dependent operation)

For Natural Gas and Liquid Propane
Heating input NG 25 to 230 MBH
7 to 67 kW
Heating input LP 25 to 214 MBH
7 to 63 kW

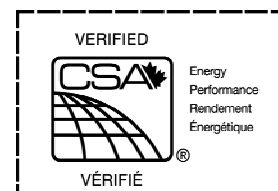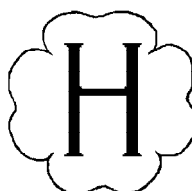

VITODENS 200

The Vitodens 200 is a high-quality condensing boiler made of stainless steel, developed in accordance with the latest achievements of the condensing boiler technology industry. In terms of energy usage, for example, the Vitodens 200 is uncompromising: Thanks to the innovative condensing technology of the boiler with modulating MatriX-compact gas burner and the especially developed Inox-Radial heat exchanger surface, made of stainless steel, the Vitodens 200 reaches an A.F.U.E. of up to 95.2%.

The benefits at a glance:

- **Highest efficiency** with full modulation
up to 98%
A.F.U.E.: up to 95.2%.
- **Maximum reliability**
High-alloy stainless steel (SA240 316Ti)
Inox-Radial heat exchanger constructed in compliance with CSA B51 and ASME Section IV.
Maximum pressure rating: 45 psig.
- **Protect the environment**
Extremely low emissions with modulating MatriX-compact gas burner.
NO_x: 8.9 ppm (air-free)
CO: 5.5 ppm (air-free)
- **Compact, lightweight design.**
Zero clearance to combustibles. Limited space is not an issue.
- **Clean, esthetically pleasing appearance** for installation anywhere in your living area.
- **Extremely quiet operation**; quieter than most refrigerators.
- **Smart burner technology**
Factory calibrated, self-adjusting burner.
No adjusting in the field, reduced operating cost.
- **Powerful and user-friendly** outdoor reset control, built-in and prewired with diagnostic system.
Controls multi-temperature space heating and DHW systems.

■ Reliable DHW production two ways:

- Combi model features an integrated DHW Quick System. No DHW tank required.
- Unlimited DHW supply with a stand-alone DHW tank with any other Vitodens 200.

■ Three different venting options:

- Horizontal or vertical sealed combustion vent system (factory supplied)
- Vertical single-wall vent system (field supplied)


■ Multi-boiler installation

Models WB2-44 and -60 can be combined to a maximum of 4 boilers. **Ideal for light commercial applications.**


■ One version for all elevation levels


(0 to 10 000 ft. / 0 to 3048 m).

■ Fast, simple conversions to natural or propane gas.

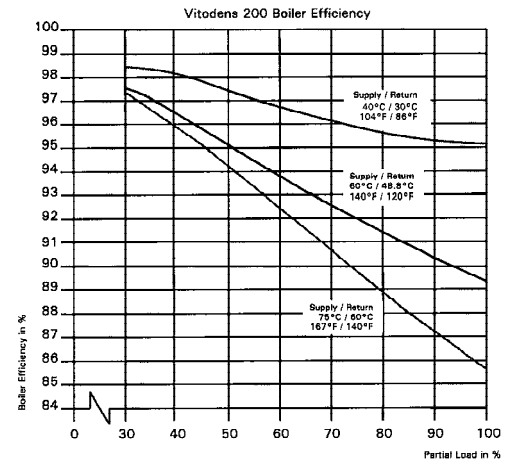

Vitodens 200 –
Models WB2 11-44 and 15-60
172 MBH to 230 MBH/50 kW to 67 kW

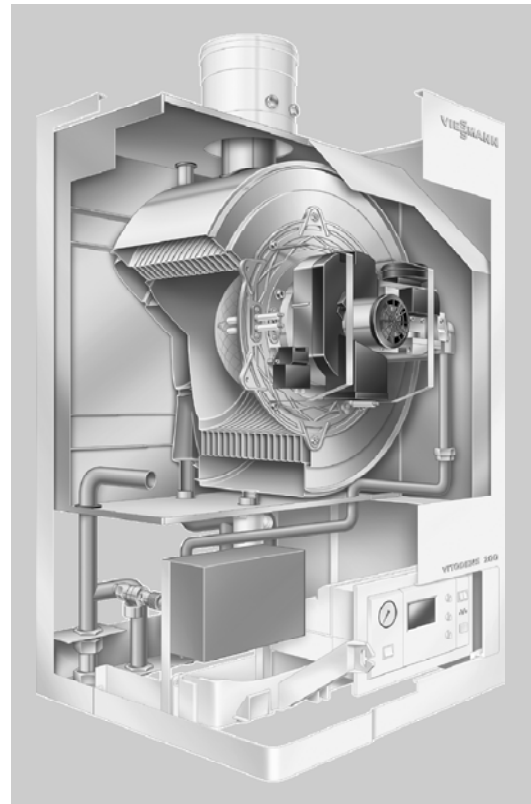

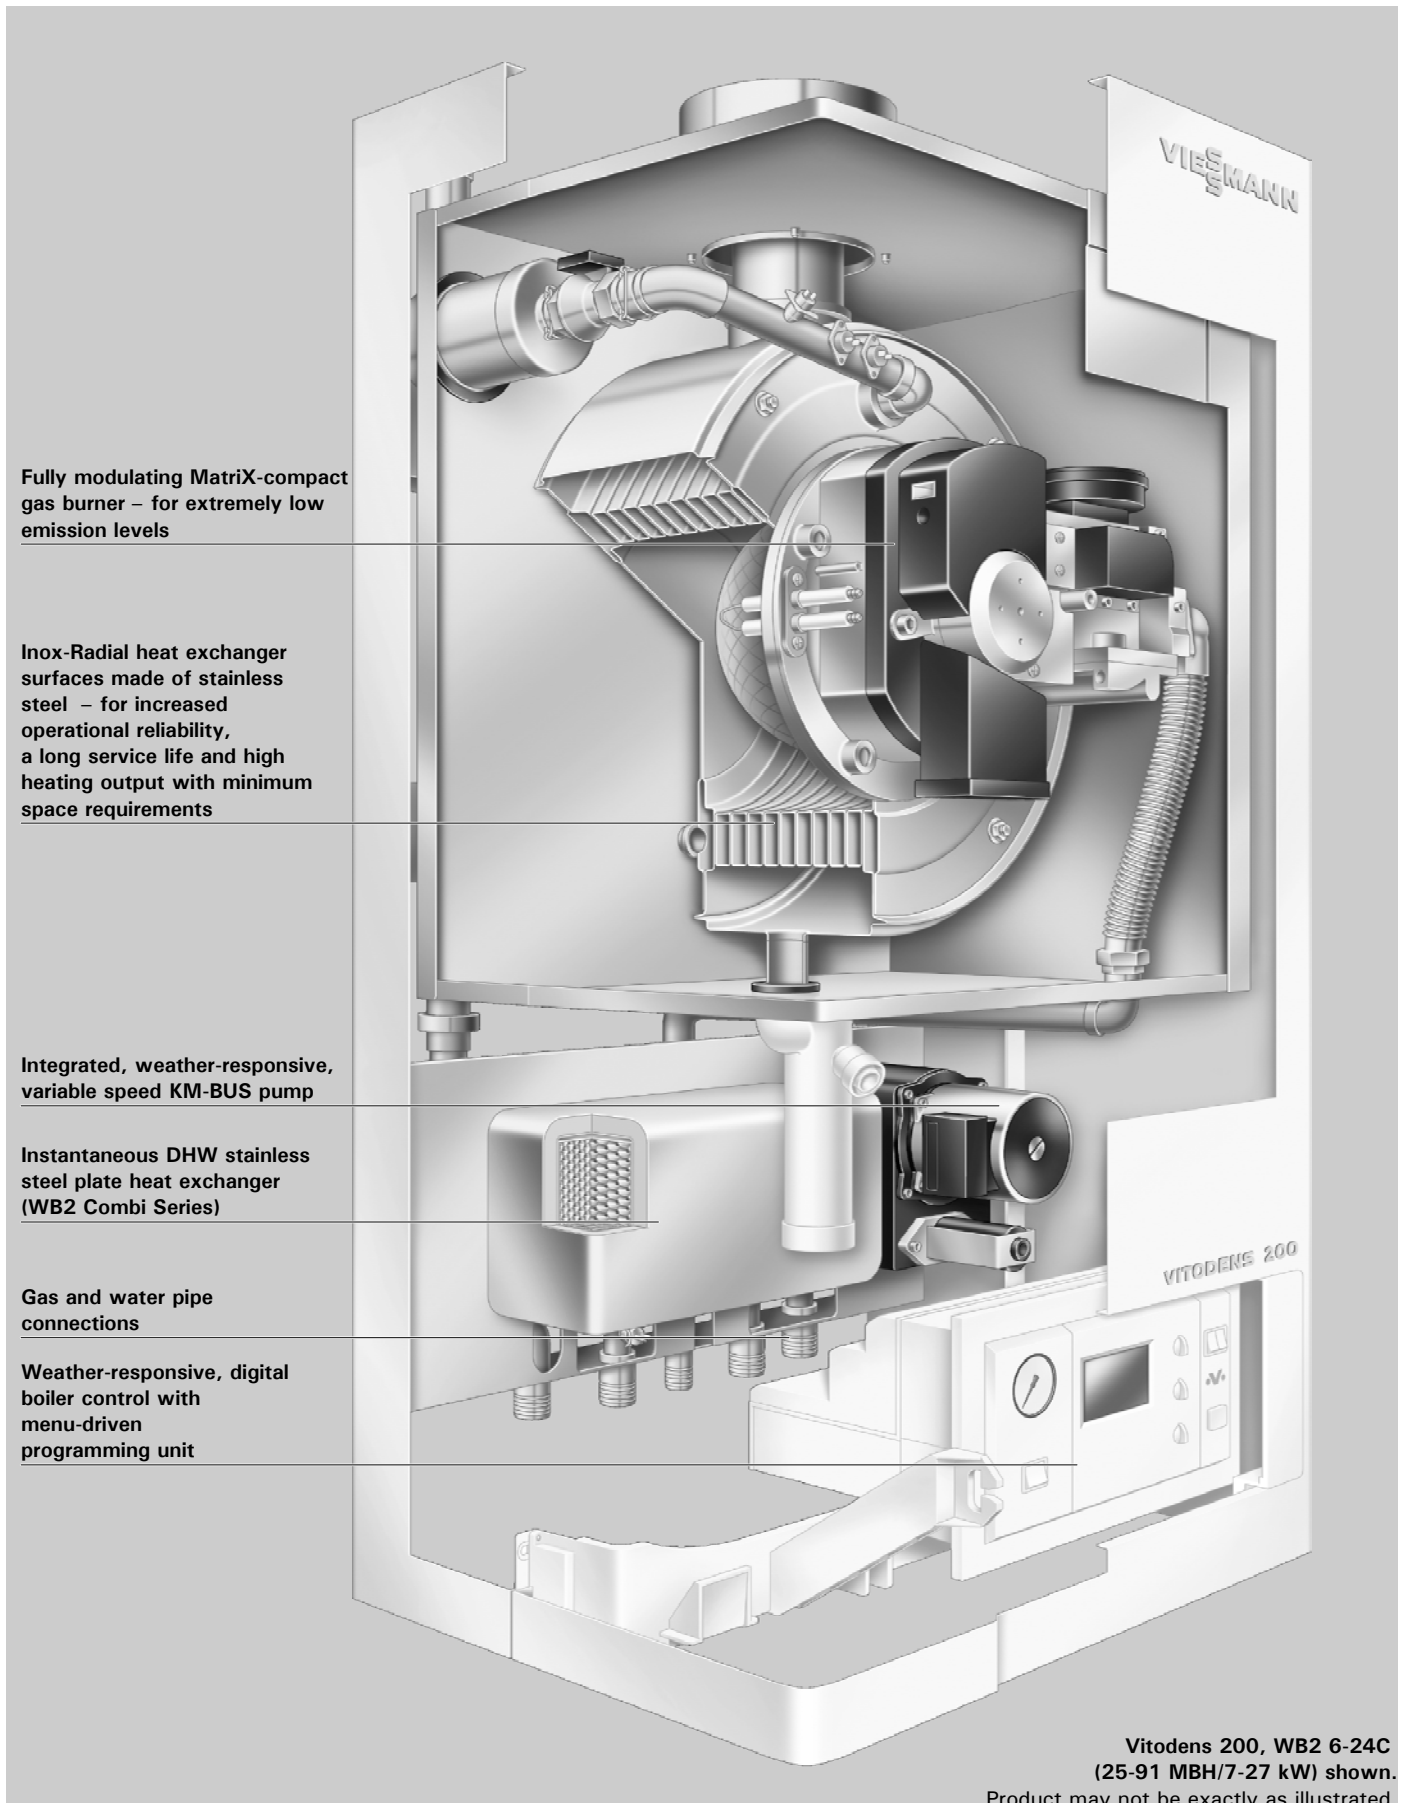

Vitodens 200

Technical Data

		Combi Series		Standard heating boiler		
Boiler Model	Model No.	WB2 6-24C	WB2 6-24	WB2 8-32	WB2 11-44	WB2 15-60
Natural gas						
CSA input	MBH	25-91	25-91	37-124	55-172	80-230
	kW	7-27	7-27	11-36	16-50	23-67
CSA output/DOE ^{*1}	MBH	22-81	22-81	33-112	49-154	71-206
heating capacity	kW	6-24	6-24	10-32	14-44	21-60
Net I = B = R rating ^{*2}	MBH	70	70	97	133	178
Propane gas						
CSA input	MBH	25-81	25-81	37-112	55-155	80-214
	kW	7-24	7-24	11-33	16-45	23-63
CSA output/DOE ^{*1}	MBH	22-73	22-73	33-101	49-139	71-192
heating capacity	kW	6-21	6-21	10-30	14-40	21-56
Net I = B = R rating ^{*2}	MBH	63	63	88	120	166
Heat exchanger surface area	ft. ²	8.22	8.22	9.91	20.91	20.91
	m ²	0.76	0.76	0.92	1.94	1.94
Min. gas supply pressure						
Natural gas	"w.c.	4	4	4	4	7
Propane gas	"w.c.	11	11	11	11	11
Max. gas supply pressure ^{*3}						
Natural gas	"w.c.	14	14	14	14	14
Propane gas	"w.c.	14	14	14	14	14
A.F.U.E.	%	95.2	95.2	95.2	95.2	95.2
Weight	lbs	159	143	165	214	214
	kg	72	65	75	97	97
Boiler water content	USG	1.1	1.1	1.2	4.3	4.3
	ltr	4.0	4.0	4.6	16.45	16.45
Integrated pump flow rate at 6.6 ft./2 m head pressure ^{*4}	GPM	4.6	4.6	4.6	--	--
	ltr/h	1050	1050	1050	--	--
Boiler max. flow rate ^{*5}	GPM	6.2	6.2	7.0	15.4	15.4
	ltr/h	1400	1400	1600	3500	3500
Max. operating pressure at 210 °F/99 °C	psig	45	45	45	45	45
	bar	3	3	3	3	3
Boiler water temperature						
– Adjustable high limit (AHL) range						
space heating	°F/	68 to 167/ 20 to 75				
(steady state)	°C					
DHW production	°F/	108 to 172/ 42 to 78				
	°C					
– Fixed high limit (FHL)		210/99				
Boiler connections						
Boiler heating supply and return	NPTM "	¾	¾	¾	1 ¼	1 ¼
Pressure relief valve	NPTF "	¾	¾	¾	¾	¾
Drain valve	(male thread)	¾	¾	¾	¾	¾
Boiler supply/return for indirect-fired DHW storage tank	NPTM "	--	¾	¾	1 ¼	1 ¼

^{*1}Output based on 140°F / 60°C, 120 °F / 49°C system supply/return temperature.

^{*2}Net I = B = R rating based on piping and pick-up allowance of 1.15.

^{*3}If the gas supply pressure exceeds the maximum gas supply pressure value, a separate gas pressure regulator must be installed upstream of the heating system.

^{*4}With pump rotational speed set to 100% flow capacity (2700 rpm), see Coding Address 045 in the Vitodens 200 Start-up/Service Instructions. Pump factory default setting is 65% flow capacity (2000 rpm).

^{*5}See "Typical System Flow Rates" on page 8 in this manual.

			Combi Series		Standard heating boiler		
Boiler Model	Model No.		WB2 6-24C	WB2 6-24	WB2 8-32	WB2 11-44	WB2 15-60
Dimensions							
Overall depth	inches		16	16	16	21 ½	21 ½
	mm		406	406	406	550	550
Overall width	inches		19 ¾	19 ¾	19 ¾	23 ½	23 ½
	mm		500	500	500	600	600
Overall height	inches		35 ½	35 ½	35 ½	35 ½	35 ½
	mm		900	900	900	900	900
Height with flue gas elbow (accessory)	inches		44	44	44	47 ¼	47 ¼
	mm		1 116	1 116	1 116	1 200	1 200
Gas supply connection	NPTF "		½	½	½	¾	¾
Standby instantaneous DHW plate heat exchanger of Combi boiler*6							
Water content DHW side	USG/ltr		0.26/1.00	--	--	--	--
	heating water side	USG/ltr	0.18/0.70	--	--	--	--
Connections DHW and DCW	NPTF "		½	--	--	--	--
Max. operating pressure (DHW side)*7	psig/bar		150/10	--	--	--	--
DHW supply temp. range	°F/°C		100-135/38-57	--	--	--	--
Continuous draw rate	GPH		156	--	--	--	--
with a temperature increase	ltr/h		590	--	--	--	--
Draw rate range							
	from 50 to 113 °F/10 to 45 °C						
Draw rate range	GPM		0.8-2.1	--	--	--	--
	ltr/min		3-8	--	--	--	--
Flue gas*8							
Temperature (at boiler return temperature of 86 °F/30 °C)							
– at rated full load	°F/°C		113/45	113/45	113/45	95/35	104/40
– at rated partial load	°F/°C		95/35	95/35	95/35	91/33	95/35
Temperature (at boiler return temperature of 140 °F/60 °C)							
	°F/°C		158/70	158/70	158/70	149/65	158/70
Average condensate flow rate*9							
with natural gas and							
– T _S /T _R = 167/140°F/75/60 °C	USG/day		2-2.6	2-2.6	2.6-3	2.9-4	4.8-5.8
	ltr/day		8-10	8-10	10-12	11-15	18-22
– T _S /T _R = 104/86°F/40/30 °C	USG/day		2.9-3.4	2.9-3.4	4-4.5	3.7-5	6-7.4
	ltr/day		11-13	11-13	15-17	14-19	23-28
Condensate connection*10							
	hose nozzle						
	Ø in		1	1	1	1	1
Boiler flue gas connection*11							
	Ø in/mm		3 ¾/80	3 ¾/80	3 ¾/80	4 ¾/110	4 ¾/110
Combustion air supply connection*11							
	outer Ø in/mm		5/125	5/125	5/125	6/150	6/150

*6 Minimum pressure for domestic cold water connection 1 bar/15 psig.

*7 See DHW sizing chart on page 11 in this manual.

*8 Measured flue gas temperature with a combustion air temperature of 68 °F/20 °C.

*9 Based on typical boiler cycles, including partial load conditions.

*10 Requires 1"/25 mm tubing. See Vitodens 200 Installation Instructions for details.

*11 For side wall vent installations:

Do **not** exceed max. equivalent length of 20 ft./6 m as stated in the Installation Instructions of the Vitodens 200 Venting System.

A **maximum of five elbows** may be installed in the vent system.

Do **not** attempt to common-vent Vitodens 200 with any other appliance.


Venting material to be supplied by Viessmann **only**; side wall vent installation **must** include Viessmann protective screen!

For details refer to the venting section starting on page 17 or the Installation Instructions for the Vitodens 200 Venting System.

► For information regarding other Viessmann System Technology componentry, please reference documentation of respective product.

Vitodens 200

Vitodens 200 up to model WB2 8-32

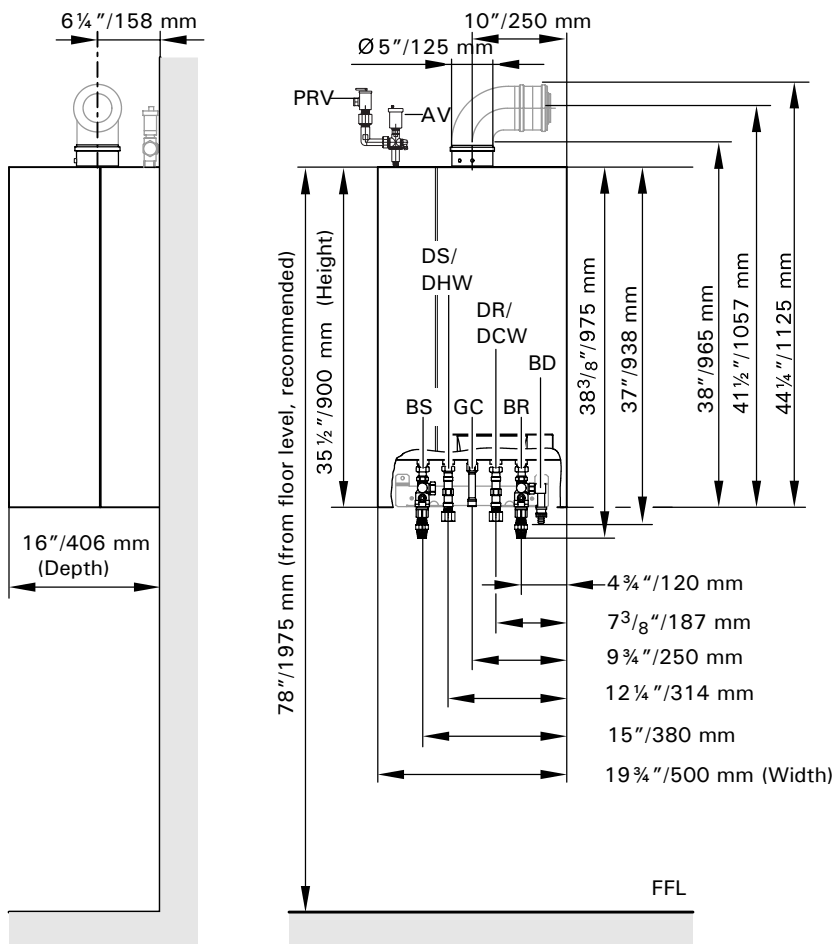

Legend

AV Air Vent
BD Boiler Drain
BR Boiler Return
BS Boiler Supply
FFL Finished Floor Level
GC Gas Connection
PRV Pressure Relief Valve


Only for Combi heating boiler

DCW Domestic Cold Water 1/2"
DHW Domestic Hot Water 1/2"

Only for standard heating boiler

DR Boiler heating return for domestic hot water production 3/4"
DS Boiler heating supply for domestic hot water production 3/4"


Vitodens 200 model WB2 11-44 and up

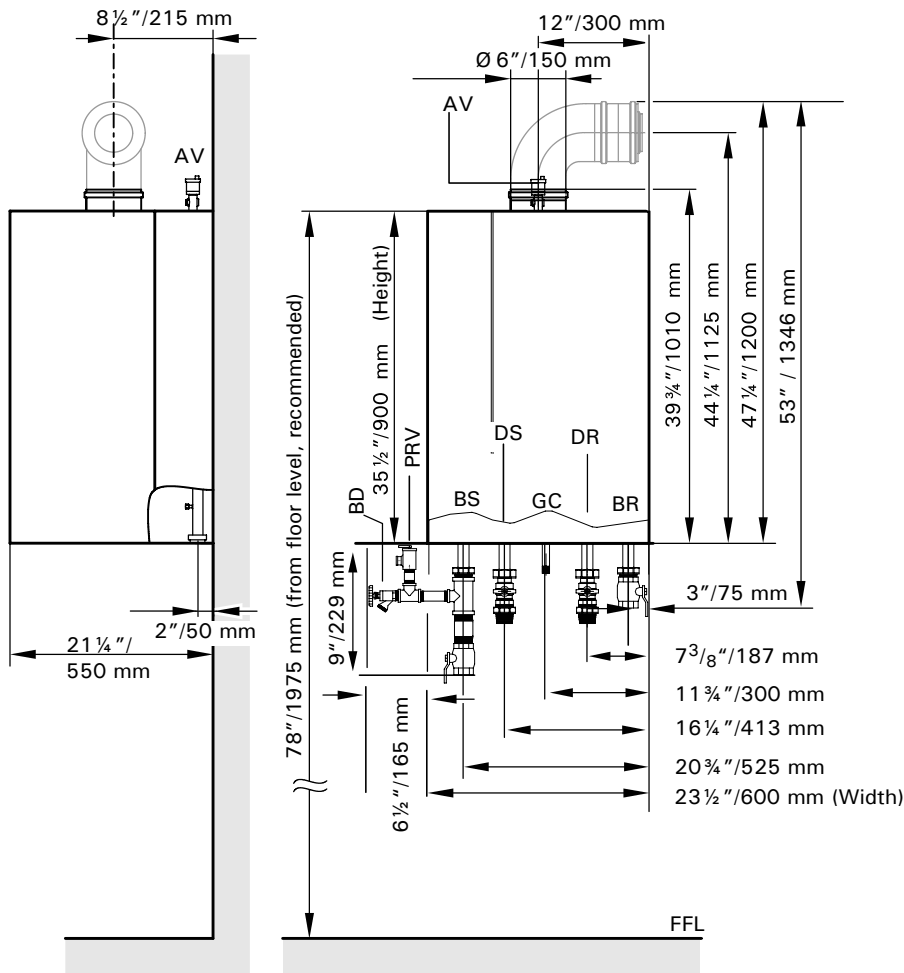

Legend

- AV Air Vent
- BD Boiler drain
- BR Boiler Return
- BS Boiler Supply
- DR Boiler heating return for domestic hot water production 1 1/4"
- DS Boiler heating supply for domestic hot water production 1 1/4"
- FFL Finished Floor Level
- GC Gas Connection
- PRV Pressure Relief Valve

Recommended Minimum Service Clearances

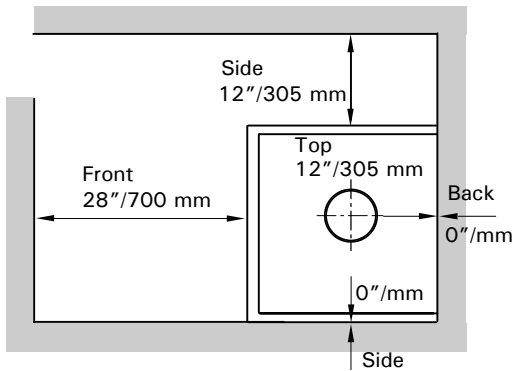

Minimum Clearances to Combustibles

Top	Front	Rear	Left	Right	Vent pipe*1
0	0 AL, CL	0	0	0	0

AL = Alcove

CL = Closet

*1 Refer to the Installation Instructions of the Vitodens 200 Venting System for details.

Note:


The Vitodens boiler has passed the zero inches vent clearance to combustibles testing requirements dictated by the Harmonized Standard ANSI Z21.13. CSA 4.9.2000 and therefore is listed for zero clearance to combustibles when vented with a single wall special venting system (AL-29-4C material). The zero inches vent clearance to combustibles for the Vitodens boiler supercedes the clearance to combustibles listing that appears on the special venting system label.

Technical Data

Waterside Flow (primary circuit)

The Vitodens 200 is designed only for closed loop, forced circulation hot water heating systems.

Pressure drop (primary circuit) of Vitodens 200

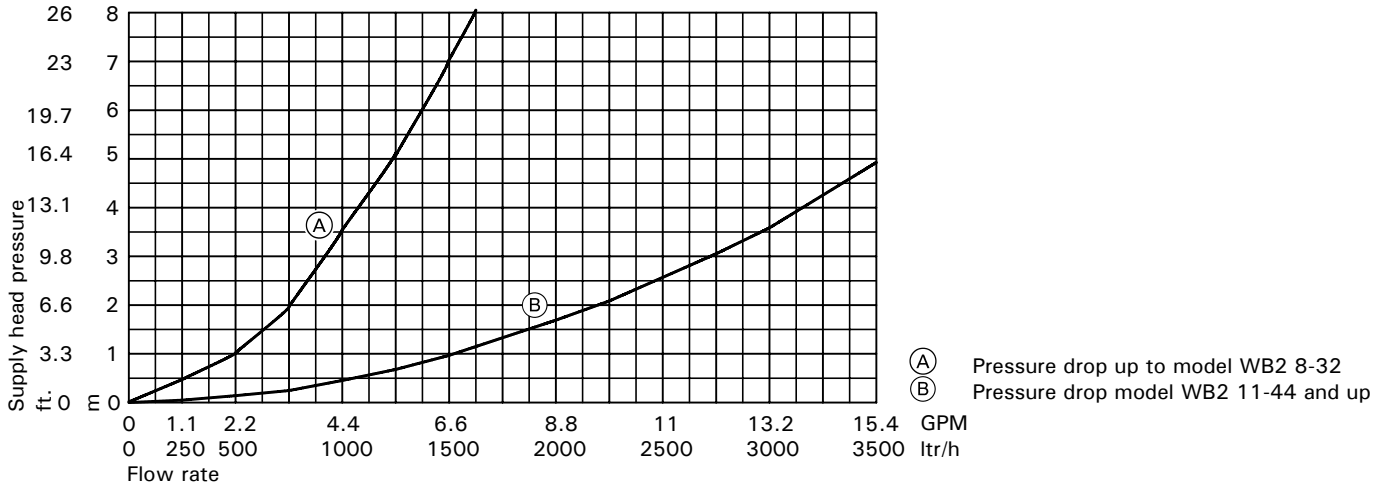

Typical System Flow Rates

Model	WB2	6-24C*	6-24	8-32	11-44	15-60
Δ t for NG						
Output (NG) Btu/h		81 000	81 000	112 000	154 000	206 000
20 °F rise (GPM)		8.1	8.1	11.2	15.3	20.5
25 °F rise (GPM)		6.5	6.5	9.0	12.2	16.4
30 °F rise (GPM)		5.4	5.4	7.5	10.2	13.7
35 °F rise (GPM)		4.6	4.6	6.4	8.7	11.7
40 °F rise (GPM)		4.1	4.1	5.6	7.6	10.2
Δ t for LP						
Output (LG) Btu/h		73 000	73 000	101 000	139 000	192 000
20 °F rise (GPM)		7.3	7.3	10.1	13.8	19.1
25 °F rise (GPM)		5.8	5.8	8.1	11.0	15.3
30 °F rise (GPM)		4.9	4.9	6.7	9.2	12.7
35 °F rise (GPM)		4.2	4.2	5.8	7.9	10.9
40 °F rise (GPM)		3.7	3.7	5.1	6.9	9.6

Use standard friction loss method for pipe sizing.

Observe boiler maximum and minimum flow rate limitations. If system flow rate exceeds boiler maximum flow rate (as stated on page 4) or if system flow rate is unknown, Viessmann strongly recommends the installation of a low-loss header. See page 34 for low-loss header information.

A low-loss header must be used when the **system** flow rate exceeds the maximum (or minimum) flow rate of the Vitodens 200 boiler. Once the low-loss header is connected, the built-in low-loss header logic of the Vitodens 200 boiler ensures the required Δt across the system through the sensory communication between the low-loss header and the boiler.

* Please note that the low-loss header cannot be used with the Vitodens 200, WB2 6-24C Combi boiler.

Please see page 35 for details.

Heating Circuit Pumps


Built-in variable speed heating circuit pump for Vitodens 200 up to model WB2 8-32

Pump rotational speed is transmitted via an internal data BUS to the pump and adjusted by the control unit based on the outdoor temperature and the activation periods for normal and reduced heating.

In the factory default setting, the maximum pump rotational speed is preset to 2000 rpm (coding address "045") and the minimum pump speed to 1100 rpm (coding address "044").

Pump Model	Grundfos VIUPE-60 BUS	
Rated voltage	VAC	230
Rated current	A max.	0.45
	min.	0.21
Capacitor	μF	2.5
Power consumption	W max.	100
	min.	50

Vitodens 200 up to model WB2 8-32 (residual head pressure of built-in variable speed pump)

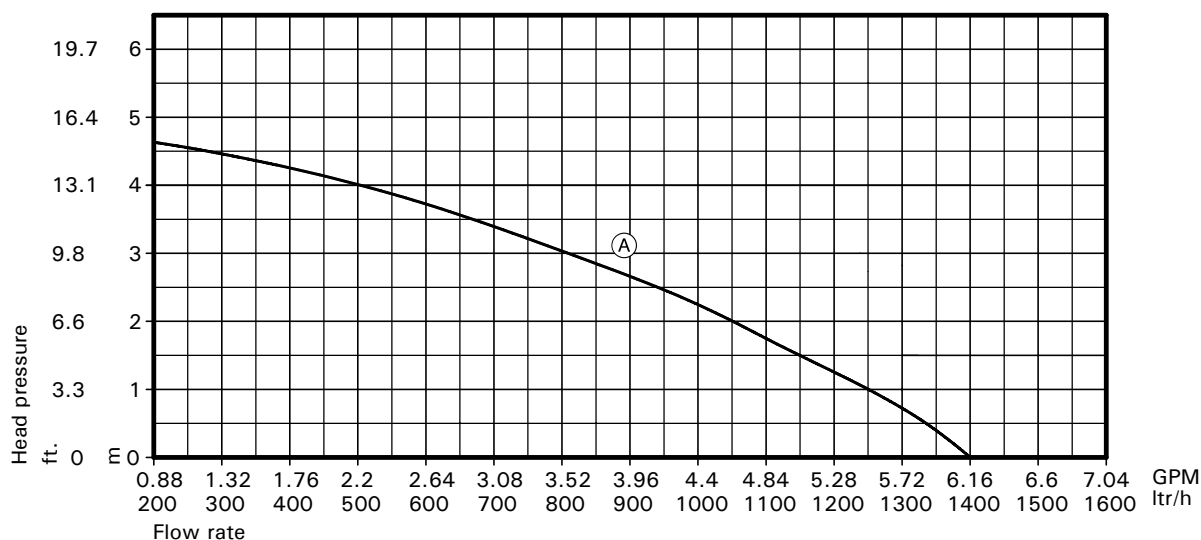

- Ⓐ With pump rotational speed set to 100% flow capacity (2700 rpm); see Coding Address 045 in the Vitodens 200 Start-up/Service Instructions. Pump factory default setting is 65% flow capacity (2000 rpm).


Field supplied system heating circuit pumps for Vitodens 200 (all models)

Viessmann offers a variety of prewired Grundfos system heating circuit pumps (see "Heating circuit pump (field supplied)" in the Installation Examples on pages 39 to 48) which meet typical Vitodens system installation requirements. See Price List for order information.

Heating Circuit Pumps/DHW Production

Heating Circuit Pumps (continued)

Recommended pumps for operation with Vitodens 200 model WB2 11-44 and up
(heating circuit pump, boiler pump and DHW pump field supplied)

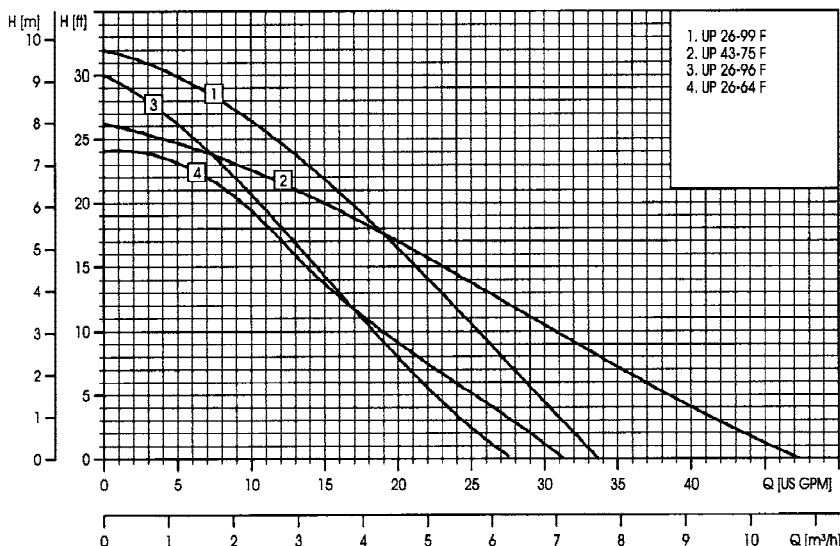

Performance chart courtesy of Grundfos.

IMPORTANT

Pump selection must be based on accurate system flow and pressure drop calculations (incl. DHW sizing). Viessmann offers a variety of prewired Grundfos circulating pumps which meet typical Vitodens system installation requirements.

See Price List for order information.

The following prewired standard Grundfos pumps are available for operation with the Vitodens 200, WB2-44/60 boilers:

- Model UP 26-99 F
- Model UP 43-75 F
- Model UP 26-96 F
- Model UP 26-64 F

Please reference corresponding performance curves (1-4) in the chart to the left.

DHW Production Planning

With integrated stainless steel plate heat exchanger for instantaneous DHW heating (model WB2 6-24C only) or with DHW connections for DHW production via a stand-alone DHW storage tank, the Vitodens 200 boiler series offers the right solution for every need.

Various factors must be taken into account when designing the DHW system, and when deciding between the Combi heating boiler with integrated DHW production and the standard heating boiler with DHW production via a stand-alone DHW storage tank.

Such factors are:

- DHW requirement, level of comfort and convenience
- Number of draw points
- Distance of draw points from the boiler/DHW storage tank
- System retrofit
- Space requirements

Options

		Gas-fired Combi boiler with instantaneous DHW production	Gas-fired standard heating boiler with stand-alone DHW storage tank
DHW requirement, level of comfort and convenience	DHW requirement for an apartment	+	+
	DHW requirement for a single-family house	0	+
	Central DHW requirement for a multi-family house	–	+
	Decentralized DHW requirement for a multi-family house	+	+
Number of draw points	One draw point	+	0
	Several draw points, non-simultaneous use	+	0
	Several draw points, simultaneous use	–	+
Distance of draw points from the boiler/DHW storage tank	Up to 23 ft./7 m (without DHW recirculation line)	+	–
	With DHW recirculation line	–	+
System retrofit	DHW storage tank already installed	–	+
	Replacement of existing Combi boiler	+	–
Space requirements	Minimal space available (installation in alcove)	+	0
	Adequate space available (boiler room)	+	+

+ = recommended 0 = recommended in certain cases – = not recommended


Domestic Hot Water Production via Instantaneous DHW Plate Heat Exchanger (Model WB2 6-24C)

The Vitodens 200 Combi boiler is equipped with an electronically controlled instantaneous DHW plate heat exchanger.

The comfort control function ensures that the instantaneous DHW plate heat exchanger is kept consistently at the required temperature (115°F / 46°C - off, 108°F / 42°C - on).

This translates into immediate availability of domestic hot water at any required temperature level.

Technical Data DHW Plate Heat Exchanger
See page 5 in this manual for technical data.

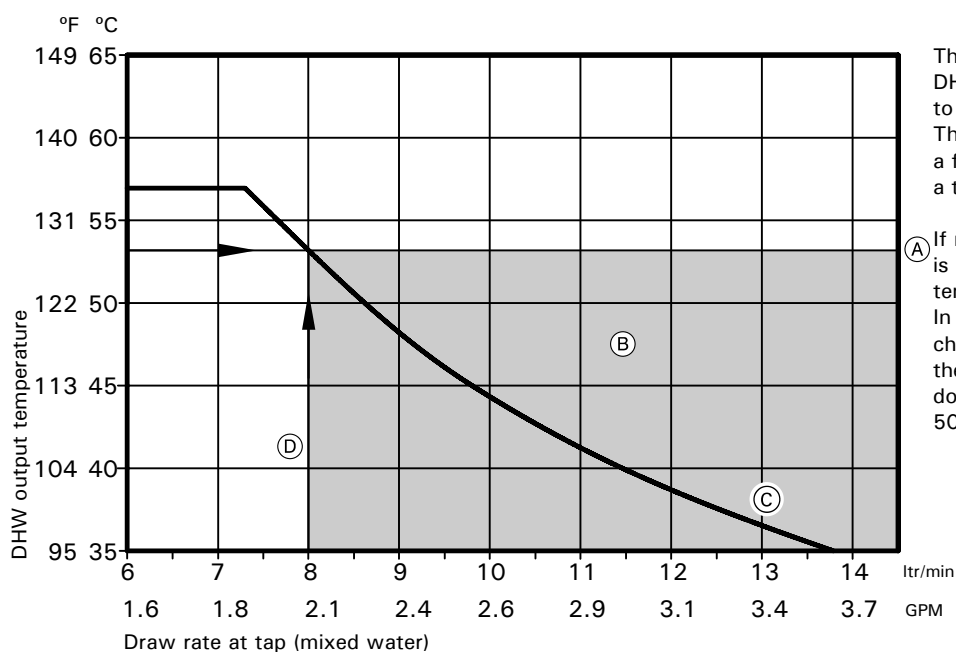

The diagram on the left illustrates how the DHW output temperature changes in relation to the draw rate at the tap. The DHW draw rate is restricted by means of a flow limiter to 2.1 GPM/8 ltrs per min. (D) at a temperature of 128 °F/53 °C.

(A) If more water is required, domestic cold water is added, resulting in a lower DHW output temperature. In the example to the left, demonstrating the change in DHW output temperature based on the addition of domestic cold water, a domestic cold water input temperature of 50 °F/10°C is assumed.

- (A) DHW output temperature at the Vitodens 200 boiler
- (B) DHW/DCW mixing zone
- (C) DHW output temperature at the mixing valve
- (D) Restriction by flow limiter

IMPORTANT

Vitodens 200, WB2 6-24C combi boilers cannot be connected to non-combi boilers in the field. Proper DHW sizing, including future DHW requirements, must be performed before selecting combi boilers.

Domestic Hot Water Production via DHW Storage Tank

Vitodens 200 boilers can be used in conjunction with the stand-alone DHW storage tanks offered by Viessmann. All Viessmann DHW storage tanks sold in North America are available in "Vitosilver" finish only.

Size and select the DHW storage tank based on the forecasted DHW consumption of the building in question.


For further technical information on DHW storage tanks, see the Vitocell-V Technical Data Manuals.

DHW Storage Tank Connection

for Vitodens models up to WB2 8-32

With installation fittings and built-in circulating pump for DHW production (via 3-way solenoid valve).

For the connection of the stand-alone DHW tank a DHW Production Kit is required. See Viessmann Price List for order information.

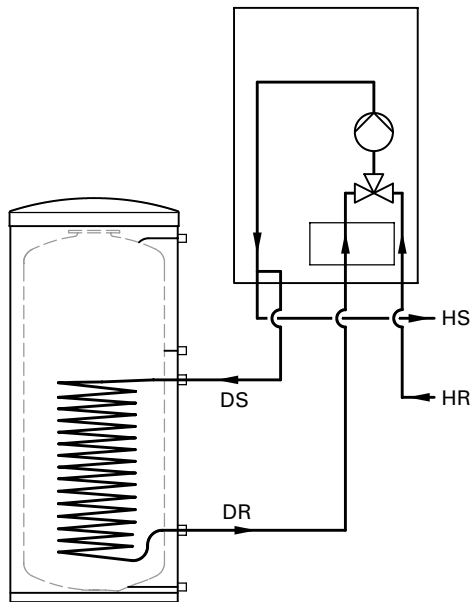


DHW Storage Tank Connection

for Vitodens model WB2 11-44 and up

With installation fittings and external circulating pump for DHW production (optional equipment).

For the connection of the stand-alone DHW tank a DHW Production Kit is required. See Viessmann Price List for order information.

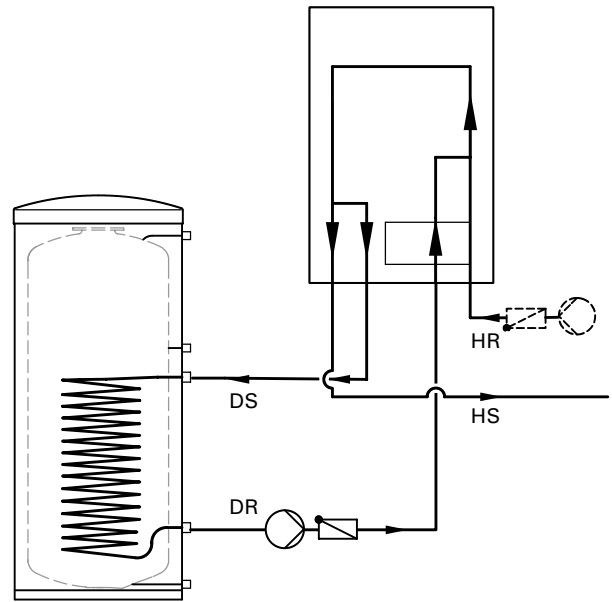

Legend

- DR Boiler heating return for domestic hot water production
- DS Boiler heating supply for domestic hot water production
- HR Heating Return
- HS Heating Supply

IMPORTANT

An adequately sized precharged expansion tank must be used. See Installation Examples for details.

DHW Recirculation


DHW recirculation lines increase the level of comfort and convenience of the domestic hot water supply and reduce water consumption.

These advantages directly derive from the immediate availability of domestic hot water at all draw points.

Poor insulation of the DHW recirculation line, however, can result in considerable heat loss.

Viessmann therefore recommends that effective insulation be provided and used for DHW recirculation lines of **23 ft./7 m in length or longer**.

In addition to a recirculation pump and a flow check valve, the DHW recirculation line should incorporate a programmed timer to switch off the recirculation pump overnight.

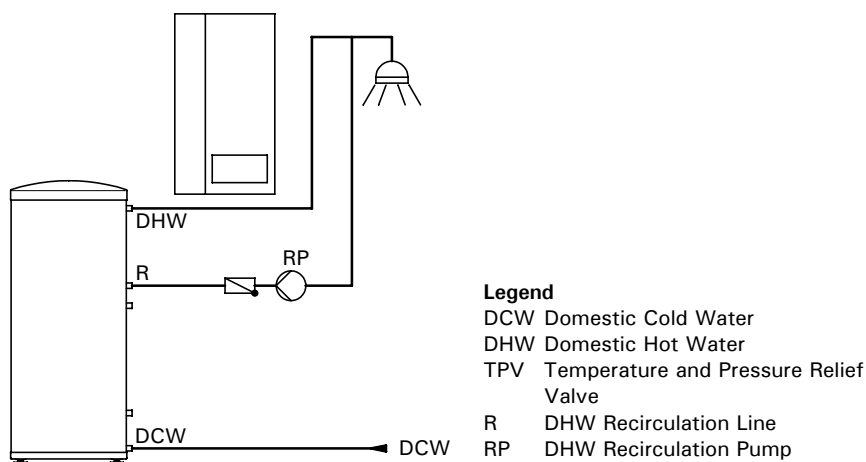

Vitocell-V stand-alone DHW storage tank

DHW Recirculation with Gas-Fired Combi Series

Due to the low water content of the plate heat exchanger, it is **not advisable** to connect a DHW recirculation line to the Vitodens Combi boiler.

Wall Mounting

Wall Mounting Information (up to model WB2 8-32)

Required accessories for installation without DHW storage tank

Mounting bracket
c/w mounting bolts and fittings

Additional requirements when connecting a DHW storage tank

DHW Production Kit for DHW storage tank connection

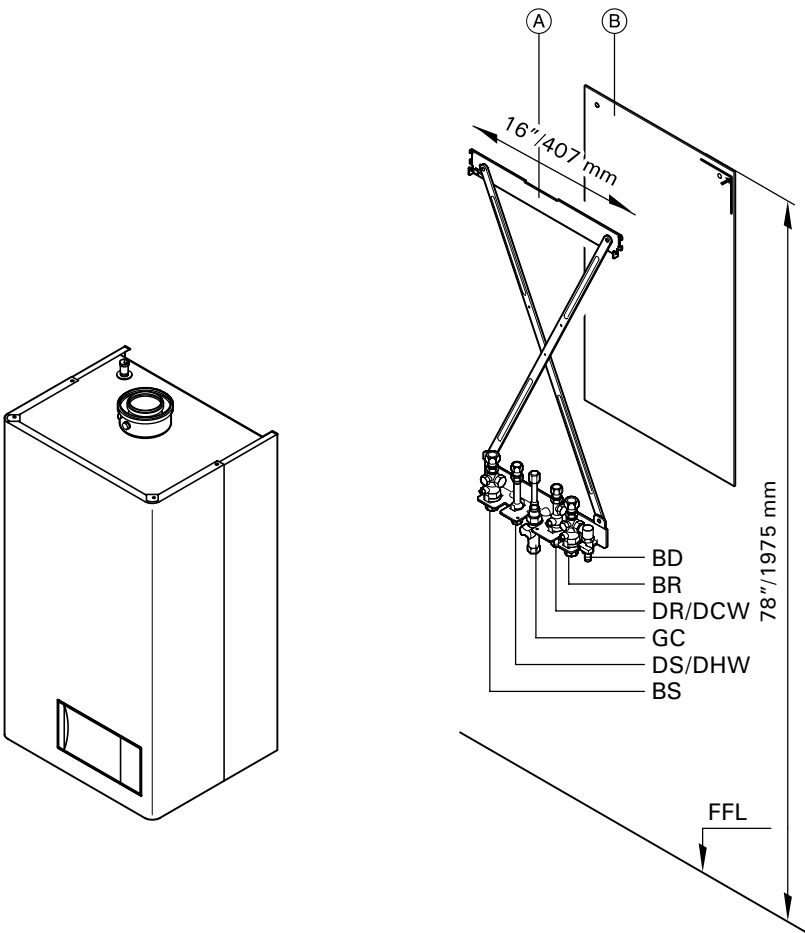


Illustration: Wall-mounting and connection of the Vitodens 200 Combi boiler (model WB2 6-24C)

Legend

- BD Boiler Drain 3/4"
- BR Boiler Return 3/4"
- BS Boiler Supply 3/4"
- FFL Finished Floor Level
- GC Gas Connection 1/2"
(gas shutoff valve is field supplied)

- Only for Combi heating boiler
- DCW Domestic Cold Water 1/2"
 - DHW Domestic Hot Water 1/2"

- Only for standard heating boiler
- DR Boiler heating return for domestic hot water production 3/4"
 - DS Boiler heating supply for domestic hot water production 3/4"

- (A) Mounting bracket
- (B) Vitodens 200 installation location

Wall Mounting Information (model WB2 11-44 and up)

The Vitodens 200 (model WB2 11-44 and up) comes with a template, which allows you to easily mark the location of the screws for the mounting bracket and the location of the flue gas pipe on the wall.

The connection to the heating circuits (installation fittings are supplied in the Installation Fittings package supplied with the boiler) must be made on site.

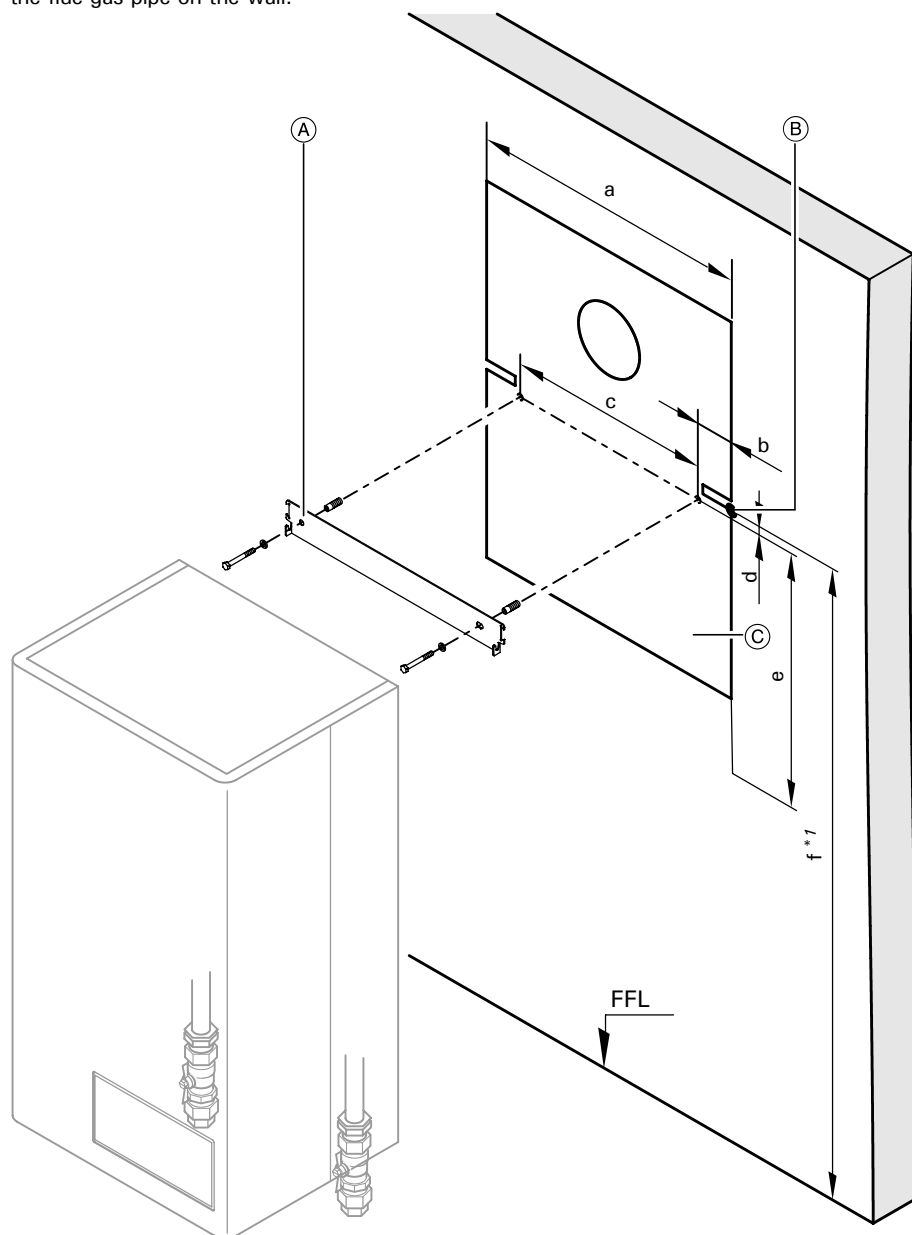


Illustration: Wall-mounting and connection of the Vitodens 200 standard heating boiler

- (A) Reference point top edge Vitodens 200
- (B) Mounting bracket
- (C) Vitodens 200 mounting template

**1 Recommendation*

Dimensions

- a 23 1/2" / 600 mm
- b 3 1/4" / 82 mm
- c 16" / 407 mm
- d 3/4" / 18 mm
- e 29" / 740 mm
- f 78" / 1975 mm

Condensate Connection/Neutralization Unit

Condensate Connection


Install the condensate drain pipe with a suitable gradient.
Discharge condensate from the boiler into the drainage system, either directly or (if required) via a neutralization unit (accessory).

IMPORTANT


Pipe ventilation must take place between the siphon trap and the neutralization unit (if applicable).

Condensate Connection for Vitodens 200

■ up to model WB2 8-32

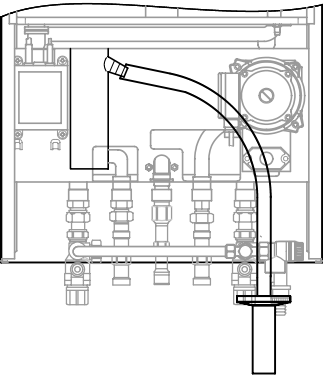

■ model WB2 11-44 and up

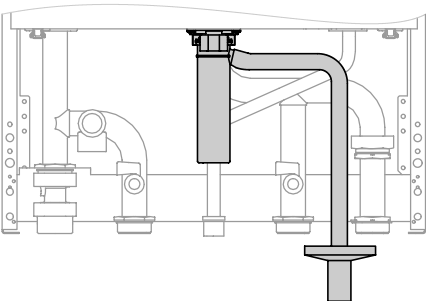

Condensate Drainage and Condensate Neutralization

The condensate formed both in the condensing boiler and in the flue gas pipe must be discharged into the public sewage system in accordance with all applicable local regulations.
The condensate produced by a gas-fired heating system has a pH value between 3 and 4.

Some local codes may require the use of a separate neutralization unit to treat the aggressive and corrosive nature of the condensate.
With a neutralization unit installed, all condensate from the boiler and the flue gas pipe enters into the neutralization unit where it is treated and released into the public sewage system with a safe pH value of above 6.5.

The use of neutralization granulate (performing the neutralizing process) is dependent on the operation of the heating system. To determine the required refill amount, check granulate level several times during the first year of operation. In some cases one granulate fill may last an entire year.

Contact Viessmann to order a neutralization unit for the Vitodens 200 boiler.
See Viessmann Price List for order information.

The condensate discharge outlet to the drainage system connection must be clearly visible. It must be installed with a suitable gradient and provided with a stretch trap.
If the condensate outlet of the Vitodens 200 boiler is lower than the drain, a condensate pump must be used.

Only corrosion-resistant materials must be used for condensate drainage purposes (e.g. braided hose). Do not use galvanized materials or materials containing copper for piping, couplings etc.
The condensate drain must have a trap to prevent flue gas leakage.


Please note that other requirements might apply depending on local regulations and/or project-specific details.

It is advisable to contact your local waterworks office (authority responsible for waste water regulations) well before commencing with the installation of the neutralization unit in order to establish details of local regulations that apply.

The following table shows the concentration of (effluent) substances (e.g. heavy metals) contained in the waste water from the Vitodens 200 condensing boiler.

Condensate (effluent) substances	Values measured in mg/ltr
	Vitodens 200
Lead	< 0.01
Cadmium	< 0.005
Chromium	< 0.01
Copper	< 0.01
Nickel	< 0.01
Zinc	< 0.05
Tin	< 0.05

Side Wall Venting Option

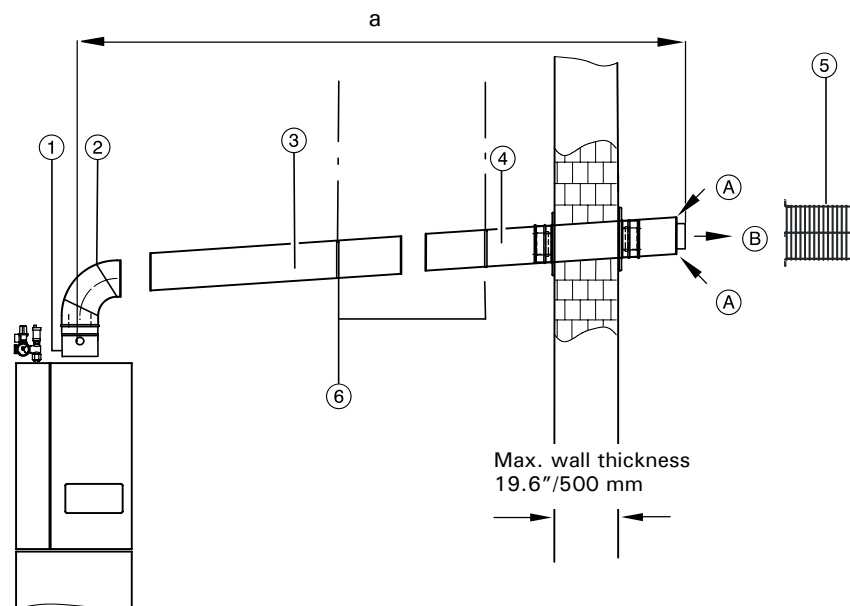

Standard side wall venting layout

- (A) Combustion air intake
 (B) Flue gas outlet
 a = total vent length

- | | |
|---|---|
| ① | Vent pipe adaptor |
| ② | Elbow, 87° (1 per carton) |
| ③ | Straight pipe
3.3 ft./1 m long |
| ④ | Vent termination
(incl. wall flashings)
Important!
Total length of vent termination pipe is 29"/730 mm. If required, the vent termination pipe may be shortened by max. 12"/305 mm (min. vent termination length is 17"/425 mm). |
| ⑤ | Protective screen
Warning!
Protective screen MUST be installed. |
| ⑥ | Mounting clip, white (use at least 2) |
| ⑦ | Brass adaptor (M8 x $\frac{5}{16}$" - 18) and Set of screws (#8 x $\frac{3}{8}$")
(not shown; see <i>Installation Instructions for Vitodens 200 Direct Vent System</i> for details.) |

- | | |
|-----|------------------------------|
| (A) | Combustion air intake |
| (B) | Flue gas outlet |

a Total vent length^{*1}

^{*1} See following page.

Note:

For extreme cold climate conditions (sustained temperatures below 0°F / -18°C) Viessmann offers a different vent termination option.

CAUTION

Under certain climatic conditions some building materials may be affected by flue products expelled in close proximity to unprotected surfaces. Sealing or shielding of the exposed surfaces with a corrosion resistant material (e.g. aluminum sheeting) may be required to prevent staining or deterioration. The protective material should be attached and sealed (if necessary) to the building before attaching the vent termination. It is strongly recommended to install the vent termination on the leeward side of the building.

Venting Option

Vent termination location requirements (for installations in Canada)

The vent must be installed observing local regulations in addition to National Codes, CAN/CSA-B149.1 or 2.

A vent must **NOT** terminate...

1.directly above a paved sidewalk or paved driveway which is located between two single-family dwellings and serves both dwellings.
2.less than 7 ft./2.13 m above a paved sidewalk or a paved driveway located on public property.
3.within 6 ft./1.83 m of a mechanical air supply inlet ^{*1} to any building (dryer vents, non-sealed combustion furnace and hot water heater vents are considered to be mechanical air inlets).
4.above a meter/regulator assembly within 3 ft./0.9 m horizontally of the vertical centerline of the regulator vent outlet and to a maximum vertical distance of 15 ft./4.5 m.
5.within 3 ft./0.9 m of any gas service regulator vent outlet.
6.less than 1 ft./0.3 m above grade level or anticipated snow level (consult local building authorities or local weather office). Locate the vent termination in such a way that it cannot be blocked by snow.
7.within the following distances of a window or door which can be opened in any building, any non-mechanical air supply inlet to any building or the combustion air inlet of any other appliance:
 - 1 ft./0.3 m for inputs up to and including 100 000 Btu/h/30 kW (applicable only to boiler models WB2-24C/24).
 - 3 ft./0.9 m for inputs exceeding 100 000 Btu/h/30 kW (applicable to boiler models WB2-32 and up).
8.underneath a veranda, porch or deck, unless
 - the veranda, porch, or deck is fully open on a minimum of two sides beneath the floor, and
 - the distance between the top of the vent termination and the underside of the veranda, porch, or deck is greater than 1 ft./0.3 m.
9.in areas where condensation may cause problems, such as above planters, patios, or adjacent to windows where flue gases may cause fogging.
10.within 3 ft./0.9 m to the property line (advisable, not mandatory; please check with local building authorities and municipal bylaws).
11.at a location where ice formation on the ground can present a hazard.
12.so that the flue gases are directed toward brickwork, siding, or other construction, in such a manner that may cause damage from heat or condensate from the flue gases.
13.where discharging hot flue gases may cause property damage or personal injury.
14.within 3 ft./0.9 m from an inside corner of outside walls.

^{*1}Including heat recovery units.


Vent termination location requirements (for installations in the U.S.A.)

The vent must be installed observing local regulations in addition to National Codes, ANSI-Z223.1 or NFPA 54.

A vent must **NOT** terminate...

1.less than 7 ft./2.13 m above a paved sidewalk or a paved driveway located on public property.
2.within 4 ft./1.2 m horizontally from service regulator vents, electric and gas meters as well as relief equipment.
3.less than 3 ft./0.9 m above any forced air inlet located within 10 ft./3 m.
4.less than 1 ft./0.3 m above grade level or anticipated snow level (consult local building authorities or local weather office). Locate the vent termination in such a way that it cannot be blocked by snow.
5.within 1 ft./0.3 m of a window or door which can be opened in any building, any non-mechanical air supply inlet to any building or the combustion inlet of any other appliance.
6.in areas where condensation may cause problems, such as above planters, patios, or adjacent to windows where flue gases may cause fogging.
7.within 3 ft./0.9 m to the property line (advisable, not mandatory; please check with local building authorities and municipal bylaws).
8.at a location where ice formation on the ground can present a hazard.
9.so that the flue gases are directed toward brickwork, siding, or other construction, in such a manner that may cause damage from heat or condensate from the flue gases.
10.where discharging hot flue gases may cause property damage or personal injury.
11.within 3 ft./0.9 m from an inside corner of outside walls.

Equivalent Vent Length

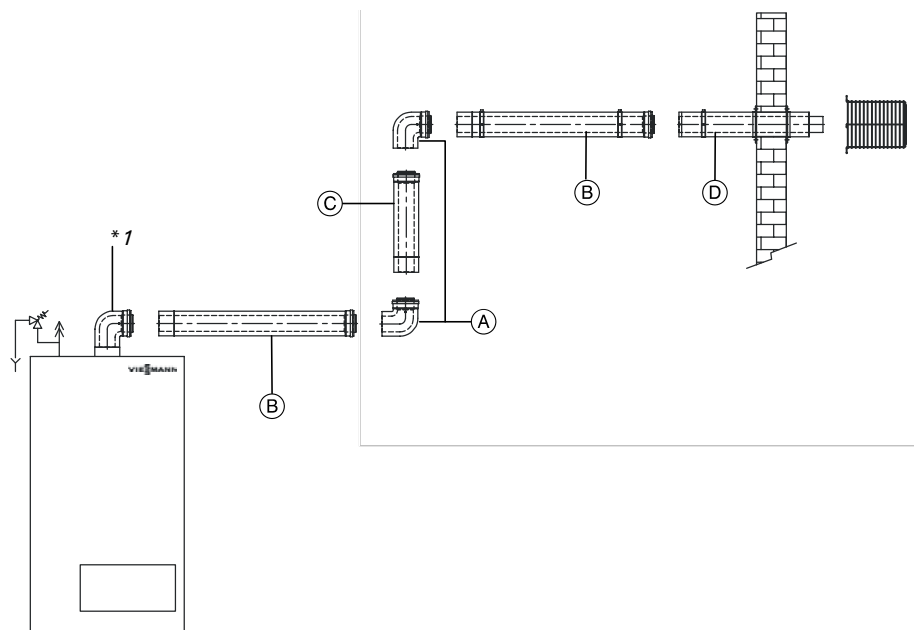

Equivalent vent length calculation

- (A) 87° elbow
- (B) Vent pipe (3.3 ft./1 m)
- (C) Vent pipe (1.65 ft./0.5 m)
- (D) Vent termination

*1 First elbow not included in equivalent vent calculation.

- The maximum vent length on all models is 20 ft./6 m.
- The minimum vent length on all models is 17"/425 mm (length of the vent termination when cut to the minimum permissible length).
- Do not exceed the maximum vent length.
- Do not use more than five elbows within one vent system.
- First 87° elbow on boiler is not included in equivalent vent length calculation.

Type of fitting	Equivalent length
87° elbow/ 87° inspection tee	1.65 ft./0.5 m
45° elbow	1 ft./0.3 m

Equivalent vent length calculation example

2 x 87° elbow	3.3 ft./1 m
2 x vent pipe (1 m)	6.6 ft./2 m
1 x vent pipe (0.5 m)	1.65 ft./0.5 m
1 x vent termination	2.4 ft./0.73 m
Total equivalent length	13.95 ft./4.23 m


IMPORTANT

First elbow not included in equivalent vent calculation.

Always include vent termination length in calculations.

Venting Option

Vertical Venting Option

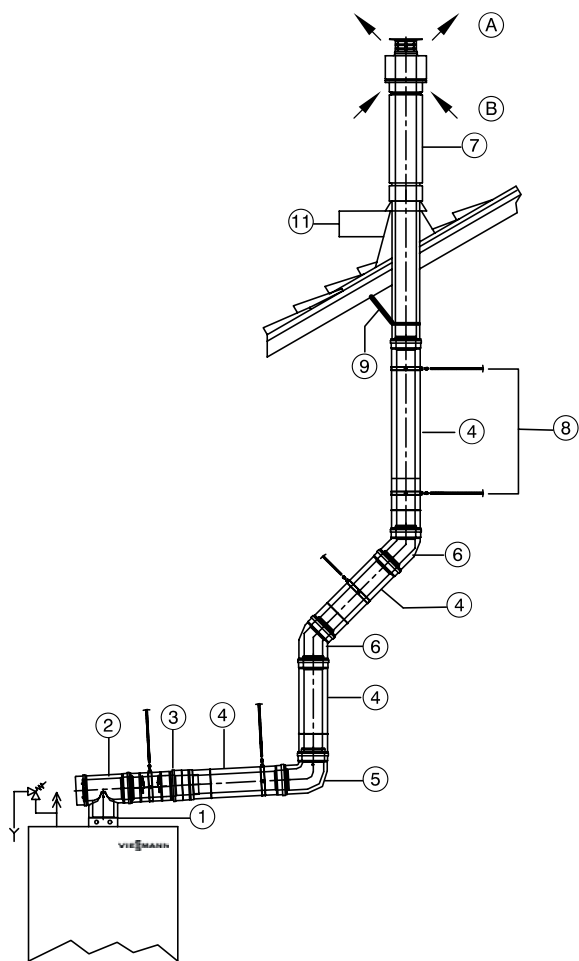

Standard vertical venting layout

①	Vent pipe adaptor
②	Vent inspection tee/ Elbow, 87° (1 per carton)
③	Sliding coupling
④	Straight pipe 3.3 ft./1 m or 1.65 ft./0.5 m
⑤	Elbow, 87° (1 per carton)
⑥	Elbow, 45° (2 per carton)
⑦	Vent termination Important! Never shorten vertical vent termination.
⑧	Mounting clip
⑨	Wall band (c/w vent termination)
⑩	Brass adaptor (c/w set of screws) <i>(not shown; see Installation Instructions for Vitodens 200 Direct Vent System for details.)</i>
⑪	Roof flashing and storm collar (field supplied)
A	Flue gas outlet
B	Combustion air intake

Note:


For extreme cold climate conditions
(sustained temperatures below 0°F / -18°C)
Viessmann offers a different vent
termination option.

Vent termination location requirements

The vent must be installed observing local regulations in addition to National Codes, CAN/CSA-B149.1 or 2 (for installations in Canada) or ANSI-Z223.1 or NFPA 54 (for installations in the U.S.A.).

See table below for the following two conditions.

- For sloped roof applications with distance b greater than 18"/450 mm
- For flat roof applications

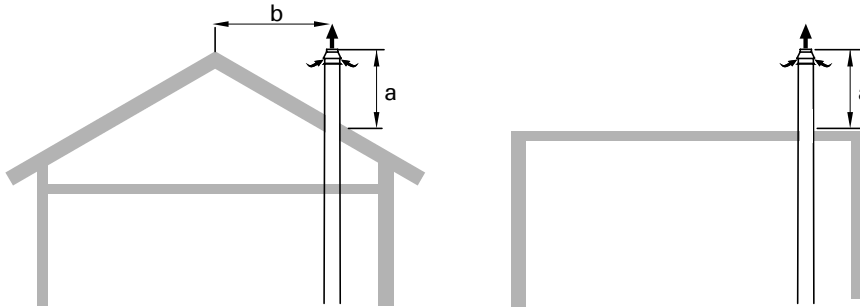


Model No. WB2-	24C/24/32 (5" system)	44/60 (6" system)
a (min. distance)	25"/ 635 mm * ¹	30"/ 762 mm * ¹

*¹See WARNING below.

WARNING

The vent termination must be at least 12"/300 mm above the anticipated snow level (consult your local building authorities or local weather office). Locate vent termination in such a way that it cannot be blocked by snow.

- For sloped roof applications with distance b less than 18"/450 mm

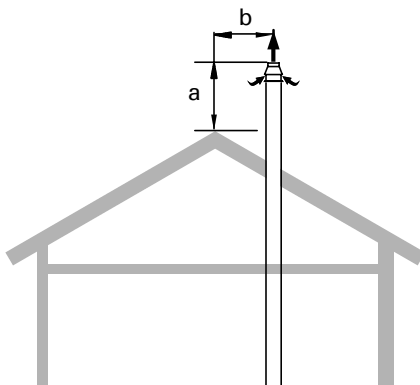

a minimum 18"/450 mm
b < 18"/450 mm

A vent used in a special vent system with positive vent pressure and passing through a roof shall extend at least 18"/450 mm above the highest point where it passes through the roof and any other obstruction within a horizontal distance of 18"/450 mm.


The special vent system shall not be routed into, through, or within any other vent such as an existing masonry or factory-built chimney.

IMPORTANT

A masonry chimney flue may be used to route the venting system only if no other appliance is vented in the same flue.

Venting Option

Equivalent Vent Length

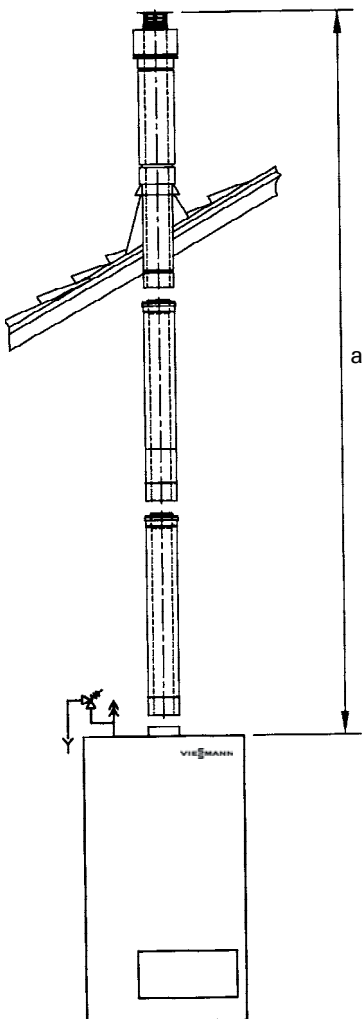

Equivalent vent length

Boiler model		6-24C	6-24	8-32	11-44	15-60
Maximum vent length						
5" vent system	ft./m	33/10	33/10	27/8	--	--
6" vent system	ft./m	--	--	--	33/10	20/6
Minimum vent length		3.9/1.2 (all models)				
5" vent system	ft./m					
6" vent system	ft./m					


Do not exceed the maximum vent length.

Ceiling opening information

Boiler model	Opening Ø
■WB2 6-24C ■WB2 6-24 ■WB2 8-32	5 ¹ / ₈ " / 130 mm
■WB2 11-44 ■WB2 15-60	6 ³ / ₈ " / 160 mm

Vertical vent termination


for boiler models WB2 6-24C, 6-24 and 8-32

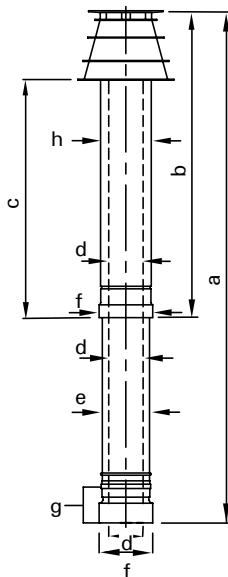

Dimensions

- a 47" / 1190 mm
- b 28" / 713 mm
- c 21³/₄" / 552 mm
- d 3" / 80 mm
- e 4¹/₄" / 110 mm
- f 5" / 125 mm
- g Coaxial adaptor
4¹/₄ to 5" /
110 to 125 mm
- h 4³/₄" / 120 mm


for boiler models WB2 11-44 and 15-60

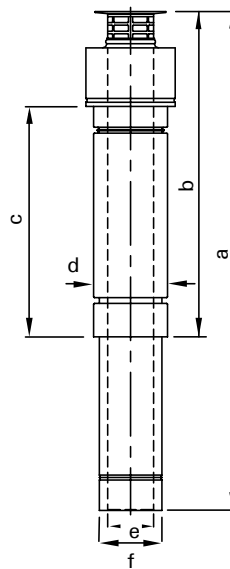

Dimensions

- a 47" / 1190 mm
- b 30¹/₂" / 779 mm
- c 21³/₄" / 552 mm
- d 7" / 177 mm
- e 4¹/₄" / 110 mm
- f 6" / 150 mm

Equivalent Vent Length (continued)

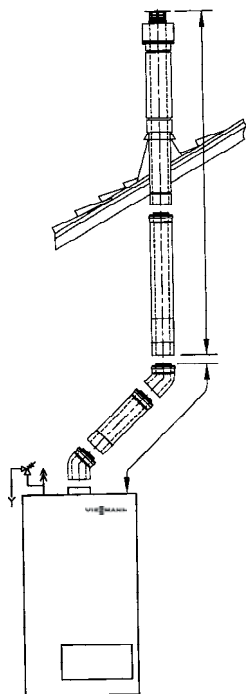

Equivalent vent length, example 1

Type of fitting	Equivalent length
87° elbow/ 87° inspection tee	1.65 ft./0.5 m
45° elbow	1 ft./0.3 m


Equivalent vent length calculation example 1

Vitodens 200, WB2 15-60

2 x 45° elbow	2 ft./0.6 m
1 x vent pipe (0.5 m)	1.65 ft./0.5 m
1 x vent pipe (1 m)	3.3 ft./1 m
1 x vent termination	3.9 ft./1.2 m
Total equivalent length	10.85 ft./3.3 m

IMPORTANT

Always include vent termination length in calculations.

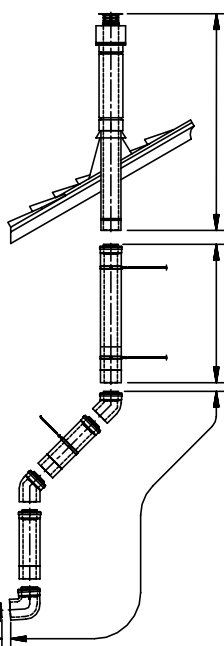

Equivalent vent length, example 2

Type of fitting	Equivalent length
87° elbow/ 87° inspection tee	1.65 ft./0.5 m
45° elbow	1 ft./0.3 m

Equivalent vent length calculation example 2

Vitodens 200, WB2 8-32

2 x 87° elbow	3.3 ft./1 m
2 x 45° elbow	2 ft./0.6 m
3 x vent pipe (0.5 m)	4.95 ft./1.5 m
1 x vent pipe (1 m)	3.3 ft./1 m
1 x sliding coupling	0.8 ft./0.25 m
1 x vent termination	3.9 ft./1.2 m
Total equivalent length	18.25 ft./5.55 m


IMPORTANT

Always include vent termination length in calculations.

Venting Option

Single Wall Venting Option

Please note that there is no basic vent kit available for this vertical vent system.
See product literature supplied by manufacturer for available component parts.

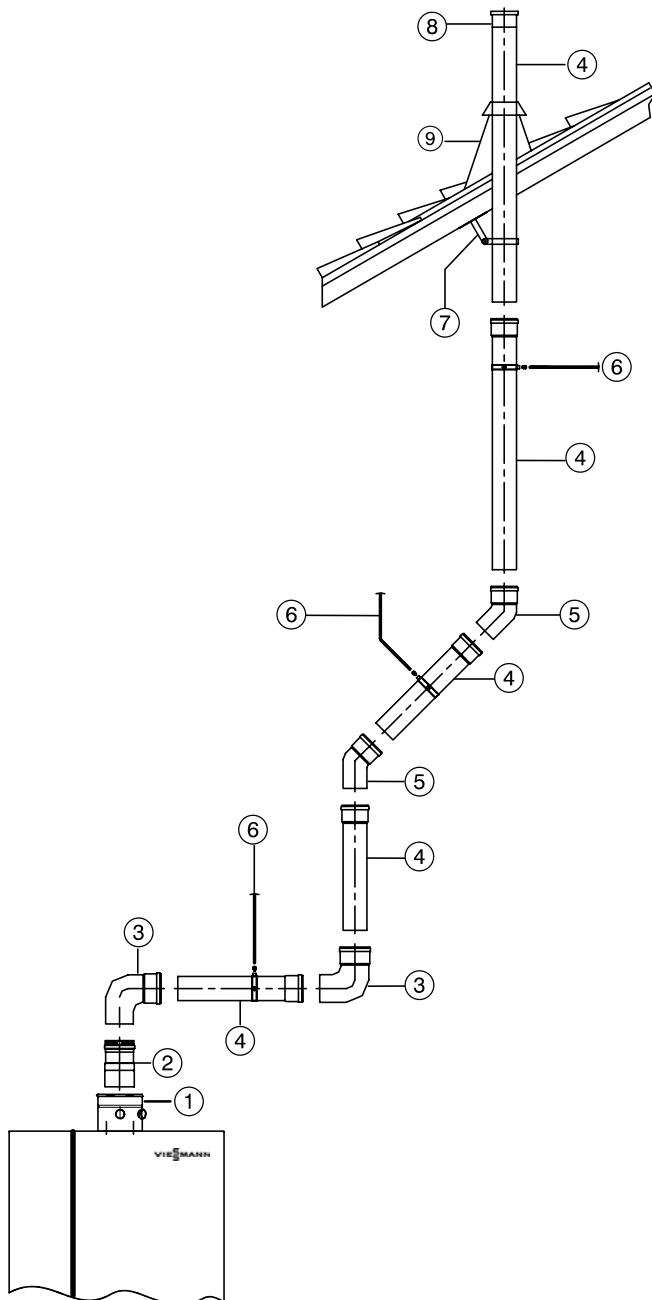

- ① Coaxial vent pipe adaptor (comes pre-installed on model WB2-44/60)

IMPORTANT

For Vitodens 200, WB2 models 6-24C, 6-24 and 8-32, the vent pipe adaptor must be ordered with the boiler.

- ② Vent pipe adaptor (coaxial > single-wall)
③ Elbow, 90°
④ Straight pipe ^{*1}
⑤ Elbow, 45°
⑥ Suspension band / hanger
⑦ Wall band
⑧ Vent termination coupling (c/w bird screen)
⑨ Flashing and storm collar

^{*1} Available in different lengths.

For more detailed information on component parts see product literature supplied by special venting manufacturer.

Note:

The Vitodens boiler has passed the zero inches vent clearance to combustibles testing requirements dictated by the Harmonized Standard ANSI Z21.13. CSA 4.9.2000 and therefore is listed for zero clearance to combustibles when vented with a single wall special venting system (AL-29-4C material). The zero inches vent clearance to combustibles for the Vitodens boiler supercedes the clearance to combustibles listing that appears on the special venting system label.

IMPORTANT


A masonry chimney flue may be used to route the venting system only if no other appliance is vented in the same flue.

Vent termination location requirements

The vent must be installed observing local regulations in addition to National Codes, CAN/CSA-B149.1 or 2 (for installations in Canada) or ANSI-Z223.1 or NFPA 54 (for installations in the U.S.A.).

See table below for the following two conditions.

- For sloped roof applications with distance b greater than 18"/450 mm
- For flat roof applications

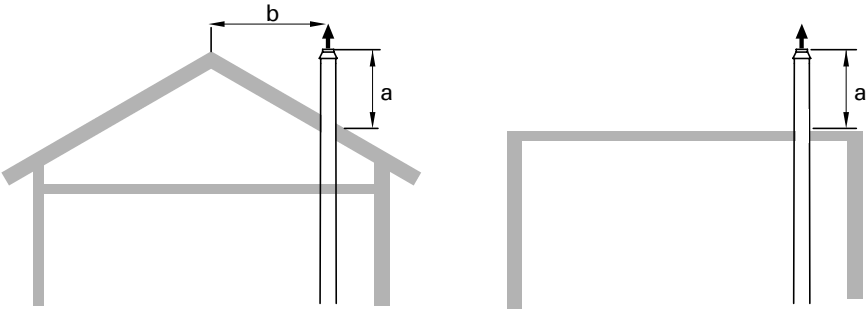


Model No. WB2-	24C/24/32 (3" system)	44/60 (4" system)
a (min. distance)	24"/610 mm ^{*1}	

^{*1}See WARNING below.

 **WARNING**

Vent termination must be at least 12"/300 mm above the anticipated snow level (consult your local building authorities or local weather office). Locate vent termination in such a way that it cannot be blocked by snow.


- For sloped roof applications with distance b less than 18"/450 mm

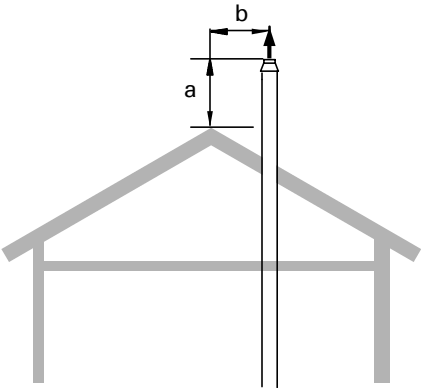


a minimum 18"/450 mm
b < 18"/450 mm

A vent used in a special venting system with positive vent pressure and passing through a roof shall extend at least 18"/450 mm above the highest point where it passes through the roof and any other obstruction within a horizontal distance of 18"/450 mm.


General Installation Examples

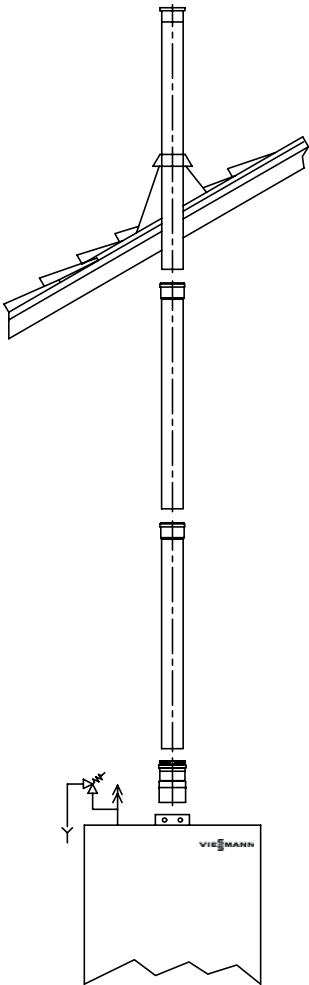

Sloped roof installation

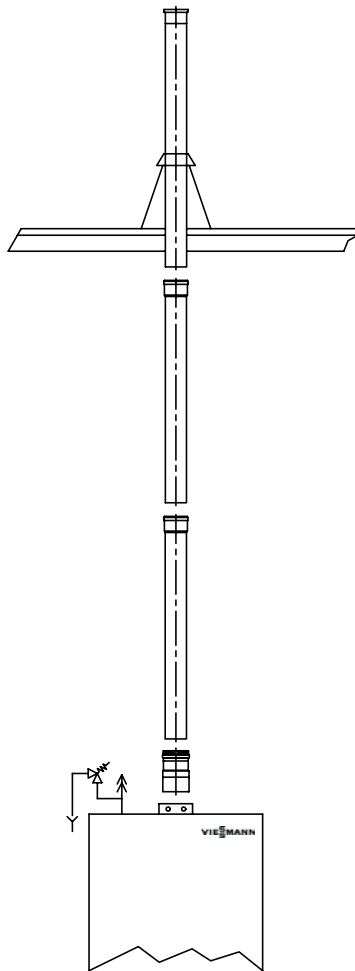

Flat roof installation

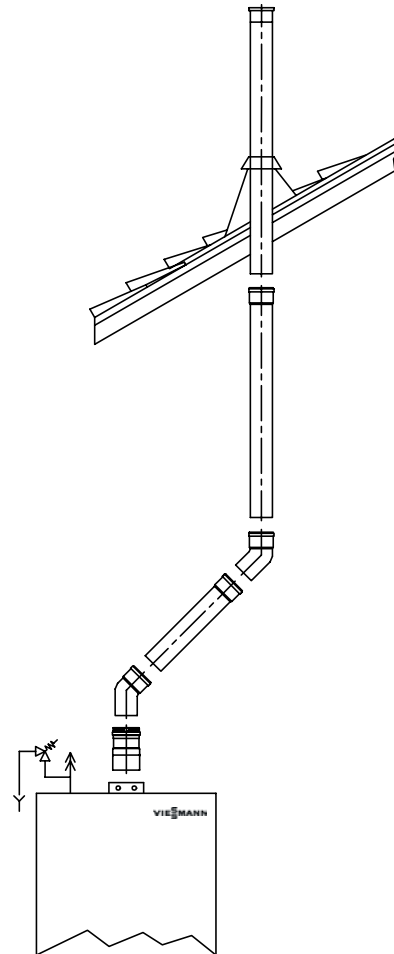


Sloped roof installation with offset

IMPORTANT

Ensure that the venting system is properly supported; the Vitodens 200 boiler is not designed to support the weight of the venting system.

Maximum/Minimum Vent Length

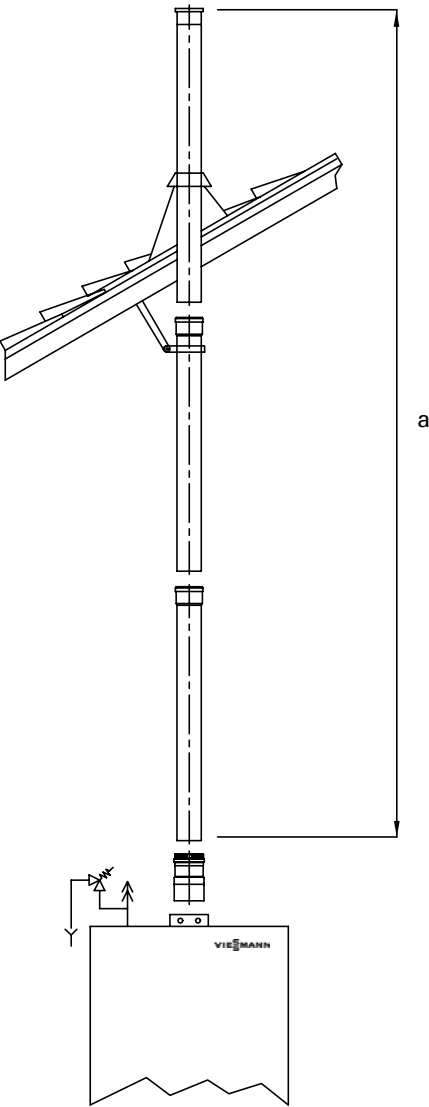

Vent length "a"

Maximum vent length

Boiler model	WB2	6-24C	6-24	8-32	11-44	15-60
a (max. length)						
3" vent system	ft./m	66/20	66/20	49/15	--	--
4" vent system	ft./m	--	--	--	66/20	49/15

Minimum vent length

Boiler model	WB2	6-24C	6-24	8-32	11-44	15-60
a (max. length)		4 ft. / 1.2 m				
3" vent system	ft./m					
4" vent system	ft./m					


Do not exceed maximum equivalent vent length or fall short of minimum equivalent vent length.

IMPORTANT

Ensure that the venting system is properly supported; the Vitodens 200 boiler is not designed to support the weight of the venting system.

Venting Option

Equivalent Vent Length

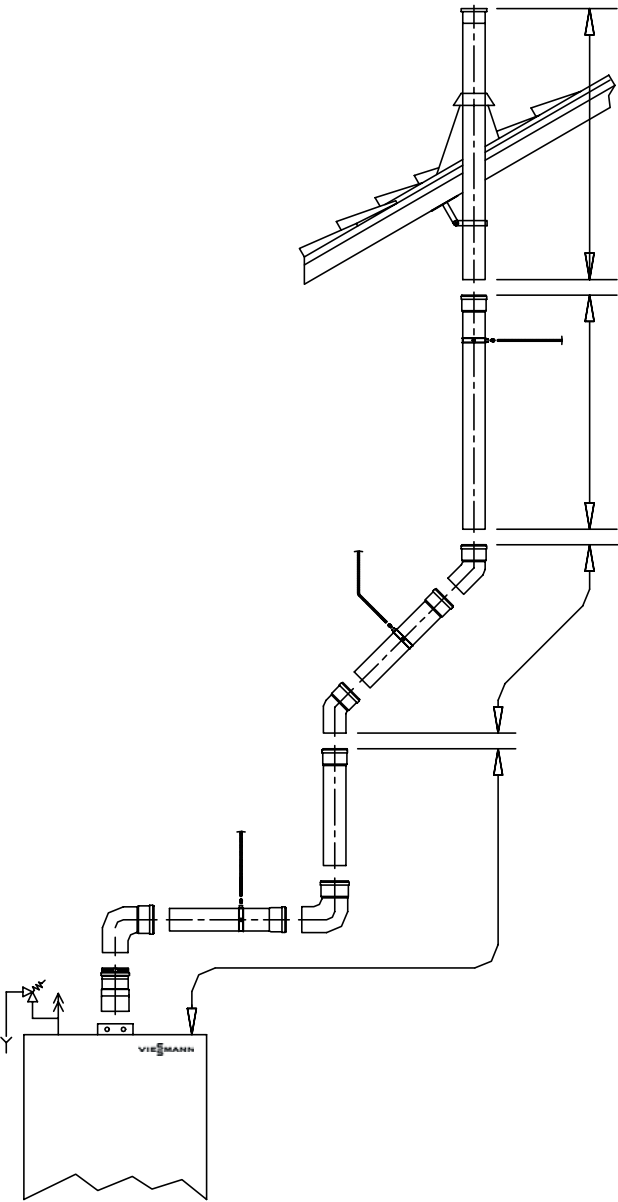

Type of fitting	Equivalent length
90° elbow	3 ft./0.9 m
45° elbow	2 ft./0.6 m

Equivalent vent length calculation example

Vitodens 200, WB2 15-60

2 x 90° elbow	6 ft./1.8 m
2 x 45° elbow	4 ft./1.2 m
3 x vent pipe (0.5 m)	4.9 ft./1.5 m
2 x vent pipe (1 m)	6.6 ft./2 m
Total equivalent length	21.5 ft./6.5 m

Equivalent vent length calculation example

IMPORTANT

Ensure that the venting system is properly supported; the Vitodens 200 boiler is not designed to support the weight of the venting system.

Electrical Connection

Power Supply

The Vitodens 200 is shipped with a Power Module (up to model WB2 8-32) or with a Power/Pump Module (model WB2 11-44 and up). Both modules require a 120 VAC power supply from a wall receptacle. The modules contain a 120/230 VAC step-up transformer to power the Vitodens 200 with 230 VAC. Refer to the Installation Instructions shipped with the modules for wiring details.

Power Supply Connection of Accessories

The power supply connection of accessories can be made directly at the boiler control.

The connection is activated and deactivated with the system on/off switch.

The Dekamatik-HK1 control, the mixing valve accessory kit and the Solartrol control require a separate 120 VAC power supply from the wall receptacle.

2-wire cabling required for:

- outdoor temperature sensor
- Vitotronic 050/Dekamatik-HK1
- accessory kit for heating circuit with mixing valve
- remote switching of operating mode
- remote disable
- alarm output
- wall-mount base (when the programming unit is used as a remote control)

3-wire cabling required for:

- remote control RS/WS
- circulating pump

Control for Weather-Responsive Operation

Built into the Vitodens 200 boiler is a menu-driven programming unit with...

- day and week feature and four programmable activation periods per day for reduced operation, activation of DHW production or activation of the DHW circulating pump
- freeze-up protection of entire heating system
- integrated diagnostic system
- integrated DHW tank temperature control

Constructional Design and Functions

Modular Structure

The control unit contains:

System on/off switch, override/emission test switch, comfort switch (operational only on Combi heating boiler), fixed high limit, adjustable high limit, digital display, micro-computer, adjustment options for switching times, for temperatures during normal and reduced operation, domestic hot water temperature, adjustment options for heating curves, temperature scanning options, built-in diagnostic system and fuses.

Boiler-Specific Functions

The control unit adjusts the boiler water temperature (= supply temperature of a direct-connected heating circuit and/or a heating circuit with mixing valve in conjunction with the accessory kit for a heating circuit with mixing valve) automatically and on a continuous basis to individual outdoor temperatures. The control has a DHW temperature controller with DHW priority switching (heating circuit pump off).

Technical Data

Rated supply voltage: 120 VAC
Rated frequency: 60 Hz
Rated current: 12 A

Max. ambient temperature

- at operation: 32 to 104 °F
0 to 40 °C

For use in your living area or boiler rooms (with standard ambient conditions)

- when storing or transporting: -4 to +149 °F
-20 to +65 °C

Max. operating temperature setting (space heating): 167 °F/75 °C

Adjustment range adjustable high limit (DHW production): 108 to 172 °F
42 to 78 °C

Setting fixed high limit: 210 °F/99 °C (not adjustable)

Adjustment range of DHW tank setpoint temperature: 50 to 140 °F
10 to 60 °C

Adjustment range heating curves

- Heating curve slope 0.2 to 3.5
- Heating curve shift: 10 to 91 °F
-12 to +33 °C

Programming Unit

- Illuminated display with 8 text lines
- Menu-driven user guidance
- All settings, main codings and fault messages shown in plain text
- Holiday program
- Party button for switching to "normal operation" whenever required
- Energy savings button for lowering the desired room temperature by approx. 3.6 °F/2 °C in normal operation

The programming unit can be used as a remote control (wall-mount base must be ordered separately).

Timer Schedule of Programming Unit

Digital timer with day and week feature, calendar and automatic resetting to daylight savings time.

Timer of Programming Unit (continued)

Time, day and standard switching times are factory preset (individually programmable), up to four switching times selectable per day.

Shortest switching interval: 10 minutes
Power reserve: 5 years

Heating Programs

The freeze-up protection function ^{*1} is active in all operating modes.

The following heating programs can be selected with the operating mode selector switch:

- Continuous standby
- DHW production only
- Normal operation/reduced operation or normal operation/standby

^{*1} See "Freeze-up Protection Function" below.

Freeze-up Protection Function

The freeze-up protection function is

- activated when the outdoor temperature drops below approx. 34 °F/1 °C. When the freeze-up protection function is activated, the heating circuit pump is activated and the boiler water is kept at a minimum temperature of approx. 68 °F/20 °C.
- deactivated when the outdoor temperature exceeds approx. 37 °F/3 °C.

Summer Operation

Heating program "☀"

The burner is only activated upon a call for domestic hot water from the DHW storage tank (controlled by DHW tank temperature sensor).


Heating Curve Adjustment (slope and shift)

The control unit regulates the boiler water temperature (= supply temperature of heating circuit without mixing valve) **and** the supply temperature of the heating circuit with mixing valve (in conjunction with the accessory kit for a heating circuit with mixing valve) according to the outdoor temperature.

The supply temperature that is required to achieve a given room temperature depends on the heating system and the thermal insulation of the building that is being heated.

The adjustment of the two heating curves is used to match the boiler water temperature and the supply temperature to these conditions.

Heating curves:

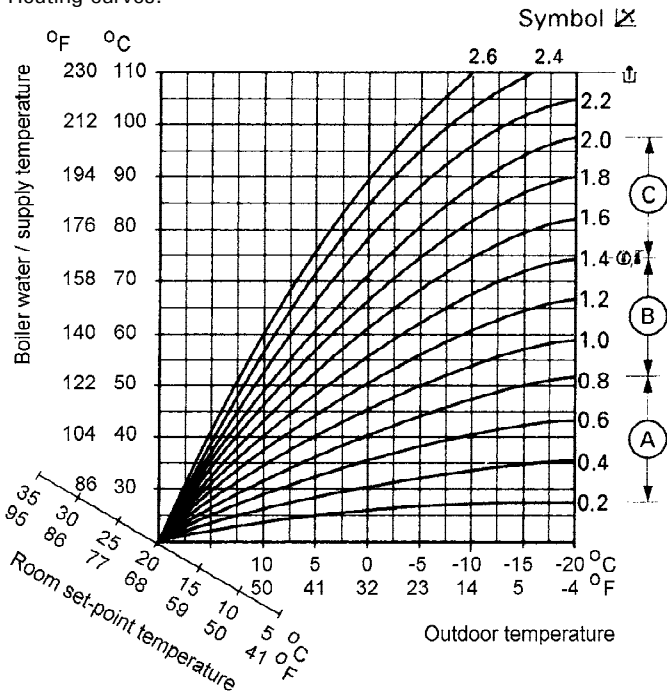

- (A) Low temperature heating system, e.g. radiant floor heating
- (B) Medium temperature heating system, e.g. cast iron radiation, staple-up radiant floor heating
- (C) High temperature heating system, e.g. fintube radiation, fan coils

The boiler water temperature is limited upwards by the fixed high limit and the temperature set for the electronic high limit. The supply temperature cannot rise above the boiler water temperature.


Boiler Temperature Sensor

The boiler temperature sensor is connected at the control unit for weather-responsive operation and is built into the boiler.

Max. ambient temperature

- at operation: 32 to 266 °F
0 to 130 °C
- when storing or transporting: -4 to +158 °F
-20 to +70 °C

Outdoor Temperature Sensor

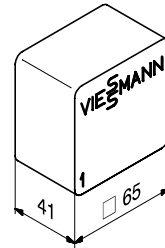

Sensor location:

- North or northwest wall of building
- 6.6 to 8.2 ft./2 to 2.5 m above ground or in case of a multi-storey building approx. halfway up the second floor

Electrical connection:

- 2-wire cable, max. cable length 115 ft./35 m with a wire size of min. AWG 16 copper
- Cable to the outdoor sensor must not be laid near line voltage wiring (120/240 V)

Max. ambient temperature at operation, when storing

- or transporting: -40 to +158 °F
-40 to +70 °C

DHW Tank Temperature Sensor

Part No. 7134 239

Supplied with:

- installation fittings for horizontal DHW storage tanks (42 to 120 USG/160 to 450 ltr) (DHW tank must be ordered separately at time of order)
- installation fittings for vertical DHW storage tanks (42 to 120 USG/160 to 450 ltr) (DHW tank must be ordered separately at time of order)
- DHW production kit for Vitodens 200
Cable length approx. 13 ft./3.75 m, ready to plug in

Max. ambient temperature

- at operation: 32 to 194 °F
0 to 90 °C
- when storing or transporting: -4 to +158 °F
-20 to +70 °C

Control for Weather-Responsive Operation


Accessories

Control for Weather-Responsive Operation

Accessories

Mixing Valve Actuator Accessory Kit, Part No. 7133 392

Mixing valve actuator

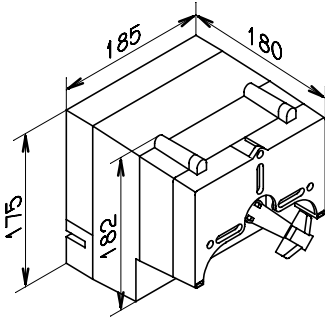

The mixing valve actuator is mounted directly on the Viessmann $\frac{3}{4}$ to $2\frac{1}{2}$ " mixing valve.

The mixing valve actuator is a motor-driven control unit. The rotational direction is reversible.

The mixing valve actuator comes with a plug-in connector for a heating circuit pump, supply temperature sensor (strap-on sensor with 19.7 ft./6 m connecting cable), power supply connecting cable (10 ft./3 m) and a connecting cable (10 ft./3 m) for the KM-BUS Expansion Module.

Rated voltage: 120 VAC

Rated frequency: 60 Hz

Rated current: 4 (2) A

Power consumption: 4 W

Max. ambient temperature

■ at operation: 32 to 104 °F
0 to 40 °C

■ when storing
or transporting: -4 to +149 °F
-20 to +65 °C

Relay output for
heating circuit pump: 4(2) A, 120 VAC

Actuator


torque: 3 Nm

Time of 90 °✶: 2 minutes

Supply Temperature Sensor

(strap-on sensor, included with mixing valve actuator accessory kit),

Part No. 7133 895

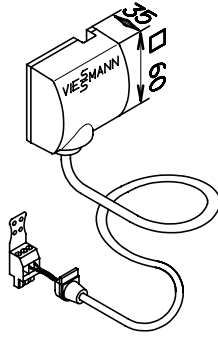

Installed with a strapping band.

Cable length 19.7 ft./6 m, ready to plug in.

Max. ambient temperature

■ at operation: 32 to 212 °F
0 to 100 °C

■ when storing
or transporting: -4 to +149 °F
-20 to +70 °C

Viessmann 2-Wire BUS Expansion Module,

Part No. 7134 276

for connecting a Vitotronic 050 or a Dekamatik-HK heating circuit control, a Vitocom 200, a Vitocom 300 or a Solartrol control.

Comprises one circuit board.


Setting range: 86 to 212 °F
30 to 100 °C

Operating differential: 8 °C

Wall-Mount Base with Blank Cover,

Part No. 7133 385

(used when the programming unit of the control is used as remote control)

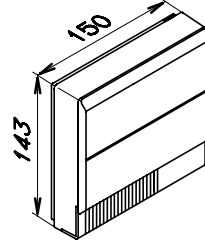

All functions of the programming unit can be used.

WS function: Unit can be mounted anywhere in the building.

RS function: The remote control is mounted on an inside wall of the main living area opposite radiators, not in shelves, alcoves or next to doors or sources of heat (e.g. in direct sunlight, next to a fireplace, TV, etc.).

Electrical connection:

■ 2-wire cable, max. cable length 98 ft./30 m with a wire size of min. AWG 16 copper


■ Cable to the outdoor sensor must not be laid near line voltage wiring (120/240 V)

Max. ambient temperature

■ at operation: 32 to 104 °F
0 to 40 °C

■ when storing
or transporting: -4 to +149 °F
-20 to +65 °C

Boiler Temperature Indication Unit, Part No. 7133 384

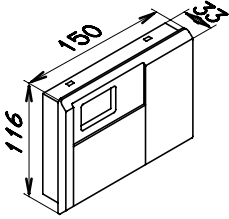

Must be inserted into the control unit for weather-responsive operation when the programming unit of the control is used as remote control.
Boiler water temperature and fault messages are displayed.

Temperature Sensor for Low-Loss Header, Part No. 7134 240

Supply temperature sensor for the common supply in applications with a low-loss header.


Installed with a strapping band.

Cable length approx. 12 ft./3.75 m, ready to plug in.

Max. ambient temperature

- at operation: 32 to 104 °F
0 to 90 °C
- when storing or transporting: -4 to +149 °F
-20 to +70 °C

Remote Control WS Part No. 7133 380

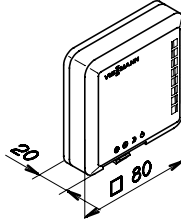

The remote control unit is used to set the desired temperatures for normal operation (daytime temperature) and reduced operation (night setback temperature) of one heating circuit from any chosen room in the building.

Only one remote control unit can be connected. If a heating circuit with mixing valve is installed, the remote control controls the heating circuit with mixing valve.

Electrical connection:

- 3-wire cable (without "green/yellow" wire), max. cable length 98 ft./30 m with a wire size of min. AWG 16 copper
- Cable to the WS control sensor must not be laid near line voltage wiring (120/240 V)

Max. ambient temperature

- at operation: 32 to 104 °F
0 to 40 °C
- when storing or transporting: -4 to +149 °F
-20 to +65 °C


Setting range for room temperature setpoint

- Selector knob "☀": 57 to 79 °F
14 to 26 °C
- Selector knob "☾": 45 to 73 °F
7 to 23 °C

Desired room

temperature when selector switch is set to "☼": 37 to 41 °F
3 to 5 °C

Remote Control RS Part No. 7133 381

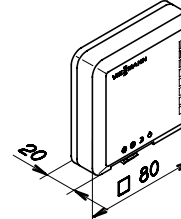

The remote control unit is used to set the desired temperatures for normal operation (daytime temperature) and reduced operation (night setback temperature) of one heating circuit from the main living area.

The built-in room temperature sensor measures the room temperature and initiates any necessary correction of the supply temperature.

Only one remote control unit can be connected. If a heating circuit with mixing valve is installed, the remote control unit controls the heating circuit with mixing valve.

The remote control unit is mounted on an inside wall of the main living area opposite radiators, but not in shelves, alcoves or immediately next to doors or sources of heat (e.g. in direct sunlight, next to a fireplace, TV etc.).

Electrical connection:

- 3-wire cable (without "green/yellow" wire), max. cable length 98 ft./30 m with a wire size of min. AWG 16 copper
- Cable to the RS control sensor must not be laid near line voltage wiring (120/240 V)

Note on the room temperature sensing function (RS function) when using a remote control

Due to the "inertia" of underfloor heating systems, the RS function **must not** be used for an underfloor heating circuit.

Max. ambient temperature

- at operation: 32 to 104 °F
0 to 40 °C
- when storing or transporting: -4 to +149 °F
-20 to +65 °C

Setting range for room temperature setpoint


- Selector knob "☀": 57 to 79 °F
14 to 26 °C
- Selector knob "☾": 45 to 73 °F
7 to 23 °C

Desired room

temperature when selector switch is set to "☼": 37 to 41 °F
3 to 5 °C

Control for Weather-Responsive Operation/Vitodens 200 Accessories

Room Temperature Sensor, Part No. 7133 379

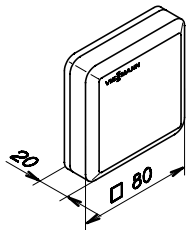

Separate room temperature sensor used in addition to the RS remote control for applications where the RS remote control unit cannot be positioned in the main living area or in a suitable location for temperature measurement/setting purposes.

The room temperature sensor is mounted on an inside wall of the main living area opposite radiators, but not in shelves, alcoves or immediately next to doors or sources of heat (e.g. in direct sunlight, next to a fireplace, TV etc.).

The room temperature sensor is connected to the RS remote control unit.

Electrical connection:

- 2-wire cable with a wire size of min. AWG 16 copper
- The cable length between the control unit, remote control unit and room temperature sensor must not exceed 98 ft./30 m
- Cable to the outdoor sensor must not be laid near line voltage wiring (120/240 V)

Max. ambient temperature

- at operation: 32 to 104 °F
0 to 40 °C
- when storing or transporting: -4 to +149 °F
-20 to +65 °C

Expansion Board,

for Vitodens 200 up to model WB2 8-32
Part No. 7134 209

for Vitodens 200 model WB2 11-44 and up
Part No. 7134 211

With the installation of an expansion board the following capabilities are added:

- Connection of an additional heating circuit pump (only for models up to WB2 8-32)
- Connection of a dry contact to operate an external alarm with the following ratings: 24/250 V, 5 A

Please see following table.

	Pump	Alarm
WB2-24C	--	■
WB2-24	■	■
WB2-32	■	■
WB2-44	--	■
WB2-60	--	■

Accessories for Vitodens 200


Neutralization Unit for Single-Boiler

Applications

with neutralizing granulate


for Vitodens 200 up to model WB2 8-32

Part No. 7134 231

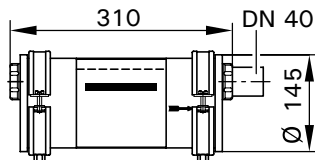

for Vitodens 200 model WB2 11-44 and up

Part No. 7134 232

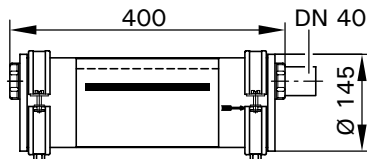

Neutralization Pellets


(4.4 x 2.9 lbs./2 x 1.3 kg)

Part No. 9524 670

For refill or replacement purposes

Cosmetic Piping Cover for Installation Fittings

to cover water and gas fittings and piping, for Vitodens 200 up to model WB2 8-32
Part No. 7339 571

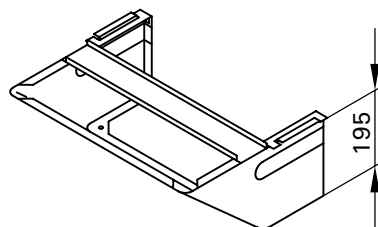

Conversion Kit

for fuel conversion in the field from

- natural gas to liquid propane
- liquid propane to natural gas

(When ordering, please state
-type of fuel conversion
-boiler model no.)

Low-Loss Header

(not applicable to Combi Series boilers!)

-Type 80/50

Part No. 7134 230

(max. flow rate 17.6 GPM / 4 m³/h)

-Type 120/80

Part No. 7134 244

(max. flow rate 35.2 GPM / 8 m³/h)

-Type 160/80


Part No. 7134 293 *1

(max. flow rate 44 GPM / 10 m³/h)

-Type 200/120

Part No. 7134 294 *1

(max. flow rate 80 GPM / 18 m³/h)

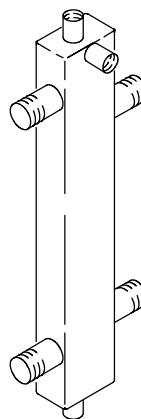

When used in conjunction with the Vitodens 200 boiler, the low-loss header acts as hydraulic break, decoupling boiler and system circuits from each other.

It is recommended to use the low-loss header in applications in which the total system flow rate exceeds the maximum (or minimum) boiler flow rate.

For maximum boiler flow rates, see table on page 8 in this manual.

Viessmann strongly recommends the use of a low-loss header in cases where the system head and flow rates are unknown.

*1 Floor-mounted version (typically used for multiple-boiler installations).

Continued on following page...


Accessories for Vitodens 200 (continued)

The temperature sensor connection [TS] typically located at the top of the low-loss header ensures low return temperatures to the Vitodens 200 boiler at all times, increasing operational efficiency. In addition, the low-loss header helps eliminate air and debris [D] from the heating system. See figures on the right for an illustration of the principle of operation.

The low-loss header is available in the following sizes. Select the size based on the maximum system flow rate of your application.

Model No.	Max. system flow rate
Type 80/50	17.6 GPM / 4 m ³ /h
Type 120/80	35.2 GPM / 8 m ³ /h
Type 160/80 ^{*1}	44 GPM / 10 m ³ /h
Type 200/120 ^{*1}	80 GPM / 18 m ³ /h

^{*1}Product does not look exactly as illustrated.

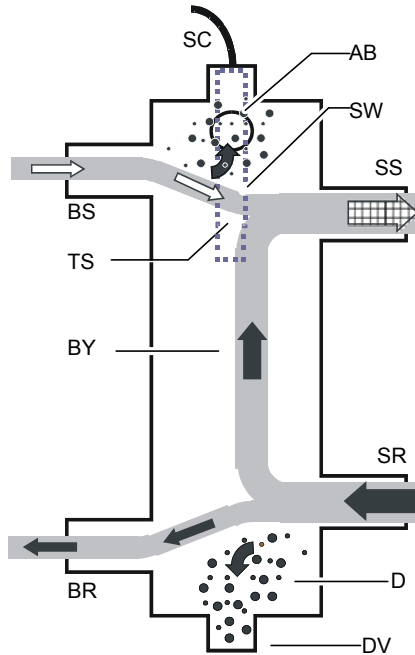


Low-loss header design
(Type 80/50 or 120/80)

Legend

- AB Air Bleed
- BR Boiler Return
- BS Boiler Supply
- BY Bypass (with laminar flow)
- D Debris and/or air
- DV Drain Valve
- SC Sensor Cable
- SR System Return
- SS System Supply
- TS Viessmann Temperature Sensor
- SW Sensor Well

IMPORTANT

Use only a Viessmann supplied temperature sensor. Do not use any other manufacturer's temperature sensor.

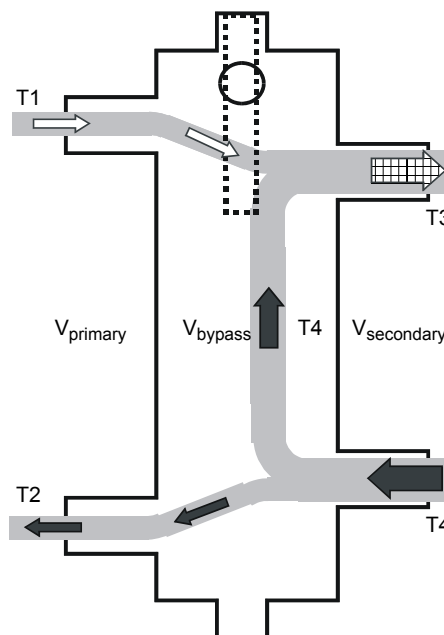

Principle of Operation

- T1 Boiler supply temperature
- T2 Boiler return temperature
- T3 System supply temperature
- T4 System return temperature
- V_{primary} Boiler circuit flow rate
- V_{secondary} Heating circuit flow rate
- V_{bypass} Bypass flow rate
- Q_{primary} Heat supplied by boiler
- Q_{secondary} Heat consumed by system

$$V_{\text{primary}} < V_{\text{secondary}}$$

$$T1 > T3$$

$$T2 = T4$$

$$Q_{\text{primary}} = Q_{\text{secondary}}$$

$$T1 \leq 167^{\circ}\text{F} / 75^{\circ}\text{C}$$

$$V_{\text{secondary}} = V_{\text{primary}} + V_{\text{bypass}}$$

IMPORTANT

When installing a low-loss header, system mixed supply temperature (T3) must be calculated as follows:

$$T3 = \frac{T1 \times V_{\text{primary}} + T4 \times V_{\text{bypass}}}{V_{\text{secondary}}}$$

Standard Equipment

Standard Equipment

The Vitodens 200 gas-fired condensing boiler with Inox-Radial heat exchanger surfaces, modulating MatriX-compact gas burner for natural gas and liquid propane, aqua-plate with plug-in connection system c/w

- pressure gage and KM-BUS variable speed pump (for WB2 6-24C, 6-24 and 8-32 only)
- installation fittings with 30 psig pressure relief valve and air vent
- boiler control unit with outdoor temperature sensor, power module (up to model WB2 8-32) or power/pump module (model WB2 11-44 and up)

- The boiler comes fully piped and prewired.
- The Vitodens 200 Combi boiler is equipped with an integrated stainless steel plate heat exchanger for instantaneous DHW heating.
- **Venting material (coaxial) is to be supplied by Viessmann only. Side wall vent installations must include Viessmann protective screen!**
- Enclosure finish:
 - black steel, powder-coated white
- The Vitodens 200 comes ready for use with natural gas and can be fuel converted to liquid propane.

Wall mounting componentry

The following wall mounting components are supplied with the Vitodens 200 boiler:

- Mounting bracket (comes preinstalled for models up to WB2 8-32)
- Mounting bolts
- Installation fittings
- Screws for mounting bracket on
 - wood studs (2" x 4")
 - metal studs
 - brick/concrete wall

How the Vitodens 200 boiler operates...

The MatriX burner blower and the combination gas valve are factory calibrated and pre-adjusted for optimum boiler performance at all firing rates through a non-mechanical, pneumatic modulating link between combustion air and gas flows. Blower speed is automatically increased or decreased based on heat demand and venting system resistances, thereby regulating the amount of combustion air drawn. The pneumatic modulating link between air and gas introduces the required amount of gas for correct combustion to meet the current heat demand, based on a linear relationship between ΔP air and ΔP gas. The optimum combustion air flow rate is recognized and monitored by the differential air pressure sensor (transducer). The output voltage signal of the transducer is analyzed for logic by the LGM 29 burner control unit. The LGM 29 burner control unit contains pre-programmed performance curves and operational safety parameters unique for every boiler model.

Flue gas adaptation function

The Vitodens 200 has a flue gas adaptation function. This function records, processes, and reacts in real time to fluctuations in pressure drop in the vent air-intake pipe during normal operation caused by partial pipe blockages due to ice formation at the vent termination, debris and/or sudden high winds. Such increase in pressure drop, if not promptly corrected, will reduce the combustion air flow rate, and hence lead to unstable combustion. The differential air pressure sensor (transducer) records such pressure drops and supplies voltage signals to the LGM 29 burner control unit which, in turn (based on stored performance curves and safety parameters), initiates prompt adjustment of the blower rotational speed, thus readjusting the combustion air flow rate for optimum combustion. The same automatic adaptation logic applies if combustion air is reduced (or increased) due to slower (or faster) blower speed resulting from line voltage drops (or increases) below (or above) the threshold of 85% (or 110%).

Installation Examples

IMPORTANT

The examples on the following pages depict possible piping layouts of the Vitodens 200 boiler equipped with Viessmann System Technology.

For boiler and tank combinations, please install only feasible combinations listed in the Viessmann Price List.

Please note that the following examples are simplified conceptual drawings only! Piping and necessary componentry must be field verified.

A low water cut-off (LWCO) must be installed where required by local codes. Proper installation and functionality in the field is the responsibility of the heating contractor.




WARNING

If a DHW storage tank other than a Viessmann Vitocell 100 or 300 tank is used, the installer must verify proper operation of the Viessmann DHW tank temperature sensor with the original manufacturer of the tank. Viessmann strongly recommends the installation of a temperature tempering valve in the DHW supply line.

Installation Examples

System Layout 1

Vitodens 200 (model WB2 6-24C) with a direct-connected heating circuit

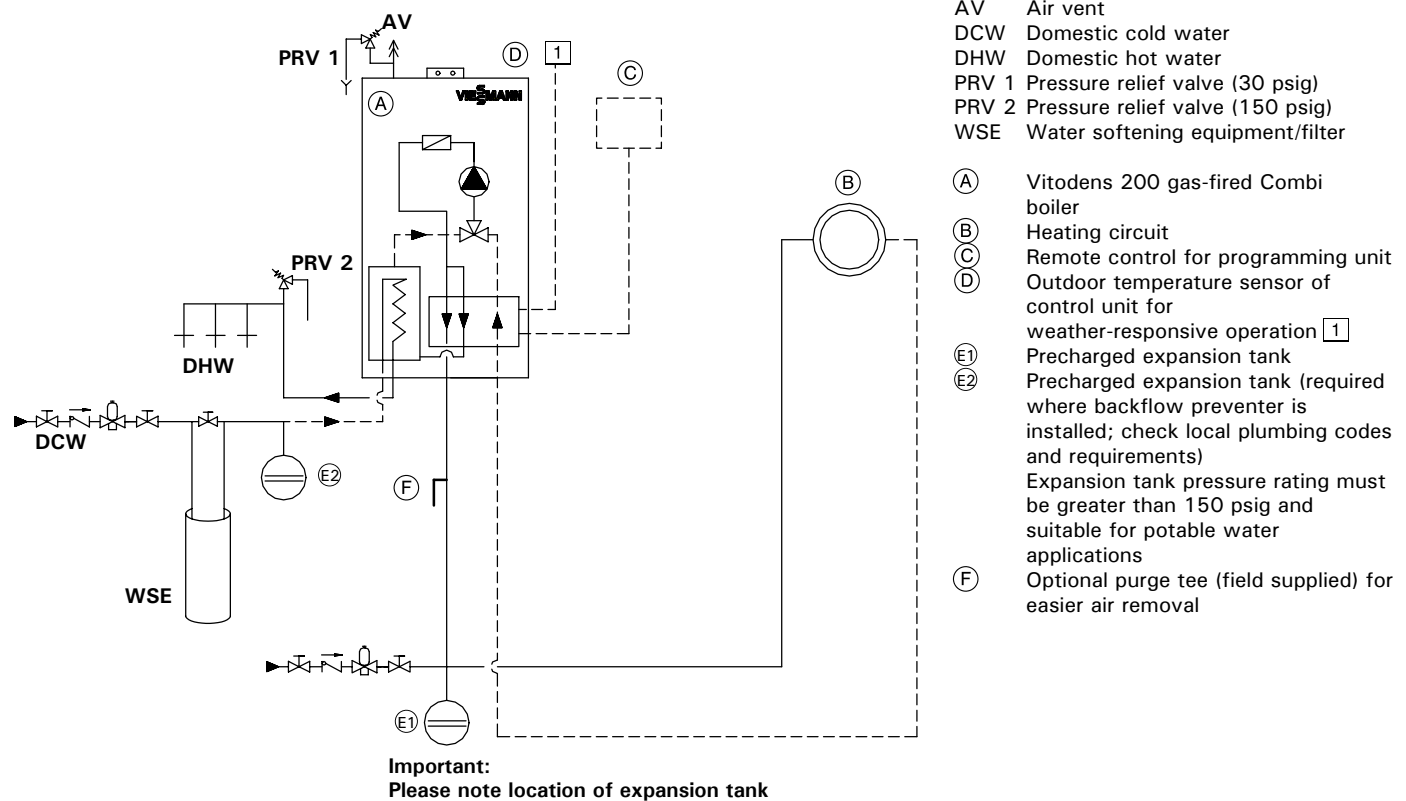

IMPORTANT

The low-loss header cannot be used with the Vitodens 200 Combi Series boiler, WB2 6-24C. The WB2 6-24C is specifically designed for small, "one-temperature" apartments or bungalows, where flow and head requirements are low and can be handled by the built-in heating circuit pump.

Upon a call for DHW, the built-in diverting solenoid valve is energized. The boiler hot water is diverted to the DHW loop at maximum pump rotational speed (no variable speed pump operation during DHW production). Once the DHW instantaneous plate heat exchanger is satisfied, the built-in diverting solenoid valve is de-energized and heating operation resumes.

The built-in plate heat exchanger is equipped with two independent temperature safety features, one surface-mounted limit temperature switch on the heating boiler side and one temperature immersion control sensor on the DHW side.

IMPORTANT


Do not use the expansion board to control a separate system heating circuit pump with Vitodens 200 Combi Series boiler, WB2 6-24C.

A heating circuit pump controlled by an expansion board will run as a DHW recirculation pump in parallel to the demand for domestic hot water rather than as intended.

System Layout 2

Vitodens 200 (up to model WB2 8-32) with...

- DHW storage tank
- one direct-connected heating circuit
- one heating circuit with a mixing valve

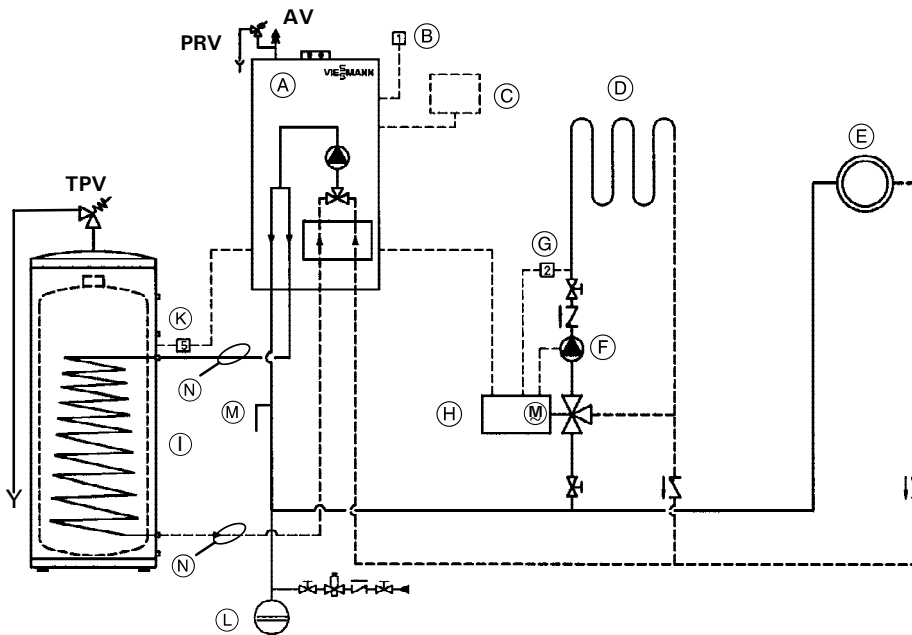

AV Air vent
PRV Pressure relief valve
TPV Temperature and pressure relief valve

- (A) Vitodens 200 gas-fired condensing boiler with programming unit for weather-responsive operation
- (B) Outdoor temperature sensor [1]
- (C) Remote control for programming unit
- (D) Underfloor heating circuit
- (E) Radiator heating circuit
- (F) Heating circuit pump (field supplied)
- (G) Mixing valve temperature sensor [2]
- (H) Accessory kit for a heating circuit with mixing valve
- (I) Domestic hot water storage tank
- (K) DHW tank temperature sensor [5]
- (L) Expansion tank
- (M) Optional purge tee (field supplied) for easier air removal
- (N) DHW supply and return piping

Important:
Please note location of expansion tank

Installation of different heating circuits...

- radiator heating circuit (high temperature circuit)
- underfloor heating circuit with 3-way mixing valve (low temperature circuit)
- DHW production

...with the following flow conditions

1. The water flow rate (output) of the radiator heating circuit is at least 30% greater than that of the underfloor heating circuit.
2. The total flow rate of the two heating circuits is **less** than the maximum possible water flow rate of the Vitodens 200 (see following table).

Model No.	Max. flow rate (GPM/ltr/h)
Vitodens 200,	
WB2 6-24C	6.2/1400
WB2 6-24	6.2/1400
WB2 8-32	7.0/1600

The use of a low-loss header is strongly recommended if the maximum water flow rate in the application concerned exceeds the values shown in the table above, or if the system flow rates are unknown. The low-loss header is available as accessory part. See the following pages for installation examples with a low-loss header.

The 3-way mixing valve, built-in to achieve the low temperature level of the underfloor heating circuit, is controlled by an accessory kit for a heating circuit with mixing valve. The circulation pump built into the Vitodens 200 boiler supplies the radiator heating circuit. The underfloor heating circuit is supplied by a circulation pump installed on site which is controlled by the accessory kit.

Upon a call for DHW, the built-in diverting solenoid valve is energized. The boiler hot water is diverted to the DHW loop at maximum pump rotational speed (no variable speed pump operation during DHW production). Once the DHW tank is satisfied, the built-in diverting solenoid valve is de-energized and heating operation resumes.

IMPORTANT


DHW supply and return piping between boiler DHW connections and the Viessmann DHW tank connections (N), shall be a minimum of 1" nominal pipe diameter (irrespective of the 3/4" DHW connection outlet sizes provided on the boiler and the DHW tank). This will ensure the residual head of the built-in pump is fully utilized to overcome the resistance of the DHW heat exchanger coil and to provide sufficient water flow to the boiler heat exchanger.

In non-Viessmann DHW tank applications, perform, in addition to the above, accurate calculations for DHW tank coil pressure drop versus boiler pump residual head to ensure sufficient water flow to the boiler heat exchanger. Failure to heed the above instructions may cause boiler short-cycling and inadequate DHW supply.

System Layout 3

Vitodens 200 (up to model WB2 8-32) with...

- DHW storage tank
- one heating circuit with mixing valve
- one heating circuit without mixing valve and low-loss header

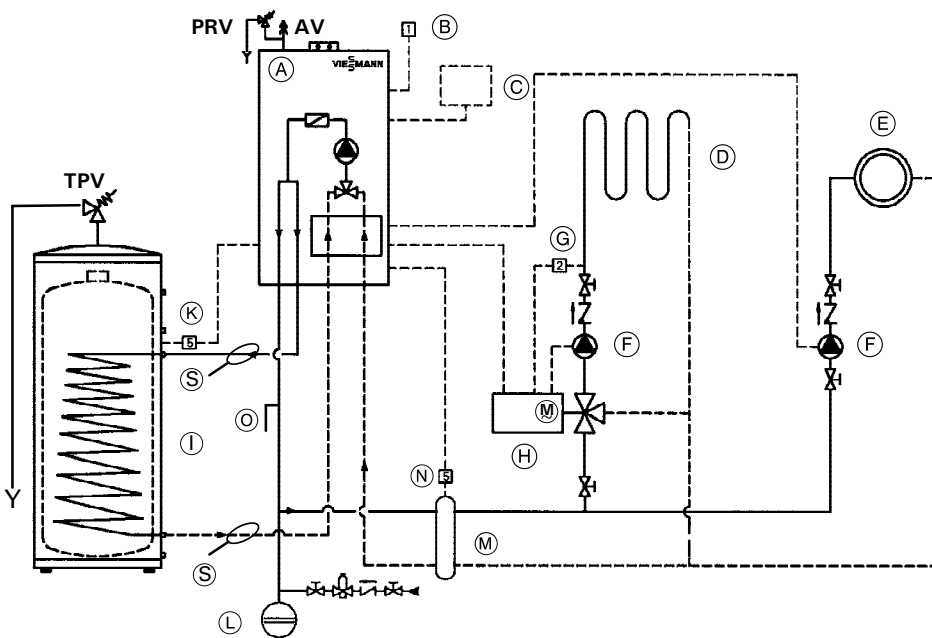

- AV Air vent
PRV Pressure relief valve
TPV Temperature and pressure relief valve
- (A) Vitodens 200 gas-fired condensing boiler with programming unit for weather-responsive operation
(B) Outdoor temperature sensor [1]
(C) Remote control for programming unit
(D) Underfloor heating circuit
(E) Radiator heating circuit
(F) Heating circuit pumps (field supplied)
(G) Mixing valve temperature sensor [2]
(H) Accessory kit for a heating circuit with mixing valve
(I) Domestic hot water storage tank
(K) DHW tank temperature sensor [5]
(L) Expansion tank
(M) Low-loss header
(N) Viessmann temperature sensor for low-loss header [5]
(O) Optional purge tee (field supplied) for easier air removal
(S) DHW supply and return piping

Important:
Please note location of expansion tank

Installation of different heating circuits...

- radiator heating circuit (high temperature circuit)
- underfloor heating circuit with 3-way mixing valve (low temperature circuit)
- DHW production

...with the following flow conditions

1. The total flow rate of the two heating circuits is **greater** than the maximum possible water flow rate of the Vitodens 200 (see following table).

Model No.	Max. flow rate (GPM/ltr/h)
Vitodens 200,	
WB2 6-24C	6.2/1400
WB2 6-24	6.2/1400
WB2 8-32	7.0/1600

The use of a low-loss header is therefore recommended.
The low-loss header is available as accessory part.
See page 34 in this manual for details on the low-loss header.

The 3-way mixing valve, built-in to achieve the low temperature level of the underfloor heating circuit, is controlled by an accessory kit for a heating circuit with mixing valve. The circulation pump built into the Vitodens 200 boiler supplies the heating circuit up to the low-loss header.
The radiator heating circuit is supplied by a circulation pump installed on site.

IMPORTANT

An expansion board (optional) must be ordered from Viessmann to control this pump. See page 34 for details.

The underfloor heating circuit is supplied by a circulation pump installed on site which is controlled by the accessory kit. Upon a call for DHW, the built-in diverting solenoid valve is energized. The boiler hot water is diverted to the DHW loop at maximum pump rotational speed (no variable speed pump operation during DHW production). Once the DHW tank is satisfied, the built-in diverting solenoid valve is de-energized and heating operation resumes.

IMPORTANT


DHW supply and return piping between boiler DHW connections and the Viessmann

DHW tank connections (S), shall be a minimum of 1" nominal pipe diameter (irrespective of the ¾" DHW connection outlet sizes provided on the boiler and the DHW tank). This will ensure the residual head of the built-in pump is fully utilized to overcome the resistance of the DHW heat exchanger coil and to provide sufficient water flow to the boiler heat exchanger. In non-Viessmann DHW tank applications, perform, in addition to the above, accurate calculations for DHW tank coil pressure drop versus boiler pump residual head to ensure sufficient water flow to the boiler heat exchanger. Failure to heed the above instructions may cause boiler short-cycling and inadequate DHW supply.

System Layout 4

Vitodens 200 (up to model WB2 8-32) with...

- DHW storage tank
- two heating circuits with a mixing valve

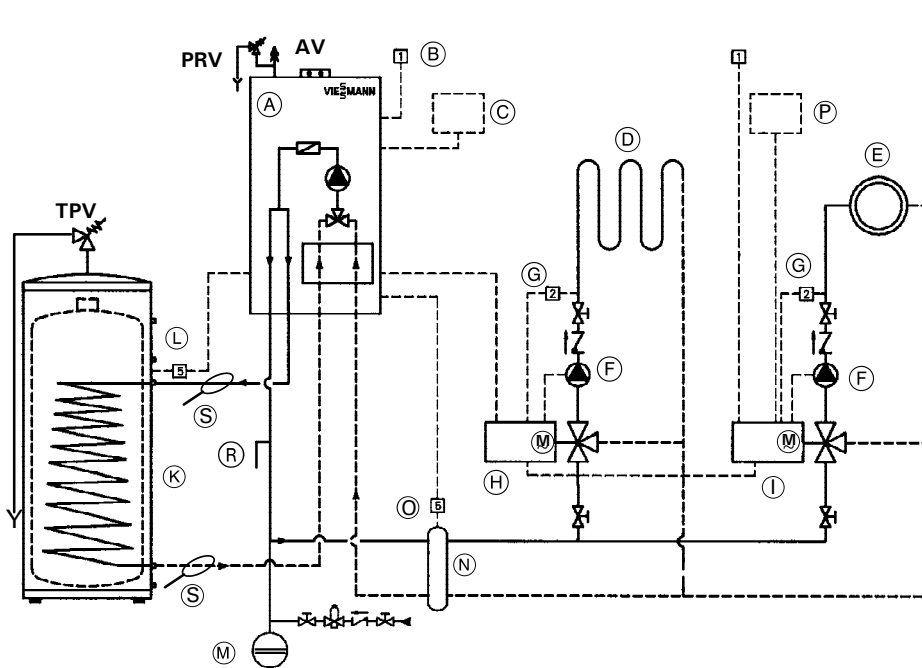

Important:
Please note location of expansion tank

- AV Air vent
PRV Pressure relief valve
TPV Temperature and pressure relief valve
- (A) Vitodens 200 gas-fired condensing boiler with programming unit for weather-responsive operation with 2-wire BUS expansion module
(B) Outdoor temperature sensor [1]
(C) Remote control for programming unit
(D) Underfloor heating circuit
(E) Radiator heating circuit
(F) Heating circuit pump (field supplied)
(G) Mixing valve temperature sensor [2]
(H) Accessory kit for a heating circuit with mixing valve
(I) Vitotronic 050/Dekamatik-HK1 control with communication module
(K) DHW storage tank
(L) DHW tank temperature sensor [5]
(M) Expansion tank
(N) Low-loss header
(O) Viessmann temperature sensor for low-loss header [5]
(P) Vitotrol 200 remote control
(R) Optional purge tee (field supplied) for easier air removal
(S) DHW supply and return piping

Installation of different heating circuits...

- radiator heating circuit
- underfloor heating circuit with 3-way mixing valve (low temperature circuit)
- DHW production

...with the following flow conditions

1. The total flow rate of the two heating circuits is **greater** than the maximum possible flow rate of the Vitodens 200 (see following table).

Model No.	Max. flow rate (GPM/ltr/h)
Vitodens 200,	
WB2 6-24C	6.2/1400
WB2 6-24	6.2/1400
WB2 8-32	7.0/1600

The use of a low-loss header is therefore recommended.

The low-loss header is available as accessory part.

See page 34 in this manual for details on the low-loss header.

The 3-way mixing valve, built-in to achieve the low temperature level of the underfloor heating circuit, is controlled by an accessory kit for a heating circuit with mixing valve. The circulation pump built into the Vitodens 200 boiler supplies the heating circuit up to the low-loss header.

The underfloor and radiator heating circuits are supplied by circulation pumps installed on site which are controlled by the accessory kit or the Vitotronic 050/Dekamatik-HK1 control.

If more than two heating circuits with mixing valves are to be connected, they can be controlled by the Vitocontrol. Contact your local Viessmann Technical Sales Representative for details.

Upon a call for DHW, the built-in diverting solenoid valve is energized. The boiler hot water is diverted to the DHW loop at maximum pump rotational speed (no variable speed pump operation during DHW production). Once the DHW tank is satisfied, the built-in diverting solenoid valve is de-energized and heating operation resumes.

IMPORTANT

DHW supply and return piping between boiler DHW connections and the Viessmann


DHW tank connections (S), shall be a minimum of 1" nominal pipe diameter (irrespective of the 3/4" DHW connection outlet sizes provided on the boiler and the DHW tank). This will ensure the residual head of the built-in pump is fully utilized to overcome the resistance of the DHW heat exchanger coil and to provide sufficient water flow to the boiler heat exchanger. In non-Viessmann DHW tank applications, perform, in addition to the above, accurate calculations for DHW tank coil pressure drop versus boiler pump residual head to ensure sufficient water flow to the boiler heat exchanger. Failure to heed the above instructions may cause boiler short-cycling and inadequate DHW supply.

Installation Examples

System Layout 5

Vitodens 200 (up to model WB2 8-32) with...

- direct-connected heating circuit
- one heating circuit with system separation

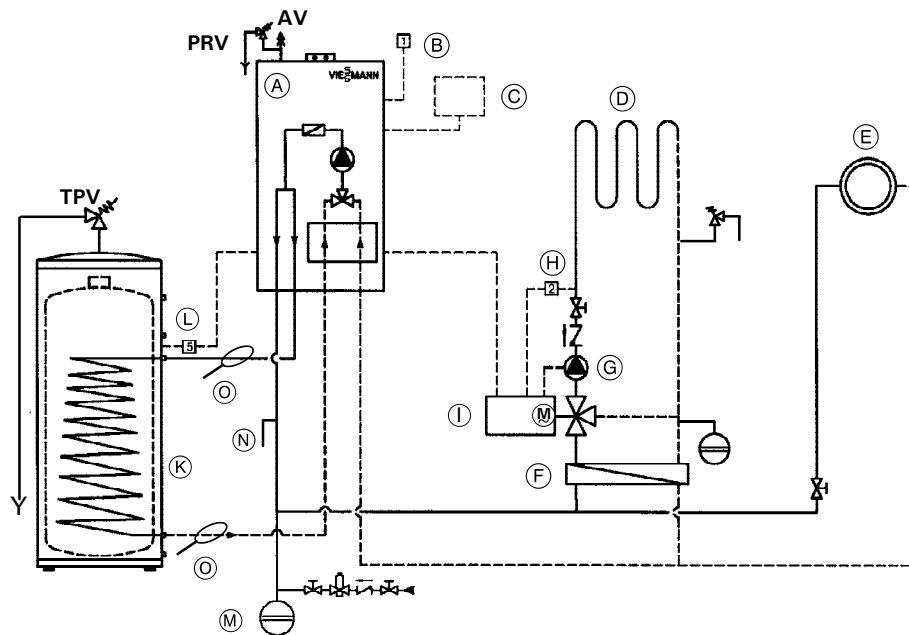

Important:

Installation of different heating circuits and expansion tank

- radiator heating circuit (high temperature circuit)
- underfloor heating circuit with 3-way mixing valve (low temperature circuit)
- DHW production

...with the following flow conditions

1. The flow rate (output) of the radiator heating circuit is at least 30 % greater than that of the underfloor heating circuit.
2. The total flow rate of the two heating circuits is **less** than the maximum possible water flow rate of the Vitodens 200 boiler (see following table).

Model No.	Max. flow rate (GPM/ltr/h)
Vitodens 200,	
WB2 6-24C	6.2/1400
WB2 6-24	6.2/1400
WB2 8-32	7.0/1600

The use of a low-loss header is strongly recommended if the maximum water flow rate in the application concerned exceeds the values shown in the preceding table, or if the system flow rates are unknown. The low-loss header is available as an accessory part.

examples with a low-loss header. See page 34 in this manual for details on the low-loss header.

The 3-way mixing valve, built-in to achieve the low temperature level of the underfloor heating circuit, is controlled by an accessory kit for a heating circuit with mixing valve. The circulation pump built into the Vitodens 200 boiler supplies the radiator heating circuit and the plate heat exchanger for system separation. The underfloor heating circuit is supplied by a circulation pump installed on site which is controlled by the accessory kit.

Upon a call for DHW, the built-in diverting solenoid valve is energized. The boiler hot water is diverted to the DHW loop at maximum pump rotational speed (no variable speed pump operation during DHW production). Once the DHW tank is satisfied, the built-in diverting solenoid valve is de-energized and heating operation resumes.

AV Air vent
PRV Pressure relief valve
TPV Temperature and pressure relief valve

- (A) Vitodens 200 gas-fired condensing boiler with programming unit for weather-responsive operation
- (B) Outdoor temperature sensor [1]
- (C) Remote control for programming unit
- (D) Underfloor heating circuit
- (E) Radiator heating circuit
- (F) Plate heat exchanger for system separation
- (G) Heating circuit pump (field supplied)
- (H) Mixing valve temperature sensor [2]
- (I) Accessory kit for heating circuit with mixing valve
- (K) DHW storage tank
- (L) DHW tank temperature sensor [5]
- (M) Expansion tank
- (N) Optional purge tee (field supplied) for easier removal of air
- (O) DHW supply and return piping

IMPORTANT

The pressure drop (secondary circuit) of the plate heat exchanger (F) must be less than/equal to ($\leq$) the pressure drop of the 3-way mixing valve.

This must be taken into account when sizing the plate heat exchanger.

IMPORTANT


DHW supply and return piping between boiler DHW connections and the Viessmann

DHW tank connections (O), shall be a minimum of 1" nominal pipe diameter (irrespective of the 3/4" DHW connection outlet sizes provided on the boiler and the DHW tank). This will ensure the residual head of the built-in pump is fully utilized to overcome the resistance of the DHW heat exchanger coil and to provide sufficient water flow to the boiler heat exchanger. In non-Viessmann DHW tank applications, perform, in addition to the above, accurate calculations for DHW tank coil pressure drop versus boiler pump residual head to ensure sufficient water flow to the boiler heat exchanger. Failure to heed the above instructions may cause boiler short-cycling and inadequate DHW supply.

System Layout 6

Vitodens 200 (model WB2 11-44 and up) with...

- DHW storage tank and
- one direct-connected heating circuit

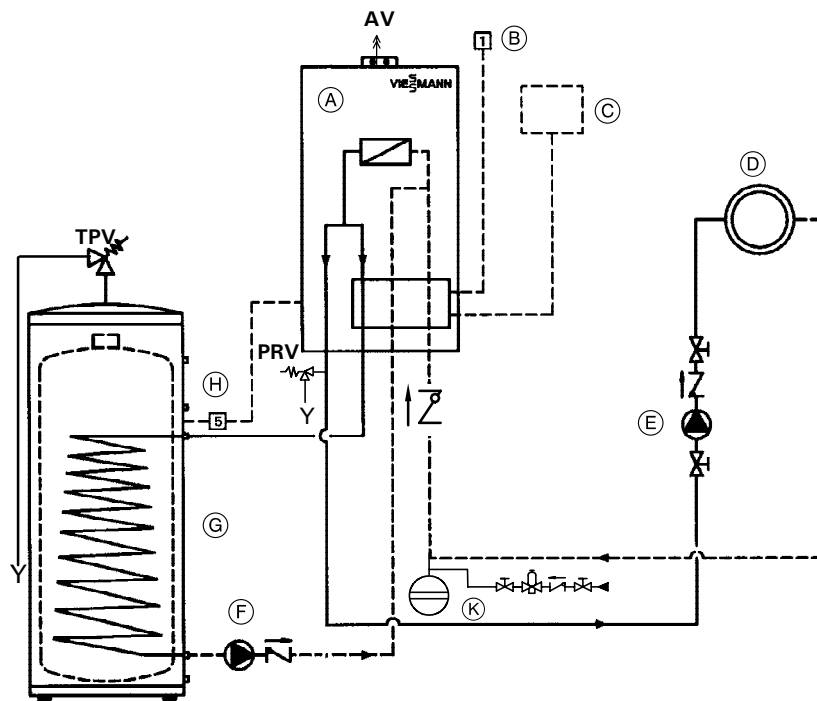

- AV Air vent
PRV Pressure relief valve
TPV Temperature and pressure relief valve
- (A) Vitodens 200 gas-fired condensing boiler with programming unit for weather-responsive operation
(B) Outdoor temperature sensor of control unit for weather-responsive operation [1]
(C) Remote control for programming unit
(D) Heating circuit
(E) Heating circuit pump (field supplied)
(F) DHW circulating pump (field supplied)
(G) DHW storage tank
(H) DHW tank temperature sensor [5]
(K) Expansion tank

Please note!

The use of a low-loss header is recommended if the system water flow rate is **less** than 1.3 GPM / 300 ltr/h or **more** than 15.4 GPM / 3500 ltr/h. The low-loss header is available as accessory part.

See page 34 in this manual for details on the low-loss header.

Model No.	Max. flow rate (GPM/ltr/h)
Vitodens 200, WB2 11-44	15.4/3500
WB2 15-60	15.4/3500

IMPORTANT


DHW circulating pump (F) must pump *into* the Vitodens 200 boiler (as illustrated).

Installation Examples

System Layout 7

Vitodens 200 (model WB2 11-44 and up) with...

- DHW storage tank
- one heating circuit with mixing valve and system separation

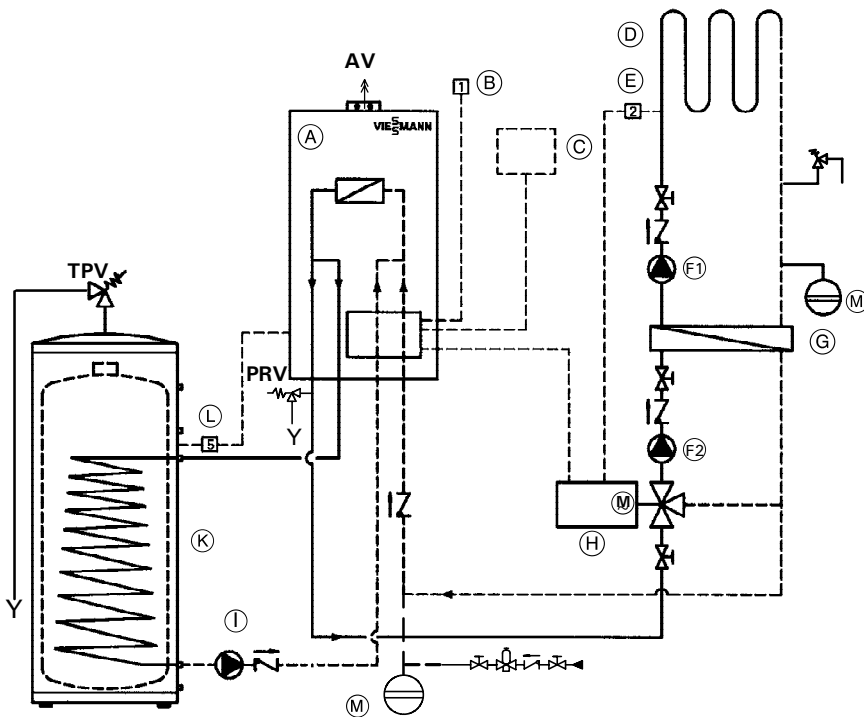

AV Air vent
PRV Pressure relief valve
TPV Temperature and pressure relief valve

- (A) Vitodens 200 gas-fired condensing boiler with programming unit for weather-responsive operation
- (B) Outdoor temperature sensor of control unit for weather-responsive operation [1]
- (C) Remote control
- (D) Underfloor heating circuit
- (E) Mixing valve temperature sensor [2]
- (F1) Heating circuit pump (field supplied)
- (F2) Heating circuit pump (field supplied), located upstream of heat exchanger (see Important below)
- (G) Plate heat exchanger for system separation
- (H) Accessory kit for heating circuit with mixing valve
- (I) DHW circulating pump (field supplied)
- (K) DHW storage tank
- (L) DHW tank temperature sensor [5]
- (M) Expansion tank

Please note!

The use of a low-loss header is recommended if the system water flow rate is **less** than 1.3 GPM / 300 ltr/h or **more** than 15.4 GPM / 3500 ltr/h.

The low-loss header is available as accessory part.

See page 34 in this manual for details on the low-loss header.

Please note!

System separation is required of underfloor heating systems employing non-oxygen diffusion barrier tubing.

All components on the secondary side of the heat exchanger must be made of corrosion-resistant materials.

IMPORTANT

DHW circulation pump (I) must pump **into** the Vitodens 200 boiler (as illustrated).

IMPORTANT


Sizing of field-supplied pump (F2) is critical to the proper boiler operation in system layout 7 (above). The selected pump performance curve must be at least equivalent to those shown on page 10 of this manual, or better. An undersized pump may cause short-cycling and/or improper operation of the boiler. Viessmann **STRONGLY** recommends using a low-loss header and a boiler pump in system layout 7 (above).

Model No.	Max. flow rate (GPM/ltr/h)
Vitodens 200,	
WB2 11-44	15.4/3500
WB2 15-60	15.4/3500

System Layout 8

Vitodens 200 (model WB2 11-44 and up) with...

- DHW storage tank
- low-loss header
- one heating circuit with mixing valve

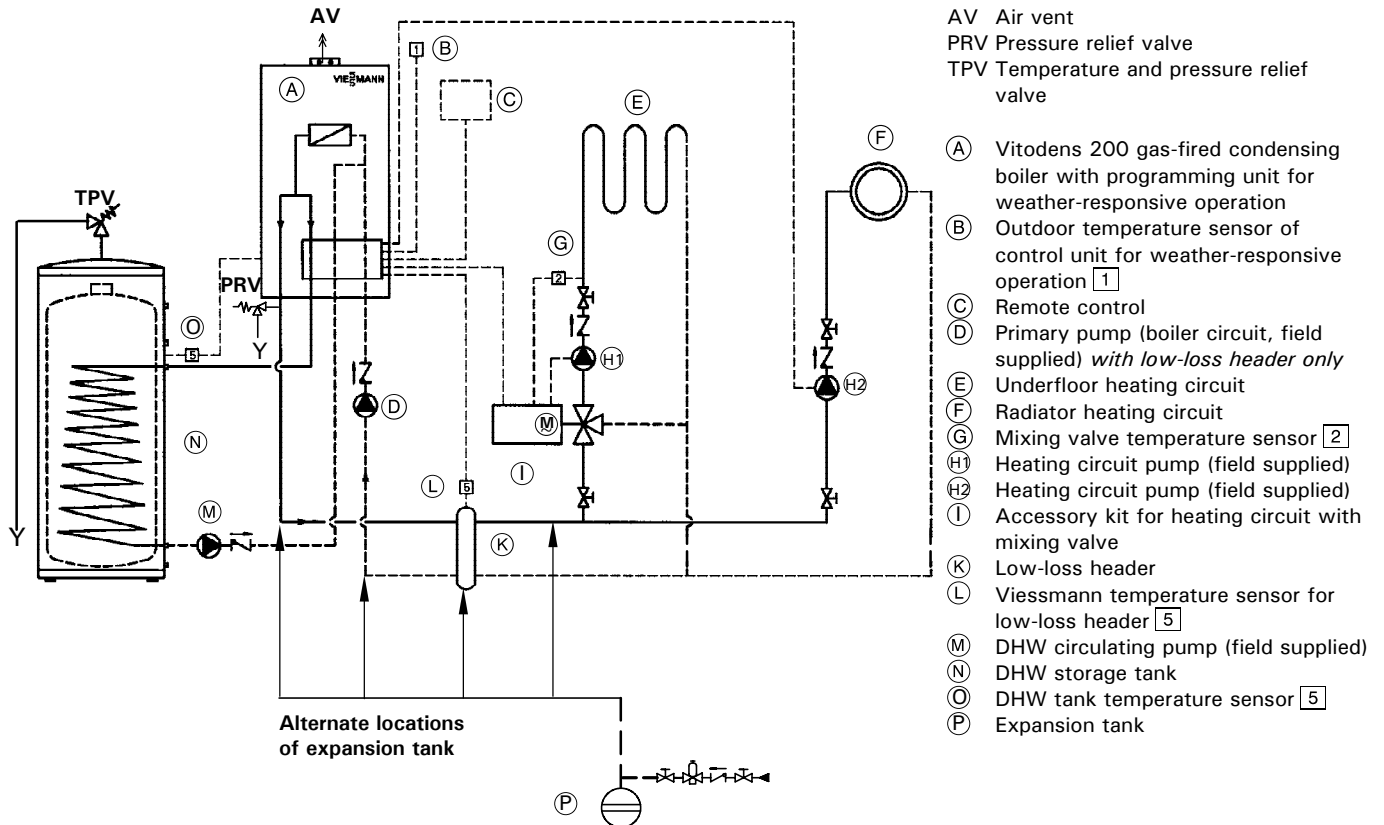

Please note!

The use of a low-loss header is recommended if the water flow rate is **less** than 1.3 GPM / 300 ltr/h or **more** than 15.4 GPM / 3500 ltr/h.

The low-loss header is available as accessory part.

See page 34 in this manual for details on the low-loss header.

The radiator heating circuit is supplied by a circulation pump (field supplied). An expansion board (optional) must be ordered from Viessmann to control this pump.

The underfloor heating circuit is supplied by a circulation pump installed on site which is controlled by the accessory kit.

The DHW circulation pump is field supplied.

IMPORTANT


Pumps (D) and (M) must pump *into* the Vitodens 200 boiler (as illustrated).

Model No.	Max. flow rate (GPM/ltr/h)
Vitodens 200,	
WB2 11-44	15.4/3500
WB2 15-60	15.4/3500

System Layout 9

Vitodens 200 (model WB2 11-44 and up) with...

- DHW storage tank
- two heating circuits with a mixing valve

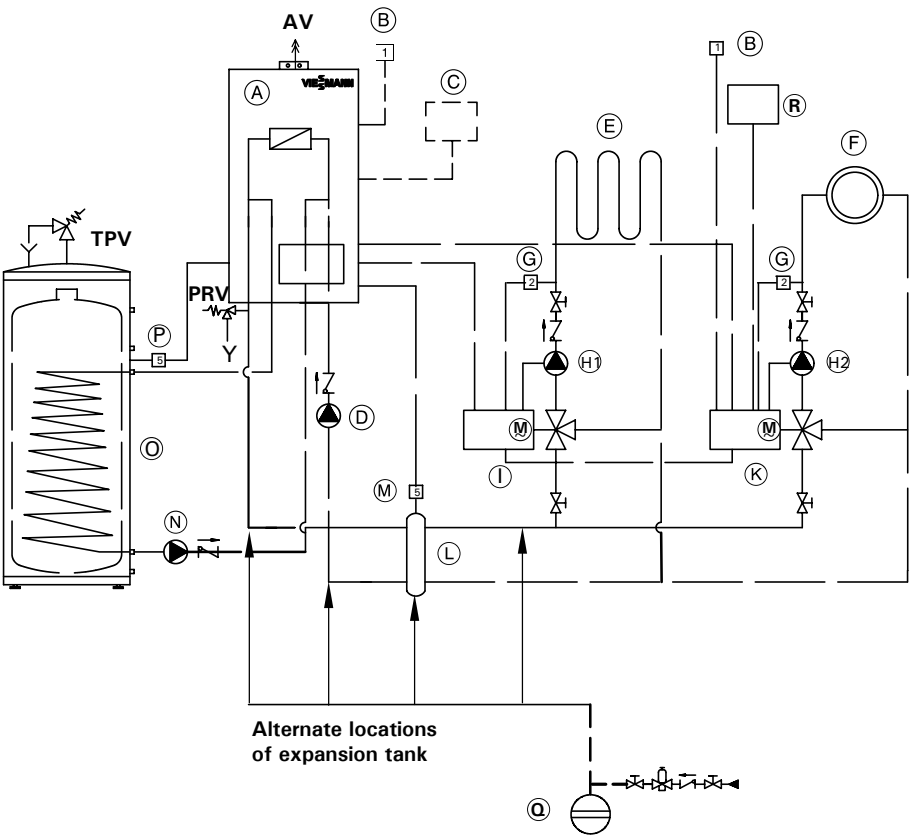

- AV Air vent
PRV Pressure relief valve
TPV Temperature and pressure relief valve
- (A) Vitodens 200 gas-fired condensing boiler with programming unit for weather-responsive operation with 2-wire BUS expansion module
(B) Outdoor temperature sensor [1]
(C) Remote control for programming unit
(D) Primary pump (boiler circuit, field supplied) *with low-loss header only*
(E) Underfloor heating circuit
(F) Radiator heating circuit
(G) Mixing valve temperature sensor [2]
(H1) Heating circuit pump (field supplied)
(H2) Heating circuit pump (field supplied)
(I) Accessory kit for heating circuit with mixing valve
(K) Vitotronic 050/Dekamatik-HK1 control with communication module
(L) Low-loss header
(M) Viessmann temperature sensor for low-loss header [5]
(N) DHW circulating pump (field supplied)
(O) DHW storage tank
(P) DHW tank temperature sensor [5]
(Q) Expansion tank
(R) Vitotrol 200 remote control

Installation of different heating circuits...

- radiator heating circuit
 - underfloor heating circuit with 3-way mixing valve (low temperature circuit)
 - DHW production
- ...with the following flow conditions
1. The total flow rate of the two heating circuits is **greater** than the maximum possible flow rate of the Vitodens 200 (see following table).

Model No.	Max. flow rate (GPM/ltr/h)
Vitodens 200,	
WB2 11-44	15.4/3500
WB2 15-60	15.4/3500

The use of a low-loss header is therefore recommended.
The low-loss header is available as accessory part.
See page 34 in this manual for details on the low-loss header.

The 3-way mixing valve, built-in to achieve the low temperature level of the underfloor heating circuit, is controlled by an accessory kit for a heating circuit with mixing valve.


The underfloor and radiator heating circuits are supplied by circulation pumps installed on site which are controlled by the accessory kit or the Vitotronic 050/Dekamatik-HK1 control.
If more than two heating circuits with mixing valves are to be connected, they can be controlled by the Vitocontrol.
Contact your local Viessmann Technical Sales Representative for details.

The DHW circulating pump is field supplied.

System Layout 10

Vitodens 200 (model WB2 11-44 and up) with...

- DHW storage tank
- low-loss header
- multiple heating circuits with a mixing valve

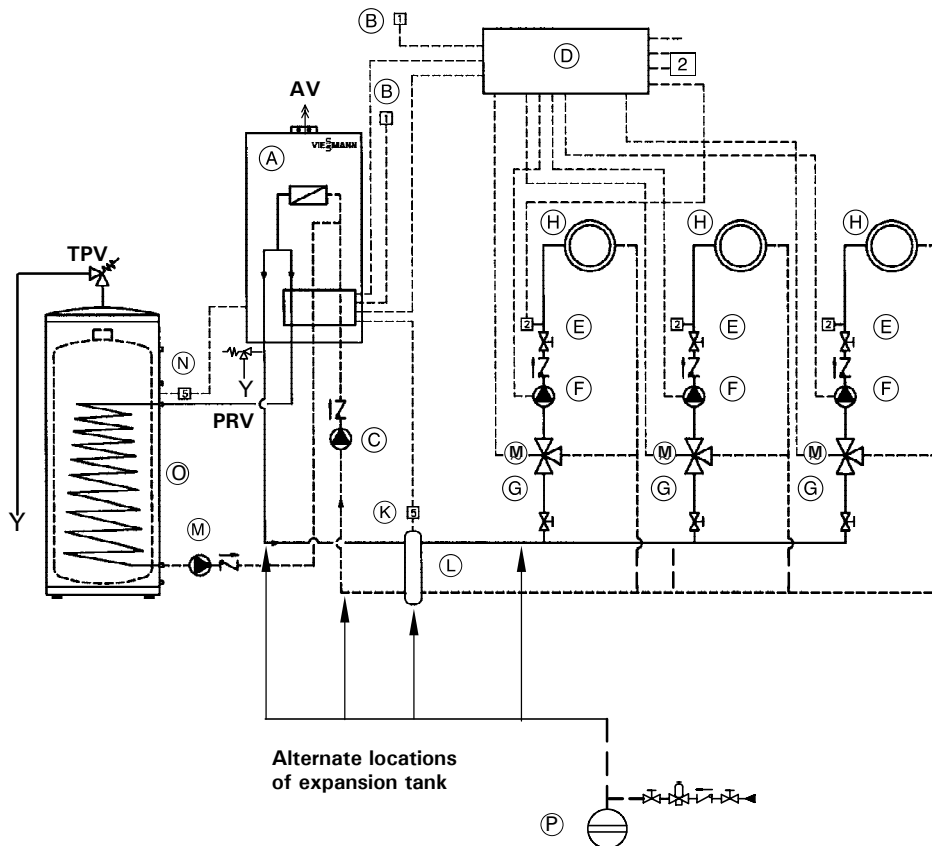

AV Air vent
PRV Pressure relief valve
TPV Temperature and pressure relief valve

- (A) Vitodens 200 gas-fired condensing boiler with programming unit for weather-responsive operation and Viessmann 2-wire BUS expansion module
- (B) Outdoor temperature sensor of control unit for weather-responsive operation [1]
- (C) Primary pump (boiler circuit, field supplied) *with low-loss header only*
- (D) Vitocontrol ^{*1}
- (E) Mixing valve temperature sensor [2]
- (F) Heating circuit pump (field supplied)
- (G) Accessory kit for heating circuit with mixing valve
- (H) Heating circuit with mixing valve
- (K) Viessmann temperature sensor for low-loss header [5]
- (L) Low-loss header
- (M) DHW circulating pump (field supplied)
- (N) DHW tank temperature sensor [5]
- (O) DHW storage tank
- (P) Expansion tank

^{*1}Contact your local Sales Representative for details.

IMPORTANT


Pumps (C) and (M) must pump *into* the Vitodens 200 boiler (as illustrated).

When designing a system as illustrated above, please contact your local Viessmann Sales Representative for assistance.

Installation Examples

Installation Example

Multiple Vitodens 200, WB2-44 or -60 installation (up to four boilers) with one boiler dedicated to DHW production and one heating circuit.

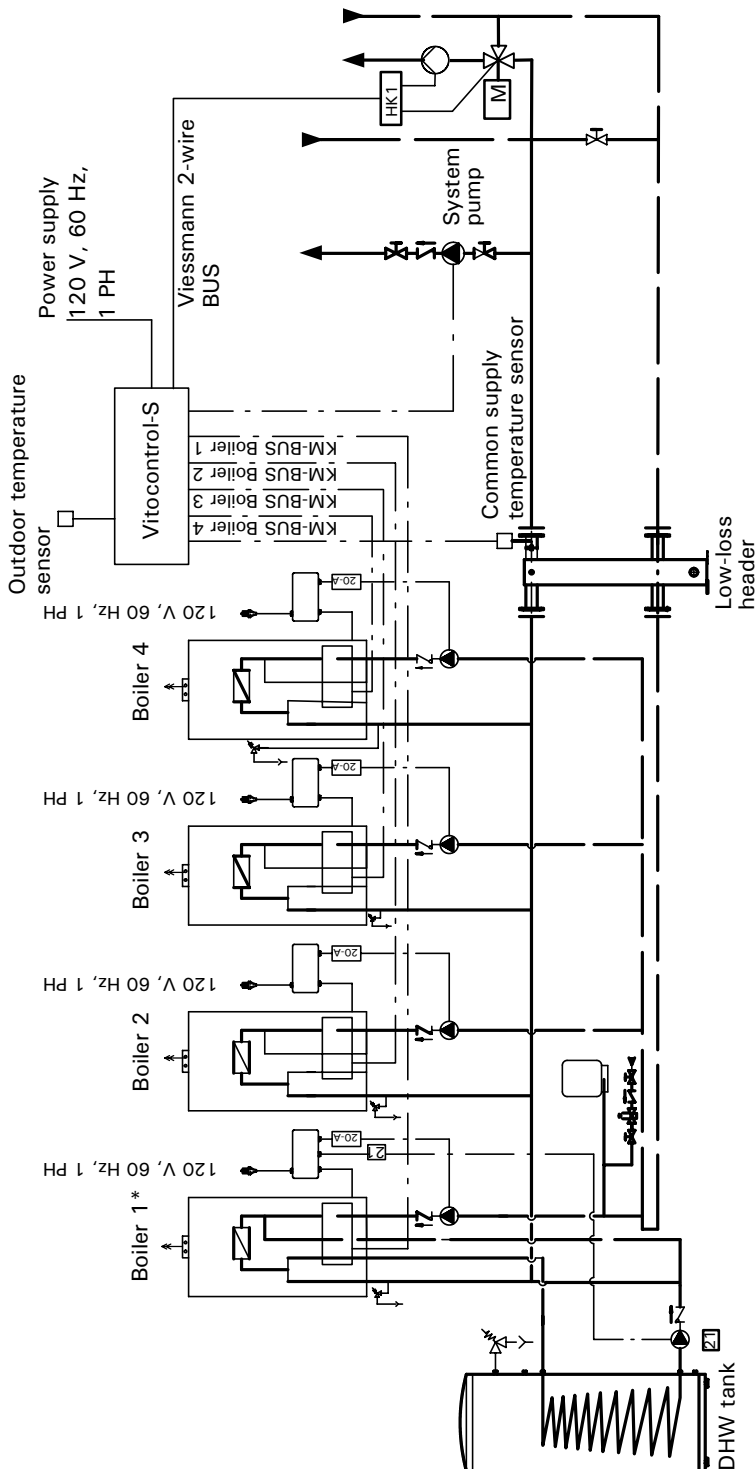

IMPORTANT

This installation example depicts a possible piping layout for multiple Vitodens 200 boilers equipped with Viessmann System Technology. Please note that this example is based on a simplified conceptual drawing only! Piping and necessary componentry must be field verified.

A low water cut-off (LWCO) must be installed where required by local codes. Proper installation and functionality in the field is the responsibility of the heating contractor.

WARNING

If a DHW storage tank other than a Viessmann Vitocell 100 or 300 tank is used, the installer must verify proper operation of the Viessmann DHW tank temperature sensor with the original manufacturer of the tank. Viessmann strongly recommends the installation of a temperature tempering valve in the DHW supply line.

* A DHW recirculation pump (#20) can be connected to Boiler 1 only.

System Design Considerations

IN THE COMMONWEALTH OF MASSACHUSETTS...

-this product shall be installed by a licensed plumber or gas fitter.

-the flexible connector (if used) cannot exceed 36".

-any level type shutoff used must be of tee handle type.

Boiler location

As a direct vent appliance, the Vitodens 200 can be installed for room air independent operation (sealed combustion) **regardless** of size and ventilation method of the room in which it is located.

The Vitodens 200 can be installed, for example, in the main living area of a house, in non-ventilated utility rooms, cupboards, closets and alcoves with no clearance required from combustible materials, as well as in attics with a direct outlet for the flue gas/fresh air system. Follow all local and national codes.

Flue gas system

Viessmann PPS (Polypropylene) concentric flue gas/fresh air systems for room air independent operation (sealed combustion) and side wall venting are tested to ANSI Z21.13 - CSA 4.9 - 2000 standards and are certified together with the Vitodens 200 boiler as a constructional unit.

The Vitodens 200 boiler may also be vented vertically, using an AL29-4C® special stainless steel, single-wall, room air dependent venting system (UL listed for category IV).

For a more detailed description of the direct vent and single-wall vent system, please refer to the Vitodens 200 Venting System Installation Instructions.

Flue gas temperature protection

Flue pipes used for the Vitodens 200 are suitable for max. flue gas temperatures of up to 248 °F/120 °C.

No flue gas temperature protection is required as the maximum permissible flue gas temperature is not exceeded in any operating condition or in the event of malfunctioning.

Low water cut-off

A low water cut-off may be required by local codes. If the boiler is installed above the radiation level, a low water cut-off device of approved type must be installed in all instances. An approved type low water cut-off device must be provided by the heating contractor. Do not install an isolation valve between the boiler and the low water cut-off.

System layout

- The max. boiler water temperature for ...
 - space heating is 167 °F/75 °C.
 - DHW production is 172 °F/78 °C.
 To minimize distribution losses, Viessmann recommends that the heating and domestic hot water systems be based on a maximum boiler supply temperature of 158 °F/70 °C.
- Due to the low return temperatures required for gas condensing, no mixing valves should be used in the heating circuit whenever possible. If mixing valves are required, e.g. for multi-circuit systems or underfloor heating systems, only 3-way mixing valves must be used.

Do not use 4-way mixing valves with condensing boilers.

Water connections

Vitodens 200 boilers can be used in any fully pumped hot water heating system. Minimum system pressure is 0.8 bar/12 psig.

Chemical corrosion protection products

Corrosion does not typically occur in sealed heating systems which have been correctly installed and are correctly operated. Many manufacturers of plastic pipes recommend the use of chemical additives. In this case, only those commercially available corrosion protection products approved for boilers with domestic hot water heating via single-wall heat exchangers (instantaneous plate heat exchangers or DHW tanks) must be used.

Underfloor heating systems

For underfloor heating systems Viessmann recommends the use of plastic tubing with an oxygen diffusion barrier in order to prevent the diffusion of oxygen through tubing. If plastic tubing without an oxygen diffusion barrier is used in underfloor heating systems, Viessmann recommends that such systems be separated from the boiler with a heat exchanger.

Underfloor heating systems and heating circuits containing a very large volume of water must be connected to the boiler via a 3-way mixing valve; please refer to the applicable installation example in this manual.

Oxygen diffusion barrier underfloor tubing

The boiler warranty does not cover leaks resulting from corrosion caused by the use of underfloor plastic tubing without an oxygen diffusion barrier. Such systems must have the non-oxygen diffusion barrier tubing separated from the boiler with a heat exchanger. Viessmann recommends the use of underfloor plastic tubing with an oxygen diffusion barrier.

Water quality

Treatment for boiler feed water should be considered in areas of known problems, such as where a high mineral content and hardness exist. In areas where freezing might occur, an antifreeze may be added to the system water to protect the system. Please adhere to the specifications given by the antifreeze manufacturer. Do not use automotive silicate based antifreeze. Please observe that an antifreeze/water mixture may require a backflow preventer within the automatic water feed and influence components such as diaphragm expansion tanks, radiation, etc. Maximum antifreeze content is 50% for the Vitodens 200 boiler. Do **not** use antifreeze other than specifically made for hot water heating systems. System also may contain components which might be negatively affected by antifreeze. Check total system frequently when filled with antifreeze. Advise system operator/ultimate owner that system is filled with a glycol mix. The heating contractor must provide a MSDS (Material Safety Data Sheet) for the antifreeze used to the system operator/ultimate owner.

Warranty

Our warranty does not cover damages resulting from the following:

- installation or service by unqualified and unlicensed personnel.
- attempting to perform any repair work on the boiler other than that mentioned in the boiler literature.
- tampering with or attempting to readjust the factory settings of the
 - combination gas valve
 - combustion air opening of the burner blower
- leaks resulting from corrosion caused by the use of underfloor plastic tubing without an oxygen diffusion barrier.

For detailed warranty information, please read warranty sheet supplied with product.

Viessmann Manufacturing Company (U.S.) Inc.
45 Access Road
Warwick, Rhode Island • 02886 • USA
Tel. (401) 732-0667 • Fax (401) 732-0590
www.viessmann-us.com • mail@viessmann-us.com

Viessmann Manufacturing Company Inc.
750 McMurray Road
Waterloo, Ontario • N2V 2G5 • Canada
Tel. (519) 885-6300 • Fax (519) 885-0887
www.viessmann.ca • mail@viessmann.ca

5167 472 v3.2

Technical information subject to change without notice.



Printed on environmentally friendly
(recycled and recyclable) paper.