 


MP3



GTP 01-MP3


Operating instructions

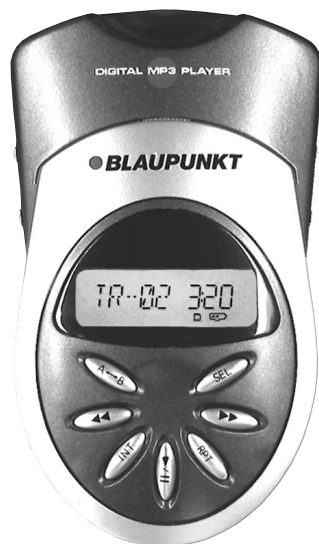

 **BLAUPUNKT**

   Bitte aufklappen
Open here
Ouvrir s.v.p.
Aprite la pagina
Hier openslaan a.u.b.
Öppna
Por favor, abrir
Favor abrir
Vend siden

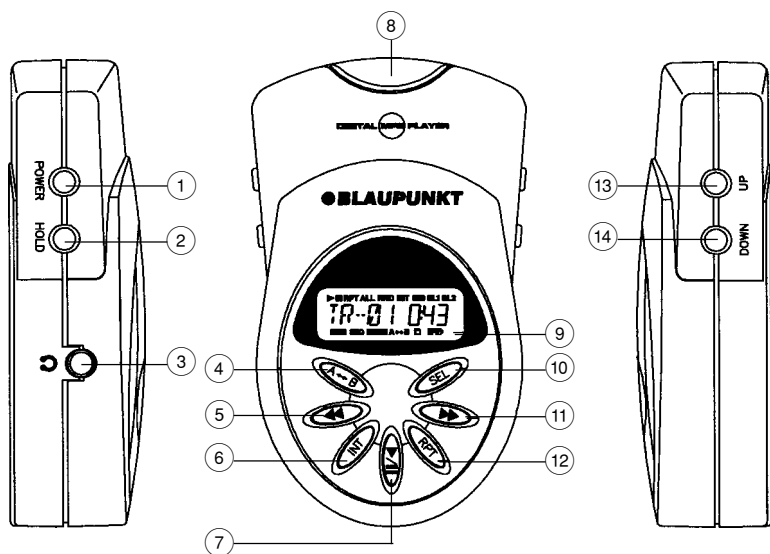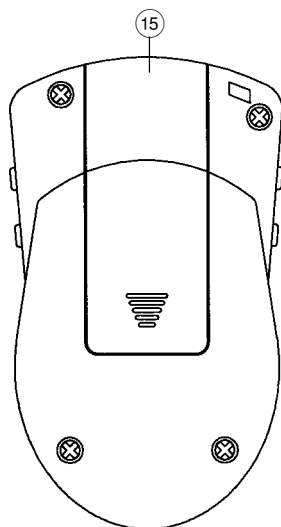

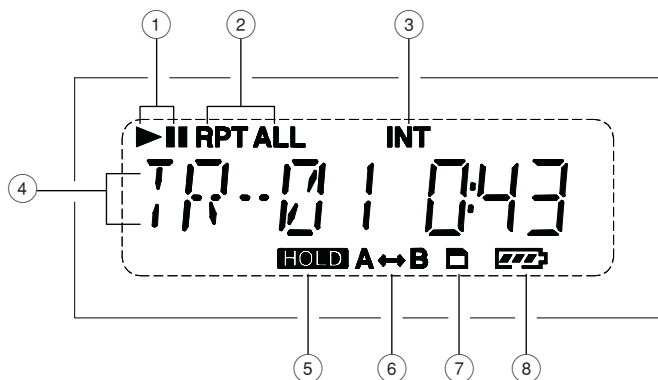

- ① Play/Pause
- ② Repeat On/All
- ③ Intro Scan
- ④ Track Number/Time Counter
- ⑤ Hold Mode
- ⑥ A-B Select excerpt repeat
- ⑦ MMC Card Insertion Indicator
- ⑧ Battery Charge Indicator

- ① **POWER** button, for switching the unit on/off.
- ② **HOLD** button, to secure the unit and therefore prevent its controls from accidentally being operated.
- ③ Headphones jack, 3.5 mm stereo jack.
- ④ **A-B** button, to define an excerpt in a piece of music that you want played repeatedly.
- ⑤ Backwards track selection, fast-reverse search.
- ⑥ **INT** button, to play all the tracks on an MMC for 10 seconds.
- ⑦ **PAUSE/ PLAY** button, to pause playback.
- ⑧ MMC slot into which MMCs can be inserted.
- ⑨ Display.
- ⑩ **SEL** button, to adjust the treble and bass.
- ⑪ Forwards track selection, fast-forward search.
- ⑫ **RPT** button, to switch the repeat function on/off.
- ⑬ **UP** button, to adjust the volume, treble and bass.
- ⑭ **DOWN** button, to adjust the volume, treble and bass.
- ⑮ Battery compartment cover.

Inserting batteries	13
Connecting headphones	14
Switching on/off	14
Securing the unit (HOLD)	14
Adjusting the volume	14
Inserting/removing an MMC ..	14
Selecting tracks	14
Fast Search (Audible)	15
Repeating tracks (REPEAT) ...	15
Repeating an excerpt from a piece of music (A – B)	15
Cancelling A – B	15
Briefly playing all tracks (INTRO)	15
INTRO function, continuing listening to a track	16
Pausing playback (PAUSE)	16
Resuming playback	16
Adjusting the audio settings ..	16
Adjusting the treble	16
Adjusting the bass	16
Specifications	17

Thank you for deciding to use this Blaupunkt product. We hope you enjoy using this new piece of equipment.

Before using the device for the first time, please read these operating instructions. The Blaupunkt editors are constantly working on making the operating instructions clearer and easier to understand. However, if you still have any questions on how to operate the unit, please contact your dealer or the telephone hotline for your country. You will find the hotline telephone numbers printed at the back of this booklet.

The GTP 01-MP3 is an MP3 player that plays MP3 music files saved on Multi-Media Cards (MMC).

MMCs (possible sizes: 8/16/32/64 MB) are not included.

MP3 is a process developed by the Fraunhofer Institute for compressing CD audio files. Compression allows data to be reduced to around 15% of their original size without a noticeable loss in quality (at a bitrate of 192 Kbit/s). If a lower bitrate is used to convert CD audio data to MP3, you can create smaller files but there will be a loss of quality.

Inserting batteries

The GTP 01-MP3 runs on two AAA-size 1.5 V batteries (not included).

To open the battery compartment on the back of the GTP 01-MP3,

- gently press the arrow symbol on the battery compartment cover ⁽¹⁵⁾ and slide it towards the top end of the unit.
- insert two AAA-size 1.5 V batteries as indicated by the symbols in the battery compartment.
- slide the battery compartment cover from the top of the unit into the guide until it clicks into place.

Note:

To avoid damaging the GTP 01-MP3, please observe the following:

- Always replace both batteries at the same time.
- Remove the batteries if you are not using the GTP 01-MP3 for a longer period of time.
- Remove the batteries as soon as they are drained.
- Battery fluid escaping from totally discharged batteries is damaging to health and the environment.

Environmental advice:

- Please take discharged batteries to a collection point where they will be disposed of properly. Old batteries do not belong in your household refuse bin.

OPERATION

Connecting headphones

A pair of stereo headphones is supplied with the unit.

- ⇒ Connect the headphones by carefully inserting the headphone plug into the headphone jack (3) until it reaches its end position.

Switching on/off

- ⇒ To switch the unit on, press button (1).

The unit switches on. Playback begins with the first track on the MMC.

- ⇒ To switch the unit off, press button (1) for longer than two seconds.

The unit switches off.

Securing the unit (HOLD)

You can prevent the unit's controls from accidentally being operated, e.g. by other objects in your pocket.

To activate the HOLD function,

- ⇒ press the **HOLD** button (2) for longer than two seconds.

„HOLD“ appears in the display. If you now press a button, „HOLD“ will appear in the display. If you want to operate the unit again, you must first deactivate the HOLD function.

To deactivate the HOLD function,

- ⇒ press the **HOLD** button (2) for longer than two seconds.

„HOLD“ disappears from the display.

Adjusting the volume

You can adjust the volume from 0 to 30. To increase the volume,

- ⇒ press the **UP** button (13).

To decrease the volume,

- ⇒ press the **DOWN** button (14).

Inserting/removing an MMC

To avoid damaging the MMC, you should only change the MMC whilst the unit is switched off.

To insert an MMC,

- ⇒ hold the MMC with its printed side uppermost and gently slide it (whilst keeping it straight) into the MMC slot (8) until it reaches its end position.

To remove an MMC,

- ⇒ hold the MMC by your fingertips and pull it straight out of the MMC slot (8).

Selecting tracks

- ⇒ Press the << button (5) to select the previous track.

If you press the << button (5) once, the current track will be played again from the beginning.

- ⇒ Press the >> button (11) to select the next track.

Fast Search (Audible)

To search rapidly backwards or forwards

- ⇒ Hold down one of the <> buttons (10) until fast searching begins.

Repeating tracks (REPEAT)

Repeating a track

If you want to repeat a track,

- ⇒ press the **RPT** button (12).

„RPT“ appears in the display. The track is repeated until you cancel the repeat function.

Repeating the whole MMC

If you want to repeat the whole MMC,

- ⇒ dpress the **RPT** button (12) twice.

„RPT“ and „ALL“ appear in the display. The MMC is repeated until you cancel the repeat function.

Cancelling REPEAT

If you want to cancel the repeat function,

- ⇒ keep pressing the **RPT** button (12) until „RPT“ disappears from the display.

Normal playback is then resumed.

Repeating an excerpt from a piece of music (A – B)

You can define and repeat any excerpt you like from a piece of music.

- ⇒ Press the **A – B** button (4) at the beginning of the required excerpt.

„A –“ appears in the display.

- ⇒ At the end of the required excerpt, press the **A – B** button (4) again.

„A – B“ appears in the display. The excerpt that you selected between the two button presses will be repeated until you cancel the function.

Cancelling A – B

- ⇒ Press the **A – B** button (4) again.

Normal playback is then resumed, and „A – B“ disappears from the display.

Briefly playing all tracks (INTRO)

You can briefly play all the tracks on the inserted MMC for 10 seconds (INTRO scan function).

To activate the INTRO function,

- ⇒ press the **INT** button (6).

„INT“ appears in the display. The current track continues to play for another 10 seconds. Afterwards, all the tracks will be intro-scanned for 10 seconds in ascending order until you cancel the INTRO function.

OPERATION

INTRO function, continuing listening to a track

If you want to continue listening to a track on the MMC that is currently being intro-scanned,

⇒ press the **INT** button (6).

„INT“ disappears from the display.

Pausing playback (PAUSE)

If you want to pause playback,

⇒ press button (7).

„PAUSE“ appears in the display.

Resuming playback

If you want to resume playback,

⇒ press button (7).

Adjusting the audio settings

Adjusting the treble

To optimise the sound, you can set the treble to a value between -9 and +9.

⇒ Press the **SEL** button (10) twice.

„TREBL“ and the value that is set appear in the display.

⇒ Press the **UP** (13) or **DOWN** (14) button to increase/decrease the value.

When you have finished making your changes,

⇒ wait 5 seconds for the settings to be saved

or

⇒ press the **SEL** (10) button if you want to adjust the bass. The settings are saved.

Adjusting the bass

To optimise the sound, you can set the bass to a value between -9 and +9.

⇒ Press the **SEL** button (10) three times.

„BASS“ and the value that is set appear in the display.

⇒ Press the **UP** (13) or **DOWN** (14) button to increase/decrease the value.

When you have finished making your changes,

⇒ wait 5 seconds for the settings to be saved.

Bass control:	100 Hz (+/- 10 dB)
Treble control:	10 kHz (+/- 10 dB)
Frequency response:	20 - 20,000 Hz
Dimensions (LxBxH):	91 x 53 x 22 mm

Headphones connection

Operation with two AAA batteries

(Micro batteries, not included)

Operation with MMC cards

(8/16/32/64 MB, not included)

Includes:

GTP 01-MP3, headphones, carrying strap, operating instructions.

Optional:

MultiMediaCard Reader, MMC Driver 01, for fast and convenient data transfer between the MMC and your computer.

Subject to technical modification!

**Service-Nummern / Service numbers / Numéros du service
d'assistance téléphonique / Numeri del servizio di assistenza /
Servicenummers / Telefonnummer för service / Números de
servicio / Números de serviço / Servicenumre**

Country:		Phone:	Fax:	WWW:
Germany	(D)	0180-5000225	05121-49 4002	http://www.blaupunkt.com
Austria	(A)	01-610 390	01-610 393 91	
Belgium	(B)	02-525 5454	02-525 5263	
Denmark	(DK)	44 898 360	44-898 644	
Finland	(FIN)	09-435 991	09-435 99236	
France	(F)	01-4010 7007	01-4010 7320	
Great Britain	(GB)	01-89583 8880	01-89583 8394	
Greece	(GR)	0800-550 6550	01-576 9473	
Ireland	(IRL)	01-4149400	01-4598830	
Italy	(I)	02-369 6331	02-369 6464	
Luxembourg	(L)	40 4078	40 2085	
Netherland	(NL)	023-565 6348	023-565 6331	
Norway	(N)	66-817 000	66-817 157	
Portugal	(P)	01-2185 00144	01-2185 11111	
Spain	(E)	902-120234	916-467952	
Sweden	(S)	08-7501500	08-7501810	
Switzerland	(CH)	01-8471644	01-8471650	
Czech. Rep.	(CZ)	02-6130 0441	02-6130 0514	
Hungary	(H)	01-333 9575	01-324 8756	
Poland	(PL)	0800-118922	022-8771260	
Turkey	(TR)	0212-3350677	0212-3460040	
USA	(USA)	800-2662528	708-6817188	
Brasil (Mercosur)	(BR)	+55-19 3745 2769	+55-19 3745 2773	
Malaysia (Asia Pacific)	(MAL)	+604-6382 474	+604-6413 640	

Blaupunkt GmbH