


Cat. No. 49-810

OWNER'S MANUAL

RS-1000 AUTO SECURITY ALARM SYSTEM

Read this entire manual *before* you begin installation.

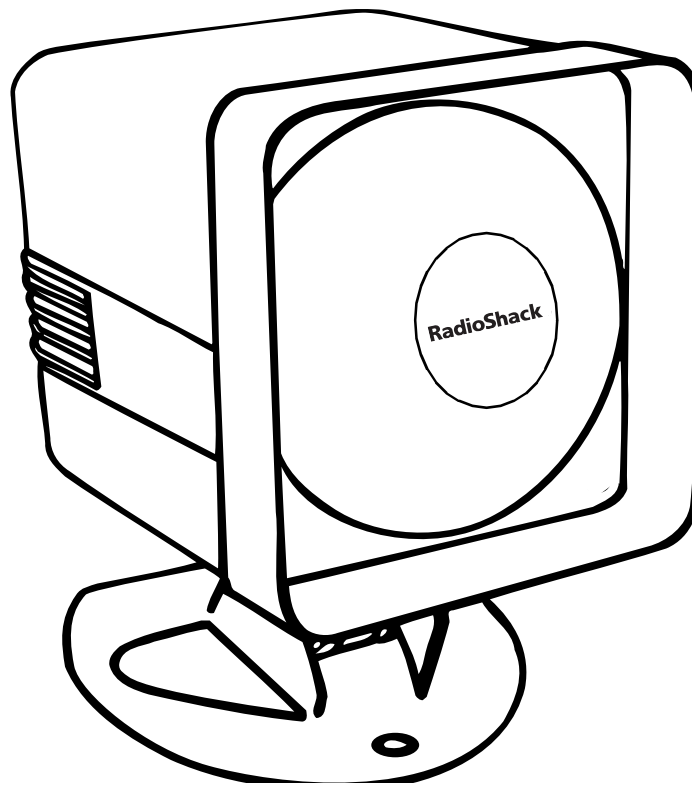

RadioShack™

FEATURES

Your RS-1000 Auto Security Alarm System warns away potential thieves and alerts you to trouble by sounding a piercing alert tone. It also includes advanced features that help protect your vehicle from theft, yet let you install it in minutes. The convenient key-chain remote control lets you arm and disarm the system, sound a panic alert, or activate the car locator feature when you are away from your vehicle.

Your RS-1000 includes these features.

Passive Arming — automatically arms the system after you exit the vehicle. This might qualify you for a discount on your vehicle insurance premium. See your insurance agent for details.

Electronic Dual-Stage Shock Sensor — sounds a pre-alert warning the first time someone strikes your vehicle, then sounds the alert if it is hit again within 30 seconds.

Current Sensing System — triggers the alert when a door or trunk is opened and the vehicle's dome or trunk light turns on or when your vehicle is hot wired, by sensing the current draw.

Current Sensor Bypass — lets you turn off current sensing if other electronic devices in your vehicle (such as a high-power audio system or cellular phone) make your alarm sound false alerts.

Piercing, 115 dB Siren — loud enough to be heard from hundreds of feet away.

Easy-to-Use Keychain Remote — lets you easily control your alarm from a distance.

Car Finder — lets you make the alarm sound beep to help you find your vehicle in a crowded parking lot.

Instant Panic Alarm — alerts others nearby that you need assistance when you are in or near your vehicle.

Valet Mode — lets you easily prevent passive arming when the vehicle is being serviced, valet parked, or washed.

Violation Confirmation — beeps three times when you disarm the system after the alert has sounded to let you know what happened while you were away from the vehicle.

Programmable Options — let you customize several of your alarm's options.

© 1996 Tandy Corporation.
All Rights Reserved.

RadioShack is a trademark used by Tandy Corporation.

Computer-Controlled Fan Sensor

— can tell the difference between your vehicle's dome or trunk light and an electric cooling fan (which can make other alarms sound a false alert) without using additional wiring.

Toll-Free Help — if you have any questions about or problems with your alarm system, just call:

1-800-598-2527

Warning: Your alarm system's alerts are painfully loud. Take care during installation to keep your head away from the system once you connect power.

FCC INFORMATION

Your alarm system might cause TV or radio interference even when it is operating properly. To determine whether your system is causing the interference, move your vehicle out of the area. If the interference goes away, your alarm system was causing the interference. Try to eliminate the interference by:

- Keeping your system away from the receiver
- Contacting your local RadioShack store for help


CONTENTS

| | |
|---|-----------|
| Installing the System | 5 |
| Supplied Items | 5 |
| Installation Checklist | 6 |
| Mounting the System | 6 |
| Connecting the System to Power | 7 |
| Activating the Remote Control | 7 |
| Using the Alarm System | 8 |
| Setting the System's Options | 8 |
| Setting the Shock Sensor's Sensitivity | 8 |
| Setting the Current Sensor | 8 |
| Setting the Valet Mode | 9 |
| Arming the Alarm | 9 |
| Temporarily Reducing the Shock Sensor's Sensitivity | 9 |
| Sounding the Panic Alarm | 9 |
| Alarm Violations | 10 |
| Disarming the System | 10 |
| Using the Car Finder | 10 |
| Troubleshooting | 11 |
| Replacing the Fuse | 13 |
| Replacing the Remote Control's Battery | 13 |
| Care and Maintenance | 14 |
| Specifications | 15 |


INSTALLING THE SYSTEM

SUPPLIED ITEMS

Your alarm system includes the following items:

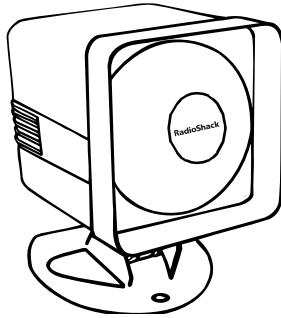

Main System

 

Remote Control



Mounting Screws

INSTALLATION CHECKLIST

You can install your system in just three easy steps:

1. Mount the system.
2. Connect the system to power.
3. Train the remote control.

MOUNTING THE SYSTEM

Select a location for your alarm system in the engine compartment. For the best results, the location should meet the following conditions.

- All wires should reach their connections without going near moving or hot engine parts.

Note: If necessary, you can extend the wires using hook-up wire and butt connectors. Use at least 18-gauge wire and an insulated wire connector to extend a wire.

- The mounting location should be solid and have no mechanisms or moving parts behind it.
- For the best remote range, the mounting location should allow the system's yellow antenna wire to hang straight down.

- For the loudest siren, the siren horn should point down toward the pavement.
- The alarm should not point straight up, as moisture could collect in the siren horn and damage the system.
- To prevent water damage, the system should not be mounted in a wheel well, directly behind the radiator grill, or close to the ground.

Once you select a location, follow these steps to mount the system.

1. Hold the system against the selected location and mark the locations of the three mounting holes.
2. Drill $\frac{1}{8}$ -inch holes at the marked locations, taking care not to drill into anything behind the mounting surface.
3. Secure the system to the surface using the supplied screws.

Note: For the shock-sensor to operate properly, you must use all three screws.

CONNECTING THE SYSTEM TO POWER

Warning: We recommend that you muffle the alarm's speaker before you connect the system to power. The alert is extremely loud.

Follow these steps to connect the system to power.

1. Connect the system's red lead to your vehicle battery's positive (+) terminal.
2. Connect the system's black lead to a metal part of the vehicle's body or to the battery's negative (-) terminal. The system beeps three times.

ACTIVATING THE REMOTE CONTROL

You must train the system to respond to the supplied remote control. To activate the remote control, immediately after applying power, press **DISARM** on the remote. The system beeps twice.

If the system loses power, the system stops responding to the remote. To reactivate it, simply press **DISARM** on the remote after power is restored.

Your system can learn two remote codes if you want to add a second remote control (RadioShack Cat. No. 49-845). To activate a second remote control code, be sure the system is disarmed, then hold down **ARM** for 10 seconds. The system beeps three times. Press **DISARM** on the new remote to activate it. The system beeps twice to confirm it has learned the new remote's code.

USING THE ALARM SYSTEM

SETTING THE SYSTEM'S OPTIONS

You can adjust the following options:

- Shock Sensor Sensitivity
- Current Sensor (On/Off)
- Valet Mode (On/Off)

Setting the Shock Sensor's Sensitivity

The shock sensor's initial setting is fine for most situations. To test the shock sensor, strike your vehicle on the hood directly over the alarm

If the shock sensor is too sensitive or not sensitive enough, follow these steps to set it to a different level.

1. With the alarm disarmed, hold down **FINDER** until the alarm sounds four tones.
2. Within 2 seconds, strike your vehicle with as much force as you want the alarm to respond to. The alarm sounds three tones. Any shock equal to or greater than the setting triggers the alert.

Notes:

- If you do not strike your vehicle within 2 seconds, the alarm is set to its highest sensitivity. This could cause frequent false alerts.

- The shock sensor does not operate for 8 seconds after the system is armed.

Setting the Current Sensor

If your vehicle has electronic accessories that turn on and off automatically while you are away from the vehicle, the alarm might sound false alerts.

Note: The system can detect an electric engine fan, and does not sound a false alert when the fan comes on.

To disable the current sensor, so accessories do not trigger an alert, disarm the system. Then hold down **PANIC** for about 2 seconds. The system chirps twice.

To re-enable the current sensor, with the system disarmed, hold down **PANIC** for about 2 seconds. The system chirps once.

Notes:

- The current sensor does not operate for 40 seconds after you arm the system.
- You can also try unplugging or disconnecting electronic accessories such as radar detectors or cellular phones when you leave your vehicle, instead of disabling the current sensor, to prevent the false alerts.

Setting the Valet Mode

The valet mode lets you leave your vehicle for service or with a valet and not have it passively arm. The default is for the valet mode to be on (passive arming is off).

To have your system passively arm 60 seconds after you turn off the engine, hold down **DISARM** for about 10 seconds. The system beeps twice.

To turn the valet mode on again (so the system does not passively arm), hold down **DISARM** for about 10 seconds. The system beeps three times.

ARMING THE ALARM

To arm the alarm, press **ARM**. The alarm chirps once.

Notes:

- The system ignores current-sensing violations for 40 seconds after you arm it.
- The system ignores shock-sensor violations for 8 seconds after you arm it.
- If the valet mode is turned off, the system arms 60 seconds after you turn off your vehicle.

Temporarily Reducing the Shock Sensor's Sensitivity

If you are parking in a severe weather situation, near a construction zone, or near heavy traffic, you can temporarily reduce the system's shock sensor sensitivity to help prevent false alerts. To reduce the sensitivity to half its normal level, first press **ARM** to arm the system. The alarm chirps once. Then, within 2 seconds, press **ARM** again. The alarm chirps once in a lower tone.

To completely turn off the shock sensor, press **ARM** two times within 2 seconds of arming. The alarm chirps in a lower tone each time you press **ARM**.

Note: When you disarm and re-arm the system, the shock sensor returns to its previous sensitivity setting.

SOUNDING THE PANIC ALARM

To sound a panic alarm, press and release **PANIC**. The alarm sounds loud tones for 30 seconds. Press any button to stop the panic alarm sooner.

ALARM VIOLATIONS

Your alarm senses violations by monitoring your vehicle's electrical system (current sensing) and by detecting impacts (shock sensing).

An alert sounds immediately if the current sensor detects an electrical drain such as occurs when a dome or trunk light turns on.

The first time the alarm senses an impact that exceeds its sensitivity level, it chirps three times. If it senses another impact within 30 seconds, the system sounds a full alert.

Note: If an impact is severe or if the shock sensor's sensitivity is too high, a single impact can cause a full alert to sound, without giving a warning.

When your alarm senses a violation, it sounds extremely loud tones for 30 seconds and then re-arms. To silence the alert sooner, press any button.

DISARMING THE SYSTEM

To disarm the system, press **DISARM**. The system confirms that it is disarmed by chirping twice.

Notes:

- If the valet mode is turned off, the system chirps and re-arms after 1 minute if you have not started the vehicle.
- If the system detected a violation while you were away, it chirps three times when you disarm it.

USING THE CAR FINDER

The car finder helps you find your vehicle in a dark or crowded parking lot. To use the car finder, with the system armed, press **FINDER**. The alarm chirps four times.

TROUBLESHOOTING


This section describes some problems you might encounter, and gives possible solutions.

| Problem | Possible Solution |
|-------------------------------------|---|
| Frequent false alerts | <ul style="list-style-type: none"> • Another accessory is triggering the alarm. Try turning off current sensing to see if this solves the problem. If it does, try removing other accessories, one-by-one, until you find which accessory is triggering the false alert. If possible, turn off that accessory when you leave your vehicle. Common problem accessories are cellular phones, radar detectors, and vehicle self-test systems. If you cannot turn off the accessory, leave current sensing disabled. <p>Note: Your alarm can tell the difference between the vehicle's electric fan and other accessories, so the fan does not trigger a false alarm if it turns on while the system is armed.</p> <ul style="list-style-type: none"> • Your alarm's electrical connections are not making good contact. Check the connections and, if necessary, connect the power and ground leads to the vehicle's battery terminals. • The shock sensor is too sensitive. See "Setting the Shock Sensor's Sensitivity" on Page 8 to change the sensor's setting. • Loud thunderclaps and heavy machinery can trigger a false alarm. If you know a thunderstorm is approaching or that heavy machinery will be used nearby, you can temporarily reduce the shock sensor's sensitivity or turn it off entirely. See "Temporarily Reducing the Shock Sensor's Sensitivity" on Page 9. |
| The alarm is not loud enough | <ul style="list-style-type: none"> • The siren is being muffled by the engine or hood. Try repositioning the siren so it points to the pavement. |

| Problem | Possible Solution |
|--|---|
| Alarm does not operate | <ul style="list-style-type: none"> • Check all power connections. • Check the system's fuse. If it has blown, see "Replacing the Fuse" on Page 13. • Check the remote control's battery. See "Replacing the Remote Control's Battery" on Page 13. |
| Alarm does not sound when it should | <ul style="list-style-type: none"> • The shock sensor is not sensitive enough. See "Setting the Shock Sensor's Sensitivity" on Page 8. If you set the shock sensor to its maximum sensitivity and the alarm still does not sound, confirm that you mounted the alarm on a solid, metal vehicle part (not on the frame or on rubber or plastic parts). If necessary, reposition the alarm for better performance. • If you have a large vehicle, the shock sensor might not detect impacts on parts of the vehicle far from the system. Remember that most thieves break into your vehicle through one of the front doors or windows. If you set the system sensitive enough to detect all impacts, you might experience frequent and annoying false alarms. • Confirm that you have not accidentally disabled current sensing. See "Setting the Current Sensor" on Page 8. |
| The remote control's range is poor | <ul style="list-style-type: none"> • The antenna wire is too close to metal. Try to position the yellow antenna wire away from metal. • The antenna wire has been cut or extended. Do not modify the antenna wire. It is factory tuned for the best performance (a longer antenna will actually not work as well as the short included antenna wire). If the wire has been cut, take the system to your local RadioShack store for repair service. |

REPLACING THE FUSE

Follow these steps to check the system's fuse and replace it if it has blown. The system uses a 5-amp $1\frac{1}{4} \times \frac{1}{4}$ -inch fast-acting fuse (RadioShack Cat. No. 270-1011).

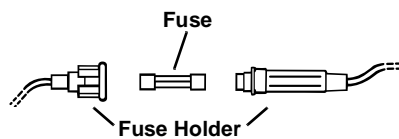


1. Push together the two halves of the inline fuse holder (on the red power wire) and twist them to separate the halves.
2. Inspect the fuse. If the wire is broken or missing, replace the fuse.

Caution: Use only a fuse of the same type and rating. Using a different type of fuse or bypassing the fuse protection can damage your alarm or your vehicle's electrical system.

3. Put the new fuse in the holder and push and twist the holder's halves together.

REPLACING THE REMOTE CONTROL'S BATTERY

If your remote control's range is reduced or if the indicator does not light when you press a button, replace its battery. The remote control uses a 12-volt remote control battery (Cat. No. 23-144). Follow these steps to replace the battery.

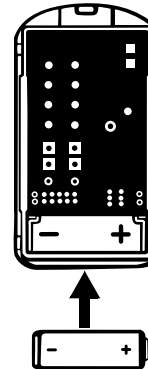

1. Snap apart the remote control's case.

Caution: Take care not to lose any of the remote control's pieces.

2. Replace the battery with a new one.
3. Put all parts back in place and snap the case halves back together.

CARE AND MAINTENANCE

Your RadioShack RS-1000 Auto Security Alarm System is an example of superior design and craftsmanship. The following suggestions will help you care for the alarm so you can enjoy its protection for years.



Keep the remote control dry. If it gets wet, wipe it dry immediately. Liquids can contain minerals that might corrode the electronic circuits.



Handle the alarm and remote control gently and carefully. Dropping them can damage circuit boards and cases and might make them work improperly.



Use and store the remote control only in normal temperature environments. Temperature extremes can shorten the life of electronic devices, damage batteries, and distort or melt plastic parts.



Keep the remote control away from dust and dirt, which can cause premature wear of parts.



Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the alarm.



Use only a fresh battery of the recommended size and type in your remote control. An old or weak battery can leak chemicals that can damage your remote control's internal circuits.

Modifying or tampering with your alarm's internal components can cause a malfunction and might invalidate the alarm's warranty and void your FCC authorization to operate it. If your alarm is not operating as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

| | |
|--------------------------------|---|
| Siren Sound Level | More than 115 dB at 1 Meter |
| Current Drain | 22 mA (Standby) 1 Amp (Siren Sounding) |
| Power Requirements | 9–16 Volts DC |
| Alarm Weight | 7.9 oz |
| Remote Carrier Frequency | 303.875 MHz |
| RF Output Power | 5,580 μ V at 1 Meter |
| Remote Control Power | 12-Volt Alkaline Battery |
| Remote Weight | 1.1 oz (with Battery) |

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

RadioShack Limited Warranty

This security product is warranted against manufacturing defects in material and workmanship for ninety (90) days from the date of purchase from RadioShack company owned stores and authorized RadioShack franchisees and dealers. Within this period RadioShack will repair the security product without charge for parts and labor. Simply **bring your RadioShack sales slip** as proof-of-purchase date to any RadioShack store.

This warranty does not cover damage or failure caused by or attributable to Acts of God, abuse, misuse, improper or abnormal usage, faulty installation, improper maintenance, lightning or other incidence of excess voltage, or any repairs other than those provided by a RadioShack Authorized Service Facility, or transportation costs. **RadioShack is not responsible or liable for indirect, special, or consequential damages arising out of or in connection with the use or performance of the product or other damages with respect to loss of property, loss of revenues or profit, or costs of removal, installation or reinstallation.**

EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not allow the limitation or exclusion of incidental or consequential damages and some states do not allow limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser. There will be charges rendered for repairs to the product made after the expiration of the aforesaid ninety (90) day warranty period.

This warranty gives you specific legal rights and you may have other rights which vary from state to state.

We Service What We Sell

10/95

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

10/96

Printed in the USA