

© Vodafone Group 2009. Vodafone and the Vodafone logos are trade marks of the Vodafone Group. Any product or company names mentioned herein may be the trade marks of their respective owners.



User Manual Vodafone 541



Introduction.....

TCT Mobile Limited would like to thank you for purchasing this mobile phone.

Power media applications

- Music player & Radio
- Video
- Webcam

The 1.3 Megapixel camera is the best companion for PC instant messaging.

Bluetooth

With Bluetooth 2.0 supporting A2DP profiles, enjoy handsfree conversations.

Table of contents

Product Safety Information.....	6
1 Your mobile	15
1.1 Keys&touch area.....	16
1.2 Main screen icons.....	17
2 Getting started.....	19
2.1 Set-up	19
2.2 Power on your phone.....	21
2.3 Power off your phone	21
3 Operable Bar Introduction in idle interface	22
3.1 Operable Bar information.....	22
4 Calls	23
4.1 Making a call.....	23
4.2 Calling your voicemail	24
4.3 Receiving a call.....	24
4.4 During a call.....	25
4.5 Conference calls	26
4.6 Line switching	26
5 Menu switch	27
6 Messages	28
6.1 Messages: Text/Multimedia message.....	28
6.2 Voice message	30
6.3 Photo message.....	31
6.4 Voicemail.....	31
6.5 Settings.....	31

7	Contacts.....	33
7.1	Consulting your contacts list.....	33
7.2	Adding a contact.....	34
7.3	Available options.....	35
8	Call register.....	37
8.1	Call memory.....	37
8.2	My numbers.....	37
8.3	Billing.....	37
8.4	Call settings.....	38
9	Media applications.....	40
9.1	Music player.....	40
9.2	Image Viewer.....	42
9.3	Radio.....	42
10	Internet.....	44
10.1	Web.....	44
10.2	Weather.....	45
11	Fun.....	46
11.1	EBook.....	46
11.2	Java.....	46
12	Camera.....	48
12.1	Access.....	48
12.2	Camera.....	48
12.3	Video.....	50
13	Profiles.....	51
13.1	General.....	51
13.2	Silence.....	52
13.3	Outdoor (loud).....	52
13.4	Meeting.....	52
13.5	Flight mode.....	52

14	File manager.....	53
14.1	My audios.....	53
14.2	My images.....	53
14.3	My videos.....	54
14.4	My pictures.....	54
14.5	Unknown files.....	54
14.6	Ebook.....	54
14.7	Memory card.....	54
14.8	Managing audios, images, videos and pictures.....	55
14.9	Formats and compatibility.....	57
14.10	Memory status.....	57
15	Bluetooth.....	58
16	Others.....	60
16.1	Calendar.....	60
16.2	Calculator.....	60
16.3	Notes.....	61
16.4	Clock.....	61
17	Settings.....	63
17.1	Touch Settings.....	63
17.2	Display.....	63
17.3	Languages.....	65
17.4	Headset mode.....	65
17.5	Screen lock.....	65
17.6	Numeric keys.....	65
17.7	Input mode.....	66
17.8	Vocabulary.....	66
17.9	Security.....	66
17.10	Networks.....	67
17.11	Connectivity.....	67

18	Making the most of your mobile.....	68
18.1	PC suite	68
18.2	Webcam.....	68
19	Latin input mode/character table	69
20	Telephone warranty	72
21	Accessories	74
22	Troubleshooting.....	75

Product Safety Information.....

Pictograms and Graphic Symbols



Read the Safety Information section of this user guide on page 7



Do not use while re-fuelling



Do not use hand-held while driving



This device may produce a bright or flashing light



For body-worn operation maintain a separation of 1.5 cm



Do not dispose of in a fire



Small parts may cause a choking hazard



Avoid contact with magnetic media



This device may produce a loud sound



Avoid extreme temperatures



Keep away from pacemakers and other personal medical devices



Avoid contact with liquid, keep dry



Switch off when instructed in hospitals and medical facilities



Do not try to disassemble



Switch off when instructed in aircrafts and airports



Do not rely on this device for emergency communications



Switch off in explosive environments



Only use approved accessories

Product Safety Information

• RF Exposure

General Statement on RF energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.545 W/kg ⁽¹⁾. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide ⁽²⁾.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

Body worn operation

Important safety information regarding radiofrequency radiation (RF) exposure.

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 1.5 cm separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits. "The highest SAR value for this mobile phone when tested for use at the body and compliance against the standard is 0,769W/kg. While there may be differences between the SAR levels on various phones and at various positions, they all meet the relevant International guidelines and EU requirements for RF (radio-waves) exposure"

Limiting exposure to radio frequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organisation (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.

⁽¹⁾ The tests are carried out in accordance with IEC standard POT62209-1.

⁽²⁾ Please see page 7 about body worn operation.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> WHO Fact sheet 193: June 2000.

Regulatory information

The following approvals and notices apply in specific regions as noted.

EC declaration of conformity / Déclaration de conformité CE

Product / Produit : GSM dual band handheld station with bluetooth technology and FM radio /
Portatif GSM b bande avec technologie Bluetooth et radio FM

Product identification / Identification du produit :
Vodafone 541 type OT-MINI

We / Nous TCT Mobile Europe SAS
165 boulevard de Valmy
92707 Colombes Cedex
FRANCE

declare under our sole responsibility that the product above mentioned is conform to the applicable essential requirements of the directive 1999/5/EC and that all essential radio test suites have been carried out. Conformity assessment procedure : annex III of the directive.

déclarons sous notre entière responsabilité que le produit ci-dessus est en conformité avec les exigences essentielles applicables de la directive 1999/5/CE et que toutes les séries d'essais radio essentielles ont été effectuées. Procédure d'évaluation de conformité : annexe III de la directive.

Applied standards / Normes appliquées :

- Item 3.1.a (protection of the health and of the safety of the user) / Article 3.1.a (protection de la santé et de la sécurité de l'utilisateur)
 - EN 60 950-1 (2006)
 - EN 50 360 (2001)
 - Council recommendation 1999/519/EC (July 99)
- Item 3.1.b (protection requirements with respect to electromagnetic compatibility) / Article 3.1.b (exigences de protection en ce qui concerne la compatibilité électromagnétique)
 - EN 301 489-1 v.1.8.1 (2008-04)
 - EN 301 489-7 v.1.3.1 (2005-11)
 - EN 301 489-17 v.1.3.2 (2008-04)
- Item 3.2 (effective use of spectrum so as to avoid harmful interferences) / Article 3.2 (utilisation efficace du spectre radioélectrique de façon à éviter les interférences dommageables)
 - EN 301 511 v.9.0.2 (2003-03)
 - EN 300 328 v.1.7.1 (2006-10)
- This product also conforms to the applicable requirements of the directive 2004/108/EC (electromagnetic compatibility). / Ce produit est en conformité avec la directive 2004/108/EC (compatibilité électromagnétique)
 - EN 55013:2001 A2:2006
 - EN 55020:2007

Date :
Signature

06/02/2009

Christophe Benoit
TCT Mobile Europe SAS Operations Director duly authorized

• Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) causes distraction and can lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

• Product Handling

General Statement on handling and use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorised personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum -10 and maximum +50 degrees Celsius.
- Please check local regulations for disposal of electronic products.

Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.

Demagnetisation

 
To avoid the risk of demagnetisation, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic discharge (ESD)

Do not touch the SIM card's metal connectors.

Antenna

Do not touch the antenna unnecessarily.

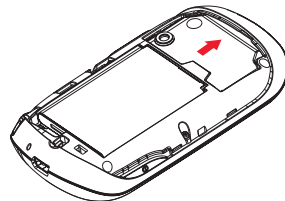

Normal use position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth or as you would a fixed line phone.



Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area. Store the phone safely before driving your vehicle.

Seizures/Blackouts

This phone is capable of producing bright flashing lights.

Repetitive Motion Injuries

To minimise the risk of RSI, when Texting or playing games with your phone:

- Do not grip the phone too tightly
- Press the buttons lightly
- Make use of the special features in the handset which minimise the number of buttons which have to be pressed, such as message templates and predictive text
- Take lots of breaks to stretch and relax

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud Noise

This phone is capable of producing loud noises which may damage your hearing. Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Use only headphones recommended.

Bright Light

This phone is capable of producing flash of light, do not use it too close to the eyes.

Phone Heating

Your phone may become warm during charging and during normal use.

• Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel must service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorised service centre.

Battery Handling & Safety

Always switch the device off and disconnect the charger before removing the battery.

Only use the battery and charger supplied, or manufacturer approved replacements intended for use with your phone. Using other batteries and chargers could be dangerous.

Do not disassemble or short-circuit the battery. Accidental short-circuiting can occur if a metallic object such as a key, paper clip, or pen touches the terminals of the battery.

Improper battery use may result in a fire, explosion, or other hazard. If you believe the battery has been damaged, do not use it, take it to a service centre for testing.

• Interference

General statement on interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby. The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft, if your device offers a 'flight mode' this must be enabled prior to boarding an aircraft.

Interference in cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna is included in the installation.

• Explosive environments

Petrol stations and explosive atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Turn off your mobile phone or wireless device when in a blasting area or in areas posted turn off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

Your telephone is a transceiver that operates on GSM networks with 900 and 1800 MHz bands.

CE 1588

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

• Protection against theft ⁽¹⁾

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering * # 0 6 # and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

• Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge.

All products with this sign must be brought to these collection points.

⁽¹⁾ Contact your network operator for service availability.

In non European Union jurisdictions:

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

• Licences

Obigo® is a registered trademark of Obigo AB.



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

OT-541 Bluetooth QD ID B015709



eZiText™
Zi corporation

eZiText™ and Zi™ are trademarks of Zi Corporation and/or its Affiliates.



Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Notice: Copyright © 2008 TCT Mobile Limited. All Rights Reserved

Your Vodafone 541 is made exclusively for Vodafone by TCT Mobile Limited.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of TCT Mobile Limited.


• Trademarks

VODAFONE and the Vodafone logos are trademarks of the Vodafone Group.

Notice: The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied. Please read the safety precautions carefully to ensure the correct and safe use of your mobile phone. For detailed information, refer to the section "Product Safety Information".

TCT Mobile Limited Address : TCT Mobile Europe SAS, 165, Boulevard de Valmy, 92707 Colombes, France. Website : <http://www.alcatel-mobilephones.com>

 1 Your mobile

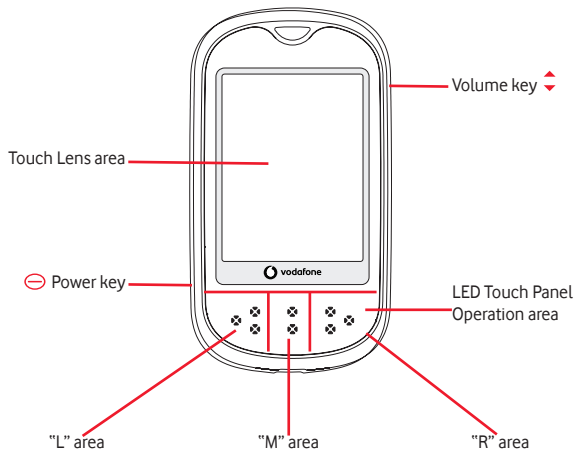

1.1 Keys&touch area

Power Key

- Switch on your telephone (long press)
- Pop up "**Profile Tab**" when your telephone is switched on (long press)
- Lock/unlock Touch area in idle interface (short press)
- Back to idle interface (short press)
- Hang up the call

Volume Key

- Volume control under Calling and Music player
- Switch 3 Icons Groups in main menu
- Zoom in or out in Camera mode
- Display the unlock confirmation screen








 







Touch Lens area

- Click the icon or menu on the screen to select and perform the related function
- In the Idle interface, items in left bar can be dragged and act as shortcut by short-press
- By sliding a finger on the touch sensitive area the user can select items on the Main menu and application tab.

LED Panel













- Slide from right to left to go back to the parent menu
- Slide from left to right to switch between the 3 main menu tab
- Click to active in certain interfaces (see "Addendum Input")

1.2 Main screen icons ⁽¹⁾

	Battery charge level.
	Vibrate alert: your phone vibrates, but does not ring or beep with the exception of the alarm (see page 51).
	Bluetooth status (Blue - Activated).
	Bluetooth status (Connected to an audio device).
	Headset connected.
	Keypad locked.
	Call forwarding activated: your calls are forwarded (see page 38).
	Alarm clock or appointment(s) (see page 61).
	Level of network reception.
	Voicemail message arrived.
	Unanswered calls.
	Radio is on.
	WAP alerts ⁽²⁾.
	Roaming.
	Memory card scanning in progress.

⁽¹⁾ The icons and illustrations in this guide are provided for informational purposes only.

⁽²⁾ Depending on your network operator.


	Memory card scanning completed.
	Line switching ⁽¹⁾: indicates the selected line.
	GPRS attached.
	GPRS connecting.
	Music player active.
	Message receipt in progress.
	Sending a message.
	Silence mode: your phone does not ring, beep or vibrate with the exception of the alarm (see page 52).
	Message unread.
	Message list is full: your phone cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.
	Flight mode.
	Bluetooth headset connected.

⁽¹⁾ Contact your network operator to check service availability.

2 Getting started


2.1 Set-up

 Removing or installing the back cover

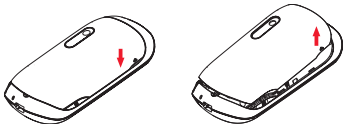

Inserting and removing the SIM card ⁽¹⁾

 
Please insert your SIM card to make phone calls.



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out. Please power off your phone before you remove the SIM card.


⁽¹⁾ Check with your network operator to make sure that your SIM card is 3V compatible. The old 5 Volt cards can no longer be used. Please contact your operator.

 Installing and removing the battery




Insert and click the battery into place, then close the telephone cover. Unclip the cover, then remove the battery.

 Charging the battery

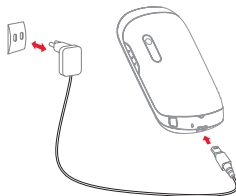


Connect the battery charger

- The charging may take about 20 minutes to start if the battery is flat.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).
- When using your telephone for the first time, charge the battery fully (approximately 3 hours). Keep terminal connected to charger until the  icon is shown.




The charge is complete when the animation stops. Only use manufacturer chargers.

2.2 Power on your phone

Hold down the  key until the telephone powers on, type in your PIN code if necessary. The main screen is displayed.



If you do not know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code with your telephone. Store this information in a safe place when not in use.

If cell broadcast messages are displayed, touch the screen to browse through them or press the power  key to return to the main screen.

While the phone is searching for a network, **"Searching/Emergency"** will be displayed.

In the power on screen, you also have access to the functions of **"Radio"**, **"Camera"**, **"Music player"**, etc. even if there is no SIM card inserted.

 
2.3 Power off your phone

Hold down the  key until the pop-up **"Profile tab"** appears, then select **"Power off"** and confirm.

3

Operable Bar Introduction in idle interface


3.1 Operable Bar information

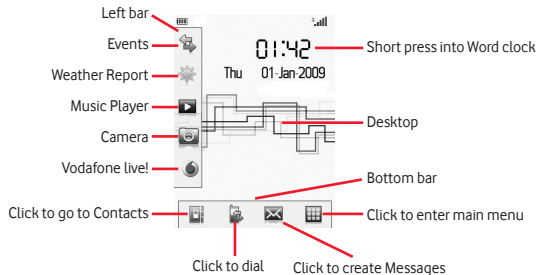

⁽¹⁾ Depending on local operator.

4 Calls

 4.1 Making a call

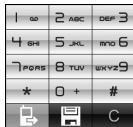

Dial

In Dial Interface, dial the desired number then press the key or click "L" area in Led area to place a call. If you make a mistake, you can delete the incorrect digits by pressing or "R" area. If you input some digits, press or "M" area to save the numbers. If you did not input any digital, press or "M" area to enter into Contacts.

To access the Dial interface quickly by clicking shortcut key in idle interface (short press Power key to go back to idle interface)

To access Call Log quickly by clicking "L" area or .

To hang up a call, press "Cancel" or click "R" Area.

To input "+/p/w", long press .

To input "0", short press .

To exit dial Interface, press .

Making an emergency call

If your phone has network coverage, dial emergency number and press the key to make an emergency call. This works even without a SIM card and without typing the PIN code ⁽²⁾.

4.2 Calling your voicemail ⁽¹⁾

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time. To access your voicemail, hold down key.

If the access number for your operator's voicemail service does not work, dial the number that you were given. To change this number at a later date, refer to "My numbers" (see page 37).





To use your voicemail service from abroad, contact your network operator before leaving.

4.3 Receiving a call

- When you receive an incoming call, the LED will flicker to notify you.
- When the phone is Locked, click the "Unlock" button. You can then click the "Answer" or "Reject" button to complete the operation in the touch screen. You can also click the "L" area to answer a call and "R" area to "Reject" a call.
- When the phone is unlocked you can use the answer or reject call buttons on the screen directly.

⁽¹⁾ Contact your network operator to check service availability.

⁽²⁾ Depends on local regulations.

If the  icon is displayed, the vibrator is activated and there is no ringtone. If the  icon is displayed, the phone does not ring or vibrate.



The caller's number is displayed if it is transmitted by the network ⁽¹⁾.

Muting the ringtone

Hold down the volume  key for Mute.

4.4 During a call

Available functions

During a call, you can press "**Options**" to use your contacts, diary, short messages etc. without losing your caller.

- Call on hold
- Ongoing call
- Handsfree


WARNING: move the handset away from your ear while using the "handsfree" option because the amplified volume might cause hearing damage.

- Contacts
- Messages
- Notes
- Services ⁽¹⁾
- Voice memo (record your current call).

You can switch the audio speech from handset to BT device when connected.

⁽¹⁾ Contact your network operator to check service availability.

Adjusting the volume

You can adjust the sound level during a call using the Volume  key.

Handling two calls

- Answering a second call (ensure that "**Call waiting**" is activated, see page 38).
- To call a second party during a call, dial the number directly.

4.5 Conference calls ⁽¹⁾

Your phone allows you to talk to several people at the same time (up to five). If you are on a two party call, press "**Options**" and select "**Conference**". If a third call comes in, answer it by pressing the "**Answer**" and speak with your new caller.

This caller becomes a member of the conference if you press "**Options**" and select "**Add to conference**". Pressing "**End**" disconnects the current call.

To end the conference call, press "**Options**" and select "**End conf.**".

4.6 Line switching ⁽¹⁾


Your SIM card can contain two distinct telephone numbers. Under "**Call register**", choose "**Line switching**" and then select a default line; all your outgoing calls will be made from this number. Incoming calls, however, will continue to use either of the two lines.



The services programmed on the default line do not impact those selected on the other line.

⁽¹⁾ Contact your network operator to check service availability.

5 Menu switch

Press the “R” area of the LED panel in idle interface to enter the main menu. The Main Menu consists of three icon groups. You can slide on LED panel or touch 3 dots in screen to switch main Menu. Press “M” area to back to idle Interface. You can also use the Volume  key to switch main Menu.

- **CENTER TAB**

- Messages
- Web
- Calendar
- Call register
- Profiles
- Notes

- **LEFT TAB**

- Filemanager
- Settings
- Services
- Calculator
- Clock
- Bluetooth

- **RIGHT TAB**

- Music player
- Radio
- Weather
- Camera
- Image viewer
- Fun

6 Messages.....



You can create, edit and receive SMS and MMS with this mobile phone.


MMS enables you to send images, photos, animations and sounds to other compatible mobiles.



The MMS function can only be used if the service is provided by your operator, and if your contract includes the MMS option and if all the parameters for MMS have been entered (see page 32).

6.1 Messages: Text/Multimedia message ⁽¹⁾

6.1.1 Create message

You can click  in idle interface to create a message. Or select “**Messages**” from the Main Menu to create text/multimedia messages.

An SMS will be converted to MMS automatically when images, audio, slides or attachments are inserted; the message contains more than 8 pages of text.

You can type a message, but you can also modify a predefined message in **Templates** or customise your message by adding pictures, photos, sounds, titles, etc. (only available while editing an MMS). While writing a message, select “**Options**” to access all the messaging options.

⁽¹⁾ Depending on your network operator.

You can save standard messages to **Drafts** or **Templates** (MMS only).



A SMS message of more than 160 characters (the number of characters depends on your language) will be charged as several SMS. A MMS message containing photos and/or sounds may also be billed as more than one message.

6.1.2 Inbox

All received messages (read and unread) are stored in the same Inbox.

When viewing your messages, you will find the following status icons, depending on the type of message: unread SMS in phone, unread SMS in SIM card, read SMS in phone, read SMS in SIM card, unread MMS in phone, read MMS in phone, message reception in progress and message sending in progress.

Receiving and reading SMS/MMS

When you receive a new message, a beep sounds and the icon showing the number of new messages will appear on the screen, The LED will also flicker.

Click the “**M**” icon to read your messages directly in the main screen.

Once you receive a message, the following options are given: **View**, **Reply**, **Forward** the message to another person, **Edit**, **Group by sender**, **Delete**, **Delete all**, **Move to archive** and extract number or URL (**Use number/Use URL**), etc.

Group by sender

Messages can be grouped by sender (“**Option/Group by sender**”). You are able to quick search the messages by pressing the key associated with the first letter of sender’s name.

Group unread message

Unread messages will always be positioned above the read messages.

6.1.3 Outbox

All messages failed to send.

6.1.4 Sent

All sent messages.

6.1.5 Drafts

All draft messages.

6.1.6 WAP Alerts

Store Web push messages.

6.1.7 Empty folder

Delete all messages in e.g. Inbox, Outbox or Sent.

6.1.8 Templates

A list of predefined messages is available. Select one, edit it if required, and then send it. You can also create your own predefined multimedia messages.

6.2 Voice message

Record voice and send as MMS.

6.3 Photo message

Take a photo and send as MMS.

6.4 Voicemail

View and edit the voice mail number.

6.5 Settings

6.5.1 Text message

- Profile settings** • Profiles can be retrieved directly from SIM card. Alternatively, you can create your own profile.
- General setting** • Delivery report, request for acknowledgement of delivery report On/Off. Reply path ⁽¹⁾ show reply path.
- Alphabet management** • Enables the definition of SMS data coding for SMS sending.
- Memory status** • Memory used on the phone.
- Preferred storage** • Select default message storage, SIM or phone.
- Pref. Bearer** • Bearer preference.

6.5.2 Multimedia message

- Edit** • Set edit mode, image size and signature.
- Sending** • Set the values for validity period, Read report, etc.
- Retrieve** • Set the values for Home network, Roaming network, etc.
- Profiles** • Follow the same procedure as for setting your Web connection.
- Memory status** • Memory used on the phone.

6.5.3 Broadcast SMS ⁽¹⁾

- Receive mode** • Enable to receive broadcast SMS.
- Languages** • Language selection.
- Channel setting** • Add/Edit channels.

⁽¹⁾ Depending on your network operator.

7 Contacts



7.1 Consulting your contacts list

In Idle interface, click  icon to access the **contacts list**.

You have 4 directories:



General



SIM directory



Phone directory



Group

In addition to the directories already provided, you can create up to 5 groups (maximum 100 entries per group).

Searching for a contact

You can search for a contact by multi-pressing the keys associated with the first letters and the other ones of their names.


Viewing a contact

Select a name from your contacts, then click to read the contact details.

Sending vCard via Bluetooth

Selecting the vCard you wish to transfer ("**Options\Send vCard\By Bluetooth**").

Making a call















Click "**Dial**" in "**Option**" list or click "**M**" area after selecting Name. If several numbers are associated with the name to be called, you must first choose the number from the list (Mobile, Home, Office, etc.) using the  key.




Information in the directory and the diary may be sent to and received from a computer using the PC suite.

7.2 Adding a contact

Select the contacts list in which you wish to add a contact to, press the "**Options**" softkey, select "**Add new**" then **OK**.

When you create a new contact in the product directory, at least one of the following fields must be filled in:  First name,  Last name,  Group,  Mobile,  Home,  Ringtone,  Image,  Video,  Work,  Fax,  Email,  Birthday,  Company,  URL.

You can move from one field to another using the  key.



If you use your phone abroad, store the numbers in your directories in international format "+" followed by the country code (see page 23).

7.3 Available options

From the list of names in SIM directory, General directory or Group you can access the following options:



- | | |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| View | <ul style="list-style-type: none">• View a complete contact: name, numbers, address, e-mail, etc. |
| New contact | <ul style="list-style-type: none">• Create a contact (name, numbers, address, e-mail, etc.) in the desired directory. |
| Dial | <ul style="list-style-type: none">• Make a call. |
| Create group | <ul style="list-style-type: none">• Create a group of contacts. |
| Send message | <ul style="list-style-type: none">• Send an SMS/MMS to a contact you selected from the directory. |
| Edit | <ul style="list-style-type: none">• Modify the contents of a contact: name, number, ringtone, image, etc. |
| Delete | <ul style="list-style-type: none">• Delete the selected contact. |
| Delete group | <ul style="list-style-type: none">• The group and its contacts will be completely deleted. |
| Default storage | <ul style="list-style-type: none">• Set default storage to store new contacts. |
| Set as My favorite | <ul style="list-style-type: none">• Set the number as your favourite, whose ringtone could be different. |
| Set ringtone | <ul style="list-style-type: none">• Set the number as your favourite whose ringtone you would like to be different. |
| Send vCard | <ul style="list-style-type: none">• Exchange data via SMS, MMS, Bluetooth or save to memory card. |

Manage contacts

- **Copy:** Copy a contact from SIM directory to phone directory and vice versa.
- **Copy all:** Copy all contacts to the SIM or General directory (only if there is sufficient memory).
- **Delete all:** Delete all contacts in the current directory.
- **My number:** Type in, modify or send the user's own number by SMS.
- **Memory status:** View used and available space in SIM status and Phone directory.
- **Display format:** Select the format for name display.



8.1 Call memory

You can access your call memory by clicking  from the main screen and click  or "L" area on LED area in dial interface. Choose the option of the desired list:



Unanswered calls



Outgoing calls (Redial)



Answered calls

Select a number from the call memory and press the "Options" softkey to **View** call details, **Create text/multimedia message**, **Save** or **Delete** the selected number or clear the entire list (**Delete all**).

8.2 My numbers

Type in or modify your telephone number or the number to access your voicemail and confirm by clicking. Your telephone number is usually written on your SIM card.

8.3 Billing

You can access different items with this option:

- | | |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Amount | <ul style="list-style-type: none"> You can view the total cost of charged calls, modify it or reset it and enter the cost of a Telecom Unit in the currency of your choice. |
| Duration | <ul style="list-style-type: none"> You can view the total duration of all outgoing calls or reset it. |
| GPRS counter | <ul style="list-style-type: none"> Management of the volume of data communications charged for (in kilobytes). |

Beep duration

- You can activate or cancel the beep emitted during a call with a specified frequency (enter the frequency and confirm by click).


8.4 Call settings ⁽¹⁾

8.4.1 Call waiting

Activate/deactivate the notification of a second incoming call by a beep.

8.4.2 Call forwarding

You can activate, cancel or verify the status of the call forwarding to the voicemail or to a specified number. The following configurations are possible:

- Unconditional: systematic forwarding of all your calls. The  icon is displayed.
- Conditional: if your line is busy, if you don't answer or if you are outside the network range.
- If busy, no reply or unreachable.

8.4.3 Call barring

You can activate or deactivate the call barring for outgoing and incoming calls. The various options are:

Outgoing calls

- | | |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> The following configurations are possible: All calls International calls International except home | <ul style="list-style-type: none"> All outgoing calls are barred. Outgoing international calls are barred. Outgoing international calls except those to your country of subscription are barred. |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

⁽¹⁾ Contact your network operator to check service availability.

- Incoming calls**
- The following configurations are possible:
 - All calls
 - All incoming calls are barred.
 - Roaming
 - Incoming calls are barred when you are abroad.
- Cancel all barring**
- Deactivate all call barring.
- Change barring PW**
- Change the original PW for activating call barring.

8.4.4 Caller ID

Set by network/Hide number/Send number.

8.4.5 Line switching ⁽¹⁾

Line switch between line 1 and line 2.

8.4.6 Auto redial

You can activate or deactivate the automatic callback of your party for calls that do not get through the first time.


⁽¹⁾ Depending on your SIM card.

9 Media applications.....

 
9.1 Music player ⁽¹⁾

Access this feature from the main menu by selecting "**Music player**". You will have full flexibility of managing music both on your mobile and memory card.

You can have access to your music files through one of the following:

- All songs**
 - Contains all songs both on phone memory and memory card.
- Folders**
 - Category of songs in folder.
- Update songs**
 - Update the information of songs saved in phone or memory card.
- Album/Artist/Genre**
 - Music files are categorized by Album, Artist or Genre based on information stored in the tags. Those missing such information will be classified as "**Unknown files**".
- My star list**
 - You can simply add your favorite songs to "**My star list**" by holding down  during playing music (max 100).

Use keys to manage Music player:

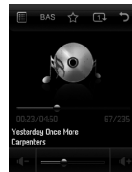

⁽¹⁾ Only music files in mp3 format will be visible in Music player.

The available options are:



Set volume level



Option menu of Music Player



Place the current song in my star list



Switch Equalizer



Change play mode



Back to parent menu




You also can manage Music player for **"Play/pause, forward/backward"** within LED area (see **"Addendum Input"**).


9.1.1 Settings

Access by clicking  for following options:

Play mode

- Normal, Repeat current, Repeat all, Shuffle and Repeat shuffle. You may also customise it by simply clicking  whilst playing music.

Equalizer

- Different music styles are preset in the phone. You may also customise them by simply clicking  whilst playing music.

Play in Bluetooth

- In play mode select to switch between play in speaker or play in BT stereo headset mode.

Display

- Enable your player to display song info. or lyric.

9.1.2 Playing with lyrics

Lyrics can be displayed in synchronization with the music.

9.2

Image Viewer



A library links to the pictures in **"My pictures"** and **"My images"** in phone to be shown in list, slide, or thumbnail, set as Wallpaper, Screen saver, Power on/off display, and Contact ID, or sent by MMS, Bluetooth.

9.3

Radio



Your phone is equipped with FM radio ⁽¹⁾ with RDS functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.



To use it, you must plug in your headset, which works as an antenna connected with your phone.

Available options:

Channel list

- Open the list of saved stations.

Save channel

- Save the current tuned station to the **"Channel list"**.

Auto search

- Start auto search and stations will be automatically saved to **"Channel list"**.

Enter the frequency

- Enter the frequency manually.

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.

- Turn off**
 - Stop playing the radio.
- Record**
 - Record the radio and files will be automatically saved to "Notes".
- Settings**
 - Use ◀ ▶ navigation keys to manage settings.
- Activate loudspeaker/Play in headset**
 - Listen to the radio using loudspeaker or headset.
- Activate mono mode/stereo mode**
 - Switch between mono and stereo mode.
- Update station name ⁽¹⁾**
 - Save RDS information as station name in the channel list.
- Optimise audio frequency**
 - Optimise the audio quality.

⁽¹⁾ Availability on RDS information detected.

10 Internet.....



10.1 Web

10.1.1 Homepage

Launch the Web browser with the homepage of the default profile.

10.1.2 Bookmarks

Access your favorite sites.

10.1.3 Go to URL

Enter the URL of Web site.

10.1.4 Open file

Open externally saved webpage files in File manager.

10.1.5 Recent pages

Pages which you recently browsed.

10.1.6 Offline pages


Pages available for offline viewing.

10.1.7 Profiles

Customise your Web access.

10.2 Weather ⁽¹⁾

Your phone is equipped with a weather function for consulting the forecast of favourite cities up to 3 days in advance.

To access this function, select  in main Screen.

You are able to **view** a list of cities, **add** or **delete** cities, or **set your favourite city**.

To view weather information for other cities. Press  key up or down.

To display today's weather information in full screen, Select "**View**" in "**Option**".

Available options:

- | | |
|------------------|-------------------------------------------------------------------------------------------------------------------------------|
| More info | • Search more weather info online. |
| Forecast | • Display 3-day weather forecast. |
| Update | • Refresh weather information. |
| My cities | • List all my cities, you can add new city, set default city, delete the selected city, etc via " My cities\Options ". |
| Settings | • Set unit, update mode and network. |

⁽¹⁾ May cause additional network charges for data flow to provide this service. Extra fees might also be charged in roaming states.

11 Fun.....



11.1 EBook

A bookshelf contains the electronic books (.txt and .pdb file only). While reading the book, you may add bookmarks, or reach the text by searching words, phrases (**Options\Search, Options\Jump to**).

Available options:

- | | |
|------------------------|----------------------------------------------------------------------|
| Open | • Open the current ebook |
| Book info | • Display the detailed info (title, size and format) about the book. |
| Delete | • Delete the current book. |
| Delete all | • Delete all the books. |
| Sort | • Sort the books by name, type, time or size. |
| Global settings | • Set the font, scroll mode, display format, storage, etc. |
| Help | • List all hotkeys. |

11.2 Java

11.2.1 Launch an application

Select "**Java**" to launch applications.

11.2.2 Java settings

The "**Java**" menu allows you to manage Java settings, in which you may set Java audio, vibration, network and identify how much Heap size is available.

11.2.3 Java downloading

You can download new Java™ applications in the “**Java**” menu by selecting “**Download**” from “**Options**”. The list of available Web bookmarks dedicated to the application download will then be displayed.

Select the appropriate bookmark for the desired Web page.

Disclaimer

Downloading or running applications will not damage or alter any software already in your mobile telephone designed to support Java™ technology.

TCT Mobile Limited and its affiliates waive any responsibility and refuse to guarantee applications that are subsequently used, as well as for all applications not embedded in the handset upon purchase.

The purchaser alone bears the risk of loss, damage or defect of the handset, or of applications/software, and generally of any damage or consequence resulting from the use of the said applications/software. In the event that the said applications/software, or the subsequent setup of any function are lost due to technical reasons resulting from the handset being replaced/repared, the mobile phone owner should repeat the operation and download or set up again. TCT Mobile Limited and its affiliates grant no guarantee and disclaim any responsibility if the operation cannot be repeated or cannot be performed without incurring some cost.

12 Camera.....

Your mobile phone is fitted with a camera for taking photos and shooting videos that you can use in different ways:

- store them in your “**File manager**”.
- send them in a multimedia message (MMS) to a mobile phone or an email address (except video).
- customise your main screen (see page 63).
- select them as incoming call image to a contact in your directory.
- transfer them by data cable or microSD card to your computer.
- modify your photos by adding frames (see page 50).

12.1 Access

Select  to access the function from main screen:

12.2 Camera


12.2.1 Take a photo, save or delete

The screen acts as the viewfinder. Position the object in the viewfinder and click “**M**” area (LED is lighting) or click viewfinder directly to take the picture and the pictures will be automatically saved. If you do not want the picture to be kept, you may directly delete it by click left softkey “**Delete**”.

12.2.2 Settings in framing mode

Before taking the photo, you can adjust a number of settings by using the following shortcuts:

 
Selected options bar:

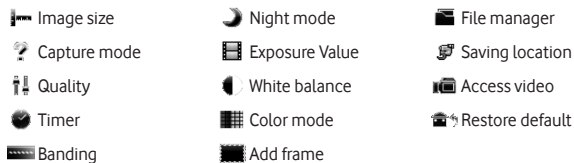

From the photo shot screen, press the “**Options**” softkey to access: “**Image size**”, “**Capture mode**”, “**Quality**”, “**Timer**”, “**Banding**”, “**Night mode**”, “**Exposure Value**”, “**White balance**”, “**Color mode**”, “**Add frame**”, in addition to the following:

- My pictures** • Go to the file manager feature.
- Saving location** • You may choose saving location if MicroSD card is inserted.
- Access Video** • Access Video recording mode.
- Restore default** • Restore all settings to default values.



Click  hide/unhide option bar, click icons to setting; click up/down arrow to switch setting icons.

12.2.3 Options available after taking the photo

Four transparent icons available on the photos for your selection:



: Send Messages



: Via Bluetooth



: Set contact image



: Set as Wallpaper

12.2.4 Modifying images

Access the “**File manager\My pictures**” after taking a photo, and then select “**Edit**”.

12.3 Video

You can record a video clip of unlimited length, as long as the battery sustains and there is sufficient memory.



We strongly advise you to change the default folder to “**Memory card**” to store your photos and videos.

12.3.1 Framing mode

When you enter the “**Video**” function, you are in Framing mode. Use the mobile screen as a viewfinder and press the “**Options**” softkey for the settings of **White balance**, **Exposure Value**, **Night mode**, **Banding**, **Quality**, **Record duration**, **Audio**, **Color mode**, **Saving location**, to access the “**File manager/My videos**”, and to restore default value.

12.3.2 Recording mode

Once you have chosen your settings, you can launch the recording of your video-clip by click “**M**” area (LED is lighting).



If you receive a call in recording mode, video recording will be stopped and a pop up message will inquire if you want to save it.

12.3.3 Playing mode


In the list of “**My videos**”, press “**Options**” to play the video.



13 Profiles.....

With this menu, you may personalise ringtones for different events and environments.


13.1 General

To modify the sound settings, press "**Options**" and select "**Edit**" and you will see the below functions using ◀ ▶:


 Select a melody from the list using the ◀ ▶ key then confirm by pressing **OK**.

 Mode (normal, discrete, vibrate....). You may set your phone ringtone to Normal, Discrete (ring with beep), Vibrate (all sounds are replaced by vibrations except for alarms), Vibrate and ring, Vibrate then ring, Beep and vibrate, Silence (no sounds except for alarms, the  icon will be displayed). Ringtones sound with increasing volume.

 Adjust the volume using the ◀ ▶ key.

 Select the type of key beep.

 Select a melody for a new incoming message.

 Select a melody for an alarm or appointment.

 Power on beep.

 Power off beep.

13.2 Silence

This profile will turn off all ringtones, even notification sounds.

13.3 Outdoor (loud)

It is a profile designed for outdoor users who requires louder ringtones.

13.4 Meeting

When activated your cellphone vibrates when a new event is due but the phone does not ring or beep with the exception of alarms.

13.5 Flight mode

Antenna off mode can be used to increase standby duration but you will have no voice call, Bluetooth or messaging functions.

14 File manager



You will have access to all audio and visual files stored in phone or memory card in File manager.

14.1 My audios

Choose an audio for the ON/OFF screen, for an incoming call, a message alert, power on/off ringtone or an alarm and scheduler.

The “**My audios**” album contains the following folders ⁽¹⁾:

- Music: full track music.
- Melodies: melodies that can be set as ringtone.
- Recorded: all recorded sounds.
- General: contains all audio files stored in phone or memory card.



DRM: Digital Rights Management feature allows sounds and images to be played while protecting the associated copyright. DRM counter-based files and files with expired rights will not be automatically played when scrolling the list.

14.2 My images

You can select an image or a photo as wallpaper, ON/OFF screen, or assign it to a contact in the directory.



The images will be displayed in alphabetical order.

⁽¹⁾ The embedded folder names cannot be modified. However, in certain cases, you can modify, delete and add items included in these folders.

14.3 My videos

The “**My videos**” album contains all video clips recorded by the user, originally embedded in the phone and downloaded to the phone or memory card.

Contains all video clips both in phone and memory card and enables you to **Play**, **Delete**, **Delete all**, **Rename**, **Sort** (by **name**, **type**, **time** or **size**) and **Copy** or **Move** the video/videos, and to **Download/Capture** new video clips.

14.4 My pictures

This feature stores all the photos captured by your mobile phone.

14.5 Unknown files

Store files of unsupported format.

14.6 Ebook

A bookshelf contains the electronic books (.txt and .pdb file only).

 
14.7 Memory card

You can access all files stored in memory card here.



When a memory card is inserted for the first time, it will be scanned and the default folders will be created.

Inserting or removing the memory card

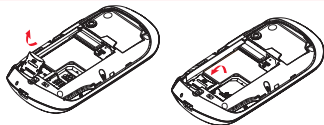

Remove back cover and battery, push outside and lift slot cover, put the MicroSD card into the slot as his shape, then lay down slot cover and push inside.

Available options

- New folder** • Create more folders.
- Delete folder** • Remove folders.
- Rename folder** • Edit folder's name.
- Empty folder** • Delete all files in one folder.
- Memory card** • To format or to query its memory status.

14.8 Managing audios, images, videos and pictures

According to the item chosen, you can access some of the functions below:

- View** • View the selected image. If you want to view all the pictures in your folder in a slideshow hold down ◀ ▶ on the current picture.
- Play** • Play the selected video.
- Send ⁽¹⁾** • Send the audio/image.

⁽¹⁾ Files marked with ⓘ cannot be sent.

Delete

- Delete the audio/image/video selected (not applicable for embedded items).

Set as

- - Image→wallpaper, screen saver, switch ON/OFF, assign it to a contact.
- - Sound→ringtone, message beep, switch ON/OFF, assign it to a contact.
- - Video→screen saver, switch ON/OFF or assign it to a contact.

Edit

- Modify an image ⁽¹⁾.

Download

- Download new items.

Rename

- Rename the audio/image/video.

Sort

- Sort the files by name, type, time and size.

Move to phone/ memory card

- Move a file from the product memory to the memory card and vice-versa.

Properties

- Display part of the ID3 Tag content of an MP3 file.

Activate

- DRM file option.

Copy to phone/ memory card

- Copy a file to the phone memory or the memory card.

Delete all

- Delete all the files except the embedded ones.

Capture

- Access "Camera" function directly.

Picture show

- Show pictures in list, slide, thumbnail view.

⁽¹⁾ Only applies to images that can be cleared but not for copyrighted files.

14.9 Formats and compatibility ⁽¹⁾

- Sounds: MP3, MIDI, WAV, AMR
- Images: JPG, GIF
- Videos: 3GP, M-JPEG

14.10 Memory status

Indicates how much space is used and how much is currently free on your phone and memory card (if any).

15 Bluetooth™

Access this feature by selecting "**Tools**" from the main menu, then "**Bluetooth**".

To use your phone with a Bluetooth device, you need to proceed in two steps:

- Pair and register the device to your phone,
- Select it to use hands-free communication. Only one Bluetooth audio device (your Bluetooth headset or your Bluetooth car kit) can be connected during the communication.

Pair and register your Bluetooth device

Activate the Bluetooth feature by selecting the "**Bluetooth\Activation\On**" option. Then enter the "**Device list**" menu to search for connectable Bluetooth devices and select the device you want to be paired with in the list. If the bluetooth device has no keyboard, enter its default password to register it with your phone. If the Bluetooth device has keyboard/keypad, enter the same set of password on both handset and the device to get it registered.

From the list, press the "**Options**" softkey to connect/disconnect, rename, search for new devices or delete an unconnected one from the list.



Don't forget to turn on your Bluetooth device and activate the pairing mode while pairing it with your phone.

Available functions

- Data transmit** • Exchange files with another bluetooth device.
- Handle a call** • Initiate or receive a phone call with a Bluetooth headset.
- Listen to music** • Support A2DP profile.

Settings

- **Visibility:** Select whether you want to hide ("**Hidden**") your phone or make it visible to all Bluetooth devices ("**Shown to all**").
- **My phone's name:** you may change your phone name, which is visible to the others.



Always activate Bluetooth in your phone first before connecting it to a Bluetooth device. Be aware that Bluetooth activation will slightly affect battery life of your phone.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within short range. Please make sure that the Bluetooth headset or the Bluetooth car kit and your mobile phone are in this range and is set to "**Visible**".

Your phone is Bluetooth™ v1.1, v1.2 and v2.0 compatible.

16 Others.....

16.1 Calendar


Once you enter this menu from the main menu, there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in color.


Available options:

- Create** • Create an appointment.
- View** • See today's appointments.
- appointments**
- List all appointments** • See all the created appointments.
- Jump to date** • Input the required date and it will be immediately highlighted.

16.2 Calculator

Access this feature by selecting "**Calculator**" from the main menu.

Enter a number, select the type of operation to be performed, and enter the second number, then press  key to display the result.

Once an operation is complete, you can select  to clear numbers and carry out a new operation.

To return to the main screen, click "**R**" area or slide from right to left on LED control panel.

16.3 Notes

You can create a note text or voice format by accessing “**Notes**” from the main menu.

Available options:

- | | |
|--------------------------------------|------------------------------------|
| Open | • Open and view note. |
| Send | • Send by SMS, MMS or Bluetooth. |
| New text note/
voice memo | • Add new text note or voice memo. |
| Delete | • Delete note. |
| Input mode | • Select input method. |
| Languages | • Select language. |

While recording a voice memo, you can define the audio format (AMR, WAV), Quality (High/Low), and Storage (Phone, memory card).

16.4 Clock

16.4.1 Alarm

Your mobile phone has a built-in alarm clock with a snooze feature. You can set up to five separate alarms and choose whether or not the alarm should repeat.

- | | |
|---------------|----------------------------------------------------------------------------------------|
| Repeat | • You may select Once (default)/Every day/Days. |
| Snooze | • The alarm will repeat at regular intervals. You may snooze it by shaking your phone. |

16.4.2 Clock

Allows you to display date and time settings including 12/24h format.

Also you can set the daylight saving adjustment.

16.4.3 World clock

The World clock shows current local time and the time in different cities. You may view up to 3 cities at one time (**Options\Set as my city**). Also, you can add a maximum of 10 new cities to the list (**Options\Add**).

17 Settings.....

From the main menu, select the menu icon  and select the function of your choice in order to customise your telephone.

17.1 Touch Settings

17.1.1 Touch calibration

You have two options: LED touch calibration & LCD touch calibration. To calibrate the touchscreen, click anywhere on the screen to start calibration.

17.1.2 Touch Vibration

You may choose "on/off" for vibration when you touch screen or LED area.

17.2 Display

17.2.1 Home screen display

Wallpaper

The wallpaper is displayed when you switch on your telephone.

By selecting "**Wallpaper**" you can customise it by replacing the default image or animation displayed on your telephone.



When you receive an event (incoming call, SMS/MMS, notifications, etc.) the icon, type and number of events will be displayed on your Widget Bar allowing you to consult them directly.

Screen saver

After timing, the screensaver is displayed then the screen is switch off (for autonomy' saving).

17.2.2 Power On/Off ⁽¹⁾

You can customise your welcome animation or image that appears when you switch on your phone.

You can also customise your OFF screen with an image or animation.

17.2.3 Brightness

You may adjust the white balance with respect to LCD display.

17.2.4 Backlight

You may choose backlight time for screen.

⁽¹⁾ Depending on the model.

17.3 Languages ⁽¹⁾


Display language for messages. The **"Automatic"** option selects the language according to the home network (if available).

17.4 Headset mode

Switch audio play (incoming call, message beep, alarm beep...) between Headset only and Phone&Headset.

17.5 Screen lock

17.5.1 Auto lock

Your Screen and LED Panel is locked automatically or can be locked manually by short press the power  key in idle interface.

Unlock the Screen and LED Panel

Short press power  key when locked

Or press Volume  key, pop up unlock confirmation bar, select **"Press"** button to unlock.

17.5.2 Unlock before answering call

You can choice unlock Screen before you answer a call.



When making a call the screen is locked automatically. You need to select the "unlock" button before ending the call or enter Option.

17.6 Numeric keys

By customising your keys, you can access any function directly from the main screen.

⁽¹⁾ Contact your network operator to check service availability.

17.7 Input mode

Please see chapter "Latin input mode", page 69. In addition to the specific characters table for Cyrillic, Chinese, other data input modes are also available in your telephone. This feature allows you to write short messages and add names with special characters to your directory.

17.8 Vocabulary

You have a dictionary to which you can add your own words in addition to those suggested by the predictive input system. When you consult your dictionary, you can add, modify or erase words by using the **"Options"** softkey.

17.9 Security

Activate PIN

- The SIM card protection code is requested each time the phone is powered on if the code is activated.

Change PIN

Change PIN2

- Change PIN code.
- A protection code for certain SIM card features (Billing/Cost/FDN, etc.) will be required if you attempt to access it, when they code is activated. Select to update it with a new one (between 4 and 8 digits).

Activate phone code

Change phone code

Fixed dialed number

- If the code is activated it will be required each time the phone is powered on.
- Change phone password, default is 1234.
- Allows the phone to be "locked" so that it can only dial certain numbers, or numbers with certain prefixes. To activate this function, PIN2 code is mandatory.

17.10 Networks

Network selection

- Preferred
 - List of networks to which you wish to be connected in order of priority.
- Select network
 - The choice of network connection is left up to the user.
- Search mode
 - Network connection can be switched between "**Manual**" and "**Automatic**".

GPRS connection ⁽¹⁾

- When needed
 - GPRS mode active depending on connection requirements.
- Always
 - GPRS mode continuously active.

17.11 Connectivity

A set of profile settings for messaging (MMS) and WAP connection.

⁽¹⁾ Depending on network availability.

18 Making the most of your mobile

18.1 PC suite

We prepare a PC suite for you, you can download it for free from the website. The PC suite includes:

- Backup/restore
 - You can backup the important data in your mobile and restore them when needed.
- GPRS Modem
 - Use your mobile phone to connect PC to the internet.
- Multimedia Personalization
 - Customize your mobile with images, animations and melodies.
- Music management
 - Create and transfer playlists with music files and provide lyrics editing.
- Messaging
 - You can compose SMS/MMS easily on your PC and transfer them to phone.

Supported Operating Systems

- Windows 2000/XP/Vista

18.2 Webcam

You can set the Camera in your handset as Webcam when you are using any IM in PC.

19 Latin input mode/character table ⁽¹⁾....

To write messages, there are two writing methods:

- Normal
- Predictive with the Zi mode

Normal

 
This mode allows you to type text by choosing a letter or a sequence of characters.

Predictive Zi mode

This mode speeds up the writing of your text.

Press the key once and the word will be modified each time you press a key. As you go on, the word will keep changing.

Standard visual keypad

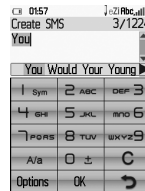

Short press to show Symbol table

Long press to input number 1



Short press to switch to capitalization or number



Short press to input blank or "+"

 
Long press to input number 0




Clear

⁽¹⁾ For specific languages as Chinese, please see specific input leaflets.

Symbol table

 Short press the  key to display the symbols table; the cursor is positioned in the centre. Touch and confirm to select.

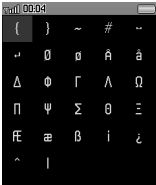

20Telephone warranty.....

Congratulations on choosing this mobile phone - we hope that you will be completely satisfied with it.

Your phone is guaranteed against any deviation from technical specifications for a period of twelve (12) months from the date specified on your original invoice, subject to any other specific provisions ⁽¹⁾.

The warranty terms defined in the manual also apply to the battery and accessories sold with the phone but for a period of six (6) months ⁽²⁾ from the date of purchase shown on your original invoice. Under the terms of this warranty, you must immediately inform your vendor (or any repair centre approved by TCT Mobile Limited or its affiliates, which are listed on our website <http://www.alcatel-mobilephones.com>) in case of a conformity defect on your phone, and present the invoice given to you at the time of purchase. The vendor or repair centre will decide whether to replace or repair, as appropriate, all or any part of the telephone or accessory found to be defective; this warranty covers the cost of parts and labour but excludes any other costs. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

Servicing under the terms of this warranty, especially repair, modification or replacement of products, shall entitle to a ONE (1) month warranty unless there are statutory provisions to the contrary.

This warranty shall not apply to damage or defects to your mobile phone and/or accessory caused by:

- a) not following the instructions for use or installation,
- b) not being compliant with technical and safety standards applicable in the geographical area where the equipment is used,

⁽¹⁾ The mandatory warranty period may vary if overriding statutory provisions are applicable in your jurisdiction.

⁽²⁾ The life of a rechargeable mobile phone battery in terms of conversation time, standby time, and total service life, will depend on the conditions of use and network configuration. Batteries being considered expendable supplies, the specifications state that you should obtain optimal performance for your mobile phone during the first six months after purchase and for approximately 200 more recharges.

- c) improper maintenance of sources of energy, and of the overall electric installation,
- d) accidents or consequences of theft of the vehicle in which the telephone is transported, acts of vandalism, lightning, fire, humidity, infiltration of liquids, inclement weather,
- e) connecting to or integrating into the phone any equipment not supplied or not recommended by TCT Mobile Limited or its affiliates, without their express written consent for such,
- f) any servicing, modification or repair performed by individuals not authorised by TCT Mobile Limited or its affiliates, the vendor or the approved maintenance centre,
- g) use of the mobile phone and/or its accessory for a purpose other than that for which it was designed,
- h) normal wear,
- i) malfunctions caused by external causes (e.g., radio interference from other equipment, power voltage fluctuations),
- j) modifications made to the equipment even if required by changes in regulations and/or modification of network parameters,
- k) faulty connections resulting from unsatisfactory radio transmission or caused by the absence of radio relay coverage.
- l) equipment on which markings or serial numbers have been removed or altered, and handsets on which labels have been removed or deteriorated shall be excluded from the warranty.

In accordance with the applicable law, your product is warranted against hidden defects (defects inherent in the design, manufacture, etc.).

There are no express warranties, whether written or oral, other than this printed limited warranty, express or implied, of any nature whatsoever.

In no event shall TCT Mobile Limited or its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited to trading loss, commercial loss, to the full extent those damages can be disclaimed by law. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

21 Accessories ⁽¹⁾

 
The latest generation of Vodafone GSM mobile phones offers a built-in handsfree feature that allows you to use the telephone from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.



Standard charger



Stereo headset

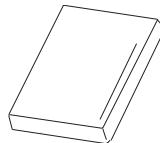

Battery



Only use your telephone with manufacturer batteries, chargers and accessories compatible with your model.

⁽¹⁾ Pictures for reference only.




 
22 Troubleshooting

Before contacting the aftersales department, you are advised to follow the instructions below:

- You are advised to switch off the telephone from time to time to optimise its performance.
- You are advised to fully charge (🔋) the battery for optimal operation.
- Avoid storing large amounts of data in your telephone as this may affect the performance of your telephone.

and carry out the following checks:

My mobile phone will not switch on

- Press  until the screen comes on
- Check the battery charge level
- Make sure your battery is not completely used up or damaged.
- Check the battery contacts, remove and reinstall your battery, then turn your telephone back on
- Remove your battery, remove your SIM card, reinsert the battery and then power it on again.
- Hold down  key +  key at same time, then press up  key to reset it ⁽¹⁾.

My phone has not responded for several minutes

- Press the  key
- Remove the battery and re-insert it, then switch the phone back on

My screen is difficult to read

- Clean your screen
- Use your mobile phone in accordance with the recommended conditions of use

⁽¹⁾ ALL User phone data: contacts, photos, messages, files and downloaded applications such as Java games will be lost permanently. Please do not remove battery during resetting.

My mobile phone turns off by itself

- Check that your Touch area is locked when you are not using your mobile phone
- Check the battery charge level

My mobile phone will not charge properly

- Make sure that your battery is not completely discharged; the battery charge indicator can take several minutes and may be accompanied by a quiet whistling sound
- Make sure charging is carried out under normal conditions (0°C +40°C)
- Make sure your battery is inserted. It must be inserted before plugging in the charger
- Make sure you are using an Vodafone battery and charger
- When abroad, check that the voltage is compatible


My mobile phone will not connect to a network

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually (see page 67)
- Try connecting at a later time if the network is overloaded

SIM card error

- Make sure the SIM card has been correctly inserted (see page 19)
- Verify with your operator that your SIM card is 3V compatible; the old 5V SIM cards cannot be used
- Make sure the chip on your SIM card is not damaged or scratched

Unable to make outgoing calls

- Make sure you have dialled a valid number and press  in dial board
- For international calls, check the country and area codes
- Make sure your mobile phone is connected to a network, and that the network is not overloaded or unavailable
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not barred outgoing calls (see page 38)



Unable to receive incoming calls

- Make sure your mobile phone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls (see page 38)
- Make sure that you have not barred certain calls

The caller's name does not appear when a call is received

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her number

The sound quality of the calls is not optimal

- You can adjust the volume during a call by means of the  key
- Check the radio reception icon level 

I am unable to use the features described in the manual

- Check with your operator to make sure that your subscription includes this service
- Make sure this feature does not require an Vodafone accessory

When selecting a contact from my contacts, the number is not dialled

- Make sure that you have correctly recorded the number in your contact
- Make sure that you have selected the country prefix when calling a foreign country

I am unable to create a contact

- Make sure that your SIM card directory is not full; delete some contacts or save the contacts in the product directory (i.e. your professional or personal directories)

My callers are unable to leave messages on my voicemail

- Contact your network operator to check service availability

I cannot access my voicemail

- Make sure your operator's voicemail number is correctly entered in "My Numbers"
- Try later if the network is busy

I am unable to send and receive messages MMS, Vox MMS

- Check your phone memory available as it might be full
- Contact your network operator to check service availability and check MMS parameters (see page 32)
- Verify the server centre number or your MMS profile with your operator
- The server centre may be swamped try again later

The icon is displayed on my standby screen

- You have saved too many short messages on your SIM card; delete some of them or archive them in the product memory

"No service" is displayed

- You are outside of the network coverage area

I have already entered 3 incorrect PIN codes

- Contact your network operator to obtain the PUK code (Personal Unblocking Key)

I am unable to connect my telephone to my computer

- Install first of all Vodafone's PC suite
- Use "Install the connection" and perform the installation
- Check that your computer meets the requirements for Vodafone's PC Suite installation

I am unable to download new files

- Check for free space
- Delete some files
- Select the MicroSD Card to store the files you downloaded
- Check your subscription status with your operator

The phone can't be detected by others via Bluetooth

- Make sure that Bluetooth is turned on and your mobile phone is visible to other users (see page 58)

My touch Lens doesn't work

- Access to profile by long press power key, then long press up volume key to access LCD calibration and down volume key to access LED calibration

How to make your battery last longer

- Make sure you followed the complete charge time (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication
- Switch on the backlight upon request
- Update weather info upon demand manually or set its auto-check interval longer
- Exit Java background-running applications if they are not being used for a long time
- Deactivate Bluetooth when not in use

About this Guide This guide describes how to find and use the functions of menus of your phone. All the images in this guide are provided only for your reference. The actual appearance and display depends on the phone that has been delivered.

Notice The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied.