



DVD



V I D E O

SUNG
ELECTRONICS

DVD PLAYER
DVD/VIDEO-CD/CD
DVD-818K

AH68-00443F

Precautions

REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT
MOVE THE COVER(OR BACK).
USER-SERVICEABLE PARTS ARE INSIDE. REFER
TO QUALIFIED SERVICE PERSONNEL.

anger-
product
electric



This symbol indicates important
instructions accompanying the
product.

AN INVISIBLE LASER BEAM WHICH CAN
RADIATION EXPOSURE IF DIRECTED.
THE PLAYER CORRECTLY AS INSTRUCTED.

match wide blade of plug to wide slot, fully insert.
triques, introduire la lame la plus large de la fiche dans
le la prise et pousser jusqu'au fond.

when shielded cables and connectors are used to
to prevent electromagnetic interference with electric
ions, use shielded cables and connectors for

ound to comply with the limits for a Class B digital
C rules. These limits are designed to provide reason-
ence in a residential installation. This equipment gen-
quency energy and, if not installed and used in accor-
e harmful interference to radio or television reception,
he equipment off and on, the user is encouraged to try
ore of the following measures.
enna.

equipment and receiver.
et on a circuit different from that to which the receiver is

radio/TV technician for help.
all requirements of the Canadian Interference --

1 LASER PRODUCT
N 1 LASER LAITE
1 LASER APPARAT

WARNING

To reduce the
risk of fire or
shock hazard, do
not expose this
DVD player to
rain or moisture.

CAUTION

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR
ADJUSTMENTS OR PERFORMANCE OF PROCEDURES
OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN
HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN
COVER AND DO NOT REPAIR YOURSELF. REFER SERVIC-
ING TO QUALIFIED PERSONNEL.

Note:

- This unit can be used only where the power supply is AC 120V, 60Hz. It cannot be used elsewhere.
- This DVD player is designed and manufactured to respond to the Region Management Information. If the Region number of a DVD disc does not correspond to the Region number of this DVD player, the DVD player cannot play the disc.
- This device is protected by U.S. patent numbers 4,631,603, 4,577,216 and 4,819,098 and other intellectual property rights. The use of Macrovision's copy protection technology in the device must be authorized by Macrovision and is intended for home and other limited pay-per-view uses only, unless otherwise authorized in writing by Macrovision. Reverse engineering or disassembly is prohibited.

Handling Cautions

- Before connecting other components to this player, be sure to turn them all off.
- Do not move the player while a disc is being played, or the disc may be scratched or broken, and the player's internal parts may be damaged.
- Do not put a flower vase filled with water or any small metal objects on the player.
- Be careful not to put your hand into the disc tray.
- Do not place anything other than the disc in the disc tray.
- Exterior interference such as lightning and static electricity can affect normal operation of this player. If this occurs, turn the player off and on again with the POWER button, or disconnect and then reconnect the AC power cord to the AC power outlet. The player will operate normally.
- Be sure to remove the disc and turn off the player after use.
- Disconnect the AC power cord from the AC outlet when you don't intend to use the player for long periods of time.
- Clean the disc by wiping in a straight line from the inside to the outside of the disc.

Disc Storage

Be careful not to harm the disc because the data on these discs is highly vulnerable to the environment.


- Do not keep under direct sunlight.
- Keep in a cool ventilated area.
- Store vertically.
- Keep in a clean protection jacket.

Maintenance of Cabinet

For safety reasons, be sure to disconnect the AC power cord from the AC outlet.

- Do not use benzene, thinner, or other solvents for cleaning.
- Wipe the cabinet with a soft cloth.

 TABLE OF CONTENTS

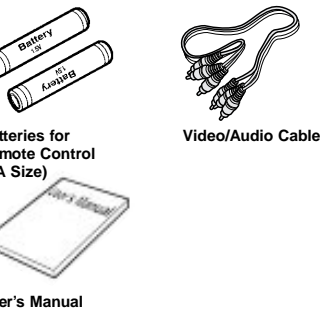

If remote doesn't operate properly:


- Check the polarity + - of the batteries (Dry-Cell)
- Check if the batteries are drained.
- Check if remote sensor is blocked by obstacles.
- Check if there is any fluorescent lighting nearby.

in a format different from the global DVD
format, may not be played.
of different manufacturing quality, may not be

with ".mp3" extension), above 128K bps
files, can be played.

General Features 6	• Front Panel Display 10	SETUP
Disc Type and Characteristics 8	• Rear Panel 11	
Description 9	Tour of the Remote Control 12	CONNECTIONS
• Front Panel Controls 9		
Choosing a Connection 14	• Connection to a TV 15	BASIC FUNCTIONS
• Connection to an Audio System 14		
Playing a Disc 16	Repeat Play 20	ADVANCED FUNCTIONS
Using the Search & Skip Functions 18	Program Play & Random Play 21	
Using the Display Function 19		KARAOKE FUNCTIONS
Using the Disc View Function 22	Changing the Camera Angle 25	
Selecting the Audio Language 23	Using the Bookmark Function 26	CHANGING SETUP MENU
Selecting the Subtitle Language 24	Using the Zoom and 3D Sound Functions 27	
Beginning karaoke functions 28	Reserving a song 29	REFERENCE
Key Control 28	Vocal Function 30	
Using the Setup Menu 31	Setting Up the Audio Options 35	
Setting Up the Language Features 32	Surround Sound Speaker Setup 36	
Setting Up the Parental Control 34	Setting Up the Display Options 37	
Controlling a TV with the Remote 38	Specifications 40	
Troubleshooting Guide 39	Warranty 41	

 General Features

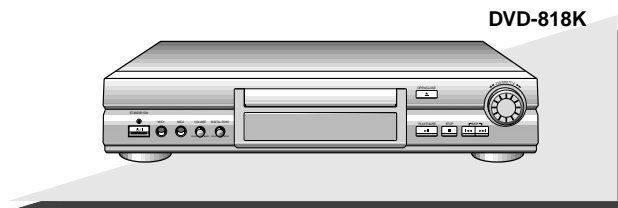

SETUP

COPY PROTECTION

- Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Characteristics

playing the following types of discs with the

Disc Size	Max. Playing Time	Characteristics
5"	Single-sided 240 min. Double-sided 480 min.	<ul style="list-style-type: none"> DVD contains excellent sound and video due to Dolby Digital and MPEG-2 system.
3 1/2"	Single-sided 80 min. Double-sided 160 min.	<ul style="list-style-type: none"> Various screen and audio functions can be easily selected through the on-screen menu.
5"	74 min.	<ul style="list-style-type: none"> Video with CD sound, VHS quality & MPEG-1 compression technology.
3 1/2"	20 min.	
5"	74 min.	<ul style="list-style-type: none"> An LP is recorded as an analog signal with more distortion. CD is recorded as a Digital Signal with better audio quality, less distortion and less deterioration of audio quality over time.
3 1/2"	20 min.	

DVD-ROM in this player!

 


Dolby Digital disc • Stereo disc • Digital Audio disc • DTS disc

are coded by region. These regional codes must match
disces do not match, the disc will not play.

is described on the rear panel of the player.


Description-Front Panel

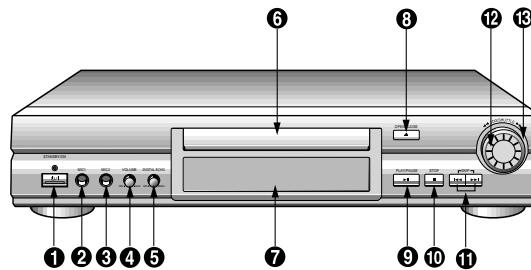

SETUP


Front Panel Controls

 - 1 STANDBY / ON**
 - When the unit is first plugged in, the indicator lights. When STANDBY/ON is pressed on again, the light goes out and the player is turned on.
- 2 MIC 1**
 - Connect microphone 1 for Karaoke functions.
- 3 MIC 2**
 - Connect microphone 2 for Karaoke functions.
- 4 VOLUME**
 - Use to adjust microphone volume level.
- 5 DIGITAL ECHO**
 - Use to adjust echo delay.
- 6 DISC TRAY**
 - Press OPEN/CLOSE to open and close the disc tray.
- 7 DISPLAY**
 - Operation indicators are displayed here.
- 8 OPEN/CLOSE**
 - Press to open and close the disc tray.
- 9 PLAY/PAUSE**
 - Begin or pause disc play.
- 10 STOP**
 - Stops disc play.
- 11 SKIP**
 - Use to skip a scene or music.
- 12 JOG DIAL**
 - Operates frame by frame playback. In CD mode, performs track search.
- 13 SHUTTLE DIAL**
 - Performs fast or slow motion playback.

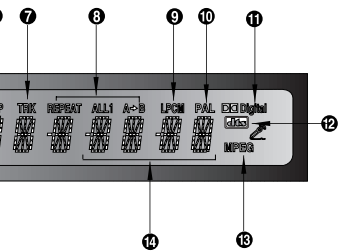

Description-Rear Panel

 
SETUP

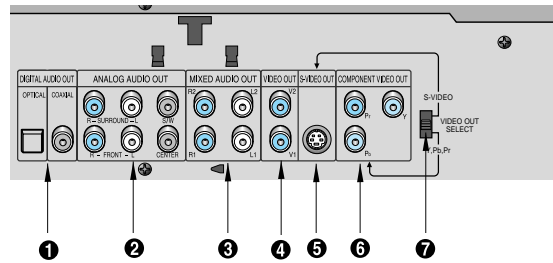

Rear Panel

- 1 DIGITAL AUDIO OUT JACK**
 - Use either an optical or coaxial digital cable to connect to a compatible Dolby Digital receiver. Use to connect to an A/V Amplifier that contains a Dolby Digital decoder or DTS decoder.
- 2 5.1CH ANALOG AUDIO OUT JACKS**
 - Connect to an amplifier with 5.1ch analog input jacks.
- 3 MIXED AUDIO OUT JACKS**
 - Connect to the Audio input jacks of your television, audio/video receiver, or VCR.
- 4 VIDEO OUT JACK**
 - Use a video cable to connect to the Video input jack on your television.
- 5 S-VIDEO OUT JACK**
 - Use the S-Video cable to connect this jack to the S-Video jack on your television for a higher quality picture. The S-Video must be selected in the VIDEO OUT SELECT.
- 6 COMPONENT VIDEO OUT JACKS**
 - Use these jacks if you have a TV with Component Video in jacks. These jacks provide Pr, Pb and Y video. Along with S-Video, Component Video provides the best picture quality. The Y, Pb, Pr must be selected in the VIDEO OUT SELECT.
- 7 VIDEO OUT SELECT SWITCH**
 - Use the switch to set video out.
 - If Y, Pb or Pr is selected, S-Video may not work.
 - If S-Video is selected, Y, Pb or Pr may not work.

 Tour of the Remote Control

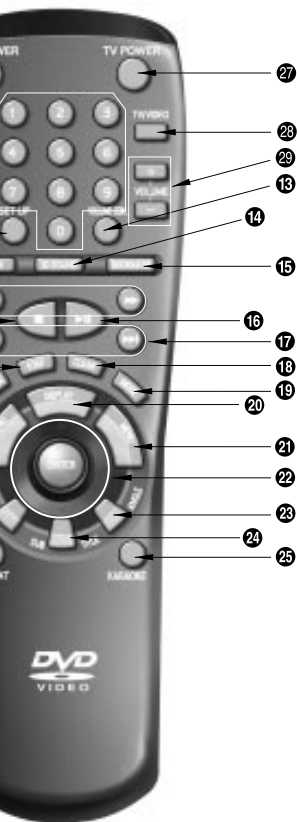

DVD Function Buttons

- ❶ **DVD POWER Button**
- ❷ **NUMBER Buttons**
- ❸ **OPEN/CLOSE Button**
- ❹ **SETUP Button**
 - Brings up the DVD player's Setup menu.
- ❺ **ZOOM Button**
- ❻ **SEARCH Buttons**
 - Allows you to search forward/backward through a disc.
- ❼ **STOP Button**
- ❽ **STEP Button**
 - Advances playback one frame at a time.
- ❾ **RETURN Button**
 - Returns to a previous menu.
- ❿ **TOP MENU Button**
 - Accesses a music or video display directly.
- ⓫ **AUDIO Button**
 - Use this button to access various audio functions on a disc.
- ⓬ **REPEAT Button**
 - Allows you to repeat play a title, chapter, track, or disc.
- ⓭ **VOLUME CON. Button**
 - To control the master volume of the player.
- ⓮ **3D SOUND Button**
- ⓯ **BOOKMARK Button**
- ⓰ **PLAY/PAUSE Button**
 - Begin/Pause disc play.
- ⓱ **SKIP Buttons**
 - Use to skip the title, chapter, or track.
- ⓲ **CLEAR Button**
 - Use to remove menus or status displays from the screen.
- ⓳ **MODE Button**
 - Allows you to program a specific order.
- ⓴ **DISPLAY Button**
 - Displays the current disc mode.
- ⓵ **MENU Button**
 - Brings up the Disc menu.
- ⓶ **ENTER/DIRECTION Button (UP/DOWN or LEFT/RIGHT Button)**
 - This button functions as a toggle switch.
- ⓷ **ANGLE Button**
 - Use to access various camera angles on a DVD.
- ⓸ **SUBTITLE Button**
- ⓹ **KARAOKE Button**
 - Use to begin karaoke functions.

SETUP

TV Function Buttons

- ⓺ **CHANNEL UP/DOWN Buttons**
- ⓻ **TV POWER Button**
 - Use to set the remote to control a compatible TV.
- ⓼ **TV/VIDEO Selection Button**
- ⓽ **VOLUME UP/DOWN Buttons**

Connection

of connections commonly used to connect other components.


DVD Player

, TV, and other components before you connect

additional components you are connecting for particular components.

Audio System

 
Method 2

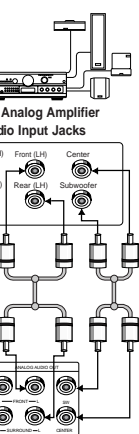

Analog Audio Out

to Amplifier or Dolby Pro Logic Decoder with 5.1ch Analog Input Jacks with Dolby Digital Decoder/DTS Decoder

 Method 3

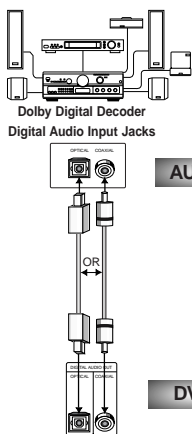

Digital Audio Out

 
AUDIO

DVD

Choosing a Connection

Connection to a TV (For Video)

TV (Normal, Widescreen, Projection, etc..)

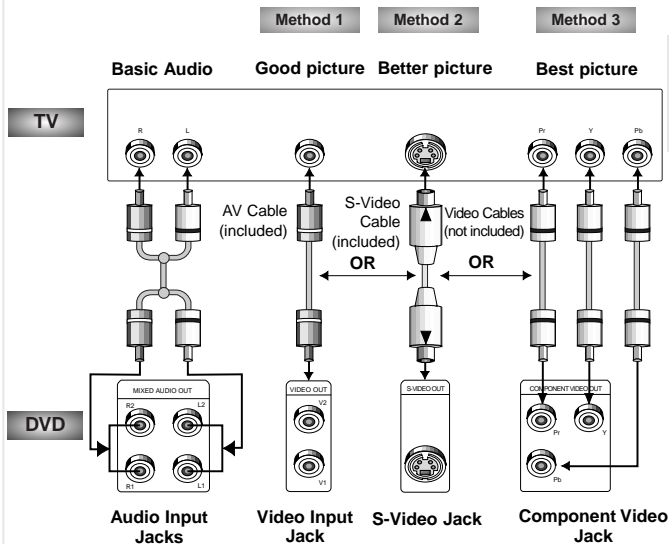

- **Method 1** DVD Player + TV with Video Input Jack
- **Method 2** DVD Player + TV with S-Video Input Jack (If S-Video is selected in the VIDEO OUT SELECT.)
- **Method 3** DVD Player + TV with Component Video Jacks (If Y, Pb or Pr is selected in the VIDEO OUT SELECT.)

NOTE

- If Y, Pb or Pr is selected, S-Video may not work.
- If S-Video is selected, Y, Pb or Pr may not work.

Playing a Disc

Before Playback

Turn on a TV and press the TV/VIDEO button to select video mode.
Turn on your Audio System and select AUX, CD or DVD.
Refer to your AUDIO User's Manual.

After plugging in the player, the first time you press the DVD POWER button, this screen comes up :
If you want to select the language, press a NUMBER button. (This screen will only appear the very first time you plug in the player.)

Playback

- 1 Press the OPEN/CLOSE button.
The STANDBY indicator light goes out and the tray opens.
- 2 Place a disc gently into the tray with the disc's label facing up.
- 3 Press the PLAY/PAUSE button or OPEN/CLOSE button to close the disc tray.

The player remembers where you stopped, so when you press the PLAY/PAUSE button (unless the disc is removed, the STOP button is not needed).

In pause mode, it will stop.
The player will stop after approximately 30 minutes have elapsed in pause mode (more than one minute without any user interaction, and the TV screen will fade in and fade out repeatedly until you press the PLAY/PAUSE button).

- 1 Stopping Playback
Press the STOP button during playback.
- 2 Removing Disc
Press the OPEN/CLOSE button.
- 3 Pausing Playback
Press the PLAY/PAUSE or STEP button on the remote during playback.
 - Screen stops, no sound.
 - To resume again, press PLAY/PAUSE button once again.
- 4 Step Motion Playback (Except CD)
Press the STEP button on the remote or turn JOG dial on the front of the DVD player during playback.
 - Each time the button is pressed, a new frame will appear.
 - No sound is heard during STEP mode.
 - Press PLAY/PAUSE to resume normal playback.(You can only perform step motion playback in the forward direction.)
- 5 Slow Motion Playback (Except CD)
Press the FWD or REV SEARCH button on the remote or turn the SHUTTLE dial on the front of the DVD player during PAUSE or STEP mode.
 - By pressing the SEARCH button, you can select slow motion playback for 1/2, 1/4 or 1/8 of normal speed.
 - No sound is heard during slow mode.
 - Press PLAY/PAUSE to resume normal playback.
 - When playing a VCD, the reverse slow motion playback will not work.

BASIC
FUNCTION

& Skip Functions

ch quickly through a chapter or track or use
e next selection.

Searching through a Chapter or Track

Press the FWD or REV SEARCH button on the remote or turn the SHUTTLE dial on the front of the DVD player during PLAY mode.

Press the REVERSE or FORWARD SEARCH button on the remote and press again to search at a faster speed (2X/4X/8X/16X/32X/normal speed, in order) on DVD.

Press the REVERSE or FORWARD SEARCH button on the remote and press again to search at a faster speed (4X/8X/normal speed in order) on VCD and CD. To return to normal speed playback, press the PLAY/PAUSE button.

Skipping Tracks

During playback, press the NEXT SKIP or BACK SKIP button.

 
When playing a DVD, if you press the NEXT SKIP button, it moves to next chapter. If you press the BACK SKIP button, it moves to the beginning of the chapter. One more press makes it move to the beginning of the previous chapter.

When playing a VCD 2.0 in MENU OFF mode, a VCD or a CD, if you press the NEXT SKIP button, it moves to next track. If you press the BACK SKIP button, it moves to the beginning of the track. One more press makes it move to the beginning of the previous track.

If a track exceeds 15 minutes when playing a VCD and you press the NEXT SKIP button, it moves forward 5 minutes. If you press the BACK SKIP button, it moves backward 5 minutes.

When playing a VCD 2.0 in the MENU MODE or Track View function, if you press the NEXT SKIP button, it moves to the next MENU or the next Track View display. If you press the BACK SKIP button, it moves to the previous MENU or the previous Track View display. (See page 22.)

Using the Display Function

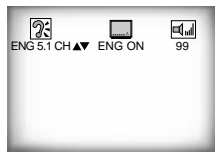

NOTE

What is a Chapter?

Each Title on a DVD can be divided into chapters (similar to tracks on an audio CD).

What is a Title?

A DVD may contain several different titles. For example, if a disc contains four different movies, each might be considered a title.

When Playing a DVD

1 During playback, press the DISPLAY button on the remote.

- Current title, chapter number and elapsed time will be displayed.
- Use the LEFT/RIGHT button to select a title or a chapter number. Use the UP/DOWN button or Number buttons to enter a different title or chapter number, then press the ENTER button.
- To enter the time from which you want to start, use the LEFT/RIGHT button to select, then use the Number buttons to enter the time. Then press the ENTER button.

2 Press the DISPLAY button on the remote twice.

- Current audio, subtitle and volume control will appear.
- To make the screen disappear, press the DISPLAY button again.

When Playing a CD/VCD

1 During playback, press the DISPLAY button on the remote.

- Current track number, elapsed time and volume control will be displayed.
- Use the LEFT/RIGHT button to select a track. Use the UP/DOWN button or Number buttons to enter a different track number, then press the ENTER button.
- To enter the time from which you want to start, use the LEFT/RIGHT button to select, then use the Number buttons to enter the time. Press the ENTER button.
- To make the screen disappear, press the DISPLAY button again.

BASIC
FUNCTION

Program Play & Random Play

ter, title, a chosen section (A-B), or all of the

When playing a DVD

Press the REPEAT button on the remote. Repeat screen appears.

2 Select Chapter, Title or A-B using the LEFT/RIGHT button.

A-B Repeat

Press the REPEAT button. Select A-B on screen with the LEFT/RIGHT button. Or press the A-B button on the remote.

Press ENTER at the point where you want the repeat play to start (A). The B is automatically highlighted.

Press ENTER at the point where you want the repeat play to stop (B).

Use the A-B Repeat that you set plays until you turn repeat off.

 
3 Press ENTER.

To return to normal playback press REPEAT again, then press the LEFT/RIGHT button to select Off and press ENTER.

or title, CD and VCD repeat playback by disc or track. function may not work.

ore marking the end (B), the end of title or track

n mode), this function does not work.

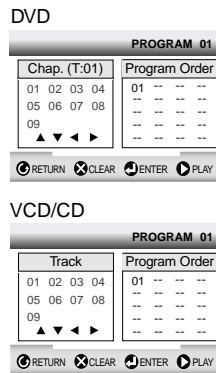

Program Playback (DVD/VCD/CD)

- 1 Press the MODE button.
- 2 Use the LEFT/RIGHT button to select PROGRAM. Press the ENTER button.
- 3 Use the LEFT/RIGHT button to select the first chapter (or track) to add to the program. Press the ENTER button. The selection numbers appear in the Program Order box.
- 4 Press the PLAY/PAUSE button. The disc will be played back in programmed order.

BASIC
FUNCTION

NOTE

- Depending on the disc, the Program and Random Playback function may not work.
- When in VCD 2.0 mode (MENU ON mode), these functions do not work.
- To resume normal playback, press the CLEAR button.

Random Playback (DVD/VCD/CD)

- 1 Press the MODE button.
- 2 Use the LEFT/RIGHT button to select RANDOM. Press the ENTER button. The disc will be played back in random order.

Track View Function

Track View (VCD)

Plays the beginning view of each track and track number.

During playback, press the TOP MENU button.

Press the UP/DOWN button to select TRACK VIEW. Press the ENTER button.

Select the desired view by pressing the UP/DOWN or LEFT/RIGHT buttons.

Press the ENTER button.

Index View (VCD)

Plays the equally divided 9 views of the current playing track.

During playback, press the TOP MENU button.

Press UP/DOWN button to select INDEX VIEW. Press the ENTER button.

Select the desired view by pressing UP/DOWN or LEFT/RIGHT buttons.

Press the ENTER button.

 
 
TOP MENU button and the TRACK VIEW will be dis-

abled when playing a DVD; the disc's TITLE MENU function will display at least two titles for the TITLE MENU function to work.

When playing a CD, the unit enters the INTRO mode at the beginning of each track for about 10 seconds.

Selecting the Audio Language

You can select a desired language quickly and easily with the AUDIO button.



(example)

NOTE

- This function depends on what languages are encoded on the disc and may not work with all DVDs.
- A DVD disc can contain up to 8 audio languages.
- **How to have the same audio language come up whenever you play back a DVD;** Refer to "Setting Up the Language Features" on page 32.

Using the AUDIO Button

- 1 Press the AUDIO button.
- 2 Use the UP/DOWN button to select the desired language on a DVD.
- The audio and subtitle languages are represented by abbreviations.
- 3 Use the UP/DOWN button to select STEREO, R CHANNEL or L CHANNEL. (On VCD/CD)

Using the MENU Button

When playing a DVD

- 1 Press the MENU button.
- 2 Use the UP/DOWN button to select AUDIO information.
- 3 Press the ENTER button.
- 4 Use the UP/DOWN button to select 'ENGLISH'.
- 5 Press the ENTER button.

When playing a VCD

In disc version 2.0, the MENU button works as a conversion switch between MENU ON and MENU OFF mode. When playing a VCD 1.1 or CD, the MENU button will not work.

Subtitle Language

Subtitle quickly and easily with the SUBTITLE

Using the SUBTITLE button

Press the SUBTITLE button.

Use the UP/DOWN button to select the desired subtitle language.

Use the LEFT/RIGHT button to determine whether or not the subtitle will be displayed.

Initially, the subtitling will not appear on screen.

The audio and subtitle languages are represented by abbreviations.

Using the MENU button

Press the MENU button.

Use the UP/DOWN button to select SUBTITLE information.

Press the ENTER button.

Use the UP/DOWN button to select the desired language.

Press the ENTER button.

When playing a VCD

In disc version 2.0, the MENU button works as a conversion switch between MENU ON and MENU OFF mode.

When playing a VCD 1.1 or CD, the MENU button will not

Changing the Camera Angle

When a DVD contains multiple angles of a particular scene, you can select the Angle function.

Using the ANGLE button

Check to see if an 'ANGLE ()' mark is present at the upper left hand corner of the screen.

- 1 When an 'ANGLE' mark is shown, press the ANGLE button.
- 2 Use the UP/DOWN button to select the desired screen angle. Then press the ENTER button.
- 3 To turn off the display, press the ANGLE button again.



(example)

Using the Master Volume Control Function

Press the DISPLAY button twice. Use the UP/DOWN button to select a suitable volume.

- Master Volume Control function lets you adjust the volume of the player's output. This is useful for matching the player's output level to other equipment in your system.
- Master Volume Control function on CD titles with DTS will not work under VOLUME : 99 level.
- When the DIGITAL OUTPUT is set to BITSTREAM in the SETUP MENU, the Volume Control function will not work.

Bookmark Function

You can select parts of a DVD or VCD (MENU) and quickly find the section at a later time.

Using the Bookmark Function (DVD/VCD)

During playback or pause, press the BOOKMARK button on the remote. A marker will be displayed.

Use the LEFT/RIGHT button to move to the desired bookmark icon.

When you reach the scene you want to mark, press the ENTER button. The icon will change to a number (1, 2, or 3).

Press the BOOKMARK button to turn off the display.

Recalling a Marked Scene

During playback, press the BOOKMARK button on the remote.

Use the LEFT/RIGHT button to select a marked scene.

Press the PLAY/PAUSE button to skip to the marked scene.

Deleting a Bookmark

During playback, press the BOOKMARK button on the remote.

Use the LEFT/RIGHT button to select the bookmark number you want to delete.

Press the CLEAR button to delete a bookmark number.

Press the BOOKMARK button to turn off display.

Using the Zoom & 3D Sound Functions

Using the Zoom Function (DVD/VCD)

- 1 During playback or pause mode, press the ZOOM button on the remote. A square will be displayed on screen.
- 2 Use the UP/DOWN or LEFT/RIGHT button to select the part of the screen you want to zoom.
- 3 Press the ENTER button.

- During DVD playback, press ENTER to zoom in 2X/4X/normal in order.
- During VCD playback, press ENTER to zoom in 2X/normal in order.

Using the 3D Sound Function

The simulated surround effect (SPATIALIZER N-2-2) depends on the disc contents. If you connect the unit to your stereo system, you can enhance sound quality and produce a greater surround effect.

This feature is useful when you are using the DVD player with a two channel stereo through the analog outputs.

(Discs which are recorded with LPCM or DTS will not work. When the DIGITAL OUTPUT is set to BITSTREAM in the SETUP MENU, the 3D Sound function will not work.)

- 1 During playback, press the 3D SOUND button. The 3D SOUND mark will be displayed on screen. (Be sure the DIGITAL OUTPUT is set to PCM.)
- 2 Press the UP/DOWN button to turn the 3D Sound feature on or off.
- 3 When the Karaoke function is on, the 3D sound can't be operated.



NOTE

- 3D Sound is possible only on discs recorded using DOLBY SURROUND or DOLBY DIGITAL. However, some of these discs do not contain rear channel sound signals.
- Depending on the disc, the Zoom and 3D Sound function may not work.

Operation Functions

Operation Sequence

- Connect the Mixed Audio Out terminals with the TV or AMP.
- Press the power button.
- Connect Mic into Mic 1 or Mic 2 jack. Then the karaoke mode is transferred to ON mode.
- Disconnect the Mic makes the karaoke mode transfer OFF mode automatically.

Key Control

- Pressing the KARAOKE button makes the karaoke ON mode.
- Select the "KEYCON" using the LEFT/RIGHT buttons.
- By use of the LEFT/RIGHT buttons, change to the desired tone.

- ♭ : To let 7 scales down by half scale.
- ♮ : Original scale.
- ♯ : To let 7 scales up by half scale.

Connect to the Mic output.




• CVD, VCD Karaoke Disc

Channel	Karaoke Channel	CVD	VCD, CD
1 CH	CH1 LEFT	Left stereo music + Vocal	Left stereo music
1 CH	CH1 RIGHT	Right stereo music + Vocal	Right stereo music + Vocal
2 CH	CH2 LEFT	Left stereo music	-
2 CH	CH2 RIGHT	Right stereo music	-

Reserving a Song

 It is the function to reserve the desired song in advance by use of Karaoke function

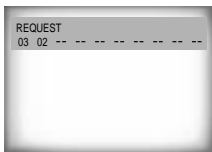

Sequence of reservation

- Playback the Karaoke Disc containing the wanted songs.
- After pushing the KARAOKE button of the remote transfer to the Karaoke ON mode using the UP/DOWN buttons.
- Select the "REQUEST" using the LEFT/RIGHT buttons.
- Input the number (Track No.) of the desired song into the flickering part(--).
- You can reserve up to 10 songs.
- When you want the next reserved song during playing a song, press the SKIP button.

Cancellation of reservation

- Cancel by pressing the CLEAR button of the remote.
- The last reserved song will be erased first.
- Continuous pressing of the CLEAR button can cancel the next reserved song.
- If the reservation is required again, input the song number in the flickering part.

NOTE

- Request function is available only when the Karaoke mode is "ON".
- When using "SKIP" button, it can not work at the last song.
- When using Request function, the "DISPLAY" and "REPEAT" function does not work.

KARAOKE FUNCTIONS

Sequence of reservation

Pressing the KARAOKE button twice displays the following in Karaoke ON mode:

Vocal Assist

Put the vocal assist on when playing a Karaoke disc to change the vocal recorded on the disc (singer's voice) with your own voice.

The vocal changed is one of the selected channel on VOCAL FADER*.

VOCAL ASSIST	VOCAL FADER	Remark
ON	V1	CH1. Vocal Change
ON	V2	CH2. Vocval Change
ON	1 + 2	CH1, CH2 CH. Vocal Change
OFF	OFF	Vocal Assist Off

FUNCTIONS

This function is limited only to Karaoke disc and does not work to the normal music disc.

When putting the VOCAL FADER off, the VOCAL ASSIST is off automatically, too.

Vocal Fader

This function to make the music only sound by cancelling the vocal when playing a Karaoke disc.

VOCAL FADER	Remark
V1	CH1. Vocal Cancel
V2	CH2. Vocal Cancel
1 + 2	CH1, CH2. Vocal Cancel
OFF	Vocal Fader Off

When playing DVD, CVD or CD, you can select only the ON or OFF.

 
Guide Melody

The guide melody through xylophone and piano help you to sing easily.

This function works only on the DVD Karaoke disc on which the guide melody is recorded.

Using the Setup Menu

The Setup menu lets you customize your DVD player by allowing you to select various language preferences, set up a parental level, even adjust the player to the type of television screen you have.

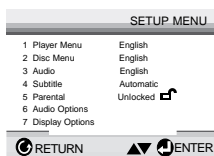

- 1 With no disc playing, press the SETUP button on the remote.
 - 1 **PLAYER MENU** : Setup of the Display Language (See page 32)
Use the Player preference menu to select the language for the player's on-screen displays.
 - 2 **DISC MENU** : Setup of the Menu Language (See page 32)
Use the Menu preference menu to select the language you want a DVD's disc menu to be displayed in.
 - 3 **AUDIO** : Setup of the Audio Language (See page 33)
Use the Audio preference menu to select the sound-track language.
 - 4 **SUBTITLE** : Setup of the Subtitle Language (See page 33)
Use the Subtitle preference menu to select the language the disc's subtitles are to be displayed in.
 - 5 **PARENTAL** : Setup of the Parental Level (See page 34)
Allows users to set the level necessary to prevent children from viewing unsuitable movies such as those with violence, adult subject matter, etc.
 - 6 **AUDIO OPTIONS** : Setup of the Audio Options (See page 35)
 - 7 **DISPLAY OPTIONS** : Setup of the Display Options (See page 37)
Use to select which type of screen you want to watch and several display options.
- 2 Use the UP/DOWN button on the remote to access the different features.
- 3 Press the ENTER button to access the sub features.

To make the setup screen disappear after setting up, press the SETUP button again.

NOTE

Depending on the disc, some Setup Menu selections may not work.

Language Features

Disc menu, audio and subtitle language in automatically every time you watch a movie.

Using the Player Menu

With no disc playing or stop, press the SETUP button.

Use the UP/DOWN button to select the PLAYER MENU.

Press the ENTER button.

Use the UP/DOWN button to select 'ENGLISH'.

Press the ENTER button.

ENGLISH is selected and the screen returns to SETUP MENU.

To make the SETUP MENU disappear, press the RETURN button.

Using the Disc Menu Language

This function changes the language only for text on the disc menu screens.

With no disc playing or stop, press the SETUP button.

Use the UP/DOWN button to select DISC MENU.

Press the ENTER button.

Use the UP/DOWN button to select 'ENGLISH'.

Select "OTHERS" if the language you want is not listed.

Press the ENTER button.

ENGLISH is selected and the screen returns to SETUP MENU.

Setting Up the Language Features



Using the Audio Language

1 With no disc playing or stop, press the SETUP button.

2 Press the UP/DOWN button to move to AUDIO.

3 Press the ENTER button.

 
4 Press the UP/DOWN button to select 'ENGLISH'.

- Select "ORIGINAL" if you want the default soundtrack language to be the original language the disc is recorded in.

- Select "OTHERS" if the language you want is not listed.

5 Press the ENTER button.

- ENGLISH is selected and the screen returns to SETUP MENU.

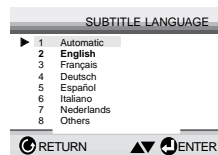

Using the Subtitle Language

1 With no disc playing or stop, press the SETUP button.

2 Use the UP/DOWN button to select SUBTITLE.

3 Press the ENTER button.

4 Use the UP/DOWN button to select 'ENGLISH'.

- Select "AUTOMATIC" if you want the subtitle language to be the same as the language selected as the audio preference.

- Select "OTHERS" if the language you want is not listed. Some discs may not contain the language you select as your initial language; in that case the disc will use its original language setting.

5 Press the ENTER button.

- ENGLISH is selected and the screen returns to SETUP MENU.

NOTE

- If the selected language is not recorded on the disc, the original pre-recorded language is selected.

- **How to make the SETUP MENU disappear or return to menu screen during set up;** Press RETURN button.

CHANGING
SETUP MENU

Parental Control

works in conjunction with DVDs that have parental control. It helps you control the types of DVDs that can be played up to 8 rating levels on a disc.

With no disc playing or stop, press SETUP. The Setup Menu screen appears.

Use UP/DOWN to select Parental. Press ENTER. The Parental Control screen appears.

Use LEFT/RIGHT to select Yes if you want to use a password. Press ENTER. The Enter Password screen appears.

Enter your password. The Re-enter Password screen appears to confirm the password. Enter your password again. The Parental Control screen appears.

About the Rating Level ;

The Rating Level will work only when Use Password is set to Yes. To unlock the player, use LEFT/RIGHT to select No. Use UP/DOWN to select Rating level. Press ENTER.

- Use UP/DOWN to select the level (e.g. Level 6) and press ENTER. The disc that contains Level 7 will now not play.
- To cancel the rating level, use LEFT/RIGHT to select No in Use Password.

 
About the Change Password ;

- Use UP/DOWN to select Change Password. The Change Password screen appears.
- Enter your new password. Re-enter the new password again.

disappear or return to menu screen during set up;

and, see Forget Password in the Troubleshooting Guide.

Setting Up the Audio Options

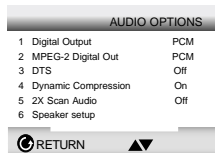

- 1 With no disc playing or stop, press the SETUP button.
- 2 Use the UP/DOWN button to select AUDIO OPTIONS. Then press the ENTER button.
- 3 Use the UP/DOWN button to select the desired item. Then press the LEFT/RIGHT button.

1 DOLBY DIGITAL OUT / 2 MPEG-2 DIGITAL OUT

1 PCM : Converts to PCM(2CH) 48kHz/16Bit audio. Select PCM when using the Analog Audio Outputs.

2 BITSTREAM : Converts to Dolby Digital BITSTREAM - 5.1CH (in case of MPEG-2, 7.1CH). Select BITSTREAM when using the Digital Audio Output.

NOTE : Be sure to select the correct Digital Output or no audio will be heard.

3 DTS

1 ON : Outputs DTS BITSTREAM via digital output only. Select DTS when connecting to a DTS DECODER.

2 OFF : Doesn't output digital signal.

4 DYNAMIC COMPRESSION

1 ON : To select dynamic compression.

2 OFF : To select the standard range.

5 2X SCAN AUDIO

1 ON : Turns 2X audio on.

2 OFF : Turns 2X audio off.

Though 2X SCAN AUDIO is ON in the SETUP MENU, no sound will be heard on discs which are recorded with LPCM, DTS or MPEG-2.

6 SPEAKER SETUP

NOTE

- How to make the SETUP MENU disappear or return to menu screen during set up; Press RETURN button.

- Certain audio features of this product manufactured under a license from Desper Products, Inc. Spatializer® and circle-in-square device are trademarks owned by Desper Products, Inc.
- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. ©1992-1997 Dolby Laboratories Inc. All rights reserved.
- "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

CHANGING
SETUP MENU

Speaker Setup

Press the SETUP button in play or stop mode.

Press the UP/DOWN button to select AUDIO OPTIONS. Then press the ENTER button.

Use the UP/DOWN button to select SPEAKER SETUP. Then press the ENTER button.

Use the UP/DOWN or LEFT/RIGHT button to select the desired item. Then press the ENTER button.

Setting up SPEAKER MODE

If you have connected the system to a speaker with low frequencies of 160 Hz or below, select 'Found(Large illustration)'.

If you have connected the system to a speaker without low frequencies of 160 Hz or below, select 'Found(Small illustration)'. If you don't connect a subwoofer, always select 'Found(Large illustration)' for the Front Speakers(L/R).

If you don't have a particular speaker connected, select 'Not found(No illustration visible)'.

Setting up DELAY TIME

When 5.1CH Surround Sound is played, you can enjoy the best sound if the distance between you and each speaker is the same. You can set Delay Time in the Center/Surround Speaker to customize the sound to the acoustics of your room.

Setting up CENTER SPEAKER

If the distance of Dc is equal to or longer than the distance of Df in the left table, set the mode as Oms. Otherwise, change the setting according to the table below.

(A) = Df - Dc	Setting(ms)
Distance of (A)(in)	
1.64	1.3
3.28	2.6
4.92	3.9
6.56	5.3

Setting up SURROUND SPEAKERS

If the distance of Df is equal to the distance of Ds in the above, set the mode as Oms. Otherwise, change the setting according to the table on the right.


(B) = Df - Ds	Setting(ms)
Distance of (B)(in)	
6.56	5.3
13.12	10.6
19.68	15.9

Setting up TEST

Test output signals come clockwise starting from the Front Speaker(L). Adjust Channel Balance to match to the volume of test signals memorized in the system.

FRONT(L) → CENTER → FRONT(R) → SUBWOOFER
 SURROUND(R) → SURROUND(L)

 Setting Up the Display Options

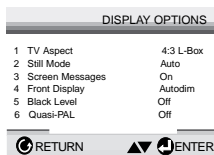

1 With no disc playing or stop, press the SETUP button.

2 Use the UP/DOWN button to select DISPLAY OPTIONS. Then press the ENTER button.

3 Use the UP/DOWN button to select the desired item. Then press the LEFT/RIGHT button.

1 TV ASPECT

1 4:3 LETTER BOX : Select when you want to see the total 16:9 ratio screen DVD supplies, even though you have a TV with a 4:3 ratio screen. Black bars will appear at the top and bottom of the screen.

2 4:3 PAN-SCAN : Select this for conventional size TVs when you want to see the central portion of the 16:9 screen. (Extreme left and right side of movie picture will be cut off.)

3 16:9 WIDE : You can view the full 16:9 picture on your widescreen TV.

2 STILL MODE

1 FIELD : Select this feature when the screen shakes in the AUTO mode.

2 FRAME : Select this feature when you want to see small letters more clearly in the AUTO mode.

3 AUTO : When selecting AUTO, FIELD/FRAME mode will be automatically converted.

3 SCREEN MESSAGES

Use to turn on-screen messages on or off.

4 FRONT DISPLAY

Adjust the brightness of the unit's front panel display.

1 BRIGHT : Makes the Front Panel Display bright.

2 DIM : Makes the Front Panel Display dim.

3 AUTO DIM : Makes the Front Panel Display dim automatically when playing a DVD.

5 BLACK LEVEL

Adjusts the brightness of the screen.

6 QUASI-PAL

Depending on a disc, you can play a NTSC DVD disc by QUASI-PAL mode.

NOTE

• How to make the SETUP MENU disappear or return to menu screen during set up;
 Press RETURN button.

CHANGING
SETUP MENU

with the Remote

control most TVs. To program the remote, use the

TV Codes	
CODE	BRAND
0	SAMSUNG D
1	SAMSUNG F, LG A, LOEWE, PHILIPS, FINLUX A, YOKO, LOEWE OPTA A, MITSUBISHI A, PHONOLA A, RADIOLA A, SCHNEIDER
2	SAMSUNG A
3	SAMSUNG B
4	SAMSUNG C
5	SAMSUNG E
6	TOSHIBA A
7	PANASONIC A
8	GRUNDIG A, ELAURUNKT, SIEMENS
9	SHARP A
SETUP	HITACHI A
DISPLAY	SANYO A, AKAI, FISHER
OPEN/CLOSE	HITACH B, SABA A, THOMSON A, NORDMENDE A
AUDIO	THOMSON B, SABA B, TELEFUNKEN A, NORDMENDE B, BRANDT, FERGUSON, PIONEER A, TELEAVIA, HITACH C
SUB TITLE	SONY A
DVD POWER	TOSHIBA B, SANYO B, SHARP B, SONY B, MITSUBISHI B
ANGLE	TOSHIBA C, GRUNDIG B, FINLUX B
TOP MENU	TOSHIBA D
MENU	TOSHIBA E
RETURN	PHILIPS A, PHONOLA B, RADIOLA B
REV SEARCH	TOSHIBA F, GRUNDIG C, CGE, IMPERIAL, MIVAR
REPEAT	SABA C, BANG&OLUFSEN, LOEWE OPTA B, BRIONVEGA, FINLUX C, FORMENTI, PHILIPS B, SINGER, SINUDYNE, METZ, WEGA, PHONOLA C, RADIOMARELLI
FWD SEARCH	NOKIA, PANASONIC B, SABA D, PIONEER B, REX, SELECO, SALORA
BACK SKIP	HITACHI D, NORDMENDE C, PANASONIC C, THOMSON C, SABA E, TELEFUNKEN B, CONTINENTAL, EDISON
PLAY/PAUSE	PANASONIC D
NEXT SKIP	PANASONIC E
STOP	PANASONIC F
STEP	TELEFUNKEN C
CLEAR	MIVAL
MODE	LG B
BOOKMARK	JVC

4 If the TV turns off, setup is complete.

Enter other codes of the same brand if the first code does not work.


5 To operate the TV, use the "TV Function Buttons" described on page 13.

NOTE

The remote may not be able to control every model TV of the brands listed.

Troubleshooting Guide

Before requesting service (troubleshooting)

Problem	Action	Page
No operations can be performed with remote.	<ul style="list-style-type: none"> Check the batteries in the remote. May need replacing. Operate the remote control at a distance of no more than 20 feet. Remove batteries and hold down one or more buttons for several minutes to drain the microprocessor inside the remote to reset it. Reinstall batteries and try remote again. 	P4
Disc does not play.	<ul style="list-style-type: none"> Ensure that the disc is installed with the label side facing up. Check the region number of the DVD. This player cannot play CD-ROMs, DVD-ROMs, CD-R, etc. Insert a DVD, a VIDEO-CD or a CD. 	P8
5.1 channel sound is not being reproduced.	<ul style="list-style-type: none"> 5.1 channel sound is reproduced only when the following conditions are met : <ol style="list-style-type: none"> The DVD player is connected with the proper amplifier The disc is recorded with 5.1 channel sound. Check whether the disc being played has the "Dolby 5.1 ch" mark on the outside. Check if your audio system is connected and working properly. 	P14-15
The  icon appears on screen.	<ul style="list-style-type: none"> The features or action cannot be completed at this time because: <ol style="list-style-type: none"> The DVD's software restricts it. The DVD's software doesn't support the feature (e.g., angles). The feature is not available at the moment. You've requested a title or chapter number or search time that is out of range. 	P18-21 P24-28
Disc Menu doesn't appear.	<ul style="list-style-type: none"> Check if the disc has a Menu. 	P23-24
Playback mode differs from the Setup Menu selection.	<ul style="list-style-type: none"> Some of the functions selected in the Setup Menu may not work properly if the disc is not encoded with the corresponding function. 	P31-37
The screen ratio cannot be changed.	<ul style="list-style-type: none"> The Screen Ratio is fixed on your DVDs. 	P37
No audio.	<ul style="list-style-type: none"> Make sure you have selected the correct Digital Output in the Audio Options Menu. 	P35
Forgot password	<ul style="list-style-type: none"> Press power on from a cold start with no disc in the unit. Press the STOP and PLAY buttons simultaneously on the front panel for three seconds. The Select Menu Language display will appear. Select the desired language button. Press the SETUP button on the remote control to select the Parental Mode. The Parental Mode is now unlocked as indicated on the display. Press the DOWN button to select Parental. Press ENTER and the Create Password display will appear. You can now set your rating level and change your password to a new number. 	P34
If you experience other problems.	<ul style="list-style-type: none"> Go to the contents and find the section of the instruction book that contains the explanations regarding the current problem, and follow the procedure once again. If the problem still cannot be solved, please contact your nearest authorized service center. 	

REFERENCE

ange age	AC 110~240 V, 50/60 Hz 18 W 6.8 lbs W 16.9 in x D 11.0 in x H 3.5 in +41°F to +95°F 10 % to 75 %
(ISC)	Reading Speed : 11.45 ft/sec. Approx. Play Time (Single Sided, Single Layer Disc) : 135 min. Reading Speed : 3.9 to 4.6 ft/sec. Maximum Play Time : 74 min. Reading Speed : 3.9 to 4.6 ft/sec. Maximum Play Time : 20 min. Reading Speed : 3.9 to 4.6 ft/sec. Maximum Play Time : 74 min. (Video + Audio)
	2 channel : 1.0 Vp-p (75 Ω load) Y : 1.0 Vp-p (75 Ω load) Pr : 0.70 Vp-p (75 Ω load) Pb : 0.70 Vp-p (75 Ω load) Luminance Signal : 1.0 Vp-p (75 Ω load) Chrominance Signal : 0.286 Vp-p (75 Ω load)
se tion	L(1/L), R(2/R) 48 kHz Sampling : 4 Hz to 22 kHz 96 kHz Sampling : 4 Hz to 44 kHz 110 dB 100 dB 0.005 %

*: Nominal specification

reserves the right to change the specifications without

mate.