



User Guide

BT FREESTYLE ALARM CLOCK RADIO
AND CHARGER

 


Quick guide

Function

Button combination


Set time



Set date



 
Set alarm




Switch radio on



 Switch radio off




Set sleep timer

 

Tune radio



 Store station in memory



In this guide

<i>At a glance</i>	1
<i>Quick guide</i>	3
<i>Introduction</i>	5
<i>Safety</i>	6
<i>Setting up</i>	7
<i>Using your Freestyle Alarm Clock Radio</i>	8
<i>Setting the time and date</i>	8
<i>To set the Sleep Timer</i>	9
<i>Alarm beeps/radio alarm</i>	9
<i>Snooze control</i>	10
<i>Switching the radio on/off</i>	11
<i>Selecting a radio station</i>	11
<i>To lock/unlock the buttons</i>	12
<i>Help</i>	13
<i>General Information</i>	14

Please note

In this user guide, we've included helpful tips and useful notes. They are shown in a white box like this.

Introduction

Your Freestyle Alarm Clock Radio and Charger has been designed for ease of use and made to the high standards set by BT

Please read the instructions carefully before use and retain this user guide for future reference.

This Alarm Clock Radio comes with either:

- The Freestyle 2100 Twin, these handsets come pre-registered to the base and *cannot* be registered to any other DECT base.

OR

- The Freestyle 2000 Additional handset. This handset **MUST** be registered to your existing DECT base station for the handset to work. See the handset user guide and your base station user guide for instructions on how to register.

Please note

It is not possible to register the Freestyle 2000 handset to the Freestyle 2100 base station.

Safety

General

Only use the power supply included with the product marked Alarm Clock Radio (Item code 009865). Using an unauthorised power supply will invalidate your guarantee and may damage the product.

Do not open the product or power supply. This could expose you to high voltages or other risks.

This product should not be used near emergency/intensive care medical equipment and we do not recommend that it is used by people with pacemakers.

Cleaning

Simply clean the product with a damp (not wet) cloth, or an anti-static wipe. Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock.

Environmental

Do not expose to direct sunlight.

Do not stand your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces.

Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.

Do not expose your product to fire, explosive or other hazardous conditions.

There is a slight chance that your product could be damaged by an electrical storm. We recommend that you unplug the power supply during an electrical storm.

Setting up


Follow these steps to set up your Freestyle Alarm Clock Radio and Charger ready for use

Plan the location of your Alarm Clock Radio and Charger


Situate your product close enough to the power socket so that the cable will reach safely without stretching. Ensure that you plan the location so that the mains power is easily accessible in case you need to disconnect the power.

Connect the power cable

Plug the power cable into the power socket on the back of your Freestyle Alarm Clock Radio and Charger.

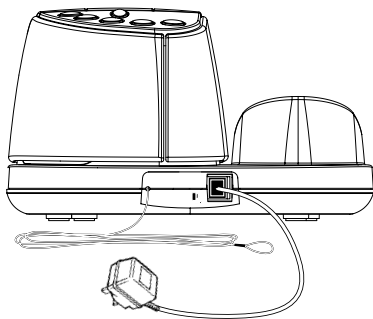

Plug the adaptor into the mains power supply and switch on.

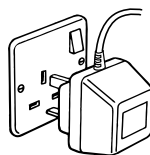

Improving the Radio reception

Extend the aerial fully and trail the aerial lead away from the charger to increase reception sensitivity.

Do not operate the unit over a steel desk or metal surface as this may lead to interference of reception.

Using your Freestyle Alarm Clock Radio

Setting the time and date

Please note

Your Freestyle Clock is set to adjust automatically for leap years until 2050.

To set the time

The time is displayed in the middle line of the display.

Press the **CLOCK/DATE** button. The clock setting flashes in the display.

Press *and hold* the **UP** or **DOWN** button to adjust the time quickly.

Now press *and release* the **UP** or **DOWN** button *repeatedly* to make the adjustments, i.e. exact minute setting.

Press the **CLOCK/DATE** button to confirm the time setting.

Clock/Date




Clock/Date

To set the date

The abbreviated day of the week (e.g. *SU* for Sunday), calendar date and month are displayed in the bottom line of the display.

e.g.

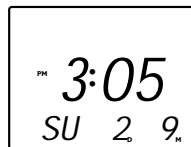

Clock/Date



Clock/Date

Press the **CLOCK/DATE** button *twice*. The year, day of the week, date and month flash in the display.

Press *and hold* the **UP** or **DOWN** button to move quickly through the days and months until the correct date is set.

Press the **UP** or **DOWN** button *repeatedly* to change the setting one day at a time.

Press the **CLOCK/DATE** button to confirm the date setting.

Please note

If you do not press any button for 15 seconds, the display switches back to idle mode.

To set the Sleep Timer

You can set the radio to switch itself off automatically at 10 minute intervals between 10 and 90 minutes after you press the **SLEEP SET** button. With the Sleep timer set to on, *SLEEP* will be displayed to the right of the time.

To set the SLEEP timer

Radio On
Sleep Set

Press once to display the current sleep timer setting, *ON* or *OFF*.

The display will show *ON* if no timer has been set.

The radio will then come on at the chosen station.

Radio On
Sleep Set

Press the **SLEEP SET** button *repeatedly* to change the sleep timer setting in 10 minute intervals from 90 minutes down to 10 minutes.

The radio will stay on while you change the setting.

Radio On
Sleep Set

When the setting you want is shown, *release* the button. After 4 seconds the display will return with the radio on and the sleep timer set.

Alarm beeps/Radio alarm

You can set two different times for the alarm beeps/radio alarm to come on, for example:

Using **ALARM 1** – you could set an alarm time for weekdays.

Using **ALARM 2** – you could set an alarm time for weekends.

You can also select when each alarm will sound:

D = daily alarm

WD = weekdays only

WE = Saturday & Sunday only

When the alarm is set the display will show the icon for the type of alarm you have set to the left of the time e.g.:



Alarm Beeps



Radio alarm

Alarm Off – No icon displayed.

When the alarm time is reached, if you have selected alarm beeps, they will sound for 10 minutes or until they are switched off. Or, if you have selected the radio alarm, the radio will come on for 60 minutes or until it is switched off.

To set the alarm

Alarm 1

Press **ALARM 1** or **ALARM 2**, to select the alarm you want. The display shows *AL1* or *AL2* and the current setting, e.g. *07:30* and the type of setting – daily, weekday or weekend.

Alarm 2



Press *and hold* the **UP** or **DOWN** button to adjust and set the time quickly.



Press the **UP** or **DOWN** button *repeatedly* to adjust the alarm time minute by minute.


Snooze
Radio Off

Press the **SNOOZE** button to select daily (d), weekday (Wd) or weekend (WE).

Alarm 1

Press the same button – **ALARM 1** or **ALARM 2** – to select the type of alarm you want e.g.:

Alarm 2

Alarm Beeps – Display shows 

Radio alarm – Display shows 

Alarm off – No icon is shown.

After a short while the clock radio display will revert to idle mode.

Please note

When using the radio alarm, the last station you listened to will play when the alarm activates.

To switch the alarm beeps/radio off

Alarm 1

When the alarm/radio is sounding:

or

Alarm 2

Press **ALARM 1** or **ALARM 2** as appropriate and the alarm beeps/radio will stop.

To switch the alarm off permanently, press **ALARM 1** (or **ALARM 2**) *repeatedly* until no alarm icon is shown on the display.

Snooze control

The **SNOOZE** button lets you temporarily turn off the alarm beeps *or* radio for 9 minutes. When that time has elapsed, the radio or alarm beeps will sound again. You can continue to use snooze control or turn the alarm off completely using the **ALARM 1** (or **ALARM 2**) button.

To use snooze control

Snooze
Radio Off

When the alarm beeps/radio sound, press the **SNOOZE** button.

To adjust the volume of the radio



When the alarm is on, press the **+** or **-** button to increase or decrease the volume.

Switching the radio on/off

To switch the radio on

Radio On
Sleep Set

Press the **RADIO ON** button.

To switch the radio off

Snooze
Radio Off

Press the **SNOOZE/RADIO OFF** button.

Please note

*If the radio has been switched on by the alarm then pressing the **RADIO OFF** button will activate the **SNOOZE** function and the radio will switch back on after 9 minutes. Under these circumstances to switch the radio off permanently, you need to press the **ALARM 1** or **ALARM 2** button once.*

Selecting a radio station

The selected radio station and band will be displayed in the top line of the display.

Band	Range
FM	87.5 – 108.5 MHz
AM	522 – 1656 KHz

You can select a radio station manually or you can store up to 4 radio stations (for both AM and FM) using the preset **MEMORY** buttons.

Once set, when you press one of the memory buttons (1-4), the preset radio station will begin playing automatically.

To manually select a radio station

Radio On
Sleep Set

Press the **RADIO ON** button to switch the radio on.

AM-FM

Press the **AM/FM** button to select the **AM/FM** band you want.

Setting



Press *and release* the **UP** or **DOWN** button to change the radio frequency one step at a time.

Or

Setting



Press *and hold* the **UP** or **DOWN** button to move quickly through the frequencies to select a radio station.

Setting



If you press *and hold* the **UP** or **DOWN** button for 3 seconds then *release*, the radio will auto search then stop when it detects a strong signal.

To store a radio station in the preset memory

Please note

You can use the preset buttons to store 4 FM stations and 4 AM stations.

When you are tuned to a station you want to store:

Store

Press the **STORE** button. The display flashes *MEM*.

1

Select a preset memory station using buttons 1-4. The selected number is displayed.

Store

Whilst the *MEM* icon is flashing, press the **STORE** button to confirm. *MEM* stops flashing and the selected station is stored.

To replace a stored station with a new one, repeat the steps above. The new station will automatically replace the old one.

To select a preset station

AM-FM

When the radio is on, press the **AM/FM** button to select the *AM/FM* band you want.

1

Press the button for the pre-set radio station you want (1-4). The radio comes on after 1 second.

To lock/unlock the buttons

You can lock the buttons so that the settings of your alarm clock radio cannot be changed.

Clock/Date

Press the **CLOCK/DATE** button.

Alarm 2


Press the **ALARM 2** button.

Alarm 1

Press the **ALARM 1** button.

Clock/Date

Press the **CLOCK/DATE** button.

The display shows .

Repeat these steps to unlock the buttons again.

Please note

If the radio is on when the buttons are locked, you will be unable to switch off or adjust the radio without unlocking the buttons.

Help

Customer Helpline

If you are still experiencing difficulty, call the Freestyle Helpline on 0870 240 3962 or email

bt.freestyle.helpdesk@vtecheurope.com

In the event of a power failure, your Freestyle Alarm Clock Radio will reset itself. If this happens the default settings will be restored and you will need to reset any stored radio stations, the time/date and any alarm settings.

General Information

Guarantee

Your Freestyle Alarm Clock Radio is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below, the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the BT Freestyle Alarm Clock Radio, or any component thereof, (other than batteries), which is identified as faulty or below standard, or as a result of inferior workmanship of materials. Products over 28 days old from the date of purchase may be replaced with a refurbished or repaired product.

The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is required.
- The equipment is returned to BT or its agent as instructed.
- This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.
- This guarantee does not affect your statutory rights.

Within the 12 month guarantee period:

If you experience difficulty using the product, prior to returning your product, please contact the BT Freestyle Helpline for assistance **0870 240 3962**, Mon-Fri, 9.00am to 5.30pm, Sat. 9.00am to 2.00pm or email **bt.helpdesk@vteceurope.com**

Outside of the 12 month guarantee period

If your product needs repair after the guarantee period has ended, the repair must meet the approval requirements for connection to the telephone network. We recommend that you call the Helpline on **0870 240 3962** and ask for details of our recommended repair agents.

Conditions of Use

For the conditions of use for BT's products and services, please refer to **BT.com**.

Visit us at www.bt.com



Offices worldwide

The telecommunications services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

© British Telecommunications plc 2003.
Registered Office: 81 Newgate Street, London EC1A 7AJ.
Registered in England No. 1800000.
BT Freestyle Alarm Clock Radio and Charger Issue 4 (07/03) 2
Designed and produced by The Art & Design Partnership Ltd.
Printed in China.

