

DC-530i

User manual



Thank you for purchasing this DC-530i digital camera. Please read these operating instructions carefully in order to use the product correctly. Keep the instructions in a safe place after reading so that you can refer to them later.

Disclaimer

We assume no responsibility over and above the provisions of the Product Liability Law for damages suffered by the user or third parties as a result of inappropriate handling of the product or its accessories, or by their operational failure and by their use. We reserve the right to make changes to this product and its accessories without prior notice.

Warning! Never try to open the camera or to take it apart. This will invalidate all guarantee claims.

Using your batteries

For best performance and prolonged battery life, we recommend the use of AA lithium or rechargeable NiMH batteries.

Extending battery life

The following functions use up a great deal of battery power and should therefore only be used occasionally:

- Excessive use of flash
- Editing images on the camera display
- Using the camera display as a view finder

The battery life can be affected by soiling. Please clean the contacts with a clean and dry cloth before putting the batteries in the camera.

Battery performance drops at temperatures below 5 °C (41 °F). If you use the camera at low temperatures you should have replacement batteries to hand and ensure they do not get too cold. Please note: you should not dispose of cold and seemingly flat batteries because these batteries may work again at room temperature.

Precautions

- Before using the camera, please ensure that you read and understand the safety precautions described below. Always ensure that the camera is operated correctly.
- Do not aim the camera directly into the sun or other intense light sources which could damage your eyesight.
- Do not try to open the case of the camera or attempt to modify this camera in

any way. High-voltage internal components create the risk of electric shock when exposed. Maintenance and repairs should be carried out only by authorized service providers.

- Do not fire the flash too close to the eyes of animals or people, especially for young children. Eye damage may result. In particular, remain at least one meter away from infants when using flash.
- Keep the camera away from water and other liquids. Do not use the camera with wet hands. Never use the camera in the rain or snow. Moisture creates the danger of fire and electric shock.
- Keep the camera and its accessories out of the reach of children and animals to prevent accidents or damage to the camera.
- If you notice smoke or a strange odor coming from the camera, turn the power off immediately. Never attempt to repair the camera on your own.
- Use only the recommended power accessories. Use of power sources not expressly recommended for this equipment may lead to overheating, distortion of the equipment, fire, electrical shock or other hazards.

■ FCC Compliance and Advisory

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1.) this device may not cause harmful interference, and 2.) this device must accept any interference received, including interference that may cause unsatisfactory operation.

This equipment has been tested and found to comply with the limits for a Class B peripheral, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. When shielded interface cables have been provided with the product or when specified additional components or accessories have elsewhere been designated to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulations.

Contents

GETTING STARTED	1	SETTING THE RESOLUTION AND QUALITY	21
USING THIS MENU	1	RECORDING MOVIE CLIPS	22
SCOPE OF DELIVERY	2	SETTING THE MOVIE SIZE	22
ATTACHING THE WRIST STRAP	2	USING THE ZOOM FUNCTION	23
PARTS OF THE CAMERA	3	USING THE FLASH	24
INSERTING THE BATTERIES	5	USING THE MACRO	25
LOW BATTERY INDICATOR	5	USING THE SELF-TIMER & BURST	26
ABOUT BATTERY TYPE	5	RECORDING AND PLAYING VOICES	27
INSERTING THE MEMORY CARD	6	RECORDING AUDIO CLIPS	27
ABOUT CAMERA MEMORY	6	PLAYING BACK AUDIO CLIPS	27
DCF PROTOCOL	6	ADDING A VOICE MEMO	28
SETTING THE DISPLAY LANGUAGE / DATE & TIME	7	RECORDING A VOICE MEMO	28
SETTING THE DISPLAY LANGUAGE	7	PLAYING BACK A VOICE MEMO	28
SETTING THE DATE & TIME	7	OTHER RECORDING FUNCTIONS	29
USING THE LCD MONITOR	9	SETTING THE METERING	29
REC MODE	9	SETTING THE WHITE BALANCE	29
PLAY MODE	10	SETTING THE ISO	30
CHANGING THE LCD STATUS	11	SETTING THE EXPOSURE	30
BASIC OPERATION	12	SETTING THE AEB	30
TURNING THE POWER ON AND OFF	12	SETTING THE HIGHLIGHT	30
POWER SAVING FUNCTION	12	SETTING THE SHARPNESS	31
CHANGING THE MODE	13	SETTING THE PHOTO EFFECT	31
SWITCHING BETWEEN REC MODE AND PLAY MODE	13	SETTING DATE STAMP	31
SELECTING THE REC MODE	13	PLAYBACK	32
USING THE MENUS	15	PLAYING BACK IMAGES	32
REC MENU	15	PLAYING BACK MOVIE CLIPS	32
SETUP MENU	16	MAGNIFYING & TRIMMING STILL IMAGES	33
BASIC RECORDING	19	VIEWING IN THUMBNAIL	34
RECORDING STILL IMAGES	19	PLAYING A SLIDE SHOW	34
USING THE Q MODE	20	DELETING FILES	35
		DELETING A SINGLE FILE	35
		DELETING MULTIPLE FILES	36
		DELETING ALL FILES	36

PROTECTING A SINGLE FILE	37	SOFTWARE INSTALLATION	45
PROTECTING ALL FILES	37		
PROTECTING MULTIPLE FILES	38	SYSTEM REQUIREMENTS	45
EDITING IMAGES	39	INSTALLING THE SOFTWARE	46
ROTATING STILL IMAGES	39	INSTALLING THE SOFTWARE DRIVER	47
CHANGING THE IMAGE SIZE	39	INSTALLING ULEAD PHOTO EXPLORER 8 SE	
CHANGING THE IMAGE WITH EFFECTS	40	BASIC	47
COPYING THE FILES	40	INSTALLING VIDEOSTUDIO 7 SE VCD	48
SETTING THE DPOF	41	USING THE SOFTWARE	48
CHOOSING A STARTUP IMAGE	42		
MAKING CONNECTIONS	43	APPENDIX	49
CONNECTING THE CAMERA TO A TV	43	ABOUT THE FOLDER & FILE NAME	49
CONNECTING THE CAMERA TO A PC	44	FOLDER STRUCTURE	49
USING THE CARD READER	44	FILE NAMING	49
CONNECTING THE CAMERA TO A COMPUTER		TROUBLESHOOTING	50
WITH THE USB CABLE	44	FUNCTION AVAILABLE LIST	51
		SPECIFICATIONS & CUSTOMER CARE	53

Getting Started

Using This Menu

Quick Start

This is the overview about take pictures and play back images with this camera.
For detail operation, please refer to the corresponding pages.

Getting Started

This section contains information you should know before using this camera.

Basic Operations

This section explains all recording features of this camera.

Recording

This section explains how to record still images, movies, and audio files.

Playback

This section explains playback, delete, and edit functions of still images, movies and audio files.

Setup Settings

This section explains how to control the camera related functions.

Making Connections

This section tells you how to connect this camera to a computer or TV.

Software Installation

This section tells you how to install the software that comes in CD-ROM.


Appendix

This section describes the troubleshooting and the camera specification.


The meanings of the symbols used in this user's manual are explained below:

 Caution	This indicates cautions that should be read before using these functions.
 Tips	This indicates the useful information when using this camera.
	This indicates the reference page.


Scope of delivery

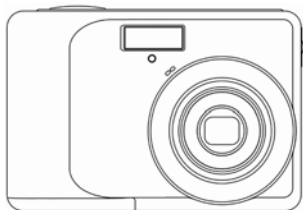


Camera

 

USB cable

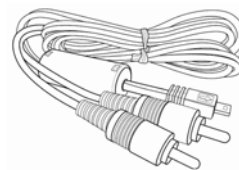


AV cable

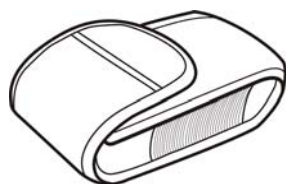


Soft case




Strap

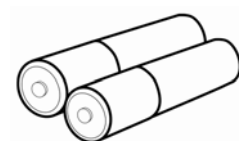

2 x AA batteries

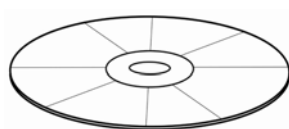

Software installation
CD-ROM

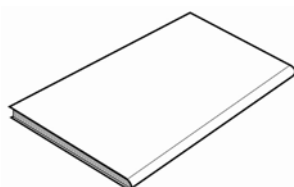

User's manual


Attaching the Wrist Strap

Attach the wrist strap to your camera as shown.





Caution

- Do not swing the camera around by the strap.

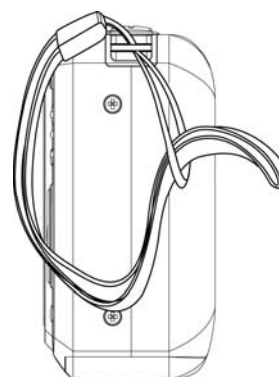


Parts of the Camera

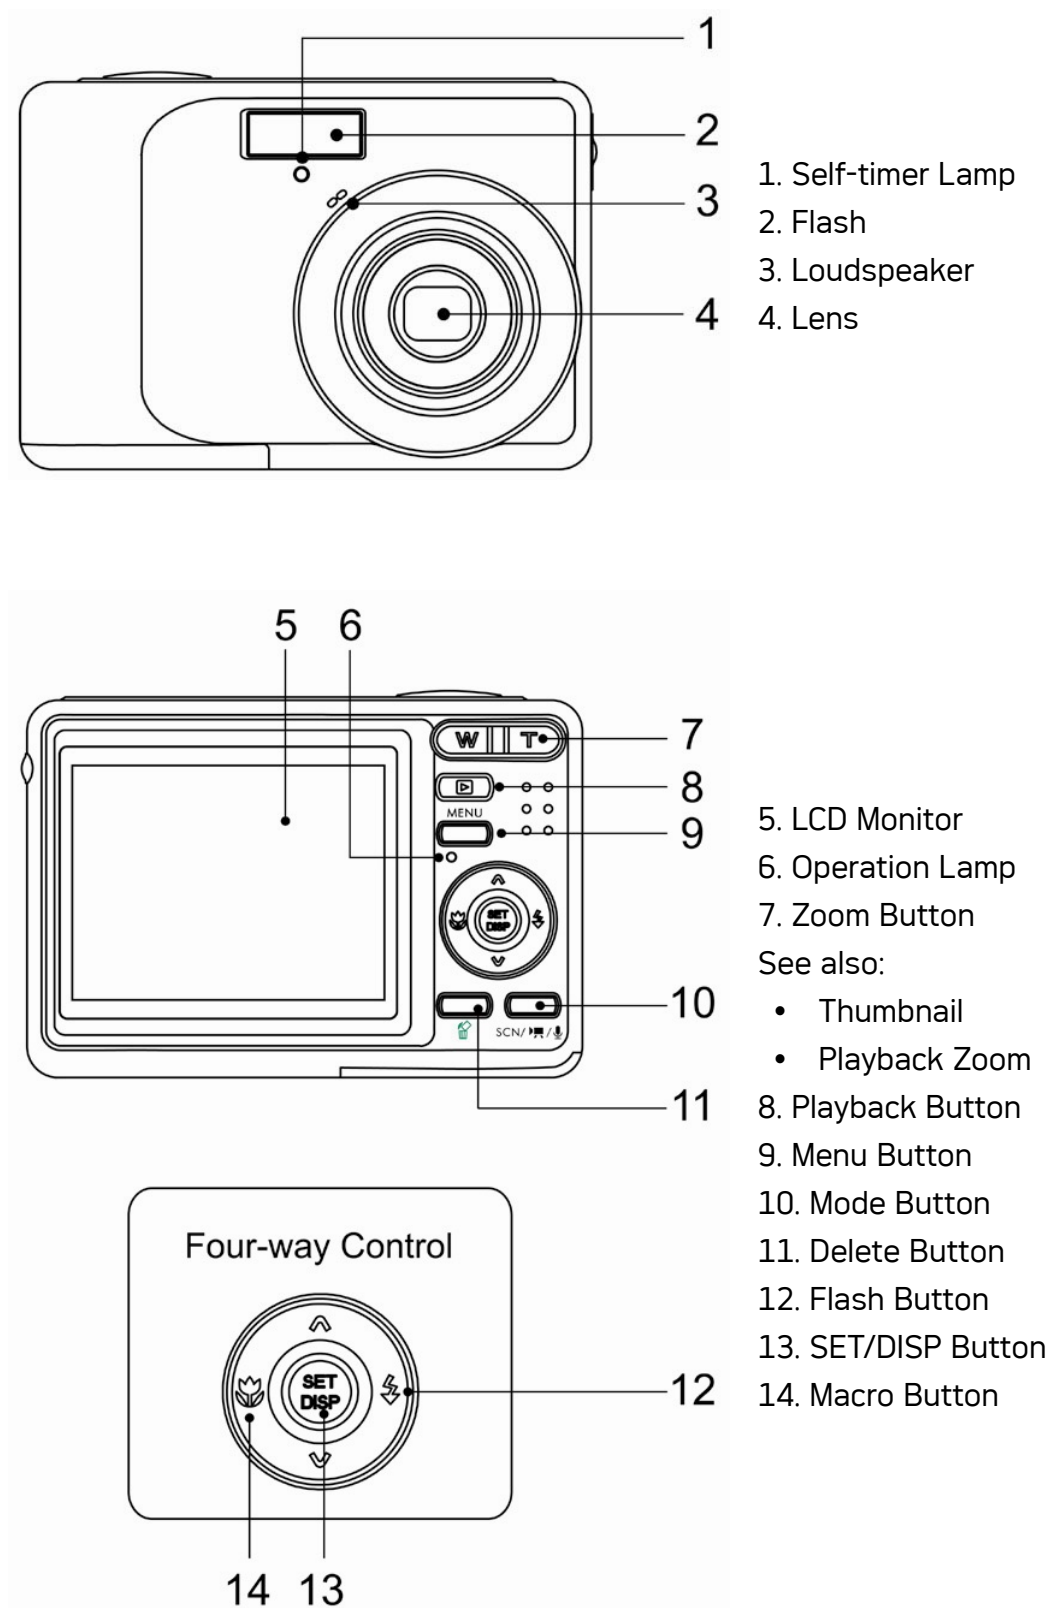


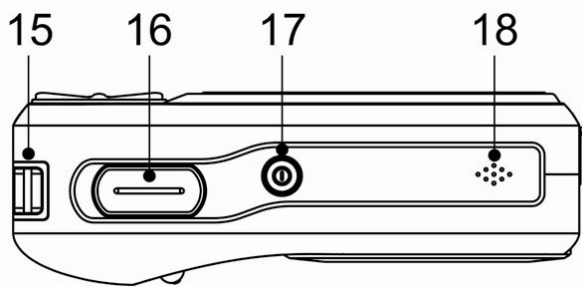

- 15. Strap Ring
- 16. Shutter Button
- 17. Power Button
- 18. Microphone

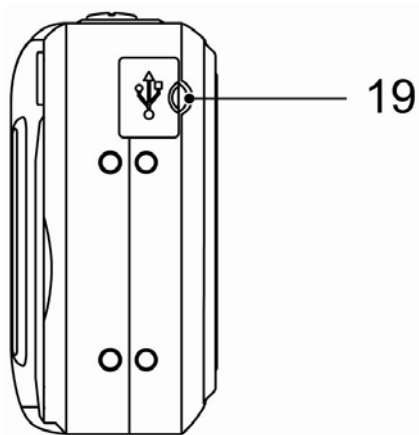

- 19. USB/ AV Terminal

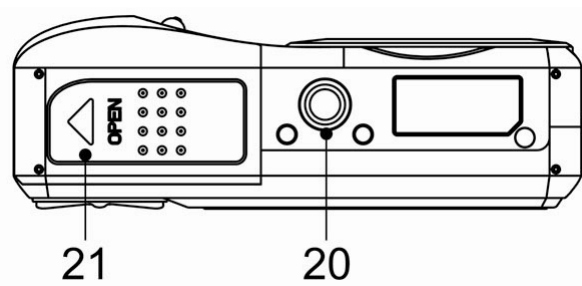

- 20. Tripod Socket
- 21. Battery Cover / Memory card slot

 
Inserting the Batteries

The camera is powered by two AA-size alkaline batteries or rechargeable NiMH (min. 1600 mAh / 1.2V) batteries.

1

Open the battery cover.


- Slide the battery cover in the direction indicated by the arrow.



2

Insert the batteries.

- Insert two AA-size batteries with the positive (+) and negative (-) poles matching the directions indicated inside the battery room.

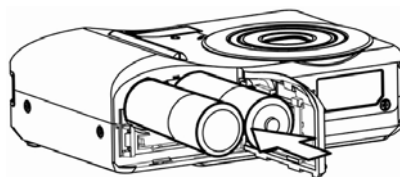

3

Close the battery cover.



Low Battery Indicator

A low battery indicator  appears on the LCD screen when the batteries are nearly exhausted. Batteries should be replaced promptly when the low battery indicator appears.



Caution

- Be sure to turn off the camera power before insert or remove batteries.
- Use only Alkaline or NiMH battery to power this camera. Use of any other type battery is not recommended.
- Replace all batteries at the same time. Never mix old and new batteries.
- Remove batteries if you will not be using them for a long time.
- The camera body may feel warm after extended use. This is normal.

About Battery Type

After replacing the batteries, please check the Battery Type in the setup menu ( page 18).

 
Inserting the Memory Card

You can use SD Card or MMC Card with this digital camera. The memory card slot is located beneath the battery cover, adjacent to the battery compartment.

1

Open the battery cover.


- Slide the battery cover in the direction indicated by the arrow.



2

Insert the card.

- Insert the card with the label facing up and the arrow pointing in.

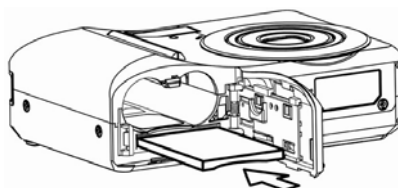

?

Tips

- To remove the card, gently press on the edge of the card and release it. Pull the card out and close the battery cover.

3

Close the battery cover.



!

Caution

- If insert or remove the card while the camera is power on, it may be damages the card or data.
- Do not touch the connection terminals on the back side of the card.

About Camera Memory

This camera is equipped with internal memory. If the memory card is not inserted in the camera, all images and movie clips recorded by the camera will be stored in the internal memory. If the memory card is inserted, images and movie clips are stored on the memory card.

DCF Protocol

The DCF protocol defines the format for image file data as well as the directory structure for the memory card. Images that are taken by a DCF camera can be viewed on DCF-compatible cameras from other manufacturers.

Setting the Display Language / Date & Time

When using the camera for the first time after purchasing, be sure to choose a language and set the date & time before using the camera.

Setting the Display Language

1 Turn the power on, and set the camera to the Setup Menu (☞ page 16).

2 Select [🔧 Language].

- Press ▲ or ▼ to select [Language] then press ► or the SET button to launch the submenu.



3 Select a Language.

- Press ▲ or ▼ to select a language and press ◀ or the SET button to apply the setting.

4 Press the MENU button to close the menu.

Setting the Date & Time

1 Turn the power on, and set the camera to the Setup Menu (☞ page 16).

2 Select [📅 Date & Time].

- Press ▲ or ▼ to select [Date & Time] then press ► or the SET button to launch the submenu.



3 Set date and time.

- Press ▲ or ▼ to change the value of the cursor located. Press ◀ or ► to move the cursor between settings.



Tips

- Holding down ▲ or ▼ changes the values continuously.
- For date stamp setting (☞ page 31).

4

Apply the setting.

- After adjusting the settings, press the **SET** or the **MENU** button to apply the setting.




Caution

- If the batteries are removed for about two days, the Date & Time setting will be lost. In this case, make these settings again.

Using the LCD Monitor


The LCD monitor is used to compose images while recording, adjust settings and replay images. The following indicators may appear on the LCD monitor while recording or playing back images.

REC mode

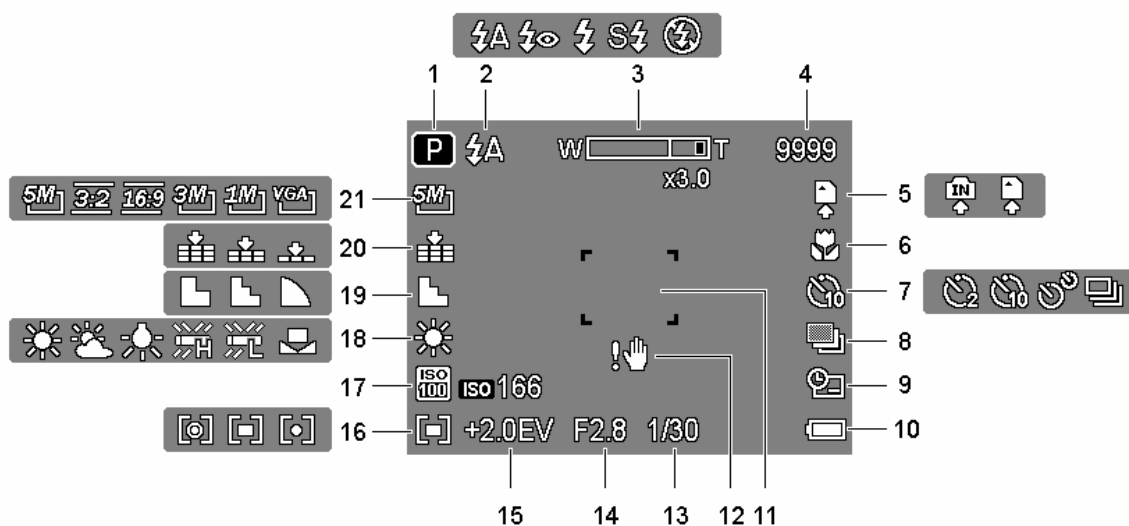

- | | | | |
|----|--------------------|----|----------------|
| 1 | Recording mode | 11 | Focus area |
| 2 | Flash | 12 | Shake warning |
| 3 | Zoom indicator | 13 | Shutter speed |
| 4 | Shots remaining | 14 | Aperture value |
| 5 | Storage media | 15 | Exposure |
| 6 | Macro | 16 | Metering |
| 7 | Self-timer / Burst | 17 | ISO |
| 8 | AEB | 18 | White balance |
| 9 | Date stamp | 19 | Sharpness |
| 10 | Battery | 20 | Quality |
| | | 21 | Resolution |

PLAY mode

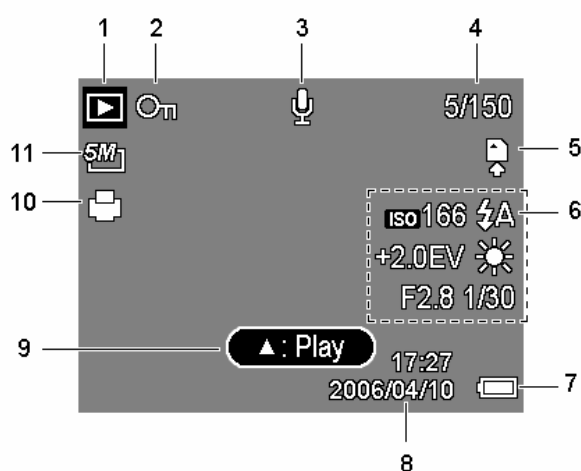

- | | | | |
|---|---------------------|----|----------------------|
| 1 | Playback mode | 6 | Recording info |
| 2 | Protect | 7 | Battery |
| 3 | Voice memo | 8 | Captured date & time |
| 4 | File number / Total | 9 | Voice memo control |
| 5 | Storage media | 10 | DPOF |
| | | 11 | Resolution |




Caution

- Some information may not display correctly if you display images captured by other camera model.

Changing the LCD Status

Press the **SET/DISP** button changes the LCD status as shown below:


■ REC mode

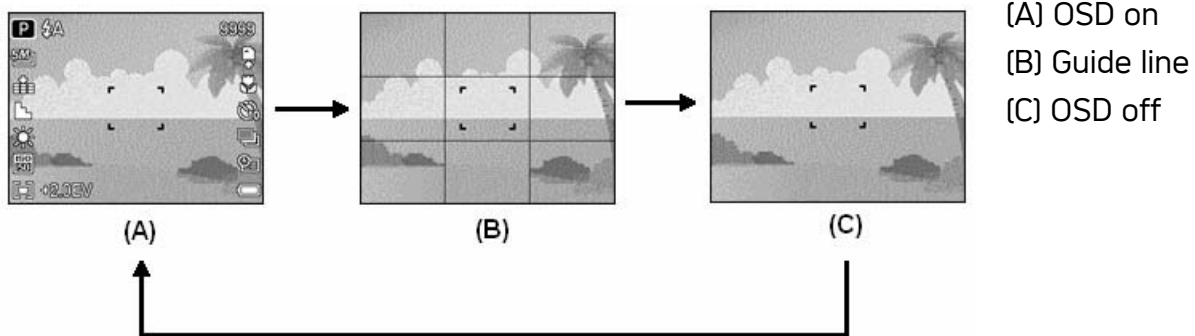

Tips

- Use the "Guide line" to compose images easily before shooting images.

■ PLAY mode

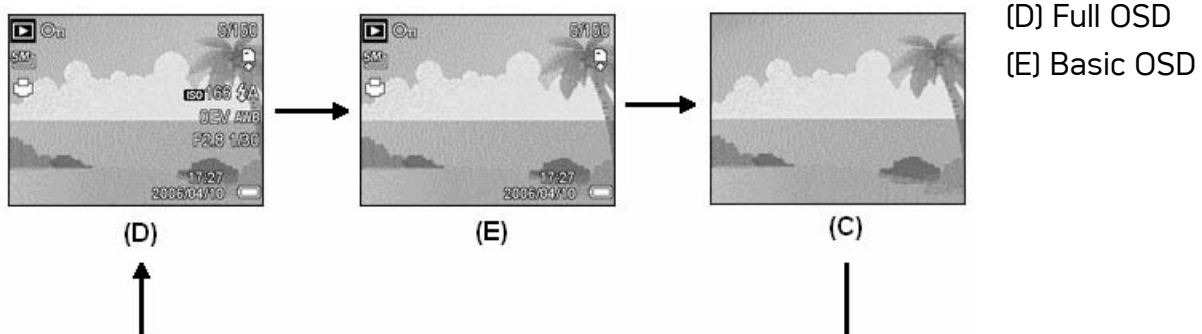

Caution

- You cannot change the LCD status in the following situation:
 - Recording movie clips or audio files
 - Playing movie clips or audio files
 - Playing the slideshow
 - Viewing in thumbnail
 - Trimming a still image
- When the LCD status is not in "OSD on", press Macro (◀) or Flash (▶) will change the display mode to "OSD on" automatically.

Basic Operation

Turning the Power On and Off


1

Press the **POWER** button [❶] to turn on the camera in the **REC** mode.

- The power turns on, the lens extends and the LED lights in green.

Press the **PLAY** button [❷] to turn on the camera in the **PLAY** mode.

- The power turns on, and an image displays on the LCD monitor [❸].

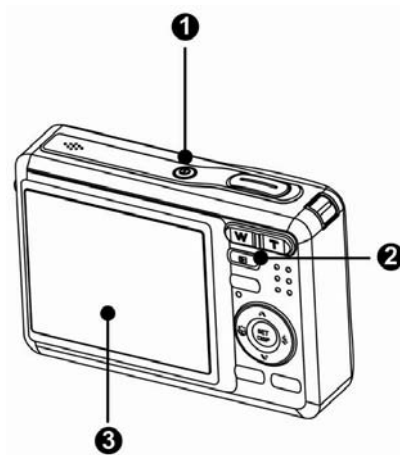

2

Press the **POWER** button [❶] again to turn the power off.

- The power turns off, the lens retracts and the LED turns off.



Tips

- You can turn on the camera without the start-up and operating sound by pressing and holding the **POWER** [❶] or the **PLAY** [❷] button over 1.5 seconds.
- Switch between **REC** mode and **PLAY** mode (👉 page 13).

Power Saving Function

For saving the battery power, the LCD monitor automatically turns off 1 minute after the last control accessed (factory-preset setting). Press any button other than the power button to turn on the LCD monitor. You can change the power save setting in Setup menu (👉 page 17).

After the power saving function has been active for 1 minute, the power will turn off completely. Press the **POWER** [❶] or the **PLAY** [❷] button to restore the power.

The power save feature will not activate in the following situation:

- Recording movie clips or audio files
- Playing movie clips or audio files
- Playing the slideshow
- Connecting the camera to a computer or printer with the USB cable


Changing the Mode

You can record images and voices in the REC mode. And using the PLAY mode to replay, delete, or edit images on the LCD monitor.

Switching between REC mode and PLAY mode

In REC mode, press the **PLAY** button **(1)** to switch to the PLAY mode.

In PLAY mode, press the **PLAY** **(1)** or the **MODE** **(2)** button to switch to the REC mode.

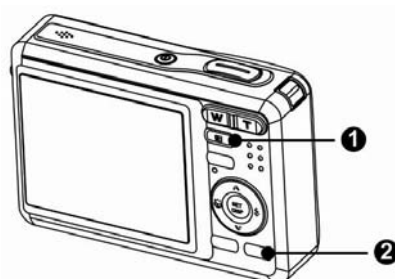

Selecting the REC mode

1
Set the camera to the REC mode (☞ page 13).

2
Launch the mode palette.

- Press the **MODE** button **(2)** to show the scene mode palette.



3
Select a mode.

- Use the four-way control to select a desired mode and press the **SET** button to confirm the setting.

Display	Title	Description
	Program	The camera makes settings suitable for the shooting conditions.
	Movie	For recording movie clips.
	Voice REC	For recording audio.
	Sunset	Enhance the red hue for recording sunset images.
	Backlight	Shooting the image of backlight object by changing metering.


Display	Title	Description
	Q Mode	Allows beginners to take pictures easily.
	Landscape	Used for the wide scenic views.
	Portrait	Blurring the background to focus on the subject.
	Snow	Used for the beach or snow scenes.
	Fireworks	Slow shutter speed to take fireworks exploding.
	Night Scene	Shooting the subject while keeping the background night scenery.
	Kids	Take a still image to capture moving kids.
	Food	Higher saturation makes food more appetizing.
	Building	Enhance the edges of the subject.
	Text	Enhance the black & white contrast.

Using the Menus

When a menu is displayed, the four-way control and the **SET** button are used to make the desired settings.

REC menu

- 1
Turn the power on, and set the camera to the REC mode (☞ page 13).
- 2
Open the REC menu.
 - Press the **MENU** button (❶) to display the menu.
- 3
Select an item.
 - Press ◀ or ▶ (❷) to select a menu item.
- 4
Change the setting.
 - Press ▲ or ▼ (❷) to change the setting.
- 5
Press the **MENU** (❶) or the **SET** (❷) button to save the settings and close the menu.

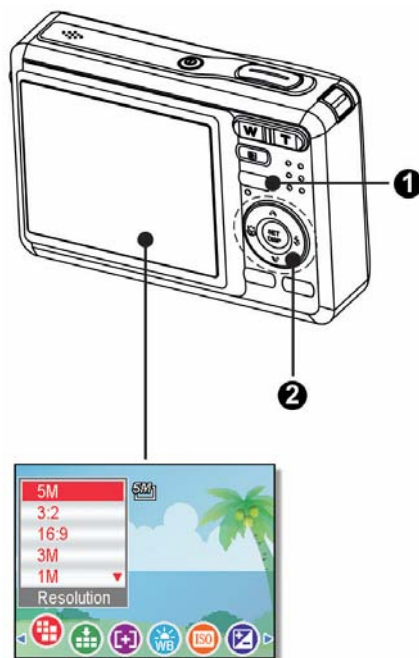

REC menu list (Still Image)

Menu Item	Available Setting	Page
Resolution	5M / 3:2 / 16:9 / 3M / 1M / VGA	21
Quality	High / Medium / Low	21
Metering	Spot / Matrix / Center	29
White Balance	Auto / Daylight / Cloudy / Tungsten / Fluorescent / Custom / Off	29
ISO	Auto / ISO 50 / ISO 100 / ISO 200 / ISO 400	30
Exposure	-2.0EV ... +2.0EV	30
Drive Mode	Off / 2 / 10 / Self / Off	26
AEB	Off / On	30
Highlight	Off / On / Off	30
Sharpness	Low / Medium / High	31
Effect	Off / B&W / Sepia / Negative / Red / Green /	31

	Blue	
Date Stamp	Off / Date / Date & Time	31
Digital Zoom	Off / On	23

REC menu list (Movie)

Menu Item	Available Setting	Page
Movie Size	/ /	22
Metering	/ /	29
White Balance	Auto / / / / / /	29

Setup menu

1

Turn the power on, and set the camera to the REC or PLAY mode (☞ page 13).

2

Press the MENU button (❶) to open the REC or PLAY menu.

- The menu displays depends on whether you are in the REC mode or the PLAY mode.

3

Open the Setup menu.

- Press four-way control (❷) to select **SETUP** (⚙️) and then press the **SET** (❸) button to display the Setup menu.

4

Select an item.

- Press ▲ or ▼ (❹) to select a menu item and then press ► or the **SET** (❸) button to launch the submenu.


5

Change the setting.

- Press ▲ or ▼ (❹) to select an option and press ◀ or the **SET** (❸) button to apply the setting.

6

Press the MENU (❶) button to close the menu.

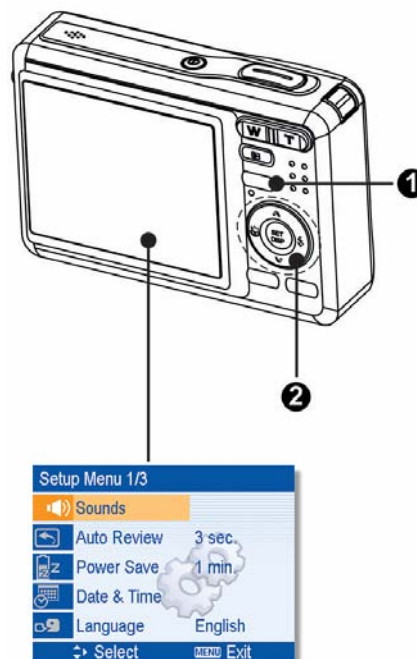

Setup menu list

Menu Item	Functions																					
Sounds	[Shutter]: Sets the shutter sound on and off. [Start-up]: Sets a type of the start-up sound. [Beep]: Sets the operation sound on and off. [Volume]: Adjusts the volume of the shutter sound, start-up sound, beep and playback sound.																					
Auto Review	[Off]: The captured image will not automatically display after shooting. [3 sec.]: The captured image will display for 3 seconds after shooting. [5 sec.]: The captured image will display for 5 seconds after shooting.																					
Power Save	[1 min.] / [3 min.] / [5 min.]: For power consumption, the camera is turned off automatically for a period of time. The power save feature will not activate in some situation (👉 page 12).																					
Date & Time	Sets the date & time (👉 page 7).																					
Language	Select a language for display menus and other information from the following 19 languages: (👉 page 7) <table><tr><td>[English]: English</td><td>[Español]: Spanish</td></tr><tr><td>[Deutsch]: German</td><td>[Français]: French</td></tr><tr><td>[Italiano]: Italian</td><td>[Português]: Portuguese</td></tr><tr><td>[Nederlands]: Dutch</td><td>[Čeština]: Czech</td></tr><tr><td>[Magyar]: Hungarian</td><td>[Polski]: Polish</td></tr><tr><td>[Türk]: Turkish</td><td>[Polski]: Polish</td></tr><tr><td>[Svenska]: Swedish</td><td>[Русский]: Russian</td></tr><tr><td>[العربى]: Arabic</td><td>[日本語]: Japanese</td></tr><tr><td>[한국어]: Korean</td><td>[正體中文]: S. Chinese</td></tr><tr><td>[繁體中文]: T. Chinese</td><td></td></tr></table>		[English]: English	[Español]: Spanish	[Deutsch]: German	[Français]: French	[Italiano]: Italian	[Português]: Portuguese	[Nederlands]: Dutch	[Čeština]: Czech	[Magyar]: Hungarian	[Polski]: Polish	[Türk]: Turkish	[Polski]: Polish	[Svenska]: Swedish	[Русский]: Russian	[العربى]: Arabic	[日本語]: Japanese	[한국어]: Korean	[正體中文]: S. Chinese	[繁體中文]: T. Chinese	
[English]: English	[Español]: Spanish																					
[Deutsch]: German	[Français]: French																					
[Italiano]: Italian	[Português]: Portuguese																					
[Nederlands]: Dutch	[Čeština]: Czech																					
[Magyar]: Hungarian	[Polski]: Polish																					
[Türk]: Turkish	[Polski]: Polish																					
[Svenska]: Swedish	[Русский]: Russian																					
[العربى]: Arabic	[日本語]: Japanese																					
[한국어]: Korean	[正體中文]: S. Chinese																					
[繁體中文]: T. Chinese																						
File No.	Use this function if the camera experiences a "Folder cannot be created" error or if you want to restart numbering, for example, after erasing all files.																					
	[Series]:	Store the latest used file number no matter deleting files or inserting a new memory card.																				
	[Reset]:	Reset file numbering each time the memory card is changed.																				


Menu Item	Functions
	Resetting the file number is useful for avoiding the file name duplication when images are downloaded to a computer (☞ page 49).
TV Out	You can review images on a television with a supplied AV cable (☞ page 43). TV Out should be set to either NTSC or PAL depending on your region. [NTSC]: America, Japan, Taiwan and others [PAL]: Europe, Oceania and others
USB	[Computer] / [Printer]: Sets the USB mode to connect the camera with a printer or computer (☞ page 44).
S.Image	Sets a recorded image as the start-up image (☞ page 42).
Format	To erase all data stored in the memory card if you are using a card, or all data stored in the internal memory if there is no card inserted. - A "BUSY...PLEASE WAIT" message displays and the memory card is starting format. - A "COMPLETED" message displays when finish formatting. - All data will be deleted including protected files. Be sure to download important files to your computer before formatting.
Battery Type	To ensure the camera displays battery level correctly, set the type to match the batteries used. [Alkaline]: When use alkaline batteries. [NiMH]: When use NiMH batteries.
Reset All	Resets the entire menu and button operation settings to initial default. The following settings do not change after Reset All: - Date & Time setting - Language setting - TV out setting - Battery Type

Basic Recording

Recording Still Images

1
Turn the power on, and set the camera to the REC mode (☞ page 13).

2
Compose the subject on the monitor.
• Aim the focus area (❶) to the subject that you want to take.

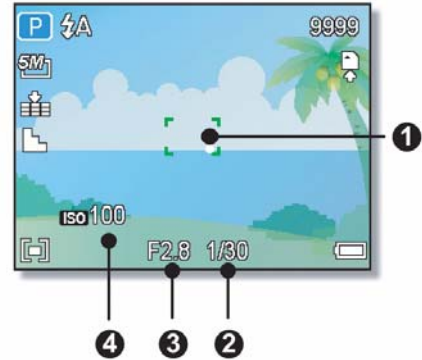


3
Half press the shutter button to focus the image.
• The focus area (❶) becomes green while in focus, then shutter speed (❷), aperture value (❸) and ISO value (❹) are displayed.
• If the shutter speed is slow or the possibility that image may be blurred, the shake warning icon !👉 may appear on the LCD monitor. To avoid it, use a tripod to stabilize the camera when recording images.

4
Take a picture.
• Press the shutter button fully to take a picture.




Caution

- Make sure that your fingers or the wrist strap does not block the lens.

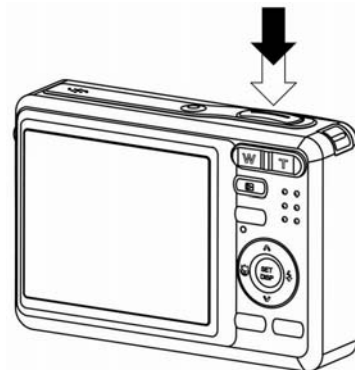

Using the Q mode

The Q mode provides a simplified camera interface. Larger icons and fewer controls make it easier to take pictures anytime, especially for the beginners and elder users.

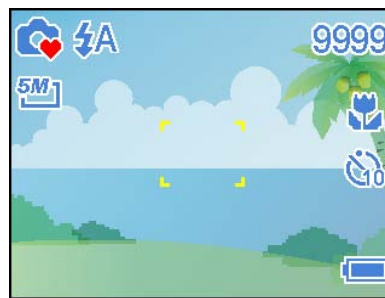

You can use only the basic settings in the Q mode:

Button	Flash: Auto / Red eye / Force on / Slow sync / Force off
	Macro: Off / On
	SET/DISP: OSD on / Guide line / OSD off
Menu	Resolution: 5M / 3:2 / 16:9 / 3M / 1M / VGA
	Drive Mode: Off / 2 sec. / 10 sec. / Double / Burst
	Beep: Off / On
	Auto Review: Off / 3 sec. / 5 sec.

Rest of settings will not be controlled as below:

Fixed setting [*]	- Quality: S.Fine - Metering: Multi - White balance: Auto - ISO: Auto - Exposure: Auto - AEB: Off	- Highlight: Off - Sharpness: Normal - Effect: Off - Date Stamp: Date & Time - Digital Zoom: Off
Utility setting [**]	- Shutter sound - Start-up sound - Power save - Date & Time - Language	- File No. - TV out - USB - Start-up image

[*] Fixed setting: Settings are fixed in Q mode.

[**] Utility setting: Use the same setting as last mode used.

Setting the Resolution and Quality

You can select lower image resolution and quality to decrease the image size to capture more images. Choose a suitable setting according to the desired image quality and purpose. For detail operation, see page 15.

Resolution Values

Image Size		Print Size	
	2560 x 1920	Printing larger than A4-size.	Larger  Smaller
	2560 x 1712		
	2560 x 1440		
	2048 x 1536	Printing to postcards or attaching to e-mail.	
	1024 x 768		
	640 x 480		

Quality Values

Compression		Purpose	
	Super Fine	Shoot higher quality images.	Higher Quality  Lower Quality
	Fine	Shoot normal quality images.	
	Normal	Shoot for more images.	

Recording Movie Clips

1 Turn the power on, and set the camera to the Movie mode (☞ page 13).

2 Compose the subject on the monitor.

- Aim the focus area [④] to the subject that you want to take.
- The LCD monitor displays the available recording time [③].

3 Start recording.

- Press the shutter button [①] to start recording.
- Using the zoom button [②] to adjust the image size.
- The White Balance is set and locked to the settings of the first frame




Caution

- Sound cannot be recorded while pressing the zoom button.
- The digital zoom cannot be used in Movie mode.

4 Finish recording.

- Press the shutter again to end recording.
- The camera will stop recording automatically when the memory capacity has been reached.

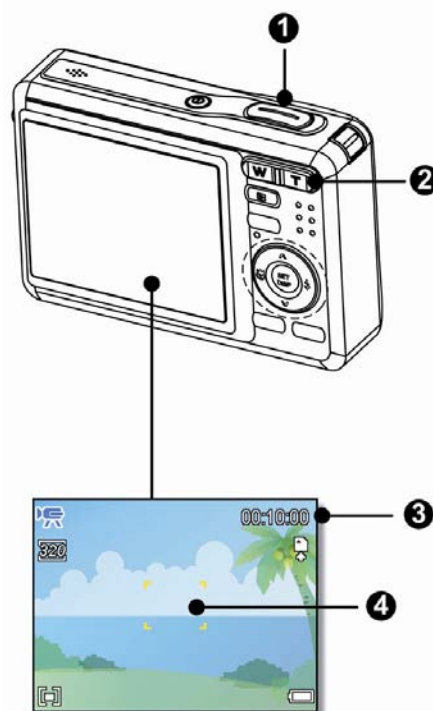

Setting the Movie Size

Movie Size and Frame Rate

Resolution		Frame Rate	
640	640 x 480	30 frames/sec.	Higher Quality
320	320 x 240		↕
160	160 x 120		Lower Quality

Using the Zoom Function

Your camera has a combination of optical and digital zoom functions that allows you to zoom in on far away subjects or zoom out for a wide angle shot.

The optical zoom is achieved by mechanically adjusting the lens of the camera. The digital zoom enlarges or shrinks the image using a software process.

1

Make the zoom setting, and point the camera at the subject.


2

Press the zoom button (1) to compose the image.

[W]: zoom out for a wide-angle shot.

[T]: zoom in for a telephoto shot.

- When the zoom button is pressed, the zoom bar appears on the LCD monitor.
- When the optical zoom (2) factor is at maximum, zooming stops temporarily. Press the [T] again, the camera switches to the digital zoom (3) automatically and zooming continues.
- The digital zoom (3) will not activate in movie recording.

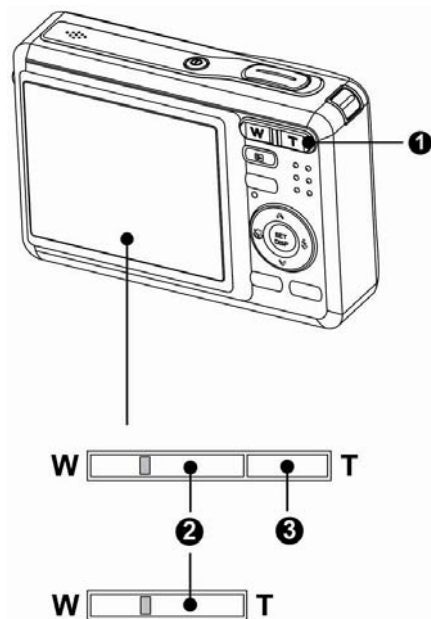

3

Press shutter button to take a picture.



Tips


- Digital zoom works by enlarging the center portion of an image through a software interpolation process.
- The digital zoom is used to achieve magnification levels up to approx. 4 times.

Using the Flash

The flash is not only for taking pictures when there is insufficient light, but also when the subject is in shade or in backlight conditions. Press the flash button cycles your camera through the various flash modes. The flash will not activate when continuous shooting or movie recording.

1

Turn the power on, and set the camera to the REC mode (☞ page 13).

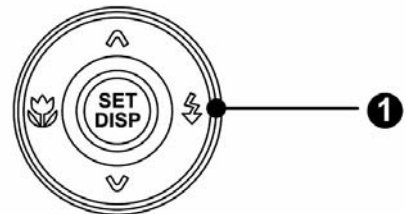

2

Press the flash button (❶) changes the flash mode.

- Each time the flash button is pressed, the flash icon (❷) changes.



Auto flash:

Flash fires automatically when shooting conditions require extra lighting.



Red-eye reduction:

Flash strobes to let the subject's eyes adjust to the flash, then fires again to take the actual image. Your camera will detect the subject brightness and use the flash only when required.



Force on:

Flash fires every time you take a photo, regardless of lighting conditions.




Slow sync:

Flash fires with a slow shutter speed.



Force off:

The flash never fires even in dark situation.

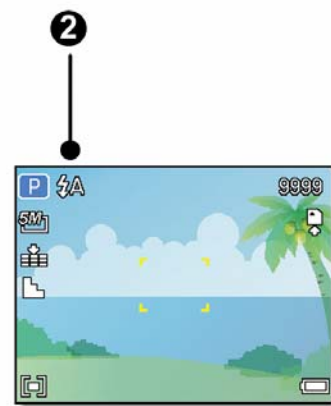

3

Press shutter button to take a picture.



Caution

- The flash charging time may increase when the battery is low.
- The available flash settings are limited depending on the REC mode you selected (☞ page 51).

Using the Macro

Your camera is equipped with a macro function that allows you to focus on very close subjects. In macro mode you can focus on subjects 15 cm from the lens when in the maximum wide angle (zoomed out) setting and 40 cm in the maximum telephoto (zoomed in) setting.

1

Turn the power on, and set the camera to the REC mode (☞ page 13).



2

Press the macro button (●) enters the macro mode.

- The macro icon (●) displays in the LCD monitor.
- To leave the macro mode, press the macro button (●) again.

3

Press shutter button to take a picture.

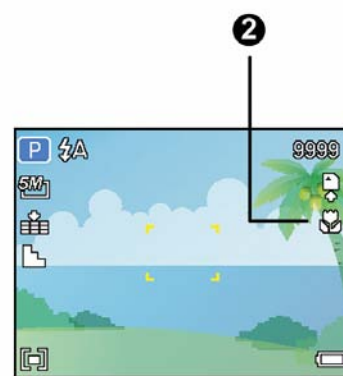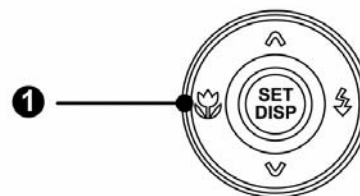

Tips


- Distances referred to measure the distance between the camera lens surface and the subject.

Using the Self-timer & Burst

Use the self-timer to set a delay from the time the shutter button is pressed to the time the image is shot. Use the burst to record continuous still images shooting.

1
Turn the power on, and set the camera to the REC mode (👉 page 13).

2
Open the REC menu (👉 page 15).
• Use ◀ or ▶ to select [Drive mode] from the REC menu.

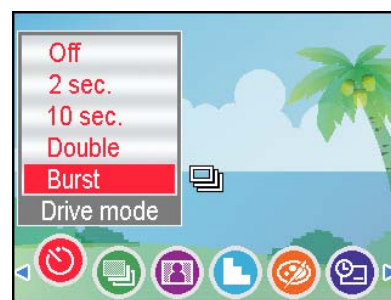

3
Change the setting.
• Press ▲ or ▼ to select a drive mode, then press the SET button.

Off:

Record a single image.



2 sec.:

The shutter release will be delay for 2 seconds.



10 sec.:

The shutter release will be delay for 10 seconds.



Double:

Record two images in a shot after pressing the shutter release button 10 and 12 seconds.



Burst:

Keep pressing the shutter button fully to take a continuous shooting. Release the shutter button to stop shooting.

4
Press shutter button to take a picture.



Tips

- When using the self-timer function, be sure to use a tripod or place the digital camera on a level, stable surface.

Recording and Playing Voices

Recording Audio Clips


1

Turn the power on, and set the camera to the Voice REC mode (☞ page 13).

2

Press the shutter button (❶) to start recording.

- The voices are recorded from the microphone (❷) of the camera. Be careful to avoid touching the microphone while recording

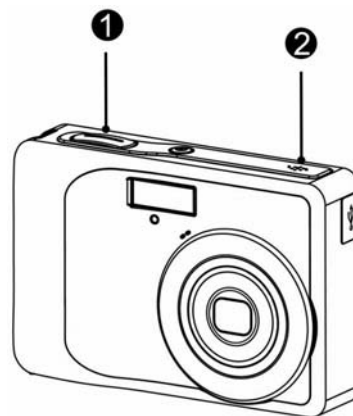

3

Press the shutter button again to end recording.

- The camera will stop recording automatically when the memory capacity has been reached.

Playing Back Audio Clips

1

Turn the power on, and set the camera to the PLAY mode (☞ page 13).

2

Press ◀ or ▶ to select the audio clip that you want to playback.



3

Start playing back.

- Press ▲ to start playing the audio clip.
- Press ▼ to stop the audio clip, or press ▲ to pause it. When audio clip paused, press ▲ again to resume.

Adding a Voice Memo

You can add a voice memo to the still images after you record it.

Recording a Voice Memo

1
Turn the power on, and set the camera to the PLAY mode (☞ page 13).

2
Press ◀ or ▶ to select a still image that you want to add a voice memo.

- If the image already has the voice memo recorded, the  appears on the LCD monitor. The new recording will replace the previous one.



3
Open the PLAY menu.

- Press the **MENU** button, using four-way control to select **Voice Memo** () and press the **SET** button.

4
Press the **SET** button to start recording for 30 seconds.

- Press the **SET** button again to end recording.

! Caution

- The voice memo cannot be added to a movie clip or a protected image.
- You cannot delete only the voice memo. When you delete the image, the attached voice memo is also deleted.

Playing Back a Voice Memo

1
Turn the power on, and set the camera to the PLAY mode (☞ page 13).

2
Press ◀ or ▶ to select the image that has the voice memo recorded.

3
Start playing back.

- Press ▲ to start playing the voice memo.
- Press ▼ to stop the voice memo, or press ▲ to pause it. When voice memo paused, press ▲ again to resume.

Other Recording Functions

Setting the Metering

There are 3 different light metering options available on your camera.

Option	Description
	Light is measured from the entire shooting screen, but gives more importance to the values near the center.
	Selects an exposure based on readings from multiple points in the subject area
	Selects an exposure based on a single reading taken from the center of your picture.

Setting the White Balance

Adjust the white balance to match different light sources such as sunlight, incandescent (tungsten) lighting or, fluorescent lighting.

Option	Description
AUTO	Automatically corrects white balance. Ideal for general photography.
	Adjusts for bright sun conditions, or natural light conditions.
	Adjusts for cloudy days or twilight conditions
	Adjusts for normal indoor lighting conditions. Corrects the orange hue of household light bulbs. Ideal for indoor photos under tungsten or halogen lighting without a flash.
	Adjusts for fluorescent lighting. Corrects the green hue of fluorescent lighting. Ideal for indoor photos under fluorescent lighting without a flash.
	
	For more accurate adjustment or when the light source cannot be specified.



Tips

- Point the camera at a white piece of paper or similar object under the lighting conditions for which you want to set the white balance, and then press the Shutter button.

Setting the ISO

With the initial settings, the ISO sensitivity is automatically set according to the brightness of the subject.

Option	Description
Auto	Sets the ISO sensitivity automatically.
ISO 50	Sets the sensitivity to ISO 50 equivalent.
ISO 100	Sets the sensitivity to ISO 100 equivalent.
ISO 200	Sets the sensitivity to ISO 200 equivalent.
ISO 400	Sets the sensitivity to ISO 400 equivalent.



Tips

- Higher ISO speeds increase the image noise. To take clean images, use as low an ISO speed as possible.

Setting the Exposure

Set the exposure value manually to compensate for unusual lighting conditions such as indirect indoor lighting, dark backgrounds, and strong backlighting.

Setting the AEB

Sets the auto exposure bracketing (AEB) to shoots 3 continuous images, each with a different exposure setting: correctly exposed, underexposed, and overexposed.

Setting the Highlight

Make the subject stand out from its surroundings. The subject will be in focus in three different ranges:  /  / 

Setting the Sharpness

You can select whether you want the image to have sharp or soft outlines.

Option	Description
	The edges of the image are emphasized. The edges will become sharp, but noise may occur in the recording image.
	The edges of the image are sharp. This is suitable for printing.
	The edges of the image are softened. This is suitable for editing images on PC.

Setting the Photo Effect

You can add special effects to your images in Record mode or in Playback mode.

Option	Description
Off	No effect is added to the image.
B&W	Convert image to black & white.
Sepia	Recorded image will be stored in a sepia tone.
Negative	Opposite what they were in the original image.
Mosaic	Add mosaic tiles to the images.
Red	The image becomes reddish.
Green	The image becomes greenish.
Blue	The image becomes bluish.

Setting Date Stamp

The Date Stamp function can be used to add a date to your pictures as you take them.

Option	Description
Off	Do not add the recorded date & time to printed images.
Date	Only add the recorded date to printed images.
Date & Time	Add the recorded date & time to printed images.

Playback


Playing Back Images

- 1**
Turn the power on, and set the camera to the PLAY mode (☞ page 13).
 - The latest recorded image appears on the LCD monitor.
 - If there are no images stored, a message [No image] appears.

- 2**
Press the four-way control ◀ or ▶[0].
 - ◀: displays the previous image.
 - ▶: displays the next image.

? Tips

- Holding down ◀ or ▶ scrolls images in a high speed.

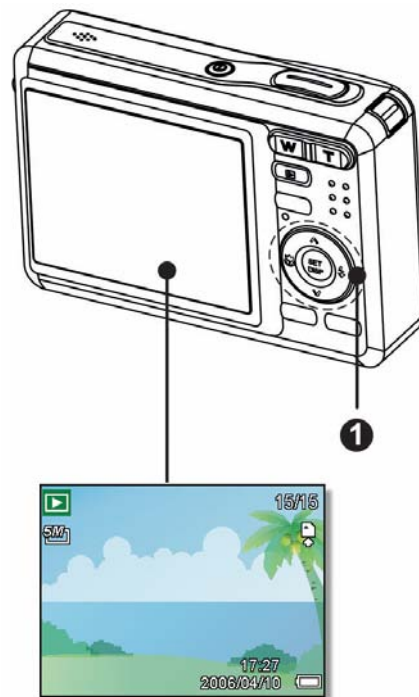

Playing Back Movie Clips

- 1**
Turn the power on, and set the camera to the PLAY mode (☞ page 13).
- 2**
Press ◀ or ▶ to select a movie clip that you want to playback.
- 3**
Start playing back.
 - Press ▲ to start playing the movie clip.
 - Press ▼ to stop the movie clip, or press ▲ to pause it. When the movie paused, press ▲ again to resume.

? Tips

- During movie playing back, press ▶ to fast forward or press ◀ to rewind it.
- Press the shutter to capture the still image from the movie clip while it had

paused.

Magnifying & Trimming Still Images

1

Turn the power on, and set the camera to the PLAY mode (☞ page 13).

2

Select an image.

- Press ◀ or ▶[⏮] to select the image that you want to magnify or trimming.
- Only still images can be magnified and trimmed.

3

Magnify the image.

- Press [T] [1] to magnify the image, and the central portion of the image is displayed. You can use the arrow button [⏮] to view different parts of the magnified image.
- Press the MENU button [2] to return to the normal size.

4


Trim the image.

- Press the SET button [3] to set the image trimming.

5

Save the image.

- Press the SET button [3] again to trim the selected image and save it as a new one.

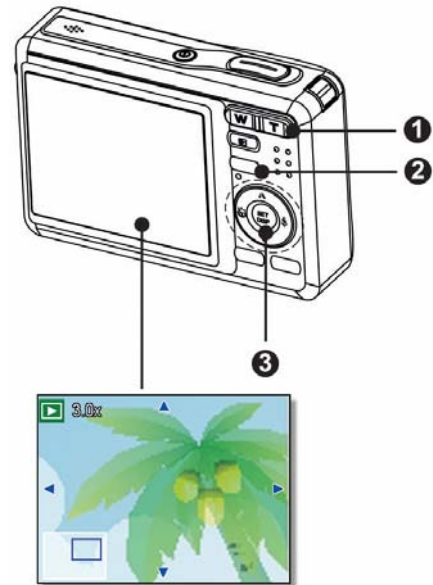

Viewing in Thumbnail

- 1
Turn the power on, and set the camera to the PLAY mode (☞ page 13).
- 2
Press the zoom button [W], a thumbnail screen is displayed.
- 3
Use the four-way control to select the desired image, and press [T] or the SET button to show the selected image in full screen.




? Tips

- You can protect or delete multiple images in thumbnail, see page 36, 38.

Playing a Slide Show

- 1
Turn the power on, and set the camera to the PLAY mode (☞ page 13).
- 2
Enter the slide show.
 - Press the **MENU** button (❶), use the four-way control (❷) to select **Slide Show** (📺) and press the **SET** button (❸).
- 3
Change the slide show settings.
 - Use the four-way control (❷) to set the slideshow interval (🕒), music (🔊), effect (🎨) and repeat (🔄).
 - You can set the interval between 1~10 seconds.

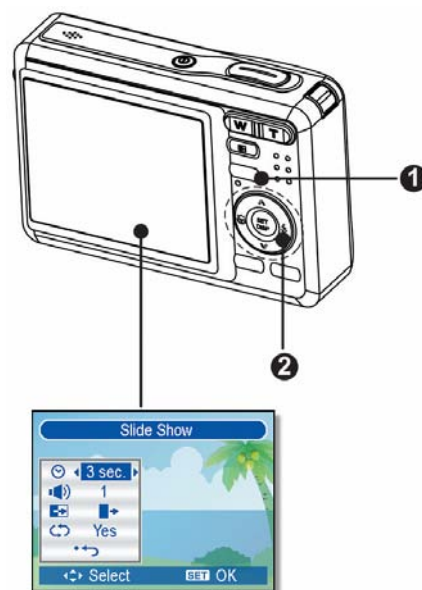

4

Playing the slide show.

- Press the **SET** button (2) to start the slideshow.
- During the slideshow, press the **SET** button (2) to pause the slideshow and press the **SET** button again to resume.

Deleting Files

Deleting a Single File

1

Turn the power on, and set the camera to the **PLAY** mode (👉 page 13).

2

Open the menu.

- Press the **MENU** button (1), then use the four-way control (2) to select **Delete** (🗑️) and press the **SET** button (2).

3

Press ▲ or ▼(2) to select [**SINGLE**], and then press the **SET** button (2).


4

Press ◀ or ▶(2) to select the image you want to delete.

5

Press the **SET** button (2) to delete the image.

- Repeat step 4~5 to delete images.

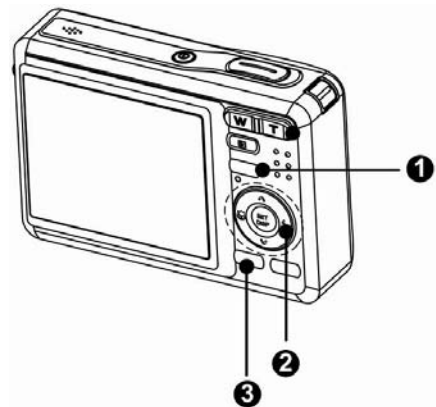

Tips

- To quickly delete the current display image
 1. Select the image you want to delete.
 2. Press the **Delete** button (3) to show a confirmation.
 3. Press the **SET** button (2) to delete the current display image.
- Protected images cannot be deleted with this function.

Deleting Multiple Files

1

Turn the power on, and set the camera to the thumbnail screen (☞ page 34).

2

Open the menu.

- Press the **MENU** button, then Press ◀ or ▶ to select to select **Delete** (🗑️) and press the **SET** button.



3

Press ▲ or ▼ to select [Select], and then press the **SET** button.

- The frame of the selected image turns green.

4

Select multiple images.

- Use the four-way control to select the image.
- Press the **SET** button toggles the 🗑️ on and off. Repeat this step until all images that you want to delete are displayed with an icon 🗑️.

5

Delete images.

- Press the **MENU** button, then select [Yes] and press the **SET** button. All selected images will be deleted.
- To cancel delete, press the **MENU** button in this step.

Deleting All Files

1

Turn the power on, and set the camera to the PLAY mode (☞ page 13).

2

Open the menu.

- Press the **MENU** button, then use the four-way control to select **Delete** (🗑️) and press the **SET** button.
- You can open the menu in full screen or in thumbnail.



3

Press ▲ or ▼ to select [ALL], and then press the SET button.

4

Press the SET button to delete all unprotected images.

Protecting a Single File

1

Turn the power on, and set the camera to the PLAY mode (☞ page 13).

2

Open the menu.

- Press the **MENU** button, then use the four-way control to select **Protect** (ⓘ) and press the **SET** button.

3

Press ▲ or ▼ to select [SINGLE], and then press the SET button.

4

Press ◀ or ▶ to select the image you want to protect.

5

Press the SET button to protect the image.

- When the file is locked, the ⓘ displays on the LCD monitor.
- Repeat step 4~5 to protect images.
- To unlock the file, press the **SET** button again in step 5. The ⓘ will disappear and the file is unlocked.

Protecting All Files


1

Turn the power on, and set the camera to the PLAY mode (☞ page 13).

2

Open the menu.

- Press the **MENU** button, then use the four-way control to select **Protect** (ⓘ) and press the **SET** button.
- You can open the menu in full screen or in thumbnail.

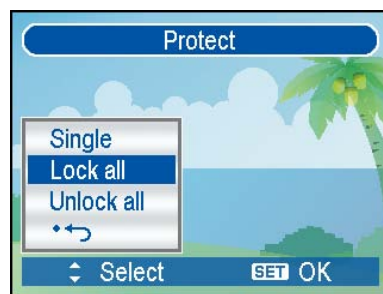

3

Press ▲ or ▼ to select [Lock all], and then press the SET button.

- To unlock all files, select [Unlock all] in this step, then press the SET button.

4

Press the SET button to protect all images.

Protecting Multiple Files

1

Turn the power on, and set the camera to the thumbnail screen (☞ page 34).

2

Open the menu.

- Press the MENU button, then Press ◀ or ▶ to select to select Protect (ⓘ) and press the SET button.



3

Press ▲ or ▼ to select [Select], and then press the SET button.

- The frame of the selected image turns green.

4

Select multiple images.

- Use the four-way control to select the image.
- Press the SET button toggles the ⓘ on and off. Repeat this step until all images that you want to protect are displayed with an icon ⓘ.

5

Protect images.

- Press the MENU button, then select [Yes] and press the SET button. All selected images will be protected.
- To cancel protect, press the MENU button in this step.

Editing Images


Rotating Still Images

1

Turn the power on, and set the camera to the PLAY mode (☞ page 13).

2

Press ◀ or ▶ to select the image you want to rotate.

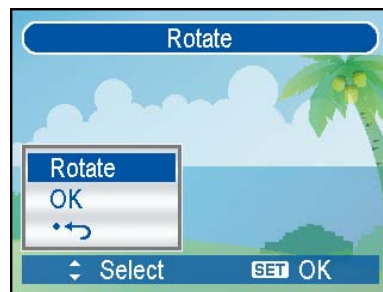

3

Open the menu.

- Press the **MENU** button, then use the four-way control to select **Rotate** (☞) and press the **SET** button.

4

Press the **SET** button to rotate the image.

- Each press rotates the image 90 degrees in clockwise

5

Press ▲ or ▼ to select **OK**, and then press the **SET** button to finish rotating.

Changing the Image Size

1

Turn the power on, and set the camera to the PLAY mode (☞ page 13).

2

Press ◀ or ▶ to select the image you want to resize.

3

Open the menu.

- Press the **MENU** button, then use the four-way control to select **Resize** (☞) and press the **SET** button.

4

Press ▲ or ▼ to select an option, and then press the **SET** button.

- The resized image will be saved as a new file.



Caution

- Only a large size image can be resize to a smaller one.

Changing the Image with Effects

- 1
Turn the power on, and set the camera to the PLAY mode (☞ page 13).
- 2
Press ◀ or ▶ to select the image you want to add the effect.
- 3
Open the menu.
 - Press the **MENU** button, then use the four-way control to select **Effect** (👁) and press the **SET** button.
- 4
Press ▲ or ▼ to select an option, and then press the **SET** button.
 - The edited image will be saved as a new file.

Copying the Files

You may copy the data from the camera's internal memory to the memory card for convenience.

- 1
Be sure you had inserted a memory card to your digital camera. Set the camera to the PLAY mode. (☞ page 13).
- 2
Open the menu.
 - Press the **MENU** button, then use the four-way control to select **Copy to card** (📁) and press the **SET** button.
- 3
Press ▲ or ▼ to select [Single], then press the **SET** button.
 - To copy all images to a memory card in a time, select [All] in this step.
- 4
Press ◀ or ▶ to select the image you want to copy to a card.
- 5
Select [Yes] and then press the **SET** button to start copy.
 - Repeat step 4~5 to copy other images.
 - Press the **MENU** button to complete the setting.



Setting the DPOF

The Digital Print Order Format (DPOF) setting allows you to select images on the memory card for printing and specify the number of print copies in advance using the camera. This is extremely convenient for sending the images to a photo developing service or for printing on a direct print function compatible printer.


1

Turn the power on, and set the camera to the PLAY mode (☞ page 13).

2

Open the menu.

- Press the **MENU** button, then use the four-way control to select **DPOF** (☞) and press the **SET** button.

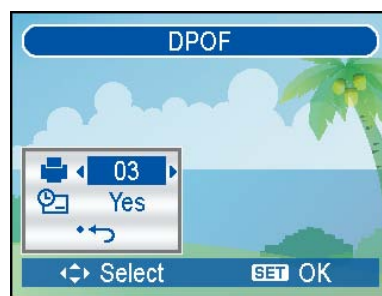

3

Press ▲ or ▼ to select [Single], then press the SET button.

- To set the DPOF setting for all images in a time, select **[All]** in this step.
- To reset all DPOF settings to initial default, select **[Reset]** in this step.

4

Press ◀ or ▶ to select the image you want to print out, then press the SET button.

5

Set the number of copies.

- Press ◀ or ▶ to specify the number of copies.
- The number of copies can be set from 0 to 30.
- To cancel this image DPOF setting, set the number of copies to 0.

6

Print the date stamp out.

- Press ▼ and then press ◀ or ▶ to set or cancel the date stamp of current image.
- Repeat step 4~6 to other images for printing.

7

Press ▼ and then press the SET button to apply the setting or press the MENU button to cancel.

8

After you finished all image settings, select [↶] and press the SET button to apply it.

Choosing a Startup Image

1
Turn the power on, and set the camera to the PLAY mode (☞ page 13).

2
Open the menu.

- Press the **MENU** button, then use the four-way control to select **S.Image** (♥) and press the **SET** button.

3
Press ◀ or ▶ to select the image you want, then press the **SET** button to apply the choice.

- A message "Completed" appears.

4
Set the camera to the Setup Menu (☞ page 16).

5
Press ▲ or ▼ to select **S.Image** (♥) then press ▶ or the **SET** button.


6
Press ▲ or ▼ to select a desired option and press the **SET** button to apply the setting.

[Off]: Disable the start-up image.

[System]: Use camera default image.

[My image]: Use the image that you just specified in step 3.

7
Press the **MENU** button to close the menu.

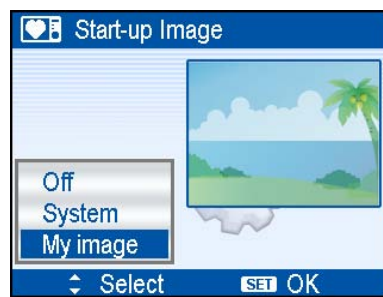


! Caution

- The start-up image will not be deleted even if the original image is deleted or memory formatted.

Making Connections

Connecting the Camera to a TV

You can display recorded images on a television with a supplied AV cable.

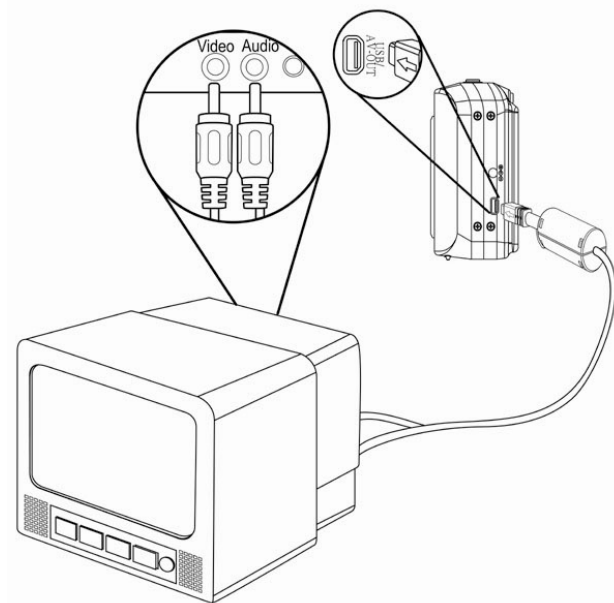

- 1
Set the TV out to match the TV system that you are using (👉 page 18).
- 2
Turn off the camera and the TV.
- 3
Use the supplied AV cable to connect the camera to the TV set.
- 4
Set the TV input signal to Video In.
 - Refer to the documentation included with your TV for more information.
- 5
Display on TV.
 - Everything that would normally appear on the camera's LCD screen, such as photo and video clip playback, slide shows, and image or video capture, appears on the TV.

Connecting the Camera to a PC

There are two ways to download files from the camera's internal memory or memory card to a computer:


- Inserting the memory card into a card reader
- Connecting the camera to a computer using the supplied USB cable

Using the Card Reader

1
Eject the memory from the camera and insert it in a card reader that is connected to a computer.

2
Open [My Computer] or [Windows Explorer] and double-click the removable drive icon that represents the memory card.

3
Copy images from the card into a directory of your choice on the computer's hard disk.

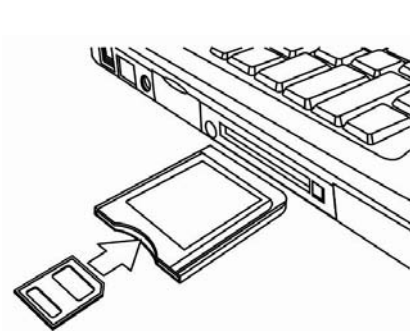

Connecting the Camera to a Computer with the USB Cable


1
Install the USB software driver included with the bundled CD-ROM.

2
Connect the supplied USB cable to the computer's USB port and turn on the camera.

- The LCD screen turns off when the connection to the computer has been successfully completed.

3
Open [My Computer] or [Windows Explorer]. A "Removable Disk" appears in the drive list.

4

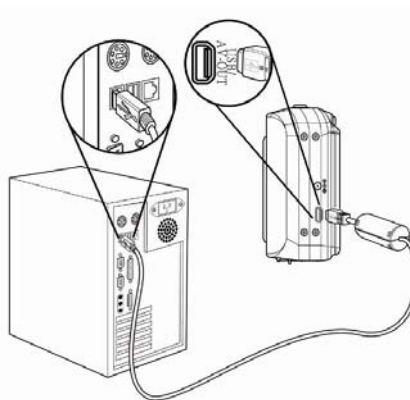

Double-click the "Removable Disk" icon to view its contents.

- Files stored on camera are located in the folder name "DCIM".

Software Installation

System Requirements

Windows:

- PC with processor better than MMX Pentium 233 MHz
- Windows XP/2000/ME/98SE/98
- Minimum 32 MB RAM
- USB port
- CD-ROM drive
- 800x600 pixels, 16-bit color display compatible monitor

Macintosh:

- Power Mac G3 or later
- Mac OS 9.0, 9.1, 9.2 and OS X
- Minimum 64 MB RAM
- USB port
- CD-ROM drive
- 800x600 pixels, 16-bit color display compatible monitor

*Specifications are subject to change without prior notice.

Installing the Software

The bundled software CD has the drivers and software that come with camera. Insert the CD into your CD-ROM drive. The autorun menu appears:



The following software is listed:

- **Install Ulead Photo Explorer 8 SE Basic**
Installs software for organizing and keeping track of you media.
- **Install VideoStudio 7 SE VCD**
Installs software for editing captured movies.
- **Utilities**
Installs several useful utilities fit viewing different types of media, and installs the Adobe Acrobat Reader, which enables you to read documents in PDF format.
- **User Manual**
Opens this user manual.
- **Drivers**
Installs camera drivers for Windows 98/98SE/ME/2000/XP.
- **Browse CD**
Opens Windows Explorer and enables you to view the contents of the driver and software CD.

Click the items in the autorun menu to install the software.



Tips

- If the autorun menu does not appear automatically, open the CD-ROM in **[My**

Computer] or **[Windows Explorer]** and double-click the file named **[autorun.exe]** to start the program. You can also click **[Run]** in the Windows Startup menu, enter "D:\autorun.exe" (where D is your CD-ROM drive letter) in the text box, and click **[OK]**.

Installing the Software Driver

Windows 98 (Second Edition) requires the installation of the driver to use the camera as a mass storage device.

- 1**
Install the included software installation CD-Rom in your computer's CD-ROM drive. The autorun menu appears.
- 2**
Click **[Drivers]**, you are prompted to choose a setup language. Choose a setup language and click **[OK]**.
- 3**
Follow the on-screen instructions to install the drivers.

Installing Ulead Photo Explorer 8 SE Basic

Ulead Photo Explorer 8 SE Basic is a Photo management application that is included on the software installation CD-ROM. This software requires Windows 98 Second Edition, Windows ME, Windows 2000, or Windows XP on your computer.

- 1**
Install the included software installation CD-Rom in your computer's CD-ROM drive. The autorun menu appears.
- 2**
Click **[Installing Ulead Photo Explorer 8 SE Basic]**.
- 3**
Select a language and follow the on-screen instructions to install the drivers.

Installing VideoStudio 7 SE VCD

VideoStudio 7 SE VCD is a video editing application that is included on the software installation CD-ROM. This software requires Windows 98 Second Edition, Windows ME, Windows 2000, or Windows XP on your computer.

1

.....
Install the included software installation CD-Rom in you computer's CD-ROM drive. The autorun menu appears.

2

.....
Click [Installing VideoStudio 7 SE VCD].

3

.....
Select a language and follow the on-screen instructions to install the drivers.

Using the Software

- **Ulead Photo Explorer 8 SE Basic**

Ulead Photo Explorer 8.0 SE Basic is a versatile tool for owners of digital cameras.

Webcams, DV camcorders, scanners, or anyone who strives to handle digital media effectively, Photo Explorer provides an efficient way to transfer, browse, modify and distribute digital media.

Ulead Photo Explorer 8.0 SE Basic enables you to acquire photos and video or sound clips from various digital devices; make modifications; send digital media through e-mail, print photos, create slideshow presentations, burn your images onto CD or DVD.

To start the program, click **Start > Programs > Ulead Photo Explorer 8.0 SE Basic > Ulead Photo Explorer 8.0 SE Basic**.

- **VideoStudio 7 SE VCD**

Ulead VideoStudio enables you to quickly and easily produce home videos complete with attractive titles, video filters, transitions, and sound. Ulead VideoStudio features an intuitive step-based interface that helps you get started right away. After finishing a project, share your videos through e-mail or on the Web, or bum your own high-quality VCDs, SVCDs and DVDs.

To start the program, click **Start > Programs >Ulead VideoStudio7 > Ulead**


Appendix

About the Folder & File Name

Your digital camera automatically creates a directory of folders in the internal memory or memory card that it uses to organize still images, movie clips and other information.

Folder Structure

Folder name begins with a 3-digit number from 100 to 999 and followed by "DICAM", each folder holds up to 9999 files. If new files are made, a new folder named in sequence will be made automatically.

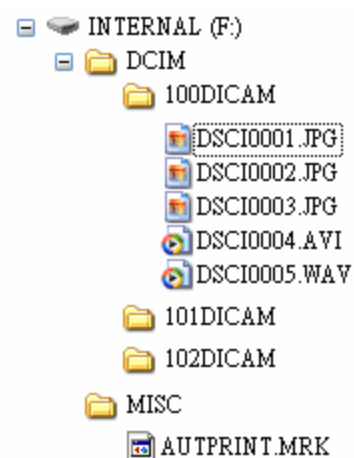

File Naming

File name begins with "DSCI" and are followed by a 4-digit number that increases in sequence. File numbering starts from 0001 when a new folder is created.

If the highest folder number is 999 and highest file number exceeds 9999, the camera will display the warning message "Folder cannot be created". When it appears, try one of the following ways:

- Reset the file number and plug in a new memory card, see page 40.
- Format the memory, see page 43. The folder number and file number are initialized and renumbered from 100 and 0001 respectively.



Caution

- Do not change the folder and file names in the memory card using your

computer. It may be unable to playback the data using the digital camera.

Troubleshooting

Problem	Cause	Solution
Power does not turn on.	Battery is inserted in the wrong direction.	Reload battery in the correct direction.
	Batteries are dead.	Replace or recharge batteries.
	The battery compartment door is open.	Make sure the battery compartment door is securely closed.
The camera does not take pictures.	The flash is charging.	Wait for the flash to charge.
	Memory is full.	Insert a new memory card.
	Memory card is not formatted correctly.	The card may be defective, use a new card.
Image is not recorded when the shutter button is pressed.	The Flash is charge.	Wait for the flash to charge.
	Memory is full.	Insert a new memory card.
The flash does not fire	Flash is set to OFF.	Set the flash to any mode except off.
Image is blurry or out of focus.	The camera was moving when the image was captured.	Hold the camera steady when shooting picture.
	The subject was beyond the range within which the camera can focus.	Turn the Macro mode on if the subject is within 15 cm (zoom out) or 40 cm (zoom in). Do not use Macro mode when shooting distant subjects.
Image is not displayed on the LCD monitor.	A memory card with non-DCIF images (recorded with other camera) is loaded.	This camera cannot display non-DCIF images.
Recorded images are not saved in memory.	The camera was turned off/powered down before the image was stored in memory	If the battery low indicator appears on the LCD monitor, replace the battery immediately.
Cannot transfer images to a computer after connecting	USB driver is not installed.	Install the USB driver before you connect the camera to a

the USB cable.		computer / turn the camera on.
----------------	--	--------------------------------

Function Available List

Mode Function			Still Capture															
Lens	Focus	One time AF	●	●	×	●	×	●	●	×	●	×	×	●	●	●	×	
		Continuous AF	×	×	×	×	×	×	×	×	×	●	●	×	×	×	×	
		Infinity Fixed	×	×	●	×	●	×	×	●	×	×	×	×	×	×	×	
Button	Macro	Off	●	●	●	●	●	●	●	●	●	●	○	●	×	●	×	
		On	○	○	×	×	×	×	×	×	×	×	●	×	●	○	×	
	Flash	Auto	✓	○	×	×	×	×	●	×	×	×	●	●	×	×	×	
		Red eye	○	○	×	×	×	●	×	×	×	●	×	×	×	×	×	
		Force on	○	○	×	●	×	×	×	×	×	×	×	×	×	×	×	
		Slow sync	○	○	×	×	×	×	×	×	●	×	×	×	×	×	×	
		Force off	○	○	●	○	●	○	○	●	○	○	○	○	○	●	×	×
Menu	Resolution	7M	✓	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		3:2	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		16:9	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		5M	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		3M	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		1M	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		VGA	○	○	○	○	○	○	○	○	○	○	○	○	○	○	×	×
	Movie Size	640	×	×	×	×	×	×	×	×	×	×	×	×	×	×	○	×
		320	×	×	×	×	×	×	×	×	×	×	×	×	×	×	✓	×
		160	×	×	×	×	×	×	×	×	×	×	×	×	×	×	○	×
	Quality	S.Fine	○	●	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		Fine	✓	×	○	○	○	○	○	○	○	○	○	○	○	○	×	×
		Normal	○	×	○	○	○	○	○	○	○	○	○	○	○	○	×	×
	Metering	Center	○	×	○	○	○	○	○	×	○	○	○	○	○	○	○	×
		Multi	✓	●	●	×	●	●	●	●	●	●	●	●	●	●	○	×
		Spot	○	×	×	●	×	×	×	×	×	×	×	×	×	×	○	×
	WB	Auto	✓	●	●	●	●	●	●	●	●	●	●	●	●	●	○	×
		Daylight	○	×	×	×	×	×	×	×	×	×	×	×	×	×	○	×

Mode Function			Still Capture															
																		
Menu		Cloudy	☐	×	×	×	×	×	×	×	×	×	×	×	×	☐	×	
		Tungsten	☐	×	×	×	×	×	×	×	×	×	×	×	×	×	☐	×
		Fluor_H	☐	×	×	×	×	×	×	×	×	×	×	×	×	×	☐	×
		Fluor_L	☐	×	×	×	×	×	×	×	×	×	×	×	×	×	☐	×
		Custom	☐	×	×	×	×	×	×	×	×	×	×	×	×	×	☐	×
	ISO	Auto	✓	●	●	●	●	●	●	●	×	●	●	●	●	×	×	×
		50	☐	×	×	×	×	×	×	×	●	×	×	×	×	×	×	×
		100	☐	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
		200	☐	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
		400	☐	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	Exposure	+0.3 ~ +2.0	☐	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
		0.0	✓	●	●	●	●	●	●	●	●	●	●	●	●	×	×	×
		-0.3 ~ -2.0	☐	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	Drive Mode [*]	Off	✓	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	×	×
		2 sec.	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	×	×
		10 sec.	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	×	×
		Double	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	×	×
		Burst	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	×	×
	AEB	Off	●	●	●	●	●	●	●	●	●	●	●	●	●	×	×	×
		On	☐	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	Highlight	Off	●	●	●	●	●	●	●	●	●	●	●	●	●	×	×	×
		Type 1	☐	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
		Type 2	☐	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
		Type 3	☐	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	Sharpness	Hard	☐	×	●	×	●	×	×	×	×	×	×	●	×	×	×	×
		Normal	✓	●	×	●	×	●	●	●	●	●	●	×	●	×	×	×
		Soft	☐	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×
	Effect	Off	●	●	●	●	●	●	●	●	●	●	●	●	●	×	×	×
		B&W	☐	×	×	×	☐	☐	×	×	×	☐	☐	☐	×	×	×	×
		Sepia	☐	×	×	×	☐	☐	×	×	×	☐	☐	☐	×	×	×	×
		Negative	☐	×	×	×	☐	☐	×	×	×	☐	☐	☐	×	×	×	×
		Red	☐	×	×	×	☐	☐	×	×	×	☐	☐	☐	×	×	×	×
		Green	☐	×	×	×	☐	☐	×	×	×	☐	☐	☐	×	×	×	×
		Blue	☐	×	×	×	☐	☐	×	×	×	☐	☐	☐	×	×	×	×
	Date Stamp	Off	✓	×	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	×	×	×
		Date	☐	×	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	×	×	×

Mode Function			Still Capture															
	Date & Time		○	●	○	○	○	○	○	○	○	○	○	○	○	○	×	×
Digital Zoom	Off		○	●	○	○	○	○	○	○	○	○	○	○	○	○	×	×
	On		✓	×	○	○	○	○	○	○	○	○	○	○	○	○	×	×

✓ : Factory setting ● : Default ○ : Available × : Not available
 : Setting is retained even after mode switch or power off
 (*): Set to [OFF] after power off.

Specifications

Sensor	5 megapixel CCD, Size : 1/2.5 inch
Lens	Focal length: f=6.2 ~ 18.6mm , 3X optical zoom, 4X digital zoom
LCD monitor	2.5" TFT color LCD
Focus range	Normal: 80cm ~ Infinity Macro: (W) 15cm ~ 1m / (T) 40cm ~1m
Aperture	F/2.8 ~ 5.2
Shutter	8 ~ 1/2000 sec.
File format	Still Image: JPEG (EXIF 2.2 compatible) , DCF compatible, Support DPOF, Video: AVI , Audio: WAV
Resolution	Still Image: 2560x1920 / 2560x1712(3:2) / 2560x1440(16:9) / 2048x1536 / 1024x768 / 640x480 Video: 640x480 / 320x240 / 160x120
Scene mode	Portrait / Landscape / Night Scene / Kids / Snow / Backlight / Sunset / Text / Fireworks / Food / Building /Quick Mode
Sensitivity	Auto / ISO 50 / ISO 100/ ISO 200 / ISO 400
White balance	Auto / Daylight / Cloudy / Tungsten / Fluorescent (H) / Fluorescent (L) / Custom
Exposure control	-2EV to +2EV in 1/3 step
Metering	Center-weighted / Multi / Spot
Burst	Depends on the capacity of the memory. (no limit)
Self-timer	2 sec. / 10 sec. / Double
Flash	Auto / Red eye reduction / Always on / Slow sync / Always off
Photo effect	Black & White / Sepia / Negative Art / Mosaic / Red / Green / Blue
Storage	16MB internal memory / SD / MMC slot (1 GB)
TV system	NTSC / PAL
Power Supply	AA alkaline battery X2
Ambient temperature	Operating: 0° C to 40° C Storage: -20 ° C to 60° C

Microphone	Built-in
Speaker	Built-in
Dimension	89,5 x 61 x 27 mm
Weight	Camera Body w/o battery: Approx. 128 g

*These specifications are subject to change without notice.

Customer care

More information on the complete product range can be found under:
www.plawa.com

Service & Repair Hotline (EU):

00800 75292100

For Greece: 00 800 491 291 62

Service & Support Hotline (Germany):

0900 1000 042 (1.49 Euro/ min. Deutsche Telekom)

Online Service:

support-apdc@plawa.com

Manufactured by plawa-feinwerktechnik GmbH & Co. KG

plawa-feinwerktechnik GmbH & Co. KG

Bleichereistr. 18

73066 Uhingen

Germany

Disposal of Waste Equipment by Users in Private Households in the European Union



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Declaration of Conformity

We herewith confirm the following designated product: DC-530i has been tested and found to comply with the requirements set up in the council directive on the approximation of the law of members' states relating to the EMC Directive 89/336/EEC, amended by 92/31/EEC & 93/68/EEC. For the evaluation regarding to the electromagnet compatibility, the following standards were applied

- EN 55022:1998+A1:2000+A2:2003,
Class B
- EN 55024:1998 +A1:2001+A2:2003
IEC 61000-4-2:1995+A1:1998+A2:2001
IEC 61000-4-3:2002+A1:2002
IEC 61000-4-4:1995+A1:2001+A2:2001
IEC 61000-4-6:2004
IEC 61000-4-8:2001

The device is marked with CE Logo

AGFAPHOTO is used under license of Agfa-Gevaert AG. Agfa-Gevaert AG does not manufacture this product or provide any product warranty or support. For service, support and warranty information, contact the distributor or manufacturer. All other brands and product names are registered trademarks of their respective owners. Product design and technical features can be changed without notice.

Agfa-Gevaert is a registered trademark of Agfa-Gevaert AG.

Manufactured and distributed by plawa-feinwerktechnik GmbH & Co. KG, www.plawa.com

Downloaded From camera-usermanual.com Agfa Manuals