





2004 OWNER'S MANUAL


Firepits and Fireplaces

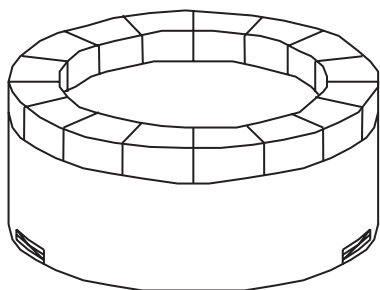

Round

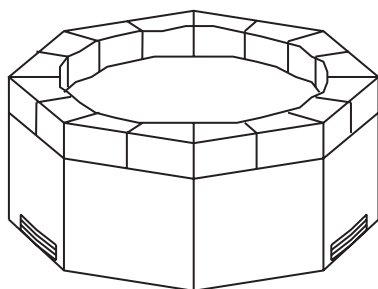

Octagon

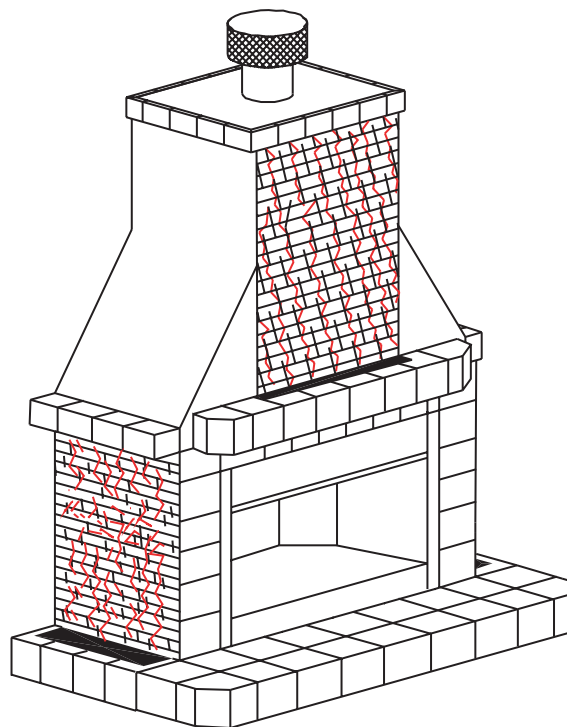

Fireplace w/Waterfall

Duplication without written consent is strictly prohibited.

This Owner's Manual is for firepits/fireplaces manufactured after January 1, 2004

Due to continuous improvement programs, all models, operation, and/or specifications are subject to change without prior notice.

LTR17006336

www.calspas.com

Table of Contents

Benefits of Owning a Cal Flame Firepit/Fireplace2

Safety Instructions3

Contact Information5

Warranty Information5

Set-up and Delivery6

Liquid Propane (LP) Requirements7

Natural Gas (NG) Requirements9

Leak Test Procedure10

Firepits12

Maintenance Instructions13

Fireplaces14

Maintenance Instructions15

Troubleshooting Procedures16

Appendix17

 Replacement Part Numbers.....18

 Notes19

BENEFITS OF OWNING A CAL FLAME FIREPIT/FIREPLACE

Owning a firepit/fireplace allows you to have a wonderful outdoor place to roast marshmallows with your family. It offers a place for you to socialize with family and friends. A firepit/fireplace provides a great focal point in your backyard when having parties, family get-together or just to hang out with your kids. Owning a firepit/fireplace can add character to your patio and/or yard.

As with any new improvement to an existing area, precautions must be made before development can take place. Throughout this manual, the owner will encounter 2 product lines - Firepits and Fireplaces. Each product line will have identical lighting methods.

IT IS THE OWNERS RESPONSIBILITY TO ENSURE THAT AN EXISTING NATURAL GAS LINE IS INSTALLED AND SAFE TO USE. CAL SPAS HIGHLY RECOMMENDS THAT THE OWNER HAVE A LICENSED TECHNICIAN RUN ALL NATURAL GAS LINES AND CONNECT ALL NATURAL GAS HOOK-UPS. CAL SPAS IN NO WAY WILL BE HELD RESPONSIBLE FOR AN IMPROPERLY CONNECTED GAS LINE.

SAFETY INSTRUCTIONS

Please read before installing and operating your new Cal Flame firepit/fireplace.

1. Your new gas firepit/fireplace should be professionally installed by a licensed contractor. Refer to the instructions in this manual to ensure proper and safe installation and operation.
2. **IF YOU SMELL GAS:**
 - A. Shut off gas to firepit/fireplace.
 - B. Extinguish any open flame.
 - C. Open lid.
 - D. If odor persists, immediately call your gas supplier or your fire department.

DO NOT TRY TO FIX THE PROBLEM YOURSELF.

3. **CAUTION:** To prevent fire and smoke damage, remove all packaging material before operating firepit/fireplace.
4. Spiders and other insects can nest in the burners of the firepit/fireplace and block the gas and airflow to the burner ports. This creates a dangerous condition that can result in a fire from behind the valve panel. Inspect and clean the burners periodically; follow guidelines in the Cleaning and Maintenance section of this manual.
5. In the event that a burner goes out and gas escapes, turn off the gas supply let it air-out. Do not attempt to use the firepit/fireplace until the gas has had time to dissipate.
6. Unless specifically recommended in this manual, do not repair or replace any part of the firepit/fireplace. A qualified technician should perform all of the service. Any repairs made by a non- C.A.I. approved dealer technician will void your warranty.
7. Keep any electrical supply cord or power supply cord away from the heated areas of the firepit/fireplace.
8. Never use the firepit/fireplace or side burner in windy conditions. If located in a consistently windy area (oceanfront, mountaintop, etc.) a windbreak will be required.
9. The area surrounding your new firepit/fireplace should be kept clean, and free from flammable liquids and other combustible materials such as mops, rags, brooms, as well as solvents, cleaning fluids, and gasoline.
10. Do not use the firepit/fireplace as a storage area for flammable or plastic items, which may ignite. Do not store any materials inside or near firepit/fireplace. Any LP (Propane) cylinder not in use, should not be stored in the vicinity of this or any other appliance.
11. Never line firepit/fireplace with tin foil.
12. When the unit is not in use, be sure to turn off the gas at the LP tank.
13. Never locate this appliance in an enclosed room or under sealed overhead structure or any type of enclosed area such as a garage, shed, or breezeway. Keep clear of trees and shrubs.
14. Do not place this firepit/fireplace under or near windows or vents that can be opened into your home.

Precautions Regarding Children

1. Never leave children unattended in the area where the firepit/fireplace is being used.
2. Do not store items of interest to children around or below the firepit/fireplace.
3. Never allow children to sit or stand on any part of the firepit/fireplace.

Use Precautions

1. Never leave the firepit/fireplace unattended while using high flame settings.
2. Always position handles of utensils inward, so they do not extend over adjacent work areas or cooking areas. This reduces the risk of burns, ignition of flammable materials, and spillage due to accidental contact with the utensils.
3. Never let clothing, potholders or other flammable materials come in contact with or close to any grate, rock or fire screen until it has cooled. Fabric may ignite and result in personal injury.
4. When using the firepit/fireplace, do not touch the firepit/fireplace rock, fire screen, or immediate surroundings, as these areas become extremely hot and could cause burns.
5. Proper apparel is a safety consideration. Never wear loose fitting or hanging garments while using your new firepit/fireplace.
6. Do not heat any unopened glass or metal container of food on the firepit/fireplace. Pressure may build up and cause the container to burst resulting in serious harm or damage to the firepit/fireplace.
7. Do not use charcoal in this firepit/fireplace.
8. Do not lean, sit or stand on the stainless steel cart, including the foldout work surfaces.
9. Do not block the vents located near the base of your firepit/fireplace as gas may build up in case of leak and cause serious damage.
10. Do not reach over your firepit/fireplace or any other surfaces when hot or in use.

SAVE THIS MANUAL FOR FUTURE REFERENCE

CONTACT INFORMATION

For customer service, please contact your authorized dealer immediately. If you need additional information and/or assistance, please contact:

C.A.I. Customer Service Department
1462 East Ninth Street
Pomona, CA 91766
Toll Free 1-800-CAL-SPAS
Fax 1-909-629-3890

WARRANTY INFORMATION

See your Cal Flame Firepit/Fireplace dealer for a copy of the applicable warranty, details and any questions you may have regarding the warranty coverage on your firepit/fireplace.

Warranty Limitations

The Limited Warranty is void if the firepit/fireplace has been subject to negligence, alteration, misuse, abuse, repairs by non- C.A.I. authorized representatives, incorrect electrical installation, acts of God and any other cases beyond the control of C.A.I. Examples of common acts invalidating this warranty include but are not limited to:

Scratches caused by normal use.

Damage caused by extreme weather conditions. (Hot, Cold, etc.)

Damage caused by dirt, sand, and/or water damage.

Damage caused by continued operation of the firepit/fireplace with either known or unknown problems.

Damage caused by direct sunlight.

Damage caused as a result of failure to follow the operating instructions as defined in this Owner's Manual.

This Limited Warranty applies only to firepit/fireplaces normally used for personal, family, or household purposes.

This Limited Warranty specifically excludes commercial firepit/fireplaces.

Warranty Exclusions

C.A.I. warranties the firepit/fireplaces from defects in material and workmanship for a period of one year from the original date of purchase. Firepit/fireplace stereo systems are delivered with their own manufacture warranty. For more information, please see their warranties in the owner's information package that was delivered with your firepit/fireplace for more information.

Locating Product Serial Number

Your new Cal Flame Island Firepit/Fireplace serial number is located on a metal plate inside the door below the firepit/fireplace on the door. You will need this number to properly register your Firepit/Fireplace and activate coverage.

Please write this number in the space provided for future reference:

Serial Number: _____ Delivery Date: _____

**REMINDER: PLEASE DO NOT FORGET TO REGISTER YOUR NEW PRODUCT AT
WWW.CALSPAS.COM**

DELIVERY AND SET-UP

Please make a record of the following. It will be valuable if service is required.

Firepit/fireplace Model: _____

Firepit/fireplace Serial Number: _____

Date Purchased: _____

Date Installed: _____

Firepit/fireplace Dealer's Phone Number: _____

Firepit/fireplace Dealer's Address: _____

Most cities and counties require permits for exterior construction and electrical circuits. In addition, some communities have codes requiring residential barriers such as fencing and/or self-closing gates on property to prevent unsupervised access to the property by children under the age of 5. Your dealer can provide information on which permits may be required and how to obtain them prior to the delivery of your equipment.

PLANNING THE BEST LOCATION FOR YOUR FIREPIT/FIREPLACE

Safe and satisfactory operation of your new firepit/fireplace depends upon its proper installation. The installation, adjustments and service of your new firepit/fireplace must be performed by C.A.I. qualified installers and service technicians. This is necessary to ensure proper operation and also prevent accidents.

Location (Outdoor Use Only)

When planning your Cal Flame Firepit/Fireplace location, be sure to consider the shortest gas line run possible. Also, take into consideration the necessity of having a 100v power source. For use of your appliances (i.e. lights, rotisserie, refrigerator, receptacles, etc.).

When determining a suitable location, take into account concerns such as exposure to wind, proximity to traffic paths, and windows that open into the home. Keeping in mind natural gas line runs need to be as short as possible. Locate the firepit/fireplace only in a well ventilated area.

Locate firepit/fireplaces in well ventilated areas, and only on solid, flat foundations (i.e. cement slab or deck). Do not place the firepit/fireplace on dirt or grass.

Built-In Installation

Your new firepit/fireplace is designed for easy installation into a non-combustible enclosure. The supporting deck and counter must be level and flat. When determining the final location of your firepit/fireplace, it is required that ventilation be provided in the enclosure so that gas will not become entrapped in the event of a leak.

LP GAS REQUIREMENTS

LP Gas Requirements

Always check the rating plate to make sure the gas supply you are hooking up to is the gas type the firepit/fireplace is manufactured for.

IMPORTANT WARNING: All Cal Flame firepit/fireplaces are manufactured with the highest regard to safety. For this reason, Cal Flame firepit/fireplaces are either manufactured to operate on Liquid Propane (LP) or Natural Gas (NG) and cannot be converted. To verify the firepit/fireplaces operating fuel, remove the bottom drip pan and check serial number label on the left. Either LP or NG will be marked on the operating tab, indicating the proper operating fuel. Attempting to convert Cal Flame firepit/fireplaces from one fuel to another may result in serious injury and void the warranty coverage.

NOTE: Please note that if you do not have an updated filler valve on your existing propane tank, you will need to purchase one at your local hardware store, as you will not be allowed to refill the tank at any filling station.

LP Gas Hook Up

NOTE: An enclosure for an LP gas cylinder shall be vented by openings at the level of the cylinder valve and at floor level. The effectiveness of the opening(s) for purposes of ventilation shall be determined with the LP-gas supply cylinder in place. This shall be accomplished in one of the following manners:

1. One side of the enclosure shall be completely open.
2. Enclosures that have four sides, complete with a top and bottom:
 - a. At least two ventilation openings at cylinder valve level shall be provided in the sidewall, equally sized, spaced at 180° (3.14 rad), and unobstructed. Each opening shall have a total free area of not less than 1 square inch per pound (7.1 cm²/kg) of stored fuel capacity, and not less than a total free area of 10 square inches (64.5 cm²).
 - b. Ventilation opening(s) shall be provided at floor level and shall have a total free area of not less than 1 square inch per pound (7.1 cm²/kg) of stored fuel capacity and not less than a total free area of 10 square inches (64.5 cm²). If ventilation openings at floor level are in a sidewall, there shall be at least two openings. The bottom of the openings shall be at floor level and the upper edge no more than 5 inches (127 mm) above the floor. The openings shall be equally sized, spaced at 180° (3.14 rad) and unobstructed.
 - c. Every opening shall have minimum dimensions so as to permit the entrance of a 1/8 inch (3.2 mm) diameter rod.

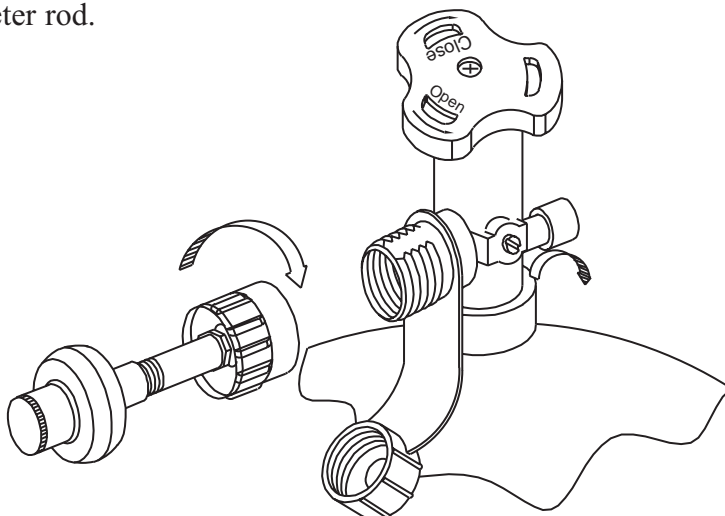


Figure 1. LP Attachment Assembly

LP Gas Manifold Pressure

For plumbed-in LP installation, use a convertible regulator and set it for LP gas.

LP Gas Supply Pressure

LP Gas Supply Pressure

Maximum line pressure for plumbed-in propane is 14" W.C psi (3.5 kPa). Minimum line pressure for propane is 11" W.C.

LP Gas Pressure Regulator

The unit must be used with the gas pressure regulator. The regulator will control and maintain a uniform gas pressure in the manifold. The burner orifices have been sized for the gas pressure delivered by the regulator.

LPG Cylinder Specification

Any LP gas supply cylinder used with this firepit/fireplace must be approximately 12 inches in diameter and 18 inches high. The maximum fuel capacity is 20 lbs. of propane, or 5 gallons. Full cylinder weight should be approximately 38 lbs. (43.7 lbs. nominal water capacity.) Always use the cylinder dust cap on the cylinder valve outlet during transport and when the cylinder is not connected to the firepit/fireplace.

Transporting the LP Gas Supply Cylinder

Only one cylinder should be transported at a time. Transport cylinder in an upright and **secure manner** with control valve turned off and the dust cap in place.

NATURAL GAS REQUIREMENTS

Natural Gas Requirements

Always check the rating plate to make sure the gas supply you are hooking up to is the gas type the firepit/fireplace is manufactured for.

IMPORTANT WARNING:

All Cal Flame firepit/fireplaces are manufactured with the highest regard to safety. For this reason, Cal Flame firepit/fireplaces are either manufactured to operate on Liquid Propane (LP) or Natural Gas (NG) and cannot be converted. To verify the firepit/fireplaces operating fuel, remove the bottom drip pan and check serial number label on the left. Either LP or NG will be marked on the operating tab, indicating the proper operating fuel.

Attempting to convert Cal Flame firepit/fireplaces from one fuel to another may result in serious injury and void the warranty coverage.

IMPORTANT: Never connect the firepit/fireplace to an unregulated gas supply.

The installation of this appliance must conform with local codes or, in the absence of local codes, to the national fuel gas code, ANSI Z223.1a-1998. Installation in Canada must be in accordance with the standard CAN/CGA-B149.2, Propane Installation Code.

NATURAL Gas Connection: (Must be performed by a licensed contractor or local gas company representative). Ensure that the service supplying the firepit/fireplace is fitted with a shut off valve conveniently positioned to the firepit/fireplace and giving ease of access.

Your Cal Flame Firepit/fireplace for use with Natural Gas comes equipped with its own regulator which **MUST NOT** be removed. If this regulator needs to be replaced, use only the type specified by Cal Flame for this appliance.

1. Remove the rear panel from the firepit/fireplace to gain access to the regulator and gas connection point.
2. Connect a suitable flex connector to the firepit/fireplace regulator.

LEAK TESTING PROCEDURE

Leak Testing

Perform a leak test at least once each year whether the gas supply cylinder has been disconnected or not. In addition, anytime the gas cylinder is connected to the regulator or any part of the gas system is disconnected or replaced, conduct a leak test.

As a safety precaution, remember to always leak test your firepit/fireplace outdoors in a well-ventilated area. Never smoke or permit sources of ignition in the area while doing a leak test. Do not use a flame, such as a lighted match to test for leaks. Use only a leak testing solution as specified below.

Leak Testing Procedure

1. Prepare a leak testing solution of sudsy water by mixing in a spray bottle half-liquid soap and half water.
2. Check and make sure all the control knobs are in the OFF position.
3. Turn cylinder valve knob counter clockwise one turn to open.
4. Apply leak-testing solution by spraying on joints of the gas delivery system.
5. Blowing bubbles in the soap solution indicates that a leak is present.
6. Stop a leak by tightening the loose joint or by replacing the faulty part with a replacement part recommended by the manufacturer. Do not attempt to repair the cylinder valve if it should become damaged. The cylinder must be replaced.
7. If you are unable to stop a leak, shut off the gas supply at the cylinder valve. Remove the cylinder from the firepit/fireplace. Call an authorized gas appliance service technician or LP gas dealer. Do not use the appliance until the leak is corrected.
8. Push in and turn any control knob to release pressure in the hose and manifold.
9. Turn off the control knob.

COVERING YOUR FIREPIT/FIREPLACE

When not in use and after cooling, cover your Cal Flame firepit/fireplace with our full length, zippered side canvas cover. The cover will help protect your firepit/fireplace from detrimental effects of weather & environmental pollutants (please see your local Cal Flame dealer for details).

After Use Care

1. The easiest way to clean the firepit/fireplace is to let the firepit/fireplace cool completely off. With the firepit, gently spray the enclosure off with water. For the fireplace, remove the steel grate and sweep out the ashes and leftover kindling.

FIREPLACES AND FIREPITS

These firepit/fireplace are for outdoor use only and must not be used for cooking. Place these firepits/fireplaces on a flat and stable surface in an outdoor location such as a patio deck. This location must be adjacent to the gas supply line (LP or NG). Do not locate the appliance where it can get excessively wet or submerged in water.

Always keep the appliance area clear and free from combustible materials, gasoline and any other flammable vapors and liquids.

WARNING: THESE FIREPIT/FIREPLACE MUST BE USED ONLY OUTDOORS IN A WELL VENTILATED SPACE AND MUST NOT BE USED INSIDE A BUILDING, GARAGE, OR ANY OTHER ENCLOSED AREA.

WARNING: THIS LOG SET MUST NOT BE INSTALLED IN AN UNVENTED APPLIANCE.

WARNING: THIS FIREPIT/FIREPLACE IS NOT FOR USE WITH SOLID FUEL.

FIREPITS

Inspect the burner before each use of the appliance. If there is any evidence that the burner is damaged, it must be replaced before operating. Upon completing the gas line connection, a small amount of air will be in the lines. When first lighting the burner, it will take a few minutes for the lines to purge themselves of this air. Subsequent lighting of the appliance will not require such purging.

CAUTION: Never allow the ON/OFF valve to remain in the open position without placing a burning match on top of the burner FIRST!

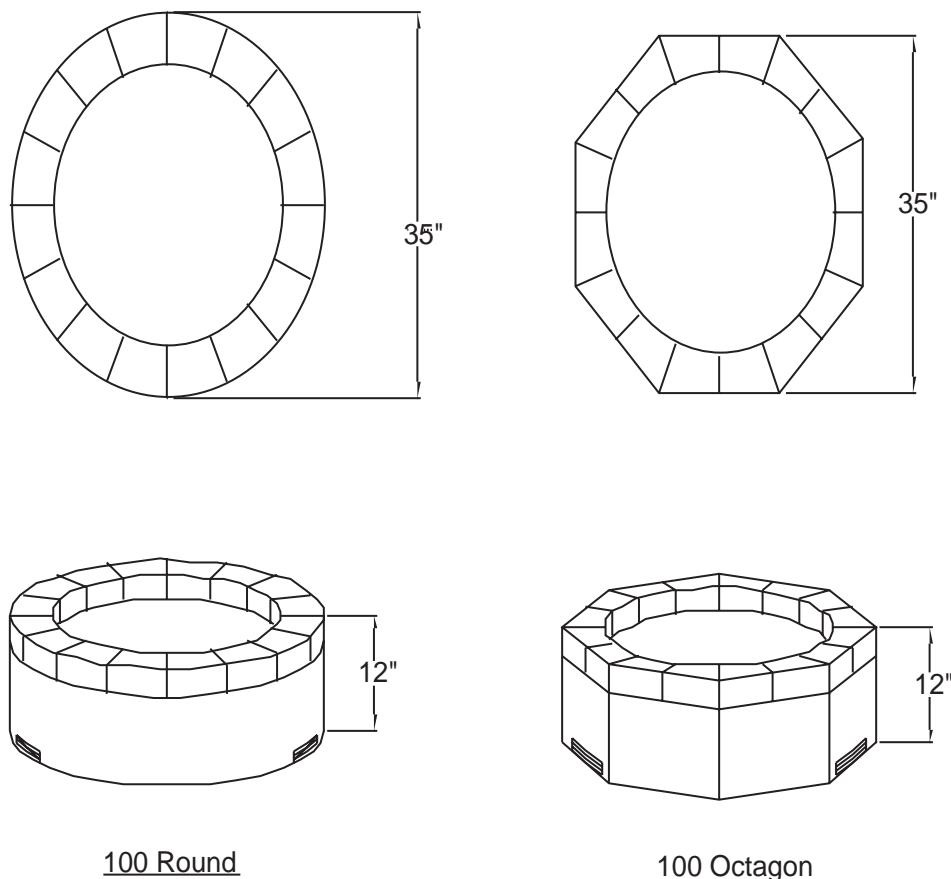


Figure 2. Firepits

WARNING: IF YOU DO NOT FOLLOW THESE INSTRUCTIONS EXACTLY, A FIRE OR EXPLOSION MAY RESULT, CAUSING PROPERTY DAMAGE, PERSONAL INJURY AND/OR LOSS OF LIFE.

Safety Information

1. This appliance must be lit by hand. When lighting, follow these instructions exactly.
2. Before lighting, smell around the appliance area for gas. Be sure to smell next to the base of the appliance, because some gas is heavier than air and will settle on the ground.

What To Do If You Smell Gas

- Do not try to light the appliance.
 - Do not touch any electric switch; do not use any phone in the immediate area.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
3. Use only your hand to turn the gas control knob. Never use tools. If the valve will not turn by hand, don't try to repair it; call a qualified service technician. Force or attempted repair may result in a fire or explosion.
 4. Do not use this appliance if any part has been underwater. Immediately call a qualified service technician to inspect the appliance, and to replace any part which has been under water.

Lighting Instructions

1. STOP! Read the Safety Information above.
2. Locate the manual gas control valve (located on the outside of the firepit, 2 inches from the base of the firepit. **HINT:** Look for a bright red knob).
3. Place a burning match on top of the burner in the middle where ports are present. DO NOT HOLD THE MATCH IN YOUR HAND. For natural gas appliances, turn on the ON/OFF valve slowly at the appliance. For LP appliances, turn the valve on the LP tank counterclockwise all the way and then turn "ON" the ON/OFF valve slowly at the appliance.
4. If the burner does not light before the match goes out, immediately turn the gas valve to "OFF".
5. Wait at least five minutes to clear out any gas. Then smell for gas, including base of the appliance. If you smell gas, STOP! Follow Step 2 in the Safety Information above. If you don't smell gas, repeat Step 4, listed in this section.

To Turn Off the Appliance

1. Turn the ON/OFF valve to the "OFF" position at the appliance for the natural gas appliance.
2. For an LP appliance, turn the ON/OFF valve to the "OFF" position at the appliance and then turn the valve on the LP tank clockwise to the "OFF" position.

MAINTENANCE INSTRUCTIONS

1. The appliance should be inspected before initial use and inspected and cleaned at least annually by a qualified field service person.
2. Tampering with this appliance is DANGEROUS and voids all warranties. Any component that is found to be faulty, must be replaced with an approved component.
3. To obtain proper operation, it is imperative that the burner flame characteristics are steady, not lifting or floating.
4. Periodically, remove the logs and examine the burner. If dirty, clean with a soft brush. Also, examine the area around the burner air shutter. Any dirt or lint in this area should be removed. This will ensure long life and trouble-free operation.
5. Periodically check the hose connecting the LP gas cylinder to ensure it is not damaged in any way.

NOTE: Carbon (soot) may buildup on the surfaces of the logs heavy use. This is more likely to occur when using LP gas. The soot should be cleaned off the surface of the logs periodically to prevent excessive buildup.

FIREPLACES

NOTE: For the FRE-100W (see **Figure 3**), make sure that there is no debris in the filler pan for the waterfall. The pump will recirculate water up through the fireplace and then filter down the sides and front. It is also important that the owner maintains a consistent water level, as “dry” pumping will burn out the pumps motor.

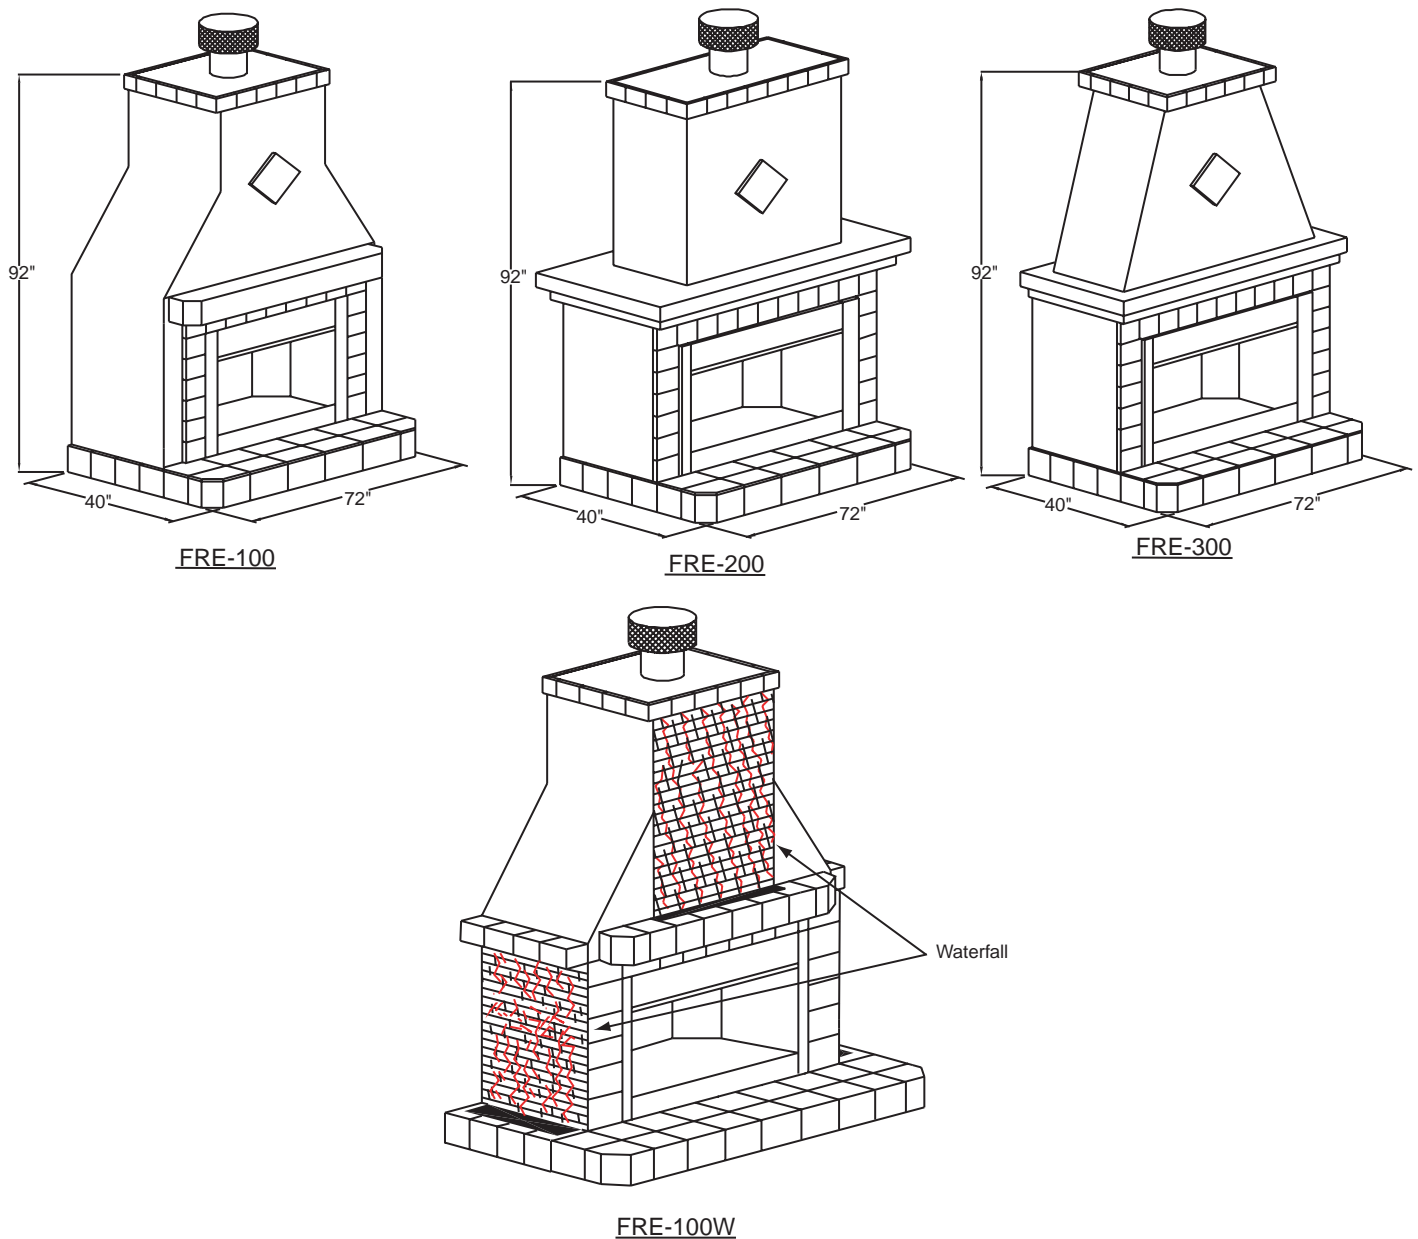


Figure 3. Fireplaces

WARNING: IF YOU DO NOT FOLLOW THESE INSTRUCTIONS EXACTLY, A FIRE OR EXPLOSION MAY RESULT , CAUSING PROPERTY DAMAGE, PERSONAL INJURY AND/OR LOSS OF LIFE.

NOTE: **The Log Set is sold separately from the fireplace. For installation and lighting instructions, please refer to the manufacturer's Owner's Manual.**

Safety Information

1. This fireplace must be lit by hand. When lighting, follow these instructions exactly.
2. Before lighting, smell around the appliance area for gas. Be sure to smell next to the base of the fireplace, because some gas is heavier than air and will settle on the ground.

What To Do If You Smell Gas

- Do not try to light the fireplace.
 - Do not touch any electric switch; do not use any phone in the immediate area.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
3. Use only your hand to turn the gas control knob. Never use tools. If the valve will not turn by hand, don't try to repair it; call a qualified service technician. Force or attempted repair may result in a fire or explosion.
 4. Do not use this fireplace if any part has been underwater. Immediately call a qualified service technician to inspect the appliance, and to replace any part which has been under water.

MAINTENANCE INSTRUCTIONS

1. The appliance should be inspected before initial use and inspected and cleaned at least annually by a qualified field service person.
2. Tampering with this appliance is DANGEROUS and voids all warranties. Any component that is found to be faulty, must be replaced with an approved component.
3. To obtain proper operation, it is imperative that the burner flame characteristics are steady, not lifting or floating.
4. Periodically, remove the logs and examine the burner. If dirty, clean with a soft brush. Also, examine the area around the burner air shutter. Any dirt or lint in this area should be removed. This will ensure long life and trouble-free operation.

TROUBLESHOOTING PROCEDURES

If Firepit/fireplace Fails to Operate Properly:

1. Turn off gas at source, turn the Control Knobs to the 'OFF' position and wait 5 minutes before trying again.
2. Check gas supply at a connections.
3. Repeat lighting procedure and if firepit/fireplace still fails to operate properly, turn off gas at source, turn the control knobs to the off position and wait for the firepit/fireplace to cool down and check the following:

Problem: **Obstruction In Gas Line**

Solution: Remove fuel line from firepit/fireplace. Do not smoke or perform any maintenance in the vicinity of an open flame. Open gas valve for one second to blow out any debris. Close off gas valve and reconnect fuel line securely.

Problem: **Plugged Orifice**

Solution: Remove firepit/fireplaces. Remove burners from bottom of firebox by pulling cotter pin from beneath burner peg using a standard screwdriver or needle nose pliers. Carefully lift each burner up and away from the gas orifice. Remove the orifice from the control valve. Gently clear any obstruction with a fine wire. Reinstall orifice, reinstall burners over orifices and seat burner peg into position hole at the bottom ledge of the firebox. Replace cotter pins. Replace cooking components and grease collectors. If an obstruction is suspected in the control valve, please contact your local Cal Flame dealer for assistance.

Problem: **Flashback**

Solution: When fire occurs in and around the burner tubes, immediately turn off gas at its source and turn the control knob(s) clockwise to the 'OFF' position. Wait until the firepit/fireplace has cooled off before cleaning.

APPENDIX

The items that will be covered in this section will consist of the following:

Replacement Part Numbers

Warranty

Notes

In order for your retailer to expedite your order, for parts and accessories, it is recommended that you have the information that you attained in the Set-Up and Delivery section. Customer Service will want all this information for warranty purposes.

Lifetime Warranty

LIFETIME

Lifetime: Equipment Warranty

Cal Flame Barbecue Line: C.A.I. warrants the stainless steel & brass burners, stainless steel & cast iron cooking grills against deterioration and corrosion due to defects in materials and workmanship for the lifetime of the aforementioned product.

LIFETIME

Lifetime: Component Warranty

Cal Flame Barbecue Line: C.A.I. warrants the stainless steel grill body, grill lid, heavy duty stainless steel rotisserie, Stainless steel mountings, for the lifetime of the aforementioned product.

LIFETIME

Lifetime: Structural Frame Warranty

Cal Flame Barbecue Line: C.A.I. warrants the Structural Frame to maintain its structural integrity for the lifetime of the aforementioned product. This warranty excludes carts which have a one year warranty and is guaranteed to be free from defect in materials and workmanship at time of delivery.

ONE
1
YEAR

1 Year equipment and component warranty

Cal Flame Barbecue Line: C.A.I. warrants the rotisserie motor, non stainless steel fastener, temperature gauge and plastic items such as knobs, trays, etc. to be free from defects in material and workmanship for a period of one year. Fading is specifically excluded from this warranty.

ONE
1
YEAR

1 Year Component Warranty

Cal Flame Barbecue Line: C.A.I. warrants the Stainless steel storage door, drawers, sink and warming rack against deterioration of the aforementioned product.

NOTE: The fireplace/firepit is not covered by any existing warranty. The warranted item is the gas log unit, which is warranted by the manufacturer.

C.A.I. guarantees the decorative finishes such as stucco, grout, brick, rock, and tile to be free from defects in material and workmanship at time of delivery.

Manufacture Warranty

All barbecue units/carts are manufactured with the highest quality appliances and are guaranteed to be free from defect of material and workmanship at time of delivery. The appliance warranty is extended through the manufacturer of the product. These items include but are not limited to the following: Stereos, speakers, refrigerators, keg refrigerator, and accessories.

Extent of Warranty This 2004 Cal Flame Warranty is only valid on the Cal Flame Barbecue Line delivered in the continental United States and Canada, and extends through the selling dealer to the original purchaser at the original site of installation. This warranty becomes valid at time of purchase and ends either by specified time-frame listed above, owner transfer, or relocation.

Warranty Performance In the event of a malfunction or defect covered under the terms of this warranty, the factory authorized selling dealer is responsible for performing all necessary repairs. To obtain service, contact the authorized selling dealer. In the event the consumer is unable to obtain satisfactory customer service from the authorized selling dealer, written notification must be given to the C.A.I. Customer Relations Department within (10) ten days of the reported failure. There will be no charge for parts on a covered item. However, the authorized service agent may assess labor, freight and a reasonable travel or mileage charge per service call. If C.A.I. determines that repair of a covered item is not feasible, C.A.I. reserves the right to replace the defective merchandise with merchandise equal in value to the original purchase price. In the event of any warranty replacement, all removal, replacement, installation and shipping costs are the responsibility of the barbecue owner. This warranty is non-transferable and may not be extended beyond the above mentioned time frames what-so-ever by any of C.A.I.'s representatives.

Warranty Limitations and Exclusions This warranty is void if the barbecue unit/cart has been subject to negligence, alteration, misuse, abuse, repairs, incorrect and/or prohibited applications, dings, dents and scratches. Gas lines must be installed by a licensed plumber only or local gas co.), incorrect electrical installation (licensed electrician only is acceptable). Serviced by non- C.A.I. authorized representatives, acts of God and any other cases beyond the control of C.A.I. Please refer to the owner's manuals for examples of exclusions and of common acts invalidating this guarantee. This limited warranty applies only to barbecue units used for personal, family, and outdoor household purposes.

Disclaimers C.A.I. shall not be liable for loss of use of the barbecue unit or other incidental or consequential costs, expense or damages, which may include but are not limited to removal of permanent deck or other custom fixtures or the necessity for crane removal. Any implied warranty shall have duration equal to the duration of the applicable warranty stated above. Under no circumstances shall C.A.I. or any of its representatives be held liable for injury to any person or damage to any property, however arising.

Legal Remedies This Limited Warranty gives you specific legal rights and you may have other rights, which may vary from state to state.

Customer Service For customer service, contact the authorized selling dealer immediately. If you need additional information or assistance, please contact the C.A.I Customer Relations Department at 1462 East Ninth Street • Pomona, CA 91766, or call 909-623-8781

This Limited Warranty is effective for BBQ's manufactured after January 01, 2004

REPLACEMENT PART NUMBERS

| <u>Description</u> | <u>Part Number</u> | <u>Quantity</u> |
|--|--------------------|-----------------|
| Fireplace and Firepit | | |
| Repair Kit #1 | BBQ04210001 | 1 |
| Repair Kit #2 | BBQ04210002 | 1 |
| Burner Assembly | | |
| Liquid Propane | BBQ-FPT-100P | 1 |
| Natural Gas | BBQ-FPT-100-1P | 1 |
| Fireplace | | |
| 1/40 HP Submersible Recirculating Pump | BBQ04103080 | 1 |
| 3/8" Clear Flex Tubing | PLU21500290 | 1 |

NOTES