



 
radioshack™

Lamborghini Aventador J

Age 8+


Setting Up Your Lamborghini

1. Turn off the car and the controller.
2. Open the controller battery compartment, insert two AA batteries (not supplied) matching the polarity symbols (+ and -), and replace the cover and screw.
3. Open your vehicle's battery compartment, insert four AA batteries (not supplied) matching the polarity symbols (+ and -), and replace the battery cover.

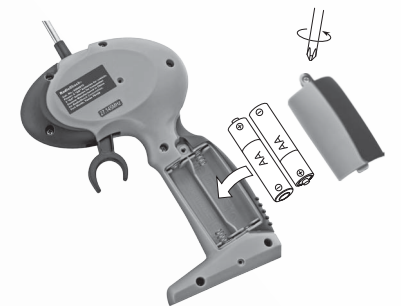

Wheel Alignment

 If your car pulls to the left, turn this switch toward **R**; if the car pulls to the right, turn this switch toward **L**.

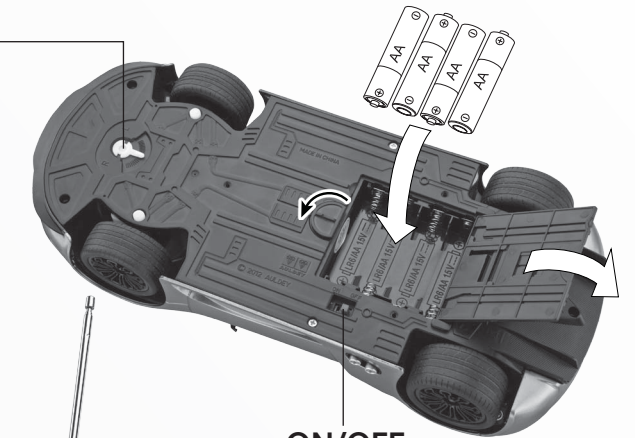

Driving Your Lamborghini

Right

Steering

Left

ON/OFF

Install the antenna to the controller before using it.

ON/OFF

 
Power Indicator

Reverse

Trigger

Forward/Turbo

Turn off your vehicle when not in use.

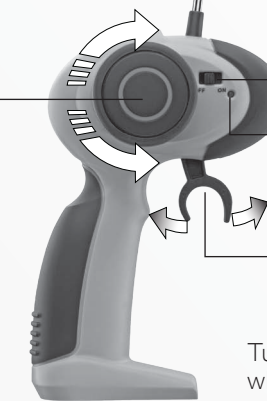

We hope you enjoy your Lamborghini Aventador J from RadioShack. Please read this user's guide before setting up and using your car.

What's Included

- Lamborghini Aventador J
- Controller
- User's Guide

Battery Notes

- For best performance use only fresh alkaline batteries of the required size and type. Do not mix old and new batteries or batteries of different capacities, types, or chemistries.
- Dispose of batteries promptly and properly. Do not burn or bury batteries.
- When the controller power indicator lights dimly, or the speed of the car slows to a stop, replace with fresh batteries.
- If you do not plan to use the vehicle for a week or longer, remove the batteries from both the vehicle and controller.

Safety and Care

- Adult supervision is recommended at all times.
- Do not use your vehicle near controllers with the same frequency (27 or 49 MHz).
- A nearby CB radio can interfere with your vehicle's control. If this happens, move the vehicle away from the CB.
- Never play with your vehicle in the street.
- Avoid high-impact collisions with people and objects.

CHOKING HAZARD! Small parts. Not for children under 3 years.

Specifications

Frequency..... 27MHz/49MHz
Power..... 4 x AA batteries (car)
..... 2 x AA batteries (controller)
Speed..... Low: 300 ft/min
..... Turbo: 430 ft/min
Operating range..... Up to 50 ft (15.24 m)
Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your equipment.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a RadioShack-owned store or an authorized RadioShack franchisee or dealer. **RADIOSHACK MAKES NO OTHER EXPRESS WARRANTIES.**

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal,

installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store in the U.S. RadioShack will, at its option, unless otherwise provided by law (a) replace the product with the same or a comparable product, or (b) refund the purchase price. All replaced products, and products on which a refund is made, become the property of RadioShack.

RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, RADIOSHACK SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF

ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RADIOSHACK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. You may contact RadioShack at:

RadioShack Customer Relations
300 RadioShack Circle
Fort Worth, TX 76102

02/14

www.RadioShack.com