 


Welcome to the world of Motorola digital mobile communications! We are pleased that you have chosen the Motorola E770v 3G mobile phone.

Note: The graphic represented here and throughout this manual may not accurately depict your specific phone.

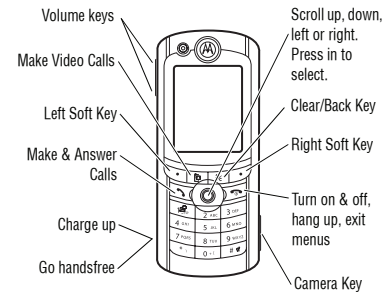

www.motorola.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office.

The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license.

Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

All other product or service names are the property of their respective owners.

© Motorola, Inc., 2005.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software.

Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.

Using Menus	55	Returning an Unanswered Call	66
Using the Handsfree Speaker	57	Using the Notepad	66
Changing a Code, PIN, or Password	57	Putting a Call On Hold or Mute	67
Locking and Unlocking Your Phone	57	Using Call Waiting	67
If You Forget a Code, PIN, or Password	58	Using Caller ID	68
Locking and Unlocking Your Keypad	59	Calling an Emergency Number	68
Setting Up Your Phone	60	Dialling International Numbers	68
Storing Your Name and Phone Number	60	Using Voicemail	69
Setting the Time and Date	60	Phone Features	70
Setting a Ring Style	60	Navigation Guide	70
Setting a Wallpaper Image	61	Feature Quick Reference	72
Setting a Screen Saver Image	61	SAR Data	91
Setting a Theme	62	Index	92
Setting Display Appearance	63		
Setting Answer Options	63		
Calling Features	64		
Turning Off a Call Alert	64		
Changing the Active Line	64		
Viewing Call Log	64		
Redialling a Number	65		
Using Automatic Redial	65		

Introduction	1	Camera	28
Safety Information	5	Taking and Sending a Photo	28
EU Conformance	11	Using Photos and Pictures	30
Recycling Information	12	Sending a Postcard	31
Basics	13	Recording Video Clips	33
About This Guide	13	Using Video Clips	34
Installing the USIM, SIM, or Memory Cards	13	Making Video Calls	35
Memory Card	14	Using and Transferring Files	39
User Memory	15	Downloading Media Files	39
Battery Tips	15	Playing or Viewing Media Files	39
Installing the Battery	16	Sending Media Files	39
Using Your Charger	16	Audio Player	40
Charging the Battery	17	Digital Audio Player	41
Turning Your Phone On	17	Connecting Your Phone to Another Device	42
Adjusting Volume	18	Connecting a Memory Card to your computer	47
Making a Call	18	Vodafone live!	48
Answering a Call	18	Vodafone live!	48
Changing the Call Alert	19	Live Cast	50
Viewing Your Phone Number	19	Learning to Use Your Phone	52
Entering Text	19	Using the Display	52
		Using the 5-Way Navigation Key	55

If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 2.5 centimetres (1 inch) from your body when transmitting.

3.2.4 Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 2.5 centimetres (1 inch) from your body.

3.2.5 Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries, antennas, and convertible covers, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.motorola.com.

3.3 RF Energy Interference/Compatibility

Note: *Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.*

Note: *This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

3.3.1 Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.¹

3.1 Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

3.2 Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following instructions.

3.2.1 External Antenna Care

If your phone has an external antenna, use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone and/or may result in non-compliance with local regulatory requirements in your country.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed.

3.2.2 Phone Operation

When placing or receiving a phone call, hold your phone as you would a fixed line phone.

3.2.3 Body-Worn Operation: Voice Communication

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting voice communications, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines.

3.3.2 Aircraft

Turn off your wireless device whenever instructed to do so by airline staff. If your device offers a flight mode or similar feature, consult airline staff about use in flight. If your device offers a feature that automatically turns on the phone, then turn off this feature before boarding an aeroplane or entering an area where the use of wireless devices is restricted.

3.3.3 Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 centimetres (6 inches) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 15 centimetres (6 inches) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.

- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

3.4 Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road. Using a phone may be distracting in certain circumstances. Discontinue a call if you can't concentrate on driving.

- Always use handsfree operation.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices can be found in the "Wireless Phone Safety Tips" at the end of this guide and/or at the Motorola website: www.motorola.com/callsmart.

3.5 Operational Warnings

3.5.1 For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

3.5.2 Gas or Petrol Stations

Obey all posted signs with respect to the use of radio equipment in gas or petrol stations. Turn off your wireless device if instructed by authorised staff.

3.5.3 Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.

3.5.4 Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

3.5.5 Damaged Products






If your phone or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorised Service Centre to determine if it has been damaged. Do not attempt to dry it with an external heat source, such as a microwave oven.

3.5.6 Batteries and Chargers

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become hot. Take care when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original™ batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the rubbish bin.
	Your phone contains an internal lithium ion battery.

3.6 Choking Hazards

Your phone or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your phone and its accessories away from small children.

3.7 Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.)

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.

- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

3.8 Repetitive Motion Injuries

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

 
- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

1. The information provided in this document supersedes the general safety information in user's guides published prior to January 28, 2005.

European Union Directives Conformance Statement

Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

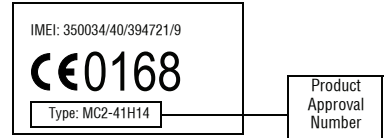

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site

5.1 Caring for the Environment by Recycling



When you see this symbol on a Motorola product, do not dispose of the product with household waste.


5.2 Recycling Mobile Phones and Accessories

Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.


6.1 About This Guide

This guide describes the basic features of your Motorola mobile phone.
 To obtain another copy of this guide, see the Motorola Web site at:
www.hellomoto.com
 A Quick Start Guide for this product is also available.

6.1.1 Optional Features

 
 This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

6.1.2 Optional Accessories

 This label identifies a feature that requires an optional Motorola Original™ accessory.


6.2 Installing the USIM, SIM, or Memory Cards

Caution: Do not bend or scratch your card. Avoid exposing your card to static electricity, water, or dirt.
 Your 3G USIM (Universal IC Card) contains your phone number, service details, and contacts list/message memory. Your phone can use GSM SIM (Subscriber Identity Module) cards, but not all features will be available.

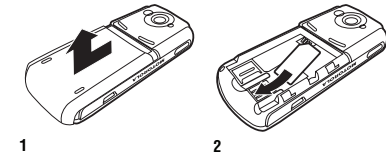

6.3

 Memory Card

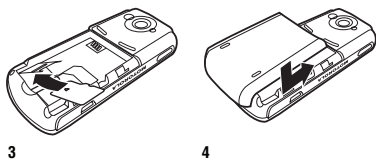


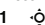 
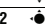 
6.3 Memory Card

Insert the Memory Card next to the SIM card (see above) underneath the phone battery.



The Memory Card provides you with a larger storage capacity than the Phone Memory. When you download for example pictures, sounds, video clips or Java applications, they will be saved to the Memory Card.

Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

To show the amount of free space on the Memory Card:

Find the Feature	 > Settings > Phone Status > Storage Devices
Press	To
1 	highlight the memory card
2 	see the memory card information


When you look at a list of files in **My Files**, the icon next to it shows whether it is stored on your memory card or your internal memory.

 = stored on internal memory  = stored on memory card

Note: A key over the icon indicates that the file has a copyright lock that keeps you from saving it on external memory, forwarding it, or editing it.

User Memory

6.4

 If you have a TransFlash removable memory card, the use of an SD adapter allows you to use it in other devices that are compatible with SD cards (for example, digital cameras, laptops, mp3-players).

6.4 User Memory

Your phone stores any content that you add, like ringtones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.

6.5 Battery Tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and battery chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.



- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place, such as a refrigerator.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



Contact your local recycling centre for proper battery disposal.

 
Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, please read the battery safety information in the *Safety and General Information* section included in this guide.

6.6 Installing the Battery




™ Your phone is designed to use only Motorola Original™ batteries and accessories.

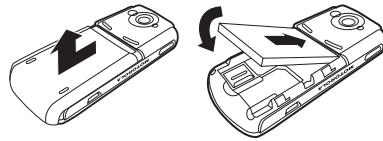

1

 2

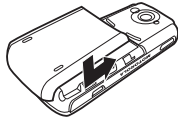

3

16 Basics

6.7 Using Your Charger

The battery charger shipped with this device is specifically designed for use with Motorola 3G mobile phones. Other chargers might take longer to charge your battery or cause your calls to fail during charging.

 
For best performance, please use the following charger kits with this device:

- SPN5202 Travel Charger EMU Rapid Switcher
 - With SYN7455A UK Plug or SYN7456A Euro Plug
- SYN0847 V700 EMU Vehicle Power Adapter

6.8 Charging the Battery

New batteries are shipped partially charged. Before using your phone, please install and **fully charge the battery as described below**. Some batteries perform best after several full charge/discharge cycles.


Action

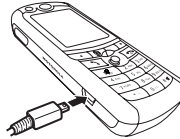- 1 Plug the charger into your phone.
- 
- 2 Plug the other end of the charger into the appropriate electrical outlet.
 - 3 When your phone indicates **Charge complete**, remove the charger.

Tip: You can safely leave the charger connected to your phone after charging is complete. This will not damage the battery.

6.9 Turning Your Phone On

 Action

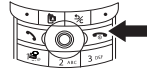- 1 Press and hold for 2 seconds or until the display turns on.
- 
- 2 If necessary, select whether to start in **Flight Mode** or not. See "Flight Mode" on page 89 for more details.
 - 3 If necessary, press to scroll to the User Account you want. Then press the **Select** key to select the account from the list (stored on the SIM card).
 - 4 If necessary, enter your SIM card PIN code and press the **OK** key to unlock the SIM card.
- Caution:** If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.
- 5 If necessary, enter your four-digit unlock code and press **OK** key to unlock the phone.

Tip: The unlock code is originally set to 1234. Your service provider may change this number before you receive your phone.

Basics 17

 
Action

- 6 To turn off your phone at any stage, press and hold the for 2 seconds.

6.10 Adjusting Volume

Press the up or down volume keys to:

- increase or decrease earpiece volume during a call
- increase or decrease speakerphone volume during a call
- turn off an incoming call alert
- increase or decrease the ringer volume setting when the home screen is visible

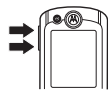

Tip: At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to cycle back to vibrate alert, then ring alert.

18 Basics

6.11 Making a Call

To make video calls, see page 35.

Press	To
1 keypad keys	dial the phone number
2	make the call
3	end the call and "hang up" the phone when you are finished

Note: You can make an emergency call even when the phone is locked, or when a SIM card is not inserted (see page 68).

6.12 Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press	To
1	answer the call
or	
or	divert the call to your voicemail or call divert number, as though your line was busy

Press

2

To

end the call and "hang up" the phone when you are finished

6.13 Changing the Call Alert

To set your **Ring Style**, press > **Ring Styles** or **Settings** > **Ring Styles** (see page 60).

Shortcut: In the home screen, press the down volume key to switch the alert for incoming calls and other events to vibrate alert, then silent alert. Press the up volume key to reset ring alert.

Shortcut: Press and hold to quickly change to silent style. Press and hold again to change back to previous ring style.

6.14 Viewing Your Phone Number

To view your phone number from the home screen, press .

While you are on a call, press **Options** > **My Tel. Numbers**.

Press

2

 
To

end the call and "hang up" the phone when you are finished

Note: Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 60. If you do not know your phone number, contact your service provider.

6.15 Entering Text

Some features require you to enter information. The message centre lets you compose and send text messages.

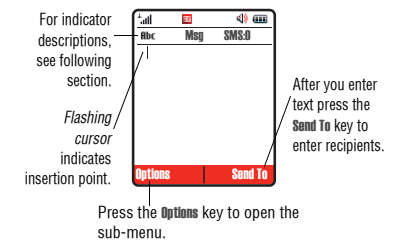

Basics 19

6.15.1 Choosing a Text Entry Mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The mode you select remains active until you select another mode.

Press **[123]** in any text entry screen to select one of the following entry modes:

- [1]** or **[1]** Your **Primary** text entry mode can be set to any iTAP **[1]** or tap **1** mode.
- [2]** or **[2]** Your **Secondary** text entry mode can be set to any iTAP **[2]** or tap **2** mode, or set to **None** if you don't want a secondary entry mode.
- 123** **Numeric** mode enters numbers only.
- &** **Symbol** mode enters symbols only.

6.15.2 Setting Up a Text Entry Mode

To set your primary and secondary text entry modes, press **Options > Text Setup** in a text entry view and select **Primary Text** or **Secondary Text**, and choose:

- iTAP** Let the phone predict each word as you press keys (see page 23).
- TAP** Enter letters and numbers by pressing a key one or more times.
- Tap Extended** Enter letters, numbers, and symbols by pressing a key one or more times.
- None** Hide the Secondary setting (only available for Secondary Setup).

Using Capitalisation

Press **[ABC]** in any text entry screen to change text case. The following indicators show capitalisation status:

- abc** = no capital letters
- Abc** = capitalise next letter only
- ABC** = all capital letters

Text Entry Mode Indicators

When you select the **Primary** or **Secondary** text entry mode, the following indicators identify the text entry setting:

Primary	Second.	
1	2	Tap, no capital letters
1↑	2↑	Tap, capitalise next letter only
1↑	2↑	Tap, all capital letters
[1]	[2]	iTAP, no capital letters
[1↑]	[2↑]	iTAP, capitalise next letter only
[1↑]	[2↑]	iTAP, all capital letters

Two other indicators identify **Numeric (123)** or **Symbol (&)** entry modes.

6.15.3 Using Tap Mode

This is the standard mode for entering text on your phone.

Regular **TAP** mode cycles through the letters and number of the key you press. **Tap Extended** also cycles through additional symbols as shown in the chart on page 23.

Press	To
1 A keypad key one or more times	select a letter, number, or symbol
2 keypad keys	enter remaining characters

Tip: Press **⌵** right to accept a word completion, or **[X]** to insert a space.

In a text entry screen, you can press **[123]** to switch entry mode. If you don't see **Abc1** or **Abc2** then press **Options > Text Setup** to set tap mode as your primary or secondary text entry mode.

Block cursor indicates highlighted character. After 2 seconds, character is accepted and cursor moves to next position.

Press **[X]** to delete character to left of insertion point.

Press the **Send To** key to enter the recipient.

Press the **Options** key to open the sub-menu.

To enter text in tap mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** you might see:

Flashing cursor indicates insertion point.

Press **⌵** right to accept **program**, or press **[X]** to reject it and enter a space after **prog**.

If you want a different word (such as **progress**), continue pressing keypad keys to enter the remaining characters.

- Press **⌵** left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalised. If necessary, press **⌵** down to force the character to lowercase before the cursor moves to the next position.
- If you enter or edit information and do not want to save the changes, press **[Back]** to exit without saving.

Character Chart

Use this chart as a guide for entering characters with **Tap Extended**.

[1]	. ? ! , @ ' - _ : ; () & * ~ 1 0 ı ı ^ % £ \$ ¥ ¢ € + x * / \ [] = > < # \$
[2]	a b c 2 á à ã ä å ç
[3]	d e f 3 é è ê ë
[4]	g h i 4 ï ï
[5]	j k l 5
[6]	m n o 6 ñ ó ô õ ö ø
[7]	p q r 7
[8]	t u v 8 ú û ü
[9]	w x y z 9
[0]	change text case, for capital letters
[X]	enter a space (hold to enter a return)
[#]	change text entry mode (hold for default)

Note: This chart may not reflect the exact character set available on your phone. In an email address or URL editor, **[1]** first shows common characters for that editor.

6.15.4 Using iTAP™ Mode


Press **[123]** in a text entry view to switch to iTAP mode. If you don't see **[1]** or **[2]**, press **Options > Text Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP™ software provides a predictive text entry mode that lets you enter a word using one keypress per letter. This can be faster than **TAP**, because your phone combines the keypresses into common words.

Tip: Your phone has a text tutorial which should help you with any problems..

Find the Feature **Options > Text Setup > Text Tutorial**

For example, if you press [7][7][6][4], letter combinations that match your key presses display:

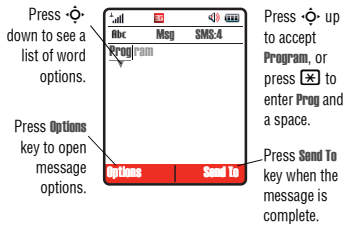

- If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.
- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.
- Press [] to enter punctuation or other characters.

Entering Words

In a text entry screen, you can press [#] to switch entry modes. An indicator shows which mode is active (see page 21). If iTAP mode is not available as the **Primary** or **Secondary** entry mode, see page 20.

Press	To
1 keypad keys (one press per letter)	show possible letter combinations If alternative combinations are available then an arrow appears below the letters.
2 -> up or down	go to the previous or next available predicted words Press and hold -> up or down to display a popup window showing the next four predicted words. You can scroll up and down through this list and then press Select to accept the highlighted word.
3 -> right	accept the predicted word

Press	To
4 -> left	move the cursor back one letter
5 ->	select a word
You can press keypad keys to add more letters to the end of the combination.	
or [X]	enter the highlighted combination when it spells a word A space is automatically inserted after the word.

If you enter a word your phone does not recognise, the phone stores it to use as one of your word options. When you fill memory space for unrecognised words, your phone deletes the oldest words to add new words.

 
6.15.5 Using Numeric Mode

In a text entry screen, press [#] to switch entry modes until the 123 (**Numeric**) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press [#] to switch to another entry mode.

6.15.6 Using Symbol Mode

In a text entry screen, press [#] to switch entry modes until the & (**Symbol**) indicator displays.

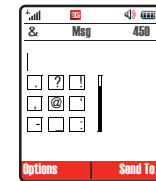

Press	To
1 -> left, right, up or down	highlight the symbol you want
2 -> down	view more symbols

Press	To
3 -> or the corresponding number key	enter the highlighted symbol
[]	enter a space (hold to enter a return)
[#]	change text entry mode (hold for default)

6.15.7 Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:

- Action**
- Press [] to delete the last letter.
 - Press and hold [] to clear the entire message.

6.15.8 Copying, Cutting, and Pasting Text

From a text entry screen:

Find the Feature Options > Editing Options

Option	Description
Copy Text	Copy the text you are about to highlight (see "Highlighting Text" on page 27).
Cut Text	Cut the text you are about to highlight (see "Highlighting Text" on page 27).
Copy All Text	Copy all text in the editor.
Cut All Text	Cut all text in the editor.
Paste	Paste the text you cut or copied.
Delete	Delete the selected text.
Undo	Undo the last copy, cut, or paste in the current text editor.

Note:

- **Paste** only displays once you have cut or copied some text.
- **Undo** only displays once you have cut, copied or pasted some text.
- **Copy All Text** also displays in the menu (press **Options**) when you are viewing details for a **Contacts** entry, **Calendar** event, **Vodafone Live!** page, text message, or **Call Log** entry.

Highlighting Text

In a text editor, to highlight and copy or cut text:

Find the Feature Options > Editing Options > Copy Text or Cut Text

Press	To
1 ->	scroll to the beginning of the text you want to copy or cut
2 Start key	turn on the highlighting marker
3 ->	scroll to the end of the text you want to copy or cut
4 Copy key	copy or cut the text you selected
or Cut key	You can now paste the text in another location or file.


Text remains on your clipboard, available to paste, until you copy or cut other text or until you turn off your phone.

You can do much more with your phone than make and receive calls! This section describes your phone's camera and video camera features.

7.1 Taking and Sending a Photo

To activate your phone's camera, press the camera key on the bottom right of your phone (see page 1 for exact location), or select the camera icon on the main menu.

The active viewfinder image displays.

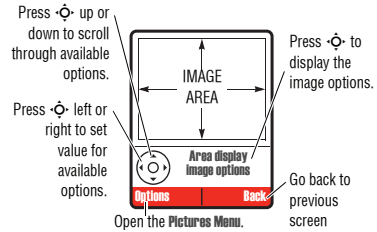 

Point the camera lens at the photo subject.

Press	To
1 or the camera key	take a photo Tip: Press to turn the light on or off
2 Options > Store Only	store the photo
or Options > Send or Send key	send the photo in a message
or Options > Discard	delete the photo and return to active viewfinder

Note: If you select Store Only you can select Print and Store to print the picture over a Bluetooth connection, see page 43.

Press Options to open the Pictures Menu when the camera is active. The menu can include the following options:

Option	Description
Go To Pictures	View pictures and photos stored on your phone.
Go To Video Mode	Capture and view videos stored on your phone.
Internal View/ External View	Switch between the internal (self-portrait) and external cameras.
Light On/Off	Turn the camera light on and off.
Auto-Timer	Set a timer for the camera to take a photo.

Option	Description
Camera Setup	Open the setup menu to adjust picture and video settings. Resolution: Set camera resolution to MMS (160x120 pixels), Medium (320x240 pixels) or High (640x480). Quality: Set the quality of the picture. Shutter Tone: Activate a tone that sounds when you take a photo (can be set to None, Chimp, Quack, Fix, Boing, or Click). Mirror: Flips the image horizontally in the viewfinder.
Switch Storage Device	Choose to store and see pictures on your phone or memory card.
Free Space	View memory space available for storing pictures.

Tip: To assign a stored picture to a contact entry, open the entry and press Options > Edit > Customise > Picture. You cannot assign pictures to entries stored on your SIM card.

7.2

Using Photos and Pictures

7.2 Using Photos and Pictures

You can send your photos to other mobile phone users or email addresses, assign photos to specific contact entries, and use them as wallpaper or screen saver images.

7.2.1 Downloading Pictures

Your phone may contain predefined photos, pictures, and animations. You can download and store additional images on your phone.

If you are unable to establish a network connection with Vodafone live!, contact your service provider.

Note: The files that you download or receive as attachments might have a copyright lock that keeps you from forwarding them.

To download a picture from Vodafone live!, see page 48. To store a picture from a message, see page 74.

7.2.2 Viewing and Managing Pictures

Note: Some files might have a copyright lock that keeps you from saving them on external memory, forwarding them, or editing them.

To view a photo, picture, or animation stored on your phone:

Find the Feature > My Files > Pictures

Press	To
1	scroll to the picture
2	view the picture Press to go to full screen view. Press to return to normal view.
3	view the next/previous picture
or Options	open the Pictures Menu to perform other options

Tip: You can change the way your picture list displays using the Pictures Setup option in the Pictures Menu.

Sending a Postcard

Press Options to open the Pictures Menu from the picture list. The menu can include the following options:

Option	Description
Send	Insert selected picture in a new message.
Apply As	Set the picture as your phone's Wallpaper or Screen Saver, or a Picture Caller ID.
Create New	Capture a new picture or create an album of stored pictures.
Print	Print a picture to a Bluetooth printer.
Manage	Select from Rename, Delete, Move or Copy To for the current picture.
Mark	Current: Mark the current picture to move, copy, assign or delete it. All: Mark all pictures to move, copy, assign or delete them.
Categories	Set up categories for grouping your pictures.
Assign to Category	Assign the current picture to a category. Note: This option is only available if you have created a category.

Option	Description
Free Space	View memory space available for storing pictures.
Properties	File Details: View picture information.
Pictures Setup	Open the setup menu to adjust picture settings.

Note: Send, Manage and Mark are only available for photos you have taken or pictures you have downloaded.

7.3 Sending a Postcard

The Vodafone live! Postcard service allows you to send a picture as an MMS, which will be delivered as a real postcard to a street address. You can send a picture that you have just taken, or a picture already saved to your phone. You can also include a personal greeting to the postcard.

Find the Feature > Messaging > Create Message > lvel Postcard
or > Contacts > Forward by lvel Postcard

- or > My Files > Pictures
Options
> Forward by Live! Postcard

You can also access this option after you have taken a picture. Press **Options** and select **Forward by Live! Postcard**.

Please note that the various steps when sending the postcard may differ slightly depending on whether you are in the **My Files Menu**, **Contacts Menu** or **Messaging Menu**. The following describes the steps for editing the Postcard from the **Messaging Menu**.

- Find the Feature** **Options** > Messaging > Create Message
> Live! Postcard

- | Press | To |
|---------------------------|--------------------------|
| 1 Options > Insert | choose a picture to send |
| 2 keypad keys | enter your greeting text |

Note: The maximum length for the greeting text is 200 characters.

If the intended recipient already contains complete address information in the contacts, do the following:

- | Press | To |
|--|---|
| 3 Address | select the address of the recipient from your Contacts |
| Note: Only contact entries that contain complete address information will show in the list. See "Inserting a new address entry" on page 33 for inserting a new address entry. | |
| 4 Up or down | scroll to the name of the person you wish to send the postcard to |
| 5 Centre key | select the recipient's name |
| Note: You can select more than one recipient for your postcard. | |
| 6 Send | send the postcard when you have inserted the picture and the recipient(s) address(es) |

Point the camera lens at the video subject, then:

- | Press | To |
|-----------------------------------|---|
| 1 Camera or the camera key | start the video
Tip: You can press the Pause key to pause video capture. |
| 2 Stop key | stop the video |
| 3 Options
> Store Only | to store the video
To play a stored video, see page 34. |
| or | |
| Send key | to send the video in a message |
| or | |
| Options
> Discard | delete the video and return to active viewfinder |

Press **Options** to open the **Videos Menu** when the camera is active. The menu can include the following options:

Option	Description
Go To Videos	View videos stored on your phone.
Internal View/ External View	Switch between the internal (self-portrait) and external cameras.
Videos Setup	Open the setup menu to adjust picture and video settings.
Free Space	See how much memory remains for storing videos.

7.5 Using Video Clips

You can download video clips with Vodafone live!, and receive video clips in multimedia messages.

7.5.1 Downloading Video Clips

To download a video clip with Vodafone live!, see page 48. To store a video clip from a message, see page 74.

7.3.1 Inserting a new address entry

If your **Contacts** does not have the intended recipient's address, insert a new address by selecting **Address** and then **Options** > **Enter Address**. Define the following information:

Option	Description
First Name:	enter the recipient's first name (mandatory)
Last Name:	enter the recipient's last name (mandatory)
Additional Information:	enter any other information
Address:	enter the house name or number and street name (mandatory)
City:	enter the city name (mandatory)
State:	enter the state name (optional)
Postal Code:	enter the postal code (optional)
Country:	enter the country name (optional)


Once you have entered all mandatory fields, press **Done**. Press **Send** to send the postcard.

7.4 Recording Video Clips

To record a video on your phone:

- Find the Feature** **Options** > Video

The active viewfinder image displays.

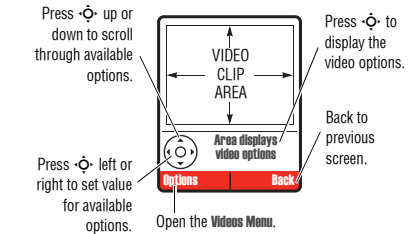 

Note: The number of clips remaining is only an estimate.

7.5.2 Viewing and Managing Video Clips

To play a video clip stored on your phone:

- Find the Feature** **Options** > My Files > Videos

- | Press | To |
|---------------------|---------------------------|
| 1 Up or down | scroll to the video clip |
| 2 Centre key | start video clip playback |

During video clip playback, press **Options** to open the **Videos Menu** to perform various operation on the video:

Option	Description
Play Full Screen	Stretch the video to fill the display.
Send	Insert selected video in a new message.
Create New Video	Capture a new video.
Manage	Select from Rename , Delete , Move or Copy To for the current video.

Option	Description
Mark	Current: Mark the current video to move, copy, assign or delete it. All: Mark all videos to move, copy, assign or delete them.
Free Space	View memory space available for storing pictures.
Properties	File Details: View picture information.
Videos Setup	Open the setup menu to adjust video settings.

7.6 Making Video Calls



With your phone you can make a video call to someone else who has a video phone and see each other while you talk. Please note that both parties participating in the video call have to be on the 3G network and in the 3G coverage area.

7.6.1

Making a Video Call

7.6.1 Making a Video Call

A quick guide to making a video call:

Press	To
1 keypad keys	dial the phone number
2 	make the call
3 	end the call and "hang up" the phone when you are finished

Options During an Active Video Call

Swapping Views

Press	To
Swap View	swap between the primary and the secondary video area during a video call

During an active video call, there are two video areas on your phone display. The primary video area shows your image (or the selected **Camera Off Image**) and the secondary video area shows your recipient's image. You can swap between the video areas to place your image onto the secondary video area, and the recipient's image onto the primary video area.

36 Camera

Selecting Applications

Press	To
More Apps	access other applications during a video call

During an active video call, you can access other applications, such as **Contacts**, **Calendar**, **My Files** or **Vodafone Live!**. You can also send and receive messages during a video call, or start a new video call.

Video Call Menu

Find the Feature **Options > Video Call Menu**

Some of the options accessed from the **Video Call Menu** during an active call include the following:

Press	To
Select Application	access applications during an active call, such as Contacts , Calendar or Vodafone Live!
Camera On/Cam. Off	change whether you want the Camera to be on or off

Recording a Video Call

7.6.2

Press	To
External View/Internal View	If the Camera is on, select the view from which the image is captured.
Hold/Resume	If the Camera is off, put audio on hold to be able to e.g. change different image as your Camera Off Image . Select Resume to return to the Video Call Menu .
Audio Mute/Unmute Audio	stop sending video image temporarily. Select Unmute Audio to resume sending the video image
Swap View	change between the primary and secondary video area on your phone display
Brightness/Contrast	adjust the brightness/contrast level of the display. This does not affect the outgoing video image.

Press	To
Setup	set up camera settings: Mirror: Camera captures a "mirror" image (only applicable in Internal View) Status Icons: Turn status icons On/Off in the viewfinder Lighting Conditions: Setup the display: Automatic, Sunny, Cloudy, Indoor, or Night

7.6.2 Recording a Video Call

Note: Recording of phone calls is subject to varying country laws regarding privacy and recording of phone conversations. Always obey the laws and regulations on the use of this feature.

7.6.2

Recording a Video Call

You can record a video call as a video clip. During a video call:

Press	To
1 Options > Record	start recording the call Your phone displays Recording . It records incoming video and incoming and outgoing audio.
2 Options > Stop	stop recording and store the video clip The recording stops automatically if the call ends or you reach your video capture or memory limit. To view the video clip see page 34.

Note: Video recording requires video compatibility with the other caller's video phone.

38 Camera


Camera 37

You can store, send, and play music, videos, and other media files on your phone.

Tip: You can listen to tunes on your way. Use *flight mode* to make your phone safe to use even while you're on a plane. See page 89.

8.1 Downloading Media Files




To download music files:

Find the Feature  > My Files > Sounds > Download Sounds

To download **other media**, follow the instructions above but replace *Sounds* with the type of media you want.


8.2.1 Viewing a full screen picture

To view a picture without any icons or soft keys showing on the screen:

Press	To
	view as full screen
 up or down	scroll through all the pictures as full screen
	return to normal view

8.2 Playing or Viewing Media Files

To play music:


Find the Feature  > My Files > Sounds and select the file you want to play

For more about playing music files, see page "Audio Player" on page 40.

To play or view other media, follow the instructions above but replace *Sounds* with the type of media you want.

8.3 Sending Media Files

To send music:

Find the Feature  > My Files > Sounds

Highlight the file you want to send and press **Options > Send > In Message**.


8.4

 
 
 
 
Audio Player


To send other media, follow the instructions above but replace *Sounds* with the type of media you want.

8.4 Audio Player

You can't use the audio player with a USB cable connected to your phone.

Find the Feature  > My Files > Sounds select the file you want to play

Press	To
 left	go to the previous file
 right	go to the next file
 down	stop
 up	continue playing

Press  up or down to highlight an option:

Option	Description
Send	Copy the file to My Album.
Apply as Ringtone	Use as your phone's ringtone.
New	Create a new playlist.
View	Details: View the sound file's information. View Free Space: View memory space available for storing sounds.
Manage	Copy To: Copy file to another location. Note: Manage is only available for files that are not copyright locked.
Mark	Current: Mark the current sound file to move, copy, assign or delete it. All: Mark all the sound files to move, copy, assign or delete them.
Sounds Setup	Open the setup menu to adjust sound settings.

Digital Audio Player

8.5

Option	Description
Use Bluetooth	Use a Bluetooth device to listen to the music.
Hide	Plays music in the background.


 
 


 
 

 
 



To download songs to your phone, see page 49. To copy files between your phone and a computer, see page 44.

Note: Your phone cannot play music files that have a bit rate higher than 192 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file.


8.5 Digital Audio Player


Your phone can play song files:

 Find the Feature  > Entertainment > Digital Audio Player

Use  to scroll up or down through the menu. Press  to select an option. Use  to scroll up or down through options. Press  to select an option. Press the appropriate key of the  to choose a function of the audio player: play , pause , stop , previous , next , repeat , shuffle , and visualiser on/off .

Tip: Once a song is chosen, you can go to **Options** to set the repeat or shuffle function.

Press  to stop the player.

Press  up or down to highlight an option:

options	
Playlists	Create or play a playlist of songs.
Artists	Select an artist to show or play their songs.
Albums	Select an album to show or play its songs.

options	
Songs	Show and play individual songs. Note: All of your phone's songs appear in the Songs list. Some songs do not have any Artist, Album, or Genre information stored, so they don't appear in those lists.
Genres	Select a type of music to show or play songs.
Help	Show instructions on how to use the audio player
About	Show audio player version information

Your phone also has a **Sounds** player that can play songs and ring tones, but it cannot store playlists or other song information. To use the **Sounds** player, press **•** > **My Files** > **Sounds** and select the file you want to play.

8.6 Connecting Your Phone to Another Device

You can connect your phone to a computer or hand-held device using a USB cable or a Bluetooth connection.



Note: Not all devices are compatible with all types of connections. Check your external device for specifications. The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

To make data calls through a connected computer, see page 85.

To download songs to your phone, see page 49. To copy files between your phone and a computer, see page 44.

Note: Your phone cannot play MP3 files that have a bit rate higher than 192 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file. Metadata information is **not** supported for MP4 formatted files.

8.6.2

Setting Up a Wireless Connection

Note: To extend battery life, use the above procedure and set **Bluetooth Power** to **Off** when not in use. Your phone will not pair with devices until you set **Bluetooth Power** back to **On** and pair your phone with the devices again.

Pairing With a Headset or Handsfree Device

Before you try to pair your phone with a device, make sure the device is on and ready in **pairing** or **bonding** mode (see the user's guide for the device).

Find the Feature **•** > **Connection** > **Bluetooth** > **Audio Devices** > **(Look For Devices)**

Your phone lists the devices it finds within range. Highlight a device in the list and:

Press	To
1 Select	select the device
2 Yes or Ok	pair with the device
3 keypad keys	enter the device passkey (such as 0000) if necessary, and then press the Ok key

When your phone is paired, the Bluetooth indicator **ⓑ** shows in the home screen.

Shortcut: After you paired with a device, you can pair with it again by pressing **Options** > **Use Bluetooth** during a phone call or while playing a sound file.

Note: You can't play some copyrighted files over a Bluetooth connection.

Tip: We can't see the device you're holding. For specific information about a device, refer to the instructions that came with it.

Copying Objects to Another Device

You can use Bluetooth pairing to copy a media object, contact entry, calendar event, or bookmark from your phone to a computer or other device.



Note: You cannot copy a copyrighted object.

- 1 Highlight the object on your phone that you want to copy to the other device.
- 2 Press **Options** and select **Copy** (for media objects), **Send** (for calendar events), or **Share Contacts Entry** (for contact entries).

8.6.1 Setting Up a Cable Connection

Attach a Motorola Original™ USB cable to the phone and external device as follows.

Note: Check your computer or hand-held device to determine the type of cable you need.

Action

- 1 Plug the end of the cable with the Motorola logo into the phone's accessory connector port. Make sure that the logo and the phone are both facing you.
- 2 Plug the other end—the USB connection—into the USB port on the device.



8.6.2 Setting Up a Wireless Connection

For maximum Bluetooth security, you should always pair Bluetooth devices in a safe, private environment. Your phone supports Bluetooth® wireless **pairing** (also called **linking** or **bonding**). You can pair your phone with a Bluetooth headset or car kit, or pair your phone with a computer to exchange and synchronise files.

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Turning Bluetooth Power On or Off

Find the Feature **•** > **Connection** > **Bluetooth** > **Setup** > **Power** > **On**

If Bluetooth **Power** is **On**, your phone can automatically pair with the handsfree device you have used before. Just turn on the device or move it near the phone.

Once you connect your phone to a Bluetooth device, your phone "recognises" that device in the future. If a recognised device starts a Bluetooth link with your phone, the Bluetooth status icon appears at the top of your display.

Setting Up a Wireless Connection

- 3 Select a recognised device name, or **(Look For Devices)** to search for the device where you want to copy the object.

Sending Objects to a Printer

You can use Bluetooth pairing to send a picture, message, phonebook entry or datebook view from your phone to a printer.



Note: You can print A4 or US Letter size pages. To print another size, copy the object to a linked computer and print it from there. You can't print Quick Notes, MMS Templates, or a phonebook Mailing List.



Tip: After you capture a picture in the camera, you can press the **Store** key and select **Print and Store**.




- 1 Highlight the object on your phone that you want to print
- 2 Press **Options** > **Print**. In the **Calendar**, you can print the month, week or day.
- 3 If available, choose additional objects or print options.
- 4 Select a recognised printer name listed in the **Printers** menu, or **(Look For Devices)** to search for the device to which you want to send the object.

Advanced Bluetooth Features

A device is recognised after you pair with it once (see page 43).

Features	
Make phone visible to other device	Allow another Bluetooth device to discover your phone: • > Connection > Bluetooth > Find Me
Pair with recognised device	Pair your phone with a recognised handsfree device: • > Connection > Bluetooth > Audio Devices > device name
Drop pairing with device	Highlight the device name and press the Drop key.

Features	
Switch to recognised device during call	<p>During a call press Options > Use Bluetooth to switch to a recognised headset or car kit.</p> <p>Your phone connects automatically, or shows a list of devices you can select.</p> 
Play sound files on a recognised headset	<p>While playing a sound file press Options > Use Bluetooth to switch to a recognised headset.</p> <p>Your phone connects automatically, or shows a list of devices you can select.</p> <p>Note: You cannot play some copyrighted files over a Bluetooth connection.</p> 

Features	
Move multimedia object to device	<p>Move a multimedia object to another device.</p> <p>Highlight the object, press Options > Move, select the device name.</p> <p>Caution: Moving an object deletes the original object from your phone.</p> 
Edit device properties	<p>Edit the properties of a recognised device.</p> <p>Highlight the device name, press the Edit key.</p> <p>Note: The Access setting can restrict how this device connects to your phone. You can choose Automatic (always connects), Always Ask (asks you before connecting), Just Once, or Never.</p> 
Set Bluetooth options	<p>Highlight the device name, press Options > Connection > Bluetooth > Setup</p> 

8.7 Connecting a Memory Card to your computer

For details on installing a memory card see "Memory Card" on page 14.

You can access your phone's memory card with a PC.

Note: When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

- 1 Press **Options > Connection > USB > Memory Card**. This directs the USB connection to your memory card.
- 2 Attach the Motorola Original USB cable to the accessory port on your phone and to an available USB port on your computer.

Then follow these steps:

On your computer:

- 1 Open your "My Computer" window, where your phone's memory card shows as a "Removable Disk" icon.
- 2 Click on the "Removable Disk" icon to access the files on your phone's memory card.

- 3 To store the desired files onto the memory card, drag and drop them as follows:
 music files: > mobile > audio
 screen savers: > mobile > picture
 wallpapers: > mobile > picture
 video clips: > mobile > video

- 4 When you finish, remove the device by selecting the "Safely Remove Hardware" icon in the system tray at the bottom of your computer screen. Then select "USB Mass Storage Devices" and "Stop".

- 5 Select "USB Mass Storage Device" then "OK".

On your phone:



To return to Data as your USB default connection, press

Options > Connection > USB > Data connection

9.1 Vodafone live!

Your phone has been customised to give access to Vodafone live!. Visit www.vodafone.com for additional information about the services Vodafone live! offers.

To connect to the Vodafone live! service, press the Vodafone live! key on your handset. If you have any problems connecting to Vodafone live!, please contact Vodafone.


Find the Feature Press  to connect
or
 > Vodafone live!
> Vodafone live!


You have the following options while browsing:


Option	Description
Enter URL	Go to a requested page.
Shortcuts	View a list of shortcuts you have created.
Saved Pages	View a list of pages you have saved.
History	View a list of recently viewed pages.
Browser Settings	Change Vodafone live! settings.

You can also download pictures, videos, ringtones and games from Vodafone live! and install them on your phone.

The Vodafone live! service allows you to access Web pages and Web-based applications on your phone. If necessary, please contact Vodafone to configure your phone.

Your phone will use a 3G connection when available, bringing improved quality, sound, pictures and videos, as well as increased speed when downloading games and ringtones. This connection is indicated by a  indicator.


Alternatively, your phone may use a high-speed *General Packet Radio Service* (GPRS) network connection. This type of connection is identified by a  (GPRS) indicator in the home screen that disappears when you start Vodafone live!.

If you see an  (in-call) indicator during a Vodafone live! session, your phone is using a standard voice connection. The type of network connection your phone uses depends on your service provider's network. Your network connection charges may vary depending on the type of connection used.

Note: Some features on your phone might open Vodafone live! automatically.

9.1.4 Running Vodafone live! in the Background

Note:

- The files that you download or receive as attachments might have a copyright lock that keeps you from forwarding them.
- If you receive a call during the download, press the **More Apps** key to answer the call without ending the download.
- To end a download in progress, press .

9.1.4 Running Vodafone live! in the Background

Some phones are set up to run Vodafone live! in the background when the phone registers with a network. This lets your phone display information services messages sent by your service provider (such as stock updates, news headlines, or sports scores). These types of services typically are available through subscription from your service provider.

Setting Up Vodafone live! Messages

Find the Feature  > Messaging
> Browser Messages
Options > MMS Setup > Service

Option	Description
Off	Stop all Vodafone live! messages.
Receive All	Allow all Vodafone live! messages.
Restricted	Allow only Vodafone live! messages from your service centre number.


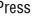 
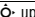 

9.2 Live Cast



This feature may not be available in all countries.

Live Cast sends news headlines to your phone. If you are interested in the item, you can click on the headline to view the full article with the browser.

If there are no new messages then the headlines are hidden. You can press the **Live Cast** key to make them appear. They automatically reappear when a new headline is received.





9.1.1 Starting Vodafone live!

Press	To
1 	start Vodafone live!
or	
Press  > Vodafone live! > Vodafone live!	
2  up or down	scroll to a shortcut, service or application
3  Select key	select the item

Shortcut: If you open a text message with a Web address (URL) embedded in it, you can press  >  to launch Vodafone live! and go directly to the URL.

  If you are unable to establish a network connection with Vodafone live!, contact your service provider.

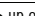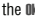9.1.2 Interacting With Web Pages

Press	To
 up or down	scroll through text, or highlight a selectable item
Select key	select the highlighted item
keypad keys, followed by the  key	enter information Tip: If you make a mistake, press  to delete the last letter, or press and hold  to clear all letters.
Back key	go back to the previous page
Options	open the Browser Menu

9.1.3 Downloading Objects From a Web Page

You can download pictures, sounds, or other objects from a Web page by selecting the link. You can store media objects on your phone, and use them as wallpaper images, screen saver images and event alerts.

Turning Live Cast On and Off

9.2.1 Turning Live Cast On and Off

Find the Feature  > Settings > Personalise
> Home Screen > Live Cast
> Turn On/Off

Note: When you turn off Live Cast you may also be asked if you want to turn off cell broadcast. If you do this, then when you reactivate Live Cast you also need to confirm that you want to turn cell broadcast back on.

9.2.2 Setting Up Live Cast

You can set up Live Cast to suit your requirements.

Setting Ticker Speed

Set the speed at which the incoming headlines scroll across your screen.

Find the Feature  > Settings > Personalise
> Home Screen > Live Cast
> Ticker Settings

Selecting Channels

Choose the channels that send you headlines.

Find the Feature  > Settings > Personalise
> Home Screen > Live Cast
> Channel Subscription


Selecting Number of Messages

 
Select how many messages are displayed on the home screen.

Find the Feature  > Settings > Personalise
> Home Screen > Live Cast
> Number of Messages

See page 1 for a basic phone diagram.

10.1 Using the Display

The home screen is displayed when you are not on a call or using the menu. You must be in the home screen to dial a phone number. To dial a number from the home screen, press the number keys and .

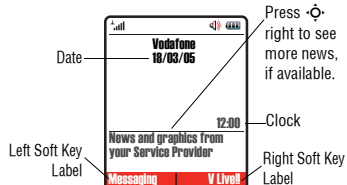


Note: Your home screen may look different from the display shown above, depending on your service provider.



Labels at the bottom corners of the display show the current soft key functions. Press the left soft key or right soft key to

 perform the function indicated by the left or right soft key label. For soft key locations see page 1.

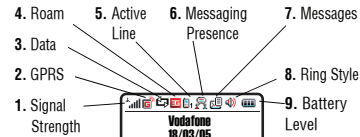

  The following status indicators can display:



1. Signal Strength Indicator

Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator or  (no transmit) indicator is displayed.

5. Active Line Indicator


Shows  to indicate an active call, or  to indicate when call diverting is on. Icons for dual-line SIM cards can include:

-  = line 1 active
-  = line 2 active
-  = line 1 active, call divert on
-  = line 2 active, call divert on

6. Messaging Presence Indicator


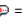 


Shows when Instant Messaging (IM) is active. Indicators can include:

-  = IM active
-  = invisible to IM
-  = busy

When a Java application is active,  can display here.


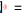 

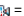 


7. Message Indicator

Displays when you receive a new message. Indicators can include:

-  = text message
-  = voicemail message
-  = voice and text message
-  = IM message

8. Ring Style Indicator

Shows the ring style setting.




-  = loud ring
-  = soft ring
-  = vibrate and ring
-  = vibrate then ring
-  = vibrate
-  = silent

9. Battery Level Indicator

Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.





2. GPRS Indicator

Shows that your phone is using a high-speed General Packet Radio Service (GPRS) network connection. GPRS allows faster data transfer speeds. Indicators can include:

-  = GPRS PDP context activate
-  = GPRS attach available
-  = GPRS packet data available

3. Data Transmission Indicator






Shows connection and data transmission status. Indicators can include:

-  = secure packet data transfer
-  = unsecure packet data transfer
-  = secure application connection
-  = unsecure application connection


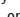 
-  = secure Circuit Switch Data (CSD) call
-  = unsecure CSD call
-  = Bluetooth® connection is active

4. Roam Indicator

Shows when your phone is seeking or using another network outside your home network. Indicators can include:


-  = 3G home
-  = 3G roam
-  = 2.5G home
-  = 2.5G roam
-  = 2G home
-  = 2G roam

 
10.2 Using the 5-Way Navigation Key

 
Use the 5-way navigation key () to scroll up, down, left, or right in the menu system. Press the centre of the key () to select a highlighted menu item.



10.3 Using Menus

From the home screen, press  to enter the main menu.

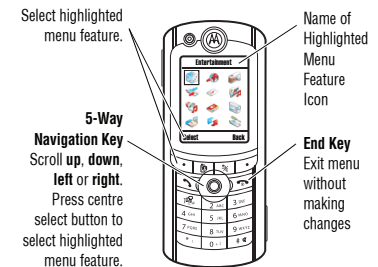

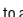Press  to scroll to and highlight a menu feature icon in the main menu. The following icons may display in the main menu, depending on your service provider and service subscription options.

Icon	Feature	Icon	Feature
	Entertainment		Digital Audio Player/ SIM Tool Kit
	Vodafone l1vel		Contacts
	Camera		Video
	Call Log		Organiser & Tools
	Messaging		Connection
	My Files		Settings

10.3.1 Selecting a Menu Feature

To select a menu feature, starting from the home screen:

 
Find the Feature > Call Log > Dialed Numbers

This example shows that from the home screen, you must press to open the menu, highlight and select Call Log, then highlight and select **Dialed Numbers**.

Press the navigation key () up, down, left or right to highlight items, and press it () to select items. Press the left/right soft keys to select the functions listed in the bottom left and right corners of the display.

10.3.2 Selecting a Feature Option

Some features require you to select an option from a list:

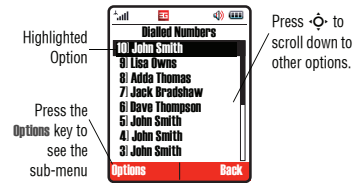

- Press to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.
- In an alphabetised list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.
- When an option has a list of possible values, press left or right to scroll through and select a value.

- When an option has a list of possible numeric values, press a number key to set the value.

10.4 Using the Handsfree Speaker

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press the **Speaker** key to turn the handsfree speaker on or off during a call.

When you turn the handsfree speaker on, your phone displays **Speakerphone On** in the home screen. The handsfree speaker remains on until you press the **Speaker** key again or turn the phone off.

Note: *The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.*

10.5 Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code or PIN2 code, if necessary. Your *Personal Identification Number* (PIN) code protects the information stored on your SIM card.

To change a code or password:

Find the Feature > Settings > Security > New Passwords

10.6 Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, but you must unlock it to answer.

You can make emergency calls on your phone even when it is locked (see page 68).

10.6.1 Locking Your Phone Manually

Find the Feature > Settings > Security > Phone Lock > Lock Now

Press	To
1 keypad keys	enter your unlock code
2 key	lock the phone

10.6.2 Unlocking Your Phone

Your phone's unlock code is originally set to 1234. Many service providers reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:

Press	To
1 keypad keys	enter your unlock code
2 key	unlock your phone

10.6.3 Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature > Settings > Security > Phone Lock > Automatic Lock > On

Press	To
1 keypad keys	enter your unlock code
2 key	activate automatic lock

10.7 If You Forget a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Many service providers reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, at the **Enter Unlock Code** prompt:

Press	To
1	display the unlock code <i>bypass</i> screen
2 keypad keys	enter your 6 digit <i>security code</i>
3 key	submit your security code

If you forget your security code, SIM card PIN code or PIN2 code, contact your service provider.

10.8 Locking and Unlocking Your Keypad



You can lock your keypad to prevent accidental key presses. To lock your keypad, hold for two seconds. To unlock it, press the **Unlock** key (right soft key) then .


Note: *Incoming calls and messages unlock the keypad.*

11.1 Storing Your Name and Phone Number

To store or edit your name and phone number information on your SIM card:

Find the Feature  > Settings > Phone Status > My Tel. Numbers

Shortcut: Press   from the home screen to view or edit your name and phone number.

Tip: If you want to see your phone number while you are on a call press  > My Tel. Numbers.

If you do not know your phone number, contact your service provider.

11.2 Setting the Time and Date

Your phone uses the time and date for the Calendar.

Find the Feature  > Settings > Initial Setup > Time and Date

To synchronise the time and date with the network, press  > Settings > Initial Setup > Time and Date > Autoupdate > On.

To manually set the time and date, turn off Autoupdate, then, press  > Settings > Initial Setup > Time and Date > time or date.

To choose an analogue or digital clock for your home screen, press  > Settings > Personalise > Home Screen > Clock.

To turn the date on or off on your home screen, press  > Settings > Personalise > Home Screen > Date.

11.3 Setting a Ring Style

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.

You can select one of five different ring styles. The ring style indicator in the display shows the current ring style (see page 54).

To set a ring style:

Find the Feature  > Settings > Ring Styles > Style: *style name*

11.6

Setting a Theme

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

You can set a photo, picture, or animation as a screen saver image. The image shrinks to fill the display, if necessary. An animation repeats for one minute, then the first frame of the animation displays.


Find the Feature  > Settings > Personalise > Screen Saver

Setting	Description
Picture	Select the picture or animation for your screen saver or None for no screen saver.
Delay	Select how long your phone must be inactive before the screen saver picture displays. Note: If this setting is longer than your Display Timeout setting, then your display will turn off before you see the screen saver.

11.6 Setting a Theme

A *theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image, and ringtone. Your phone may come with some themes, and you can download or create more.

To apply a theme, press  > My Files > Themes > *theme*.

To create a theme, press  > My Files > Themes, then press Options > Create New.



To edit a theme, press  > My Files > Themes, highlight the theme, then press Options > Edit.

Note: You cannot edit themes with (custom) after their names. The (custom) means that you changed a theme element (such as wallpaper) in another phone menu.



To delete a theme, press  > My Files > Themes, scroll to the theme, and press Options > Delete or Delete All.

Note: You can delete only the themes you created or downloaded.

Setting a Wallpaper Image

Press	To
1  up or down	scroll to the ring style
2  Select key	select the ring style

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press  > Settings > Ring Styles > *style* Details.

- If you select the Silent ring style, your phone will not use Auto Answer (see page 84).
- Java™ applications can make your phone vibrate or light up. You can turn off App Vibration and App Backlight under  > Settings > Java Settings.
- To turn off alerts for messages that arrive during a call, select  > Settings > In-Call Setup > MSG Alert > Not in Call.

11.4 Setting a Wallpaper Image

You can set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image displays as a faint watermark in text and menu displays.

Your theme can set your wallpaper, see page 62.

When you set an animation as a wallpaper image, only the first frame of the animation displays.

Find the Feature  > Settings > Personalise > Wallpaper

Setting	Description
Picture	Select the picture or animation for the background image in your home screen, or None for no wallpaper.
Layout	Select: Centre to centre the image on the display Tile to repeat the image across the display Fit-to-screen to stretch the image across the display.

11.5 Setting a Screen Saver Image

The screen saver image displays when the phone is on and no activity is detected for a specified time period.

Your theme can set your screen saver, see page 62.

Setting Display Appearance

11.7 Setting Display Appearance

To choose a phone *skin* that sets the look and feel of your phone's display.

Find the Feature  > Settings > Personalise > Skins Menu

Your theme can set your phone's skin see page 62.

To set your display brightness

Find the Feature  > Settings > Initial Setup > Brightness

You can set the amount of time that the display and keypad backlights remain on, or turn off backlights to extend battery life.

Caution: The Continuous setting can decrease battery life.

Find the Feature  > Settings > Initial Setup > Backlight

Note: To turn the backlight on or off for Java applications, press  > Settings > Java Settings > App Backlight.

You can set the display to turn itself off when no activity is detected for a specified time period.

Find the Feature  > Settings > Initial Setup > Display Timeout

11.8 Setting Answer Options

The Multi-Key option lets you answer incoming calls by pressing any key.

Find the Feature  > Settings > In-Call Setup > Answer Options > MultiKey

For basic instructions on how to make and answer calls, see page 18.

12.1 Turning Off a Call Alert

You can turn off your phone's incoming call alert before answering the call.

Press	To
either volume key	turn off the alert

12.2 Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

Note: This feature is available only for dual-line-enabled SIM cards and is operator dependent.

Find the Feature	To
> Settings > Phone Status > Active line	

The active line indicator in the display shows the currently active phone line (see page 54).

12.3 Viewing Call Log

Your phone keeps lists of the calls you recently received and dialled, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new entries are added.

Shortcut: Press from the home screen to view the **Dialled Numbers** list.

Find the Feature	To
> Call Log	

Press	To
1 up or down	scroll to Received Calls or Dialled Numbers
2	select the list
3 up or down	scroll to an entry Note: means the call connected.
4	call the entry's number Tip: Press and hold for two seconds to send the number as DTMF tones during a call.

12.6

Returning an Unanswered Call

With automatic redial, your phone automatically redials the number. When the call goes through, your phone rings or vibrates one time, displays the message **Redial Successful**, and then connects the call.

To turn automatic redial on or off:

Find the Feature	To
> Settings > Initial Setup > Auto Redial	

When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a busy signal and see **Number Busy**:

Press	To
or Retry key	activate automatic redial

Your phone automatically redials the number. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

12.6 Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays x **Missed Calls**, where x is the number of missed calls.

Press	To
1 View key	see the received calls list
2 up or down	select a call to return
3	make the call

12.7 Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's notepad memory. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature	To
> Call Log > Notepad	

Press	To
	call the number

Redialling a Number

Press	To
or 	make a video call to the entry's number
or 	view entry details
or Options	open the Last Calls Menu to perform various operations on the entry

The **Last Calls Menu** can include the following options:

Option	Description
Store	Create a contact entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide Caller ID/Show Caller ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.

Option	Description
Add Digits	Add digits after the number.
Attach Number	Attach a number from the Contacts or Call Log lists.
Send Tones	Send the number to the network as DTMF tones. This option displays only during a call.

12.4 Redialling a Number

Press	To
1	view the dialled numbers list
2 up or down	scroll to the entry you want to call
3	redial the number

12.5 Using Automatic Redial

When you receive a busy signal, your phone displays **Number Busy**.

Putting a Call On Hold or Mute

Press	To
or Options	open the Waiting Menu to attach a number or insert a special character

12.8 Putting a Call On Hold or Mute

Press	To
Options > Hold	put all active calls on hold

Press	To
Mute key (if available) or Options > Mute	put all active calls on mute

12.9 Using Call Waiting

When you are on a call or downloading a file, an alert tone sounds to indicate that you have received a second call.

Press	To
1	answer the new call
2 Switch key	switch between calls
or Link key	connect the 2 calls
or Options > End Call on Hold	end the call on hold

You must turn on call waiting to use the feature. To turn call waiting on or off:

Find the Feature	To
> Settings > In-Call Setup > Call Waiting	

12.10 Using Caller ID

12.10.1 Incoming Calls

Calling line identification (Caller ID) displays the phone number for incoming calls.

The phone displays the caller's name (and picture, if available) if the name is stored in your contacts, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive **Ringer ID** for specific entries stored in your contacts. For more information, see page 78.

12.10.2 Outgoing Calls

You can show or hide your phone number as an ID for the calls that you make.


While dialling (with digits visible in the display), press **Options > Hide Caller ID/Show Caller ID**.

12.11 Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 999, that you can call under any

circumstances, even when your phone is locked or the SIM card is not inserted. Your service provider can program additional emergency numbers into your SIM card. *However, your SIM card must be inserted in your phone in order to use the numbers stored on it.* See your service provider for additional information on this issue.

Note: *Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.*

Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number

12.12 Dialling International Numbers

Press and hold **[0]** to insert the local international access code (+) from which you are calling. Then press the keypad keys to enter the country code and number.

12.13 Using Voicemail

Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.


Note: *Your service provider may include additional information about using this feature.*

12.13.1 Listening to Voicemail Messages

Find the Feature  > **Messaging > Call Voicemail**

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number, see page 69. If you don't know your voicemail number, contact your service provider.

12.13.2 Receiving a Voicemail Message

When you receive a voicemail message, your phone displays  (voicemail message indicator) and **New Voicemail**.

Note: *The icon may vary depending on your service provider.*


Press	To
Call key	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

12.13.3 Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature  > **Messaging**

Press	To
1 keypad keys	enter your voicemail number
2 	store the number

You cannot store a **P** (pause), **W** (wait), or **#** (number) character in this number. If you want to store a voicemail number with these characters, create a contact entry for it. Then, you can use the entry to call your voicemail. To store these characters in a number, see page 77.

13.1 Navigation Guide

Main Menu

- Entertainment**
 - More Games
 - Game 1
 - Game 2
 - Game 3
 - Digital Audio Player *
 - [Install New]
- Vodafone Live!**
 - Vodafone live!
 - Enter URL
 - Shortcuts
 - Saved Pages
 - History
 - Browser Settings
 - What's New
 - Entertainment
 - Ring Tones
 - Pictures
 - Entertainment
 - Sports
- Camera**
- Call Log**
 - Received Calls
 - Dialed Numbers
 - Notepad
 - Call Timers
 - Call Cost
- Messaging**
 - Create Message
 - Call Voicemail
 - Inbox
 - Email Inbox
 - Browser Messages
 - Info Services
 - Outbox
 - Drafts
 - Templates
 - Vodafone Messenger
 - Vodafone Mail

This is the standard main menu layout. Menu organisation and feature names may vary on your phone. Not all features may be available on your phone.

- My Files**
 - Pictures
 - Sounds
 - Videos
 - Themes
 - Entertainment
- Digital Audio Player/SIM Tool Kit ***
- Contacts**
- Video**
- Organiser & Tools**
 - SIM Toolkit
 - Alarms
 - Calendar
 - Calculator
 - Activation List
 - Dialling services
- Connection**
 - Bluetooth
 - USB
 - Sync
- Settings**
(see next page)

* optional features

Settings Menu

- Personalise**
 - Home Screen
 - Main Menu
 - Voice Dial setup
 - Greeting
 - Wallpaper
 - Screen Saver
 - Skins Menu
 - Quick Dial
- Ring Styles**
 - Style
 - Style Details
- Diverts**
 - Voice Calls
 - Video Calls
 - Cancel all
 - Diverts Status
- In-Call Setup**
 - In-Call Timer
 - Call Cost Setup
 - My Caller ID
 - Answer Options
 - Call Waiting
 - MSG Alert
- Initial Setup**
 - Time and Date
 - Auto Redial
 - Display Timeout
 - Backlight
 - Scroll
 - Language
 - Battery save
 - Brightness
 - DTMF
 - Master Reset
 - Master Clear
- Phone Status**
 - My Tel. Numbers
 - Battery Meter
 - Storage Devices
 - Software Update
 - Other Information
- Headset**
 - Auto Answer
 - Ringer Options
 - Voice Dial
- Car Settings**
 - Auto Answer
 - Auto Handfree
 - Power-off Delay
 - Charger Time
- Flight Mode**
 - Flight Mode
 - Prompt At Startup
- Network**
 - New Network
 - Network Setup
 - Available Networks
 - My Network List
 - Service Tone
 - Call Drop Tone
- Security**
 - Phone Lock
 - Lock Keypad
 - Lock Application
 - Fixed Dial
 - Call Barring
 - SIM PIN
 - New Passwords
- Java Settings**
 - Java System
 - Delete All Apps
 - App Vibration
 - App Volume
 - App Priority
 - App Backlight
 - Set Standby App

13.2

Feature Quick Reference

13.2 Feature Quick Reference

Please note that not all features may be available.

13.2.1 Calling Features

Feature	Description
Conference Call	During a call: > Hold, dial next number, press > press the Link key
Call Transferring	During a call: Options > Transfer, dial transfer number, press
Call Diverting	Set up or cancel call diverting: > Settings > Diverts
Call Barring	Restrict outgoing or incoming calls: > Settings > Security > Call Barring
Attaching a phone number	Dial an area code or a prefix for a contacts number then: Options > Attach Number

13.2.2 Messaging

Feature	Description
Send Text Message	Send a text message: > Messaging > Create Message > New Text Message
Send Voice Message	While you are creating a message select: Options > Insert > Voice Record To record the voice message, press the Record key, speak, then press the Stop key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers to receive the message.
Use a Postcard	Send a postcard: > Messaging > Create Message > I've! Postcard



Messaging

13.2.2

Feature	Description
Read and Manage Messages	> Messaging > Inbox Icons next to each message indicate if it is read or unread . Icons can also indicate if the message is locked , urgent , low priority or has an attachment .
Send Quick Note Text Message	Send a quick note: > Messaging > Templates > Text Templates Scroll to a note and press the Send key.
Send Multimedia Message (MMS)	Send a multimedia message: > Messaging > Create Message > New Multimedia Msg

Feature	Description
Use MMS Template	Open an MMS template with preloaded media: > Messaging > Templates > Multimedia Templates Tip: To rename a template you created, highlight it in this list and press Options > Rename.
Create MMS Template	Save an MMS message to use as a template: While editing a message, press Options > Save as Template. Tip: To download templates or other objects from a Web page, see page 88.
Insert Pictures and Other Objects	While editing a message: Options > Insert Note: Some files might have a copyright lock that keeps you from forwarding them.

Feature	Description
View Sent Messages	•> Messaging > Outbox
Read Message	Read a new text or multimedia message that you have received: Press •.
Reply to Message	While reading a message: Options > Reply Tip: To change the message type for your replies to MMS messages: •> Messaging Options > Inbox Setup > MMS Message Setup > Composing MMS > Reply Type
Store Message Objects	Go to a multimedia message slide, or highlight an object in a message, then: Options > Store

Feature	Description
Set Up Text Message Inbox	Set up or edit the text message inbox settings: •> Messaging Options > Inbox Setup > Text Message Setup
Browser Messages	Read messages received by your micro-browser: •> Messaging > Browser Messages 
Info Services	Read subscription-based information services messages: •> Messaging > Info Services 

Feature	Description
Print Message Over Bluetooth® Connection	You can use a Bluetooth wireless connection to send a message from your phone to a printer. •> Messaging > Inbox, Email Inbox, Browser Messages, or Info Services Highlight the message you want to print and press Options > Print. Note: You cannot print Quick Notes or Postcard. For more about Bluetooth connections, see page 43.

13.2.3 Instant Messaging

Feature	Description
Log In	•> Messaging > Vodafone Messenger > Log In

Feature	Description
Add Contacts	After you log in: Press Options > Add Contact and enter the contact's IM ID and nickname.
Find Others Online	After you log in: Select Online Contacts to see a list of others online.
Start Conversation	Highlight a name in Online Contacts and press the Send Im key.
Open Active Conversation	Highlight a name in Conversations and press the View key.
End Conversation	From the conversation view: Options > End Conversation
Log Out	Select Log Out from the IM Online Menu.
Create or Change IM Accounts	•> Messenger, then press Options > IM Account Select an IM account or select New to create a new IM account.

13.2.4 Email

Feature	Description
Send Email Message	Send an email message: •> Messaging Options > New Email
Read Email Message	Read a new email message that you have received: Press •.
Read Old Email	•> Messaging > Email Inbox Press Options to perform various operations on a message.
Set Up Email Inbox	Set up or edit the email inbox settings: •> Messaging Options > Setup > Email Msg Setup

13.2.5 Contacts

Feature	Description
Create Entry	Create a new contact entry: •> Contacts > (New Entry) or Options > Create New > Phone Contact, SIM Contact, Mailing List or Email List Shortcut: Enter a phone number in the home screen then press the Store key to create an entry for that number. Tip: Some of your contacts may have more than one phone number, email address or URL. When creating a contact entry select Add More to store additional items for the same name. To enter a Ringtone ID, Picture or Birthday press Customise. Note: If you enter a Birthday, the Zodiac sign is entered. You can't manually enter the Zodiac sign.

Feature	Description
View All Entry Details	View all the phone numbers, email addresses or URLs associated with a contact. •> Contacts, highlight the contact entry, press • left and right to view the other details.
Dial Entry	Call a number stored in the contacts: •> Contacts, highlight the contact entry, press • to call Shortcut: In the contacts, enter the first letters of an entry name to jump to the entry. You can also press [X] and [Z] to see the entries that you use frequently or entries in other categories.
Voice Dial Entry	To Voice dial a number stored in the contacts: From idle, press and hold • then say the command when prompted.

Feature	Description
Edit Entry	Edit an entry stored in the contacts: •> Contacts, highlight the contact entry, then press •> Options > Edit.
Store a PIN Code in a Number	While entering the number: Options > Insert Pause waits for the call to connect, then sends the remaining digit(s). If your network does not recognise the first pause character, try two (##). Wait waits for the call to connect, then prompts you for confirmation before it sends the remaining digit(s). 'n' prompts you for a number before dialling the call. The number you enter is inserted into the dialling sequence in place of the # character.

Feature	Description
Set Ringer ID for Entry	Assign a distinctive ringer alert to a contact entry: • > Contacts > entry Options > Edit > Customise > Ringer ID > ringer name Note: The Ringer ID option is not available for entries stored on the SIM card. Activate ringer IDs: • > Settings > Ring Styles > style Details > Ringer IDs
Set Picture ID for Entry	Assign a photo or picture to show when you receive a call from an entry: • > Contacts > entry Options > Edit > Customise > Picture > picture name Note: The Picture option is not available for entries stored on the SIM card.

Feature	Description
Set Picture ID View	Show entries as a text list, or with picture caller ID photos: • > Contacts Options > Setup > View by > view name
Set Category for Entry	Set the category for a contact entry: • > Contacts > entry Options > Edit > Category > category name Note: The Category option is not available for entries stored on the SIM card.

Feature	Description
Set Category View	Set a contacts category view: • > Contacts Options > Filter by > Category > category view You can show entries in a predefined category, or entries in a category you create. Shortcut: To see other categories in Contacts, press [X] or [Z].
Create Category	Create a new category: • > Contacts Options > Manage Contacts > Edit Phone Categories > (New Category)

Feature	Description
Set Category Ringer ID	Set a distinctive ring for calls from contact entries in a specific category: • > Contacts Options > Manage Contacts > Edit Phone Categories. Scroll to entry, press • Options > Edit Category > Ringer ID
Create Group Mailing List	You can put several Contacts entries in a group mailing list, then send a message to the list. To create a list: • > Contacts Options > Create New > Mailing List Note: You can have up to 25 names in a mailing list. You can select the list name as an address for multimedia messages. Note: A Mailing List cannot include entries stored on the SIM card.

Feature	Description
Sort Contacts List	Set the order in which contact entries are listed: • > Contacts Options > Setup > Sort by > sort order You can sort the contacts list by First Name or Last Name.
Copy Contacts Entry	Copy an entry from the phone to the SIM card, or from the SIM card to the phone. • > Contacts, highlight the entry, press Options > Copy to SIM Card or Copy to Phone.
Copy Multiple Entries	Copy multiple contact entries between the phone and the SIM card. • > Contacts, highlight one entry, press Options > Select Multiple to then select Copy Phone to SIM or Copy SIM to Phone.

Feature	Description
Send Contact Entry to Another Device	Send a contact entry to another phone, computer, or device: • > Contacts, highlight the entry, press Options > Send vCard
Print Contacts Entry Over Bluetooth® Connection	You can use a Bluetooth® wireless connection to send a contact entry from your phone to a printer • > Contacts Highlight the entry that you want to print, and press Options > Print. Note: You can't print a Mailing List. For more about Bluetooth connections, see page 43.

13.2.6 Personalising Features

Feature	Description
Language	Set menu language: • > Settings > Initial Setup > Language

Feature	Description
Scroll	Set the highlight bar to stop or wraparound in lists: • > Settings > Initial Setup > Scroll
Ring Style	Change the ring alert for an event: • > Settings > Ring Styles > style Details > event name
Activate Ringer IDs	Activate distinctive ring alerts assigned to contact entries and categories: • > Settings > Ring Styles > style Details > Ringer IDs
Reminders	Set reminder alerts for messages that you receive: • > Settings > Ring Styles > style Details > Reminders

Feature	Description
Headlines	If your home screen shows rolling headlines from your service provider you can turn them off: • > Settings > Personalise > Home Screen > Live Cast > Turn Off Headlines In the Live Cast menu, you can also add or change headline channels.
Menu View	Display the main menu as graphic icons or as a text-based list: • > Settings > Personalise > Main Menu > View
Menu Order	Reorder your phone's main menu: • > Settings > Personalise > Main Menu > Reorder
Show/hide menu icons	Show or hide menu feature icons on the home screen: • > Settings > Personalise > Home Screen > Home Keys > Icons

Feature	Description
Change Home Screen Nav Key Shortcuts	Change the features for the soft keys and navigation key in the home screen: • > Settings > Personalise > Home Screen > Home Keys
Master Reset	Reset all options except unlock code, security code, and lifetime timer: • > Settings > Initial Setup > Master Reset

Feature	Description
Master Clear	Erase all downloaded files and clear all settings and entries you made except SIM card information, unlock code, security code, and lifetime timer: • > Settings > Initial Setup > Master Clear Caution: Master clear erases all information you have entered (including contacts and calendar entries) and content you have downloaded (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

Feature	Description
Software Update	Your service provider can update your phone software by sending software updates directly to your phone over the air. When you receive a software update notice, you can choose to defer installation. To install the software update at a later time: • > Settings > Phone Status > Software Update > Install Now

13.2.7 Dialling Features

Feature	Description
DTMF Tones	Activate DTMF tones: • > Settings > Initial Setup > DTMF To send DTMF tones during a call, just press the number keys. To send stored numbers as DTMF tones during a call: Highlight a number in the Contacts or Call Log lists, then press • > Send Tones .

13.2.8 Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing •. This time includes busy signals and ringing.




The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.



Feature	Description
Call Timer	View call timers: • > Call Log > Call Timers
In-Call Timer	Display time or cost information during a call: • > Settings > In-Call Setup > In-Call Timer
Call Cost	View call cost trackers: • > Call Log > Call Cost

13.2.9 Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.


Feature	Description
Speakerphone	Activate the speakerphone during a call: Press the Speaker key (if available) or Options > Speakerphone On


Feature	Description
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset: • > Settings > Car Settings or Headset > Auto Answer Note: Your phone will not automatically answer calls if the ring style is set to Silent . 
Voice Dial (headset)	Enable voice dial with headset send/end key: • > Settings > Headset > Voice Dial 
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected: • > Settings > Car Settings > Auto Handsfree 

Feature	Description
Power-off Delay (car kit)	Set the phone to stay on for a specified time after the ignition is switched off: • > Settings > Car Settings > Power-off Delay 
Charger Time (car kit)	Charge the phone for a specified time after the ignition is switched off: • > Settings > Car Settings > Charger Time 

13.2.10 Data Calls

To connect a device to your phone with a USB cable see page 43.

Feature	Description
Send Data	Connect your phone to a device, then place a call through the device application. 

Feature	Description
Receive Data	Connect your phone to a device, then answer a call through the device application. 
Using Sync	You can call an Internet server and synchronise your contacts and calendar entries with the server. To set up an Internet sync partner, press: • > Connection > Sync > (New Entry). Enter the server details, including Server URL (you can omit http:// and Data Paths (the folder below the URL where your data is stored)). To synchronise files with a partner you set up, select the partner from the list in • > Connection > Sync > Sync.



13.2.11 Network Features

Feature	Description
Network Settings	View network information and adjust network settings: •> Settings > Network

13.2.12 Personal Organiser Features

Feature	Description
Create Calendar Event	Create a new calendar event: •> Organiser & Tools > Calendar, highlight the day, press •, press Options > Now!
View Calendar Event	View or edit event details: •> Organiser & Tools > Calendar, highlight the day, press •, scroll to the event, and press Options > View .

Feature	Description
Send Calendar Event	Send an event in a Multimedia Message: While viewing an event, press Options > Send > Multimedia Message .
Copy Calendar Event to Another Device	Copy a calendar event to another phone, computer, or device: •> Organiser & Tools > Calendar, highlight the day, press •, highlight the event, press Options > Send > Bluetooth .

Feature	Description
Print Calendar Month, Week or Day Over Bluetooth® Connection	You can use a Bluetooth® wireless connection to send a calendar month, week or day from your phone to a printer. •> Organiser & Tools > Calendar Go to the month, week or day view and press Options > Print . For more about Bluetooth connections see page 43. 
Set Alarm	Set an alarm: •> Organiser & Tools > Alarms
Turn Off Alarm	Turn off alarm: Press the Disable key or  . Set 8-minute delay: Press the Snooze key.
Calculator	Calculate numbers: •> Organiser & Tools > Calculator

Feature	Description
Currency Converter	Convert currency: •> Organiser & Tools > Calculator Options > Exchange Rate Enter exchange rate, press the OK key, enter amount, press Options > Convert Currency .

13.2.13 Security


Feature	Description
SIM PIN	Lock or unlock the SIM card: •> Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code three times in a row, your SIM card is disabled and your phone displays SIM Blocked .
Lock Application	Lock phone applications: •> Settings > Security > Lock Application

13.2.14 News and Entertainment

Note: The files that you download or receive as attachments might have a copyright lock that keeps you from forwarding them.

You can download for instance pictures, videos, ringtones and games from Vodafone live!

For basic information on the camera see page 28.

Feature	Description
Launch Vodafone live!	Start a Vodafone live! session:  or •> Vodafone live! > Vodafone live! Note: Your phone reads your micro-browser settings from the current USIM card. When you remove the USIM card, your phone clears the browser cache. To edit your settings, see page 88.

Feature	Description
Edit Micro-Browser Settings	You can edit the protocol, host, port and other information for your micro-browser connection: •> Messaging Options > Data connection
Web Sessions	Select or create a Web session: •> Vodafone live! > Internet Profiles
Download Objects from Web Page	Download a picture, sound, or other file from a Web page: Highlight the file, press the Select key, then the Store key.
Download Game or Application (Browser)	Download a Java™ game or application with the browser: •> Vodafone live!, highlight the application, press the Select key, then the Download key

Feature	Description
Launch Game or Application	Launch a Java™ game or application: •> Entertainment, highlight the application, press the Select key Note: To install and run games stored on your memory card, press •> Entertainment > Install New! .
Change Game or Application Settings	Change the volume, priority, or other settings for Java™ games or applications: •> Settings > Java Settings

Feature	Description
Flight Mode	You can switch your phone to flight mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an aeroplane, without interfering with aeroplane communications. •> Settings > Flight Mode > On You can make the flight mode option appear whenever you turn on your phone: •> Settings > Flight Mode > Prompt At Startup > On
Manage Pictures	Manage photos, pictures, wallpaper backgrounds and animations: •> My Files > Pictures
Manage Ringtones and Music	Manage ringtones and music that you have downloaded: •> My Files > Sounds

Feature	Description
Manage Video Clips	Manage video clips: •> My Files > Videos
Photo and Video Camera Settings	Adjust light level and other settings for the integrated camera: •> Camera then press Options > Pictures Menu > Pictures Setup or •> Video, then press Options > Videos Menu > Videos Setup <i>Note: The photo and video cameras use the same settings.</i>

THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 1.04 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide**. In this case, the highest tested SAR value is 0.72 W/kg*.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organisation has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body.

Additional information can be found on the websites of the World Health Organisation (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

* The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

** Please see the Safety and General Information section about body worn operation.

A

accessories 13
 active line indicator 54
 active line, changing 64
 add contact, IM 75
 alarms 87
 alert
 setting 18, 60, 81
 turning off 18, 64
 animation
 downloading 49, 88
 managing 30, 89
 screen saver 31, 61
 wallpaper 31, 61
 answering a call 18, 63
 application, locking and unlocking 87
 audio player 40, 41
 automatic redial 65

B

backlight 63
 barring calls 72

92 **Index****battery**

charging 17
 extending battery life 15, 63
 installing 16
 level indicator 54

battery charger 17**Bluetooth®**

connection 43
 pairing 44
 setting options 46
 turning on and off 43
 brightness, setting 63
 browser 88
 browser setup 88
 Java applications 88, 89
 Web sessions 88

C

calculator 87
 calendar 86
 call
 alert, turning off 18, 64
 answer options 63

answering 18
 barring 72
 barring password, changing 57
 call waiting 67
 costs 84
 dialled numbers list 64
 dialling 18
 diverting 72
 emergency number 68
 ending 18
 handsfree speaker 57
 holding 67
 international access code 68
 making 18
 muting 67
 received calls list 64
 receiving 18
 ring style 18, 60, 81
 speakerphone 84
 timers 84
 transferring 72
 unanswered call 66
Call Failed, Number Busy message 65
 call log 64

call waiting 67
 caller ID 31, 68
 calling line identification. *See* caller ID
 camera
 settings 90
 taking a photo 28
 car kit
 auto handsfree 84
 charger time 85
 power-off delay 85
 category
 contact entry 78
 create 79
 ring ID 79
 view 79
 centre select button 55
 change account, IM 75
 character chart 23
 clock, setting 60
 codes
 changing 57
 default 57, 58
 forgetting 58

computer
 connecting to phone 42
 conference call 72
 contacts
 attaching 2 numbers 72
 category for entry 78
 category ring ID 79
 category view 79
 copying entries 80
 copying multiple entries 80
 create category 79
 creating mailing lists 79
 dialling a number 77
 editing an entry 77
 picture ID 31, 68, 78
 picture ID view 78
 printing entry 80
 ringer ID 78, 81
 sending entry to another device 80
 sorting entries 80
 storing an entry 76
 voice dialling 77
 conversations, IM 75
 copying objects to another device 44

create new account, IM 75
 currency converter 87
 customising the menu 81

D

data call 85
 connecting to external device 42
 date, setting 60
 dialled numbers list 64
 dialling a number 18
 digital audio 41
 display
 backlight 63
 brightness 63
 description 52
 home screen 52
 personalising 82
 timeout 63
 display appearance
 phone skin 63
 setting 63
 distinctive ringer alert 81
 diverting calls 72

Index 93

downloading
 animation 49
 media files 39
 music 49
 photo 49
 picture 30, 49
 ringtone 49
 sound 49
 video clip 34, 49
 wallpaper 49
 DTMF tones
 activating 83
 sending 83

E

earpiece volume 18
 email 76
 inbox setup 76
 emergency number 68
 end conversation, IM 75
 end key 1
 ending a call 18
 ending a video call 36

94 **Index**

Enter Unlock Code message 58
 external device
 connecting to phone 42
 external memory 15

F

5-way navigation key 1, 55
 flight mode 89
 full screen picture 30, 39

G

games 88, 89
 GPRS indicator 48, 53

H

handsfree speaker 57
 headlines, turning on and off 81
 holding a call 67
 home keys, personalising 82
 home screen, defined 52

I

IM 75
 add contact 75
 change account 75
 create account 75
 end conversation 75
 find others online 75
 logout 75
 message indicator 54
 open active conversation 75
 start conversation 75
 in-call timer 84
 incoming call
 answering 18
 diverting 72
Incoming Call message 68
 indicators
 active line 54
 battery level 54
 GPRS 48, 53
 IM message 54
 message 54
 messaging presence 54

ring style 54
 roam 53
 signal strength 52
 text case 21
 text entry mode 21
 transmission 53
 voicemail message 54, 69
 info services 74
 instant messaging 75
 add contact 75
 change account 75
 create account 75
 end conversation 75
 find others online 75
 logout 75
 open active conversation 75
 start conversation 75
 international access code 68
 iTunes software 23

J

Java applications 88, 89

K

key
 centre select button 55
 end 1
 5-way navigation 1, 55
 left soft key 1, 52, 82
 power 1
 right soft key 1, 52, 82
 send 1
 volume control 1, 18
 keypad
 locking 59
 unlocking 59

L

language 80
 left soft key
 functions 1, 52
 personalising 82
 line, changing 64
 Live Cast
 channels 51, 81
 number of messages 51

setting up 51
 ticker speed 51
 turning off headlines 81
 turning on and off 51
 lock
 application 87
 keypad 59
 phone 57
 SIM card 87
 logout, IM 75
Low Battery message 54

M

making a call 18
 making a video call 36
 master clear 82
 master reset 82
 media files
 downloading 39
 playing 39
 sending 39
 viewing 39

Index 95

- memory card
 - connecting to computer 47
 - free space 14
 - installing 13
- memory, external 15
- menu
 - entering text 19
 - icons, changing in home screen 82
 - icons, converting to text 81
 - language 80
 - personalising 81
 - rearranging features 81
 - using 55
 - view, changing 81
- message
 - browser 74
 - creating MMS template 73
 - inbox 73
 - info services 74
 - inserting objects 73
 - MMS template 73
 - multimedia message 73
 - outbox 74
 - printing 75
- quick note 73
 - reading 74
 - replying 74
 - storing objects 74
 - text 72, 74
 - text inbox 74
 - voice 72
- message indicator 54
- messaging presence indicator 54
- Missed Calls message 66
- MMS template 73
 - creating 73
- MP3 sound files 41, 42
- multimedia message
 - sending 73
- music
 - managing 89
- muting a call 67
- my telephone number 19, 60

N

- network settings 86
- notepad 66

- number
 - storing your number 60
 - viewing your number 19
- numbers, entering 25

O

- online contacts, IM 75
- optional accessory, defined 13
- optional feature, defined 13

P

- passwords. *See* codes
- phone
 - active line indicator 54
 - active line, changing 64
 - alert, turning off 18, 64
 - answer options 63
 - clear stored information 82
 - codes 57
 - connecting to external device 42
 - date, setting 60
 - locking 57
 - network settings 86

- S**
- screen saver 31, 61
- scrolling 81
- security code
 - changing 57
 - default 57
- send key 1
- sending media files 39
- signal strength indicator 52
- silent alert, setting 18, 60, 81
- SIM Blockad message 17, 87
- SIM card
 - defined 13
 - installing 13
 - locking 87
 - PIN code entry 17
 - PIN code, changing 57
 - PIN2 code, changing 57
 - precautions 13
 - SIM Blockad message 17, 87
- SIM PIN code
 - changing 57
 - entering 87
- SIM PIN2 code, changing 57
- soft keys
 - functions 52
 - illustration 1
 - personalising 82
- software update 83
- sound
 - downloading 49, 88
 - managing 89
- speaker volume 18
- speakerphone
 - activating 84
 - automatic answer 84
- Spkrphone On message 57
- standby time, increasing 63
- symbols, entering 25
- synchronising with Internet server 85

T

- tap text entry 21
- telephone number
 - storing your number 60
 - viewing your number 19

- text
 - capitalisation, changing 20
 - character chart 23
 - entering 19
 - entry mode, setup 20
 - iTAP software predictive text entry 23
 - numeric mode 25
 - symbol mode 25
 - tap 21
- text case indicator 21
- text entry mode
 - setup 20
- text entry mode indicator 21
- theme
 - creating 62
 - deleting 62
 - editing 62
 - setting 62
- ticker speed 51
- time, setting 60
- timer, in-call 84
- timers 84
- transferring a call 72

- reset all options 82
- ring style 18, 60, 81
- security code 57
- time, setting 60
- turning on/off 17
- unlock code 57
- unlocking 17, 57
- phone number
 - active line indicator 54
 - active line, changing 64
 - attaching 2 numbers 72
 - international access code 68
 - redialling 65
 - storing in contacts 76
 - storing your number 60
 - viewing your number 19
- phone skin 63
- phone theme 62
- photo
 - downloading 49, 88
 - managing 30
 - picture ID 31, 68
 - screen saver 31
 - sending 28
- taking 28
- wallpaper 31
- picture
 - downloading 30, 49, 88
 - full screen view 30, 39
 - managing 30, 89
 - screen saver 31, 61
 - wallpaper 31, 61
- picture ID 31, 68
 - setting 78
 - view 78
- PIN code
 - changing 57
 - entering 87
 - PIN2 code, changing 57
 - playing media files 39
 - postcard 72
 - sending 31
 - power key 1
 - predictive text entry 23
 - printing
 - calendar entries 87
 - contacts entry 80
 - message 75
- objects 45
- picture 28

R

- received calls list 64
- receiving news headlines 50
- redial
 - automatic redial 65
 - busy number 65
- right soft key
 - functions 1, 52
 - personalising 82
- ring style indicators 54
- ring style, setting 18, 60, 81
- ringer ID
 - setting 78
 - turning on/off 81
- ringer volume, setting 18
- ringtone
 - downloading 49, 88
 - managing 89
- roam indicator 53

- TransFlash 15
- transmission indicator 53
- U**
- Universal IC Card 13
- unlock
 - application 87
 - keypad 59
 - phone 57
- unlock code
 - bypassing 58
 - changing 57
 - default 57, 58
 - entering 17
- USB cable 43
- USIM 13
- V**
- vibrate alert
 - setting 18, 60, 81
 - turning off 18, 64
- video call
 - ending 36
 - making 36
 - swapping views 36
- video camera, settings 90
- video clip
 - downloading 34, 49
 - managing 35, 90
 - recording 33
 - viewing 35
- viewing media files 39
- Vodafone live!
 - animation 49
 - background sessions 50
 - picture 49
 - ringtone 49
 - using 48, 88
- voice dial 77, 84
- voice message 72
- voicemail 69
- voicemail message indicator 54, 69
- volume
 - earpiece 18
 - games 89
 - ringer 18
 - speaker 18
- volume keys 1, 18
- W**
- wallpaper 31, 61
 - managing 89
- Web pages 48, 88
- Web sessions 88