



CS-882 OEM

ALARM UPGRADE FOR FACTORY REMOTE KEYLESS ENTRY SYSTEM

INSTALLATION PRECAUTIONS & WARNINGS

NOTE: This system does not improve or affect the range of the factory remote keyless entry transmitters. This is an **ADD-ON** system only. The arm/disarm range of this system will be identical to that of the Factory Keyless' Lock/Unlock range.

BEFORE BEGINNING, check all vehicle manufacturer cautions and warnings regarding electrical service (AIR BAGS, ABS BRAKES, AND BATTERY).

DO NOT ROUTE ANY WIRING THAT MAY BECOME ENTANGLED with brake, and gas pedals, steering column, or any other moving parts in the vehicle.

SUGGESTED COMPONENT MOUNTING

CONTROL MODULE: Underdash Mounting: If you are locating the control unit underdash, conceal module away from any intruders. **DO NOT Mount the control unit or wiring harness where they can become entangled with moving parts such as brake/gas/clutch pedals, or the steering column.**

LED: Mount the red LED in a visible location on the dashboard or console.

Shock Sensor: Mount the included shock sensor with wire ties to an under dash wire harness or fasten to a panel.

Disarm/Program Button: Mount the **Override/Program** push-button in a hidden location easily accessible to the user in case the system must be disarmed without the use of the transmitter. This switch is also used to program certain features.

SIREN (Not included): If you use a siren with your system, we recommend mounting it under the hood to an inner fender-well or other body surface with the open end facing downward. Be sure the WHITE/RED wire is programmed for siren output. See programming option #5.

TECH SUPPORT
Mon-Fri 8:00 AM-4:30 PM Pacific Time
(800) 998-6880

OPERATION

ARMING

To arm the alarm and lock the doors, press the Lock button of your Factory Keyless Remote Control. The 882 OEM system will sense the Door Lock signal and Arm. The lights will flash once, the vehicle horn or siren will chirp once. After 3 seconds, the LED indicator will begin flashing slowly and Immobilizer circuits become active. This system is now armed and ready to protect the vehicle.

ALARM TRIGGERING:

If there is an intrusion into the vehicle or hard impact to the body the alarm will sound which consists of flashing lights and siren or pulsing car horn for 30 seconds. After the 30 second alarm cycle duration the system will stop, but is still armed. LED will begin flashing rapidly indicating the alarm has been triggered.

DISARMING:

To disarm the CS-882 OEM, press the Unlock button of your Factory Keyless Remote. The CS-882 OEM system will sense the Door Unlock signal and Disarm. The lights will flash twice and the vehicle horn or siren will chirp twice. The LED will stop flashing. If the system was tripped in your absence, then the siren or horn will chirp 4 times and the lights will flash 4 times. If you hear 4 chirps/flashes, we recommend inspecting your vehicle for a theft attempt or damage.

OPERATION

PASSIVE ARMING MODE (Programmable Option)

When programmed for Passive (Automatic Last Door Arming) the CS-882 will arm itself 30 Seconds after the ignition is turned off and the last door has been closed. If a door is reopened, the system will wait for the door to close before arming.

DUAL-STAGE SHOCK PROTECTION

If a low-level shock to the vehicle body is detected, the pre-warning sensor activates sounding 1 siren/horn chirp and one light flash. If a hard impact to the vehicle occurs, the system will trigger for 30 seconds. Adjust the shock sensor as needed by turning the control knob clockwise to increase sensitivity and counter-clockwise to decrease sensitivity.

EMERGENCY OVERRIDE/DISARM

If the CS-882 system is armed and you have lost your Factory Keyless Remote or it stops working, you will have to perform an emergency override. Enter your vehicle manually with the key, (this will trip the alarm) turn the Ignition ON, and press override/program button 5 times within 8 seconds to disarm the system. The system will chirp/flash 4 times when disarmed.

PANIC MODE (Programmable Option)

To activate your system during an emergency situation or to attract attention to your vehicle, press the Lock button on your remote 3 times within 5 seconds. This will activate a 30-second alarm trigger. Press any button on your remote to disarm.

VALET MODE

To disable alarm functions of the 882 system, turn the Ignition ON and press the override/program button 3 times within 8 seconds. After 8 seconds, the dash LED turns on solid as an indicator that the system is in valet mode. Repeat this steps to exit VALET mode. The LED will go out, system will chirp (2) times and the light will flash (2) times when exiting valet mode.

When in VALET mode the siren will still chirp for lock/unlock confirmation even though alarm functions are disabled. The CS-882 system will chirp 2 times and flash the lights twice when locking the doors. The system will chirp 3 times and flash 3 times when unlocking the doors.

OPEN DOOR WARNING (Programmable Option)

If a door is open when the Ignition is on the 882 system will flash the parking lights for up to 1 minute or until the door is closed as a "Door open" safety feature.

FACTORY TRUNK RELEASE SENSING


If the CS-882 system is installed in a vehicle with trunk pop or hatch release button on the Factory Remote, there is a special input wire that will prevent the system from triggering if the trunk button on your remote is pressed while the system is armed.

INSTALLATION – ARM/DISARM MODES (SWITCH SETTINGS)

ARM/DISARM VALIDATION WITH NEGATIVE SIGNALS:

ARMING: To Arm the CS-882 OEM the system MUST sense a Negative pulse on the GREEN/WHITE, validation wire when the vehicles. Door LOCK Button is pressed.

DISARMING: To Disarm, the CS-882 OEM system MUST sense a Negative pulse on the RED/WHITE validation wire when the vehicles Factory UNLOCK button is pressed. See switch setting at right. >>>

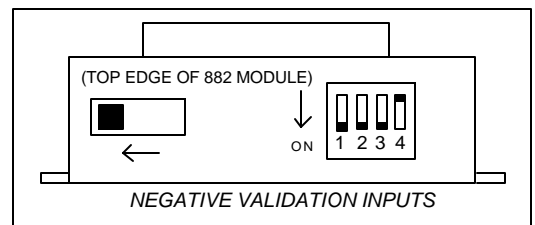


ARM/DISARM VALIDATION WITH POSITIVE SIGNALS:

Same as above, however the CS-882 system MUST sense Positive signals for ARM/DISARM. See switch settings at right. >>>

VALIDATION WIRES ON (MODE A = DIP SWITCHES 1-3 ON):

The Validation wires serve as a secondary input to prevent the system from being armed or disarmed simply by pushing the unlock button on the vehicle.

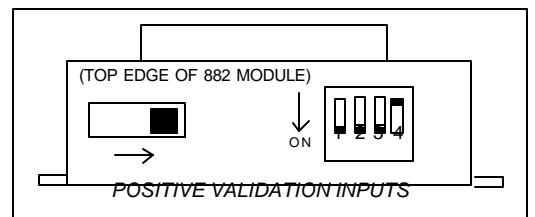

PROGRAMMABLE OPTIONS


1. Turn the Ignition ON and press the Override/Program button 7 times within 10 seconds.
2. Turn OFF Ignition. LED will flash slowly once per second as and indicator the system is in programming mode.
3. Within 20 seconds, press the Override/Program button the number of times that corresponds to the feature list below. The siren will chirp for each button press. **DO NOT LOSE COUNT!!** If you can hold down the button for 3 seconds and release you get 2 chirps. A 3-second button press is the same as pressing the button 10 times.
4. When you get to the desired option number, turn the Ignition from OFF to ON to toggle between the preset and alternate settings. The siren will chirp once or twice indication which value the feature is at. See Below for Option numbers, descriptions, and values. Ignition should be left in the OFF position once your have the correct value.
5. At this time, if you need to change more options, repeat steps 3 & 4 above.
6. To exit programming Mode, Turn Ignition ON and press the Override/Program button once.

OPTIONS CHART

Option #	Option Description	PRE-SET Value (1 chirp)	ALTERNATE Value (2 chirps)
1	Flashing Lights	ON	OFF
3	Door Open Warning Flash	ON	OFF
6	Siren Chirps	ON	OFF
8	Passive Arming	OFF	ON
10	Door Trigger Input Polarity (Blue wire)	NEGATIVE	POSITIVE
14	Allow Panic Mode	ON	OFF
15	Horn or Siren output (White/Red wire)	HORN	SIREN
25	Restore all options to PRE SET VALUES	YES	

CURRENT SENSING (DIP SWITCH #4)

The CS-882OEM system includes a current sensing circuit to monitor current flow through the vehicles electrical system. If and intruder opens a door and the interior lights turn on the CS-882 system will detect this drain and trigger the alarm without having to connect (Hardwire) this system to the interior dome light circuit and hood/trunk pin switches. If your vehicle includes courtesy lights in the trunk and/or under the hood, the system should also protect those areas when in current sensing. Current sensor is off by default. See diagram at right >>.

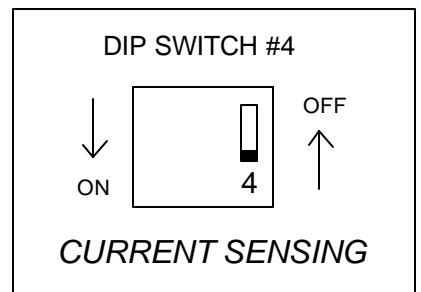

CURRENT SENSING NOTES:

1. ***Current sensing may be a problem for you if your vehicle has a thermostatically controlled fan system that may turn on after you have set the alarm and left the vehicle. The fan turning on will cause a false alarm trigger.***
2. ***Some vehicles with large or more than one battery will not operate well in current sensing mode because there is not enough voltage drop for the unit to detect a light turning on. If you experience problem with current sensing, please use the hard-wired door and hood/trunk inputs.***

WIRING

VIOLET WIRE: ON-BOARD RELAY (10A) IMMOBILIZER CIRCUIT #1 *NORMALLY OPEN*

VIOLET WIRE: ON-BOARD RELAY (10A) IMMOBILIZER CIRCUIT #1 *NORMALLY OPEN*

These wires are for an on board Relay to immobilize the Ignition or Fuel Pump Circuit in the vehicle. Cut the selected circuit you want to immobilize and connect each end to a VIOLET wire.

NOTE: This is a high-security, normally open connection. If the alarm system is unplugged or loses power, the circuit will still be immobilized!

WHITE/RED: (-) NEGATIVE HORN/SIREN OUTPUT

Connect to wire that activates the factory horn. If you choose to use this output with a standard alarm siren, then it should be connected to the black (negative) wire of the siren. Connect the red wire of the siren to constant (+) 12 Volts. NOTE: This wire must be programmed for siren use. See programmable option #15.

BLACK WIRE: SYSTEM CHASSIS GROUND

THIS WIRE MUST BE CONNECTED TO CHASSIS METAL OF THE VEHICLE. Scrape away any paint or dirt from the area to ensure a good connection.

RED WIRE: +12V POWER INPUT (15 amp fuse)

Connect to +12 Volt source with supplied fuse & holder. Recommended location for this connection is at the vehicle battery positive terminal.

WHITE WIRE: +12V FLASHING PARKING LIGHT OUTPUT

Connect to switched parking light wire at back of light switch. If this is not possible, connect directly to one of the parking lights at the front of the vehicle.

WHITE WIRE: +12V FLASHING PARKING LIGHT OUTPUT

European vehicles require separate right and left circuits. Use this second white wire to connect to the 2nd light circuit on your European vehicle.

ORANGE WIRE: (-) NEGATIVE STARTER DISABLE / ARMED OUTPUT

Ground output when system is armed. This output is used for disabling the starter or to activate other optional devices such as scanner LED's, window control modules, voice modules etc. For starter kill, cut starter wire and connect between 87A and 30 on relay. Connect orange wire to 85 and connect 86 to an Ignition source that has voltage in "ON" and "CRANKING" positions at the Ignition switch. (Starter kill relay not included)

PINK/WHITE WIRE: ON-BOARD RELAY (10A) IMMOBILIZER CIRCUIT #2 *NORMALLY OPEN*

PINK WIRE: ON-BOARD RELAY (10A) IMMOBILIZER CIRCUIT #2 *NORMALLY OPEN*

These wires are for an on board relay to immobilize the Ignition or Fuel Pump Circuit in the vehicle. Cut the selected circuit you want to immobilize and connect one end to the Pink wire and the other end to the Pink/White.

NOTE: This is a high-security, normally open connection. If the alarm system is unplugged or loses power, the circuit will still be immobilized!

YELLOW WIRE: +12 VOLTS IGNITION SWITCHED

Connect to an Ignition wire that shows +12 Volts with the key in both "On" and "Start" positions.

BLACK/WHITE WIRE: +12 VOLTS TRUNK RELEASE INPUT (IF EQUIPPED)

Connect this wire to the positive trunk release solenoid wire. This will allow the unit to sense +12 Volts when the Trunk Release Button is pressed on the Factory Remote Control to prevent an unwanted false alarm. Current sensing and trunk are bypassed. If the trunk is then re-closed (sensed by trunk pin) the zone will re-arm in 3 seconds, otherwise system is still armed and must be disarmed with the Unlock Button on the remote before entering vehicle.

BLUE WIRE: (-) or (+) DOOR TRIGGER (PROGRAMMABLE – DEFAULT IS NEGATIVE)

Connect to door pin activation circuit in vehicle.

- *Negative type door circuits show Ground when any door is opened and 12 volts when all doors are closed. Some vehicles may have isolated door triggers. In this case you may need to run additional wires from other doors or go directly to the wire at the vehicle's dome light.*
- Positive type door circuits show 12 Volts when a door is opened such as on many Ford/Mercury vehicles.

GREEN WIRE: (-) HOOD/TRUNK TRIGGER

This wire is an input trigger for a grounding hood or trunk pin switch. Connect to existing hood and trunk pin switches that read ground when open. If no existing switches are available, new pin switches may be installed.

Note: DO NOT mount new pin switches in water pathways.

WIRING

RED/WHITE: (+/-) Door Unlock Validation Signal INPUT: [Default Setting is Negative]

Connect to Vehicle's Door Unlock Switch wire. NOTE: The module must be programmed for the correct signal polarity. Prevents system from being disarmed simply by pressing the vehicle's unlock button at the door panel.

GREEN/WHITE: (+/-) Door Lock Validation Signal INPUT: [Default setting is Negative]

Connect to Vehicle's Door Lock Switch wire. NOTE: The module must be programmed for the correct signal polarity. Prevents system from being disarmed simply by pressing the vehicle's unlock button at the door panel.

BLUE/BLACK: Door Unlock Signal INPUT:

Connect to Vehicle's (+12V) Door Unlock (Solenoid/Motor) Wire.

YELLOW/BLACK: Door Lock Signal INPUT:

Connect to Vehicle's (+12V) Door Lock (Solenoid/Motor) Wire.

WIRING: MINI PLUGS

2-PIN PLUG (WHITE): PROGRAM/OVERRIDE PUSH BUTTON

2-PIN PLUG (RED): LED INDICATOR (RED FLASHING LIGHT)

3 PIN SENSOR PLUG: ,

WHITE Wire: Negative Signal

BLACK Wire: Sensor Ground

RED Wire Sensor +12V Power

SHOCK SENSOR: The sensor supplied with this system does not require any additional wiring. Simply mount the sensor in a suitable location, plug it in, and adjust the sensitivity.

CS-882 OEM PARTS BAG

*The enclosed diodes and resistors are only used for alternative installations that **DO NOT** use a Factory Remote Transmitter to operate. This type of system locks and unlocks all doors when the vehicle key is turned in the driver's door.*

Connect components as follows:

Yellow/Black: wire from CS882 connects to one side of resistor.

Remaining side of resistor connects to band end of diode.

Non-band end of diode (anode) connects to parking light switched +12 volt wire.

Blue/Black: wire from CS882 connects to one end of 2nd resistor.

Remaining side of resistor connects to band end of 2nd diode.

Non-band end of diode (anode) connects to door lock solenoid switch that switches from ground to +12 volts when locking and unlocking.