


INSTALLATION GUIDE

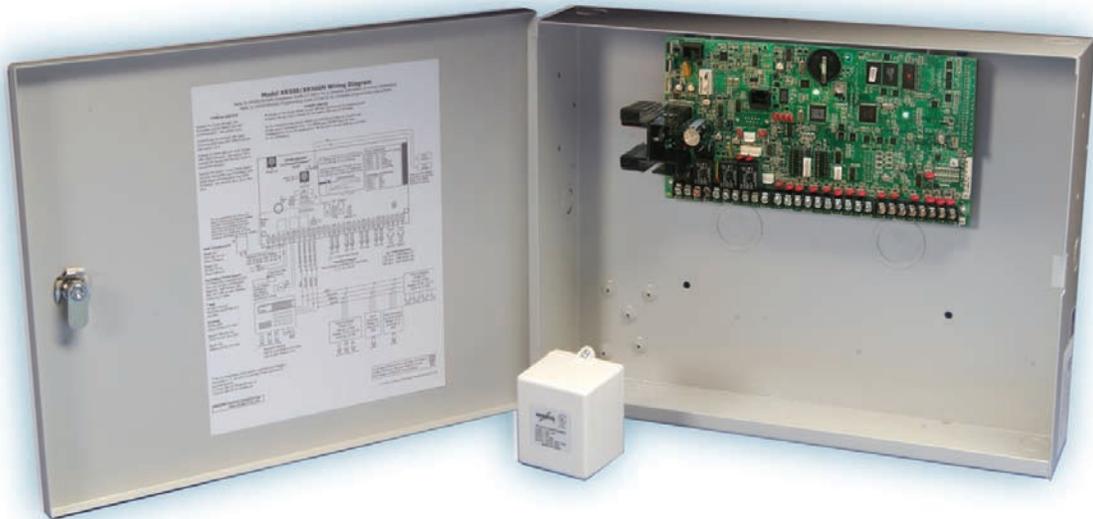

XR100 SERIES COMMAND PROCESSOR™ PANEL

MODEL XR100 SERIES ACCESS CONTROL COMMAND PROCESSOR™ PANEL INSTALLATION GUIDE

Contains installation instructions for use with the Model XR100 and XR100N Access Control Command Processor™ Panel.

FCC NOTICE

This equipment generates and uses radio frequency energy and, if not installed and used properly in strict accordance with the manufacturer's instructions, may cause interference with radio and television reception. It has been type tested and found to comply with the limits for a Class A computing device in accordance with the specification in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the installer is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna

- Relocate the computer with respect to the receiver

- Move the computer away from the receiver

- Plug the compute into a different outlet so that computer and receiver are on different branch circuits

If necessary, the installer should consult the dealer or an experienced radio/television technician for additional suggestions. The installer may find the following booklet, prepared by the Federal Communications Commission, helpful:

"How to identify and Resolve Radio-TV Interference Problems."

This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402

Stock No. 004-000-00345-4

© 2006-2007 Digital Monitoring Products, Inc.

Information furnished by DMP is believed to be accurate and reliable.

This information is subject to change without notice.

Revisions to This Document

Product Specifications

1.1	Power Supply	1
1.2	Communication	1
1.3	Panel Zones	1
1.4	Keypad Bus	1
1.5	LX-Bus™	1
1.6	Outputs	1
1.7	Enclosure Specifications	1

Panel Features

2.1	Description.....	2
2.2	Zone Expansion	2
2.3	Output Expansion	2
2.4	Central Station Communication.....	2
2.5	Before you Begin	3
2.6	About this Guide.....	3
2.7	How to Use this Guide	3

System Components

3.1	Description.....	3
3.2	Wiring Diagram	4
3.3	Lightning Protection.....	5
3.4	Accessory Devices	5
3.4	Accessory Devices (continued).....	6
3.5	Notification Appliances	6

Installation

4.1	Mounting the Enclosure.....	7
4.2	Mounting Keypads and Zone Expansion Modules.....	7
4.3	Connecting LX-Bus and Keypad Bus Devices	8

Primary Power Supply

5.1	AC Terminals 1 and 2	8
5.2	Transformer Types	8

Secondary Power Supply

6.1	Battery Terminals 3 and 4	9
6.2	Earth Ground	9
6.3	Battery Only Restart	9
6.4	Battery Replacement Period	9
6.5	Discharge/Recharge.....	9
6.6	Battery Supervision.....	9
6.7	Battery Cutoff.....	9
6.8	XR100 Series Power Requirements.....	10
6.9	Standby Battery Selection	12

Bell Output

7.1	Terminals 5 and 6	13
-----	-------------------------	----

Keypad Bus

8.1	Description.....	13
8.2	Terminal 7 - RED	13
8.3	Terminal 8 - YELLOW	13
8.4	Terminal 9 - GREEN	13
8.5	Terminal 10 - BLACK	13
8.6	J8 Programming Connection	13
8.7	OVC LED.....	13

TABLE OF CONTENTS

Smoke and Glassbreak Detector Output	
9.1 Terminals 11 and 12	13
9.2 Current Rating.....	13
Protection Zones	
10.1 Terminals 13–24	14
10.2 Operational Parameters.....	14
10.3 Zone Response Time.....	14
10.4 Keyswitch Arming Zone	14
Powered Zones for 2-Wire Smoke Detectors	
11.1 Terminals 25–26 and 27–28	14
11.2 Compatible 2-Wire Smoke Detector Chart.....	15
Dry Contact Relay Outputs	
12.1 Description.....	16
12.2 Contact Rating	16
12.3 Model 431 Output Harness Wiring.....	16
Annunciator Outputs	
13.1 Description.....	16
13.2 Model 300 Harness Wiring.....	16
13.3 Model 860 Relay Module	16
J23 6-Pin Header	
14.1 Description.....	17
J22 LX-Bus Expansion Connector	
15.1 Description.....	17
15.2 J22 LX-Bus Header	17
15.3 LX-Bus LEDs.....	17
15.4 OVC LED.....	17
J1 Ethernet Connector (XR100N only)	
16.1 Description.....	18
16.2 Ethernet LEDs	18
J3 Telephone RJ Connector	
17.1 Description.....	18
17.2 J10 893A Connector.....	18
17.3 Notification	18
17.4 Phone Line Monitor	18
17.5 FCC Registration	19
Reset and Tamper Headers	
18.1 J16 Reset Header	19
18.2 J4 Tamper Header	19
Universal UL Burglary Specifications	
19.1 Introduction	20
19.2 Wiring	20
19.3 Control Outside of Protected Area	20
19.4 Police Station Phone Numbers	20
19.5 Bypass Reports.....	20
19.6 System Maintenance	20
19.7 UL Listed Receivers.....	20
19.8 Power Supply Supervision	20
19.9 Wireless Tamper	20
19.10 Wireless External Contact.....	20
19.11 Wireless Supervision Time.....	20
19.12 Detect Wireles Jamming.....	20

TABLE OF CONTENTS

Area Information

20.1	Ownership	21
20.2	Annunciation	21
20.3	Trouble Display.....	21
20.4	Closing Wait.....	21
20.5	Local Bell Supervision	21

UL 1023 Specifications

21.1	Audible Devices	21
21.2	Auxiliary Circuits	21
21.3	Bell Cutoff.....	21
21.4	Entry Delay	21
21.5	Exit Delay	21
21.6	Weekly Test.....	21

UL 1610 AND 1076 Specifications

22.1	Opening/Closing Reports.....	21
22.2	Closing Wait.....	21
22.3	Entry Delay	21
22.4	Exit Delay	22
22.5	Proprietary Dialer	22
22.6	Grade B Central Station.....	22
22.7	Bell Cutoff.....	22
22.8	AA High Line Network Security	22

UL 636 Specifications

23.1	UL 1610 Required	22
23.2	1100X Wireless Receiver	22
23.3	Wireless Supervision Time.....	22
23.4	LED Display.....	22
23.5	Jamming Detection	22
23.6	Local Alarm	22
23.7	Message to Transmit.....	22

UL 1635 Specifications

24.1	System Trouble Display	23
24.2	Digital Dialer Telephone Number	23
24.3	Test Time.....	23
24.4	Closing Wait.....	23

UL 365 Specifications

25.1	System Trouble Display	23
25.2	Entry Delay	23
25.3	Exit Delay	23
25.4	Grade A Bell	23
25.5	Bell Cutoff.....	23
25.6	Automatic Bell Test	23
25.7	Line Security for Police Connect	23
25.8	AA High Line Network Security	23

UL 609 Specifications

26.1	Grade A Mercantile	24
26.2	Entry Delay	24
26.3	Exit Delay	24
26.4	Mercantile Safe and Vault.....	24
26.5	Grade A Bell	24

TABLE OF CONTENTS

UL 294 Specifications

27.1	Panel Designation	24
27.2	Tamper Protection	24
27.3	Compatible Devices	24

Universal UL and NFPA Fire Alarm Specifications

28.1	Introduction	24
28.2	Wiring	24
28.3	Transformer	25
28.4	End-of-Line Resistor	25
28.5	System Trouble Display	25
28.6	Fire Display	25
28.7	Police Station Phone Number	25
28.8	System Maintenance	25
28.9	Audible Alarm	25
28.10	Fire Zone Programming	25
28.11	Style D Zones	25
28.12	Video Option	25
28.13	UL Listed Receivers	25
28.14	Wireless External Contact	25
28.15	Wireless Supervision Time	25
28.16	Wireless Fire Verification	25

UL 864 NFPA 72 (Chapter 9) Specifications

29.1	Zone Restoral Reports	26
29.2	Power Fail Delay	26
29.3	Sprinkler Supervisory	26
29.4	DACT Systems	26
29.5	Local Protective Signaling Systems	26
29.6	Remote Station Protective Signaling Systems	26
29.7	Fire Protective Signaling Systems using Internet/Intranet Networks	26
29.8	Combination Systems	26

UL 985 NFPA 72 (Chapter 2) Specifications

30.1	Bell Output Definition	26
30.2	Audible Devices	27
30.3	Auxiliary Circuits	27
30.4	Bell Cutoff	27
30.5	Detect Wireles Jamming	27

California State Fire Marshal Specifications

31.1	Bell Output Definition	27
------	------------------------------	----

New York City (MEA) Specifications

32.1	Introduction	27
32.2	Digital Dialer and Network Communication	27
32.3	Wiring	27
32.4	Communication Programming	27
32.5	Additional Requirements	27

False Alarm Reduction Programmable Options

33.1	Shipping Defaults and Recommended Programming for ANSI/SIA CP-01-2000	28
33.2	Call Waiting (ANSI/SIA CP-01-2000)	29
33.3	Occupied Premise (ANSI/SIA CP-01-2000)	29
33.4	Entry Delay (ANSI/SIA CP-01-2000)	29
33.5	Minimum Installation Requirements (ANSI/SIA CP-01-2000)	29

TABLE OF CONTENTS

Underwriters Laboratories Canada (ULC)

34.1	XR100 Series ULC Installations	29
------	--------------------------------------	----

Wiring Diagrams

35.1	Multiple Notification Circuit Modules	30
35.2	Multiple Notification Circuit Modules for Zoned Annunciation	31
35.3	Dual Style D Zone Module Installation	32
35.4	Cellular Backup Installation for Derived Channel Burglary	33
35.5	Derived Channel Installation Using Bosch D8122.....	34
35.6	LX-Bus™ Module Connection	35
35.7	Model 860 Relay Module Connection	36
35.8	Powered Burglary Devices	37

Listings and Approvals	38
-------------------------------------	-----------

Revisions to This Document

This section explains the changes that were made to this document during this revision. This section lists the date the change was made, the section number and heading, and a quick summary of the change.

Date	Section Number and Heading	Summary of Changes
1/07	4.3 Connecting LX-Bus Devices UL 636 Specifications	Described expanded on-board LX-Bus device support. New section added per UL Note: Subsequent section numbers changed.
10/06	3.4 Accessories Devices 4.3 Connecting Bus Devices 6.8 Power requirements 7.1 Terminals 5 and 6 J23 6-Pin Header J22 LX-Bus Expansion connector 19.9 Wireless Tamper 19.10 Wireless External Contact 19.11 Wireless Supervision Time 19.12 Detect Wireless Jamming 27.14 Wireless External Contact 27.15 Wireless Supervision Time 27.16 Wireless Fire Verification 29.5 Detect Wireless Jamming 33.1 XR100 Series ULC Installations 34.2 Multiple NAC Modules Diagram	Added 1100 Series Wireless devices and descriptions. Clarified LX-Bus devices connection distance. Added 1100X Wireless Receiver. Replaced 10K Ohm resistor with 1K Ohm resistor. Added wireless operation information. Added UL information. Revised Relay 2 description.

Product Specifications

1.1 Power Supply

Transformer Input: Model 327, plug-in – Primary input: 120 VAC, 60 Hz, Secondary output: 16.5 VAC 50 VA
Model 322, wire-in – Primary input: 120 VAC, 60 Hz, Secondary output: 16 VAC 56 VA

Standby Battery: 12 VDC, 1.0 Amps Max. charging current
Models 365, 366, 367, 368, or 369
Replace every 3 to 5 years

* Auxiliary: 12 VDC output at 1.5 Amp Max
* Bell Output: 12 VDC at 1.5 Amp Max

Note: The combined Auxiliary and Bell outputs total cannot exceed 3 Amps with a 50 VA or 56 VA Transformer.

All circuits are inherent Power Limited except the red battery wire and AC terminal.

* For UL installations, the total current combined from Auxiliary and Bell Power cannot exceed:

1.3 Amps with a 50 VA transformer, 1.0 Amp Max for Auxiliary Power

1.9 Amps with a 56 VA transformer, 1.0 Amp Max for Auxiliary Power and 1.5 Amp Max for Bell

1.2 Communication

Built-in network communication to DMP Model SCS-1/SCS-1R Receivers (XR100N only)

Built-in dialer communication to DMP Model SCS-1/SCS-1R Receivers

Built-in Contact ID communication to non-DMP receivers

Optional 893A Dual Phone Line Module with phone line supervision

Can operate as a local panel

1.3 Panel Zones

Eight 1k Ohm EOL burglary zones (zones 1 to 8)

Two 3.3k Ohm EOL powered zone with reset (zones 9 and 10)

1.4 Keypad Bus

You can connect up to eight of the following supervised keypads and expansion modules to the keypad bus:

- Alphanumeric keypads
- Four- and/or single-zone expansion modules
- Single-zone detectors
- Access control modules

1.5 LX-Bus™

You can connect the following devices to the LX-Bus™ provided on the panel. See Accessory Devices in section 3.4.

- Four- and/or single-zone expansion modules
- Single-zone detectors
- Relay output expansion modules
- Graphic annunciator modules

1.6 Outputs

The XR100 Series provide two Single Pole, Double Throw (SPDT) relay outputs which require the installation of two Model 305 relays, each rated 1 Amp at 30 VDC resistive (power limited sources only). A Model 431 Output Harness is required to use these outputs.

The XR100 Series panels also provide four open collector outputs rated for 50mA each. The open collector outputs provide ground connection for a positive voltage source. A Model 300 Output Harness is required to use these outputs.

1.7 Enclosure Specifications

The XR100 Series panels are shipped in an enclosure with a transformer, End-of-Line resistors, battery leads, user's guide, and programming sheets.

Model 350A Enclosure

Enclosure size: 17.5" W x 13.5" H x 3.75" D
Color: Gray (G)
Construction: 18-gauge with 16-gauge door

Model 350 Enclosure

Enclosure size: 17.5" W x 13.5" H x 3.5" D
Color: Gray (G) or Red (R)
Construction: 18-gauge, cold-rolled steel

Panel Features

2.1 Description

The DMP XR100 Series Command Processor™ Panel is a versatile 12 VDC, combined access control, burglary, and fire communicator panel with battery backup. The XR100 Series provides eight on-board burglary zones and two on-board 12 VDC Class B powered zones. The powered zones have a reset capability to provide for 2-wire smoke detectors, relays, or other latching devices. The XR100 Series can communicate to one or two DMP SCS-1/SCS-1R Receivers using digital dialer or network communication, or to non-DMP receivers using the Contact ID format.

2.2 Zone Expansion

Up to 142 additional zones are available on the XR100 Series using DMP LCD keypad remote zone capability and zone expansion modules. The panel keypad data bus supports up to sixteen supervised device addresses with each address supporting up to four programmable expansion zones.

Up to 100 zones are available using the on board LX-Bus and any combination of single, four, eight, or 16-zone expansion modules and single-zone LX-Bus™ detectors.

Note: Do not use shielded wire for LX-Bus or Keypad Bus circuits.

2.3 Output Expansion

In addition to the two SPDT relays and four open collector outputs on the XR100 Series, you can also connect up to 25 Model 716 Output Expansion Modules. These modules can provide an additional 100 programmable SPDT relays.

The XR100 Series provides 100 Output Schedules you can use for programming the 716 to perform a variety of annunciation and control functions. You can also assign the 716 outputs to any panel Output Options such as Fire Alarm, Communication Fail, or Phone Trouble Outputs. Refer to the 716 Installation Guide (LT-0183).

The LX-Bus™ also supports the Model 717 Graphic Annunciator Module. Each 717 module supplies 20 switched ground outputs that follow the state of their assigned zones.

Note: The 717 supports the first eight Keypad Bus addresses. To follow Keypad Bus addresses nine through 16, install multiple 716 modules. Refer to the 717 Installation Guide (LT-0235) and 716 Installation Guide (LT-0183).

2.4 Central Station Communication

You can program the XR100 Series panel for reporting to one or two DMP SCS-1/SCS-1R Receivers using digital dialer or network communication. The panel can also communicate to non-DMP receivers using the Contact ID communication format. The XR100 Series connects at the premises to a standard RJ31X or RJ38X telephone jack. Use the DMP 893A Dual Phone Line Module when connecting the XR100 Series panel to two separate phone lines in fire or burglary applications.

2.5 Before you Begin

Before installing the XR100 Series, we recommend you read through the entire contents of this guide. Familiarize yourself with the features of the panel and the key points to remember during the installation. Be sure to read and understand all of the caution statements printed in bold italics.

2.6 About this Guide

The information in this guide is organized into five sections: Table of Contents, Introduction, Installation, Compliance, and System Diagrams.

- The Table of Contents at the front lists the headings and subheadings used throughout each section of the guide. To the right of each heading is the section number where the information can be found.
- The Introduction section provides an overview of the various components that go into an XR100 Series system and provides diagrams of typical system configurations. This section describes the panel, keypads, zone expansion modules, and accessory modules and provides details on how they operate together in the system.
- The Installation section begins with mounting instructions for the enclosure and continues with detailed XR100 Series panel operational characteristics.
- The Compliance section describes the various regulations the XR100 Series complies with, such as UL.
- The System Diagrams illustrate different ways to wire the XR100 Series to a variety of modules.

Caution Notes

Throughout this guide you will see caution notes containing information you need to know when installing the panel. These cautions are indicated with a yield sign. Whenever you see a caution note, make sure you completely read and understand its information. Failing to follow the caution note can cause damage to the equipment or improper operation of one or more components in the system. See the example shown below.



Always ground the panel before applying power to any devices: The XR100 Series must be properly grounded before connecting any devices or applying power to the panel. Proper grounding protects against Electrostatic Discharge (ESD) that can damage system components.

2.7 How to Use this Guide

To locate information about the XR100 Series installation, first go to the Table of Contents at the front of this guide. Find the subject heading that best describes the information you need and turn to the section number shown to the right of the heading.

The text that follows the heading is written to provide as much information about the subject as possible. If you cannot find the information you need under that heading, try scanning through a few of the headings before and after and reading the text under those that sound similar.

System Components

3.1 Description

The DMP XR100 Series system is made up of an alarm panel with a built-in communicator, an enclosure, battery, one 16.5 VAC transformer, and keypads. You can use up to sixteen supervised 32-character LCD keypads; network communications; zone and output expansion modules; and initiating and indicating circuit modules. You can also connect auxiliary devices to the panel's output relays to expand the basic system control capability. Combined current requirements of additional modules may require an auxiliary power supply. Refer to section 6.8 in this guide when calculating power requirements.

INTRODUCTION

3.2 Wiring Diagram

The XR100 Series diagram below shows some of the accessory modules you can connect for use in various applications. A brief description of each module follows in section 3.4.

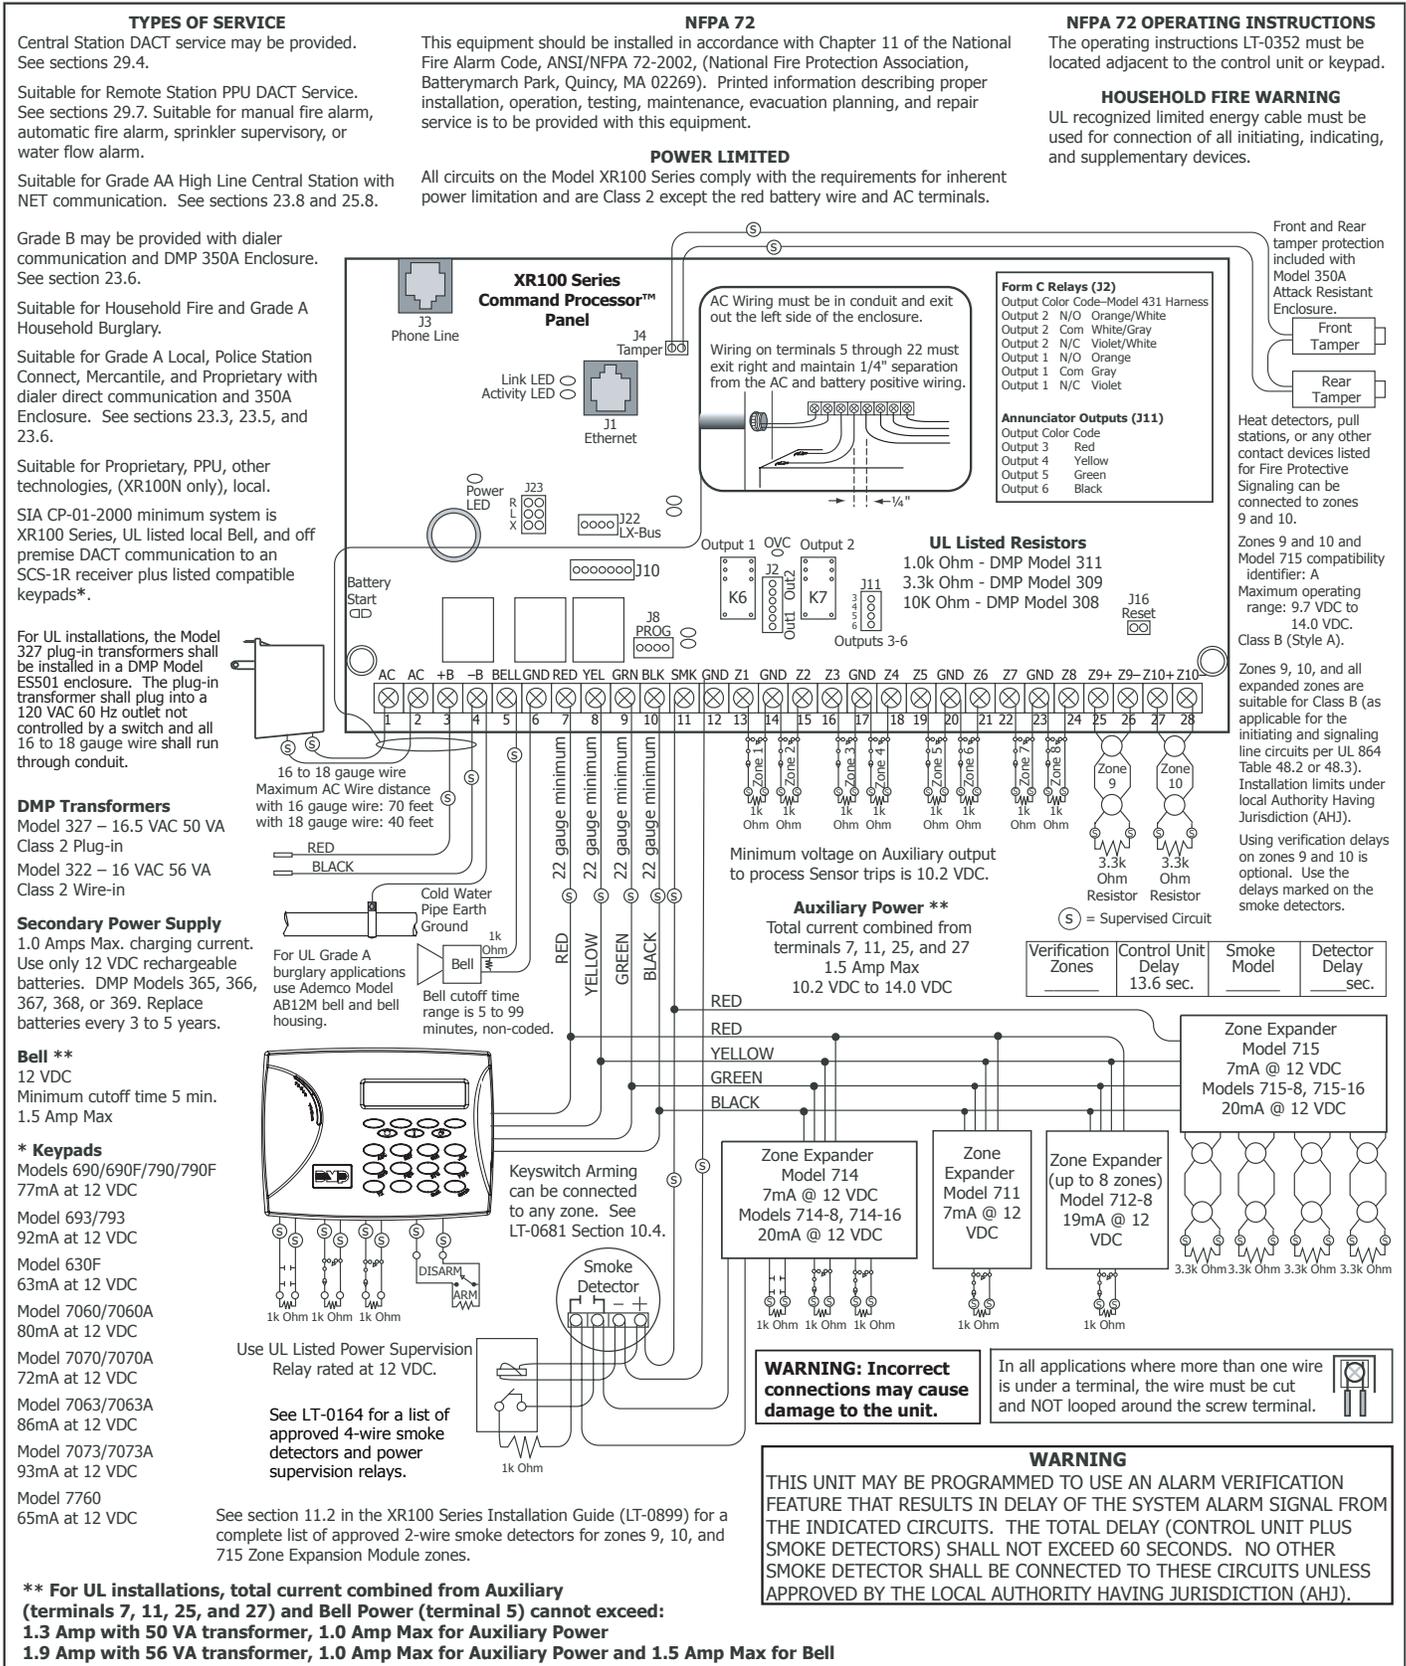


Figure 1: XR100 Series Wiring Diagram

3.3 Lightning Protection

Metal Oxide Varistors and Transient Voltage Suppressors help protect against voltage surges on XR100 Series input and output circuits. Additional surge protection is available by installing the DMP 370 or 370RJ Lightning Suppressors.

3.4 Accessory Devices

Interface Card	
733, 734 Wiegand Interface Cards	Provides system codeless entry, and arming and disarming using access control readers.
Zone and Output Expansion Modules	
710/710F Bus Splitter/Repeater	Allows you to increase keypad or LX-Bus™ wiring distance to 2500 feet. Model 710F is for 24 VDC applications.
711 Single Point Zone Expanders	Provides one Class B zone for connecting burglary devices.
714, 714-8, 714-16 Zone Expanders	Provides Class B zones for connecting burglary and non-powered fire devices.
712-8 Zone Expander	Provides Class B zones for connecting burglary devices.
715, 715-8, 715-16 Zone Expanders	Provides 12 VDC Class B powered zones for connecting smoke detectors, glassbreak detectors, and other 2- or 4-wire devices.
725 Zone Expanders	Provides 24 VDC Class B powered zones for connecting smoke detectors, glassbreak detectors, and other 2- or 4-wire devices. Requires 710F Bus Splitter/Repeater.
716 Output Expander	Provides four Form C relays (SPDT) and four switched grounds (open collector) for use in a variety of remote annunciation and control applications for use on the LX-Bus only..
717 Graphic Annunciator Module	Provides 20 zone following annunciator outputs (open collector) for use in a variety of remote annunciation and control applications for use on the LX-Bus only.
DMP Two-Way Wireless Devices	
1100X Wireless Receiver	Supports up to 100 devices in residential or commercial wireless operation.
1101 Universal Transmitter	Provides both internal and external contacts that may be used at the same time to yield two individual reporting zones from one wireless transmitter.
1102 Universal Transmitter	Provides an external contact.
* 1121 PIR Motion Detector	Provides motion detection with pet immunity.
* 1124 PIR 360° Motion Detector	Provides four-element pyro intrusion detection in a ceiling-mount unit with 360°/ 65.6 ft. diameter coverage.
1125 PIR Motion Detector	Provides multiple lens configurations, dual coverage area selection, and sensitivity adjustments.
* 1129 Glassbreak Detector	Detects the shattering of framed glass mounted in an outside wall and provides full-pattern coverage and false-alarm immunity.
1142 Two-button Panic Transmitter	Provides portable operation or can be permanently mounted for under-the-counter operation.
* 1145 (Four-Button) * 1146 (Two-Button) * 1147 (One-Button)	Key Fob transmitters designed to clip onto a key ring or lanyard.
1161 Residential Smoke Detector	Residential smoke detector with sounder.
1162 Residential Smoke/Heat Detector	Residential smoke/heat detector with sounder and fixed rate-of-rise heat detector.
* These devices have not been investigated by UL and shall not be used in UL installations.	

INTRODUCTION

3.4 Accessory Devices (continued)

Indicating and Initiating Devices	
865 Supervised Style Y or Z Notification Circuit Module	Provides supervised alarm current when using the XR100 Series panel bell output and up to 5 Amps at 12 or 24 VDC when using a listed auxiliary power supply. The 865 can supervise 2-wire Style Y or Z circuits for ground faults, opens, shorts, and shorts with individual LED annunciation.
866 Notification Circuit Module	Provides supervised alarm current using the XR100 Series panel bell output and up to 5 Amps at 12 or 24 VDC when using a listed auxiliary power supply. The 866 can supervise Style W circuits for opens and shorts.
867 Style W LX-Bus Notification Circuit Module	Provides supervised alarm current using the XR100 Series panel bell output and up to 5 Amps at 12 or 24 VDC when using a listed auxiliary power supply. The 867 connects to the XR100 Series panel LX-Bus™ and provides one 2-wire Style W notification circuit for ground fault, open, and short conditions. Individual Bell Relay addresses Bell Ring styles.
869 Dual Style D Initiating Module	Provides two Style D, 4-wire initiating zones for connecting waterflow switches and other non-powered fire and burglary devices.
Accessory Modules and Keypads	
893A Dual Phone Line Module	Allows you to supervise two standard phone lines connected to an XR100 Series panel. The 893A module monitors the main and backup phone lines for a sustained voltage drop and alerts users when the phone line is bad.
* ePAD™ Virtual Keypads	Allows users to control the security system from any computer in the world using the Internet.
LCD keypads	Allows you to control the panel from various remote locations. Connect up to sixteen supervised Model 630F Remote Fire Command Center, Model 690/690F, 790/790F Security Command™ keypads, 693/793 Easy Entry™ keypads, 7060, 7063, 7070, 7073 Thinline™ keypads, 7060A, 7063A, 7070A, 7073A Aqualite™ keypads, or 7760 Clear Touch™ keypad to the keypad bus using terminals 7, 8, 9, and 10.
Addressable Smoke Detectors	
521LX, 521LXT	Single-zone, addressable module conventional smoke/smoke heat detectors that connect to the LX-Bus. Includes remote maintenance reporting, drift compensation, and multi-criteria detection.
* This device has not been investigated by UL and shall not be used in UL installations.	

3.5 Notification Appliances

The following table indicates the approved notification appliances that can be used with the XR100 Series system.

Wheelock Model No.	Description	12V
MT-12/24	Multi-tone Horn	x
NH-12/24	Standard Horn	x
MB-G6-12	Bell, 6 inch	x
MB-G10-12	Bell, 10 inch	x
RSS-121575W-F	Strobe, 15/75 candela	x
RSSP-121575W-F	Strobe, w/retrofit plate	x
NS-121575W-F	Horn Strobe, 15/75 candela	x
SM-12/24-R	Sync Module, Single circuit,	x
DSM-12/24-R	Sync Module, Dual circuit	x

Installation

4.1 Mounting the Enclosure

The metal enclosure for the XR100 Series must be mounted in a secure, dry place to protect the panel from damage due to tampering or the elements. It is not necessary to remove the XR100 Series PCB when installing the enclosure. Figure 2 shows the mounting hole locations for both the Model 350/350A Enclosures.

Note: When using the XR100 Series panel for UL Listed applications, use the Model 350, 349, 341, 342, or 352S enclosure for standby batteries. When using the 352S in UL listed applications, the enclosure must be surface mounted on the wall.

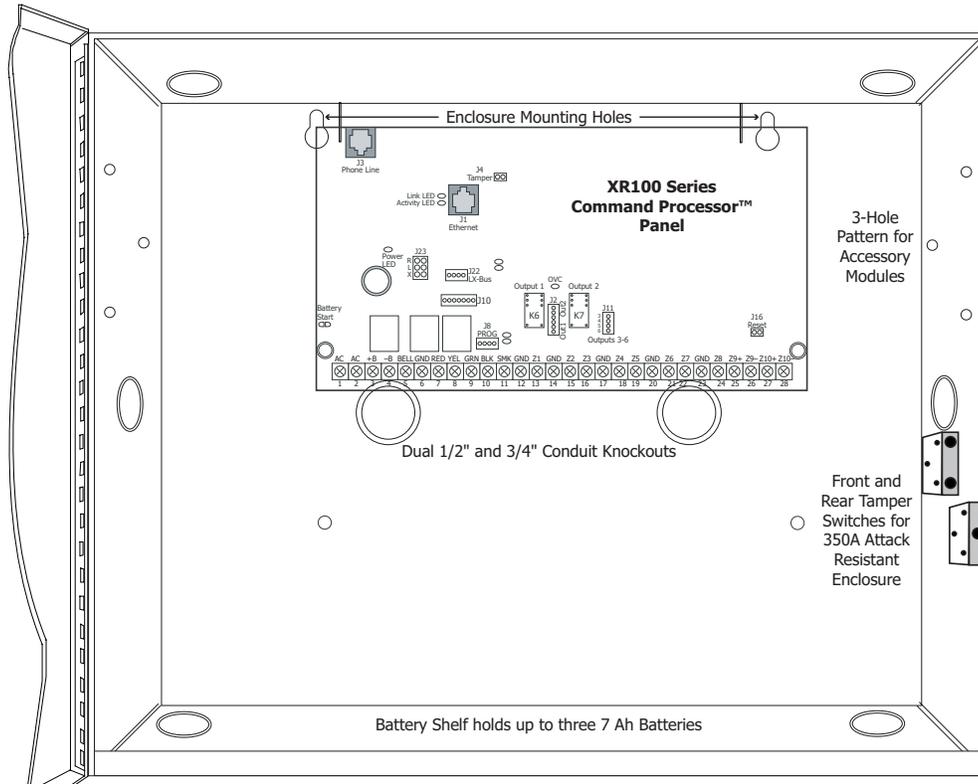


Figure 2: XR100 Series in Model 350 or 350A Enclosure

4.2 Mounting Keypads and Zone Expansion Modules

DMP LCD keypads have removable covers that allow you to easily mount the keypad to a wall or other flat surface using the screw holes on each corner of the base. Before mounting the base, connect the keypad wire harness leads to the keypad cable from the panel and to any device wiring run to that location. Then attach the harness to the pin connector on the PC board, mount the base, and install the keypad cover making sure all of the keys extend through their respective holes.

For mounting keypads on solid walls, or for applications where conduit is required, use the Model 695 1-1/2" deep or the Model 696 1/2" deep backboxes.

The DMP 711, 712-8, 714, 715, 716, and 717 modules are each contained in molded plastic housings with removable covers. The base provides you with mounting holes for installing the unit to a wall, switch plate, or other surface.

INSTALLATION

4.3 Connecting LX-Bus and Keypad Bus Devices

Several factors determine the DMP LX-Bus™ and keypad bus performance characteristics: the wire length and gauge used, the number of devices connected, and the voltage at each device. When planning an LX-Bus™ and keypad bus installation, keep in mind the following information:

1. DMP recommends using 18 or 22-gauge **unshielded** wire for all keypad and LX-Bus circuits. **Do not** use twisted pair or shielded wire for LX-Bus and keypad bus data circuits.
2. On keypad bus circuits, to maintain auxiliary power integrity when using 22-gauge wire do not exceed 500 feet. When using 18-gauge wire do not exceed 1,000 feet. To increase the wire length or to add devices, install an additional power supply that is UL listed for Fire Protective Signaling, power limited, and regulated (12 VDC nominal) with battery backup.

Note: Each panel allows a specific number of supervised keypads. Add additional keypads in the unsupervised mode. Refer to the panel installation guide for the specific number of supervised keypads allowed.

3. Maximum distance for any one bus circuit (length of wire) is 2,500 feet regardless of the wire gauge. This distance can be in the form of one long wire run or multiple branches with all wiring totaling no more than 2,500 feet. As wire distance from the panel increases, DC voltage on the wire decreases. Maximum number of LX-Bus devices when using the on-board LX-Bus (J22) is 25 devices on the first 2,500 foot circuit. When a 710 Module is added, up to 40 devices can be installed on the first 2,500 foot circuit. See J22 LX-Bus Expansion Connector section later in this document.

Note: Beginning with XR100 Series Level J hardware, the on-board LX-Bus now supports up to 40 devices on the first 2,500 foot circuit without adding a 710 Expansion Module.

Note: Do not use twisted pair or shielded wire when connecting an LX-Bus or keypad bus.

For additional information refer to the LX-Bus/Keypad Bus Wiring Application Note (LT-2031) and/or 710/710F Installation Sheet (LT-0310).

Primary Power Supply

5.1 AC Terminals 1 and 2

Connect the transformer wires to terminals 1 and 2 on the panel. Use no more than 70 ft. of 16 gauge or 40 ft. of 18 gauge wire between the transformer and the XR100 Series.



Always ground the panel before applying power to any devices: The XR100 Series must be properly grounded before connecting any devices or applying power to the panel. Proper grounding protects against Electrostatic Discharge (ESD) that can damage system components. See Earth ground section 6.2.

5.2 Transformer Types

Use Model 327 (16.5 VAC 50 VA) plug-in or Model 322 (16 VAC 56 VA) wire-in transformer. Use Model 322 (16 VAC 56 VA) wire-in transformer when required by the Authority Having Jurisdiction (AHJ).



The transformer must be connected to an unswitched 120 VAC 60 Hz electrical outlet with at least 350mA of available current. **Never share the transformer output with any other equipment.**

Secondary Power Supply

6.1 Battery Terminals 3 and 4

Connect the black battery lead to the negative battery terminal. The negative terminal connects to the enclosure ground internally through the XR100 Series circuit board. Connect the red battery lead to the battery positive terminal. Observe polarity when connecting the battery.

You can add a second battery in parallel using the DMP Model 318 Dual Battery Harness. **DMP requires each battery be separated by a PTC in the battery harness wiring to protect each battery from a reversal or short within the circuit.** See Figure 5.

For UL installations, all batteries shall be installed in a DMP Model 350, 349, 341, 342, or 352S enclosure and all wiring shall run through conduit.

The enclosure shall be installed to the left of the XR100 Series enclosure to ensure Battery and AC wire separation.

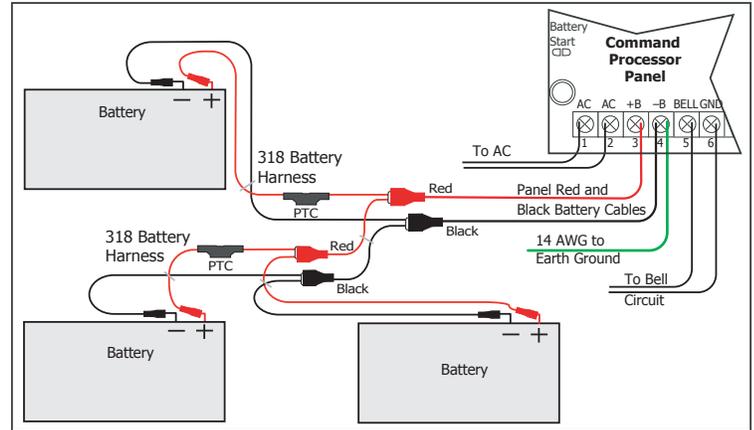


Figure 3: Wiring Multiple Batteries



Use sealed lead-acid batteries only: Use the DMP Model 365 (12 VDC 9 Ah), DMP Model 367 (12 VDC 7.7 Ah), Model 366 (12 VDC 18 Ah), Model 368 (12 VDC 4.5 Ah), or Model 369 (12 VDC 7 Ah) sealed lead-acid rechargeable battery. Batteries supplied by DMP have been tested to ensure proper charging with DMP products.

GEL CELL BATTERIES CANNOT BE USED WITH THE XR100 Series PANEL.

6.2 Earth Ground

To provide proper transient suppression, XR100 Series panel terminal 4 must be connected to earth ground using 14 gauge or larger wire. DMP recommends connecting to a cold water pipe, ground rod, or building ground only. Do not connect to an electrical ground or conduit, sprinkler or gas pipes, or to a telephone company ground.

6.3 Battery Only Restart

When powering up the XR100 Series panel without AC power, briefly short across the battery start pads to pull in the battery cutoff relay. The leads need a momentary short only. Once the relay has pulled in, the battery voltage holds it in that condition. If the XR100 Series panel is powered up with an AC transformer, the battery cutoff relay is pulled in automatically. For more information refer to Figure 1.

6.4 Battery Replacement Period

DMP recommends replacing the battery every 3 to 5 years under normal use.

6.5 Discharge/Recharge

The XR100 Series battery charging circuit float charges at 13.9 VDC at a maximum current of 1.0 Amps using a 50 VA or 56 VA transformer. Listed below are the various battery voltage level conditions:

Battery Trouble:	Below	11.9 VDC
Battery Cutoff:	Below	10.2 VDC
Battery Restored:	Above	12.6 VDC

6.6 Battery Supervision

The XR100 Series tests the battery when AC power is present. The test is done every three minutes and lasts for five seconds. During the test, the panel places a load on the battery; if the battery voltage falls below 11.9 VDC a low battery is detected. If AC power is not present, a low battery is detected any time the battery voltage falls below 11.9 VDC.

If a low battery is detected with AC power present, the test repeats every two minutes until the battery charges above 12.6 VDC indicating the battery has restored voltage. If a weak battery is replaced with a fully charged battery, the restored battery will not be detected until the next two minute test is completed.

6.7 Battery Cutoff

The panel disconnects the battery any time the battery voltage drops below 10.2 VDC. This prevents battery deep discharge damage.

INSTALLATION

6.8 XR100 Series Power Requirements

During AC power failure, the XR100 Series panel and all connected auxiliary devices draw their power from the battery. All devices must be taken into consideration when calculating the battery standby capacity. The following table lists the XR100 Series panel power requirements. You must add the additional current draw of keypads, zone expansion modules, smoke detector output, and any other auxiliary devices used in the system for the total current required. The total is then multiplied by the number of standby hours required to calculate the total ampere-hours required.

Standby Battery Power Calculations	Standby Current	Alarm Current
XR100 Series Control Panel	Qty <u> 1 </u> 180mA <u>180</u> mA	Qty <u> 1 </u> 180mA <u>180</u> mA
Relay Outputs 1-2 (ON)	Qty _____ 30mA _____	Qty _____ 30mA _____
Switch Grounds 3-6 (ON)	Qty _____ 5mA _____	Qty _____ 5mA _____
Active Zones 1-8	Qty _____ x 1.6mA _____	Qty _____ x *2mA _____
Active Zones 9-10	Qty _____ 4mA _____	Qty _____ 30mA _____
2-Wire Smoke Detectors	Qty _____ 0.1mA _____	Qty _____ 0.1mA _____
Panel Bell Output		1500mA _____ mA
893A Dual Phone Line Module	Qty _____ x 12mA _____	Qty _____ x 50mA _____
1100X Wireless Receiver	Qty _____ x 40mA _____	Qty _____ x 40mA _____
860 Relay Output Module (one relay active)	Qty _____ x 34mA _____	Qty _____ x 34mA _____
All four relays active	138mA _____	138mA _____
865 Style Y or Z Notification Module	Qty _____ x 26mA _____	Qty _____ x 85mA _____
866 Style W Notification Module	Qty _____ x 45mA _____	Qty _____ x 75mA _____
867 LX-Bus Style W Notification Module	Qty _____ x 30mA _____	Qty _____ x 80mA _____
869 Dual Style D Initiating Module	Qty _____ x 25mA _____	Qty _____ x 75mA _____
630F Remote Fire Command Center	Qty _____ x 63mA _____	Qty _____ x 92mA _____
690/690F Security Command Keypad	Qty _____ x 77mA _____	Qty _____ x 84mA _____
693/793 Easy Entry Keypad	Qty _____ x 92mA _____	Qty _____ x 120mA _____
Active Zones (EOL Installed)	1.6mA _____	Qty _____ x *2mA _____
790/790F Security Command Keypad	Qty _____ x 77mA _____	Qty _____ x 84mA _____
Active Zones (EOL Installed)	1.6mA _____	Qty _____ x *2mA _____
7060 Thinline/7060A Aqualite Keypad	Qty _____ x 72mA _____	Qty _____ x 80mA _____
7063 Thinline/7063A Aqualite Keypad	Qty _____ x 85mA _____	Qty _____ x 100mA _____
7070 Thinline/7070A Aqualite Keypad	Qty _____ x 72mA _____	Qty _____ x 87mA _____
Active Zones (EOL Installed)	1.6mA _____	Qty _____ x *2mA _____
7073 Thinline/7073A Aqualite Keypad	Qty _____ x 85mA _____	Qty _____ x 100mA _____
Active Zones (EOL Installed)	1.6mA _____	Qty _____ x *2mA _____
7760 Clear Touch Keypad	Qty _____ x 65mA _____	Qty _____ x 115mA _____
733 Wiegand Interface Module	Qty _____ x 30mA _____	Qty _____ x 30mA _____
Active Zones (EOL Installed)	Qty _____ x 1.6mA _____	Qty _____ x *2mA _____
Annunciator (ON)		Qty _____ x 20mA _____
734 Wiegand Interface Module	Qty _____ x 15mA _____	Qty _____ x 15mA _____
Active Zones (EOL Installed)	Qty _____ x 1.6mA _____	Qty _____ x *2mA _____
Annunciator (ON)		Qty _____ x 20mA _____
Copy Sub-Totals to next page	Sub-Total Standby _____ mA	Sub-Total Alarm _____ mA

*Based on 10% of active zones in alarm.

Standby Battery Power Calculations	Standby Current	Alarm Current
736P POPIT Interface Module Radionics Popex, POPITs, OctoPOPITs	Qty _____ x 25mA _____ Qty _____ x _____mA _____	Qty _____ x 25mA _____ Qty _____ x _____mA _____
738A Ademco Wireless Interface Module	Qty _____ x 75mA _____	Qty _____ x 75mA _____
710 Bus Splitter/Repeater Module	Qty _____ x 30mA _____	Qty _____ x 30mA _____
710F Fire Bus Splitter/Repeater Module	Qty _____ x 40mA _____	Qty _____ x 40mA _____
711, 714 Zone Expansion Modules Active Zones (EOL Installed)	Qty _____ x 7mA _____ Qty _____ x 1.6mA _____	Qty _____ x 7mA _____ Qty _____ x *2mA _____
712-8 Zone Expansion Module Active Zones (EOL Installed)	Qty _____ x 17mA _____ Qty _____ x 1.6mA _____	Qty _____ x 17mA _____ Qty _____ x *2mA _____
714-8, 714-16 Zone Expansion Module Active Zones (EOL Installed)	Qty _____ x 20mA _____ Qty _____ x 1.6mA _____	Qty _____ x 20mA _____ Qty _____ x *2mA _____
715 Zone Expansion Module Active Zones (EOL Installed) 2-Wire Smokes	Qty _____ x 7mA _____ Qty _____ x 4mA _____ Qty _____ x .1mA _____	Qty _____ x 7mA _____ Qty _____ x *30mA _____ Qty _____ x .1mA _____
715-8, 715-16 Zone Expansion Modules Active Zones (EOL Installed) 2-Wire Smokes	Qty _____ x 20mA _____ Qty _____ x 4mA _____ Qty _____ x .1mA _____	Qty _____ x 20mA _____ Qty _____ x *30mA _____ Qty _____ x .1mA _____
716 Output Expansion Module Active Form C Relays	Qty _____ x 7mA _____	Qty _____ x 7mA _____ Qty _____ x 28mA _____
717 Graphic Annunciator Module Annunciator Outputs	Qty _____ x 10mA _____	Qty _____ x 10mA _____ Qty _____ x 1mA _____
521LX, 521LXT Smoke Detectors	Qty _____ x 8.8mA _____	Qty _____ x *28mA _____
572 Indicator LED	Qty _____ x 20mA _____	Qty _____ x 20mA _____
Aux. Powered Devices on Terminals 7 and 11 Other than Keypads and LX-Bus Modules	_____ mA	_____ mA
This page only	Sub-Total Standby _____ mA	Sub-Total Alarm _____ mA
Sub-Totals from previous page	Sub-Total Standby _____ mA	Sub-Total Alarm _____ mA
*Based on 10% of active zones in alarm	Total Standby _____ mA	Total Alarm _____ mA
$\begin{aligned} &\text{Total Standby} _____\text{ mA} \times \text{number of Standby Hours needed} _____\text{ = } _____\text{ mA-hours} \\ &\qquad \qquad \qquad \text{Total Alarm} _____\text{ mA} \quad + _____\text{ mA-hours} \\ &\qquad \qquad \qquad \qquad \qquad \qquad \text{Total} _____\text{ mA-hours} \\ &\qquad \qquad \qquad \qquad \qquad \qquad \times \quad .001 \\ &\qquad \qquad \qquad \qquad \qquad \qquad = _____\text{ Amp-hrs Required} \end{aligned}$		

Refer to section 6.9 for standby battery selection.

INSTALLATION

6.9 Standby Battery Selection

To choose the type and number of batteries needed for 24, 60, or 72 hours of standby power based on the Amp Hours Required calculation from section 6.8 XR100 Series Power Requirements, perform the following:

1. Select the desired standby hours required from the table below: 24, 60, or 72 hours
2. Select the desired battery size: Model 368 (12 VDC 4.5 Ah), Model 369 (12 VDC 7 Ah), Model 367 (12 VDC 7.7 Ah), Model 365 (12 VDC 9 Ah), Model 366 (12 VDC 18 Ah).
3. Select a Max. Ah Available number that is just greater than the number calculated as the Amp Hours Required.
4. Install the number of batteries shown in the corresponding No. of Batteries required column.

Example: If the Amp Hours Required calculation equals 22 Ah for 24 hours of standby time and 4.5 Ah batteries are desired, install six (6) Model 368 (12 VDC, 4.5 Ah) batteries.

Note: You can use either a Model 327 Plug-in 50 VA or Model 322 Wire-in 56 VA Transformer with any of the Number of Batteries choices listed below.

For UL installations, all batteries shall be installed in a DMP Model 350 enclosure and all wiring shall run through conduit. The enclosure shall be installed to the left of the XR100 Series enclosure to ensure Battery and AC wire separation.

24 hours of standby power

4.5 Ah Batteries		7 Ah Batteries		7.7 Ah Batteries		9 Ah Batteries		18 Ah Batteries	
Max. Ah Available	No. of Batteries								
8	2	6	1	6	1	8	1	16	1
12	3	12	2	13	2	16	2	32	2
16	4	18	3	20	3	24	3	48	3
20	5	24	4	27	4	32	4		
24	6	31	5	34	5	40	5		
28	7	37	6	41	6				
32	8	43	7						
36	9								
40	10								

Note: 48 hours is the typical battery recharge time for any of the Number of Batteries shown in this section.

60 hours of standby power

7 Ah Batteries		7.7 Ah Batteries		9 Ah Batteries		18 Ah Batteries	
Max. Ah Available	No. of Batteries						
13	2	14	2	17	2	17	1
20	3	22	3	26	3	34	2
27	4	29	4	34	4	52	3
33	5	37	5	43	5	69	4
40	6	44	6	52	6		
47	7	52	7	61	7		
54	8	59	8	69	8		
60	9	67	9				
67	10						

Note: 48 hours is the typical battery recharge time for any of the Number of Batteries shown in this section.

72 hours of standby power

9 Ah Batteries		18 Ah Batteries	
Max. Ah Available	No. of Batteries	Max. Ah Available	No. of Batteries
16	2	16	1
25	3	33	2
33	4	50	3
42	5	67	4
50	6		
59	7		
67	8		

Note: 72 hours is the typical battery recharge time required for any of the Number of Batteries shown in this section.

Note: If the Amp Hours Required calculation is greater than any Max. Ah Available number shown on a table, then add power supply(s) to power some system devices allowing the Amp Hours Required calculation to be reduced.

Bell Output

7.1 Terminals 5 and 6

Terminal 5 supplies positive 12 VDC to power alarm bells or horns. This output can be steady, pulsed, or temporal depending upon the Bell Action specified in Output Options. Terminal 6 is the ground reference for the bell circuit. This supervised output detects 1k Ohms or less as normal. The indicating appliance can supply this resistance. If using a horn or siren, a 1k Ohm 1/2 W EOL resistor (provided) should be added across the bell circuit to provide supervision.

Keypad Bus

8.1 Description

XR100 Series panel terminals 7, 8, 9, and 10 are for the keypad bus. You can connect up to sixteen supervised keypads and multiple unsupervised keypads to the XR100 Series. In addition to DMP LCD keypads, you can also connect any combination of zone expansion modules to the data bus. Refer to the specific device Installation sheet for the maximum number of keypad Bus devices.

Refer to the section titled LX-Bus for complete information about the LX-Bus 4-pin header and expansion slot.

Note: Do not use shielded wire for LX-Bus/Keypad Bus circuits.

8.2 Terminal 7 - RED

This terminal supplies positive 12 VDC to power DMP LCD keypads and zone expansion modules. Terminal 7 also supplies power for any auxiliary device. The ground reference for terminal 7 is terminal 10.

The output current is shared with the smoke power output on terminal 11 and Zones 9 and 10. Current draw for all connected devices must not exceed the panel maximum current rating.

8.3 Terminal 8 - YELLOW

Terminal 8 receives data from keypads and zone expansion modules. It cannot be used for any other purpose.

8.4 Terminal 9 - GREEN

Terminal 9 transmits data to keypads and zone expansion modules. It cannot be used for any other purpose.

8.5 Terminal 10 - BLACK

Terminal 10 is the ground reference for DMP LCD keypads, zone expansion modules, and all auxiliary devices being powered by terminal 7.

8.6 J8 Programming Connection

A 4-pin header (J8) is provided to connect a keypad when using a DMP Model 330 Programming Cable. This provides a quick and easy connection for panel programming.

You may also use the J8 Programming Header to connect Keypad Bus devices. This is an alternative to connecting keypad bus devices to terminals 7, 8, 9, and 10.

8.7 OVC LED

The Overcurrent LED (OVC) lights Red when the devices connected to the Keypad Bus and LX-Bus(es) draw more current than the panel is rated for. The OVC is located above Outputs 1 and 2 on the panel and turns a steady Red when lit. When the OVC LED lights Red, the LX-Bus(es) and Keypad bus are shut down.

Smoke and Glassbreak Detector Output

9.1 Terminals 11 and 12

Terminal 11 supplies positive 12 VDC to power 4-wire smoke detectors and other powered devices. This output can be turned off by the user for 5 seconds using the Sensor Reset User Menu option to allow latched devices to reset. Terminal 12 is the ground reference for terminal 11. See LT-0164 for a list of approved 4-wire smoke detectors and power supervision relays.

9.2 Current Rating

The Output current from terminal 11 is shared with terminals 7, 25, and 27.



The total current draw of all devices powered from the panel must be included with terminal 11 calculations and must not exceed the maximum output rating.

Protection Zones

10.1 Terminals 13–24

Zones 1 to 8 (terminals 13 to 24) on the XR100 Series panel are all grounded burglary zones. For programming purposes, the zone numbers are 1 through 8. Listed below are terminal 13 to 24 connection functions.

Terminal	Function	Terminal	Function
13	Zone 1 voltage sensing	19	Zone 5 voltage sensing
14	Ground for Zones 1 and 2	20	Ground for Zones 5 and 6
15	Zone 2 voltage sensing	21	Zone 6 voltage sensing
16	Zone 3 voltage sensing	22	Zone 7 voltage sensing
17	Ground for Zones 3 and 4	23	Ground for Zones 7 and 8
18	Zone 4 voltage sensing	24	Zone 8 voltage sensing

The voltage sensing terminal measures the voltage across a 1k Ohm End-of-Line resistor to ground. Use DMP Model 311 1k Ohm resistors. Dry contact sensing devices can be used in series (normally-closed) or in parallel (normally-open) with any of the burglary protection zones.

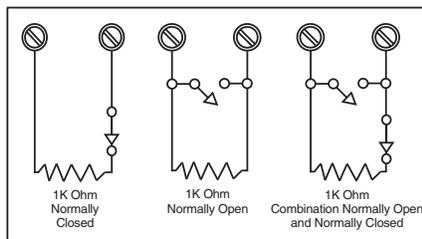


Figure 4: Protection Zone Wiring

10.2 Operational Parameters

Each protection zone detects three conditions: Open, Normal, and Short. Listed below are voltage and resistance parameters for each condition:

Condition	Resistance on zone	Voltage on positive terminal
Open	over 1300 ohms	over 2.0 VDC
Normal	600 to 1300 ohms	1.2 to 2.0 VDC
Short	under 600 ohms	under 1.2 VDC

10.3 Zone Response Time

A condition must be present on a zone for 500 milliseconds before it is detected by the XR100 Series panel. Ensure detection devices used on the protection zones are rated for use with this delay. Zones 1-10 can also be programmed for a fast response delay of 160 milliseconds.

10.4 Keyswitch Arming Zone

Using a keyswitch on an Arming type zone allows you to arm and disarm selected areas without having to enter a user code.

Powered Zones for 2-Wire Smoke Detectors

11.1 Terminals 25–26 and 27–28

Panel terminals 25 through 28 provide two resettable Class B, Style A, 2-wire powered zones. For programming purposes the zone numbers are 9 and 10.

Note: The maximum wire length for either zone 9 or zone 10 is 3000 feet using 18 AWG or 1000 feet using 22 AWG.

When using 725 Zone Expansion Modules, use UL Listed Model 316 EOL resistors. The UL compatibility identifier for the zones using 725 Zone Expansion Modules is B. When using all other zone expansion modules, use UL Listed Model 309 EOL resistors. The UL compatibility identifier for the zones is A.

Note: Do not mix detectors from different manufacturers on the same zone.



Caution: Performing a Sensor Reset momentarily drops power to the devices on Zones 9 and 10. The panel views these zones (9 and 10) as “Open” while the power is absent.

11.2 Compatible 2-Wire Smoke Detector Chart

Manufacturer	Model	Detector ID	Base	Base ID	DC Voltage Range	# of Detectors (12V/24V)	Zone Expansion Modules	Panel Zones
Detection Systems	DS230, DS230F	B/A	MB2W, MB2WL	A	8.5-33	10	725	
Detection Systems	DS250, DS250TH	B	MB2W, MB2WL	A	8.5-33	10/12	715, 715-8, 715-16, 725	9 & 10
Detection Systems	DS250HD	B	MB2W, MB2WL	A	8.5-33	10	715, 715-8, 715-16	9 & 10
Detection Systems	DS260	B/A	MB2W, MB2WL	A	8.5-33	17	725	
Detection Systems	DS282, DS282TH, DS282THC, DS282THS	B			8.5-33	10/12	715, 715-8, 715-16, 725	9 & 10
Hochiki	SLR-835B-2 SLR-835BH-2	HD-6	N/A		8-35	14	725	
Hochiki	SLR-24, SLR-24H	HD-3	NS4-220	HB-3	15-33	15	725	
Hochiki	SIJ-24, DCD-190, DCD-135	HD-3	NS4-220	HB-3	15-33	15	725	
Hochiki	SLR-24, SLR-24H	HD-3	NS6-220	HB-3	15-33	15	725	
Hochiki	SIJ-24	HD-3	NS6-220	HB-3	15-33	20	725	
Hochiki	DCD-190, DCD-135	HD-3	NS6-220	HB-3	15-33	16	725	
Sentrol/ESL	429AT, 521B, 521BXT, 521NB, 521NBXT	S09A			6.5-20	12	715, 715-8, 715-16	9 & 10
Sentrol/ESL	429C, 429CT, 521B/BXT	S10A			8.5-33	12	725	
Sentrol/ESL	429CRT, 429CST, 429CSST, 521CRXT	S11A			8.5-33	12	725	
Sentrol/ESL	711U, 712U, 713-5U, 713-6U, 721U, 721UT	S10A	701E, 70-1U, 702E, 702U	S00	8.5-33	12	725	
Sentrol/ESL	731U, 723U	S11A	701E, 701U, 702E, 702U, 702RE, 702RU	S00	8.5-33	12	725	
System Sensor	1400	A			8.5-35	10	715, 715-8, 715-16	9 & 10
System Sensor	1151, 2151	A	B110PL, B401		8.5-35	10/10	715, 715-8, 715-16, 725	9 & 10
System Sensor	1451, 2451TH	A	B401, B401B		8.5-35	10	715, 715-8, 715-16	9 & 10
System Sensor	1451DH	A	DH400		8.5-35	10	715, 715-8, 715-16	9 & 10
System Sensor	2100T, 2100B, 2100TB, 2100D, 2100TD	A			8.5-35	10	715, 715-8, 715-16	9 & 10
System Sensor	2400, 2400AT, 2400AIT, 2400TH	A			8.5-35	10	715, 715-8, 715-16	9 & 10
System Sensor	2451	A	B401, B401B, DH400		8.5-35	10	715, 715-8, 715-16	9 & 10
System Sensor	2W-B, 2WT-B	A			8.5-35	10	715, 715-8, 715-16	9 & 10
System Sensor	DH100P, DH100LP	A			8.5-35	10	715, 715-8, 715-16, 725	9 & 10

Figure 5: Compatible 2-Wire Smoke Detectors

Dry Contact Relay Outputs

12.1 Description

The XR100 Series panel provides two auxiliary SPDT relays when equipped with two DMP Model 305 relays in sockets K6 (Output 1) and K7 (Output 2) and a Model 431 Output Harness on the J2 4-pin Header. Each relay provides one SPDT set of contacts that can be operated by any of the functions listed below:

- 1) Activation by zone condition: Steady, Pulsing, Momentary, and Follow
- 2) Activation by 24-hour 7-day schedule: One on and one off time a day for each relay
- 3) Manual activation from the DMP LCD keypad menu
- 4) Communication failure
- 5) Armed area annunciation
- 6) Fire Alarm or Fire Trouble
- 7) Ambush Alarm
- 8) Exit and Entry timers
- 9) System Ready
- 10) Late to Close

Refer to the XR100 Series Programming Guide (LT-0896) for specific information.

12.2 Contact Rating

The Model 305 relay contacts are rated for 1 Amp at 30 VDC resistive. You can connect auxiliary power to the Relay Output 1 common terminal by installing the gray harness wire to terminal 7. Current draw for all connected devices must not exceed the panel maximum current rating.

12.3 Model 431 Output Harness Wiring

The relay contacts are accessible by installing the DMP 431 Output Harness on the 4-pin header labeled J2. Output 2 uses the top three prongs, and output 1 uses the bottom three prongs. The wire harness and contact locations are shown below:

Contact	Color
Output 1 normally closed	Violet
Output 1 common	Gray
Output 1 normally open	Orange
Output 2 normally closed	Violet with white stripe
Output 2 common	White with gray stripe
Output 2 normally open	Orange with white stripe

The relay contacts must be connected to devices located within the same room as the XR100 Series panel.

Annunciator Outputs

13.1 Description

The four annunciator outputs can be programmed to indicate the activity of the panel zones or conditions occurring on the system. Annunciator **outputs do not provide a voltage but instead switch-to-ground** a voltage from another source. The outputs can respond to any of the conditions listed in section 12.1 above.

13.2 Model 300 Harness Wiring

Access the open collector outputs by installing DMP 300 Harness on the 4-pin header labeled J11. The output locations are shown below. For UL applications, devices connected to the outputs must be located within the same room as the panel.

Output	Color	Wire	Output	Color	Wire
3	Red	1	5	Green	3
4	Yellow	2	6	Black	4

13.3 Model 860 Relay Module

Connect a Model 860 Relay Module to the J11 on the XR100 Series panel to provide relays for outputs 3-6. Use these relays for electrical isolation between the alarm panel and other systems or for switching voltage to control various functions. Power is supplied to the relay coils from a single wire connected to the panel auxiliary power terminal 7. The module includes one relay and provides three additional sockets for expansion of up to four relays. Mount the 860 inside the panel enclosure using the 3-hole pattern and plastic standoffs. Refer to the 860 Module Install Sheet (LT-0484) as needed.

Relay Contact Rating: 1 Amp at 30 VDC

J23 6-Pin Header

14.1 Description

The XR100 Series Command Processor™ panel supports Direct Programming, LX-Bus, and, DMP Wireless operation. These operations cannot function at the same time. Install a jumper on one pair of J23 headers to indicate how the panel is programmed to operate. Refer to the table below when installing a jumper on J23. When a jumper is installed or moved on the 6-pin header, briefly reset the panel using the J16 jumper to activate the selected operation.

Note: The Direct Programming, LX-Bus operation, and DMP Wireless operations cannot be used at the same time.

J23 6-pin Header	
Letter	Operation
R	Direct Programming
L	LX-Bus
X	DMP Wireless

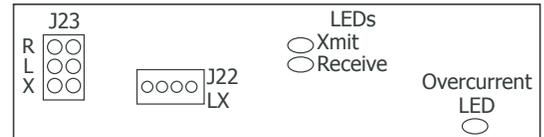


Figure 6: J23 6-pin Header

J22 LX-Bus Expansion Connector

15.1 Description

The XR100 Series Command Processor™ Panel supports one LX-Bus circuit that provides 100 expansion zones, DMP Wireless that provides 100 wireless zones, or direct connect programming. Enable J22 LX-Bus Header to use the 100 expansion or wireless zones.

15.2 J22 LX-Bus Header

Note: The LX-Bus, DMP Wireless, and Direct Programming operations cannot be used at the same time.

For each connection, respect wire colors when connecting devices and use all four wires. After placing the jumper on the J23 6-Pin header to enable the required operation, briefly reset the panel using the J16 jumper to activate operation.

Wireless Bus Operation: Place a jumper on the two pins next to the letter “X” on the J23 6-Pin header. When using J22 as a wireless bus, connect a DMP Model 300 4-wire Harness to the J22 4-pin header labeled LX. Connect the other end to the J3 header on the 1100X Wireless Receiver. This provides up to 100 wireless zones numbered 500 to 599. Refer to the 1100X Wireless Receiver Install Guide (LT-0708).

LX-Bus Operation: Place a jumper on the two pins next to the letter “L” on the J23 6-pin header. When using J22 as an LX-Bus, connect a DMP Model 300 4-wire Harness to the J22 6-pin header labeled LX. This provides 100 LX-Bus zones numbered 500-599.

Note: Do NOT use shielded wire when using the LX-Bus.

Direct Programming Operation: Place a jumper on the two pins next to the letter “R” on the J23 6-Pin header. When using J22 as a direct programming port, connect a the 4-wire connector from DMP Model 399 Harness to the J22 4-pin header labeled LX. Connect the Model 399 DB-9 connector onto an RS-232 port on a Laptop computer. This allows direct panel programming from the attached computer.

15.3 LX-Bus LEDs

The two LEDs, located near the bottom-right corner of J21 indicate data transmission and receipt. The top LED flashes green to indicate the panel is transmitting LX-Bus data. The bottom LED flashes yellow to indicate the panel is receiving LX-Bus data.

15.4 OVC LED

The Overcurrent LED (OVC) lights Red when the devices connected to the Keypad Bus and LX-Bus(es) draw more current than the panel is rated for. The OVC is located above Outputs 1 and 2 on the panel and turns a steady Red when lit. When the OVC LED lights Red, the LX-Bus(es) and Keypad bus shut down.

J1 Ethernet Connector (XR100N only)

16.1 Description

The J1 Ethernet Connector is available on the XR100N Network version to connect directly to an Ethernet network using a standard patch cable.

16.2 Ethernet LEDs

The two LEDs, located to the left of J1 Ethernet Connector, indicate network operation. The top, Link LED flashes green to indicate the network traffic is good. The bottom, Activity LED flashes yellow to indicate messages are being sent and received.

 


Figure 7: J1 Header and LEDs

J3 Telephone RJ Connector

17.1 Description

Connect the panel to the public telephone network by installing a DMP 356 RJ Cable between the panel J3 connector and the RJ31X or RJ38X phone jack.

17.2 J10 893A Connector

Connect an 893A Dual Phone Line Module to J10 on the XR100 Series. Refer to the 893A Installation Sheet (LT-0135) for complete information.

17.3 Notification

The user must not repair registered terminal equipment. In case of trouble, immediately unplug the device from the telephone jack. The factory warranty provides for repairs. Registered terminal equipment may not be used on party lines or in connection with coin telephones. Notify the telephone company with the following information:

- a. The particular line(s) where the service is connected
- b. The FCC registration number as listed in Section 18.1
- c. The ringer equivalence
- d. The device make, model, and serial number

17.4 Phone Line Monitor

The XR100 Series panel has a built-in telephone monitor that monitors the phone line voltage to verify the connection to the central office. Figure 9 and the table below identify the phone block pin layout, wire numbers, and colors.

Wire Number	Wire Color
1	Gray
2	Orange
3	Black
4	Red
5	Green
6	Yellow
7	Blue
8	Brown

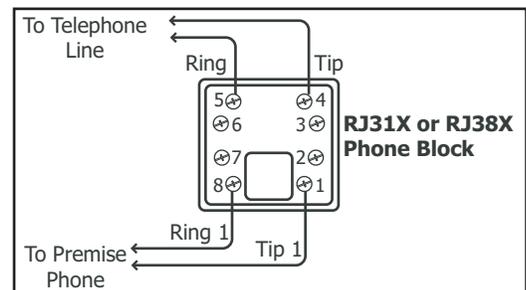


Figure 8: Phone Jack Wiring

The wires on the RJ31 that feed pins 4 and 5 should be the ONLY wires on the D-marc. All other house phone wiring should be tied to pins 1 and 8 coming back from the RJ31.

Dial tone must come into RJ31X on pins 4 and 5 and go back to house phones from pins 1 and 8. Follow these steps to determine if panel is seizing the line:

1. Unplug phone cord from RJ31X
2. Place butt-set on pins 4 and 5
3. Listen for dial tone. With dial tone present, lift either wire from pins 1 or 8
4. Listen for dial tone again. If the dial tone is present, RJ31X wiring is correct. If no dial tone is present, the RJ31X wiring is backwards. Rewire so dial tone is coming IN on 4 and 5.

If you still have trouble with the phone line, you may need to replace the RJ cord. If the dial tone is still not present, swap out the RJ31X phone block.

17.5 FCC Registration

The Model XR100 Series complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the outside of the enclosure of this equipment is a label that contains, among other information, a product identifier in the format US:CCKAL00BXR500. If requested this number must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. See installation instructions for details.

The Ringer Equivalence Number (REN) is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

If the XR100 Series causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with the Model XR100 Series, for repair or warranty information, please contact DMP at the address and telephone number listed on the back of this document. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

If your premises has specially wired alarm equipment connected to the telephone line, ensure the installation of the XR100 Series does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

Caution: To ensure proper operation, this equipment must be installed according to the installation instructions in this manual. To verify that the equipment is operating properly and can successfully report an alarm, this equipment must be tested immediately after installation, and periodically thereafter, according to the test instructions in this document and the XR100 Series Programming Guide (LT-0896). Additionally, verification of Line Seize capability should be made immediately after installation, and periodically thereafter, in order to ensure that this equipment can initiate a call even when other equipment (telephone, answering system, computer modem, etc.) connected to the same line is in use.

Reset and Tamper Headers

18.1 J16 Reset Header

The reset header is located just above the terminal strip on the right side of the circuit board and is used to reset the XR100 Series microprocessor. To reset the panel when first installing the system, install the reset jumper before applying power to the panel. After connecting the AC and battery, remove the reset jumper.

To reset the panel while the system is operational, for example, prior to reprogramming, install the reset jumper without powering down the system. Remove the reset jumper after one or two seconds.

After resetting the panel, begin programming within 30 minutes. If you wait longer than 30 minutes, you must reset the panel again.

18.2 J4 Tamper Header

The J4 header is for use with the optional DMP 306 Tamper Harness. The harness connects to one or more tamper switches mounted inside the panel enclosure to supervise against unauthorized enclosure opening or removal. Refer to the wiring diagram on the enclosure door for correct tamper switch wiring.

How the Tamper Works

If the enclosure is opened or removed while one or more of the system areas are armed, a panel tamper alarm is indicated. If all areas are disarmed, a panel tamper trouble is indicated.

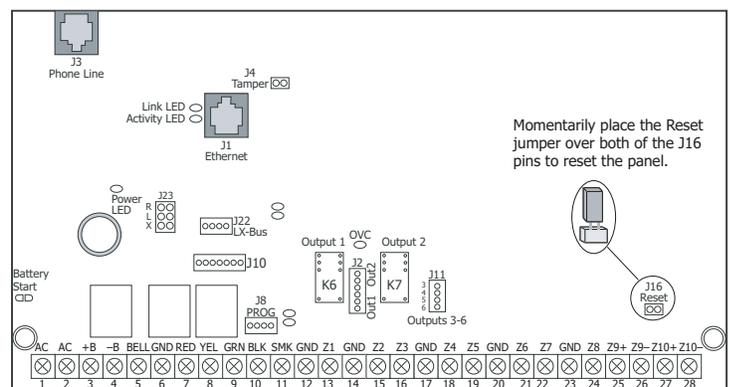


Figure 9: XR100 Series Panel Showing the Reset Jumper

Universal UL Burglary Specifications

19.1 Introduction

The programming and installation specifications contained in this section must be completed when installing the XR100 Series panel in accordance with any of the UL burglary standards. Additional specifications may be required by a particular standard.

19.2 Wiring

All wiring must be in accordance with NEC, ANSI/NFPA 70, UL 681, and UL 827 for all burglary installations. All transformer wires must be installed in conduit.

19.3 Control Outside of Protected Area

A Potter EVD or Sentrol 5402 should be used in place of a lined cabinet when the panel is installed outside of the protected area. Front and rear tamper switches are required. Refer to the system wiring diagram and Figure 2.

19.4 Police Station Phone Numbers

The digital dialer telephone number programmed for communication must not be a police station phone number.

19.5 Bypass Reports

The Bypass Reports option must be programmed as YES for all UL burglary applications. See the XR100 Series Programming Guide (LT-0896).

19.6 System Maintenance

To ensure continuous satisfactory operation of any alarm system, proper installation and regular maintenance by the installing alarm company and frequent testing by the end user is essential. Offering a maintenance program and acquainting the user with the correct procedures for system use and testing is also the responsibility of the installing alarm company.

19.7 UL Listed Receivers

UL has verified operation with the DMP SCS-1 and SCS-1R, Sur-Gard SG-HLR2-DG, FBII CP220PB, Osborne-Hoffman Quick-Alert, and Radionics D6500 receivers. It is the installer's responsibility to verify compatibility between the XR100 Series and the receiver used during installation. The installer shall verify the compatibility of the receiver and the system on a yearly basis.

19.8 Power Supply Supervision

For commercial burglary applications the power supply for all local bells shall be under 24-hour protection. Refer to section 6 in this document.

19.9 Wireless Tamper

The Zone Information Disarmed Open Message to Transmit must be programmed Trouble (T). See the XR100 Series Programming Guide (LT-0896). (Not applicable to UL 1023.)

19.10 Wireless External Contact

When used, the External Contact of 1101 or 1102 must be programmed Normally Closed. XR100 Series Programming Guide (LT-0896).

19.11 Wireless Supervision Time

The Zone Information Supervision Time cannot be set to 0 (zero). XR100 Series Programming Guide (LT-0896).

19.12 Detect Wireless Jamming

The Detect Wireless Jamming option must be programmed YES. See the XR100 Series Programming Guide (LT-0896). (Not applicable to UL 1023.)

Area Information

20.1 Ownership

The control unit system shall be under one ownership.

20.2 Annunciation

The System shall be installed so that when arming any area from any keypad, the local bell shall annunciate.

20.3 Trouble Display

The Status List programming shall be set to annunciate all trouble messages at all keypads. See the XR100 Series Programming Guide (LT-0896).

20.4 Closing Wait

The Closing Wait option must be programmed YES. See the XR100 Series Programming Guide (LT-0896).

20.5 Local Bell Supervision

When a local bell is employed, the power supply for the bell shall be under 24-hour protection. Proper personnel for maintenance or security of the system shall be able to disarm that area.

UL 1023 Specifications

Household Burglar-Alarm System Units

21.1 Audible Devices

At least one listed audible device (Ademco AB12M) rated to operate over the voltage rate of 11.7 VDC to 12.8 VDC and rated at 85 DB minimum must be used.

21.2 Auxiliary Circuits

At least one burglary alarm initiating device shall be used on the system. If the voltage for the device is applied by the control unit the burglary alarm initiating device shall be rated to operate over the range of 11.5 VDC to 12.7 VDC.

21.3 Bell Cutoff

The Bell Cutoff time cannot be less than five minutes. See the XR100 Series Programming Guide (LT-0896).

21.4 Entry Delay

The maximum entry delay used must not be more than 45 seconds. See the XR100 Series Programming Guide (LT-0896).

21.5 Exit Delay

The maximum exit delay used must not be more than 60 seconds. See the XR100 Series Programming Guide (LT-0896).

21.6 Weekly Test

The product should be tested weekly.

UL 1610 AND 1076 Specifications

Central-Station and Proprietary Burglar-Alarm Units

22.1 Opening/Closing Reports

The Opening/Closing Reports option must be programmed as YES. See the XR100 Series Programming Guide (LT-0896).

22.2 Closing Wait

The Closing Wait option must be programmed YES. See the XR100 Series Programming Guide (LT-0896).

22.3 Entry Delay

The maximum entry delay used must not be more than 60 seconds when using the Model 350A Grade A Attack Resistant Housing. See the XR100 Series Programming Guide (LT-0896).

22.4 Exit Delay

The maximum exit delay used must not be more than 60 seconds. See the XR100 Series Programming Guide (LT-0896).

22.5 Proprietary Dialer

The Model XR100 Series provides Grade A proprietary service when configured as a digital dialer.

22.6 Grade B Central Station

Grade B Central Station service can be provided under by adding a Grade A Ademco AB12M bell and bell housing and placing the Model XR100 Series panel into the Model 350A Grade A Attack Resistant Housing.

22.7 Bell Cutoff

The Bell Cutoff time cannot be less than 15 minutes. See the XR100 Series Programming Guide (LT-0896).

22.8 AA High Line Network Security

High Line Security is provided when configured as a NET system using an XR100N panel. The NET Check-in time must be set from 01 to 06 minutes or AA. When programmed for UL AA (UL High Line Security) Exit Time Restart is disabled. When a dialer is required for 06 minute check-in time, an attack resistant enclosure (DMP Model 350A) is required. When the check-in time is set to a number less than 200 seconds, an attack resistant enclosure is not required. See sections 3.2, 3.2.1, and 3.3 of the XR100 Series Programming Guide (LT-0896).

The Model XR100 Series Protected Premises Control Unit is suitable for Grade AA service when configured for NET communication with SCS-1/SCS-1R receiving system. This configuration is approved for the following:

AMCX - Central Station Alarm Units

APOU - Proprietary Alarm Units

UL 636 Specifications

Holdup Alarm Units

23.1 UL 1610 Required

The programming and installation specifications contained in this section must be completed in addition to UL 1610 Specifications when installing a Model 1142 with a Model XR100 Series panel.

23.2 1100X Wireless Receiver

The Model 1100X Wireless Receiver in conjunction with the Model 1142 Holdup Alarm Transmitter must be installed in the system.

23.3 Wireless Supervision Time

The Zone Information Supervision Time must be a maximum of 60 minutes. See the XR100 Series Programming Guide (LT-0896).

23.4 LED Display

The LED Operation option display must be set to NO when using a Model 1142 Holdup Alarm Transmitter. See the XR100 Series Programming Guide (LT-0896).

23.5 Jamming Detection

The Detect Wireless Jamming option must be set to YES. See the XR100 Series Programming Guide (LT-0896).

23.6 Local Alarm

The Bell Action for a PN (Panic) type zone must be programmed as N (None). See the XR100 Series Programming Guide (LT-0896).

23.7 Message to Transmit

The Armed Open and Armed Short messages for a PN (Panic) type zone must be programmed to A (Alarm). See the XR100 Series Programming Guide (LT-0896).

UL 1635 Specifications

Digital Burglar Alarm Communicator System Units

24.1 System Trouble Display

The Status List Display must include at least one keypad that displays system monitor troubles. See the XR100 Series Programming Guide (LT-0896).

24.2 Digital Dialer Telephone Number

Both programmed telephone numbers must begin with a P. See the XR100 Series Programming Guide (LT-0896).

24.3 Test Time

The Test Time option must be programmed so that the XR100 Series sends a report once every 24 hours. See the XR100 Series Programming Guide (LT-0896).

24.4 Closing Wait

The Closing Wait option must be programmed YES. See the XR100 Series Programming Guide (LT-0896).

UL 365 Specifications

Police Station Connected and Local Burglar Alarm Units and Systems

25.1 System Trouble Display

The Status List Display must include at least one keypad that displays system monitor troubles. See the XR100 Series Programming Guide (LT-0896).

25.2 Entry Delay

The maximum entry delay used must not be more than 60 seconds when using the Model 350A Grade A housing. See the XR100 Series Programming Guide (LT-0896).

25.3 Exit Delay

The maximum exit delay used must not be more than 60 seconds. See the XR100 Series Programming Guide (LT-0896).

25.4 Grade A Bell

A Grade A local audible signal appliance must be used such as Ademco AB12M bell and bell housing.

25.5 Bell Cutoff

The Bell Cutoff time cannot be less than 15 minutes. See the XR100 Series Programming Guide (LT-0896).

25.6 Automatic Bell Test

The Automatic Bell Test option must be programmed as YES. See the XR100 Series Programming Guide (LT-0896).

25.7 Line Security for Police Connect

Basic line security is provided when the Model XR100 Series is configured as a dialer system.

25.8 AA High Line Network Security

High Line Security is provided when configured as a NET system using an XR100N panel. The NET Check-in time must be set from 01 to 06 minutes or AA. When programmed for UL AA (UL High Line Security) Exit Time Restart is disabled. When a dialer is required for 06 minute check-in time, an attack resistant enclosure (DMP Model 350A) is required. When the check-in time is set to a number less than 200 seconds, an attack resistant enclosure is not required. See sections 3.2, 3.2.1, and 3.3 of the XR100 Series Programming Guide (LT-0896).

UL 609 Specifications

Police Station Connected and Local Burglar Alarm Units and Systems

26.1 Grade A Mercantile

For Grade A Mercantile and Police Station Connect operation the Model XR100 Series must be mounted in a Grade A Attack Resistant Housing, (DMP Model 350A).

26.2 Entry Delay

The maximum entry delay used must not be more than 60 seconds when using the Model 350A Grade A housing. See the XR100 Series Programming Guide (LT-0896).

26.3 Exit Delay

The maximum exit delay used must not be more than 60 seconds. See the XR100 Series Programming Guide (LT-0896).

26.4 Mercantile Safe and Vault

When the DMP Model 350A housing is used, the XR100 Series provides operation as a mercantile safe and vault alarm. Bell Supervision and wiring must be in accordance with UL 681. When the XR100 Series is mounted outside the safe or vault, tamper protection and the Sentrol Model 5402 or Potter EVD listed vibration detectors should be used.

26.5 Grade A Bell

A Grade A local audible signal appliance must be used such as Ademco AB12M bell and bell housing.

UL 294 Specifications

Access Control System Units

27.1 Panel Designation

The XR100 Series panels are designated stand alone units.

27.2 Tamper Protection

For UL Listed Access Control installations, a tamper switch must be used.

27.3 Compatible Devices

The following devices are compatible with the XR100 Series panels.

Access Control	
733 Wiegand Interface Module	Proximity reader connector
734 Wiegand Interface Module	Proximity reader connector
OP-08CB Motion Detector	Infrared sensor
* PB-2 REX Button	Exit control push button
PP-6005B Proxpoint Plus® Reader	Proximity reader
MP-5365 Miniprox® Reader	Slimline proximity reader
PR-5455 ProxPro® II Reader	Long range reader with sounder
MX-5375 Maxi-Prox™ Reader	Long range reader compatible with 1351 Prox Pass
* This device has not been investigated by UL and shall not be used in UL installations.	

Universal UL and NFPA Fire Alarm Specifications

28.1 Introduction

The programming and installation specifications contained in this section must be completed when installing the Model XR100 Series in accordance with any of the UL or NFPA fire standards. Additional specifications may be required by a particular standard.

28.2 Wiring

All wiring must be in accordance with NEC, ANSI/NFPA 70.

28.3 Transformer

A wire-in transformer should be used. Use the Model 322 wire-in 16 VAC 56 VA transformer or Model 327 plug-in 16 VAC 50 VA transformer installed inside an ES501 Enclosure with all wiring in conduit. The transformer must be mounted within 20 feet of the panel and connected by conduit.

28.4 End-of-Line Resistor

The DMP Model 310 1k Ohm EOL resistor should be used on all 1k Ohm EOL fire zones.

28.5 System Trouble Display

The Status List Display must include at least one keypad that displays system monitor troubles. See the XR100 Series Programming Guide (LT-0896).

28.6 Fire Display

The Status List Display must include at least one keypad that displays troubles and alarms on fire type zones. See the XR100 Series Programming Guide (LT-0896).

28.7 Police Station Phone Number

The digital dialer telephone number programmed for communication must not be a police station phone number, unless that phone number is specifically provided for that purpose.

28.8 System Maintenance

To ensure continuous satisfactory operation of any alarm system, proper installation and regular maintenance by the installing alarm company and frequent testing by the end user is essential. Offering a maintenance program and acquainting the user with the correct procedures for system use and testing is also the responsibility of the installing alarm company.

28.9 Audible Alarm

Fire Type zones should be programmed to activate an audible alarm. The Bell Action for Fire Type zones should not be programmed as "N". See the XR100 Series Programming Guide (LT-0896).

28.10 Fire Zone Programming

If a retard delay is used on a waterflow zone, it cannot exceed 90 seconds and any retard delay in the waterflow initiating devices must be subtracted from the 90 seconds allowed. See the XR100 Series Programming Guide (LT-0896). The retard delay should not be used on a zone with smoke detectors.

28.11 Style D Zones

If required, the DMP 869 Dual Style D Initiating Module provides for connection of two Style D zones to the Model XR100 Series. See the 869 Installation Guide (LT-0186) and sections 20.2 and 28.2 of this guide for wiring information.

28.12 Video Option

The Video option must be selected as NO when any fire protection is connected to the XR100 Series. See the XR100 Series Programming Guide (LT-0896).

28.13 UL Listed Receivers

Use the DMP SCS-1/SCS-1R (SDLC), Sur-Gard SG-HLR2-DG (CID), FBII CP220PB (CID), and Osborne-Hoffman Quick-Alert (CID) receivers.

28.14 Wireless External Contact

When used, the External Contact of 1101 or 1102 must be programmed Normally Closed. See the XR100 Series Programming Guide (LT-0896).

28.15 Wireless Supervision Time

The Zone Information Supervision Time must be 3 minutes. See the XR100 Series Programming Guide (LT-0896).

28.16 Wireless Fire Verification

When used, the Model 1161 and 1162 wireless smoke detectors must not be programmed as Fire Verification (FV) zone type. See the XR100 Series Programming Guide (LT-0896).

UL 864 NFPA 72 (Chapter 9) Specifications

Control Units for Fire-Protective Signaling Systems

29.1 Zone Restoral Reports

The Restoral Reports option must be selected as YES or Disarm. See the XR100 Series Programming Guide (LT-0896).

29.2 Power Fail Delay

The Power Fail Delay option must be selected as required by the service of the panel. For Central Station service: 6-12, for Remote Station service: 12-15. See the XR100 Series Programming Guide (LT-0896).

29.3 Sprinkler Supervisory

Any zone used for sprinkler supervisory must be programmed with "SPRINKLR XXX" as the zone name. The last three characters in the zone name may be assigned a number to identify the zone. The Model 893A Dual Phone Line Module must be used on all sprinkler supervisory systems.

29.4 DACT Systems

Two phone lines must be used. The two phone lines cannot be ground start or party lines. The 893A Dual Phone Line Module is used to provide two phone line connections to the system. The 2ND Phone Line communication option must be selected as DD. See the XR100 Series Programming Guide (LT-0896).

Two different phone numbers must be programmed for digital communication. See the XR100 Series Programming Guide (LT-0896). The Test Time option must be programmed so that the XR100 Series sends a report every 24 hours. See the XR100 Series Programming Guide (LT-0896).

29.5 Local Protective Signaling Systems

The DMP Model 865, 866, or 867 Notification Circuit Module must be used on the bell circuit for detection of shorts and grounds. See sections 33.1 to 33.2 in this guide for wiring diagrams. Model 790 series keypads that are used to display troubles for local fire alarm systems must be installed within a DMP Model 777 with 777S 1.0" spacer. Any burglary or other off premises communication must be done with the Model 893A Dual Phone Line Module. For local commercial fire installations, the 893A is required.

29.6 Remote Station Protective Signaling Systems

You must provide 60 hours of standby battery. See section 6.9 in this guide for standby battery calculations. Two Radionics Model D127 Reversing Relay Modules provide two reversing polarity telephone connections. See the D127 Installation Instruction sheet for wiring details. A DMP Model 893A is used to provide two line dialer communication.

29.7 Fire Protective Signaling Systems using Internet/Intranet Networks

The XR100N Command Processor™ Panel must be programmed as described below for Fire Protective Signaling Systems using NET Communication Type.

- UL AA must be programmed as NO
- SUB CODE must be programmed as YES
- CHECKIN must be programmed as 1
- RETRY TIME must be programmed as 1
- FAIL TIME must be programmed as 1
- NET TRBL must be programmed as YES

29.8 Combination Systems

For combination fire and burglary systems, powered burglary devices (PIR, Glassbreak, etc.) must be powered from a separate UL Listed power supply (DMP Model 505-12). This requirement is not needed for non-powered burglary devices (door contacts, etc.) which only connect to the zone input of zone expanders or keypads. Refer to 33.7 Powered Burglary Devices later in this document.

UL 985 NFPA 72 (Chapter 2) Specifications

Household Fire Warning System Units

30.1 Bell Output Definition

The Model XR100 Series panel Bell Output must be programmed to operate steady on burglary alarms and pulsed or temporal on fire alarms. See the XR100 Series Programming Guide (LT-0896).

30.2 Audible Devices

At least one listed audible device rated to operate over the voltage rate of 11.7 VDC to 12.8 VDC and rated at 85 DB minimum must be used.

30.3 Auxiliary Circuits

At least one fire alarm initiating device shall be used on the system. If the voltage for the device is applied by the control unit the fire alarm initiating device shall be rated to operate over the range of 11.5 VDC to 12.7 VDC.

30.4 Bell Cutoff

The Bell Cutoff time cannot be less than five minutes. See the XR100 Series Programming Guide (LT-0896).

30.5 Detect Wireless Jamming

The Detect Wireless Jamming option must be programmed YES. See the XR100 Series Programming Guide (LT-0896).

California State Fire Marshal Specifications

31.1 Bell Output Definition

The Model XR100 Series panel Bell Output must be programmed to operate steady on burglary alarms and pulsed, temporal, or California School Code on fire alarms. See the XR100 Series Programming Guide (LT-0896).

New York City (MEA) Specifications

32.1 Introduction

The programming and installation specifications contained in this section must be completed when installing the XR100 Series panel for New York City (MEA) fire alarm installations that provide a digital dialer with network IP communication as backup. Fire alarm installations that use two digital dialer telephone lines do not need to comply with these specifications.

32.2 Digital Dialer and Network Communication

When used with a central office communicator or a transmitter, the installation and operation of the equipment and devices shall comply with 3RCNY 17-01. The installation shall employ the digital dialer as the primary communicator (using telephone line) with network IP communication as backup or secondary means of communication. It shall have the capability of transmitting separate and distinct signals to indicate manual pull station alarm, automatic detection alarm, sprinkler waterflow alarm, supervisory signal indications and trouble indications.

32.3 Wiring

All wiring must be in accordance with NEC, ANSI, and NFPA 70. All network cabling must be installed in accordance with NFPA 70 for communication circuits.

32.4 Communication Programming

For digital dialer communication with supervised network backup, program the following:

COMM TYPE = NET

SECOND LINE = DD

RECEIVER 1

ALARMS = YES

FIRST PHONE NUMBER = Central Station Receiver Phone Number

RECEIVER 2

ALARMS = YES

FIRST PHONE NUMBER = Central Station Receiver Phone Number

See the XR100 Series Programming Guide (LT-0896).

32.5 Additional Requirements

Program and install the equipment to comply with NFPA basic fire requirements. Refer to the Universal UL and NFPA Fire Alarm Specifications and UL 864 NFPA 72 (Chapter 9) Specifications earlier in this document.

False Alarm Reduction Programmable Options *

33.1 Shipping Defaults and Recommended Programming for ANSI/SIA CP-01-2000

SIA CP-01 FEATURE PARAGRAPH # AND DESCRIPTION	DMP XR100 SERIES PROGRAMMING GUIDE LT-0896 SECTION #	REQUIREMENT	RANGE	SHIPPING DEFAULT	RECOMMENDED PROGRAMMING*
4.2.2.1 Exit Time	14.2 Exit Delay	Required (Programmable)	45 sec. - 250 sec.	60 Seconds	60 Seconds
4.2.2.2 Progress Annunciation	14.2 Exit Delay	Allowed	Individual keypads may be disabled per zone	All keypads enabled	All keypads enabled
4.2.2.3 Exit Time Restart	14.2 Exit Delay	Required Option	For re-entry during exit time	Enabled	Enabled
4.2.2.5 Auto Stay Arm on Unvacated Premises	32.3 Occupied Premise - See XR100 Series Install Guide (LT-0681)	Required Option (except for remote arming)	Area 1 = Perimeter Area 2 = Interior	Enabled	Enabled for Residential Applications
4.2.4.4 Exit Time and Progress Annunciation/ Disable - for Remote Arm	Not Available on Remote Arming	Allowed Option	Progress Annunciation Always disabled for Remote Arming	Not Available	Remote Arming not allowed for CP-01 installations.
4.2.3.1 Entry Delay(s)	8.3 Entry Delay	Required (Programmable)	30 sec. - 240 Sec. **	30 Seconds	At least 30 Seconds **
4.2.5.1 Abort Window - for Non-Fire Zones	3.7 Transmit Delay	Required Option	Disable by zone or zone type	Enabled NT DY EX Zone	Enabled
4.2.5.1 Abort Window Time - for Non-Fire Zones	3.7 Transmit Delay	Required (Programmable)	15 sec. - 45 sec. **	30 Seconds	At least 15 Seconds **
4.2.5.1.2 Abort Annunciation	3.7 Transmit Delay	Required Option	Annunciate that no alarm was transmitted (S45)	Yes	Yes
4.2.5.4.1 Cancel Annunciation	Always Enabled - Not Programmable	Required Option	Annunciate that a Cancel was transmitted (S49)	Always Enabled	Yes
4.2.6.1 & 4.2.6.2 Duress Feature	User Code + 1 = Ambush Code Not Available	Allowed Option	No 1 + derivative of another user code/no duplicates with other user codes	Code +1 Always Disabled	Not Programmable
4.3.1 Cross Zoning	15.21 Cross Zone	Required Option	Yes/No Zone Programming	No	Enabled using two or more programmed zones
4.3.1 Programmable Cross Zoning Time	8.4 Cross Zone Time	Allowed	4 sec. - 250 sec.	4 Seconds	Per walk path in protected premises
4.3.2 Swinger Shutdown	8.7 Swinger Bypass Trips	Required (Programmable)	For all non-fire zones, shut down at 1 or 2 trips	One (1) trip	One (1) trip
4.3.2 Swinger Shutdown Disable	15.15 Swinger Bypass	Allowed	For non-police response zones	Yes	Enabled (all zones)
4.3.3 Fire Alarm Verification	15.4 Zone Type	Required Option	FV Type Zone	No	Yes as required (unless sensors can self verify)
4.5 Call Waiting Cancel	3.19 Telephone Number	Required Option	Include *70P in Telephone Number	Disabled	Enabled if user has call waiting

* Programming at installation may be subordinate to other UL requirements for the intended application.

** For UL Installations, combined Entry Delay and Transmit Delay should not exceed 1 minute.

False Alarm Reduction Programmable Options (continued)

33.2 Call Waiting (ANSI/SIA CP-01-2000)

The Call Waiting default setting is disabled. To cancel the Call Waiting feature, program * (star) 7 0 P (pause), the standard telephone code prefix that cancels call waiting, into the telephone number string. Cancel Call Waiting for telephone lines that have Call Waiting operational on the telephone line. See the XR100 Series Programming Guide (LT-0679).



Caution: A call waiting cancel programmed on a non-call waiting telephone line, would prevent communication to the central station.

33.3 Occupied Premise (ANSI/SIA CP-01-2000)

When only two areas are used, and area one is named Perimeter, and area two is named Interior, and no exit type zone transition occurs during the exit delay because the premise continues to be occupied, the Interior area will automatically disarm at the end of the exit delay.

33.4 Entry Delay (ANSI/SIA CP-01-2000)

Only use Entry Delay 1. Do not use Entry Delay 2, 3, or 4. See the XR100 Series Programming Guide (LT-0896).

33.5 Minimum Installation Requirements (ANSI/SIA CP-01-2000)

SIA CP-01-2000 minimum system installation requirements include an XR100 Series, a UL listed local Bell, and off premise DACT communication to an SCS-1R receiver plus one of the following compatible keypads.

- 630F Fire Command™ Center
- 690/690F, 790/790F Security Command™ keypads
- 693/793 Easy Entry™ keypads
- 7060, 7063, 7070, or 7073 Thinline™ keypads
- 7060A, 7063A, 7070A, or 7073A Aqualite™ keypads
- 7760 Clear Touch™ keypad


Underwriters Laboratories Canada (ULC)

34.1 XR100 Series ULC Installations


For ULC installations in Canada, the models XR100, XR100N burglar alarm control communicators provide line security Level 3 for Local Area Networks, Corporate Intranets, and Private Networks.

Wiring Diagrams


35.1 Multiple Notification Circuit Modules

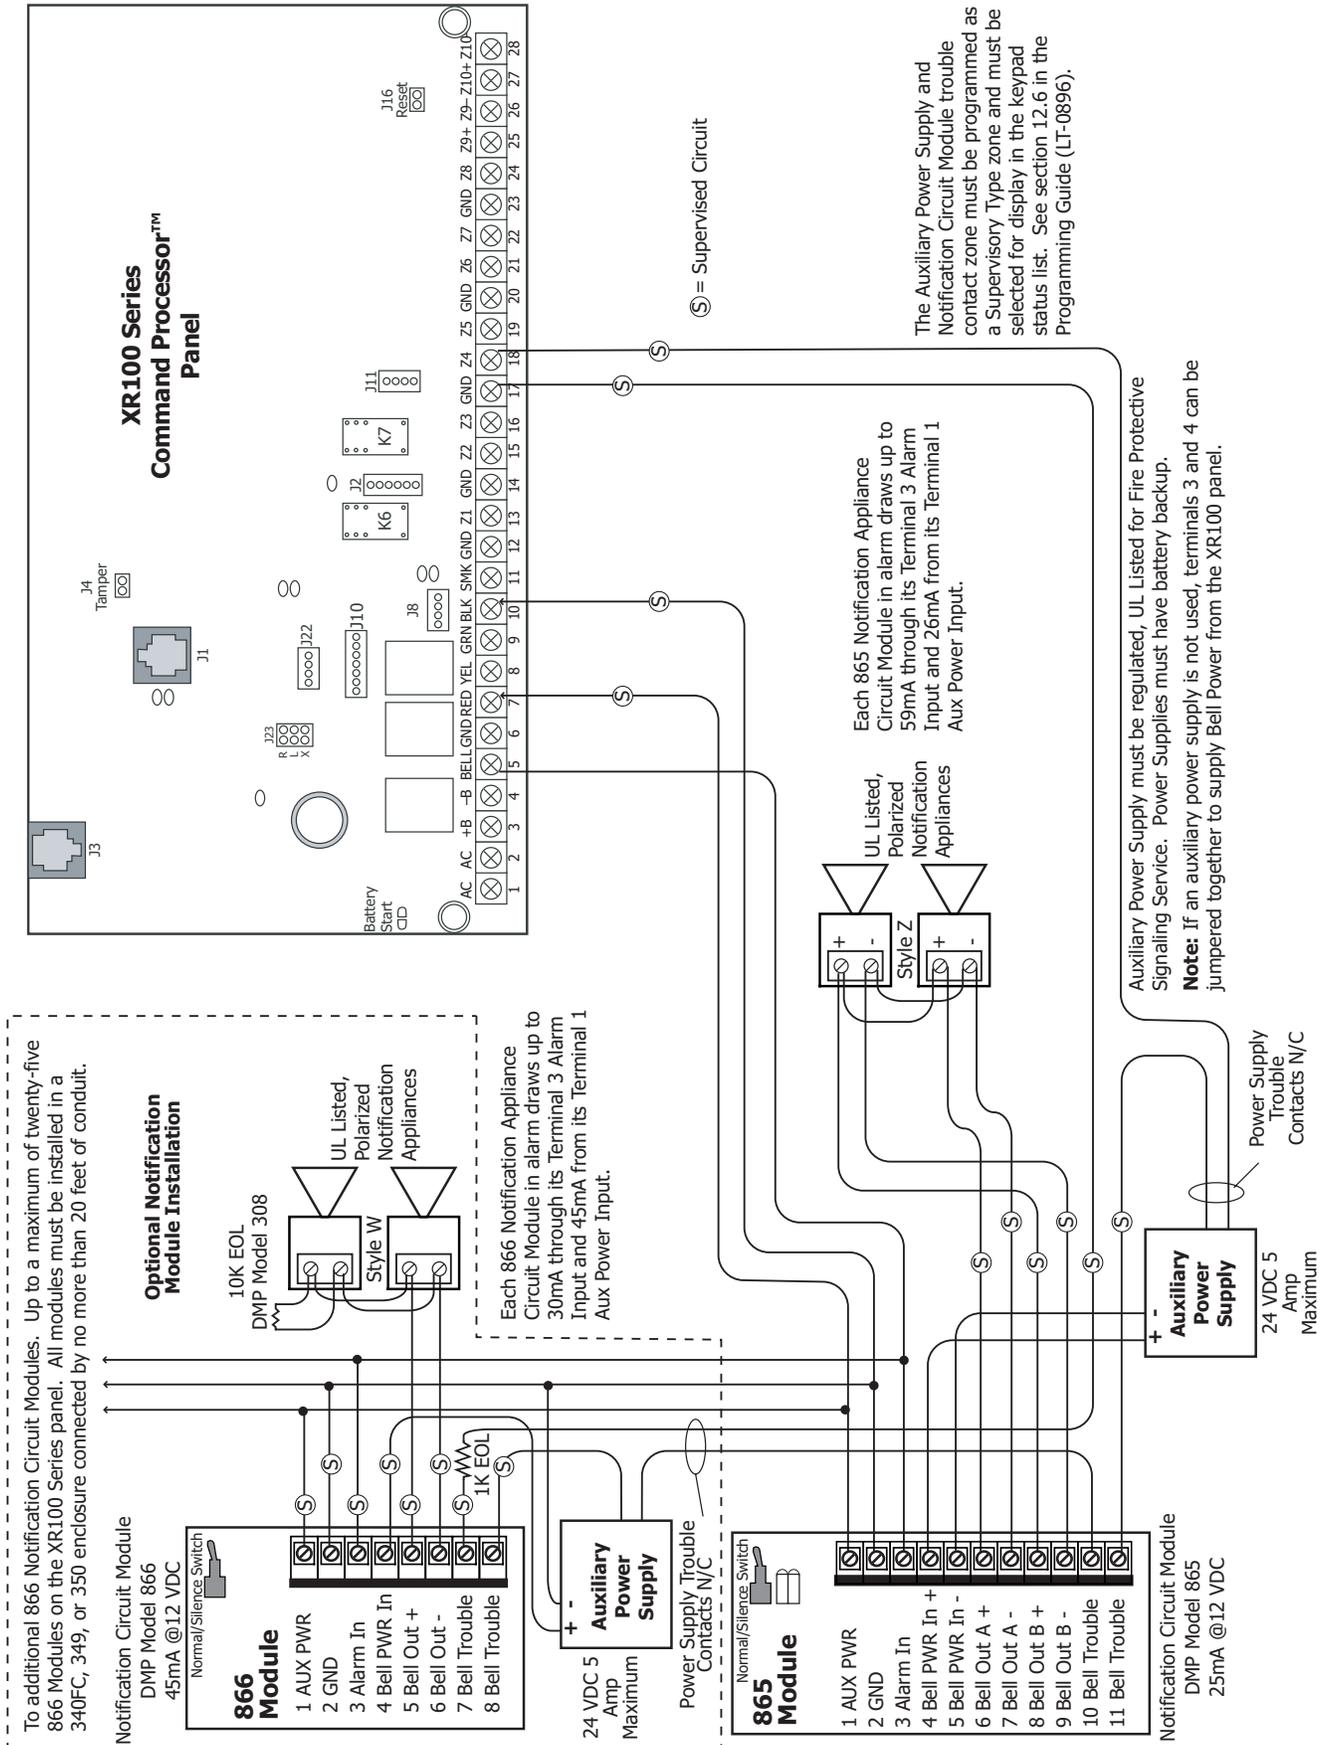

35.2 Multiple Notification Circuit Modules for Zoned Annunciation

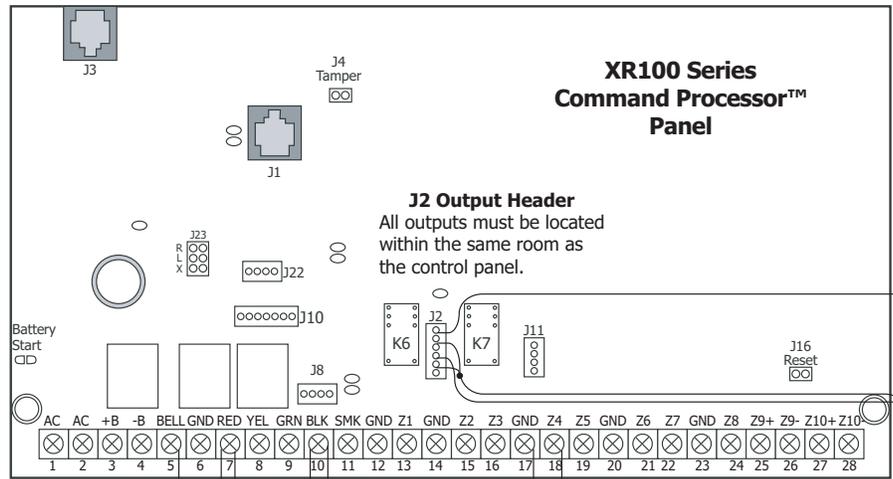

To additional Zone 1 Notification Circuit Modules.
Install up to a maximum of twenty-five 866 Modules by using the relay outputs available on the XR100 Series panel.
All modules must be installed in a 340FC, 349, or 350 Enclosure connected by no more than 20 feet of conduit.

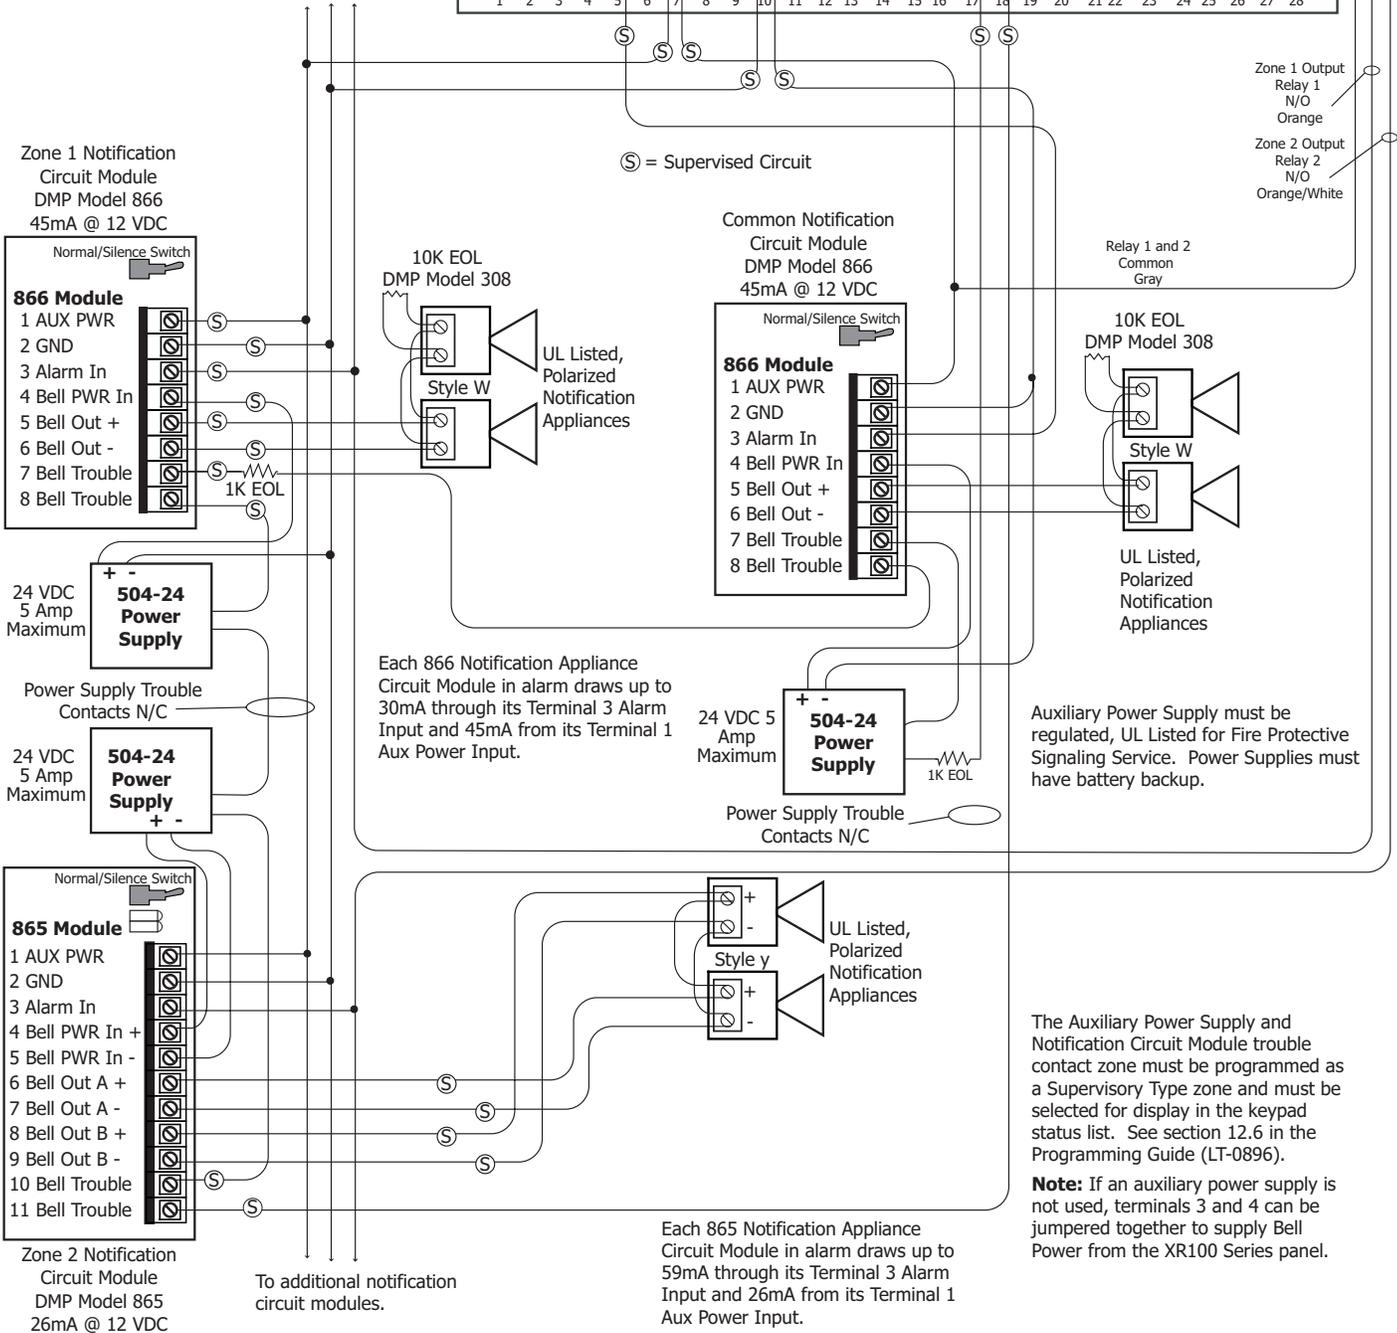


Auxiliary Power Supply must be regulated, UL Listed for Fire Protective Signaling Service. Power Supplies must have battery backup.

The Auxiliary Power Supply and Notification Circuit Module trouble contact zone must be programmed as a Supervisory Type zone and must be selected for display in the keypad status list. See section 12.6 in the Programming Guide (LT-0896).


Note: If an auxiliary power supply is not used, terminals 3 and 4 can be jumpered together to supply Bell Power from the XR100 Series panel.

WIRING DIAGRAMS

35.3 Dual Style D Zone Module Installation

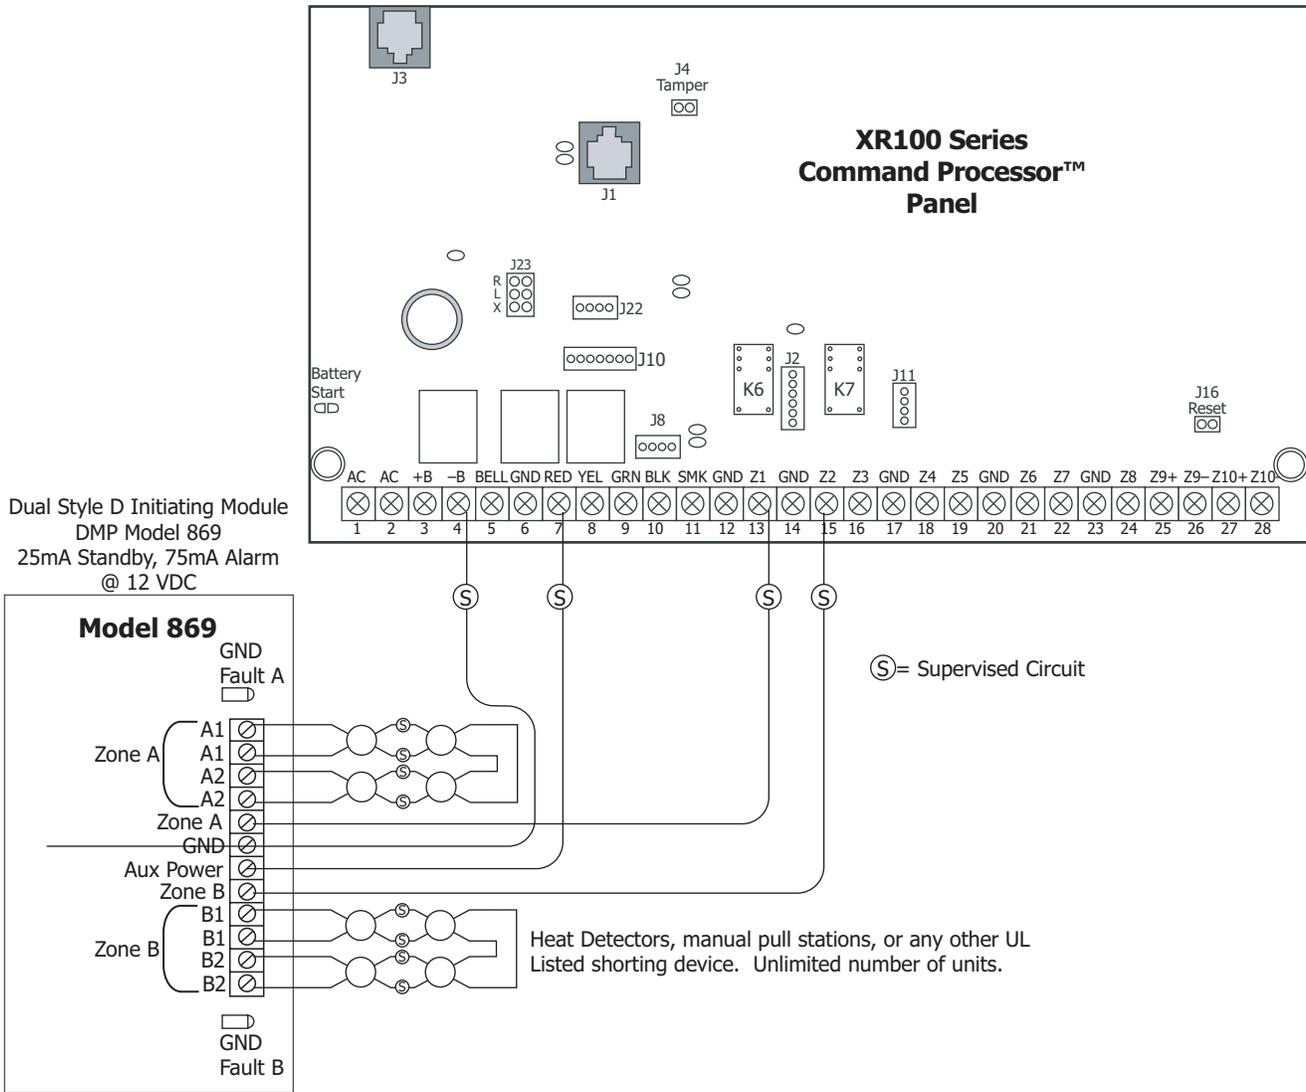

35.4 Cellular Backup Installation for Derived Channel Burglary

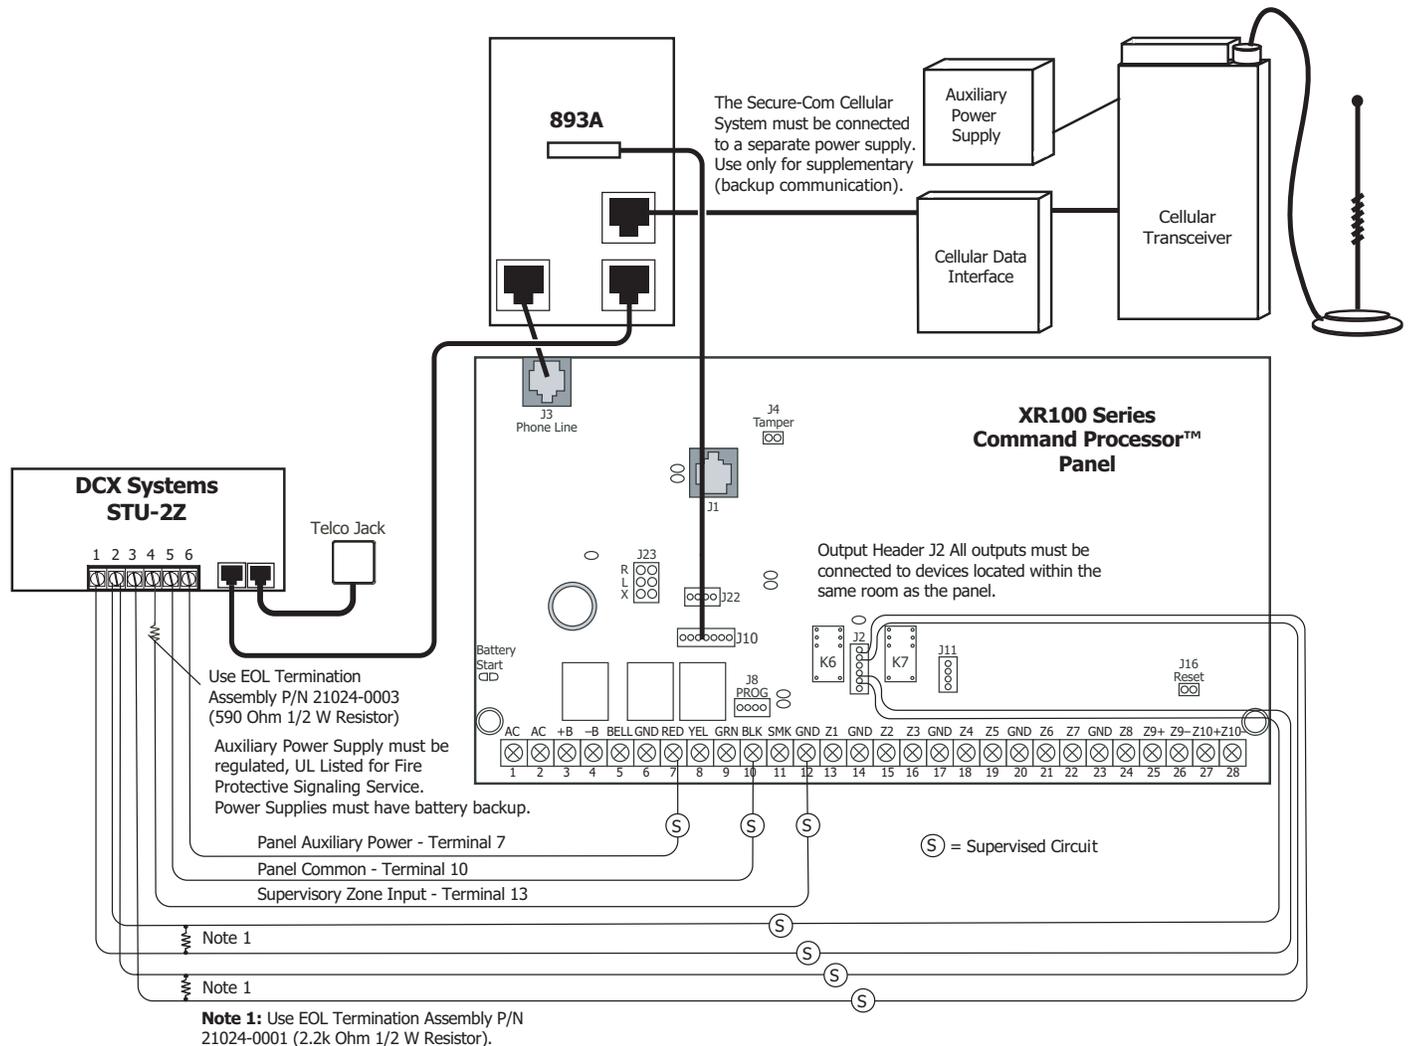

Interfacing STU-2Z/STU-4Z to the XR100 Series Panels

The STU-2Z or STU-4Z may only be used in conjunction with telephone systems that support DCX Systems Derived Channel multiplex network. The STU-2Z or STU-4Z can only be installed in a DMP Model 350 enclosure.

Burglary

The STU-2Z and STU-4Z are cross listed with the XR100 Series panels as an accessory for Grade AA Central Station Burglar Alarm. For Grade AA, the following conditions must be met:

- The panel must be installed and programmed to meet Grade A burglary alarm system requirements.
- The panel must be installed and programmed for reporting all alarm conditions through the integral DACT to the same central station that monitors the STU-2Z or STU-4Z.
- The STU-2Z or STU-4Z must be mounted in the panel enclosure and wired according to Section 32.4 above.
- Once installed, the central station must enable 2-minute off-hook polling of the STU-2Z or STU-4Z.

Supplementary Reporting (for Commercial Burglar Alarm Applications)

The two zones of the STU-2Z or the four zones of the STU-4Z may be used for supplementary reporting by meeting the following requirements.

1. Program Relay Output #1 for all alarm conditions that are required to report alarm on Zone 1 of the STU-2Z or STU-4Z.
2. Program Relay Output #2 for all alarm conditions that are required to report alarm on Zone 2 of the STU-2Z or STU-4Z.

3. Wire the normally-open terminals of Relay Output #1 to Terminal 1 of the STU-2Z or STU-4Z.
4. Wire the common terminal of Relay Output #1 to Terminal 2 of the STU-2Z or STU-4Z.
5. Wire the normally-open terminal of Relay Output #2 to Terminal 3 of the STU-2Z or STU-4Z.
6. Wire the common terminal of Relay Output #2 to Terminal 2 of the STU-2Z or STU-4Z.

Commercial Fire


When the XR100 Series panel is used as a Central Station Alarm Commercial Fire System with one telephone line, in conjunction with DCX Systems STU-2Z or STU-4Z, the following conditions must be met:

- The panel must be installed and programmed to meet commercial fire (reporting) systems requirements.
- The panel must be installed and programmed for reporting all alarm conditions and trouble conditions to the same central station that monitors the STU-2Z or STU-4Z.
- The STU-2Z or STU-4Z must be mounted in the panel enclosure and wired according to Section 32.4 above.
- Once installed, the central station must enable 2-minute off-hook polling of the STU-2Z or STU-4Z.

Installing the STU-2Z/STU-4Z into the DMP Model 350 Enclosure

The STU board is mounted in the left side of the DMP Model 350 enclosure by slipping the optional corner mounting bracket over the edge of the enclosure. Use DCX Part # 27074-002 (2Z) or Part # 27078-001 (4Z). Connect the STU power wires and telco cables to the panel terminals and RJ31X as shown in Section 32.4 above.

35.5 Derived Channel Installation Using Bosch D8122

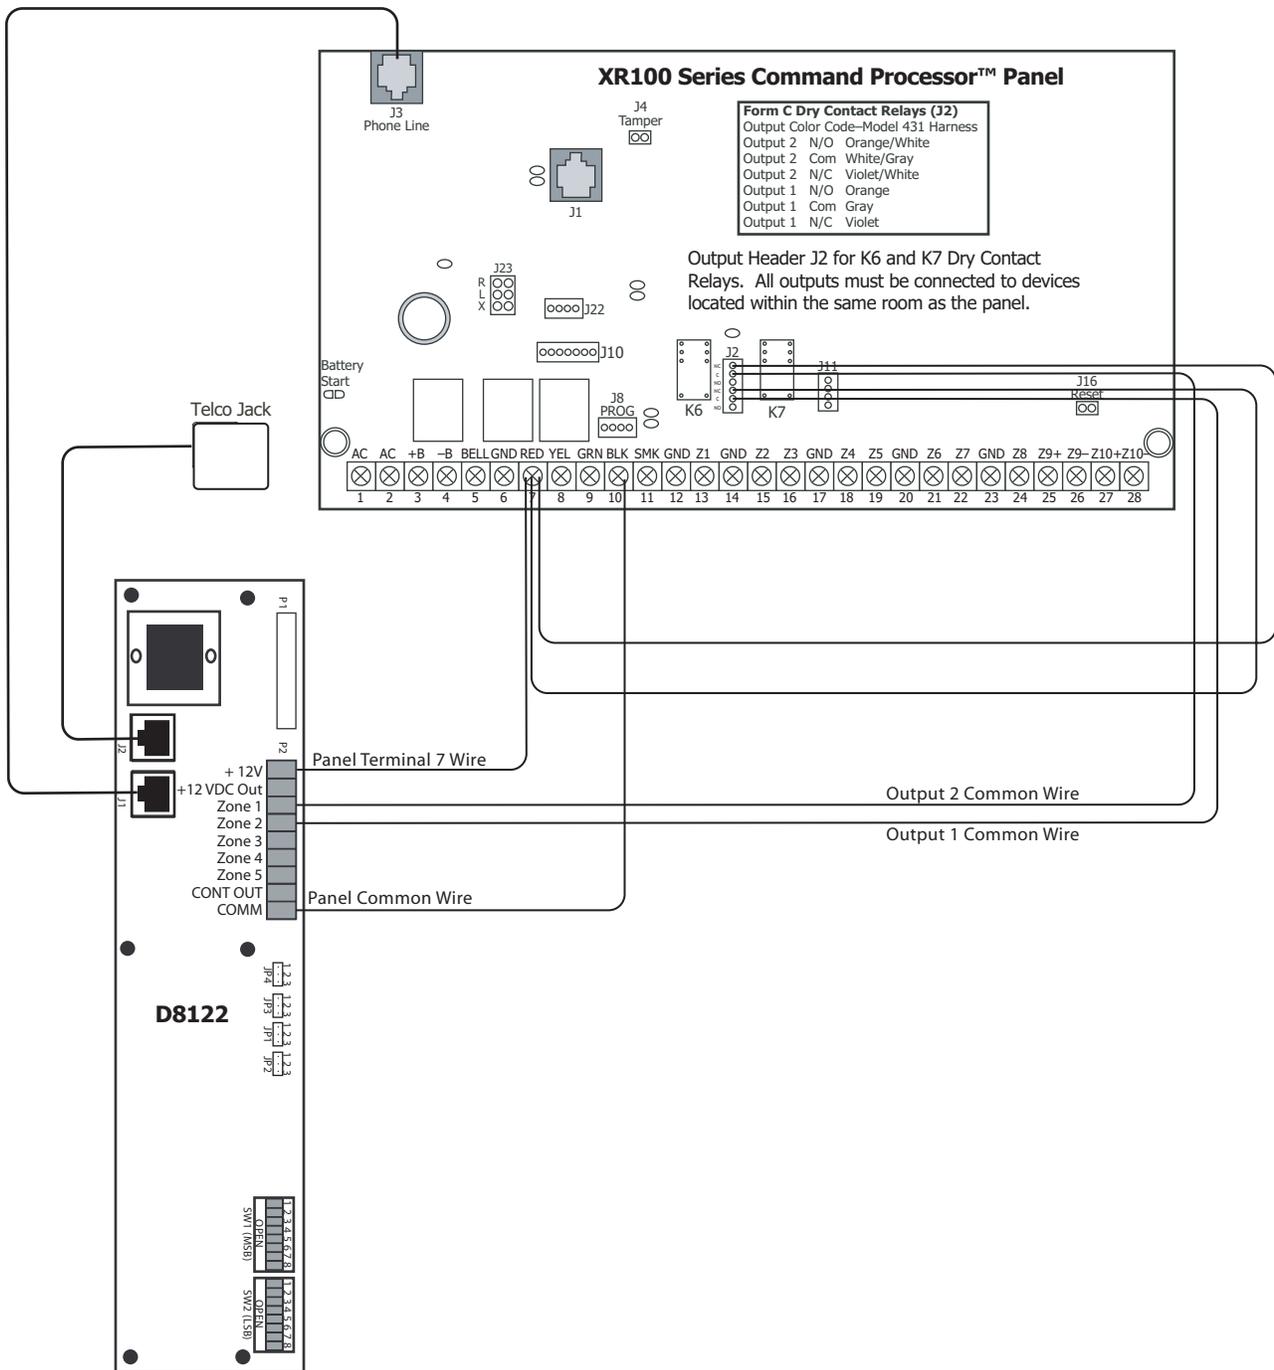


Interfacing D8122 to the XR100 Series Panels


The D8122 may only be used in conjunction with telephone systems that support Derived Channel network. For installation instructions, see the Derived Channel STUD8121A/D8122 Operation and Installation Guide.

- For UL High Line Security (ULAA) applications, the panel must be installed and programmed to meet Grade A burglary alarm system requirements.
- The panel must be installed and programmed for reporting all alarm conditions through the integral DACT or network connection to the same central station that monitors the D8122.
- The D8122 must be installed in the same enclosure as the XR100 Series panel using the supplied mounting hardware. Refer to the STUD8121A/D8122 Operation and Installation Guide.
- Derived Channel Communication is not applicable for ULC Canadian Installations.

35.7 Model 860 Relay Module Connection

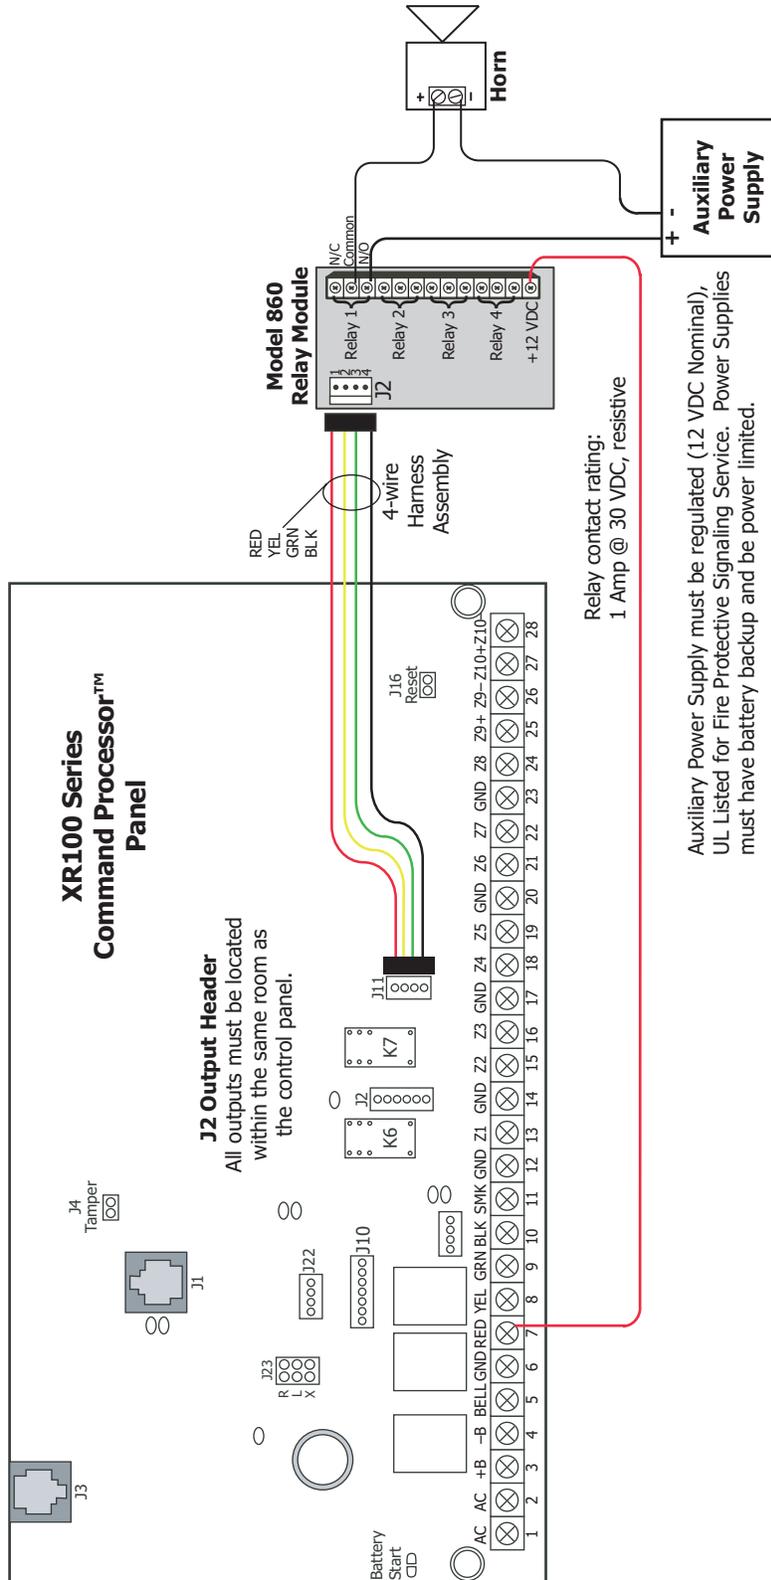

35.8 Powered Burglary Devices

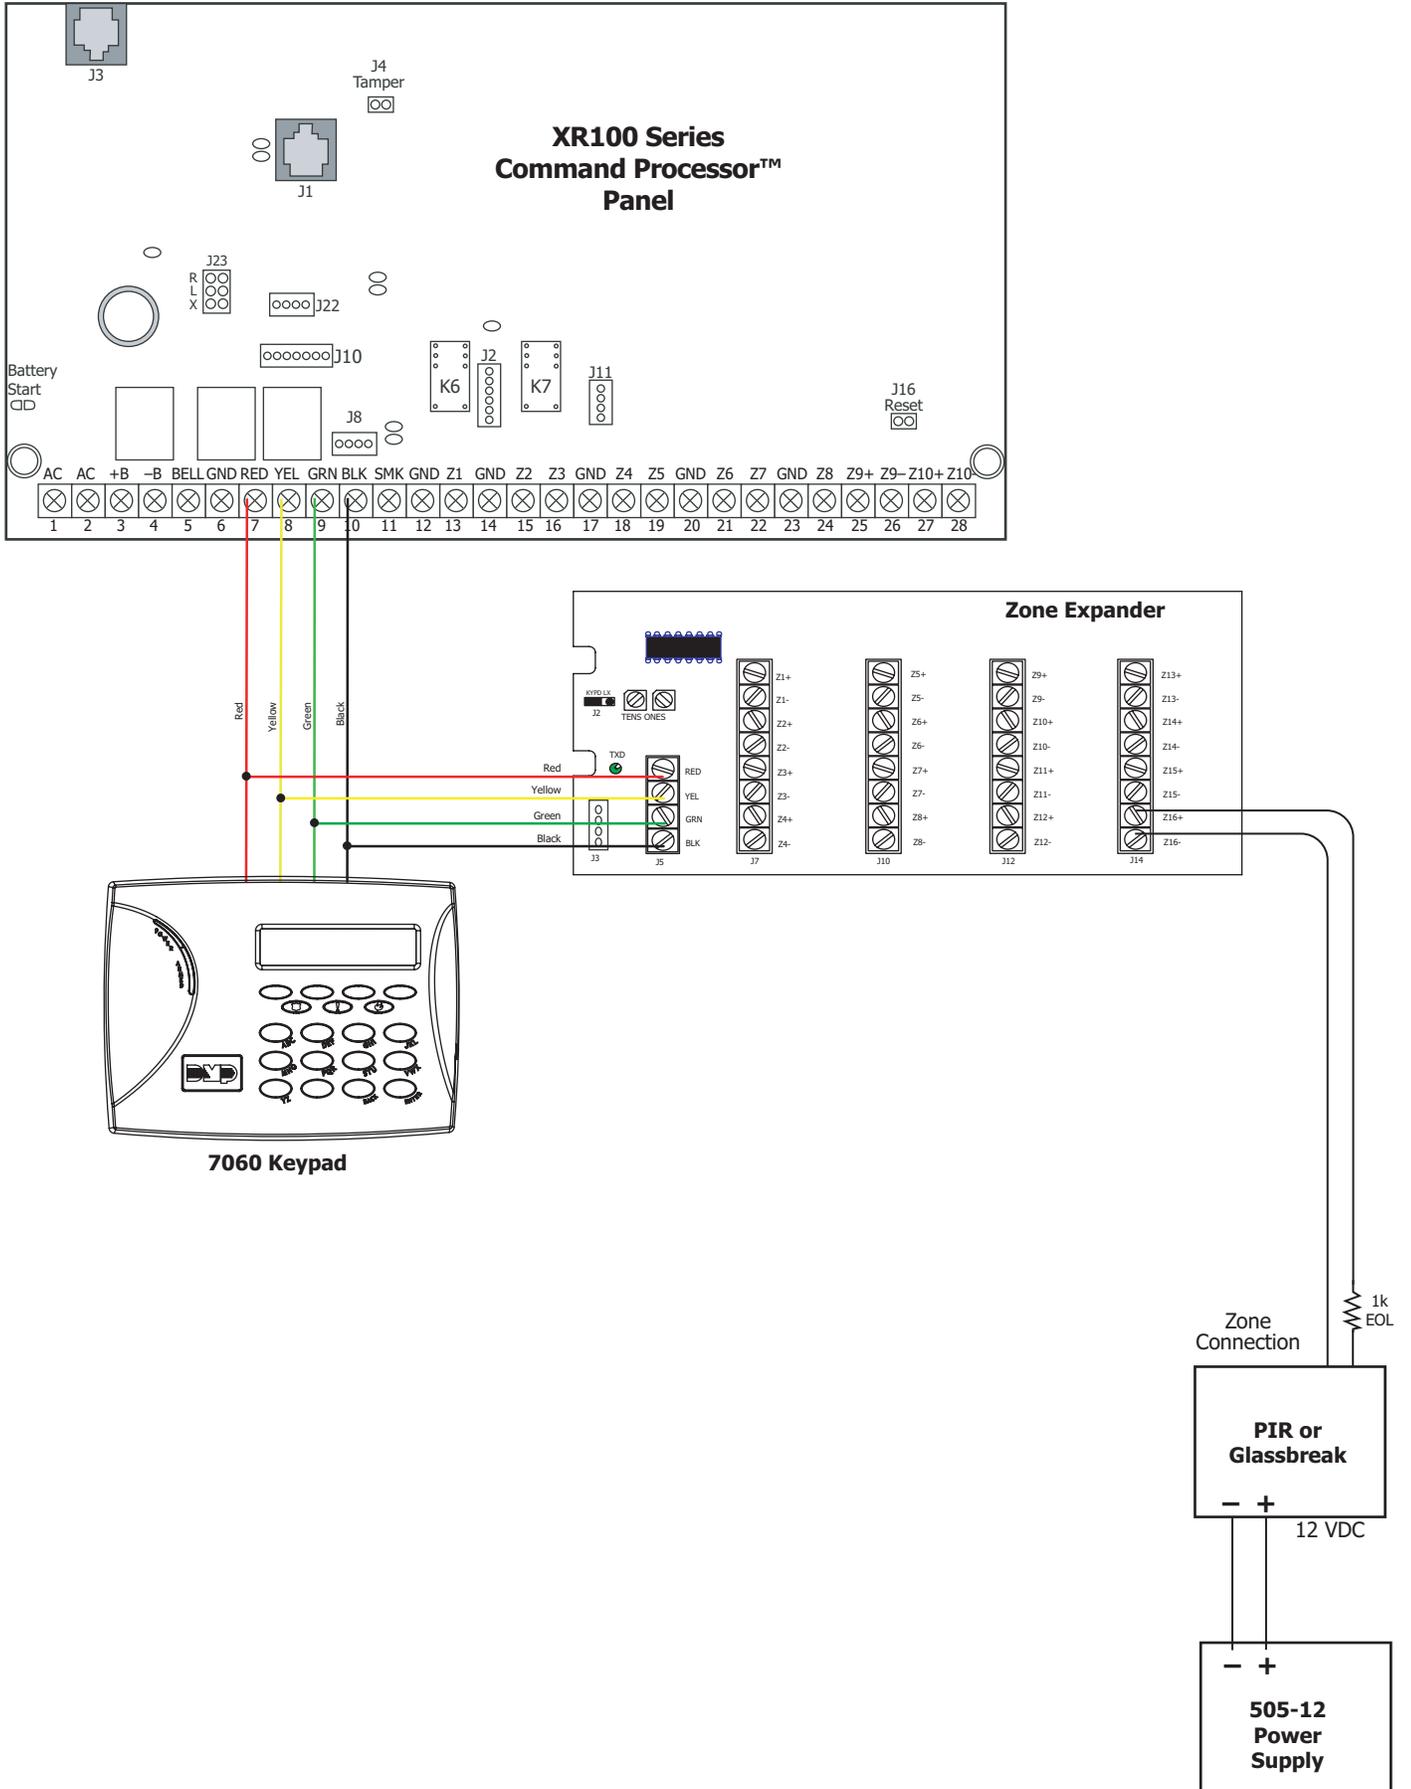

Listings and Approvals

Underwriters Laboratories (UL) Listed

- UL 294 Access Control System Units
- UL 365 Police Connected Burglar
- UL 609 Local Burglar
- UL 636 Holdup Alarm Units and Systems Accessory
- UL 1023 Household Burglar
- UL 1076 Proprietary Burglar
- UL 1610 Central Station Burglar
- UL 1635 Digital Burglar
- UL 985 Household Fire Warning
- UL 864 Fire Protective Signaling

UL AA High Line Security

Underwriters Laboratories Canada (ULC) Listed

- ULC 5545 Household Fire
- ULC Subject-C1023 Household Burglar
- ULC/ORD-C1076 Proprietary Burglar
- ULC S304 Central Station Burglar

ANSI/SIA CP-01-2000 False Alarm Reduction

California State Fire Marshall (CSFM)

FCC Part 15

FCC Part 68 Registration ID CCKAL00BXR500



800-641-4282

www.dmp.com

Made in the USA

INTRUSION • FIRE • ACCESS • NETWORKS

2500 North Partnership Boulevard

Springfield, Missouri 65803-8877

