

USER'S GUIDE

Applicable to the following remote(s)

2WG5R-900SH

| Remote | FCC ID Number (US Only) | IC ID Number (International Only) |
|---------------|-------------------------|-----------------------------------|
| 2WG5R - 900SH | VA5JR961A915 | 7087A-R961A915 |
| 1WG5R - 900SH | VA5JR961AM | 7087A-R961AM |

This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions;

(1) This device may not cause harmful interference.

(2) This device may accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Table Of Contents

| | |
|--|----|
| Introduction | 4 |
| Warranty Coverage | 4 |
| Quick Reference | 5 |
| • Valet Mode | 5 |
| • Remote Maintenance – Battery Replacement | 6 |
| • 2Way Remote Button Functions | 7 |
| • 1Way Remote Button Functions | 9 |
| Remote LED Functions and Descriptions | 11 |

| | |
|--|----|
| General System Functions | 12 |
| • Active Lock / Arm and Unlock / Disarm | 12 |
| • Passive Lock / Arm | 13 |
| • Automatic Transmission Remote Start Function | 13 |
| • Manual Transmission Remote Start Function (Reservation Mode) | 14 |
| • Trunk Release | 15 |
| • AUXiliary Output / Window Roll–Down / Sliding Doors | 16 |
| • Silent Arm / Disarm | 16 |

| | |
|---|----|
| Advanced System Functions | 17 |
| • Drive Lock / Ignition Controlled Door Locks | 17 |
| • Turbo Timer Mode | 17 |
| • 2 nd Car Mode (Multiple Vehicle Control) | 18 |
| • RPS (Remote Paging Sensor) Unlock / Disarm | 19 |
| • Secure Valet Switch | 20 |
| • Timer Start Mode | 21 |
| • Cold / Hot Start Mode | 21 |
| • Anti Jacking Mode | 21 |
| • More Optional Sensors | 21 |
| Remote Coding / Programming Routine(s) | 22 |
| • Programming 2Way 4Button Remotes | 22 |

Table Of Contents

| | |
|-------------------------------|----|
| Remote Start Error Diagnostic | 23 |
| Alarm Diagnostic | 24 |
| Limited Lifetime Warranty | 25 |
| Memo | 27 |

Introduction

Thank you for purchasing a Firstech system for your vehicle. In order to truly enjoy the benefits of this system, we recommend that you thoroughly review the following manual. Please note that this manual applies to the 2WG5R-900SH 2 Way - 4 Button LED Remote, regardless of whether you purchased the alarm only, starter only or alarm/starter combination. This manual also supports the 1WG5R-900SH 1 Way remotes that may be included with your system. There are certain features listed in this manual that may not be available for your system. There may also be features listed in this manual that require additional installation or programming before they are active.

Please note that this remote system has a 6 pin antenna plug and are not compatible with previous systems.

If you have any questions, please contact the original place of purchase. For further information you may also contact our customer support center by calling 888-820-3690.

Warranty Coverage

 **Caution:** The Manufacturer's warranty will be voided if this product is installed by anyone other than an authorized Firstech dealer. For complete warranty details visit www.compustar.com or the last page of this manual. Firstech remotes carry a 1 year warranty from original date of purchase.

Warranty registration can be completed online by visiting www.compustar.com. Please complete the registration form within 10 days of purchase. We do not include a mail in warranty registration card with each unit - registration must be done online. To verify that an authorized dealer installed your system, we highly recommend that you keep a copy of the original proof of purchase, such as the dealer invoice in a safe place.

Quick Reference

Valet Mode

When servicing or loaning your vehicle to others, the system should be placed in Valet Mode. Valet Mode prevents the system from remote starting and disables all alarm functions.

IMPORTANT: While in Valet mode the remote will still control power lock and unlock systems. The parking lights will not flash.

The system can be put into valet one of three ways:

1. Turn the vehicle's key to the ignition "on" position and tap buttons   +  simultaneously for 0.5 second. The parking lights will flash once and/or siren chirp once to confirm the system is in valet mode. Repeat this process to take the system out of valet mode. The parking lights will flash twice and/or siren chirp once to confirm the system is out of valet mode.
 2. If you do not have your remote control, you can put the system into valet by turning the ignition key "on" and then "off" five times within 7 seconds. The parking lights will flash once to confirm the system is in valet mode. Shortly after the first flash, the parking lights will flash twice. A remote control is required to take the system out of valet mode.
- IMPORTANT:** If your system is set up for a secure valet option, you will not be able to put the system into valet until the proper code has been entered to the secure valet switch.
3. If your system is set up for the secure valet option (optional), you will not be able to put the system into valet until the proper code has been entered to the secure valet switch. The secure valet switch is the small button with bright blue LED on the front and if installed is the only way to override the alarm and/or remote start. Until programmed, the default code is (3, 3).

Quick Reference

Remote Maintenance—Battery Replacement

The only regular maintenance this system requires is remote control battery replacement. No programming is required when replacing the battery.

Two Way Remotes:

First, remove the small Phillips screw located on the back of the remote. Once the screw has been removed, gently pull the remote apart taking care to not damage the circuit board. Your battery size should be listed on the battery. (Battery size: CR2450)

 
IMPORTANT: Be sure to observe correct polarity when installing the battery.

One Way Remotes:

First, remove the small Phillips screw located on the back of the remote. Once the screw has been removed, gently pull the remote apart taking care to not damage the circuit board. Your battery size should be listed on the battery. Replacements can be purchased from your local Firstech dealer or an electronics store.

Quick Reference

2 Way Remote Button Functions

| Button(s) | Duration | Function | LED | LED - 2nd Car Mode | Chirp(s) |
|---|-------------|---|------------------------------|--------------------------|---------------------|
|  | 0.5 second | Locks doors and/or arms alarm. | Amber | Red | Once |
| | 3.5 seconds | Panic/vehicle locator (flashes vehicle's parking lights and sounds siren and horn). | Green and Red | Green and Red | N/A |
|  | 0.5 second | Unlocks doors and/or disarms alarm. | Amber | Red | Twice |
|  | 0.5 second | Aux 1. Triggers the auxiliary 1 output (most commonly used for rear defrost or window roll-down). | Amber | Red | Once |
| | 2.5 seconds | Trunk release. Triggers the trunk release output and opens the vehicle's trunk. | Solid Amber then Flash Amber | Solid Red then Flash Red | Twice |
|  | 0.5 second | Aux 2. Triggers the auxiliary 2 output (most commonly used for rear defrost or window roll-down). | Amber | Red | Once |
| | 2.5 seconds | Activates the remote start. Repeat and remote start will shut off. Will activate Stop and Go Mode if held when vehicle is running with the key. | Solid Amber then Flash Amber | Solid Red then Flash Red | Once On / Twice Off |
|  | 0.5 second | Turns siren chirps on/off (Note: With the siren chirps off, it will still sound in the event the alarm is triggered). | Amber | Red | Once On / Twice Off |
| | 2.5 seconds | Option programming menu 1 - Installers Only. | Solid Amber then Flash Amber | Solid Red then Flash Red | Once |

Quick Reference

2 Way Remote Button Functions

| Button(s) | Duration | Function | LED | LED · 2nd Car Mode | Chirp(s) |
|---|-------------|--|------------------------------|--------------------------|---------------------|
|  +  | 0.5 second | Valet mode (see Valet Mode Section for details) | Amber | Red | Once On / Twice Off |
|  +  | 0.5 second | Drive lock. Activates ignition controlled door locks. | Amber | Red | Once On / Twice Off |
| | 2.5 seconds | Option programming menu 2 - Installers Only. | Solid Amber then Flash Amber | Solid Red then Flash Red | Once |
|  +  | 0.5 second | Activates passive arming (vehicle will arm/lock 30 seconds after the vehicle is disarmed) | Amber | Red | Once On / Twice Off |
| | 2.5 seconds | Activates the 2nd Car function. Your remote has the ability to control two systems with the same remote. You must have the same RF Kit in both of your vehicles. | Solid Amber then Flash Amber | Solid Red then Flash Red | Once On / Twice Off |
|  +  | 0.5 second | Activates timer start mode. Timer start mode has multiple programmable settings: duration settings, temperature settings and self start settings. | Amber | Red | Once On / Twice Off |
|  +  | 0.5 second | Activates the built in Turbo Timer function. Additional installation is required when using this feature on automatic transmission vehicle's. | Amber | Red | Once On / Twice Off |
| | 2.5 seconds | Car Check (updates vehicle status on remote pager) / Secure Auxiliary | Solid Amber then Flash Amber | Solid Red then Flash Red | Twice |

Quick Reference

1 Way Remote Button Functions

| Button | Duration | Additional Programming Required | Function / Description |
|---|-------------|---------------------------------|--|
|  +  | 0.5 second | no | Locks doors and / or arms alarm. |
| | 3.5 seconds | no | Panic/vehicle locator (flashes vehicle's parking lights and sounds siren and horn) |
|  | 0.5 second | no | Unlocks doors and / or disarms alarm. |
|  | 0.5 second | no | Aux 1. Triggers the auxiliary 1 output (most commonly used for rear defrost or window roll-down) |
| | 2.5 seconds | no | Trunk pop. Triggers the trunk release output and opens the vehicle's trunk. |
|  | 0.5 second | no | Aux 2. Triggers the auxiliary 2 output (most commonly used for rear defrost or window roll-down) |
| | 2.5 seconds | no | Activates the remote start. Repeat and remote start will shut off |
|  +  | 0.5 second | no | Turns siren on/off (Note: With the siren off, it will still sound in the event the alarm is triggered) |
| | 2.5 seconds | no | Option programming menu 1 - Installers Only |
|  +  | 0.5 second | no | Valet mode (see Valet Mode section for details) |
| | 2.5 seconds | no | Turns the shock sensor on/off. (Alarm or alarm / Starter systems only) |

Quick Reference

1 Way Remote Button Functions

| Button | Duration | Additional Programming Required | Function / Description |
|---|-------------|---------------------------------|--|
|  +  | 0.5 second | yes | Drive lock. Activates ignition controlled door locks. |
| | 2.5 seconds | no | Option programming menu 2 - Installers Only |
|  +  | 0.5 second | no | Activates passive arming (vehicle will arm/lock 30 seconds after the vehicle is disarmed) |
| | 2.5 seconds | no | Activates 2nd Car Mode on the |
|  +  | 0.5 second | yes | Activates timer start mode. Timer start mode has multiple programmable settings: duration settings, temperature settings and self start settings |
|  +  | 0.5 second | yes | Activates the built-in Turbo timer function. Additional installation is required when using this feature on automatic transmission in vehicle's |
| | 2.5 seconds | no | Car Check (updates vehicle status on remote pager) / Secure Auxiliary |

If you would like additional information on the functionality of your 1way companion remote, please visit the support page at www.compustar.com to download the full user manual.

Remote LED Functions and Descriptions

Your remote will communicate to and from your vehicle while in range. The unique LED design will display LEDs indicating lock/unlock status, remote start confirmation and remaining run time and much more.

| Event | LED | LED Duration | Chirp(s) |
|---|---------------------|-------------------------------------|-------------------------------------|
| Runtime Remaining: 100 Percent | Flash Green | Once every 5 seconds | Six times |
| Runtime Remaining: 50 Percent | Flash Amber | Once every 5 seconds | N/A |
| Runtime Remaining: 25 Percent | Flash Red | Once every 5 seconds | N/A |
| Runtime Remaining: 60 Seconds | Flash Red | Once every 2 seconds | N/A |
| All command confirmations | Flash Green | Once or Twice depending on function | Once or Twice depending on function |
| All error confirmations | Flash Red | Three times | Three chirps |
| Alarm is triggered while remote started | Flash Green and Red | Until disarmed by remote | |
| Arming/Locking while trigger is open | Flash Red | Three times | Three chirps |

General System Functions

The remote transmitter functions have been predetermined and programmed from the factory. The four button configuration allows for many functions to be performed through a series of tapping, holding and / or multiple presses of buttons.

Sending Commands

When in range and a command has been sent, the remote will receive a page back and LED command. For example, to send a remote start command from the 2 Way remote, hold down the  button for 2.5 seconds. The remote will beep once to confirm the command has been sent and that the remote is in range. Once the vehicle has successfully remote started, the remote will receive a command indicating the vehicle is running.

Receiving Commands

The remote pager will receive commands indicating the status of the vehicle, confirmation of sending commands and alarm notifications. For example, after sending the lock command, the pager will receive LED and chirp signals confirming that the vehicle has been successfully locked/armed. To see if your pager is in range, hold the  +  buttons for 2.5 seconds - if the remote receives an audible and visual confirmation then it is in range.

IMPORTANT: the 2WG5R-900SH does not receive page back alerts if an alarm is triggered only while your vehicle is remote started.

Active Lock / Arm and Unlock / Disarm

Tap button  for 0.5 second to lock/arm and unlock/disarm. The LED will flash on your remote. If your vehicle is locked, tap button  to unlock; if your vehicle is unlocked, tap button  to lock.

IMPORTANT: If the alarm has been triggered (Siren is going off), you must wait up to 5 seconds before disarming the alarm - the first  button tap will shut off the alarm and the second will unlock/disarm the system.

General System Functions

Passive Lock / Arm

The system can be configured to passively lock and arm the vehicle. Put the system in passive by tapping buttons  +  simultaneously for 0.5 second. The remote will beep once and the LEDs will illuminate to indicate the system is in passive lock and arming mode.

While in passive mode, the system will lock and arm the alarm 30 seconds after the last door is closed. As an indicator that the vehicle is going to passively lock and arm, the remote and siren will chirp once and the parking lights will flash once at both 10 and 20 seconds prior to passively locking and arming. If you want the system to passively arm and not passively lock, ask your local Firstech dealer to turn Option 1-8 to setting II.

Automatic Transmission Remote start Function

Hold the  button for 2.5 seconds to remote start an automatic transmission vehicle. If you are in range and if the vehicle is ready to remote start, the parking lights will flash once and/or siren chirp once to indicate that the remote start command has been successfully transmitted.

If you are in range and the remote beeps three times, there is a remote start error. Refer to the “remote start error diagnostic” on the last page of this manual for details.

Upon receiving confirmation that your vehicle is running, the remote LEDs will flash the and remote beep to show the run time. The remote start run time can be programmed for 3, 15, 25, or 45 minutes - ask your local Firstech dealer to adjust Option 2-7 if you would like a run time other than 15 minutes (default).

IMPORTANT: Your vehicle’s key must be inserted into the ignition and turned to the “on” position prior to driving your vehicle. If the foot brake is depressed prior to the key being in the “on” position, the vehicle will shut off.

General System Functions

Manual Transmission Remote Start Function (Reservation Mode)

In order to remote start a manual transmission vehicle, the system must first be set in Reservation Mode. Reservation Mode must be set each and every time you want to remote start a manual transmission vehicle. The purpose of Reservation Mode is to leave the transmission in neutral before exiting the vehicle.

IMPORTANT

- The transmission must be left in the neutral position.
- The vehicles windows must be rolled up.
- The vehicles door pins must be in working order.
- Do not set reservation mode or remote start with people in the vehicle.
- Do not install this remote start on a manual transmission vehicle that has a convertible or removable top.

Activating Reservation Mode

STEP1 : While the vehicle is running, place the transmission in neutral, set the emergency / parking brake, and remove pressure from the foot brake.

STEP2 : Remove the key from the vehicle's ignition. The vehicle's engine should remain running even after the key has been removed. If the vehicle does not remain running visit your local authorized Firsttech dealer for service.

STEP3 : Exit the vehicle and close the door. The vehicle's engine should shut off instantly or within 10 seconds upon closing the last door. If the vehicle's engine does not shut off, your door trigger may be functioning improperly. Do not use the remote start feature and take your vehicle to a local authorized Firsttech dealer for service.

Once the vehicle shuts off your system is in reservation mode and the vehicle is ready to safely remote start.

IMPORTANT : By default, the system will lock/arm the vehicle upon setting reservation mode. Take care to not lock your keys inside the vehicle.

General System Functions

Canceling Reservation Mode

Reservation mode will be cancelled for the following reasons;

- You did not activate the parking brake prior to turning off the ignition.
- You pressed the foot brake after the key was removed from the ignition.
- You released the parking brake after the key was removed from the ignition.
- You entered valet mode, opened the vehicles door, hood, trunk or set off the alarm.

Reservation Mode Settings

Reservation mode settings can be programmed with Option 1-6. It is recommended that reservation mode settings are programmed by your local authorized Firsttech dealer.

Default1 : Locks doors when reservation mode is set.

Option2 : Does not lock doors when reservation mode is set.

Option3 : Reservation mode sets 10 seconds after the last door is closed, as opposed to immediately.

This option will allow you to access the vehicle's rear doors, trunk or hatch prior to the system setting reservation and passively locking/arming.

Trunk Release

Hold button  for 2.5 seconds to release the trunk or hatch. If you are in range, the remote will beep twice and the LEDs will flash indicating that the trunk release command has been successfully transmitted.

IMPORTANT: Trunk release is an optional vehicle feature that may require additional parts and labor.

General System Functions

Auxiliary Outputs / Window Roll-Down / Sliding Doors

Your system is equipped with two additional outputs that can be configured to control windows, open power sliding doors, open a power sliding moon roof, or even turn on a rear defroster. These outputs can be configured for pulsed, timed or latched settings. Your authorized Firstech dealer can set these outputs up accordingly. Using auxiliary outputs to control additional vehicle functions will require additional parts and can be rather labor extensive.

Tap button  for 0.5 second to trigger auxiliary output 1. Tap button  for 0.5 second to trigger auxiliary output 2. The vehicle's parking lights will flash once and/or siren chirp once indicating that the auxiliary outputs have been triggered.

By default, the system is in secure auxiliary mode, which requires you to hold button  +  for 2.5 second prior to triggering auxiliary 1 or 2. To turn off secure auxiliary, ask your authorized Firstech dealer to turn on **Option 4-5 to setting II.**

Silent Arm / Disarm

Upon lock/arm and unlock/disarm, you can eliminate vehicle's audible confirmation by muting the siren. Normally, the siren will chirp once to indicate the system is locked/armed and twice to indicate the system is unlocked/disarmed. To mute the siren tap buttons  +  simultaneously for 0.5 second. When the siren is muted, the siren icon will no longer be displayed on the LCD.

IMPORTANT: Even when the siren is muted, it will still go off in the event the alarm is triggered.

Advanced System Functions

The following section reviews advanced system functions. Many of these functions require multiple steps or additional programming by your local authorized Firstech dealer to be active.

Drive Lock / Ignition Controlled Door Locks

Tap buttons  +  simultaneously for 0.5 second to turn drive lock on and off (also known as ignition controlled door locks). The vehicle's parking lights will flash once and/or siren chirp once to confirm drive lock is off. The vehicle's parking lights will flash twice and/or siren chirp twice to confirm drive lock is on.

IMPORTANT: Drive lock mode requires that the dealer turn on Option 1-9. Drive lock has two settings;

Default 1: Off

Option 2: Locks the doors when the ignition is on and after the brake is depressed.

Option 3: locks the doors when the RPM's have reached two times that of idle speed (this setting requires that a tachometer wire is connected).

With both settings, the doors will unlock when the ignition is turned off. If using this feature on a manual transmission vehicle, the doors will unlock upon setting the emergency / parking brake.

Turbo Timer Mode

This feature can not be turned on with the 2 Way remote. The built in turbo timer keeps the vehicle's engine running for either 1, 2, or 4 minutes (programmable from dealer) after the vehicle key has been removed from the ignition. This feature will keep oil running through the turbo system to allow for appropriate cooling time. Tap buttons  +  simultaneously for 0.5 second to turn on or off turbo mode. The remote will beep once and green LEDs will flash to confirm that turbo mode is activated. The remote will beep twice and LEDs will flash twice to confirm that turbo mode is off

IMPORTANT: To utilize this feature, the emergency / parking brake wire must be connected to the Firstech system. Consult your local authorized dealer for installation.

Advanced System Functions

2nd Car Mode (Multiple Vehicle Control)

This remote has the ability to operate a 2nd vehicle. Hold buttons  +  for 2.5 seconds to activate this feature. The remote's LEDs will flash confirming that 2nd car mode is activated. The remote will remain in 2nd Car Mode until you hold the  +  buttons for 2.5 seconds again. The remote will beep twice and the LEDs change from red to amber to confirm 2nd car mode is off.

IMPORTANT: 2nd car mode requires the remote to be programmed to a 2nd vehicle that is equipped with the same remote kit.

Advanced System Functions

RPS (Remote Paging Sensor) Unlock / Disarm

The **RPS is an optional feature**. Basic RPS and car call functions do not require programming, however in order for the sensor to unlock/disarm the vehicle you must perform the following procedures;

STEP 1: Disarm/unlock the alarm (remote must be programmed first) and choose a 4 digit code. You can not have zeros.

STEP 2: Turn ignition key to the “on” position and leave the driver’s door open.

STEP 3: Knock on the windshield in front of the RPS a total of 5 times (each time you knock the LED on the RPS will flash RED). The LED will begin to flash rapidly in BLUE with successful completion of this step.

STEP 4: Enter the first digit of the desired four digit pass code by knocking on the windshield in front of the RPS the desired number of times. For example, to enter 3, knock on the sensor 3 times (each time you knock the LED will flash RED) then wait.

STEP 5: The LED on the RPS will confirm your first number by flashing BLUE slowly. Once the LED begins to flash rapidly in BLUE, enter your second number by repeating step 4.

STEP 6: Repeat steps 4 & 5 to enter all four numbers.

STEP 7: Turn the ignition OFF - the RPS disarm/unlock feature is now programmed. Follow steps 3 - 5 to enter your disarm/unlock code.

STEP 8: (Optional) If you would like to rearm/relock your vehicle then close all doors, knock on the RPS 5 times and your vehicle will lock/arm.

Advanced System Functions

Secure Valet Switch

The optional Secure Valet Switch prevents the alarm from being put into valet mode through cycling the ignition on/off five times. The Secure Valet Switch is more secure than traditional toggle / valet switches because it requires a two digit code.

IMPORTANT: The first two digits of the RPS unlock/disarm pass code will be the default pass code for the secure valet - you do not need to program them independently. If you are not using the RPS unlock, following the below procedures to program your secure valet pass code;

STEP 1: Turn on Option 3-10-III. (Dealer programmed option)

STEP 2: Turn ignition key to the “on” position.

STEP 3: Hold down the valet switch for 1.5 seconds. The LED on the valet switch will begin to flash rapidly with successful completion of this step.

STEP 4: Enter the first digit of the desired two digit pass code by depressing the switch the number of times that coordinates with the desired first number. For example, to enter 3, depress the switch 3 times, then wait.

STEP 5: The LED will confirm the first number by flashing BLUE slowly. Once the LED begins to flash rapidly, enter your second number by repeating step 4.

STEP 6: Turn the ignition off - the Secure Valet Switch is now programmed. Follow steps 3 - 5 to enter your Secure Valet code.

Advanced System Functions

Timer Start Mode

Timer start mode is used to cool or warm the vehicle automatically without use of the key or the remote. While engaged, timer start will activate even while the remote is out of range. Tap buttons  +  simultaneously for 0.5 second to activate timer start mode. The remote will beep once and LEDs flash twice. Repeat the same step to turn off timer start mode. Timer start mode will be cancelled any time the vehicle is started manually or remotely. To change from the default setting to optional settings, see your place of purchase.

Cold / Hot Start Mode

Cold/hot start mode works in conjunction with timer start mode (see above) and the temperature sensor. It allows you to configure your timer start feature to check the vehicle's temperature prior to starting. All of these options require programming from your local dealer.

Anti Jacking Mode

Your system has a mode that requires you to keep your remote separate from your key chain. This feature also requires additional labor. Please consult your installer for more details. The Anti Jacking mode allows you to safely disable your vehicle once a thief has driven off with your property. If you are car jacked and still have your remote, you can panic the system by holding   button down for 3.5 seconds. The siren will sound for 30 seconds and the vehicle will shut down.

More Optional Sensors

If you purchased an Alarm or Alarm and Remote Start system you have the ability to add optional sensors from Firstech, LLC. You have the ability to protect your investment by adding a battery back up system to protect main power to your alarm or a tilt sensor to protect expensive rims and tires.


Remote Coding / Programming Routine (S)

IMPORTANT: Every Firstech remote must be coded to the system prior to performing any operations. All remotes must be coded at the same time.

Programming : 2 W 4 Button Remotes:

STEP 1: Activate Valet/Programming mode by manually turning the ignition key on and off (between the Acc & On positions) five times within 7 seconds. The vehicle's parking lights will flash once with the successful completion of this step.

STEP 2: Within 2 seconds after cycling the ignition for the 5th time, press button **(I)** or **Lock on 2 way remotes** or **the (lock) button on 1 way remotes** for 0.5 second. The parking lights will flash once to confirm the transmitter has been coded.

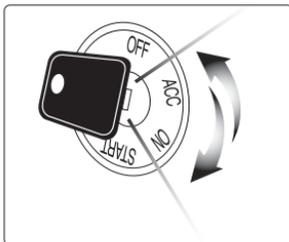

Exiting Programming: Programming is a timed sequence. The parking lights will flash twice signaling the end of programming mode.

Programming Multiple Remotes: After the confirmation flash given in step 2, code additional remotes by pressing button **(I)** or **Lock on 2 way remotes** or the (lock) button on **1 way remotes**. The parking lights will flash once confirming each additional remote. All systems (except the 2WSSR-PRO), can recognize up to three remotes.

Remote Start Error Diagnostic

If the remote start fails to start the vehicle, the parking lights will flash three times immediately. Following those three flashes the parking lights will flash again corresponding to the error table.

| Number of Parking Light Flashes | Remote Start Error |
|---------------------------------|--|
| 1 | Motor running |
| 2 | Key in ignition on position |
| 3 | Door open (manual transmission only) |
| 4 | Trunk open |
| 5 | Foot brake on |
| 6 | Hood open |
| 7 | Reservation off (manual transmission only) |
| 8 | Tach or voltage sensing failure |

We recommend that you do not attempt any repairs on your remote starter. Contact your dealer or call us directly.

Alarm Diagnostic

2WG5R-900SH is not intended to operate as a full 2 Way alarm system. It will only receive alarm trigger page back while your vehicle is remote started. While the alarm is armed, the LED (if installed) will blink slowly. While the siren is going off, the LED will indicate the specific zone that was triggered. Upon disarming the alarm after it has been triggered, the amount of siren chirps and LED on the vehicle (if installed) will indicate the specific zone.

| Priority | Situation | LED On Duty | Number of Siren Chirps (If Installed) |
|----------|---------------------------------|-----------------------------|---------------------------------------|
| 1 | Door/Hood/Trunk/Key Triggered | 2 flash, rest, then repeat | 6 |
| 2 | 2 nd Shock Triggered | 3 flash, rest, then repeat | 5 |
| 3 | Optional Sensor Triggered | 4 flash, rest, then repeat | 4 |
| 4 | PANIC | 5 flash , rest, then repeat | N/A |

Limited Lifetime Warranty

Firstech, LLC Warrants to the original purchaser that this product shall be free of defects in material and workmanship under normal use and circumstances for the period of time that the original owner of this product owns the vehicle in which it is installed; except that the remote controller unit for the period of one year from the date of installation to the original owner of this product. When the original purchaser returns the product to the retail store where it was purchased or prepaid postal to **Firstech, LLC., 21911 68th Avenue South, Kent, WA 98032, USA** within the warranty period, and if the product is defective, Firstech, LLC, will at its option repair or replace such.

TO THE MAXIMUM EXTENT ALLOWED BY LAW, ANY AND ALL WARRANTIES ARE EXCLUDED BY THE MANUFACTURER AND EACH ENTITY PARTICIPATING IN THE STREAM OF COMMERCE THEREWITH. THIS EXCLUSION INCLUDES BUT IS NOT LIMITED TO, THE EXCLUSION OF ANY AND ALL WARRANTY OF MERCHANTABILITY AND/OR ANY AND ALL WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY AND ALL WARRANTY OF NON-INFRINGEMENT OR PATENTS, IN THE UNITED STATES OF AMERICA AND/OR ABROAD. NEITHER THE MANUFACTURER OF ANY ENTITIES CONNECTED THEREWITH SHALL BE RESPONSIBLE OR LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES FOR LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE. NOTWITHSTANDING THE ABOVE, MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR THE CONTROL MODULE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty will last or the exclusion or limitation on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights, and you may also have other rights, which vary State to State.

8102REUSC000602

By Firstech LLC Version 1.0

By Firstech, LLC.
Toll Free : 888-820-3690
21911 68th Ave S
Kent, WA 98032



By Firstech, LLC.

Toll Free : 888-820-3690
21911 68th Ave S
Kent, WA 98032

By Firstech LLC Version 1.0
www.firstechllc.com