

FOR CAR USE ONLY/NUR FÜR AUTOMOBIL GEBRAUCH/POUR APPLICATION AUTOMOBILE UNIQUEMENT/PARA USO EN AUTOMÓVILES/SOLO PER L'UTILIZZO IN AUTOMOBILE/ENDAST FÖR BILBRUK/ALLEEN VOOR GEBRUIK IN DE AUTO/ТОЛЬКО ДЛЯ ИСПОЛЬЗОВАНИЯ В АВТОМОБИЛЯХ/DO UŻYCIA TYLKO W SAMOCHODZIE



IN-DASH APP/DVD RECEIVER

ICS-X8

MirrorLink™

- **SUPPLEMENTARY MANUAL**
Please read before using this equipment.
- **ERGÄNZENDE ANLEITUNG**
Lesen Sie diese Bedienungsanleitung bitte vor Gebrauch des Gerätes.
- **SUPPLÉMENT AU MODE D'EMPLOI**
Veuillez lire avant d'utiliser cet appareil.
- **MANUAL SUPLEMENTARIO**
Léalo antes de utilizar este equipo.
- **ISTRUZIONI SUPPLEMENTARI**
Si prega di leggere prima di utilizzare il attrezzatura.
- **KOMPLETTERANDE HANDBOK**
Innan du använder utrustningen bör du läsa igenom denna användarhandledning.
- **BIJKOMENDE HANDLEIDING**
Lees deze aanwijzingen aandachtig alvorens dit toestel te gebruiken.
- **ДОПОЛНИТЕЛЬНОЕ РУКОВОДСТВО**
Прочтите настоящее руководство перед началом использования оборудования.
- **INSTRUKCJA UZUPEŁNIAJĄCA**
Prosimy zapoznać się z tą instrukcją przed przystąpieniem do użytkowania urządzenia.

EN

DE

FR

ES

IT

SE

NL

RU

PL

ALPINE ELECTRONICS MARKETING, INC.
1-7, Yukigaya-Otsukamachi, Ota-ku,
Tokyo 145-0067, JAPAN
Phone: 03-5499-4531

ALPINE ELECTRONICS OF AMERICA, INC.
19145 Gramercy Place, Torrance,
California 90501, U.S.A.
Phone 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD.
161-165 Princes Highway, Hallam
Victoria 3803, Australia
Phone 03-8787-1200

ALPINE ELECTRONICS GmbH
Wilhelm-Wagenfeld-Str. 1-3, 80807 München, Germany
Phone 089-32 42 640

ALPINE ELECTRONICS OF U.K. LTD.
Alpine House
Fletchamstead Highway, Coventry CV4 9TW, U.K.
Phone 0870-33 33 763

ALPINE ELECTRONICS FRANCE S.A.R.L.
(RCS PONTOISE B 338 101 280)
98, Rue de la Belle Etoile, Z.I. Paris Nord II,
B.P. 50016, 95945 Roissy Charles de Gaulle
Cedex, France
Phone 01-48638989

ALPINE ITALIA S.p.A.
Viale C. Colombo 8, 20090 Trezzano
Sul Naviglio (MI), Italy
Phone 02-484781

ALPINE ELECTRONICS DE ESPAÑA, S.A.
Portal de Gamarra 36, Pabellón, 32
01013 Vitoria (Alava)-APDO 133, Spain
Phone 945-283588

Designed by ALPINE Japan
68-25285Z40-A

This SUPPLEMENTARY MANUAL describes only the additional functions provided by the ICS-X8 version upgrade. Please also read the OWNER'S MANUAL.

Main Changes

- Call Waiting function compatibility
- AUX Camera compatibility
- App Mode compatibility (iPod/iPhone)
- Aha compatibility
- MirrorLink compatibility
- Changes of Setup items associated with additional functions

BLUETOOTH Operation

Call Waiting Function

If a call comes in from another phone during a call, a notice is displayed on the screen. This function can only be used if the connected mobile phone has a call waiting function service included.

 
Receiving calls during a current call

If a new call comes in during a current call, a screen allowing you to negotiate the new call is displayed.



- ① Touch [Answer] to take the new call and put the current party on hold.
Touch [End Call] to not take the new call and continue your call with the current party.
- ② Touch [End Call] or press the Media Control button 3 to end your call with the current call and take the new call.

Switching calls

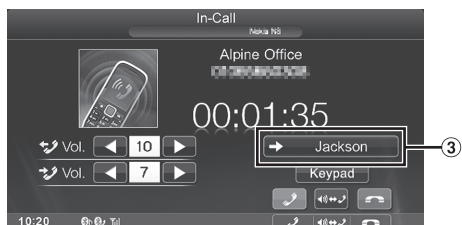

- ③ Touch to switch the call.
- This unit supports only the Call Waiting function of a mobile phone. The second call function and three-way calling function of a mobile phone cannot be operated from this unit. Also the screen display may malfunction.

Camera Operation (Optional)

Depending on your camera, please choose the connection method (Direct or RCA) and camera type (Rear or OTHER) first. For details, refer to "Setting the Camera Input" (page 9).

Rear camera:

If a rear camera is connected, when the vehicle is reversed, the rear camera view (guide marks for vehicle width and available distance) is displayed automatically on the screen of this unit.

Other camera:

Set when connecting to a camera other than the Rear camera, such as a room camera and side camera.

Rear Camera Operation

Set "Rear" for "Direct Camera" or "AUX Camera" (page 9).

Other Camera Operation

Set "OTHER" for "AUX Camera" (page 9).

- 1 **Press the Home button.**
The Home screen is displayed.
- 2 **Touch [Other Camera].**

About the Adjustment of the Caution Display Location

The Caution display location for other cameras can be adjusted. Refer to Owner's Manual "Adjusting the Caution Display Location" (page 63) for the operations.

 
iPod/iPhone (Optional)

When you change to the App Direct mode, audio/video content displayed in an iPhone/iPod touch can be analog output to the ICS-X8.


■ Display example for iPod/iPhone main screen (Info mode)

[■ App] switch is added.


Audio mode

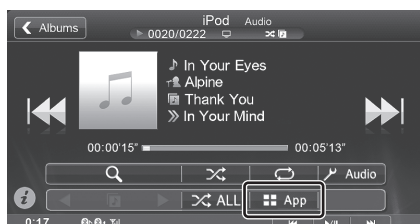

Video mode

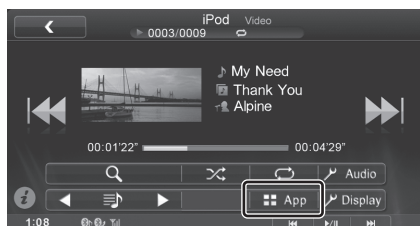 

App Direct mode

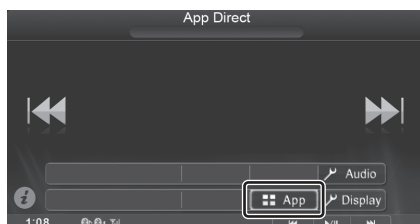 

The iPod/iPhone operation screen display during video file playback or App Direct mode

Touch the screen while the iPod/iPhone playback screen is displayed.

The iPod/iPhone operation screen is displayed.

Changing to App Direct

App Direct lets you enjoy applications in an iPhone/iPod touch, displayed on the screen of the ICS-X8.

- This function can be operated on the iPhone/iPod touch.
- In the App Direct mode, applications which can be operated on the unit, such as Music/Video or Aha, cannot be operated on an iPhone/iPod touch.
- Some applications can be operated on the ICS-X8.
- Whether audio or video is output depends on the application.

1 Touch [■ App].

Audio/Video mode switches to App Direct mode, and the content selected on the iPhone/iPod touch is output.

- While App Direct mode is set to ON, the ■ App button is highlighted.

2 Operate the iPhone/iPod touch, or operate the ICS-X8 by touching [◀◀] [▶▶] or pressing the Media Control buttons.

- Available applications may differ, depending on the iPhone/iPod touch you are using.
- When the ignition key is turned to the OFF/ON position in the App Direct mode, or you reconnect the iPhone/iPod touch and switch to the Audio/Video mode, the ICS-X8 will play from the beginning of the audio data.

3 To return to the Audio/Video mode, touch [■ App].

App Direct mode switches to the Audio/Video mode.

- When returning to the Audio/Video mode, the file last played in the Audio/Video mode may not be played. The played file or playing position depends on the connected iPhone/iPod touch.

Aha (Optional)

 
Aha offers you quick, personalized access to content you really want, on the go, safely from the driver's seat.

If the Aha application is installed in an iPhone, you can display and operate Aha with the ICS-X8.


- Web content list (Facebook, podcast or internet radio stations, etc.) provided by Aha are called **stations**.
- Items played within a station (a 'feed,' in the case of Facebook) are called **content**. Not all of the stations support the same functions available on this unit.

■ Display Example for the Aha Main Screen

Simple mode

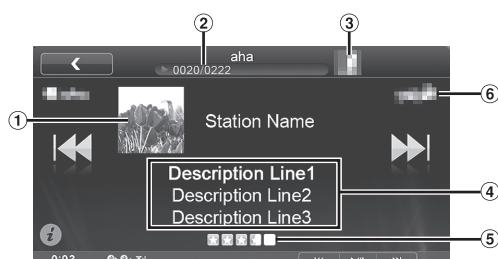

Info mode

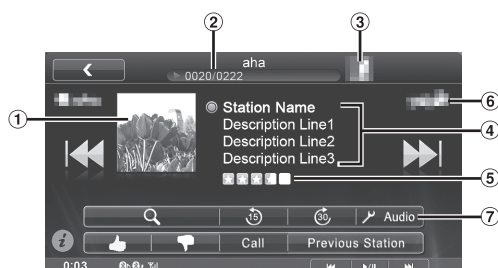 

- ① Content Image display
- ② Current content number/Total content number
- ③ Station Logo display
- ④ Current Content Description display
- ⑤ Rating Status (Location Based Services only)
- ⑥ Partner Logo display
- ⑦ Audio Setup button

Operating Aha

- 1 **Launch the Aha application on the iPhone.**
- 2 **Press the Home button.**
The Home screen is displayed.
- 3 **Touch [aha].**
The display changes to the iPhone Aha mode screen.
- 4 **If no station is selected, touch the desired station.**
The playback screen appears.
 - Touch [**<** (**Back**)] on the playback screen to return to the preset station selection screen.
 - Views on the station selection screen can be switched. Refer to "Setting the Presets View" (page 9).
- 5 **Touch [**⏮**] [**⏭**] to select the desired content.**
- 6 **To pause playback, press the Media Control button 2 (▶/⏸).**
Pressing the Media Control button 2 (▶/⏸) again will resume playback.
 - The same operations can be performed by pressing **Media Control buttons 1 or 3**. Refer to Owner's Manual "Using the Media Control buttons" (page 14).
 - These operations may not be possible, depending on the station.

"Like/Dislike" Feedback

With the Like/Dislike button, you can specify "Like" or "Dislike" to the content that is playing.

Feedback is used to personalize content on select stations.

- 1 **Touch [**👍** (Like)] or [**👎** (Dislike)].**
Specify "Like" or "Dislike."
 - The displayed icon differs, depending on the selected station.
- 2 **Touch [**👍** (Like)] or [**👎** (Dislike)] again.**
"Like" or "Dislike" is cancelled.
 - This operation may not be possible, depending on the station.

Recall the Previous Station

You can recall a previously selected station. You can switch between the currently selected and previously selected station.

Touch [Previous Station].

Content Search Function

You can display and select content from the list provided by the currently playing station.

1 Touch [] (**Search**).

The content list screen is displayed.

2 Touch the desired content.

- The content list can display the up to 100 items.

15 sec rewind/30 sec skip

You can rewind currently playing content 15 seconds, or skip ahead 30 seconds.

Touch [] (**15 Sec rewind**).

The currently playing content jumps back 15 seconds.

Touch [] (**30 Sec skip**).

The currently playing content jumps ahead 30 seconds.

- This operation may not be possible, depending on the station.

Making a Phone Call

When a mobile phone is connected to this unit, you can call a displayed facility, depending on the station.

1 Touch [**Call**].

The phone number is displayed.

2 Touch [**Call**].

The phone call is started.

- Connection of a mobile phone via **BLUETOOTH** is required. Set "HFT" or "BOTH" in "Setting the **BLUETOOTH** Device" (Refer to Owner's Manual, page 43).

MirrorLink™ Operation (Optional)

"Nokia Operation" is changed to "MirrorLink Operation."

DISCLAIMER

ENABLED BY CONNECTIVITY FUNCTIONS OF THE MOBILE PHONE, THE MOBILE PHONE'S USER INTERFACES FOR MUSIC OR DRIVE ARE DISPLAYED DIRECTLY ON OUR HEAD UNIT WITH NO ALTERATION. ALPINE SHALL NOT BE RESPONSIBLE OR LIABLE TO USERS FOR ANY DAMAGES, LOSSES OR COSTS RELATED TO OR ARISING OUT OF THESE MOBILE PHONE INTERFACES.

Using MirrorLink™

MirrorLink is a standard for connecting between an ICS-X8 and a mobile phone. Using MirrorLink, you can display a mobile phone screen and operate your mobile phone applications via this unit.

- Some applications may not be displayed or operated, depending on the connected mobile phone.
- If the mobile phone is locked, it cannot be operated from the unit.
- You can only operate one connected mobile phone. If a second phone is connected, a message saying, "Connected USB Device is not supported." will be displayed.
- For details on compatible phones, refer to the Alpine website.

When using MirrorLink, we recommend that you connect your mobile phone via both USB and BLUETOOTH.

- For details on **BLUETOOTH** connection, refer to Owners Manual "Registering the **BLUETOOTH** Device" (page 43).
- If your mobile phone is connected via **USB** only, some functions may not operate normally. Make sure you also connect via **BLUETOOTH**.

1 Press the **Home** button.

The Home screen is displayed.

2 Touch [**Mirror Mode**], [**Car Mode**], [**Navigation**] or [**Music**].

 
The screen for the selected mode is displayed.

- After connecting to a mobile phone that is compatible with this unit, application icons will appear on the Home screen.


3 Press the **Media Control** button to operate the unit.

- The functions of the Media Control button differ, depending on the mode.


■ Car Mode -1

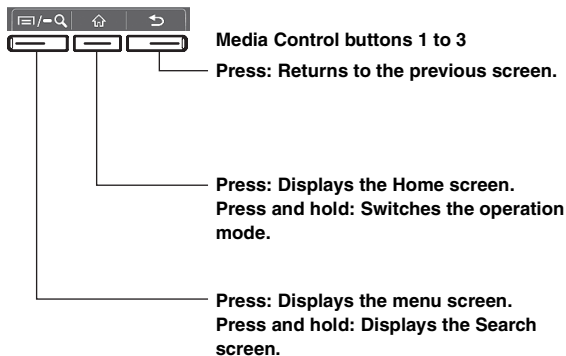


■ Car Mode -2

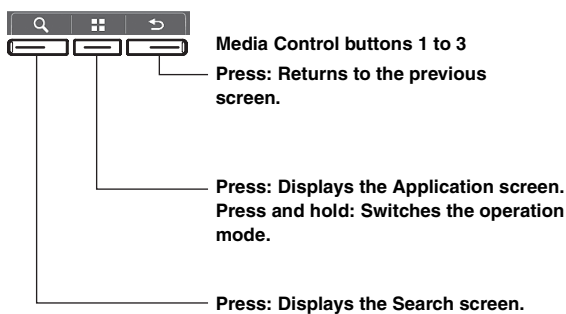 

■ Music Application Mode

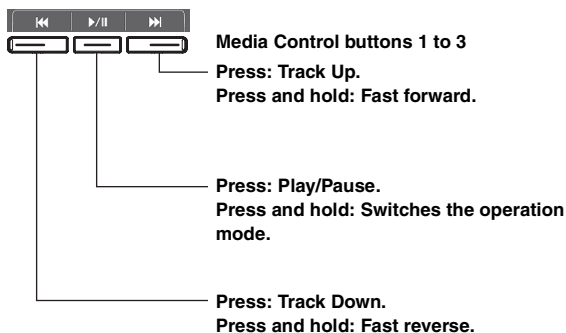 


■ Navigation Mode

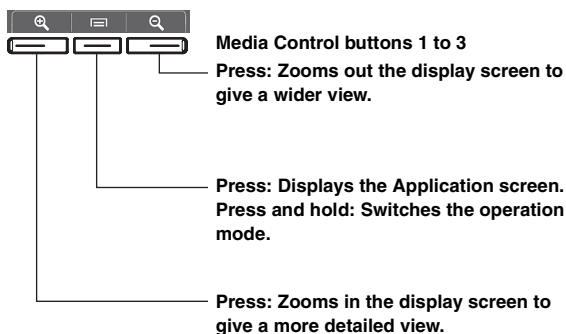 

- Operable modes on this unit may differ from operations on your mobile phone, depending on the connected mobile phone.

Switching the Media Control button Operation.

 Press and hold the **Media Control button 2** for at least 2 seconds, to select the operation mode.

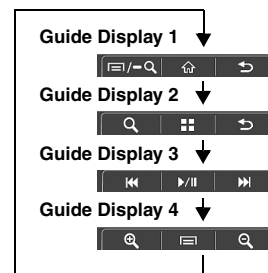

- In the Mirror mode/Car mode, you can change four patterns.
- In the Music Application mode, you cannot change the Guide Display.
- In Navigation mode, you can operate the system by using the touch panel only.
- A function that has been set to "Off" in the Media Control button Setup, is not displayed.

Displaying the Mirror Mode

Applications in a mobile phone can be displayed on the ICS-X8 screen. Some applications may not be displayed, depending on the connected mobile phone.

Touch [Mirror Mode] on the Home screen.

The mobile phone screen is displayed on the ICS-X8 screen.

- You cannot operate the Mirror mode while driving.

Displaying the Car Mode

All automotive applications in a mobile phone are displayed on ICS-X8.

Touch [Car Mode] on the Home screen.

The display shows the Car mode screen.

- If you have displayed a screen other than Car mode from the mobile phone, ICS-X8 will display the Home screen.

Displaying the Navigation Mode

Touch [Navigation] on the Home screen.

The display shows the Navigation mode screen.

- If a Nokia mobile phone is connected, GPS position information can be transmitted to the phone from ICS-X8. Set GPS for ICS-X8 to "On." For details, refer to Owner's Manual "GPS Setting" (page 44).
- If you have displayed a screen other than Navigation mode from the mobile phone, ICS-X8 will display the Home screen.

Displaying the Music Application Mode

Touch [Music] on the Home screen.

The display shows the Music application mode screen.

- If you have displayed a screen other than Music Application mode from the mobile phone, ICS-X8 will display the Home screen.

Setup

Audio Setup

Setting the Volume for Each Application

Setting item: *Radio / DVD / CD / Compress Media / MirrorLink / iPod Music / iPod Video / AUX / AUX3 / BLUETOOTH Audio*

Setting contents: -14 to +14 (Initial setting: 0)

- The volume setting for App Mode of iPhone/iPod touch is also applied to iPod Video.
- The volume setting for Aha is also applied to iPod Music.

Setting the MX (Media Xpander)

Application	Level			
	OFF	1	2	3
FM	Off			
DVD	Off	Movie	Movie	DVD Music
CD	Off			
Compress Media	Off			
MirrorLink	Off			
AUX/AUX3	Off	Compress Media	Movie	Music

- MP3/WMA/AAC/iPod/USB Audio/DivX®/BLUETOOTH Audio/Aha correspond to MX Compress Media.

MX MirrorLink

The medium to high frequencies become more clear, and produces well balanced sound in all the bands.

Display Setup

Display Setup Operation



- The camera names set under the “Direct Camera” and “AUX Camera” settings are displayed. The camera names are not displayed when “Off” is set (page 9).

- [AUX Camera]:
Live Contrast / Bright / Color / Contrast

Application Setup

Camera Setting

Setting the Camera Input

This unit has two options: direct connection and AUX connection.

Setting item: Direct Camera

Setting contents: Off (Initial setting) / Rear

Setting item: AUX Camera

Setting contents: Off (Initial setting) / Rear / OTHER

Rear: Rear camera
OTHER: Side camera, Room camera, etc.

- When set to "OTHER," a camera icon appears on the Home screen.
- If "Direct Camera" is set to "Rear," "AUX Camera" cannot be set to "Rear." Also, if "AUX Camera" is set to "Rear," "Direct Camera" cannot be set to "Rear."

Setting the AUX Camera Signal Input

When the AUX camera is connected, the video input signal type can be chosen.

Further setting item: Camera Signal

Setting contents: NTSC (Initial setting) / PAL

NTSC/PAL: Choose the video input signal type manually.

Setting the Camera Interrupt

Even when the unit is powered off, the monitor will display the rear view behind the vehicle when the gear lever is shifted to the reverse position.

Setting item: Interrupt (PowerOFF)

Setting contents: On (Initial setting) / Off

- Rear camera can only be operated to display the rear view.
- When the gear lever is shifted out of reverse, the unit turns off.

Aha Setting

Touch [aha] on the Application setup menu in step 3. Refer to Owner's Manual "Application Setup Operation" (page 46).

Setting the Presets View

You can switch between views on the station selection screen.

Setting item: Presets View

Setting contents: Icon (Initial setting) / List

MirrorLink™ Setting

Touch [MirrorLink] on the Application setup menu in step 3. Refer to Owner's Manual "Application Setup Operation" (page 46).

Media Control button Setup

Media Control button setup is performed for the Mirror mode/Car mode. Set "On" to enable the Media Control buttons.

Setting item: Media Control button Setup

Setting contents: Off / On (Initial setting)

- 1 Touch [Media Control button Setup].
The Media Control button Setup screen is displayed.
- 2 Touch [◀] or [▶] to set to On or Off.



- The Guide Display of a mode set to "Off," is not displayed.

Information

If this Message Appears

Aha

Device or app update may be required.

- This unit does not support the Aha application protocol.
 - Update the Aha application in the iPhone.

Please reconnect mobile device.

- The application refuses connection.
- The iPhone is not connected correctly.
 - Check the iPhone and reconnect.

When not driving, login to the Aha app on the mobile device.

- You are not logged in to the Aha application.
 - Log in again from the iPhone.

Mobile device not connected.

 
- iPhone is not connected correctly.
 - Check the iPhone and reconnect.

Please launch Aha application on mobile device.

- You switched this unit to aha mode with an iPhone connected, without launching or installing the Aha Application.
 - Launch the Aha Application on the iPhone.


Installation and Connections

Connections

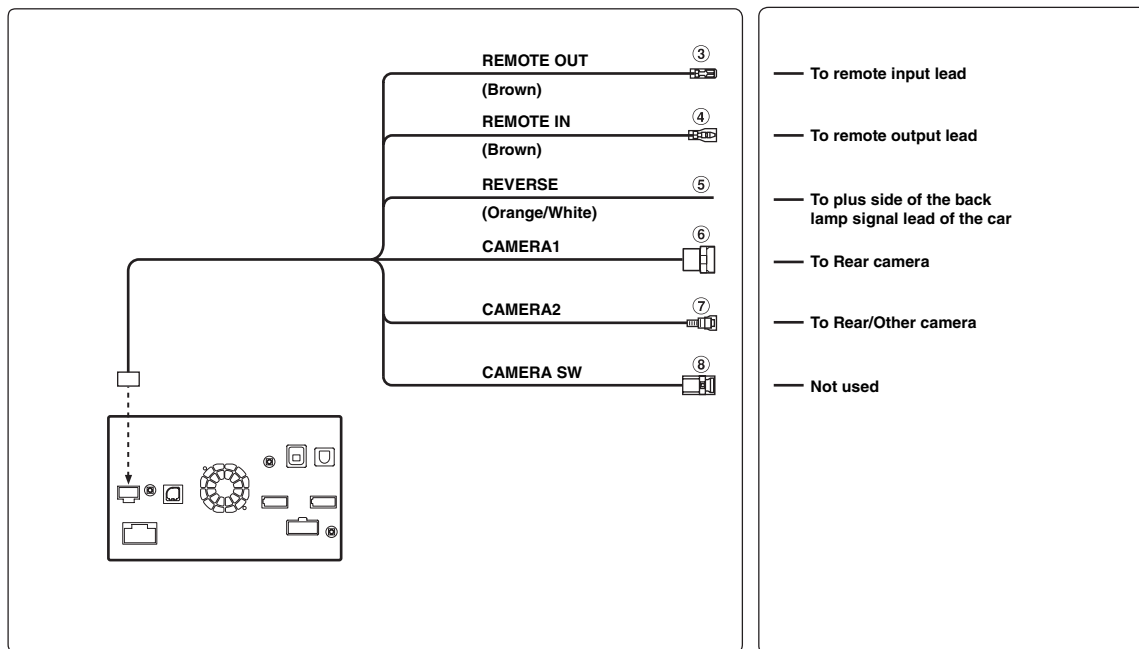

- ⑦ **CAMERA Input RCA Connector (Yellow)**
Use when connecting a camera with RCA Output Connector.

 Connection of cameras

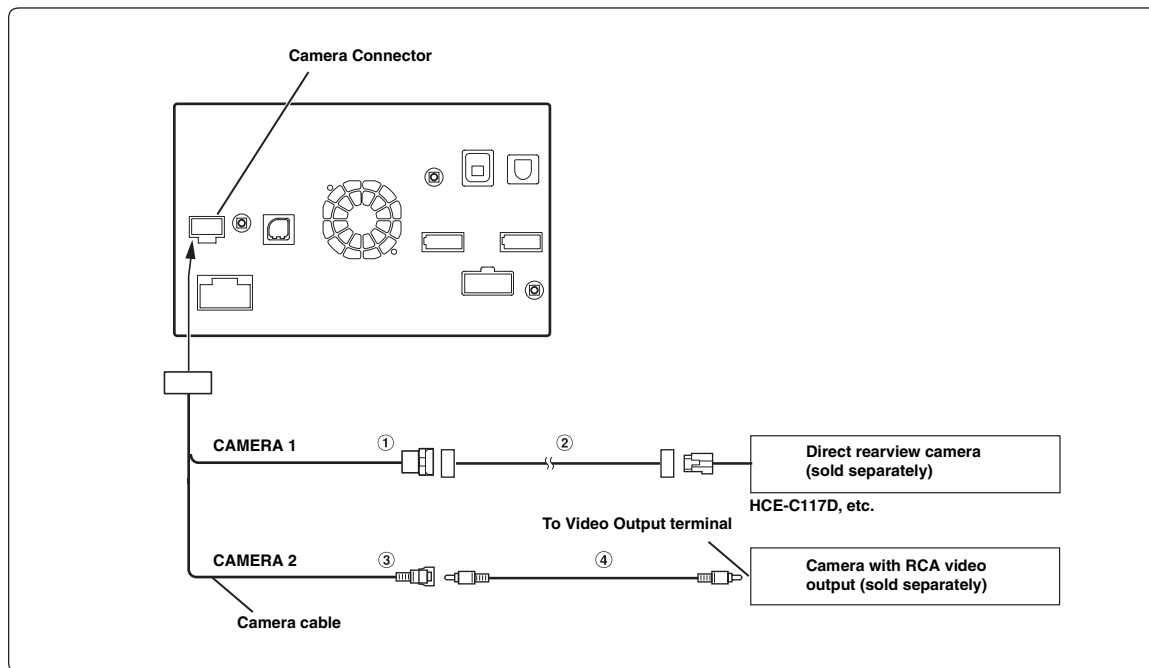

- ① **Direct CAMERA Input Connector**
- ② **Camera extension cable (Included with direct rearview camera)**
- ③ **CAMERA Input RCA Connector**
- ④ **RCA Extension Cable (sold separately)**