 


DTA Converter QUICK START GUIDE

1 Accessories

Inside the DTA Converter box you will find the equipment listed below:

1. DTA (Digital to Analog) Converter
2. Power Supply
3. AAA Alkaline batteries x 2
4. Audio/Video cable
5. Remote Eye (IR Extender)
6. Remote Control

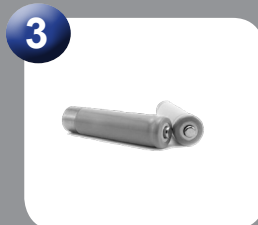

2 Connect the DTA Converter to Your TV


GETTING STARTED

Disconnect the coax cable from your TV. Connect the same coax cable from the wall outlet to the ANT IN port on the back of the DTA Converter 1. This is the fitting with a black center.


CABLE CONNECTION

Select either option A or B Connection Instructions.

A. Connect the DTA Converter to your TV using the Coax Cable.
Connect one end to the RF OUT on the DTA Converter. This is the fitting with the white center. Connect the other end to the input of your TV.

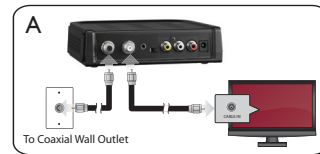

B. Connect the DTA Converter to your TV using the Audio/Video cable 4.
Connect the yellow, red and white wire connections to the same color coded fittings on the DTA Converter and your TV.

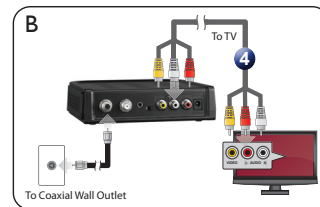

CONNECTING POWER

Connect the power supply 2 into the wall outlet and the back of the DTA Converter.

TURN ON YOUR TV

The DTA Converter will immediately start to perform a channel software upload. It will scan for all channels you can receive. This operation could take up to 5 minutes. **DO NOT STOP THIS SCANNING PROCESS.**

You will notice the channel menu will start to fill in. When the progress bar gets to 100% you will see a Please Wait screen. When the scanning operation is complete, this screen will disappear.

Congratulations, you are now ready to receive digital channels on your TV!

To Place the DTA Converter Out of Sight

1. Connect the remote eye cable 5 into the IR port on the back of the DTA Converter.
2. Place the round end of the remote eye cable where your remote control can see it.
3. Place the DTA Converter out of sight.

Set TV and DTA Converter to Channel 4

1. Make sure the channel switch on the back of the DTA Converter is set to channel 4.
2. Turn your TV on and make sure your TV is set to channel 4 or TV/Video.

Note: If your cable company is currently updating your channels you may see an update message on the screen. It will go away when they are finished updating.

3 Getting to Know Your Remote


- TV POWER**
Turn your TV on or off
- INFO**
View a description of the highlighted program and the next program
- FAVORITES**
Browse Favorite channels
- ARROWS**
Move the highlight to the next field in a menu or screen
- VOLUME**
Audio up & down
- RECALL**
Display previous channel
- LANG**
Display alternative language feed
- SET UP**
LED Light, To Program your remote*
- GUIDE**
Display Channel List Guide
- MULTI-COLOR**
Buttons for future use
- MENU**
Display the Main Menu
- OK**
Select a highlighted item within Menus. Display Channel Listing.
- CHANNELS**
Channel up & down
- EXIT**
Return to watching TV
- MUTE**
Turn on/off sound

*Please refer to the Remote Control Programming and Operating Instructions to program your remote to work on your TV.

Note: Your remote may vary slightly from the one pictured here. However, basic functions should remain the same.

4 Main Menu

MENU OPTIONS

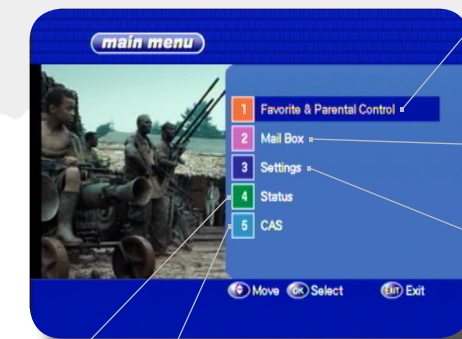

STATUS, CAS

These sections are for use by authorized technicians only.

FAVORITE & PARENTAL CONTROL

Create a list of favorite channels or choose channels to restrict from viewing.

MAIL BOX

Check the messages sent by your service provider.

SETTINGS

 
- **Parental Lock:** Change your parental password
- **Language Setting:** Set the display language
- **Other Settings:** Set OSD Mixweight, Banner Timeout and Power Option

5 Commonly Used Features

DISPLAY THE CHANNEL LIST GUIDE

While watching TV, press **OK** or **GUIDE** on the remote control to display a channel listing.

- Press the Up/Down **▲▼** button to move to different channels.
- Press the **CH+/CH-** button to move a page at a time.
- To view a channel, highlight the channel using the **▲▼** button and press **OK**.
- Press the **EXIT** button to return to watching TV.

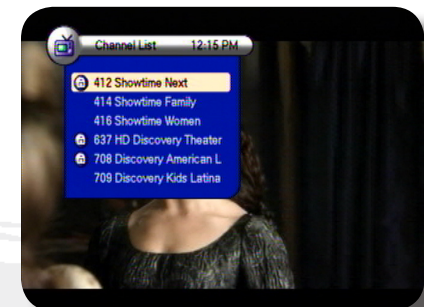

DTA Converter

QUICK START GUIDE

DISPLAY NOW & NEXT INFORMATION

The **INFO** (i) button will display information about what is showing on a channel Now and what will be showing Next.

While watching a channel:

- Press the **INFO** button to see the name of the Now & Next programs.
- Press the **INFO** button again for a more detailed description of the current program.
- Press **EXIT** at any time to return to watching TV.



While viewing the Channel List:

- Press the **INFO** button to see a detailed description of the Now & Next programs.
- Use the **▲▼** button to see this information for other channels.
- Press **INFO** again to hide the description.
- Press **EXIT** at any time to return to watching TV.

SET UP FAVORITE CHANNELS

You can set your Favorite Channel selections.



- Press the **MENU** button.
- Arrow to select Favorites & Parental Control and press **OK**.
- Select the channel you want to list as a favorite using the **▲▼** button. Press **OK**. A check mark appears to show it as one of your favorite channels.
- When you finish all your favorite selections, press the **EXIT** button. If you select Yes, the Favorite list is stored.

VIEW FAVORITE CHANNELS

- Press the **FAV** button on your remote to browse only your designated favorite channels.

LANGUAGE SETTING

The DTA Converter is initially set to display menus in English.

To change the language you see on DTA Converter menus:


- Select **MENU** on your remote control.
- Arrow to select Settings and press **OK**.
- Arrow to select Language Setting and press **OK**.
- On Display Language setting arrow over to the right and highlight the language you want to see and press **OK**.

PARENTAL LOCK

You can put a lock on channels by forcing a password to be entered before the channel can be viewed.


To set the password:

- Select **MENU** on your remote.
- Arrow to Settings and press **OK**.
- Press **OK** on Parental Control.
- A screen appears to enter the current password (the pre-set password is 0000 (four zeros)).
- Enter the password you want under new password and then enter it again under confirm password.

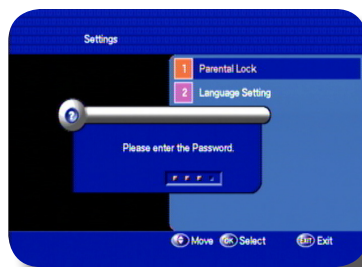

SET UP LOCKED CHANNELS

You can create a list of channels that can only be viewed by entering the Parental Password.

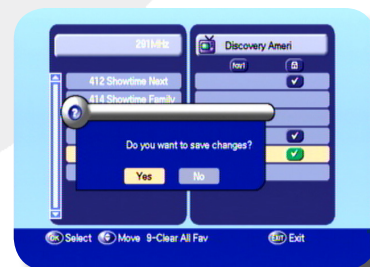

- Press the **MENU** button.
- Arrow to select Favorites & Parental Control and press **OK**.
- Use the arrow **▶** button to move the cursor to the right-most column.
- Select the channel you want to lock using the **▲▼** button. Press **OK**. A check mark appears to show this channel will require a password to view.
- Press **OK** again to remove the channel from the list.
- When you finish all of your Locked selections, Press the **EXIT** button. If you select Yes, the Locked list is stored.
- The lock icon will appear on the Channel Guide List to show which channels require the Parental Password to view.

VIEW LOCKED CHANNELS

You can temporarily unlock a Parental Control Channel by entering the Parental Password.

- When you tune to a Locked Channel, a screen appears for you to enter the Parental Password.
- Enter the four digit Parental Password. The channel will appear.
- If you enter the wrong password, an Invalid Password screen appears and prompts you to enter the correct password.
- Once the correct password is entered the channel will remain unlocked until the channel is changed.

TO HEAR A DIFFERENT LANGUAGE

Some networks provide alternative language feeds. An alternative language is available when the **LANG** icon on the information bar is yellow.

- To listen to an alternative language feed, press the **LANG** button.
- A list of alternative language feeds will appear.
- Use the **▲▼** buttons to select the language you desire.
- Press **OK**. Press **EXIT** to remove the list. The alternate language will be heard.
- You can return to English by repeating these steps or by changing the channel.

Note: It is common for TV Networks to send alternate language feeds in English or with no content (nothing to hear). This is not a problem with your TV, the DTA Converter or the cable signal.

TROUBLESHOOTING

The table below lists some of the frequently used troubleshooting steps. If you can not solve your problem after following these troubleshooting procedures, please contact your service provider. Do not open the DTA Converter cover.

SYMPTOM	CAUSE	REMEDY
The front panel has no light (green or red)	The power cord is not plugged in	Check that the power cord is securely plugged into the wall outlet.
No Picture or Sound	Wrong connection of the Audio/Video output of the Digital Converter to TV	Check the A/V cable connections between the DTA Converter and TV to assure they are securely connected. Refer to section (2) for detailed instructions.
	Wrong connection of the cable input	Make sure the coaxial cable connection is securely tightened on both the TV and wall outlet, hand-tighten if necessary.
	Audio muting	Press the MUTE button
	TV on wrong channel	Set TV to Channel 4. Set switch on back of DTA Converter to channel 4.
The remote control does not operate	TV Power	Be sure the TV power is turned on.
	Batteries are improperly inserted or not functioning	Check to be sure the batteries are inserted properly. It may be time to replace the AAA batteries for the remote control.



SAFETY INFORMATION

Make sure to place the DTA Converter in a well ventilated area and away from any heat source. To avoid electric shock:

- Do not open the cover of the DTA Converter
- Make sure the DTA Converter is powered off when connecting cables.
- Do not use the power cord if it becomes damaged.

Install the DTA Converter in a horizontal position. Do not place any heavy object, such as a TV set, on the DTA Converter.

digital upgrade

MADE EASY!



DTA Converter
Quick Start Guide

evolution