



Raven X 1x/EV-DO

User Guide

20070914
Rev 1.0C



Raven X 1x/EV-DO

User Guide

20070914
Rev 1.0C

Important Notice

Due to the nature of wireless communications, transmission and reception of data can never be guaranteed. Data may be delayed, corrupted (i.e., have errors) or be totally lost. Although significant delays or losses of data are rare when wireless devices such as the Sierra Wireless AirLink Raven X are used in a normal manner with a well-constructed network, the Sierra Wireless AirLink Raven X should not be used in situations where failure to transmit or receive data could result in damage of any kind to the user or any other party, including but not limited to personal injury, death, or loss of property. Sierra Wireless accepts no responsibility for damages of any kind resulting from delays or errors in data transmitted or received using the Sierra Wireless AirLink Raven X, or for failure of the Sierra Wireless AirLink Raven X to transmit or receive such data.

Safety and Hazards

Do not operate the Sierra Wireless AirLink Raven X in areas where blasting is in progress, where explosive atmospheres may be present, near medical equipment, near life support equipment, or any equipment which may be susceptible to any form of radio interference. In such areas, the Sierra Wireless AirLink Raven X **MUST BE POWERED OFF**. The Sierra Wireless AirLink Raven X can transmit signals that could interfere with this equipment.

Do not operate the Sierra Wireless AirLink Raven X in any aircraft, whether the aircraft is on the ground or in flight. In aircraft, the Sierra Wireless AirLink Raven X **MUST BE POWERED OFF**. When operating, the Sierra Wireless AirLink Raven X can transmit signals that could interfere with various onboard systems.

Note: Some airlines may permit the use of cellular phones while the aircraft is on the ground and the door is open. Sierra Wireless AirLink Raven X may be used at this time.

The driver or operator of any vehicle should not operate the Sierra Wireless AirLink Raven X while in control of a vehicle. Doing so will detract from the driver or operator's control and operation of that vehicle. In some states and provinces, operating such communications devices while in control of a vehicle is an offence.

Limitation of Liability

The information in this manual is subject to change without notice and does not represent a commitment on the part of Sierra Wireless. SIERRA WIRELESS AND ITS AFFILIATES SPECIFICALLY DISCLAIM LIABILITY FOR ANY AND ALL

DIRECT, INDIRECT, SPECIAL, GENERAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR EXEMPLARY DAMAGES INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS OR REVENUE OR ANTICIPATED PROFITS OR REVENUE ARISING OUT OF THE USE OR INABILITY TO USE ANY SIERRA WIRELESS PRODUCT, EVEN IF SIERRA WIRELESS AND/OR ITS AFFILIATES HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR THEY ARE FORESEEABLE OR FOR CLAIMS BY ANY THIRD PARTY.

Notwithstanding the foregoing, in no event shall Sierra Wireless and/or its affiliates aggregate liability arising under or in connection with the Sierra Wireless product, regardless of the number of events, occurrences, or claims giving rise to liability, be in excess of the price paid by the purchaser for the Sierra Wireless product.

Patents

Portions of this product may be covered by some or all of the following US patents:

5,515,013	5,629,960	5,845,216	5,847,553	5,878,234
5,890,057	5,929,815	6,169,884	6,191,741	6,199,168
6,339,405	6,359,591	6,400,336	6,516,204	6,561,851
6,643,501	6,653,979	6,697,030	6,785,830	6,845,249
6,847,830	6,876,697	6,879,585	6,886,049	6,968,171
6,985,757	7,023,878	7,053,843	7,106,569	7,145,267
7,200,512	D442,170	D459,303		

and other patents pending.

This product includes
technology licensed from:

QUALCOMM® 3G

Licensed by QUALCOMM Incorporated under one or more of the following United States patents and/or their counterparts in other nations:

4,901,307	5,056,109	5,101,501	5,109,390	5,228,054
5,267,261	5,267,262	5,337,338	5,414,796	5,416,797
5,490,165	5,504,773	5,506,865	5,511,073	5,535,239
5,544,196	5,568,483	5,600,754	5,657,420	5,659,569
5,710,784	5,778,338			

Manufactured or sold by Sierra Wireless or its licensees under one or more patents licensed from InterDigital Group.

Copyright

© 2009 Sierra Wireless. All rights reserved.

Trademarks

AirCard® and “Heart of the Wireless Machine®” are registered trademarks of Sierra Wireless. Watcher® is a trademark of Sierra Wireless, registered in the European Community.

Contact Information

AirLink™ and AceWare™ are trademarks of Sierra Wireless. Sierra Wireless, the Sierra Wireless logo, the red wave design, and the red-tipped antenna are trademarks of Sierra Wireless.

Windows® is a registered trademark of Microsoft Corporation.

QUALCOMM® is a registered trademark of QUALCOMM Incorporated. Used under license.

Other trademarks are the property of the respective owners.

Support Desk:	Phone:	1-877-231-1144
	Hours:	5:00 AM to 5:00 PM Pacific Time, Monday to Friday, except US Holidays
	E-mail:	support@sierrawireless.com
Sales Desk:	Phone:	1-510-624-4200 1-604-232-1488
	Hours:	8:00 AM to 5:00 PM Pacific Time
	E-mail:	MobileandM2Msales@sierrawireless.com
Post:	Sierra Wireless America 39677 Eureka Drive Newark, CA USA 94560 Sierra Wireless 13811 Wireless Way Richmond, BC Canada V6V 3A4	
Fax:	1-510-624-4299 1-604-231-1109	
Web:	www.sierrawireless.com	

Consult our website for up-to-date product descriptions, documentation, application notes, firmware upgrades, troubleshooting tips, and press releases:

www.sierrawireless.com

Revision number	Release date	Changes
1.x	2003-2005	AirLink Communications documentation - CDPD, CDMA, and GPRS.
2.x	Q2: 2005-Q2: 2007	AirLink Communications documentation - CDMA, EV-DO, EDGE, and HSUPA/HSDPA.
3.0	Q2: 2008	Converted documentation from AirLink Communications documentation format into Sierra Wireless documentation format. Phase II of the conversion completed. Raven modem line documentation is revised.



Contents

Introduction to the Raven X	8
ALEOS™	8
AceWare™	9
AceManager	9
Simplified Deployment	10
Monitor and Control	10
AceNet	10
Network Monitoring	11
AceView	11
Modem Doctor	11
Modem Doctor USB	12
Connecting to your cellular Network	13
Steps of a connection:	13
Dynamic vs. Static IP Addresses	14
EV-DO	15
Security	16
 Specifications	 17
Features and Benefits	17
Technology	17
Bands	17
Environmental	17
Power Consumption: (@12V DC)	17
Standards/Approvals	17
Host Interfaces	18
Dimensions	18
Application Interfaces	18
LED Indicators	18
Interface Port Pin-Outs	19
Serial Port	19
Power Connector	19
 Activating your Raven X on your cellular Network	 20
Activating Using AT Commands	20
Using Direct Commands to the Internal Hardware	21
Activating the Modem	21
Private Networking	22
 Hardware Installation of the Raven X	 24
Connecting to Power	25

Connecting to a Computer or other Device	26
Indicator Lights	26
Light Patterns.....	27
Mounting.....	28
Configuring your Raven X	29
Using AceManager	29
Using Templates	32
Using a Terminal Application with AT Commands	37
AT Commands	41
Data Communication and Host Modes	42
Basic Modes	42
Serial Modes.....	42
Data Communication	43
Basic Modes.....	43
Start up Mode	43
AT Mode	44
PassThru Mode	45
Telnet Mode	46
Serial Modes	47
PPP	47
Link Radio Coverage.....	49
SLIP	49
UDP Auto Answer	50
Reliable UDP	51
UDP Multicast Mode.....	51
Hybrid Modes	53
Data Communication	53
Public and Private Mode	53
Internal DHCP Server	55
Additional Connected Networks	56
Basic Routing	56
Port Forwarding.....	56
Firewall Functions	58
VPN	61
Split Tunnel	62
VPN 1	63
GRE configuration	66
Keepalive	66
Configuring Keepalive	67
Data usage using Keepalive.....	68

IP Manager	69
Reasons to contact the modem and/or the connected device:	69
Understanding Domain Names	70
car54.mydomain.com	71
car54.mydomain.com.ca	71
Dynamic Names	71
Using IP Manager with your Raven X	72
Restrictions for Modem Name	73
Data Usage for IP Manager Server Updates	73
Eairlink.com	74
Understanding DNS	74
Configuring DNS	74
The "PPP-Peer" Domain Name	76
 Configuring Modbus/BSAP	 77
Modbus Overview	77
Telemetry	77
Remote Terminal Unit (RTU)	77
Supervisory Control and Data Acquisition (SCADA)	78
Programmable Logic Controller (PLC)	78
Modbus TCP/IP	78
Raven Modbus on UDP	78
Configuring the Raven X at the Polling Host for Modbus on UDP	79
Configuring the Remote Raven Xs for Modbus with UDP	82
 SNMP : Simple Network Management Protocol	 87
Management Information Base (MIB)	87
SNMP Traps	87
SNMP Configuration	88
Listening Port	89
Security Level	89
User Name and Password	89
Trap Destination	90
Community String	91
SNMP MIB Definition Sample	91
Display Responses	95
Product ID	96
 Configuration Commands	 97
Info (information)	97
*DEVICEID?	98
*ETHMAC?	98

*NETPHONE?	98
&V	98
In	98
Information Displayed in AceManager without AT Commands Listed	99
Status	99
*BOARDTEMP?	100
*HOSTMODE?	100
*NETCHAN?	100
*NETERR?	100
*NETIP?	100
*NETOP?	100
*NETRSSI?	100
*NETSERV?	100
*NETSTATE?	100
*PRLSTATUS?	101
*POWERIN?	101
+HWTEMP?	101
+PRL?	101
Information Displayed in AceManager without AT Commands Listed	101
AT Commands Requiring PassThru mode	102
+GSN	102
Common	102
Misc (Miscellaneous)	102
Enable Event Reporting = n	102
+++	102
A/	102
A	103
D[method][d.d.d.d]/[ppppp] or D[method][@name]/[ppppp]	103
DS=n	103
Hn	104
O	104
OPRG=n	104
S53=[method][d.d.d.d]/[ppppp]	104
Z	104
&W	105
*DATE=[mm/dd/yyyy],[hh:mm:ss]	105
*DPORT=n	105
*HOSTPAP=n	105
*NETALLOWZEROIP=n	105
*NETPW=pw	105
*NETPHONE?	105
*NETROAMPREF=n	105
*NETUID=uid	106
*STATICIP=d.d.d.d	106
*STATUSCHK=n	106
Serial	106
En	107
Qn	107
S3=n	107
S4=n	107
S5=n	108

S6=n	108
S8=n	108
S9=n	108
S10=n	108
S23=[speed],[databits][parity][stop bits]	108
S50=n	109
S51=n	109
S211=n	109
Vn	109
Xn	109
&Cn	109
&Dn	110
&Sn	110
\APPP	110
\ASLIP	110
\Qn	110
*CTSE=n	110
*NUMTOIP=n	111
*PPPNOCARRIER=n	111
TCP	111
S0=n	111
S7=n	112
S60=n	112
S221=n	112
TCPS=n	112
TCPT=n	112
*ENQ=n	112
UDP	113
AIP=n	113
HOR=n	113
MDhh	113
S82=n	113
S83=n	114
*DU=n	114
*UALL=n	114
*UDPLAST=n	114
*USD=n	114
DNS	115
*DNSn=d.d.d.d	115
*DNSUPDATE=n	115
*DNSUSER=d.d.d.d	115
Dynamic IP	115
*DOMAIN=name	116
*IPMANAGERn=[name][IP address]	116
*IPMGRKEYn=key	116
*IPMGRUPDATEn=m	117
*MODEMNAME=name	117
PPP/Ethernet	117
*DHCPSEVER=n	118
*HOSTAUTH=n	119
*HOSTNETMASK=n.n.n.n	119
*HOSTPEERIP=d.d.d.d	119

*HOSTPRIVIP=d.d.d.d	119
*HOSTPRIVMODE=n	119
*HOSTPW=string	120
*HOSTUID=string	120
PassThru	120
\APASSTHRU	120
*CSX1=n	120
*PTINIT=string	121
*PTREFRESH=n	121
*RESETPERIOD=n	121
SMTP	121
*NETSMS2EMAIL=n	122
*SMTPADDR=[d.d.d.d][name]	122
*SMTPFROM=email	122
*SMTPPW=pw	122
*SMTPSEND=email[body]	122
*SMTPSTATUS?	123
*SMTPSUBJ=subject	123
*SMTPUSER=user	123
Other	123
DAE=n	124
*DATZ=n	124
*IPPING=n	124
*IPPINGADDR=[d.d.d.d][name]	124
*MSCIUPDADDR=name[/port]	124
*MSCIUPDPERIOD=n	124
*NETWDOG=n	125
*RESETCFG	125
*SNMPCOMMUNITY=string	125
*SNMPPORT=n	125
*SNMPSECLVL=n	125
*SNMPTRAPDEST=host[/port]	126
*SNTP=n	126
*SNTPADDR=[d.d.d.d][name]	126
*TELNETTIMEOUT=n	126
*TPORT=n	126
*TQUIT	126
Firewall	127
FM=n	127
Fn=[d.d.d.d]	128
Firewall Range	128
Port Forwarding	128
Number of PF Entries = n	129
Public Port = n	129
Host/IF = n	129
Host IP = d.d.d.d	129
Private Port = n	129
Logging	130
*DBGCOMMLVL=n	130
*DBGDHCPLVL=n	130
*DBGETHLVL=n	130
*DBGIPLVL=n	130

*DBGPPPLVL=n	131
IPL=n	132
MVLEN=n	132
MVMSK=hh	132
MVOFF=n	132
MVOPT=n	132
MVTYP=n	132
RKEY=n	133
Addr List	133
MLISTid=d.d.d.d	133
MLISTXhexid=d.d.d.d	133
1x/EV-DO	134
+CTA=n	134
\$QCMIP=n	134
~NAMLCK=nnnnnn	135
*EVDODIVERSITY=n	135
*PROVISION=MSL,MDN,MIN[,SID][,NID]	135
*PROVISION2=MSL,MDN,MIN[,SID][,NID]	135
~NAMVAL=nam[,min,msid,sid,nid]	136
PPP over Ethernet (PPPoE)	137
Configuring the Raven X for PPPoE	137
Configuring a PPPoE Connection in Windows	139
Connecting to the Internet with PPPoE	146
Windows Dial-up Networking (DUN)	147
Installing a modem driver for Raven X	147
Creating a Dial-Up Networking (PPP) Connection	152
Connecting to the Internet Using DUN	162
AceView	162
Windows DUN	163

>> 1: Introduction to the Raven X

- ALEOS™
- AceWare™
- Connecting to your cellular Network
- EV-DO

The Raven X is equipped with a robust ARM9 processor and embedded ALEOS™ technology to optimize performance on today's high speed data networks. The high-speed interface and 3G-optimized architecture make the Raven X ideal for various commercial mobile or portable network connectivity applications. Embedded machine protocols make it equally suited for remote industrial and M2M deployments.

Key applications for the Raven X include wireless networking, retail/POS, vending/kiosks, multimedia and remote monitoring and control.



Figure 1-1: Sierra Wireless AirLink Raven X

ALEOS™

ALEOS, the embedded core technology of the Sierra Wireless AirLink products simplifies installation, operation and maintenance of any solution, and provides an always-on, always-aware intelligent connection for mission-critical applications. ALEOS enables:

- Persistent Network Connectivity
- Over-The-Air (OTA) Upgrades
- Wireless Optimized TCP/IP
- Real-Time Notification
- Extensive Machine Protocols
- Packet Level Diagnostics
- Device Management & Control

- Protocol Spoofing



Figure 1-2: Powered by ALEOS

AceWare™

A wireless solution is not complete until you have software tools to manage the devices monitoring your valuable equipment. AceWare™ is the device management and monitoring application suite for Sierra Wireless AirLink products powered by ALEOS.

- AceManager
- AceNet
- AceView
- Modem Doctor

These modem utilities, except AceNet, are free of charge to those who own Sierra Wireless AirLink modems. You can download the applications and their user guides from the Sierra Wireless AirLink Solutions web site: <http://www.sierrawireless.com/support>. Contact your dealer or Sierra Wireless representative for information on AceNet.

Note: AceView, AceManager, and AceNet require the Microsoft .NET Framework v. 1.1 and Microsoft Windows 98, Windows 2000, Windows XP, or later. You can obtain the Microsoft .NET Framework from Microsoft at: <http://www.microsoft.com/>.

AceManager

AceManager, the AceWare remote configuration and monitoring tool, simplifies deployment and provides extensive monitoring, control and management capabilities. AceManager gives you the power to monitor and control your Sierra Wireless AirLink communications platforms in real-time.

GROUPS	MODEM DATA				PRINTABLE VIEW
INFO	AT	Name	Value	New Value	
STATUS	*DBGPPPLVL	PPP Logging Detail	1	<input type="text"/>	
COMMON	*DBGIPLVL	IP Logging Detail	0	<input type="text"/>	
Misc	*DBGCOMMLVL	COM Port Logging Detail	0	<input type="text"/>	
USB	*DBGETHLVL	Ethernet Logging Detail	0	<input type="text"/>	
Serial	*DBGDHCPLVL	DHCP Logging Detail	0	<input type="text"/>	
Telnet					
TCP					
UDP					
DNS					
Dynamic IP					
PPP/Ethernet					
PassThru					
SMTP					
Other					
Low Power					
Firewall - IP					
Firewall - Ports					
Port Forwarding					
LOGGING					

Figure 1-3: AceManager

Simplified Deployment

AceManager provides the ability to remotely set up and configure your Sierra Wireless AirLink products. Remote device setup and configuration reduces the deployment timeline of your wireless solution and provides a quicker path to ROI.

Templates allow you to easily configure other devices in your fleet with identical settings, ensuring a simple, accurate deployment.

Monitor and Control

AceManager allows an administrator to remotely monitor a modem's status, health and configuration settings. The user interface displays signal strength, cell site information, byte counters and error conditions, enabling you to pinpoint any issues and troubleshoot immediately.

AceManager enables remote configuration and parameter settings to be changed or reset instantly over the air, change a device's port configuration, IP address settings, and much more. After configuring one modem, use the template feature to copy that device configuration to other modems.

Tip: Configuration steps and examples in this guide use AceManager.

AceNet

AceNet, the enterprise grade productivity enhancing tool, enables you to efficiently deploy and monitor Sierra Wireless AirLink products on a large scale.

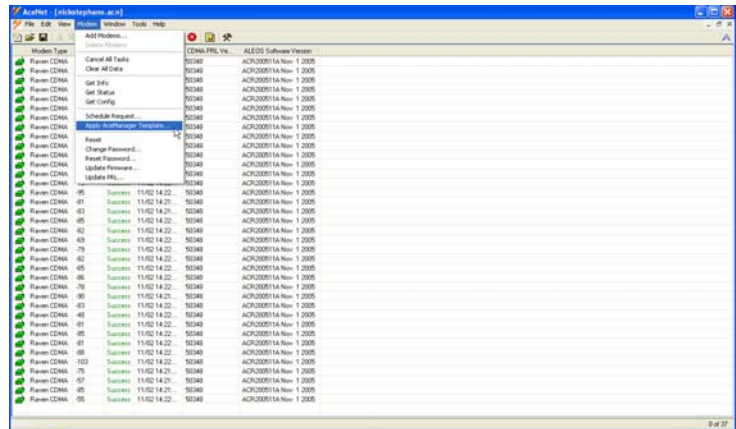


Figure 1-4: AceNet

Network Monitoring

AceNet allows you to efficiently deploy, monitor, and maintain wireless networks of any size by enabling you to quickly configure an entire group of Sierra Wireless AirLink modems to the same parameter settings using templates built with AceManager.

To ensure your implementation is optimal, users can easily see when modems are out of contact and periodically poll each device for performance statistics.

AceView

AceView is an efficient status and connection monitoring application with a low-profile, easy to read interface.



Figure 1-5: AceView

Modem Doctor

Modem Doctor is a troubleshooting and diagnostics utility. This utility will allow you to get a log file of the Raven X activity which you can then send to Sierra Wireless support,

erase the current configuration completely, and temporarily set the Raven X to a known configuration to aid in troubleshooting (SOS mode).

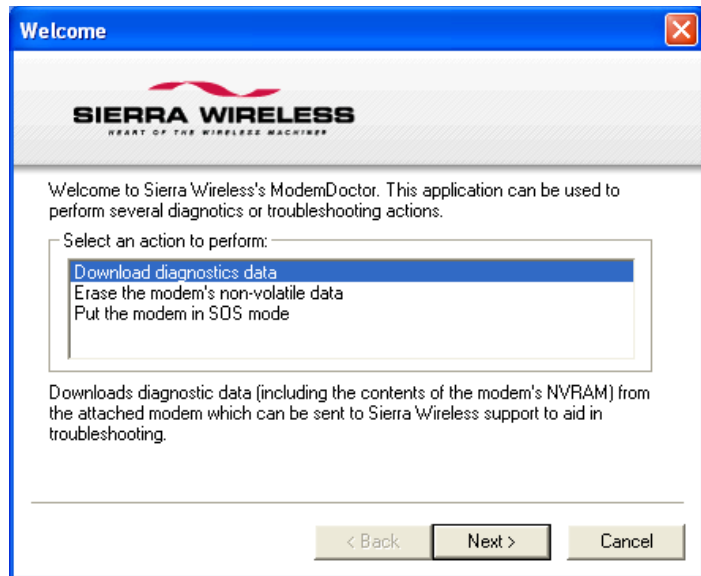


Figure 1-6: Modem Doctor

Modem Doctor USB

1. Open the ModemDoctorUSB.exe.
2. Select any one option.

Note: If you are using USB port as serial, then USB device is set to "0" and if you are using the default option then the USB device is set to "1".

The available port is automatically detected. Password is the fault password.

3. Press Erase. The modem will then reset.

Note: If you erase the factory defaults will be restored. USBnet is the factory default port.

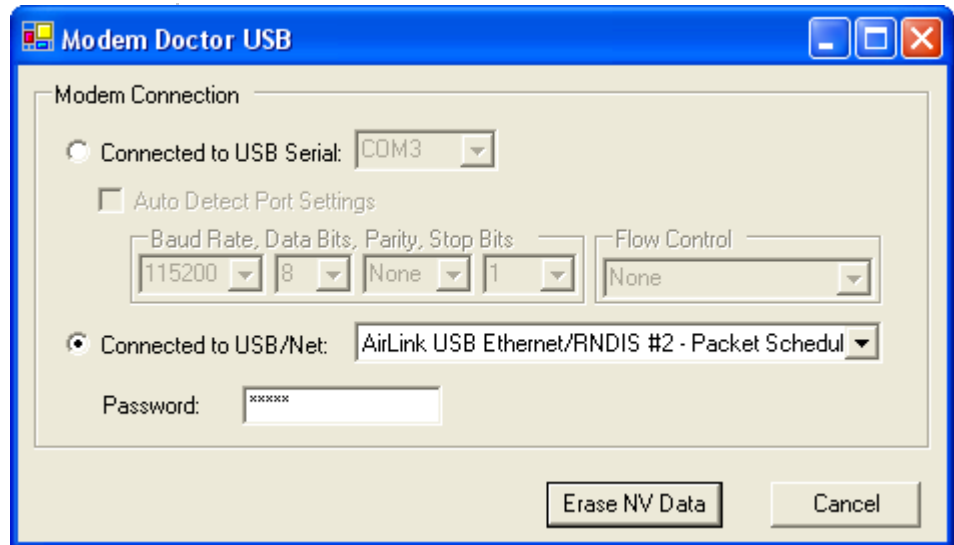


Figure 1-7: Modem Doctor: USB connection

Connecting to your cellular Network

The Raven X uses your cellular Network as an ISP (Internet Service Provider) to connect you to the Internet.

Steps of a connection:

1. When your Raven X is powered on, it automatically searches for cellular service using CDMA.
2. Your Raven X establishes a PPP (Point to Point Protocol or “dial” up connection) link to the your cellular Network network, also called registering on the network, and receives an IP address.
3. When your Raven X has received its IP address from your cellular Network, a connection to the Internet or the cellular network is also available for a computer or other device connected directly to the Raven X.



Figure 1-8: Connecting to the Internet

The Raven X will perform a *one-to-one* routing for all internet traffic to and from the computer or other end device. One-to-one means that your Raven X will provide a connection for one device to the Internet at a time. In Private Mode, the Raven X will provide NAT (Network Address Translation) for the computer or other end device.

Note: The Raven X does not provide advanced routing required by one-to-many (several devices connected to one port). If you need to have more than one device connected to the Internet through your Raven X, you will need to have a router connected to the modem. The modem would provide the one-to-one connection to the router with the router configured to provide a broader NAT service to the other devices connected to it.

Dynamic vs. Static IP Addresses

There are two types of addresses on networks: dynamic and static.

- Dynamic addresses are assigned on a “need to have” basis. Your Raven X might not always receive the same address each time it connects with your cellular Network.
- Static addresses are permanently assigned to a particular account and will always be used whenever your Raven X connects to the Internet. The IP address will not be given to anyone else.

Most ISPs (cellular included) use dynamic IP addresses rather than static IP addresses since it allows them to reuse a smaller number of IP addresses for a large number of customers. A dynamic IP address is suitable for many common Internet

uses, such as web browsing, looking up data on another computer system, or other client functions (such as data only being sent out or only being received after an initial request).

Tip: *If your account with your cellular Network includes a dynamic IP address and you need a static IP, please consult your cellular Network Representative for more information about changing your account for static IP support.*

If you need to contact your Raven X, a device connected to the Raven X, or a host system using the Raven X from the Internet, you need to have a known IP (such as one which is static) or domain name (an IP address which is converted by a DNS server into a word based name). If you have a dynamic IP address for your modem, you can use a Dynamic DNS service (such as IP Manager) to translate your IP address into a domain name.

Caution: *If you want to connect remotely to your Raven X using TCP/IP, the IP address given to your modem by your cellular Network cannot be a private or internal IP address (such as a custom APN or special private network Data Link) unless you are on the same network or inside that network's firewall (such as with frame relay).*

EV-DO

CDMA (Code Division Multiple Access) is the underlying digital radio network technology used by many cellular providers across the globe and is prevalent in North America. To provide backward compatibility and seamless connections in a wider range of locations, Sierra Wireless EV-DO products your Raven X will fall back to 1x when EV-DO is not available.

Sierra Wireless is certified with the prominent North American 1x and EV-DO carriers.

EV-DO revision A is an enhancement on the original revision 0 adding expanded upload capabilities and a more robust connection overall. In addition to increasing the downlink speed, revision A also increases the uplink speed. In addition, it is backwards compatible and automatically connects with existing and broadly deployed EV-DO Rev. 0 and 1x networks ensuring reliable and pervasive connectivity.

Security

1x data transmissions are highly secure. Originally developed based upon the “spread spectrum” pioneered by the US Department of Defense, security in CDMA technologies is obtained by spreading the digital information contained in a particular signal of interest over multiple coded paths, over a much greater bandwidth than the original signal.

>> 2: Specifications

- Interface Port Pin-Outs
- Power Connector

Features and Benefits

- Embedded Intelligence
- Low Power Consumption
- High-Speed Processor
- High-Speed 2-way Data
- Ethernet and Serial Port
- Machine Protocols
- Persistent Network Connectivity
- Remote Management and Configuration
- Class I Div 2 Certified

Technology

- CDMA EV-DO Revision A
With Fallback to:
 - CDMA 1x EV-DO (Revision 0)
 - CDMA 1xRTT
 - CDMA IS-95

Bands

- 800 Mhz Cellular
- 1900 Mhz PCS

Environmental

- Operating Temperature:
 - -30° to 70° Celsius
- ° Storage Temperature:
 - -40° to 85° Celsius

Power Consumption: (@12V DC)

- Transmit/Receive (Typical/Max) 239/270 mA
- Idle 104 mA
- Dormant 85 mA
- Input Voltage 9 - 28V DC

Standards/Approvals

- Carrier specific approvals
- FCC

- Industry Canada
- This apparatus is suitable for use in Class I, Division 2, Groups A, B, C, D or unclassified or non-hazardous locations.

Warning: *Explosion Hazard - Substitution of any components may impair suitability for Class I, Division 2.*

Host Interfaces

- Ethernet: 10/100 Mbps RJ-45
- RS-232: DB-9 DCE (300-230400 baud)
- Antenna Connection:
 - Primary Cellular - 50 Ohm SMA
 - Receive Diversity - 50 Ohm SMA

Warning: *The antenna should be installed no closer than 20 cm from the human body. It is one of the RSS-102 requirements for devices not requiring SAR.*

Dimensions

- 143mm x 37mm x 75mm
- 317 grams

Application Interfaces

- TCP/IP, UDP/IP, DHCP, HTTP, SNMP, SMTP, SMS, MSCI, Binary, Modbus, and more

LED Indicators

- Network
- Signal
- Activity
- Power

Interface Port Pin-Outs

Serial Port

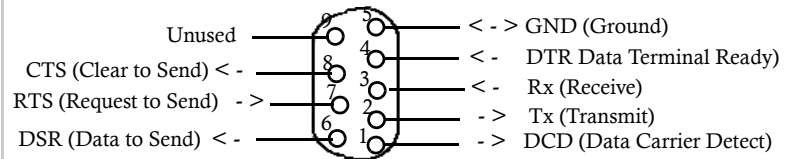


Figure 2-1: Serial Port Diagram: Female DB-9 DCE (not to scale)

Power Connector

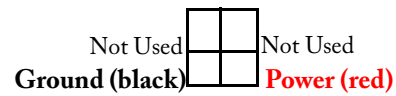 


Figure 2-2: Power Connector (not to scale)

3: Activating your Raven X on your cellular Network

- Activating Using AT Commands

This chapter provides step-by-step directions for activating your Raven X on your cellular Network's network.

Activating Using AT Commands

An alternate method to configure and activate your Raven X is by using AT commands sent directly to the modem with a terminal application.

Caution: *It is not possible to activate the Raven X using either Aceweb or AceNet.*

1. Set telnet timeout in to 20 minutes.
2. Save the telnet setting.
3. Enter the user name of your account (NAI). The user name is usually expressed as an email address with phone number of the account (example, 1234567@carrier.com). This information should be provided by your carrier. You may not need this step.

AT*NETUID=[NAI]

4. Enter the password of your account. This information should be provided by your carrier. You may not need this step.

AT*NETPW=[password]

5. Verify ALEOS has established communication to the internal hardware.
6. Enter the activation command appropriate for your type of account. The SID and NID are optional and only required if your account type uses them.

- If you have the same number for the MIN and MDN or MSID:

AT*PROVISION=MSL,MDN[,SID,NID]

- If you have the different numbers for the MIN and MDN or MSID:

AT*PROVISION2=MSL,MDN,MIN/MSID[,SID,NID]

Using Direct Commands to the Internal Hardware

Use only if the ALEOS method is unsuccessful.

Activating the Modem

1. Set telnet timeout in to 20 minutes.

AT*TELNETTIMEOUT=20

2. Save the telnet setting.

AT&W

3. Verify ALEOS has established communication to the internal hardware.

ATI3

4. Enter the user name of your account (NAI). The user name is usually expressed as an email address with phone number of the account (example, 1234567@carrier.com). This information should be provided by your carrier. You may not need this step.

AT*NETUID=[NAI]

5. Enter the password of your account. This information should be provided by your carrier. You may not need this step.

AT*NETPW=[password]

6. Put modem into passthru mode to by-pass ALEOS. This will allow direct communication with the wireless module for programming. Entering passthru will take 10-15 seconds and will return an 'OK' when it is complete.

AT\APASSTHRU

7. Verify you are in Passthru mode.

AT!STATUS

8. Unlock the module.

AT~NAMLCK=MSL

9. Set the MDN and MSID.

AT~NAMVAL=0,MDN,MSID,0,65535

10. Verify the settings are what you intended to enter.

AT~NAMVAL?0

Note: If your carrier supports IOTA, start the IOTA session. Not all carriers support IOTA. Please check with your carrier before you use this command.

11. Start the IOTA session.

AT!!IOTASTART

Status will be output until IOTA completes with 'IOTA Successful' or '1012 ERROR'.

Note: These AT commands are only needed if your cellular account supports Private Networking . Not all of the parameters are required. Please check with your carrier, which parameters need to be set.

12. Reset the module.

AT!RESET

13. Press the reset button on the front of the modem. When the modem restarts, it should register on the network.

Private Networking

Note: Please activate the modem first, before following the Private Networking steps.

1. Put modem into passthru mode.

AT\APASSTHRU

2. Verify you are in Passthru mode.

AT!STATUS

3. Set the NAI.

AT\$QCMIPNAI=[NAI],1

4. Set the IP address of the primary home agent.

AT\$QCMIPPHA=[PHA_IP],1

5. Set the IP address of the secondary home agent.

AT\$QCMIPSHA=[SHA_IP],1

6. Set the home agent shared secret key.

AT\$QCMIPMHSS=oursecretmnakey,1

7. Set the AAA shared secret key.

AT\$QCMIPMASS=[AAA_Key],1

8. Enable reverse tunneling.


AT\$QCMIPRT=1,1

9. Enter the SPI to authenticate on the primary and secondary Home Agents. This is provided by your carrier or HA administrator.

AT\$QCMIPMHSPI

10. Enter the SPI required by the Authentication, Authorization and Accounting server. This is provided by your carrier or AAA administrator.

AT\$QCMIPMASPI

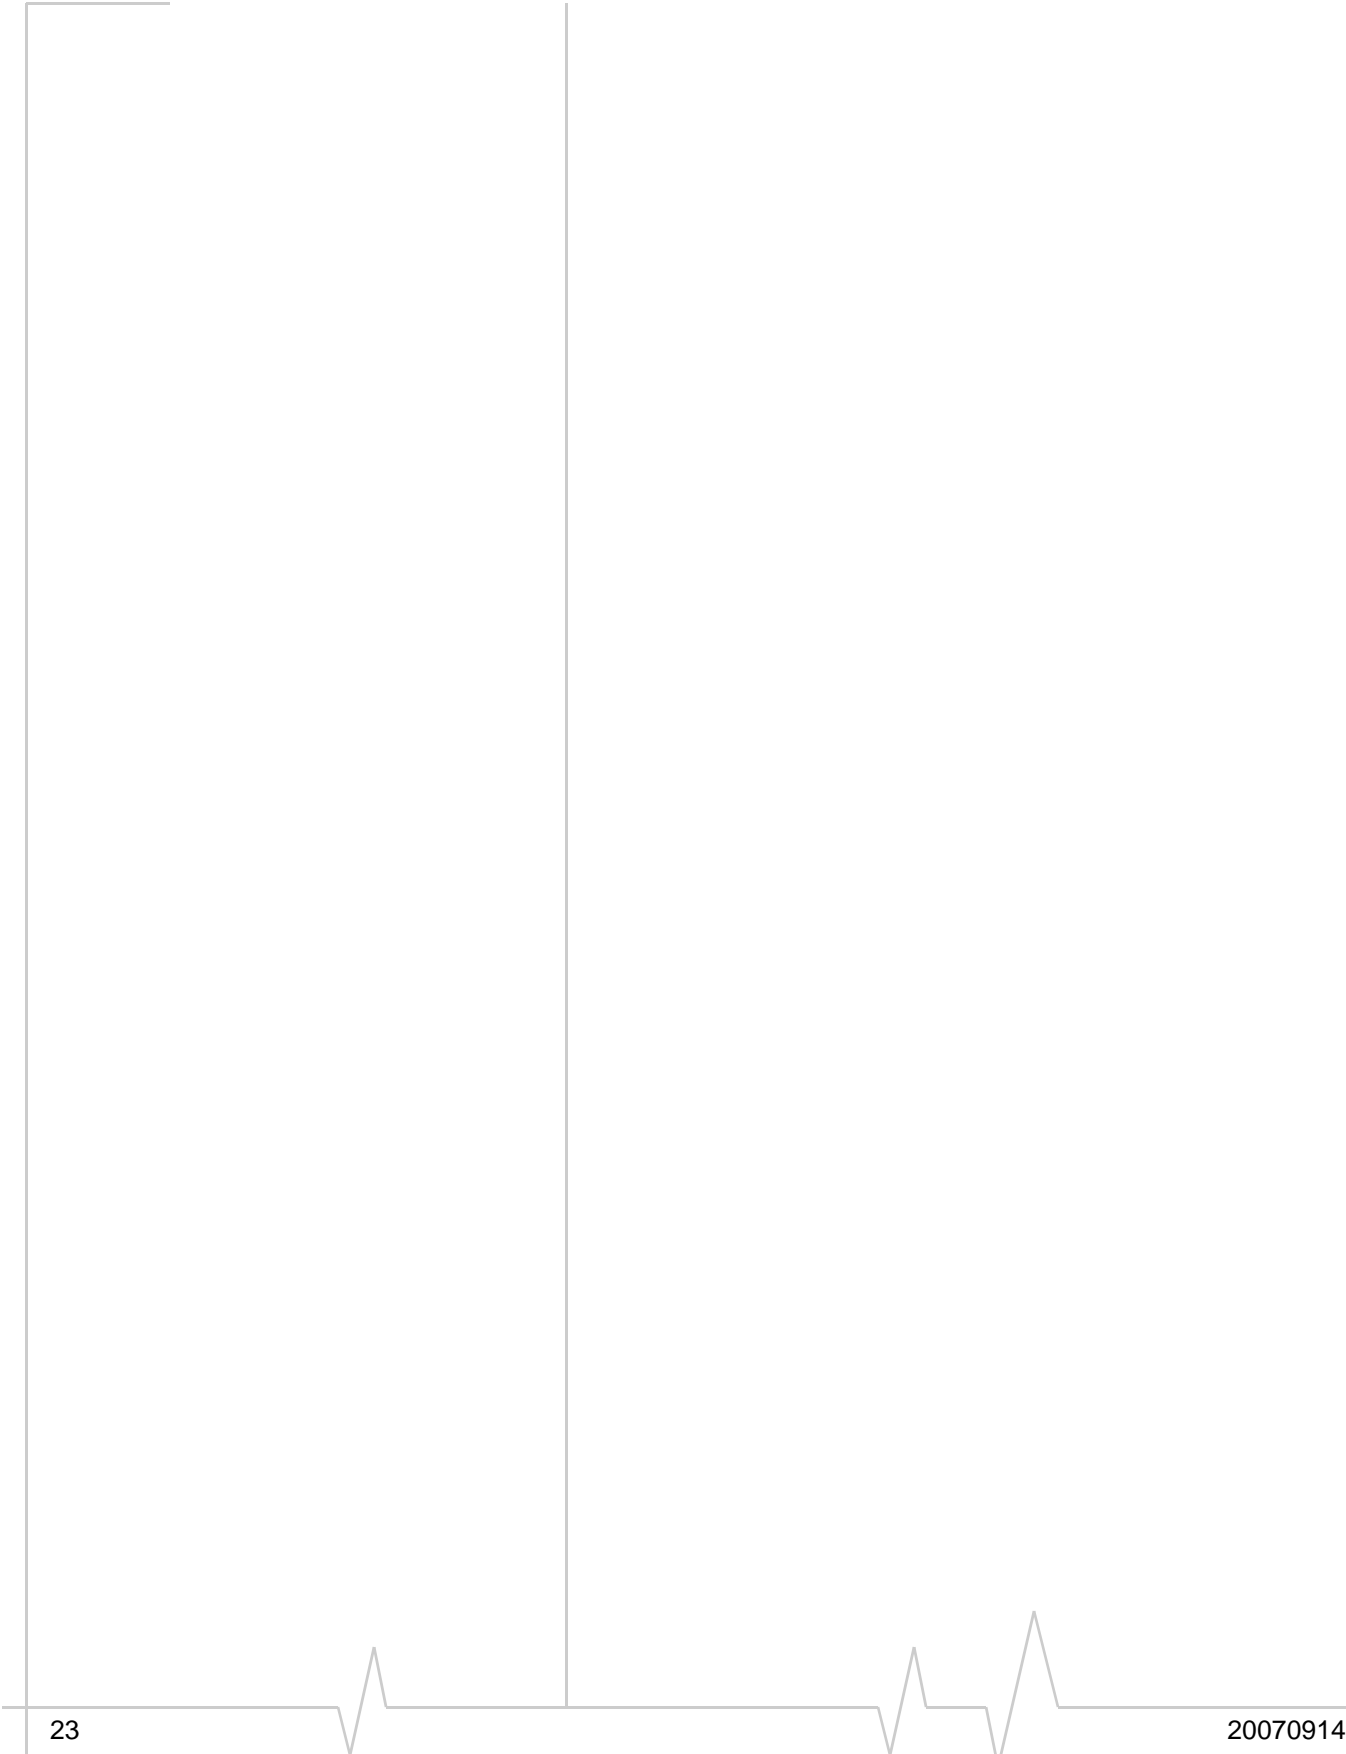

4: Hardware Installation of the Raven X

- Connecting to Power
- Connecting to a Computer or other Device
- Indicator Lights
- Mounting

Note: During installation, please be sure that the cables are secure but do not bear any additional weight that could loosen the connector from the unit.

Your Raven X should be mounted in a position that allows easy access for the cables so they are not bent, constricted, in close proximity to high amperage, or exposed to extreme temperatures. The LEDs on the front panel should be visible for ease of operational verification. You should ensure that there is adequate airflow around the modem but that it is kept free from direct exposure to the elements, such as sun, rain, dust, etc.

Caution: *The Raven X is in a hardened case and designed for use in industrial and extreme environments. However, unless you are using cables expressly designed for such environments, they can fail if exposed to the same conditions the Raven X can withstand.*

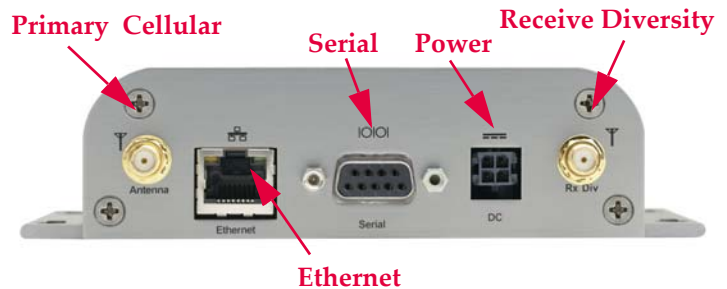


Figure 4-1: Raven X Connectors

Note: This device is not intended for use within close proximity of the human body. Antenna installation should provide for at least a 20 CM separation from the operator.

Antennas selected should not exceed a maximum gain of 5 dBi under standard installation configuration. In more complex installations (such as those requiring long lengths of cable and/or multiple connections), it's imperative that the installer follow maximum dBi gain guidelines in accordance with the

Note: Use of receive diversity for EV-DO is optional. Data transmission and reception may be adversely affected if it is not used.

radio communications regulations of the Federal Communications Commission (FCC), Industry Canada, or your country's regulatory body (if used outside the US).

Your Raven X will work with most cellular antennas with a SMA connector. Connect the primary antenna or primary RF cable directly to the antenna connector on the back of the Raven X.

Tip: *When using a cable to an antenna placed away from the modem, minimize the length of your cable. All gain from a more advantageous antenna placement can be lost with a long cable to the modem.*

To provide for diversity in the signal reception, connect the second antenna to the second antenna port (SMA, labeled Rx Div) on the back of the Raven X.

Caution: *If you are not using a diversity antenna, you should disable the receive diversity option. In Ace Manager in the 1x/EV-DO group, configure *EVDODIVERSITY.*

Connecting to Power

Your Raven X can be used with either DC or AC, with the appropriate power adapter. DC cables and AC adapters are available as optional accessories in addition to the one included with your Raven X.

The DC power cable positive lead should be connected to the battery or power source positive terminal. The power cable negative lead should be connected to the battery or power source negative terminal.

Tip: *The DC power cable has a white wire lead in addition to the power positive and negative. This is for a feature not present in the Raven line modems. In the Raven X, the white wire lead has no function and can be ignored.*

Warning: *Explosion Hazard - Do not disconnect equipment unless power has been switched off or the area is known to be non-hazardous.*

Connecting to a Computer or other Device



Figure 4-2: Ethernet

The Ethernet port of your Raven X can be connected directly to a computer or other Ethernet device with either a cross-over cable or a straight-through cable. The Ethernet port on the Raven X is auto-sensing and will auto-detect the speed of the connecting device for 100baseTX or 10baseT. If you are connecting the modem to a hub or switch you should use a straight through cable or use the uplink port on the hub or switch with a cross-over cable.



Figure 4-3: Serial

The serial port of your Raven X can be connected directly to most computers or other devices using a standard straight through cable. If you have a DCE device, you will need a null modem or null modem cable.

Indicator Lights

When your Raven X is connected to power and an antenna, there is a specific pattern to the lights to indicate its operation mode.



Figure 4-4: Raven X Indicator lights

- **Network** - Indicates a successful connection to the cellular network with an IP address given and a channel acquired.
- **Signal** - Light shows the strength of the signal and may be nearly solid (strong signal) or flashing (weaker signal). A slow flash indicates a very weak signal.

RSSI LED Ranges

RSSI/Signal LED Status	Ranges of RSSI (dBm)
On Solid	Equal to or stronger than -69
Fast Blink	-70 to -79
Normal blink	-80 to -89
Slow Blink	-90 to -99
Extinguished	Equal to or weaker than -100

- **Activity** - Lights will flash as data is transferred to and from the PinPoint modem on the remote network.
- **Service** - Indicates when the connection is EV-DO. Unlit indicates 1x.
- **Power** - Indicates the power adapter is connected and there is power getting to the Raven X.
- The **Reset button** (on the left side of the Raven X) has two functions. If it is quickly depressed and released, the modem will simply power cycle the internal hardware. If, however, the reset is depressed and held for several seconds (count 10 slowly, and wait for the power light to go off after the light pattern stops), the ALEOS configuration settings will return to the factory defaults.

Caution: *If you reset the modem configuration using the reset button, you may need to reactivate your Raven X with your cellular Network.*

Light Patterns

The LEDs on the front of the modem will respond in different patterns to indicate modem states.

- **Normal** - Each LED, mentioned above, is lit as applicable.
- **Start up** - The LEDs will cycle from left to right.
- **PassThru mode** - Network and Signal LEDs will blink in tandem. The Activity LED will blink when transmitting or receiving data.

- **SOS** - The Network and Service Err or Service LEDs will blink alternate to each other.
- **Configuration Reset** - The LEDs will cycle left to right and then right to left 4 times.
- **Authentication Failure** - The Network, Signal, and Activity LEDs blink every 2 seconds.
- **Data Retry** - The Network, Signal, and Activity LEDs blink every 3 seconds.
- **Invalid MAC Address or Ethernet Initiation Fail** - The Service LED will blink.

Mounting

The integrated mounting with keyhole screw mounts on the Raven X will allow you to secure your modem nearly anywhere, quickly and easily, without the need for a separate bracket.

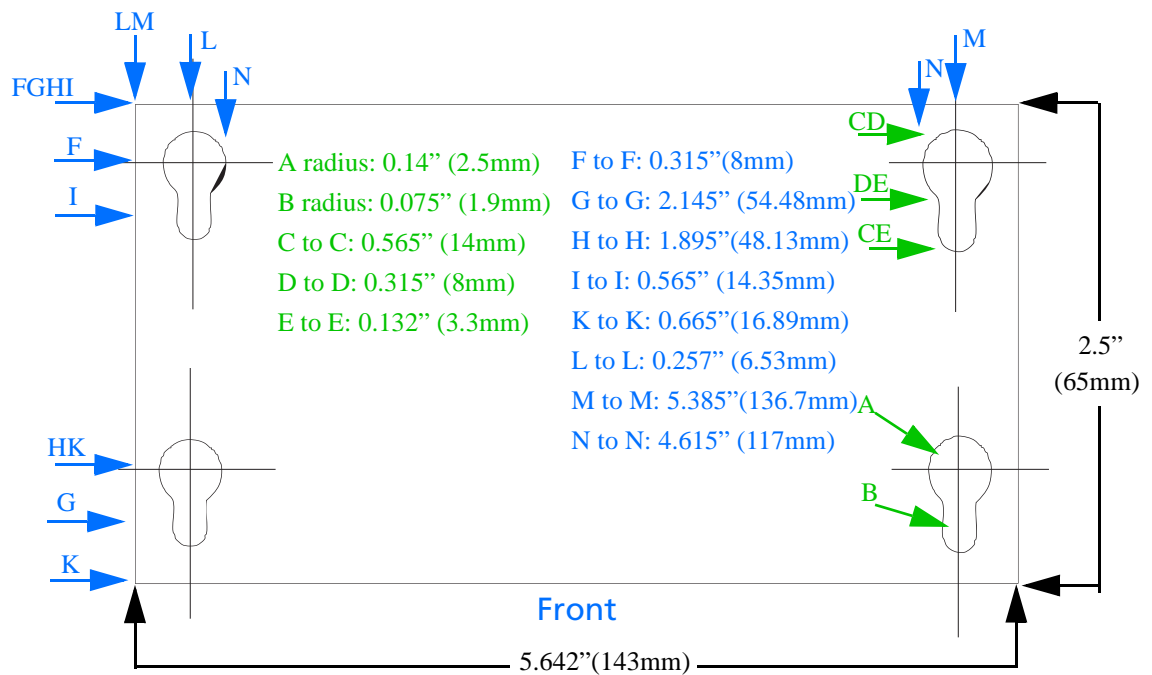


Figure 4-5: Diagram of the Raven X base

>> 5: Configuring your Raven X

- Using AceManager
- Using Templates
- Using a Terminal Application with AT Commands

With ALEOS as its “brain”, the Raven X is a highly configurable device, more than just a “dumb” modem.

To configure your Raven X, you have two options. You can use the configuration and management applications of the AceWare suite or you can use a terminal emulator application such as HyperTerminal, PuTTY, or many others.

Since the AceWare applications are designed for ease of use, nearly all descriptions and screen shots of Raven X configuration in this guide and Application Notes are done with AceManager. In addition to the various chapters in this guide giving information and directions about using the features of your Raven X, the Configuration Commands appendix briefly describes all the commands available. To get a more expanded view of the other AceManager features, refer to the AceManager Guide.

A full listing of all the configuration commands for you modem are in [Appendix A](#).

Using AceManager

AceManager is a free utility and is available on the product CD or can be downloaded from the Prosoft Technology website.

1. Start AceManager

Start > All Programs > AirLink Communications > AceManager

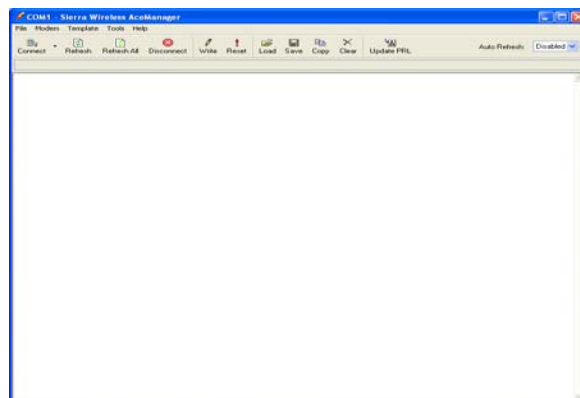


Figure 5-1: AceManager

2. Connect to your Raven X

- a. Click the Connect button.

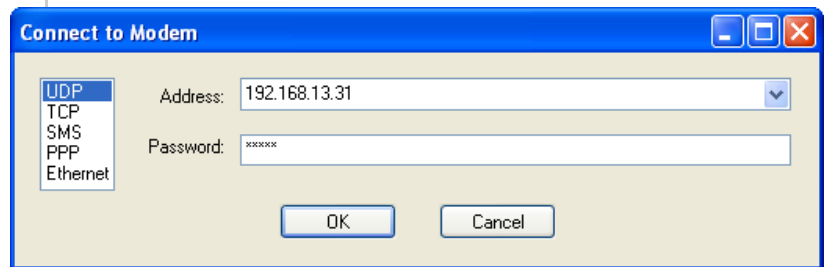


Figure 5-2: AceManager : Connect to Modem

- b. Select a connection method:
- If you are connecting remotely, you can use UDP, TCP, or SMS.
 - If you are connecting locally with the modem connected directly to your computer using a serial cable, you can use PPP.
 - If you are connecting locally with the modem connected directly to your computer using an Ethernet cable, you can use UDP, TCP, or Ethernet.
- c. Enter the connection information.
- For UDP or TCP, if you are connecting locally, use the *HOSTPEERIP of the modem to connect. The default for the *HOSTPEERIP is 192.168.13.31.
 - For SMS, enter the phone number of the modem and select your wireless carrier.
 - For PPP, select the COM port to which the modem is connected.
- d. Enter the password. The default password will be entered for you.
- e. Select OK.

GROUPS	MODEM DATA			PRINTABLE VIEW
INFO	AT	Name	Value	
STATUS	*NETPHONE	Phone Number	9133784772	
COMMON	*DEVICEID	Device ID	0x000003910039C044	
Misc		Modem EID/IMEI	603C6298	
USB	*ETHMAC	Ethernet Mac Address	00143E004245	
Serial		Modem Type	PinPoint X EV-DO	
TCP		Modem Name	603c6298	
UDP				
DNS				
Dynamic IP	I1	ALEOS Software Version	V4321_3.1.3.059 Mar 29 2007	
PPP/Ethernet		Modem Hardware Configuration	090d0004000300000000000000000000	
PassThru		Modem Software Version	p2005001,20224 [Sep 21 2006 15:43:22],, VID: PID:	
SMT		Modem Hardware Version	MC5725 Rev 2.0 (2)	
Other		Boot Version	3.0.4	
Low Power		MSCI Version	5	
Friends				
LOGGING				
PINPOINT				
1X/EV-DO				
I/O				

Figure 5-3: AceManager : Connected

3. Enter the configuration options

- On the left side of AceManager is the *Groups* menu. Select the appropriate group as needed or directed.
- Enter your changes in the *New Value* column by typing in the desired change or using the drop down menus.
- The current configuration is shown in the *Value* column.

AT	Name	Value	New Value
S0	TCP Auto Answer	0	<input type="text"/>
S7	TCP Connect Timeout	30	<input type="text"/>
TCPT	TCP Idle Timeout	0	<input type="text"/>
TCPS	TCP Idle Timeout Secs	0	<input type="text"/>
S221	TCP Connect Response Delay	0	<input type="text"/>
S60	Telnet Echo Mode	1	<input type="text"/>
*ENQ	Enable ENQ on TCP Connect	0	<div> 0-No Echo 1-Local Echo 2-Remote Echo </div>

Figure 5-4: AceManager : Changing values

4. Write the changes to the modem

- a. Click the Write button on the tool bar of AceManager.
- b. Wait for the message “Write Successful” to appear in the status bar.

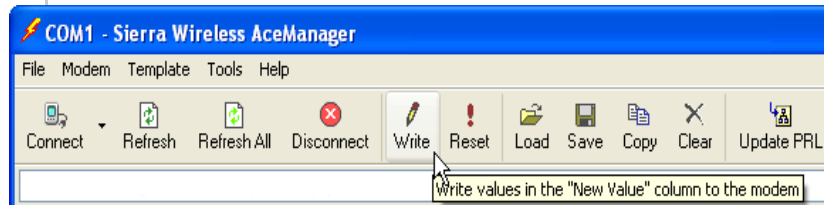


Figure 5-5: AceManager : Write

Tip: Some configuration settings will require you to reset the modem before they will take effect. You can reset the modem by using the Reset button in AceManager or by using the reset button on the modem. You can also reset the modem by cycling the power.

Using Templates

If you have a modem configuration that works well for your needs, using AceManager, you can save that modem's configuration as a template and then apply it to other Sierra Wireless AirLink modems.

1. Creating the Template with AceManager

- a. Configure the “master” modem.
- b. Click the Copy button on the tool bar to transfer all the configured settings to the New Value column.

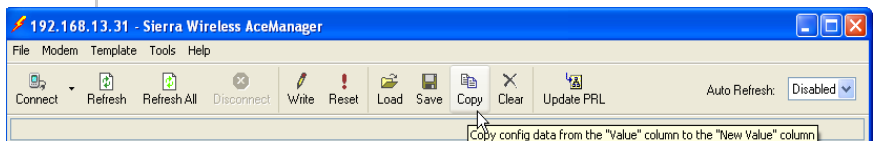



Figure 5-6: AceManager : Copy

- c. Remove settings which are specific to your “master” modem or verify settings are applicable to all your modems.

Note: Some of the configuration settings are specific to individual modems. You do not want to have those settings in your saved template otherwise the modems you configure with the template could cease to work with the cellular or local network.

- Cellular Technology specific settings (the CDMA/EV-DO group)
- *MODEMNAME
- *HOSTPRIVIP
- *HOSTPEERIP
- *HOSTUID
- *HOSTPW

d. Click the *Save* button on the toolbar.

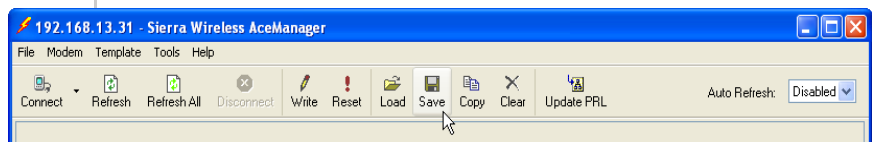

e. Type in a file name that is descriptive of the template (so you can find it easily later) and save it to a location on your computer.

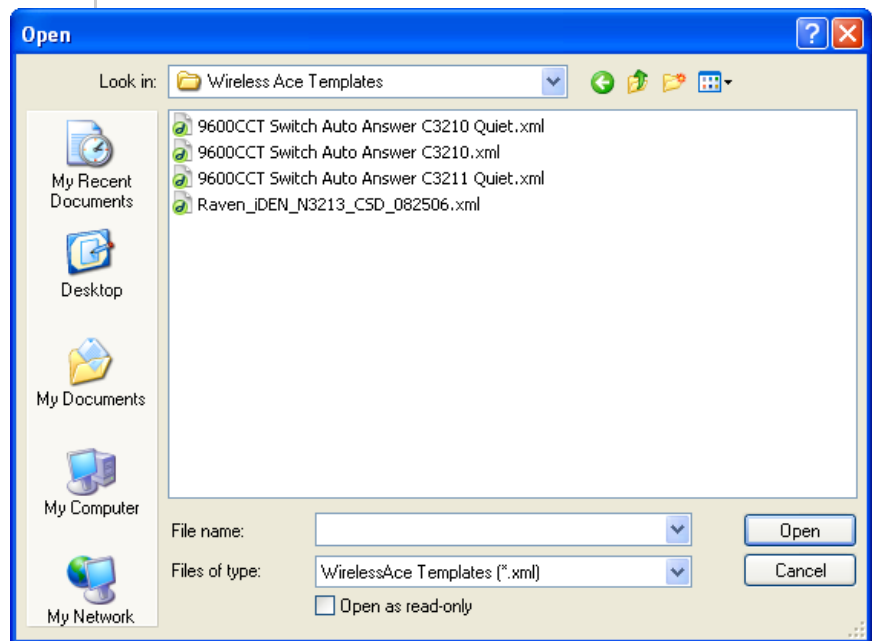


Figure 5-7: AceManager : Save Template

2. Applying a Template to one modem with AceManager

You can use a template you created yourself, using the steps above, or a template provided by your AirLink representative or someone in your company who has set up a modem template. The template you wish to apply must be saved to your hard drive.

- a. Load the template.
 1. Connect to the modem you want to configure using AceManager.
 2. Click on the *Load* button on the toolbar.

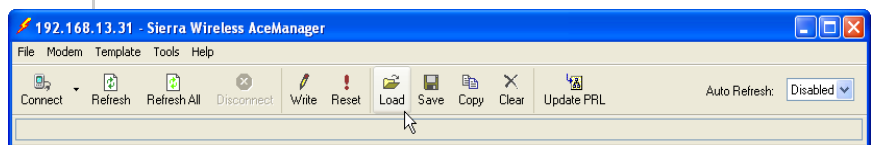


Figure 5-8: AceManager : Load

3. Select the template you have saved (you may need to change folders if you saved it to a different location).
- b. Verify the configuration settings.

Tip: After you load the template, it's best to go back over the AceManager groups to make sure all the settings are what you require.

- c. Click the *Write* button on the toolbar to write the configuration to the modem. Wait for the "Write Successful" message.

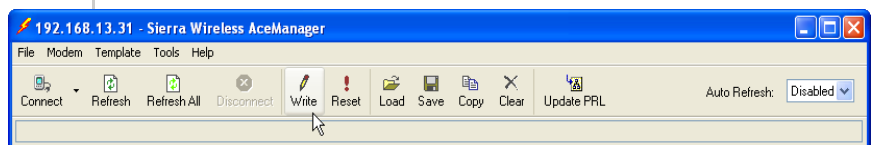


Figure 5-9: AceManager : Write

- d. Reset the modem.

Caution: Many of the configuration settings will not take effect until the modem has been reset.

Tip: You can use common settings on one modem to configure those same settings on another modem even of a different type. For example, you can use the serial settings of a modem (such as PinPoint X or Raven X) to configure the serial settings of a Raven X. Settings not applicable to the modem on which you are loading the template, will be discarded.

3. Optional: Applying one template to several modems simultaneously with AceNet

AceNet allows you to connect to and monitor several modems at the same time. For your convenience, you can also apply a single template to selected modems simultaneously.

Connecting to the modems with AceNet is covered in the AceNet User Guide.

Caution: When applying a template in AceNet, it is even more important to make sure there are no non-general settings in the template from the “master” modem.

Unlike AceManager, AceNet does not check the modem type before applying the template. Settings not applicable, such as a USB setting from a Raven X template being applied to a Raven X, are not read by the receiving modem. You will get a "partial success" status if all items in a template cannot be applied by the receiving modem.

- a. Select modems to configure with the template.

Address	Modem Type	RSSI	Result	Time	CDMA PRL Ve...	ALEOS Software Version	Mobile IP
100.100.10.177	Raven CDMA	-85	Success	11/02 14:22...	50348	ACR200511A Nov 1 2005	2
100.100.10.170	Raven CDMA	-76	Success	11/02 14:21...	50348	ACR200511A Nov 1 2005	2
100.100.10.102	Raven CDMA	-65	Success	11/02 14:22...	50348	ACR200511A Nov 1 2005	2
100.100.10.170	Raven CDMA	-47	Success	11/02 14:21...	50348	ACR200511A Nov 1 2005	2
100.100.10.100	Raven CDMA	-74	Success	11/02 14:22...	50348	ACR200511A Nov 1 2005	2
100.100.10.100	Raven CDMA	-79	Success	11/02 14:21...	50348	ACR200511A Nov 1 2005	2
100.100.10.001	Raven CDMA	-72	Success	11/02 14:22...	50348	ACR200511A Nov 1 2005	2
100.100.10.107	Raven CDMA	-98	Success	11/02 14:22...	50348	ACR200511A Nov 1 2005	2
100.100.10.101	Raven CDMA	-65	Success	11/02 14:22...	50348	ACR200511A Nov 1 2005	2
100.100.10.100	Raven CDMA	-42	Success	11/02 14:22...	50348	ACR200511A Nov 1 2005	2
100.100.10.107	Raven CDMA	-61	Success	11/02 14:21...	50348	ACR200511A Nov 1 2005	2
100.100.10.100	Raven CDMA	-70	Success	11/02 14:21...	50348	ACR200511A Nov 1 2005	2
100.100.10.000	Raven CDMA	-79	Success	11/02 14:22...	50348	ACR200511A Nov 1 2005	2
100.100.10.000	Raven CDMA	-95	Success	11/02 14:22...	50348	ACR200511A Nov 1 2005	2
100.100.10.100	Raven CDMA	-81	Success	11/02 14:21...	50348	ACR200511A Nov 1 2005	2
100.100.10.102	Raven CDMA	-83	Success	11/02 14:21...	50348	ACR200511A Nov 1 2005	2
100.100.10.100	Raven CDMA	-90	Success	11/02 14:21...	50348	ACR200511A Nov 1 2005	2
100.100.10.100	Raven CDMA	-82	Success	11/02 14:22...	50348	ACR200511A Nov 1 2005	2
100.100.10.100	Raven CDMA	-69	Success	11/02 14:22...	50348	ACR200511A Nov 1 2005	2
100.100.10.107	Raven CDMA	-79	Success	11/02 14:22...	50348	ACR200511A Nov 1 2005	2

Figure 5-10: AceNet : Selected modems

Tip: Click on the first with your mouse and, with the control button held down, click the additional modem.

- b.** Select the *Modem* option in the tool bar and then select *Apply AceManager Template*.

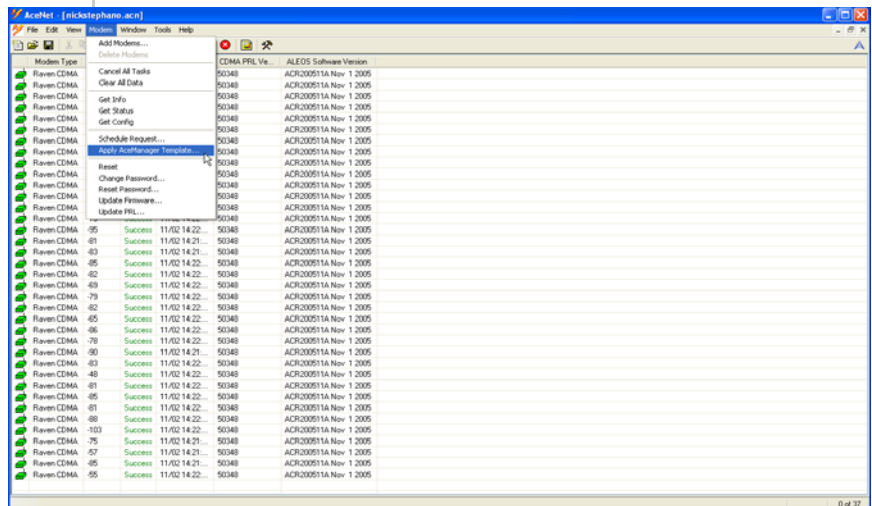


Figure 5-11: AceNet : Modem menu

- c.** Either type in the Template file name, or click browse and select the template file you want to apply (you may need to change folders).

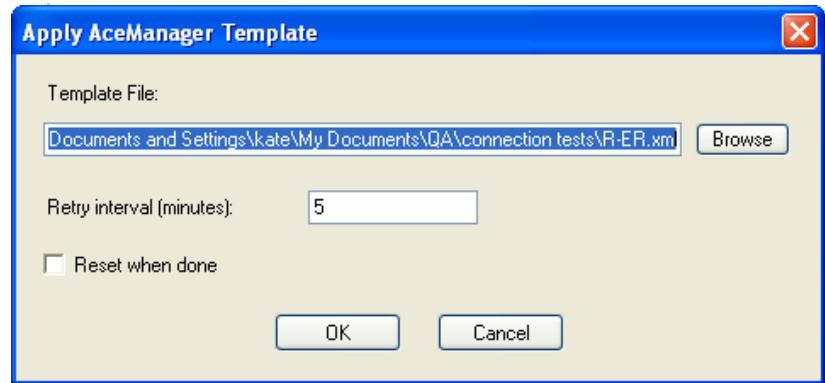


Figure 5-12: AceNet : Template select

- d. Set the Retry Interval and check if you want to have the modems Reset when the template has been applied.

Using a Terminal Application with AT Commands

You can access and configure your Raven X using a terminal application such as Microsoft HyperTerminal, PuTTY, or similar. The following directions are for HyperTerminal which is part of a standard installation of Windows XP.

Start > All Programs > Accessories > Communications > HyperTerminal

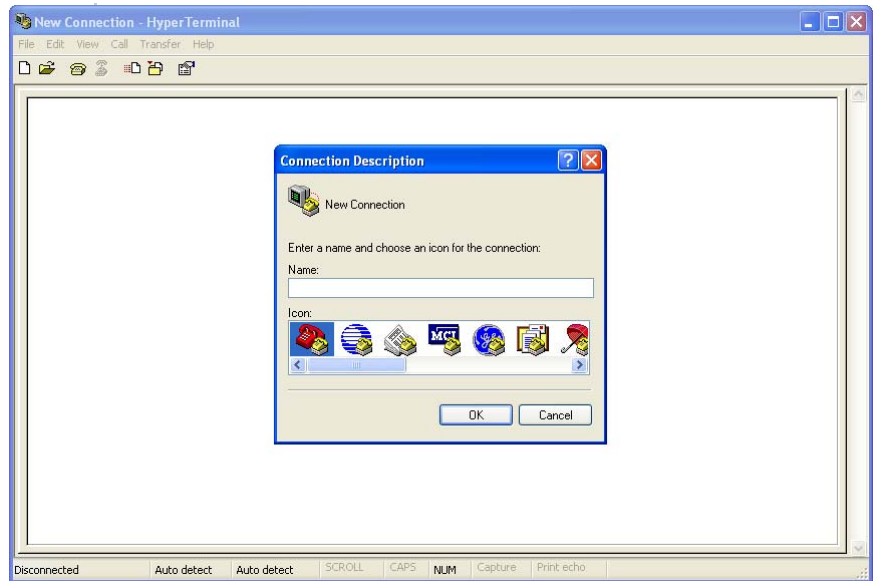


Figure 5-13: HyperTerminal

1. Choose a name and icon for your connection.

- a. Choose a name for your connection, such as *Raven X* or *Sierra Wireless AirLink Solutions*. The name and icon are only for your own reference so you can find the connection at a later date.

Tip: If you want to have a connection saved for both local and remote, it is recommended the connection name reflect the connection type, i.e. *Raven X local*.

- b. Select OK.

2. Connect To

Using Serial:


- a. Select *COM1*, or the comport to which the modem is connected, for the "Connect Using".



Figure 5-14: Connect To

Using Ethernet:

- a. Select *TCP/IP (Winsock)* for “Connect Using”.
- b. Type in *192.169.13.31* for Host Address.
- c. Change the “Port Number” to *2332*.

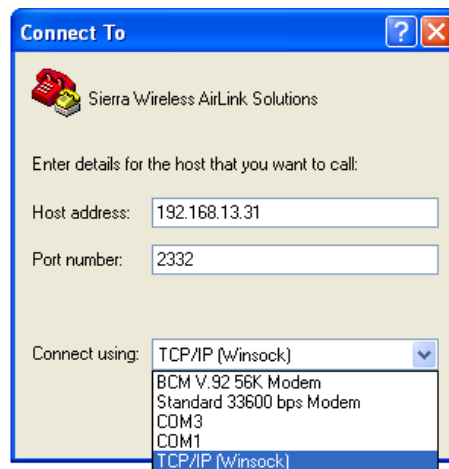

- d. Select OK.

3. Port Settings (serial only)

- a. Change or verify the settings:
 - Bits per Second: 115200 (default)
 - Data Bits: 8
 - Parity: None
 - Stop Bits: 1
 - Flow Control: Hardware.

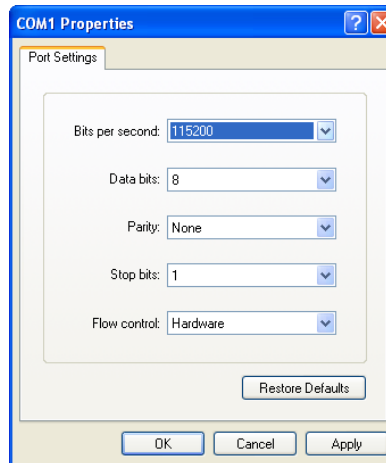


Figure 5-15: Port Settings

Tip: If you have configured the Raven X for settings different than the defaults for Bits per Second, Data Bits, Parity, and/or Stop Bits, you will need to use your changed settings.

- b.** Select OK.

4. Connected

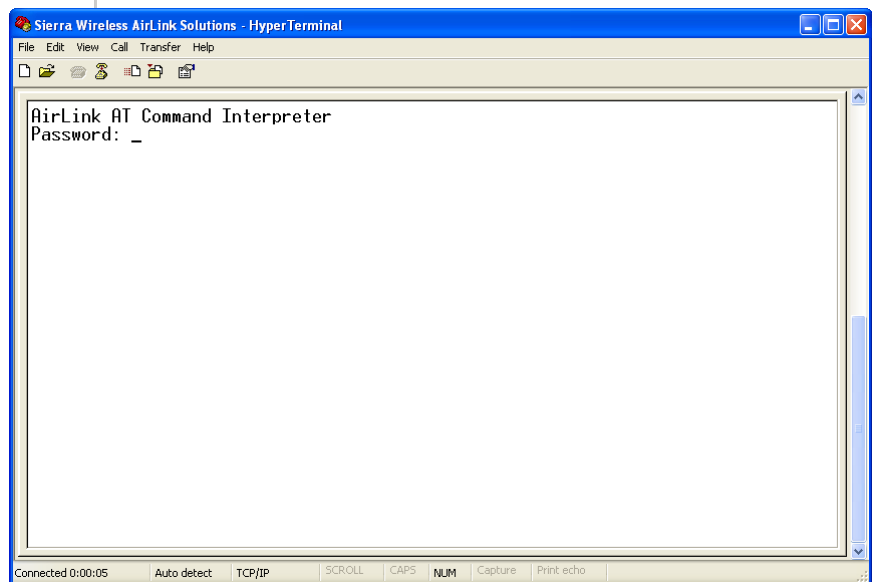


Figure 5-16: HyperTerminal : TCP/IP connected

- a.** If you are prompted for a password, enter 12345.

Tip: You will not be prompted for a password if you connect using a COM port.

- b.** Type *AT* and press *Enter*. You should get a reply of "OK" or "0".
- c.** To see what you are typing as you type it, you will need to turn on the echo and verbose mode. Type *ATE1V1* and press *Enter*.
- d.** If you get a reply of "OK", then you entered the command successfully. If you get a reply of "0" or "ERROR", try entering the command again.

AT Commands

When using a terminal application, you will need to manually type in each command.

- For most commands, when you are entering them using a terminal connection, you will need to preface the command with AT (exceptions are noted), i.e. *ATA* which is listed as *A*.
- Some commands have specific parameters while other commands will take whatever you type.
- Required variable parameters are denoted with italicized text, example, *Dn*. The *n* is variable.
- Acceptable parameters and/or specific formats are listed with each command.
- Most commands with parameters can be entered with ? to read the current value (for example, *AT&D?* will respond with "2" if the default has not been changed).
- Optional parameters are denoted with square brackets [].
- AT Commands are not case sensitive. A capital "E" is the same as a lower-case "e".
- When you are using a terminal connection, if you enter a command which is recognized by the Raven X, it will respond with "OK". If the command is not recognized, the response will be "ERROR".
- Those commands applicable only to certain model numbers of the Raven X will be noted.

Caution: Symbols listed with commands, such as *, /, &, or ?, are part of the command and must be included. Commands with symbols other than * may require PassThru mode.

>> 6: Data Communication and Host Modes

- Basic Modes
- Serial Modes
- Data Communication

The Raven X plays the part of a HOST when a computer or another device is connected directly to its port and routes data to/from the connected device to the cellular network.

Caution: *The Raven X moves data from one port to the cellular network in a simple one-to-one routing. It does not employ a routing table or any complicated routing protocol.*

Tip: *If you need to have one-to-many routing, you can connect the Raven X to a router. The router would provide the multiple routing and the Raven X would provide one-to-one for the router to the cellular network and the Internet.*

As the host, the Raven X can use different communication modes:

Basic Modes

- **AT:** The Raven X accepts and responds to standard AT commands.
- **PassThru:** Direct connection to internal hardware (OEM Module) of the Raven X.
- **Telnet:** The Raven X auto-answers TCP connections to allow terminal emulation using either a local Ethernet connection or remotely using the cellular connection.

Tip: *By default, the Raven X is in AT Mode and allows AT Commands to be entered via terminal connection (through the local port connection) or remotely (through the cellular network). PassThru Mode can only be exited by resetting the Raven X. All serial modes are entered by use of a startup mode command.*

Serial Modes

- **PPP Mode:** The Raven X uses PPP to communicate with a device or computer connected to the serial.
- **SLIP Mode:** The Raven X uses SLIP to communicate with a device or computer connected to the serial.

- **UDP and UDP PAD:** Any data received on the serial port is assembled into UDP packets and sent to the session's associated IP address and Port (described later). Any responses received from the associated IP address and port destined for the Device Port are unwrapped and sent out the serial port.
- **TCP and TCP PAD:** Any data received on the serial port is packaged into TCP messages and sent to the associated connection's IP address and Port (described later). Any data received from the TCP peer is unwrapped and sent out the serial or Ethernet port.

Data Communication

- **Public and Private Modes:** The method used by the Raven X to pass an IP address to a connected device.
- **Keepalive:** How the Raven X maintains its connection to the cellular network.

Basic Modes

Start up Mode

The serial port of the Raven X can be configured to enter any of the modes automatically on power up (in most cases, this is also after it has registered on the cellular network). This is done by setting the Startup Mode Default to the desired mode. If this setting is non-zero, the modem will enter the specified mode after 5 seconds. If you want to cancel this behavior, the ATMD0 command can be used before the 5-second time-out expires.

You can configure the Startup Mode in AceManager at part of the UDP group.

GROUPS	MODEM DATA		PRINTABLE VIEW
	AT	Name	Value New Value
INFO	MD	Startup Mode Default DB9 Serial	00
STATUS	S82	UDP Auto Answer	0
COMMON	S83	UDP Idle Timeout	0
Misc	HOR	UDP Auto Answer Response	0
USB	*UDPLAST	UDP Connect Last	0
Serial	AIP	Allow Any IP	0
Telnet	*UALL	Allow All UDP	0
TCP	*DU	Dial UDP Always	0
UDP	*USD	UDP Serial Delay	0
DNS			
Dynamic IP			
PPP/Ethernet			
PassThru			
SMTP			
Other			
Low Power			
Firewall - IP			
Firewall - Ports			

Figure 6-1: AceManager : UDP - MD

If the serial port of the Raven X is in any mode other than AT or PassThru, the AT command mode can be re-entered by:

- Deactivating DTR (if &D2 or Ignore DTR, S211, is not set).
- Issuing the +++ escape sequence (if Disable AT Escape, DAE, is not set).
- Resetting or Power cycling the modem.

Note: DTR needs to be asserted (S211=1 or &D0) by the host before PPP Mode, SLIP Mode, UDP PAD Mode, or TCP PAD Mode can be entered.

AT Mode

Using a terminal connection, AT commands are used to configure the modem, command it to do something, or query a setting. For a full listing of the AT commands, refer to the appendix. AceManager is a graphical user interface for most AT Commands.

- AT commands must always be terminated by <CR> (ASCII character 0x0D), a carriage return (pressing enter on the keyboard). Some may also include a new line or line feed <LF>.
- If **E=1** (Echo On), the AT command (including the terminating <carriage return> will be displayed (output) before any responses.
- Two settings affect the format of AT command output: **V** (Verbose) and **Q** (Quiet).
- If **Q=1** (Quiet On), no result codes are output whatsoever, so there is no response generated by a (non query) command.
- If **Q=0** (Quiet Off), result codes are output. The format of this output is then affected by the Verbose setting.

If Quiet mode is off, the result code is affected as follows:

For **V=1** (Verbose mode), the textual result code is surrounded by a carriage return and new line. Any AT query response is also surrounded by a carriage return and new line.

For **V=0** (Terse mode), a numeric result code is output with a single trailing carriage return (no new line is output), while any AT query response is followed by a carriage return and new line (there is no preceding output).

- For example, possible output to the AT command "AT" with carriage return (assuming quiet mode is not on) is:

carriage return - if V=0

carriage return and new line OK another carriage
return and new line - if V=1

Note: These commands work for the port on which they are executed. For example, if the user types ATE1 and then AT&W using a serial port connection, it will set the serial port to Echo On.

PassThru Mode

In PassThru mode, the Raven X does not behave normally, all port communication is passed directly between the internal hardware and the computer connected directly to the modem. This mode can be used to configure hardware-specific settings. For example, provisioning, troubleshooting, communicating with legacy equipment, etc.

Caution: *ALEOS is disabled in PassThru Mode. You cannot use most ALEOS specific commands while the modem is in PassThru Mode. While in PassThru mode, you also cannot use AceManager to connect with the PinPoint.*

Issuing the “AT\APASSTHRU” from a terminal emulation enters this mode. The modem responds with OK, at which point a direct connection to the internal hardware is established. You can also configure the modem to enter PassThru mode on start up using MD.

Tip: *PassThru can only be exited by resetting or power-cycling the modem. This mode cannot be entered via a remote Telnet session.*

You can configure a string of AT commands to be sent to the Raven X when it enters PassThru and other PassThru settings.

GROUPS	MODEM DATA			PRINTABLE VIEW
----- INFO ----- STATUS ----- COMMON	AT	Name	Value	New Value
Misc	*SMTPADDR	SMTP Server IP Address	65.107.18.57	
USB	*SMTPFROM	From email address	ppx.monday@airlink.com	
Serial	*SMTPUSER	User Name (optional)	kate	
Telnet	*SMTPPW	Password (optional)	*****	
TCP	*SMTPSUBJ	SMTP Message Subject	Generic	
UDP				
DNS				
Dynamic IP				
PPP/Ethernet				
PassThru				
SMTP				
Other				
Low Power				
Firewall - IP				
Firewall - Ports				
Port Forwarding				
----- LOGGING ----- GPS Server 1 Server 2 Server 3 Server 4 Misc Local/Streaming ----- 1X/EV-DO ----- VPN Split Tunnel VPN-1 VPN-2 VPN-3 VPN-4 VPN-5				

Figure 6-2: AceManager : PassThru

PassThru Mode allows only specific AT commands. Some ALEOS commands will be unavailable when the Raven X is in PassThru mode. The commands usable also depend heavily on the modem model number (found on the label on the top of the Raven X).

Note: Some internal hardware requires upwards of 20 seconds before AT commands can be entered, so be patient if there seems to be no response to AT commands.

Telnet Mode

In AceManager you can configure Telnet operation.

GROUPS	MODEM DATA				PRINTABLE VIEW
INFO STATUS COMMON Misc USB Serial Telnet TCP UDP DNS Dynamic IP PPP/Ethernet PassThru SMTP Other Low Power Firewall - IP Firewall - Ports Port Forwarding LOGGING	AT	Name	Value	New Value	
	S0	TCP Auto Answer	0		
	S7	TCP Connect Timeout	30		
	TCPT	TCP Idle Timeout	5		
	TCPS	TCP Idle Timeout Secs	0		
	S221	TCP Connect Response Delay	0		
	*ENQ	Enable ENQ on TCP Connect	0		

Figure 6-3: AceManager : S0

If you need to change the port for Telnet (for example, you have the default port blocked on your firewall), the option is on the Other tab. The default telnet port is 2332. You can also change the Telnet timeout, if the connection is idle, default 2 minutes.

GROUPS	MODEM DATA				PRINTABLE VIEW
INFO STATUS COMMON Misc USB Serial Telnet TCP UDP DNS Dynamic IP PPP/Ethernet PassThru SMTP Other Low Power Firewall - IP Firewall - Ports Port Forwarding LOGGING GPS Server 1	AT	Name	Value	New Value	
	*IPING	Keepalive Ping Time	0		
	*IPINGADDR	Keepalive Ping Address			
	*MSCIUPDADDR	Status Update Address	/0		
	*MSCIUPDPERIOD	Status Update Period (Seconds)	0		
	DAE	Disable AT Escape	0		
	*DATZ	Disable ATZ Reset	0		
	*SNTP	Enable time update	0		
	*SNTPADDR	SNTP Server Address			
	*NETWDOG	Network Connection Wait	120		
	*SNMPPORT	SNMP Port	0		
	*SNMPSECLVL	SNMP Security Level	0		
	*SNMPTRAPDEST	SNMP Trap Destination IP	/0		
	*SNMPCOMMUNITY	SNMP Community String	public		

Figure 6-4: AceManager : Other - *TPORT, *TELNETTIMEOUT.

Serial Modes

PPP

In PPP mode, the Raven X acts as a PPP server, providing an IP address, and DNS servers (if available) to the connected device or computer.

PPP mode is entered from the AT mode by using any of the following commands:

- AT\APPP
- ATDT10.0.0.1
- ATDT10001
- ATD#19788 or #777 *99***1#
- CLIENT

In response to any of the preceding commands, the Raven X will respond with CONNECT a carriage return and new line and is ready for the host to begin PPP negotiations. The IP received by the host in the resulting negotiation will either be a private (non-routable) IP address or a public (network-routable) IP address provided by the network, depending on the settings of ***HOSTPRIVMODE**. If ***HOSTPRIVMODE=1**, the value of the private IP address can be determined beforehand by querying **S110**. The private IP address to be used can be defined with the command **AT*HOSTPRIVIP=192.168.100.33**, substituting the desired IP address.

GROUPS	MODEM DATA			PRINTABLE VIEW
INFO	AT	Name	Value	New Value
STATUS	*HOSTPRIVMODE	Use Private IP	0	<input type="text"/>
COMMON	*HOSTPRIVIP	Host Private IP	192.168.13.100	<input type="text"/>
Misc		DHCP network mask	255.255.255.0	<input type="text"/>
USB	*HOSTPEERIP	Modem Local IP	192.168.13.31	<input type="text"/>
Serial	*HOSTNETMASK	Ethernet Host network mask	0.0.0.0	<input type="text"/>
Telnet	*HOSTAUTH	Host Authentication Mode	0	<input type="text"/>
UDP	*HOSTUID	Host User ID	ZCFzUUeLycb2ug01L+3IkW==	<input type="text"/>
DNS	*HOSTPW	Host Password	ZCFzUUeLycb2ug01L+3IkW==	<input type="text"/>
Dynamic IP	*DHCPSEVER	DHCP Server Mode	1	<input type="text"/>
PPP/Ethernet		Host Network 2	0.0.0.0	<input type="text"/>
PassThru		Host network mask 2	255.255.255.255	<input type="text"/>
SMTP		Host Network 3	0.0.0.0	<input type="text"/>
Other		Host network mask 3	255.255.255.255	<input type="text"/>
Low Power		Default Interface	0	<input type="text"/>
Firewall - IP		Default IP	0.0.0.0	<input type="text"/>
Port Forwarding		Link Radio coverage to:	0	<input type="text"/>
LOGGING				
GPS				
Server 1				
Server 2				
Server 3				
Server 4				
Misc				
Local/Streaming				

Figure 6-5: AceManager : PPP/Ethernet

Using a private IP insulates the PPP client from changes in IP addresses of the underlying network. The will perform basic NAT-like address translation on all packets.

If a public IP address is being used, any changes in the IP (as determined by the wireless network) will result in the PPP link to the host being disconnected, requiring the host to reinitiate it. The public IP is passed to the host in the PPP negotiations, so when the network forces a change, the modem has to force the host to renegotiate the PPP link to make this happen.

Link Radio Coverage

There are three options for the “Link Radio Coverage to” field. You can link radio coverage to either Ethernet or USB (USBnet or USBserial) or disable the specified port. Hence, when not in coverage, the specified host port is turned off. Minimum off-time of 10 seconds apply for both USB and Ethernet.

Note: When the cellular connection is down, the port is also down.

SLIP

SLIP mode is entered by using the “AT\ASLIP” command. As in PPP Mode, the IP address that the host assumes is affected by the setting of *HOSTPRIVMODE. SLIP does not negotiate the IP address with the connected device or computer, so before making a SLIP connection, the SLIP driver on that device or computer must be configured to use the IP address specified by querying **S110**.

When the modem is in UDP PAD (Packet Assembly and Disassembly) Mode, all characters received on the serial port are assembled into UDP packets and sent to the remote IP address/port or the Raven X, and any packets received from the same IP/port--destined for the device port of Raven X (see *DPORT)--are disassembled and dumped onto the serial line.

A UDP session is initiated by one of the following events:

- Using the Dial UDP (DP) AT command (example, ATDP192.168.3.23/3456).
- Setting the Startup Mode Default (MD) to 3 (UDP) so that a UDP session is entered automatically when the modem registers onto the network. Serial data will be sent to the IP/port specified in S53.

Incoming UDP packets will be processed out the serial port if

- UDP auto answer is enabled (S82=2);
- The destination IP address matches that in S53 (if Friends Mode is enabled, the IP address also needs to be present on the Friends List);
- Or allow any IP is set (AIP=1);
- The modem is in AT mode (not in a current UDP or TCP session).

UDP packet assembly is affected by the values of S50 (PAD Forwarding Time-out) and S51 (PAD Forwarding Character). Data received in the serial buffer will be transmitted when the

idle inter-character time-out specified in S50 (in tenths of seconds) occurs or when a character is received that matches S51 (if non-zero).

UDP Auto Answer

UDP auto answer (previously called UDP half-open) is set with S82=2. When set, the Raven X will automatically establish a UDP session to the source IP address and port of the UDP packet received. The Raven X will remain “locked” to this one remote IP/port until no data is sent or received for the time interval defined in the UDP auto answer time-out (S83). During this session, packets from other IP/port addresses will be rejected, unless *UALL is set. Whether or not an incoming packet will cause the modem to enter a UDP session is always dependent on the S53 and AIP settings.

The Normal UDP Mode (MD3) can be combined with UDP auto answer to cause the incoming serial data to be sent in UDP packets (instead of being treated as AT commands), while allowing sessions to be established from different UDP sources. A UDP session will be initiated either by incoming serial data or by an incoming UDP packet. The session, started by either method, will be terminated when no data has been sent or received for the S82 period. Once the session terminates, another may be initiated by either means.

When idle, after the time-out has occurred, the modem is in AT command mode on the serial port, and any valid AT command may be entered during this time.

Tip: *It is best to ensure the idle time-outs for TCP and UDP are never 0 if you're going to be using auto-answer, or either PAD mode. In those circumstances, you will want the modem to close the socket if the connection goes idle for too long, particularly if the other side doesn't normally close the connection.*

When the session is initiated by serial data, the new session will be established using the destination address specified in S53. The S53 setting can be changed if the connect to last UDP setting (*UDPLAST=1) is set. The address in S53 will be updated to reflect the address of the last session initiated by an incoming UDP packet. So that when new data is received over the host serial port while in the idle state, a session will be re-established with the last address. (This behavior is the same as the previous Hybrid2 (MD6) mode).

Tip: *TCP auto answer (S0) may also be set simultaneously with UDP auto answer. Then, when in the idle state, the modem will accept either a TCP or UDP incoming packet, and enter a TCP or UDP session as appropriate.*

Reliable UDP

Reliable UDP adds a simple protocol on top of UDP to provide reliable delivery of data. When data is received from the host serial port, a 2 byte header is added to the data, containing a message type and a sequence number. The Raven X will continue to send this data (buffering any received data in the meantime) until it receives an acknowledgement with this sequence number. If an acknowledgement is not received within the time-out period (specified in S7), the data will be retransmitted. This will continue until an acknowledgement is received or the modem is reset. Likewise any UDP packets received by the Raven X are expected to have this simple header. The Raven X will issue an acknowledgement for any valid packets which are received.

To configure the Raven X for a normal UDP session, you need to set the Startup Mode Default to 73 (ATMD73). If you are using two modems, configure the Destination IP and Port in each to point to each other. Serial data will then be sent reliably between the two.

Caution: *Although it adds reliability, the simple implementation of the Reliable UDP mode in the does not check for duplicate packets.*

UDP Multicast Mode

UDP Multicast mode results in any data received from the host serial port being sent to all the clients in the address list. The remote port number is taken from S53. To avoid flooding the network, the packets are sent to each client with a 20ms pause in between. The receipt of UDP packets works as in normal UDP mode (i.e. bound by the value S53 and/or AIP). Since it may take a while to transmit the data to all hosts (especially if all 20 Modbus entries are used and name resolutions are required), new data received from the host port is buffered until current transmissions to all hosts are finished.

Enter the list of target IPs in the address list (ADDR LIST). The index numbers in the list aren't used. Configure for a normal UDP session. Set the Startup Mode Default to 83 (ATMD83). Configure the Destination port to match the device port of the remote modems.

When the Raven X is in a TCP session, all characters received on the serial port are assembled into TCP packets and sent to the mode's remote IP address/port, and any packets received from the remote end of the TCP connection are disassembled and dumped onto the serial line.

A TCP connection is established by one of the following methods:

- Using the Dial TCP (DT) AT command. For example, **ATDT192.168.3.23/3456**.
- TCP auto answer is enabled (**S1**), a TCP connection request is received, and the modem is not in a data session.
- Data is received on the serial port and
 - The Startup Mode Default (**MD**) is 4 (auto TCP)
 - The remote TCP destination, as defined in S53, successfully responds to the TCP connection request.

The value of **S7** (TCP Connection Time-out) specifies the number of seconds to wait, after initiating a TCP connection attempt, for a successful connection to be established. If the connection has not been successfully established before the time-out occurs, ERROR/BUSY is returned.

TCP packet assembly is affected by the values of **S50** (PAD Forwarding Time-out) and **S51** (PAD Forwarding Character). Data received in the serial buffer will be transmitted when the idle inter-character time-out specified in S50 (in tenths of seconds) occurs or when a character is received that matches **S51** (if non-zero).

The TCP session will be terminated if no data is transmitted or received for the time interval specified in **TCPT** and **TCPS**. TCPT is the number of minutes (TCPS=0) or seconds (TCPS=1) used for this idle time-out.

Caution: *TCPT should never be 0 when using the TCP mode. A broken TCP session can result in the modem being left with a TCP TCP Auto Answer*

TCP auto answer (S0=1|2) also allows a TCP connection request to be “answered” when the modem is idle, not in a data session. The TCP connection request's destination port has to match the modem's device port.

Note: UDP auto answer may also be set simultaneously with TCP auto answer. Then, when in the idle state, the modem will accept either a TCP connection request or UDP incoming packet, and enter a TCP or UDP session as appropriate.

Hybrid Modes

Hybrid modes are supported mainly for legacy implementations. Some previous hybrid modes (MD=5, 6) are no longer implemented as special, unique modes. Now that UDP auto answer (UDP Half-open, S82=2) can be enabled in conjunction with UDP PAD mode (MD3), effectively this is the same as MD5 and MD6 previously accomplished. Setting MD5 and MD6 are still supported, but not recommended.

AT Command	Hybrid Mode (MD5)	Hybrid Mode2 (MD6)
MD	3	3
S82	2	2
S0	1	1
*UDPLAST	0	1

Note: The Raven X forwards messages to and from the cellular network for only ONE device per port. The Raven X is a one-to-one gateway and does not have advanced routing features required to do one-to-many routing.

Data Communication

The primary purpose of the Raven X is to forward data from a single device connected to one of the ports to the cellular network and, ultimately, under most circumstances, to the Internet in a **one-to-one** gateway configuration.

When the Raven X obtains its IP address from your cellular Network, it also obtains the network routing information necessary to forward messages to their routers which can then forward on from there. The Raven X then acts as a router for the device connected to it, forwarding to or from the cellular network.

Note: If you have a device connected to the Ethernet port, and the serial port, they will not be able to communicate to each other. Each port is routed separately to the cellular network with one-to-one routing for each.

Public and Private Mode

In Public Mode, the Raven X will pass the IP address assigned by the cellular network to the device connected to its port. Public Mode is the default mode for the Raven X.

If you need more control over which gateway address, device address, and netmask that is given out by the internal DHCP server, you can use the private host mode, *HOSTPRIVMODE, and set the internal network IP addresses. The Raven X will use NAT to forward packets to the end device.

Tip: When using Public mode, Sierra Wireless recommends connecting the modem directly to the computer or other end device. Using a hub or switch may prevent the Raven X from updating the IP address of the end device when an IP address is received from the cellular network.

In AceManager, the Private mode settings are part of the **PPP/Ethernet** group.

GROUPS	MODEM DATA			PRINTABLE VIEW
INFO	AT	Name	Value	New Value
STATUS	*HOSTPRIVMODE	Use Private IP	0	
COMMON	*HOSTPRIVIP	Host Private IP	192.168.13.100	
Misc		DHCP network mask	255.255.255.0	
USB	*HOSTPEERIP	Modem Local IP	192.168.13.31	
DNS	*HOSTNETMASK	Ethernet Host network mask	0.0.0.0	
Dynamic IP	*HOSTAUTH	Host Authentication Mode	0	
PPP/Ethernet	*HOSTUID	Host User ID	ZCFzUUeLycb2ug01L+3lkw==	
SMTP	*HOSTPW	Host Password	ZCFzUUeLycb2ug01L+3lkw==	
Other	*DHCPSEVER	DHCP Server Mode	1	
Firewall		Host Network 2	0.0.0.0	
Port Forwarding		Host network mask 2	255.255.255.255	
LOGGING		Host Network 3	0.0.0.0	
REPORT		Host network mask 3	255.255.255.255	
Server 1		Default Interface	0	
EDGE/HSPA		Default IP	0.0.0.0	
IPSEC				
GRE				

Figure 6-6: AceManager: PPP/Ethernet

- ***HOSTPRIVMODE** - Set to 1 to enable the explicit IP addresses.
- ***HOSTPRIVIP** - Set to the IP address you want the Raven X to give to your device.
- **DHCP network Mask** - The subnet mask that is passed to the DHCP client on the Host device.

- ***HOSTPEERIP** - Set to the IP address you want for the Raven X.
- ***HOSTNETMASK** - Set to the subnetmask, generally 255.255.255.0.

Tip: If you are using Private Mode (*HOSTPRIVMODE=1), you will need to make sure that *HOSTPRIVIP and *HOSTPEERIP are on the same subnet. If the subnet mask is 255.255.255.0, it is safe to use 192.168.x.y for each as long as the x is the same number (0 in the example screen shot above) and the y is different (1 and 2 in the example) and between 0 and 254.

Note: Regardless if the Raven X is configured for Public Mode or Private Mode, the same IP address will be given to all devices connected to any of the ports. While you can connect with each to the cellular network and the Internet, you cannot use the Raven X as a hub or router to communicate between them.

Internal DHCP Server

DHCP (Dynamic Host Configuration Protocol) has become a primary component of today's network environments. DHCP allows one server to automatically and dynamically allocate network IP addresses and other network related settings (such as subnet masks, routers, etc.) to each computer or device without the need to set up each specifically or keep track of what addresses have already been used.

In a default configuration, the Raven X acts as a DHCP host to any device connected to its ports, providing that device with an IP address which can be used to communicate on the Internet. In Public Mode, that will be the IP address assigned by the cellular network. In Private Mode, that will be the IP address defined in *HOSTPRIVIP.

1. When the Raven X registers on the cellular network, it is assigned an IP address from your cellular Network, let's say 10.1.2.0.
2. Acting as a DHCP server, in Public Mode, when the Raven X receives a DHCP request from an Ethernet device, it hands off the assigned address to the device and sets up the default gateway address as 10.1.2.1. If the fourth octet is already a 1, it assigns 10.1.2.2 as the router address.
3. The Raven X also sends a /24 netmask (255.255.255.0 by default) and sets up a static route which maps 192.168.13.31 (or the address configured with

*HOSTPEERIP if it is changed) to 10.1.2.1 (or 10.1.2.2 if that was what the gateway address was given as).

Tip: When PPPoE is used with the Raven X, DHCP is not needed. A tunnel is set up connecting a device (such as your computer or a router) with the modem. The device will then simply use the MAC address of the Raven X to send all outgoing packets.

Additional Connected Networks

If you have a router connected to the Raven X with additional networks configured behind that router, you can specify them in the PPP/Ethernet group of AceManager. Configure the Network the Host Network Mask for up to two additional networks.

Basic Routing

Expanding the capabilities of the Raven X, ALEOS features some basic routing to connected computers and networks..

Port Forwarding

Any data coming in on the defined Public Port will be passed to the corresponding Private Port connected to the physical interface specified and using the host IP address..

Note: This feature can be used only in private mode.

GROUPS	MODEM DATA			PRINT
----- INFO -----	AT	Name	Value	New Value
STATUS	<input type="checkbox"/>	Number of PF Entries	0	
COMMON	<input type="checkbox"/>	Public Port 1 start	0	
Misc	<input type="checkbox"/>	Public Port 1 End	0	
USB	<input type="checkbox"/>	Host I/F 1	4	
Serial	<input type="checkbox"/>	Host IP 1	0.0.0.0	
Telnet	<input type="checkbox"/>	Private Port 1	0	
TCP	<input type="checkbox"/>	Public Port 2 start	0	
UDP	<input type="checkbox"/>	Public Port 2 End	0	
DNS	<input type="checkbox"/>	Host I/F 2	4	
Dynamic IP	<input type="checkbox"/>	Host IP 2	0.0.0.0	
PPP/Ethernet	<input type="checkbox"/>	Private Port 2	0	
PassThru	<input type="checkbox"/>	Public Port 3	0	
SMTP	<input type="checkbox"/>	Public Port 3 End	0	
Other	<input type="checkbox"/>	Host I/F 3	4	
Low Power	<input type="checkbox"/>	Host IP 3	0.0.0.0	
Firewall - IP	<input type="checkbox"/>	Private Port 3	0	
Port Forwarding	<input type="checkbox"/>	Public Port 4	0	
LOGGING	<input type="checkbox"/>	Public Port 4 End	0	
GPS	<input type="checkbox"/>	Host I/F 4	4	
Server 1	<input type="checkbox"/>	Host IP 4	0.0.0.0	
Server 2	<input type="checkbox"/>	Private Port 4	0	
Server 3	<input type="checkbox"/>	Public Port 4 End	0	
Server 4	<input type="checkbox"/>	Host I/F 4	4	
Misc	<input type="checkbox"/>	Host IP 4	0.0.0.0	
Local/Streaming	<input type="checkbox"/>	Private Port 4	0	
1X/EV-DO	<input type="checkbox"/>	Public Port 4	0	
VPN	<input type="checkbox"/>	Public Port 4 End	0	
Split Tunnel	<input type="checkbox"/>	Host I/F 4	4	
VPN-1	<input type="checkbox"/>	Host IP 4	0.0.0.0	
VPN-2	<input type="checkbox"/>	Private Port 4	0	
VPN-3	<input type="checkbox"/>	Public Port 4	0	
VPN-4	<input type="checkbox"/>	Public Port 4 End	0	
VPN-5	<input type="checkbox"/>	Host I/F 4	4	
I/O	<input type="checkbox"/>	Host IP 4	0.0.0.0	

Figure 6-7: AceManager: Port Forwarding

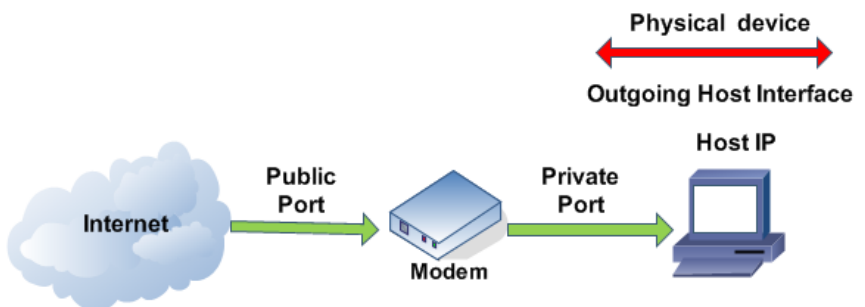


Figure 6-8: Port Forwarding

In AceManager, enter the fields in the Port Forwarding group.

- Number of PF Entries: Set value to number of used Port forward rules for performance gain. Each forwarding entry has four parameters:
 - Public Port: Port number of the Modem/Gateway.
 - Host/IF: Physical connection type to the modem. (USB, Ethernet).
 - Host IP: IP address of the connected device/computer.
 - Private Port: Port number on the connected device.
- Port Forwarding with range of ports (start and end): The Public Port 1 start and Public Port 1 end, allows ranges of

ports to be forwarded, and or changed without individual entry. For example, if Public range is 8080 - 8090 to 80, this will cause 8086 to be forwarded to 86.

You can set a default in the PPP/Ethernet group, if you do not need:

- To forward to specific ports on your connected device, but you want all data to be directly used by ALEOS, or otherwise forwarded.
- To pass to only one connected device.

Note: The default settings are independent of the number of Port Forward entries and can be used with port forwarding to pass anything not forwarded to specific ports.

- **Default Interface:** Choose the Default Interface desired (i.e Ethernet or USB).
- **Default IP:** Enter this option only when you want to forward ports not specified, to the default IP.

Firewall Functions

The Raven X can provide a basic firewall between the public and private networks. There are two types of firewall rules supported by the Raven X, IP filtering and port filtering.

- **IP Filtering:** When enabled, only packets with source IP addresses matching those in a list or range of trusted hosts will be allowed through.
- **Friends List IP:** Each entry can be configured to allow a single IP address, for example 64.100.100.2, or the IP addresses from a complete subnet, such as 64.100.10.255 allowing all IP addresses from 64.100.10.0 to 64.100.10.255.
- **Non-Friends Port Forwarding:** Non-Friends port forwarding is like an allow rule for any of the forwarded ports. If it is enabled, the port forwarding rules apply to all incoming packets. If it is disabled, only Friends List IPs get through.
- **Start and End Range:** Specify the IP address range that is allowed access, for example 64.100.10.2 to start and 64.100.10.15 to end would allow 64.100.10.5 but would not allow 64.100.10.16.
- **Outbound IP Filtering:** Enable or disable Outbound IP filtering (0-OFF, 1- ON). Outbound Incoming traffic will create an outbound hole in the firewall, unless other restrictions apply to it. Access to Aleos ports are not blocked.

Note: In addition to the security settings in ALEOS, Inbound connections also require mobile terminated or Internet routable WAN/Cellular account.

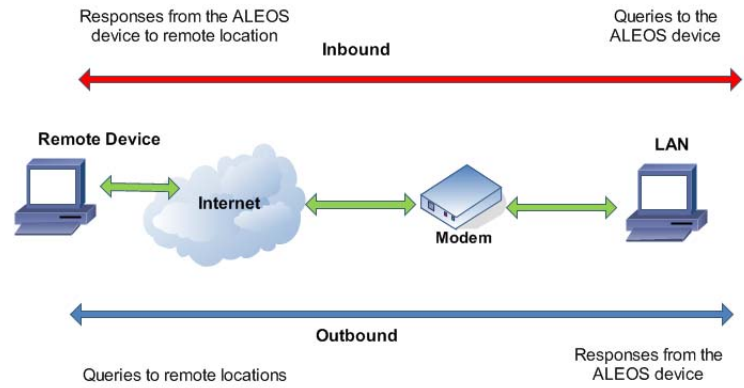


Figure 6-9: Outbound IP Filtering

GROUPS	MODEM DATA			PRINTABLE VIEW
INFO	AT	Name	Value	New Value
STATUS	FM	Inbound Firewall Mode	0	<input type="text"/>
COMMON		Non-Friends Port Forwarding	0	<input type="text"/>
Misc	F0	Friends List IP0	0.0.0.0	<input type="text"/>
USB	F1	Friends List IP1	0.0.0.0	<input type="text"/>
Serial	F2	Friends List IP2	0.0.0.0	<input type="text"/>
Telnet	F3	Friends List IP3	0.0.0.0	<input type="text"/>
TCP	F4	Friends List IP4	0.0.0.0	<input type="text"/>
UDP	F5	Friends List IP5	0.0.0.0	<input type="text"/>
DNS	F6	Friends List IP6	0.0.0.0	<input type="text"/>
Dynamic IP	F7	Friends List IP7	0.0.0.0	<input type="text"/>
PPP/Ethernet	F8	Friends List IP8	0.0.0.0	<input type="text"/>
PassThru	F9	Friends List IP9	0.0.0.0	<input type="text"/>
SMTP		Range 1 Start	0.0.0.0	<input type="text"/>
Other		Range 1 End	0.0.0.0	<input type="text"/>
Low Power		Range 2 Start	0.0.0.0	<input type="text"/>
Firewall - IP		Range 2 End	0.0.0.0	<input type="text"/>
Firewall - Ports		Outbound Firewall Mode	0	<input type="text"/>
Port Forwarding		Outbound Friends List IP0	0.0.0.0	<input type="text"/>
LOGGING		Outbound Friends List IP1	0.0.0.0	<input type="text"/>
GPS		Outbound Friends List IP2	0.0.0.0	<input type="text"/>
Server 1		Outbound Friends List IP3	0.0.0.0	<input type="text"/>
Server 2		Outbound Friends List IP4	0.0.0.0	<input type="text"/>
Server 3				
Server 4				
Misc				
Local/Streaming				
1X/EV-DO				
VPN				
Split Tunnel				
VPN-1				
VPN-2				
VPN-3				
VPN-4				
VPN-5				
I/O				

Figure 6-10: AceManager: Firewall - IP

Note: Port Filtering Mode does not require to be set when you enable Non-Friends Port Forwarding.

- **Port Filtering Mode:** Independent of the IP filtering, this mode can be enabled to block ports specified or allow ports specified. When enabled, all ports not matching the rule will be allowed or blocked depending on the mode.

GROUPS	MODEM DATA	PRINTABLE VIEW
INFO	AT Name Value New Value	
STATUS	<input type="checkbox"/> Inbound Port Filtering Mode 0 <input type="text"/>	
COMMON	<input type="checkbox"/> Inbound Port 1 Start 0 <input type="text"/>	
Misc	<input type="checkbox"/> Inbound Port 1 End 0 <input type="text"/>	
USB	<input type="checkbox"/> Inbound Port 2 Start 0 <input type="text"/>	
Serial	<input type="checkbox"/> Inbound Port 2 End 0 <input type="text"/>	
Telnet	<input type="checkbox"/> Inbound Port 3 Start 0 <input type="text"/>	
TCP	<input type="checkbox"/> Inbound Port 3 End 0 <input type="text"/>	
UDP	<input type="checkbox"/> Inbound Port 4 Start 0 <input type="text"/>	
DNS	<input type="checkbox"/> Inbound Port 4 End 0 <input type="text"/>	
Dynamic IP	<input type="checkbox"/> Outbound Port Filtering Mode 0 <input type="text"/>	
PPP/Ethernet	<input type="checkbox"/> Outbound Port 1 Start 0 <input type="text"/>	
PassThru	<input type="checkbox"/> Outbound Port 1 End 0 <input type="text"/>	
SMTP	<input type="checkbox"/> Outbound Port 2 Start 0 <input type="text"/>	
Other	<input type="checkbox"/> Outbound Port 2 End 0 <input type="text"/>	
Low Power	<input type="checkbox"/> Outbound Port 3 Start 0 <input type="text"/>	
Firewall - IP	<input type="checkbox"/> Outbound Port 3 End 0 <input type="text"/>	
Firewall - Ports	<input type="checkbox"/> Outbound Port 4 Start 0 <input type="text"/>	
Port Forwarding	<input type="checkbox"/> Outbound Port 4 End 0 <input type="text"/>	
LOGGING	<input type="checkbox"/> Outbound Port 1 Start 0 <input type="text"/>	
GPS	<input type="checkbox"/> Outbound Port 1 End 0 <input type="text"/>	
Server 1	<input type="checkbox"/> Outbound Port 2 Start 0 <input type="text"/>	
Server 2	<input type="checkbox"/> Outbound Port 2 End 0 <input type="text"/>	
Server 3	<input type="checkbox"/> Outbound Port 3 Start 0 <input type="text"/>	
Server 4	<input type="checkbox"/> Outbound Port 3 End 0 <input type="text"/>	
Misc	<input type="checkbox"/> Outbound Port 4 Start 0 <input type="text"/>	
Local/Streaming	<input type="checkbox"/> Outbound Port 4 End 0 <input type="text"/>	
1X/EV-DO	<input type="checkbox"/> Outbound Port 1 Start 0 <input type="text"/>	
VPN	<input type="checkbox"/> Outbound Port 1 End 0 <input type="text"/>	
Split Tunnel		
VPN-1		
VPN-2		
VPN-3		
VPN-4		
VPN-5		
I/O		

Figure 6-11: AceManager: Firewall Ports

- **Firewall Port:** Specify the port you wish to have blocked or allowed, depending on the mode configured.
- **Packet Filtering:** Not available at this time.

Figure 6-12: AceManager: Firewall

VPN

Sierra Wireless AirLink modems with IPsec are designed to support the gateway-to-gateway security model.

IPsec is the most general security model, in that it allows either side to initiate a VPN session.

Split Tunnel

GROUPS	MODEM DATA	PRINTABLE VIEW
INFO	AT Name Value New Value	
STATUS	<input type="checkbox"/> Incoming Out of Band 0	
COMMON	<input type="checkbox"/> Outgoing Aleos Out of Band 1	
Misc	<input type="checkbox"/> Outgoing Host Out of Band 0	
USB		
Serial		
Telnet		
TCP		
UDP		
DNS		
Dynamic IP		
PPP/Ethernet		
PassThru		
SMTP		
Other		
Low Power		
Firewall - IP		
Firewall - Ports		
Port Forwarding		
LOGGING		
GPS		
Server 1		
Server 2		
Server 3		
Server 4		
Misc		
Local/Streaming		
1X/EV-DO		
VPN		
<u>Split Tunnel</u>		
VPN-1		
VPN-2		
VPN-3		
VPN-4		
VPN-5		
I/O		

Figure 6-13: GRE in AceManager: Default Configuration

Name	Default Value	Description
Incoming Out of Band	0	Enable (1) or Disable (0) access to modem remotely from machines that are not part of the IPSec network.
Outgoing Aleos Out of Band	1	Enable (1) or Disable (0) sending of ALEOS traffic over the IPSec tunnel to a remote location. This option allows ALEOS generated data (E.g. RAP) to be sent outside the IPSec tunnel.
Outgoing Host Out of Band	0	Enable (1) or Disable (0) access to resources outside the IPSec network. (e.g. Enable access to sites like www.google.com over non IPSec channel).

VPN 1

The VPN group tab will show IPsec and GRE related parameters and configuration fields on the right side of the pane

GROUPS	MODEM DATA			PRINTABLE VIEW
INFO	AT	Name	Value	New Value
STATUS	<input type="checkbox"/>	Tunnel Type	0	<input type="text"/>
COMMON	<input type="checkbox"/>	IPSec Status	Not Enabled	<input type="text"/>
Misc	<input type="checkbox"/>	IPSec Gateway	64.163.70.30	<input type="text"/>
USB	<input type="checkbox"/>	Pre-shared Key 1	SierraWireless	<input type="text"/>
Serial	<input type="checkbox"/>	Negotiation Mode	1	<input type="text"/>
Telnet	<input type="checkbox"/>	IKE Encryption Algorithm	7	<input type="text"/>
TCP	<input type="checkbox"/>	IKE Authentication Algorithm	2	<input type="text"/>
UDP	<input type="checkbox"/>	IKE Key Group	2	<input type="text"/>
DNS	<input type="checkbox"/>	IKE SA Life Time	7200	<input type="text"/>
Dynamic IP	<input type="checkbox"/>	Local Address Type	1	<input type="text"/>
PPP/Ethernet	<input type="checkbox"/>	Local Address	0.0.0.0	<input type="text"/>
PassThru	<input type="checkbox"/>	Local Address - Netmask	0.0.0.0	<input type="text"/>
SMTP	<input type="checkbox"/>	Remote Address Type	17	<input type="text"/>
Other	<input type="checkbox"/>	Remote Address	10.11.12.0	<input type="text"/>
Low Power	<input type="checkbox"/>	Remote Address - Netmask	255.255.255.0	<input type="text"/>
Firewall - IP	<input type="checkbox"/>	IPSec Encryption Algorithm	3	<input type="text"/>
Firewall - Ports	<input type="checkbox"/>	IPSec Authentication Algorithm	2	<input type="text"/>
Port Forwarding	<input type="checkbox"/>	IPSec Key Group	2	<input type="text"/>
LOGGING	<input type="checkbox"/>	IPSec SA Life Time	7200	<input type="text"/>
GPS				
Server 1				
Server 2				
Server 3				
Server 4				
Misc				
Local/Streaming				
1X/EV-DO				
VPN				
Split Tunnel				
VPN-1				
VPN-2				
VPN-3				
VPN-4				
VPN-5				
I/O				

Figure 6-14: AceManager: VPN 1

Table 6-1: Configuration Parameters in AceManager

Name	Default Value	Description
Tunnel Type	0	There are three options for each VPN tunnel and they are as follows: <ul style="list-style-type: none"> • Feature not used • IPSec • GRE • GRE and IPSec
IPSec Status	Disconnected	Shows the status of IPSec.
IPSec Gateway	64.163.70.30	Fill in the IPSec of the VPN concentrator. When GRE is enabled - Enter GRE gateway address, for example, 64.163.70.115.
Pre-shared Key 1	SierraWireless	8 to 31 case sensitive ASCII characters
Negotiation Mode	1	The choices in drop down options are main or aggressive.
IKE Encryption Algorithm	7	You can choose other options like, Blowfish, 3 DES, Cast 128 and AES. 3DES or AES can be used for stronger encryption.
IKE Authentication Algorithm	2	Three different authentication algorithms are among the drop-down choices. 1-MD5 is for minimal security and 2-SH-1 is higher security. 5-SHA-256 is also an option.
IKE Key Group	2	Different Key Groups are, 1-DH1, 2-DH2 and 3-DH3.
IKE SA Life Time	7200 (seconds)	Enter the lifetime of VPN of how long it is valid. "0" reflects no expiry.

Table 6-1: Configuration Parameters in AceManager

Name	Default Value	Description
Local Address Type	1	Choose from drop-down menu. <ul style="list-style-type: none"> • “1” indicates Modem Public IP. It is the IP of the device behind the modem, when the modem is in public mode. • “2” indicates Host Private Subnet of the device behind the modem on the same subnet, when the modem is in private mode. • “5” indicates Single Address. • “17” indicates Subnet Address.
Local Address	0.0.0.0	Local Address of the device connected to the modem.
Local Address - end or mask	0.0.0.0	Subnet address with the Subnet Mask
Remote Address Type	17	Network behind the Concentrator.
Remote Address	10.11.12.0	Address of the remote device. Choose from two options: 5-Single Address and 17-Subnet Address. This field is the subnet address behind the GRE gateway, for example, 192.168.15.0
Remote Address - Netmask	255.255.255.0	Subnet address with the Subnet Mask.
IPSec Encryption Algorithm	3	You can choose other options like, Blowfish, 3 DES, Cast 128 and AES. The option “0” indicates that IPSec encryption may not be used. 3DES or AES can be used for stronger encryption.
IPSec Authentication Algorithm	2	Three different authentication algorithms are among the drop-down choices. 1-MD5 is for minimal security and 2-SH-1 is higher security. 5-SHA-256 is also an option. “0” is also an option for not applying IPSec authentication algorithm.

Table 6-1: Configuration Parameters in AceManager

Name	Default Value	Description
IPSec Key Group	2	Different Key Groups are, 1-DH1, 2-DH2 and 5-DH5. DH5 denotes highest security
IPSec SA Life Time	7200 (seconds)	This indicates how often the modem renegotiates the IKE SA. While the renegotiation happens the VPN tunnel gets disconnected temporarily.

Note: For further information on IPSec, please refer to the IPSec User Guide.

GRE configuration

Selecting GRE option in Tunnel Type, will enable the GRE feature option.

To configure GRE, follow the steps below:

- 1.** Enter IPSec Gateway.
- 2.** Enter the Remote Address (Subnet of the GRE server).
- 3.** Enter the Remote Address- Netmask address.

Note: You can configure a second GRE tunnel by configuring the field parameters from Tunnel 2 Type to Remote Address-Netmask, with another valid GRE gateway and a valid subnet behind the GRE gateway.

Keepalive

Keepalive is used to test the connection to the cellular network by pinging an IP address after a specified period of inactivity. Keepalive is only recommended for users who have a remote terminated modem that infrequently communicates to the network or if you have experienced issues over time where the modem can no longer be reached remotely.

When Keepalive pings the IP address, an acknowledgement indicates there is an active connection to the network. If the Raven X does not receive a response from the IP address, it will make additional attempts according to a backoff algorithm before determining the Internet connection is not functioning

properly. If it determines the connection is not functioning, the modem will then attempt to reconnect to your cellular Network to reestablish IP connectivity.

Configuring Keepalive

In AceManager, the Keepalive settings are part of the *Other* group.

GROUPS	MODEM DATA		PRINTABLE VIEW	
INFO	AT	Name	Value	New Value
STATUS	*IPPING	Keepalive Ping Time	0	
COMMON	*IPPINGADDR	Keepalive Ping Address		
Misc	*MSCIUPDADDR	Status Update Address	/0	
USB	*MSCIUPDPERIOD	Status Update Period (Seconds)	0	
Serial	DAE	Disable AT Escape	0	
Telnet	*DATZ	Disable ATZ Reset	0	
TCP	*SNTP	Enable time update	0	
UDP	*SNTPADDR	SNTP Server Address		
DNS	*NETWDOG	Network Connection Wait	120	
Dynamic IP	*SNMPPORT	SNMP Port	0	
PPP/Ethernet	*SNMPSECLVL	SNMP Security Level	0	
PassThru	*SNMPTRAPDEST	SNMP Trap Destination IP	/0	
SMTP	*SNMPCOMMUNITY	SNMP Community String	public	
Other				
Low Power				
Firewall - IP				
Firewall - Ports				
Port Forwarding				
LOGGING				
GPS				
Server 1				
Server 2				
Server 3				
Server 4				
Misc				
Local/Streaming				
1X/EV-DO				
VPN				
Split Tunnel				
VPN-1				
VPN-2				
VPN-3				
VPN-4				
VPN-5				
I/O				

Figure 6-15: AceManager : Other

- ***IPPING** sets the interval, in minutes, you want Keepalive to test the network connection. To disable Keepalive, set *IPPING to 0 (default setting).

*Note: 15 minutes is the minimum time which can be set for Keepalive. If you set *IPPING for a value less than the minimum, the minimum value will be set.*

- ***IPINGADDR** sets the IP address you want to use for the connection test.

Caution: *If *IPINGADDR is left blank or is set to an invalid IP address (example, an IP which is unreachable or one which is not a valid IP address), modem performance will be adversely affected.*

Data usage using Keepalive

Keepalive is an optional feature. If you frequently pass data with your modem, you most likely do not need to have Keepalive enabled. When using Keepalive, be aware that a ping moves approximately 66 bytes of data over the network and is billable by your cellular Network. The following *IPING settings will incur approximate monthly data usage in addition to any other data usage:

*IPING	Estimated Usage
15 minutes	400k / month
30 minutes	200k / month
60 minutes	100k / month
120 minutes	50k / month

>> 7: IP Manager

- Understanding Domain Names
- Using IP Manager with your Raven X
- Understanding DNS

If you have a fleet of Sierra Wireless AirLink modems or even if you only have one, it can be difficult to keep track of the current IP addresses, especially if the addresses aren't static but change every time the modems connect to Provider. If you need to connect to a modem, or the device behind it, it is so much easier when you have a domain name (car54.mydomain.com, where are you?).

Reasons to contact the modem and/or the connected device:

- Requesting a location update from a delivery truck.
- Contacting a surveillance camera to download logs or survey a specific area.
- An oil derrick that needs to be triggered to begin pumping.
- Sending text to be displayed by a road sign.
- Updating the songs to be played on a juke box.
- Updating advertisements to be displayed in a cab.
- Remote access to a computer, a PLC, an RTU, or other system.
- Monitoring and troubleshooting the status of the modem itself without needing to bring it in or go out to it.

A dynamic IP address is suitable for many Internet activities such as web browsing, looking up data on another computer system, data only being sent out, or data only being received after an initial request (also called Mobile Originated). However, if you need to contact Raven X directly, a device connected to the modem, or a host system using your Raven X (also called Mobile Terminated), a dynamic IP won't give you a reliable address to contact (since it may have changed since the last time it was assigned).

Domain names are often only connected to static IP addresses because of the way most domain name (DNS) servers are set-up. Dynamic DNS servers require notification of IP Address changes so they can update their DNS records and link a dynamic IP address to the correct name.

- Dynamic IP addresses are granted only when your Raven X is connected and can change each time the modem reconnects to the network.
- Static IP addresses are granted the same address every time your Raven X is connected and are not in use when your modem is not connected.

Since many cellular providers, like wire-based ISPs, do not offer static IP addresses or static address accounts cost a premium vs. dynamic accounts, Sierra Wireless AirLink Solutions developed IP Manager to work with a Dynamic DNS server to receive notification from Sierra Wireless AirLink modems to translate the modem's dynamic IP address to a fully qualified domain name. Thus, you can contact your Raven X directly from the Internet using a domain name.

Understanding Domain Names

A domain name is a name of a server or device on the Internet which is associated with an IP address. Similar to how the street address of your house is one way to contact you and your phone number is another, both the IP address and the domain name can be used to contact a server or device on the Internet. While contacting you at your house address or with your phone number employ different methods, using a domain name instead of the IP address actually uses the same method, just a word based name is commonly easier to remember for most people than a string of numbers.

Understanding the parts of a domain name can help to understand how IP Manager works and what you need to be able to configure the modem. A fully qualified domain name (FQDN) generally has several parts.

- **Top Level Domain (TLD):** The TLD is the ending suffix for a domain name (.com, .net, .org, etc.)
- **Country Code Top Level Domain (ccTLD):** This suffix is often used after the TLD for most countries except the US (.ca, .uk, .au, etc.)
- **Domain name:** This is the name registered with ICANN (Internet Corporation for Assigned Names and Numbers) or the registry for a the country of the ccTLD (i.e. if a domain is part of the .ca TLD, it would be registered with the Canadian domain registry). It is necessary to have a name registered before it can be used.
- **Sub-domain or server name:** A domain name can have many sub-domain or server names associated with it. Sub-domains need to be registered with the domain, but do not

need to be registered with ICANN or any other registry. It is the responsibility of a domain to keep track of its own subs.

car54.mydomain.com

- **.com** is the TLD
- **mydomain** is the domain (usually noted as mydomain.com since the domain is specific to the TLD)
- **car54** is the subdomain or server name associated with the device, computer, or modem registered with mydomain.com

car54.mydomain.com.ca

This would be the same as above, but with the addition of the country code. In this example, the country code (.ca) is for Canada.

Tip: A URL (Universal Resource Locator) is different from a domain name in that it also indicates information on the protocol used by a web browser to contact that address, such as `http://www.sierrawireless.com`. `www.sierrawireless.com` is a fully qualified domain name, but the `http://`, the protocol identifier, is what makes the whole thing a URL.

Dynamic Names

When an IP address is not expected to change, the DNS server can indicate to all queries that the address can be cached and not looked up for a long period of time. Dynamic DNS servers, conversely, have a short caching period for the domain information to prevent other Internet sites or queries from using the old information. Since the IP address of a modem with a dynamic account can change frequently, if the old information was used (such as with a DNS server which indicates the address can be cached for a long period of time) when the IP address changed, the domain would no longer point to the new and correct IP address of the modem.

If your Raven X is configured for Dynamic IP, when it first connects to the Internet, it sends a IP change notification to IP Manager. IP Manager will acknowledge the change and update the Dynamic DNS server. The new IP address will then be the address for your modem's configured name.

Once your modem's IP address has been updated in IP Manager, it can be contacted via name. If the IP address is needed, you can use the domain name to determine the IP address.

Note: The fully qualified domain name of your Raven X will be a subdomain of the domain used by the IP Manager server.

Using IP Manager with your Raven X

To allow your Sierra Wireless AirLink modem to be addressed by name, the modem needs to have a minimum of three elements configured. You can also configure a second dynamic server as a backup, secondary, or alternate server.

In AceManager, select *Dynamic IP*.

GROUPS	MODEM DATA				PRINTABLE VIEW
INFO	AT	Name	Value	New Value	
STATUS	*MODEMNAME	Modem Name	6059f371		
COMMON	*DOMAIN	Domain	esairlink.com		
Misc	*IPMANAGER1	IP Manager Server 1 (IP Adrs)	edns2.esairlink.com		
USB	*IPMGRUPDATE1	IPMServer1 Update (Minutes)	5		
Serial	*IPMGRKEY1	IPMServer1 Key	*****		
Telnet	*IPMANAGER2	IP Manager Server 2 (IP Adrs)	esairlink.com		
TCP	*IPMGRUPDATE2	IPMServer2 Update (Minutes)	5		
UDP	*IPMGRKEY2	IPMServer2 Key	*****		
DNS					
Dynamic IP					
PPP/Ethernet					
Pass Thru					
SMTP					
Other					
Low Power					
Firewall - IP					
Firewall - Ports					
Port Forwarding					
LOGGING					
GPS					
Server 1					
Server 2					
Server 3					
Server 4					
Misc					
Local/Streaming					
1X/EV-DO					
VPN					
Split Tunnel					
VPN-1					
VPN-2					
VPN-3					
VPN-4					
VPN-5					
I/O					

Figure 7-1: AceManager: Dynamic IP

- ***MODEMNAME** : The name you want for the modem. There are some restrictions listed below for the modem name.
- ***DOMAIN** : The domain name to be used by the modem. This is the domain name of the server configured for *IPMANAGER1.
- ***IPMANAGER1** : The IP address or domain name of the dynamic DNS server which is running IP Manager.
- ***IPMANAGER2** : The secondary server for the domain. While it is optional to have two servers configured, it is highly recommended.

Tip: You can use a domain name instead of the IP address for your IP Manager servers if you have DNS set up in your Raven X.

- ***IPMGRUPDATE1** and ***IPMGRUPDATE2**: How often, in minutes, you want the address sent to IP Manager. If this is set to zero, the modem will only send an update if the IP address changes (example, if your Raven X is reset or is assigned a different IP address).
- ***IPMGRKEY1** and ***IPMGRKEY2**: User defined password key which is used instead of AirLink secret key when using an IP Manager server other than the one provided by Sierra Wireless.

Restrictions for Modem Name

For the Modem Name, you should use something which is unique but also easy to remember. Your company name or the intended function of the modem are recommended. If you have more than one modem and want to name them the same, you can append a number for each. Since it is an Internet domain name, there are some restrictions for the name.

- Must begin with a letter or number
- Can include a hyphen (-)
- Cannot contain spaces
- Must be no longer than 20 characters total

Data Usage for IP Manager Server Updates

The IP Manager update is a small packet sent to the server with a response sent back to the modem. If you have *IPMGRUPDATE1 or *IPMGRUPDATE2 set to any number but zero, the modem will send the update not only when it receives a new IP address but at the time interval as well. The data traffic could be billed by your carrier.

Each update is a total of 68 bytes from the modem with a 50 byte total response from the server for a round trip update of 118 bytes.

interval (minutes)	total bytes per day (24 hours)
10	16992 bytes
30	5664 bytes
60	2832 bytes
500	339.84 bytes

Eairlink.com

As a service, Sierra Wireless maintains a IP Manager servers which can be used for any AirLink modem.

- ***DOMAIN** : eairlink.com
- ***IPMANAGER1** : edns2.eairlink.com
- ***IPMANAGER2** : eairlink.com

Tip: When using the IP Manager service offered by Sierra Wireless, since there are many modems using the service, it is even more imperative to have a unique name for your modem.

Understanding DNS

The Raven X has the ability to query DNS servers in order to translate domain names into IP addresses. This allows you to use domain names in place of IP addresses for most of the configuration options requiring IP addresses. This is important if your Raven X will need to contact another modem or other device that has a domain name but an unknown or dynamic IP address (such as another remote Raven X using IP Manager).

Configuring DNS

Generally, when your Raven X receives its IP address from Provider as part of the connection process, it will also receive the DNS servers to use for resolving (or translating) names to IP addresses which it will automatically configure in the modem settings. Unless your Raven X will be used on a network with other modems or devices which have names

Note: The IP Manager service from Sierra Wireless is currently not a guaranteed service though every effort is made to keep it operational 24/7.

internal to the local network or frequently changing IP addresses, the DNS servers provided by Provider should be all you need.

If the Raven X will be communicating with a device that has a domain name but changes its IP address frequently (such as another AirLink modem using IP Manager) or is on a network where devices are accessed by names rather than IP addresses, you will want to put in an alternate DNS (*DNSUSER) where that domain is updated, such as the IP Manager server the remote modem is using or the listing of IP addresses to names is kept.

If you need to manually configure DNS, in AceManager, select *DNS*.

GROUPS	MODEM DATA				PRINTABLE VIEW
INFO STATUS COMMON Misc USB DNS Dynamic IP PPP/Ethernet SMTP Other	AT	Name	Value	New Value	
	*DNS1	Modem DNS Server 1	209.183.54.151		
	*DNS2	Modem DNS Server 2	209.183.54.151		
	*DNSUSER	Use Alternate DNS 1	0.0.0.0		
	*DNSUPDATE	DNS Updates	0		
		Use Alternate DNS 2	0.0.0.0		

Figure 7-2: AceManager: DNS

- ***DNS1** and ***DNS2** - The primary and secondary DNS servers set by Provider when your Raven X gets its IP address.
- ***DNSUSER** - Set this, if desired, to an additional DNS server to query first before the primary or secondary (just as a hosts file is queried first on a computer). If *DNSUSER is set to 0.0.0.0, it will be ignored.
- ***DNSUPDATE** - This command sets how often you want DNS Updates to be requested. Otherwise the Raven X will only send updates when it is reset, powered up, or the IP address is granted by network changes.
- **Use Alternate DNS 2** - Set another DNS User.

The “PPP-Peer” Domain Name

The Raven X uses the unqualified domain name of “ppp-peer” when it is in PPP or SLIP address mode to resolve the address of the device or computer connected via PPP or SLIP address. If the Raven X is not in PPP or SLIP address mode, “ppp-peer” will resolve to 0.0.0.0.

>> 8: Configuring Modbus/BSAP

- Configuring the Raven X at the Polling Host for Modbus on UDP
- Configuring the Remote Raven Xs for Modbus with UDP

The Raven X supports Modbus ASCII, Modbus RTU, BSAP, and can also emulate other protocols like DF1 or others using its Modbus Variable feature.

Modbus Overview

The Modbus Protocol, developed by Modicon in 1979, provides for client-server (also referred to as master-slave) communications between intelligent devices. As a de facto standard, it is the most widely used network protocol in the industrial manufacturing environment to transfer discrete/analog I/O and register data between control devices. Modbus, BSAP, and other Modbus variations are often used in conjunction with telemetry devices.

Tip: This section is just a brief overview of Modbus. For more information, refer to your Modbus equipment distributor or manufacturer or <http://www.modbus.org>.

Telemetry

Telemetry is an automated communications process by which data is collected from instruments located at remote or inaccessible points and transmitted to receiving equipment for measurement, monitoring, display, and recording. Transmission of the information may be over physical pairs of wires, telecommunication circuits, radios or satellite.

Remote Terminal Unit (RTU)

Modbus was originally designed to be used in a radio environment where packets are broadcast from a central station (also called master or host) to a group of remote units. Each remote unit, Remote Terminal Unit (RTU), has a hexadecimal identification number (ID). The first part of the broadcast packet contains an RTU ID which corresponds to the ID of one of the remote units. The Modbus host looks for the ID and sends to only the unit with the matching ID. The RTU would then reply back to the central station.

The RTU connects to physical equipment such as switches, pumps, and other devices and monitors and controls these devices. The RTU can be part of a network set up for Supervisory Control and Data Acquisition.

Supervisory Control and Data Acquisition (SCADA)

Supervisory Control and Data Acquisition (SCADA) describes solutions across a large variety of industries and is used in industrial and engineering applications to monitor and control distributed systems from a master location. SCADA encompasses multiple RTUs, a central control room with a host computer (or network), and some sort of communication infrastructure.

SCADA allows for “supervisory” control of remote devices as well as acquiring data from the remote locations. Programmable Logic Controllers allow for a higher degree of automated SCADA.

Programmable Logic Controller (PLC)

A Programmable Logic Controller (PLC) is a small industrial computer which generally monitors several connected sensor inputs and controls attached devices (motor starters, solenoids, pilot lights/displays, speed drives, valves, etc.) according to a user-created program stored in its memory. Containing inputs and outputs similar to an RTU, PLCs are frequently used for typical relay control, sophisticated motion control, process control, Distributed Control System and complex networking.

Modbus TCP/IP

Modbus TCP/IP simply takes the Modbus instruction set and wraps TCP/IP around it. Since TCP/IP is the communications standard for the Internet and most networked computers, this provides a simpler installation. Modbus TCP/IP uses standard Ethernet equipment.

Raven Modbus on UDP

When Prosoft Technology RadioLinX modems are used in place of radios, a Raven X is connected to the central station (host) and aRaven X is connected to each remote unit. When the Raven X is configured for Modbus with UDP, the Raven X connected to the host can store a list of IP addresses or names with matching IDs. When the host at the central station sends serial data as a poll request, the Raven X at the host matches the RTU ID to a corresponding IP of a Raven X at a remote unit. A UDP packet is assembled encapsulating the RTU ID and serial data transmitted from the host. The UDP packet is then transmitted to the specific Raven X at the remote unit

matching the RTU ID. The remote Raven X then disassembles the packet before transmitting the RTU ID and serial data to the remote unit. The remote units operate in normal UDP mode and their data is sent to the host via the remote Raven X and host Raven X.

Configuring the Raven X at the Polling Host for Modbus on UDP

This section covers a Polling Host with standard Modbus, variations may need additional AT commands.

1. Configure the listening/device ports

In AceManager, select *Misc* in the side menu.

GROUPS	MODEM DATA			PRINTABLE VIEW
INFO	AT	Name	Value	New Value
STATUS	*DATE	Date and Time	07/26/2007 23:06:29	
COMMON	OPRG	Enable Over-the-Air Programming	1	
Misc	*NETPHONE	Phone Number		
Serial	*STATICIP	Force Static IP	0.0.0.0	
TCP	*DPORT	Device Port	12345	
UDP	*NETUID	Network User ID	@	
DNS	*NETPW	Network Password	sprintpcs	
Dynamic IP	*NETALLOWZEROIP	Allow Last Byte of net IP = Zero	1	
PPP/Ethernet	*NETROAMPREF	Network Roaming Preference	99	
PassThru	*STATUSCHK	Checking SMS Status (Seconds)	0	
SMTP	*HOSTPAP	Request PAP	0	
Other	S53	Destination Address		
Friends	S53	Destination Port	0	
	S53	Default Dial Code	T	
LOGGING				
TELEMETRY				
ADDR LIST				

Figure 8-1: AceManager: Misc

The destination port for the modem at the host needs to match the device port (*DPORT) in use on all the modems at the remote sites. For example, if the remote modem's device port (*DPORT) is "12345", then the Modbus host modem's S53 destination port should be set to "12345".

Take note of (or set) the Device Port setting in *DPORT to configure the destination port on the remote modems.

2. Configure the default mode for start-up.

In AceManager, select *UDP* in the side menu. Select the appropriate *MD* mode from the drop down menu.

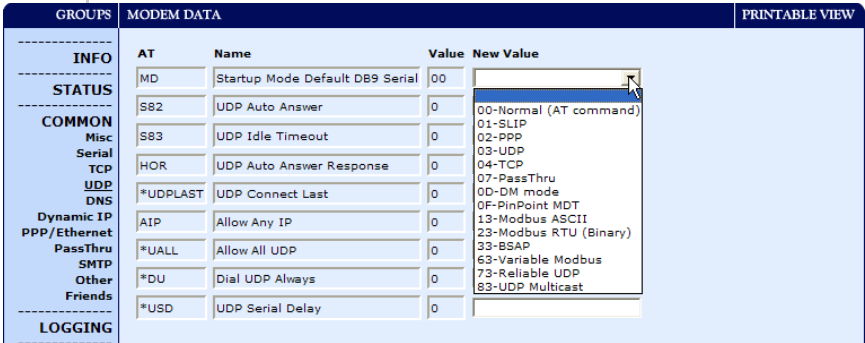


Figure 8-2: AceManager: UDP - MD

- MD13: Modbus ASCII
- MD23 : Modbus RTU (Binary)
- MD33: BSAP
- MD63: Variable Modbus - individual parameters are set up manually.

3. Configure IP addresses for the Modbus IDs.

The last step of configuring the modem at the host is setting the IDs to their specific IPs. In AceManager, select the menu option *Addr List*.

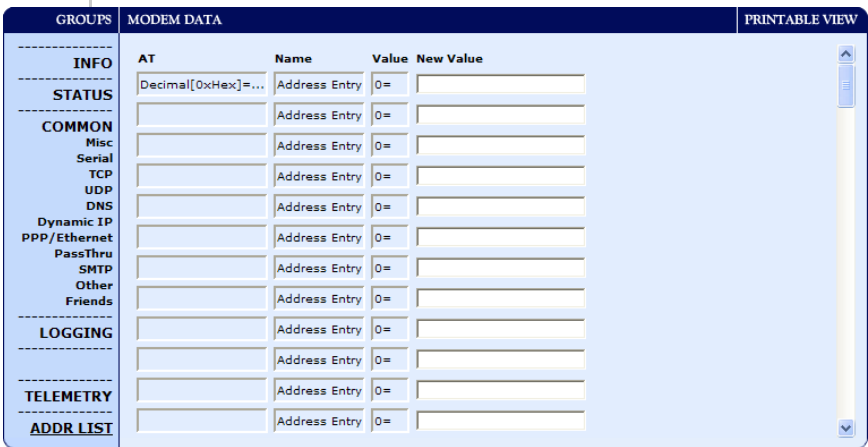


Figure 8-3: AceManager: Addr List.

Addresses can be entered in decimal or hex. AceManager will translate hex entries into decimal. The number before the "=" is ID, the number after is the IP address. There can be a total of 100 remote ID/Local addresses entered into the modem.

When using AT commands via telnet or direct serial connection, use ATMLIST for decimal IDs and ATMLISTX for hexadecimal. For example, if the ID is 27 and the IP is 123.123.123.124, you would enter it as ATMLIST27=123.123.123.124 or ATMLISTX1B=123.123.123.124.

4. Optional: Dynamic IP Address

If you do not have a static IP, the host modem should be configured to report its current IP to a Dynamic DNS (DDNS) server with IP Manager.

In the Host modem's configuration, instead of IP address for the Addr List (ATMLIST or ATMLISTX), substitute a single unique name for each modem, i.e. remote1, remote2, etc.

When you configure IP Manager for the host modem, make note of your modem name and domain setting in AceManager in the menu selection *Dynamic IP* to be used with the remote modems.

GROUPS	MODEM DATA		PRINTABLE VIEW
INFO	AT	Name	Value
STATUS	*MODEMNAME	Modem Name	603eea33
COMMON	*DOMAIN	Domain	
Misc	*IPMANAGER1	IP Manager Server 1 (IP Adrs)	
Serial	*IPMGRUPDATE1	IPMServer1 Update (Minutes)	0
TCP	*IPMGRKEY1	IPMServer1 Key	*****
UDP	*IPMANAGER2	IP Manager Server 2 (IP Adrs)	
DNS	*IPMGRUPDATE2	IPMServer2 Update (Minutes)	0
Dynamic IP	*IPMGRKEY2	IPMServer2 Key	*****
PPP/Ethernet			
PassThru			
SMTP			
Other			
Friends			
LOGGING			

Figure 8-4: AceManager: Dynamic IP

With names instead of IP addresses for the Address List, the host modem will query the DNS server for the current IP address assigned to the specific name of a remote modem to send a message corresponding to the ID.

When you use names instead of IP addresses, to ensure your modems are updated quickly with the correct IP addresses for the names, you will want to set the DNS settings as well. In AceManager, select *DNS*.

GROUPS		MODEM DATA		PRINTABLE VIEW	
<div>INFO</div> <div>STATUS</div> <div>COMMON</div> <div>Misc</div> <div>Serial</div> <div>TCP</div> <div>UDP</div> <div>DNS</div> <div>Dynamic IP</div>		AT	Name	Value	New Value
		*DNS1	Modem DNS Server 1	68.28.58.11	
		*DNS2	Modem DNS Server 2	68.28.50.11	
		*DNSUSER	Use Alternate DNS	0.0.0.0	
		*DNSUPDATE	DNS Updates	0	

Figure 8-5: AceManager: DNS

Configure *DNSUSER to the same IP address as the IP Manager (*IPMANAGER1). If your modems have dynamic IP addresses and not static (the IP address can change when it is powered up), configure *DNSUPDATE to a low interval to allow frequent updates.

Configuring the Remote Raven Xs for Modbus with UDP

This section covers standard Modbus settings for the Raven X at the remote unit, variations may need additional commands.

1. Configure the ports

In AceManager, select *Misc* in the side menu.

GROUPS		MODEM DATA		PRINTABLE VIEW	
<div>INFO</div> <div>STATUS</div> <div>COMMON</div> <div>Misc</div> <div>Serial</div> <div>TCP</div> <div>UDP</div> <div>DNS</div> <div>Dynamic IP</div> <div>PPP/Ethernet</div> <div>PassThru</div> <div>SMTp</div> <div>Other</div> <div>Friends</div> <div>LOGGING</div> <div>TELEMETRY</div> <div>ADDR LIST</div>		AT	Name	Value	New Value
		*DATE	Date and Time	07/26/2007 23:06:29	
		OPRG	Enable Over-the-Air Programming	1	
		*NETPHONE	Phone Number		
		*STATICIP	Force Static IP	0.0.0.0	
		*DPORT	Device Port	12345	
		*NETUID	Network User ID	@	
		*NETPW	Network Password	sprintpcs	
		*NETALLOWZEROIP	Allow Last Byte of net IP = Zero	1	
		*NETROAMPREF	Network Roaming Preference	99	
		*STATUSCHK	Checking SMS Status (Seconds)	0	
		*HOSTPAP	Request PAP	0	
		S53	Destination Address		
		S53	Destination Port	0	
		S53	Default Dial Code	T	

Figure 8-6: AceManager: Misc

Note: With a name instead of IPs for the host modem, the remote modems will query the DNS server for the current IP assigned to the host modem before sending data back to the host.

The destination port for the modem at the host needs to match the device port in use on all the modems at the remote sites. For example, if the remote modem's device port (see below) is "12345", then the Modbus host modem's S53 destination port should be set to "12345".

Set the destination port (S53) to match the device port of the host modem (*DPORT). Make sure the device port of the remote modem (*DPORT) matches the destination port of the host modem (S53).

2. Configure IP addresses for the host.

If the Host modem has a static IP address, enter it in the Destination Address for S53.

If the modem at the host has a dynamic IP and is using IP Manager, instead of an IP address for S53, specify the name of the host modem (*MODEMNAME). If the remote modems are using a different DDNS than the host modem, you will need to specify the fully qualified domain name (*MODEMNAME+*DOMAIN).

*Note: Setting the Host modem IP address as the S53 Destination Address provides a low level security. The modem will not forward UDP traffic unless the source IP/port matches what is in S53. However, if you set *AIP=1, the modem will forward UDP traffic from any source IP address as long as it is accessing the modem on the configured *DPORT.*

3. Configure the default mode for start-up.

Each modem at the remote locations will need to be configured to communicate with the modem at the host. In AceManager, select *UDP* in the side menu.

GROUPS	MODEM DATA				PRINTABLE VIEW
INFO	AT	Name	Value	New Value	
STATUS	MD	Startup Mode Default DB9 Serial	00	<input type="text"/>	
COMMON	S82	UDP Auto Answer	0	<input type="text"/>	
	S83	UDP Idle Timeout	0	<input type="text"/>	
	HOR	UDP Auto Answer Response	0	<input type="text"/>	
	*UDPLAST	UDP Connect Last	0	<input type="text"/>	
	AIP	Allow Any IP	0	<input type="text"/>	
	*UALL	Allow All UDP	0	<input type="text"/>	
	*DU	Dial UDP Always	0	<input type="text"/>	
	*USD	UDP Serial Delay	0	<input type="text"/>	
	Dynamic IP				
	PPP/Ethernet				
PassThru					
SMTP					
Other					
Friends					
LOGGING					

Figure 8-7: AceManager: UDP

- a. Enable S82, UDP auto answer.
- b. Set S83 to the idle time-out applicable to your application, commonly 20.

4. Configure other RTU settings.

Other parameters may need to be changed, but this is dependent on the RTU type being used. As a minimum, this typically involves setting the proper serial settings to match your RTU.

5. Optional: Dynamic IP Address

If you do not have a static IP, the host modem should be configured to report its current IP to a Dynamic DNS (DDNS) server with IP Manager.

You will need to match the name of the modem to the names specified in the host modem’s MLIST or MLISTX for the connected RTU.

When you configure IP Manager for the host modem, make note of your modem name and domain setting in AceManager in the menu selection *Dynamic IP* to be used with the remote modems.

GROUPS	MODEM DATA		PRINTABLE VIEW
INFO	AT	Name	Value
STATUS	*MODEMNAME	Modem Name	603eea33
COMMON	*DOMAIN	Domain	
Misc	*IPMANAGER1	IP Manager Server 1 (IP Adrs)	
Serial	*IPMGRUPDATE1	IPMServer1 Update (Minutes)	0
TCP	*IPMGRKEY1	IPMServer1 Key	*****
UDP	*IPMANAGER2	IP Manager Server 2 (IP Adrs)	
DNS	*IPMGRUPDATE2	IPMServer2 Update (Minutes)	0
Dynamic IP	*IPMGRKEY2	IPMServer2 Key	*****
PPP/Ethernet			
PassThru			
SMTP			
Other			
Friends			
LOGGING			


Figure 8-8: AceManager: Dynamic IP

When you use names instead of IP addresses, to ensure your modems are updated quickly with the correct IP addresses for the names, you will want to set the DNS settings as well. In AceManager, select *DNS*.

GROUPS	MODEM DATA				PRINTABLE VIEW
----- INFO ----- STATUS ----- COMMON Misc Serial TCP UDP DNS Dynamic IP	AT	Name	Value	New Value	
	*DNS1	Modem DNS Server 1	68.28.58.11		
	*DNS2	Modem DNS Server 2	68.28.50.11		
	*DNSUSER	Use Alternate DNS	0.0.0.0		
	*DNSUPDATE	DNS Updates	0		

Figure 8-9: AceManager: DNS

Configure *DNSUSER to the same IP address as the IP Manager (*IPMANAGER1). If your modems have dynamic IP addresses and not static (the IP address can change when it is powered up), configure *DNSUPDATE to a low interval to allow frequent updates.

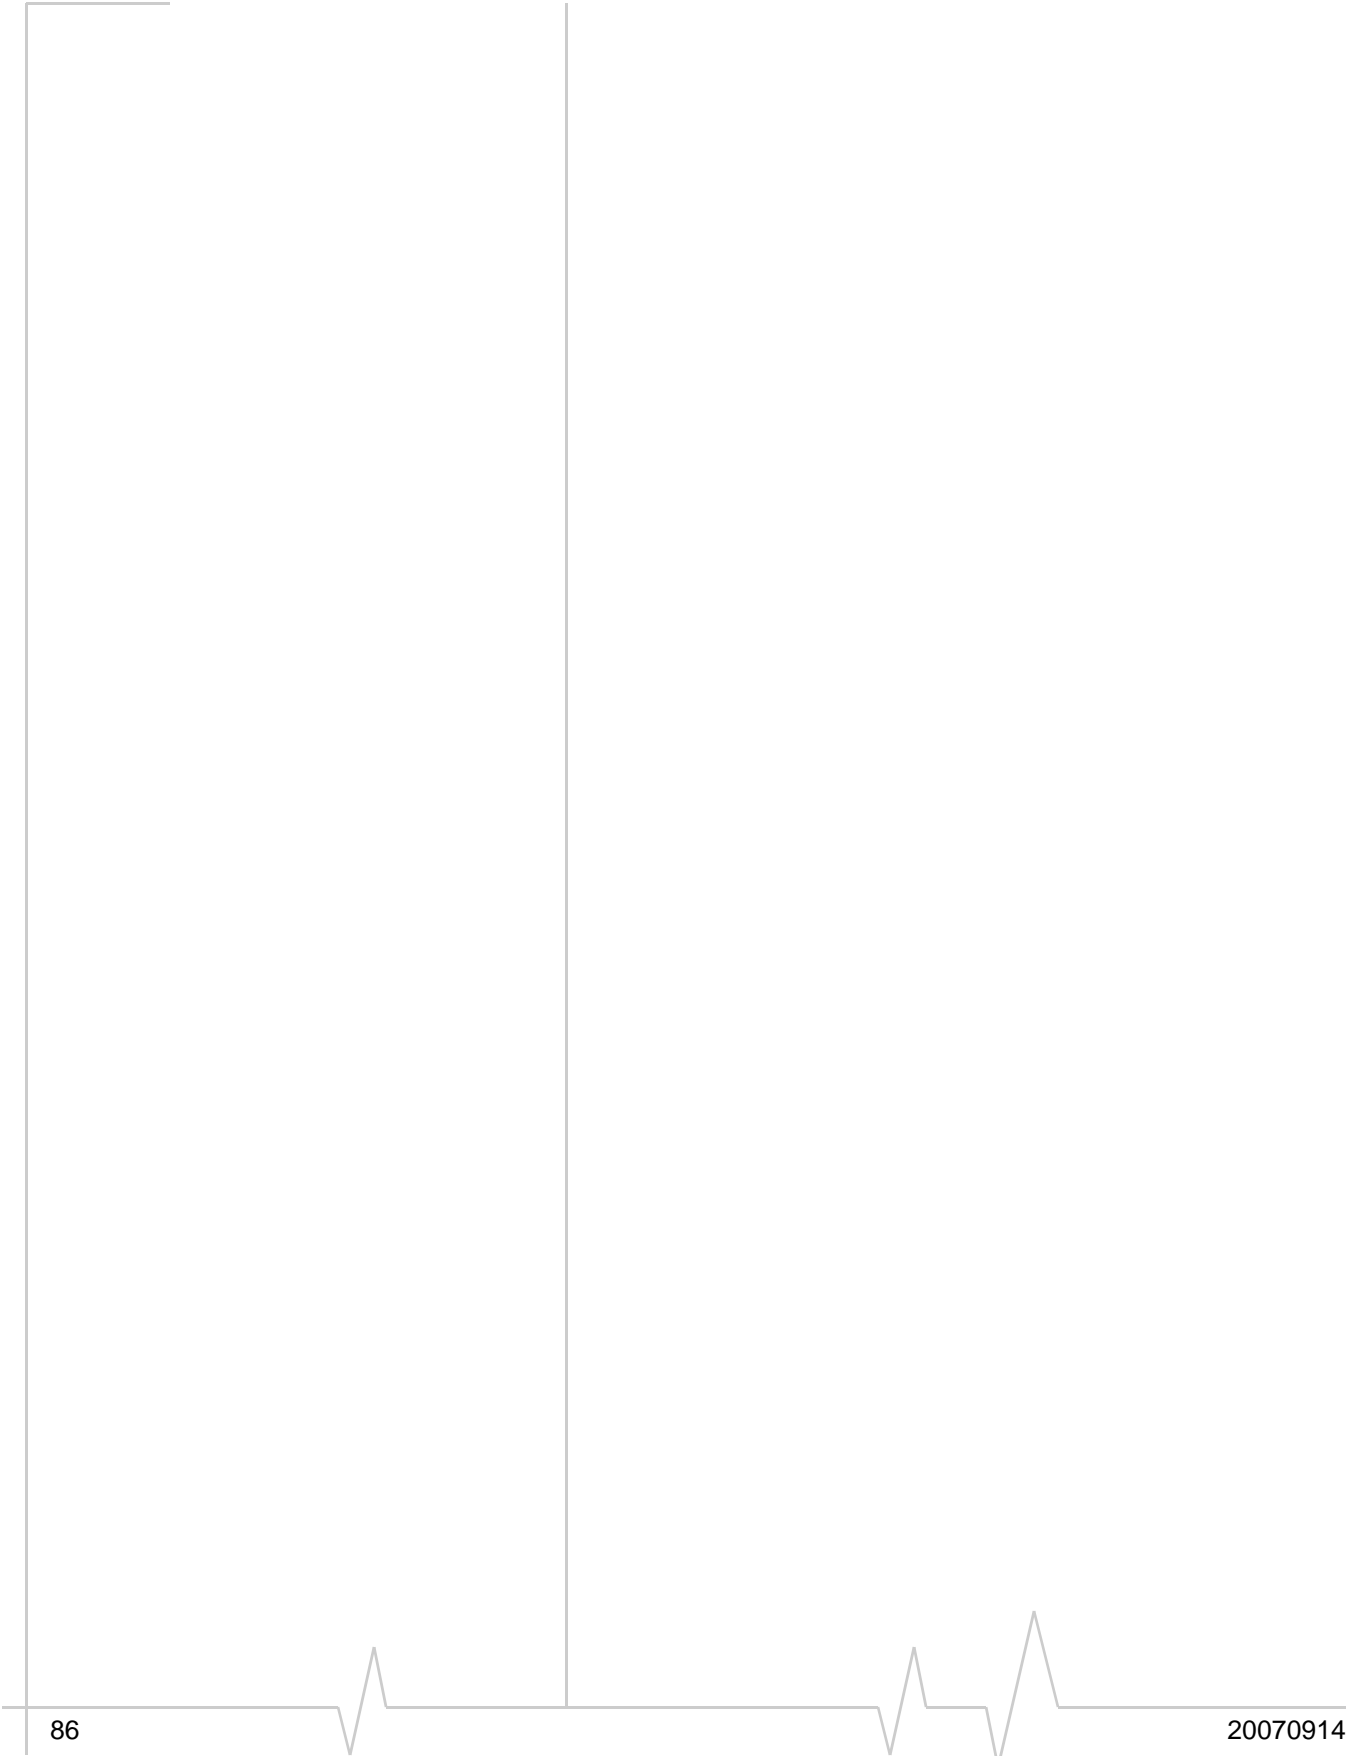

>> 9: SNMP : Simple Network Management Protocol

- [SNMP Configuration](#)
- [SNMP MIB Definition Sample](#)

The Simple Network Management Protocol (SNMP) was designed to allow remote management and monitoring of a variety of devices from a central location. The SNMP management system is generally composed of agents (such as your Raven X, a router, a UPS, a web server, a file server, or other computer equipment) and a Network Management Station (NMS) which monitors all the agents on a specific network. Using the management information base (MIB), an NMS can include reporting, network topology mapping, tools to allow traffic monitoring and trend analysis, and device monitoring.

Authentication ensures SNMP messages coming from the agent, such as the Raven X, have not been modified and the agent may not be queried by unauthorized users. SNMPv3 uses a User-Based Security Model (USM) to authenticate and, if desired or supported, message encryption. USM uses a user name and password specific to each device.

The Raven X can be configured as an SNMP agent and supports SNMPv2c and SNMPv3.

Management Information Base (MIB)

The management information base (MIB) is a type of database used to compile the information from the various SNMP agents. Reports from various agents, such as the Raven X, are sent as data in form designed to be parsed by the NMS into its MIB. The data is hierarchical with entries addressed through object identifiers.

SNMP Traps

SNMP traps are alerts that can be sent from the managed device to the Network Management Station when an event happens. Your Raven X is capable of sending the linkUp trap when the network connection becomes available.

SNMP Configuration

To configure your Raven X to work as an SNMP agent, you can use either AceManager, or a terminal connection to configure the modem using AT commands. In AceManager, the SNMP commands are all part of the **Other** group under the **Common** group.

There are only three commands to set for SNMP in the Raven X: the listening port, the security level, and the trap destination.

GROUPS	MODEM DATA				PRINTABLE VIEW
INFO	AT	Name	Value	New Value	
STATUS	*IPING	Keepalive Ping Time	0		
COMMON	*IPINGADDR	Keepalive Ping Address			
Misc	*MSCIUPDADDR	Status Update Address	/0		
USB	*MSCIUPDPERIOD	Status Update Period (Seconds)	0		
Serial	DAE	Disable AT Escape	0		
Telnet	*DATZ	Disable ATZ Reset	0		
TCP	*SNTP	Enable time update	0		
UDP	*SNTPADDR	SNTP Server Address			
DNS	*NETWDOG	Network Connection Wait	120		
Dynamic IP	*SNMPPORT	SNMP Port	0		
PPP/Ethernet	*SNMPSECLVL	SNMP Security Level	0		
PassThru	*SNMPTRAPDEST	SNMP Trap Destination IP	/0		
SNTP	*SNMPCOMMUNITY	SNMP Community String	public		
Other					
Low Power					
Firewall - IP					
Firewall - Ports					
Port Forwarding					
LOGGING					
GPS					
Server 1					
Server 2					
Server 3					
Server 4					
Misc					
Local/Streaming					
1X/EV-DO					
VPN					
Split Tunnel					
VPN-1					
VPN-2					
VPN-3					
VPN-4					
VPN-5					
I/O					

Figure 9-1: AceManager : Common > Other

Listening Port

*SNMPPORT sets the port for the SNMP agent to listen on. If set to zero, default, SNMP is disabled.

Tip: *SNMP generally uses port 161, however most Internet providers (including cellular) block all ports below 1024 as a security measure. You should be able to use a higher numbered port such as 10161.*

Security Level

*SNMPSECLVL sets the security level and which version of SNMP communications are used.

- **0** - No security required. SNMPv2c and SMNPv3 communications are allowed.
- **1** - Authentication required. SNMPv3 is required to do authentication and SNMPv2c transmissions will be silently discarded. Authentication is equivalent to the authNoPriv setting in SNMPv3.
- **2** - Authentication required and messages are encrypted. SNMPv3 is required to do authentication. SNMPv2c and SNMPv3 authNoPriv transmissions will be silently discarded. Authentication and encryption is equivalent to the authPriv setting in SNMPv3.

User Name and Password

The user name is '*user*'. The user name cannot be changed. The Raven X's password is used as the SNMP password (default is '*12345*').

Tip: *The eight-character password requirement for SMNPv3 is not enforced by the PinPoint X Agent to allow the default password to function. Your SNMP administrator or MIS may require you to change to a more secure and/or longer password.*

To change the password in the Raven X, select **Modem** from the top menu line in AceManager.

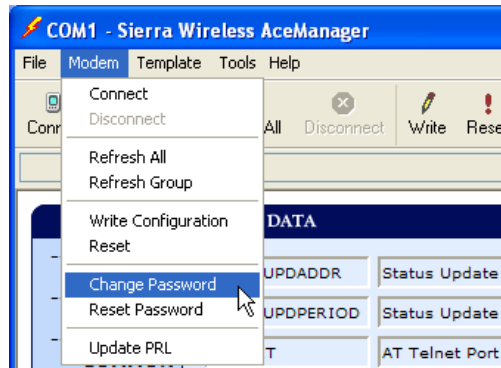


Figure 9-2: AceManager : Change Password menu option

The current password will be pre-entered. As you type the new password and confirm it, the characters you type will be obscured by “x”. For the password, you can use numbers, letters, and/or punctuation.

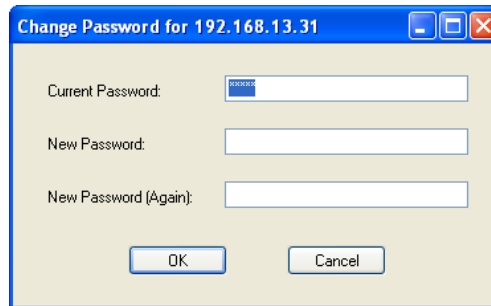


Figure 9-3: Change Password

Caution: The password is case sensitive. “drowssaP” is not the same as “drowssap”.

Trap Destination

*SNMPTRAPDEST needs to be set with the destination IP and port. If either are set to zero or empty, SNMP traps are disabled.

Note: Traps are sent out according to the SNMP security level (i.e. if the security level is 2, traps will be authenticated and encrypted). Currently, the only trap supported is LinkUp.

Community String

The community string can be configured using *SNMPCOMMUNITY. The default is "public".

SNMP MIB Definition Sample

```

AIRLINK-MIB DEFINITIONS ::= BEGIN

IMPORTS
    ObjectName FROM SNMPv2-SMI
    MODULE-COMPLIANCE FROM SNMPv2-CONF;

org OBJECT IDENTIFIER ::= { iso 3 }
dod OBJECT IDENTIFIER ::= { org 6 }
internet OBJECT IDENTIFIER ::= { dod 1 }
private OBJECT IDENTIFIER ::= { internet 4 }
enterprises OBJECT IDENTIFIER ::= { private 1 }

airlink OBJECT IDENTIFIER ::= { enterprises 20542 }
general OBJECT IDENTIFIER ::= { airlink 1 }
common OBJECT IDENTIFIER ::= { airlink 2 }
status OBJECT IDENTIFIER ::= { airlink 3 }
gps OBJECT IDENTIFIER ::= { airlink 4 }

-- GENERAL --
phoneNumber OBJECT-TYPE
    SYNTAX DisplayString (SIZE (10))
    MAX-ACCESS read-only
    STATUS current
    ::= { general 1 }

deviceId OBJECT-TYPE
    SYNTAX DisplayString
    MAX-ACCESS read-only
    STATUS current
    ::= { general 2 }

electronicID OBJECT-TYPE
    SYNTAX DisplayString
    MAX-ACCESS read-only
    STATUS current
    ::= { general 3 }

modemType OBJECT-TYPE
    SYNTAX DisplayString
    MAX-ACCESS read-only
    STATUS current

```

```
::= { general 4 }
```

```
aleosSWVer OBJECT-TYPE
```

```
SYNTAX DisplayString
```

```
MAX-ACCESS read-only
```

```
STATUS current
```

```
::= { general 5 }
```

```
aleosHWVer OBJECT-TYPE
```

```
SYNTAX DisplayString
```

```
MAX-ACCESS read-only
```

```
STATUS current
```

```
::= { general 6 }
```

```
modemSWVer OBJECT-TYPE
```

```
SYNTAX DisplayString
```

```
MAX-ACCESS read-only
```

```
STATUS current
```

```
::= { general 7 }
```

```
modemHWVer OBJECT-TYPE
```

```
SYNTAX DisplayString
```

```
MAX-ACCESS read-only
```

```
STATUS current
```

```
::= { general 8 }
```

```
-- COMMON --
```

```
date OBJECT-TYPE
```

```
SYNTAX DisplayString
```

```
MAX-ACCESS read-only
```

```
STATUS current
```

```
::= { common 1 }
```

```
otaProgrammingEnable OBJECT-TYPE
```

```
SYNTAX INTEGER {
```

```
disabled(0),
```

```
enabled(1) }
```

```
MAX-ACCESS read-only
```

```
STATUS current
```

```
::= { common 2 }
```

```
devicePort OBJECT-TYPE
```

```
SYNTAX INTEGER(0..65535)
```

```
MAX-ACCESS read-only
```

```
STATUS current
```

```
::= { common 3 }
```

```
netUID OBJECT-TYPE
```

```
SYNTAX DisplayString
```

```
MAX-ACCESS read-only
STATUS current
::= { common 4 }
```

```
netPW OBJECT-TYPE
SYNTAX DisplayString
MAX-ACCESS read-only
STATUS current
::= { common 5 }
```

```
requestPAP OBJECT-TYPE
SYNTAX INTEGER {
no(0),
yes(1) }
MAX-ACCESS read-only
STATUS current
::= { common 6 }
```

```
destinationAddress OBJECT-TYPE
SYNTAX DisplayString
MAX-ACCESS read-only
STATUS current
::= { common 7 }
```

```
destinationPort OBJECT-TYPE
SYNTAX INTEGER(0..65535)
MAX-ACCESS read-only
STATUS current
::= { common 8 }
```

```
serialPortSettings OBJECT-TYPE
SYNTAX DisplayString
MAX-ACCESS read-only
STATUS current
::= { common 9 }
```

```
serialPortFlowControl OBJECT-TYPE
SYNTAX INTEGER {
none(0),
hardware(2),
software(4) }
MAX-ACCESS read-only
STATUS current
::= { common 10 }
```

```
-- STATUS --
ipAddress OBJECT-TYPE
SYNTAX IPAddress
MAX-ACCESS read-only
```

STATUS current
 ::= { status 1 }

netState OBJECT-TYPE
SYNTAX DisplayString
MAX-ACCESS read-only
STATUS current
 ::= { status 2 }

netChannel OBJECT-TYPE
SYNTAX INTEGER
MAX-ACCESS read-only
STATUS current
 ::= { status 3 }

rssi OBJECT-TYPE
SYNTAX INTEGER(-125..-50)
MAX-ACCESS read-only
STATUS current
 ::= { status 4 }

serialSent OBJECT-TYPE
SYNTAX INTEGER
MAX-ACCESS read-only
STATUS current
 ::= { status 5 }

serialReceived OBJECT-TYPE
SYNTAX INTEGER
MAX-ACCESS read-only
STATUS current
 ::= { status 6 }

hostMode OBJECT-TYPE
SYNTAX DisplayString
MAX-ACCESS read-only
STATUS current
 ::= { status 7 }

powerMode OBJECT-TYPE
SYNTAX DisplayString
MAX-ACCESS read-only
STATUS current
 ::= { status 8 }

fixObtained OBJECT-TYPE
SYNTAX INTEGER {
no(0),
yes(1) }

```

MAX-ACCESS read-only
STATUS current
::= { gps 1 }

```

```

satelliteCount OBJECT-TYPE
SYNTAX INTEGER
MAX-ACCESS read-only
STATUS current
::= { gps 2 }

```

```

latitude OBJECT-TYPE
SYNTAX DisplayString
MAX-ACCESS read-only
STATUS current
::= { gps 3 }

```

```

longitude OBJECT-TYPE
SYNTAX DisplayString
MAX-ACCESS read-only
STATUS current
::= { gps 4 }

```

```

END

```

Display Responses

The string that is displayed for these objects is the same display for the corresponding AT Command.

Object	AT Command
phoneNumber	*NETPHONE?
deviceId	*DEVICEID?
electronicID	I3
aleosSWVer	I1
aleosHWVer	I1
modemSWVer	I2
modemHWVer	I2
date	*DATE?
otaProgrammingEnable	OPRG?
devicePort	*DPORT?
netUID	*NETUID?

Object	AT Command
netPW	*NETPW?
requestPAP	*HOSTPAP?
destinationAddress	S53
destinationPort	S53
serialPortSettings	S23
serialPortFlowControl	\Q
ipAddress	*NETIP?
netState	*NETSTATE?
netChannel	*NETCHAN?
rssi	*NETRSSI?
hostMode	*HOSTMODE?
powerMode	*POWERMODE? <i>PinPoint line modems only</i>
fixObtained	<i>PinPoint line modems only</i>
satelliteCount	<i>PinPoint line modems only</i>
latitude	<i>PinPoint line modems only</i>
longitude	<i>PinPoint line modems only</i>

Product ID

Each modem type has a unique ID associated with it so you can more easily identify the modem from its type on your network.

>> A: Configuration Commands

- [Info \(information\)](#)
- [Status](#)
- [Common](#)
- [Logging](#)
- [1x/EV-DO](#)

The configuration commands (AT commands) in this chapter are arranged according to their placement in AceManager.

The commands available in AceManager will depend of the model number of your Raven X and, in some cases, the version of the ALEOS firmware installed.

Note: Some commands can only be configured using a terminal emulation and typed AT commands. Some commands also require PassThru mode.

Tip: You can use a fully qualified domain name instead of an IP address for most configuration options calling for an IP address if your Raven X is configured to use DNS. DNS settings frequently come directly from your cellular Network while your Raven X is registering on the cellular network and receiving it's IP address.

Info (information)

The commands in the “Info” group have read-only parameters. They only provide information about the modem. Some of the information displayed in this group does not correspond directly to AT commands.

GROUPS	MODEM DATA			PRINTABLE VIEW
----- INFO ----- STATUS ----- COMMON Misc USB Serial Telnet TCP UDP DNS Dynamic IP PPP/Ethernet PassThru SMTP Other Low Power Firewall - IP Firewall - Ports Port Forwarding ----- LOGGING ----- GPS Server 1 Server 2 Server 3 Server 4 Misc Local/Streaming ----- 1X/EV-DO ----- VPN Split Tunnel VPN-1 VPN-2 VPN-3 VPN-4 VPN-5 ----- I/O	AT	Name	Value	
	*NETPHONE	Phone Number	5106912652	
	*DEVICEID	Device ID	0x000001FE00697A8C	
		Modem Name	6059f371	
		Modem EID/IMEI	6059f371	
		Modem Type	PinPoint X EV-DO	
	*ETHMAC	Ethernet Mac Address	00143E0171B9	
	I1	ALEOS Software Version	V4321_3.4.5.005 May 7 2009	
		Modem Hardware Configuration	090d0004000300000000000000000000	
		Modem Software Version	p2005900,60714 [Feb 22 2007 23:07:05]	
		Modem Hardware Version	MC5725 Rev 2.0 (2)	
		Boot Version	3.0.4	
		MSCI Version	5	

Figure 1-1: AceManager : Info

***DEVICEID?**

The 64-bit device ID the modem uses to identify itself to the cellular network.

***ETHMAC?**

The MAC address of the Ethernet port.

***NETPHONE?**

The modem's phone number, if applicable or obtainable.

&V

View active profile, the contents of the active registers. *Not displayed with AceManager.*

In

- **n=0** : Product name (for example, Raven X).
- **n=1** : The Raven X's firmware (ALEOS) version, hardware ID, and copyright.
- **n=2** : The internal hardware's firmware version and relevant hardware ID.

- **n=3** : The hardware module's unique identification number or serial number (ESN).
- **n=5** : View active profile (the contents of the active registers). *Not displayed with AceManager.*

Information Displayed in AceManager without AT Commands Listed

- **Versions of ALEOS, internal hardware, boot, and MSCI:**
Versions of internally configured hardware and software.

Status

Most of the commands in the “Status” group have read-only parameters and provide information about the modem. The Status Group has more fields that can be displayed on most screens. You can either resize your window or use the scroll bar on the side to display the remainder.

GROUPS	MODEM DATA	PRINTABLE VIEW
INFO	AT	Name
STATUS	*NETIP	Network IP
COMMON	*NETSTATE	Network State
Misc	*NETOP	Carrier
USB	*NETSERV	Network Service Type
Serial	*NETCHAN	Channel
Telnet	*NETRSSI	RSSI (dBm)
TCP	+ECIO	EC/IO (dB)
UDP		SID
DNS		NID
Dynamic IP		PN Offset
PPP/Ethernet		Base Class
PassThru		Host Mode
SMTTP		Host Signl Level
Other		DCD: LOW DTR: LOW DSR: HIGH CTS: HIGH RTS: LOW
Low Power	*NETERR	Network Error Rate
Firewall - IP		Network Bytes Sent
Port Forwarding		Network Bytes Rcvd
LOGGING		Host Serial Bytes Sent
GPS		Host Serial Bytes Rcvd
Server 1		Network IP Packets Sent
Server 2		Network IP Packets Rcvd
Server 3		Host IP Packets Sent
Server 4		Host IP Packets Rcvd
Misc	+PRL	PRL Version
Local/Streaming	*PRLSTATUS	PRL Update Status
1X/EV-DO		Radio Module Internal Temperature
VPN		PinPoint Low Power Mode State
Split Tunnel		GPS Fix
VPN-1		Satellite Count
VPN-2		Latitude
VPN-3		Longitude
VPN-4		Heading
VPN-5		Speed
I/O		Engine Hours

[Map](#)

Figure 1-2: AceManager : Status

***BOARDTEMP?**

The temperature, in Celsius, of the internal hardware.

***HOSTMODE?**

The current host mode (AT, PPP, UDP, etc.). If the Raven X is not in AT mode, telnet into the modem to execute this command.

***NETCHAN?**

The current active 1x/CDMA channel number.

***NETERR?**

The EVDO or CDMA network frame error rate.

***NETIP?**

The current IP address of the modem reported by the internal module, generally obtained from your cellular Network. This is the address can contact the Raven X from the Internet.

Tip: Use **NETALLOWZEROIP* if you need to allow the display of an IP ending in a zero.

***NETOP?**

The current cellular carrier from the modem's firmware version, for example, your cellular Network.

***NETRSSI?**

The current RSSI (Receive Signal Strength Indicator) of the Raven X as a negative dBm value.

Tip: The same information is displayed with the command *S202?*.

***NETSERV?**

The type of service being used by the modem, for example Tech.

***NETSTATE?**

The current network state:

- **Connecting To Network:** The Raven X is in the process of trying to connect to the cellular network.

Note: If there is no current network IP address, 0.0.0.0 may be displayed.

- **Network Authentication Fail:** Authentication to the cellular network has failed. Verify settings to activate the Raven X.
- **Data Connection Failed:** The Raven X failed to connect, and it is now waiting a set time interval before it attempts to reconnect. Verify settings to activate the Raven X.
- **Network Negotiation Fail:** Network connection negotiation failed. This is usually temporary and often clears up during a subsequent attempt.
- **Network Ready:** The Raven X is connected to the 1x cellular network and ready to send data.
- **Network Dormant:** The Raven X is connected to the 1x cellular network, but the link is dormant. It will be woken up when data is sent or received.
- **No Service:** There is no cellular network detected.
- **Hardware Reset:** The internal module is being reset. This is a temporary state.

*PRLSTATUS?

- The status of the most recent PRL Update. 0 : None
- 1 : In Progress
- 2 : Success
- **Any other value** : Failure

*POWERIN?

The voltage input to the internal hardware.

+HWTEMP?

Displays the internal temperature of the radio module in degrees Centigrade.

+PRL?

Preferred Roaming List (PRL) version.

Information Displayed in AceManager without AT Commands Listed

- **Bytes and Packets Received and Sent:** Network traffic for the applicable port.
- **Number of System Resets:** Counter of the number of system resets over the life of the modem or since the configuration was reset.
- **Bad Password Count:** Counter of the number of bad password attempts.

- **IP Reject Count or Log:** Rejected IP Data.
- **Temperature of the Internal Hardware Module:** The temperature of the internal radio module.

AT Commands Requiring PassThru mode

These commands are not displayed in AceManager.

+GSN

ESN (Electronic Serial Number) of the internal hardware module.

Common

The groups under the heading Common encompass those commands that are common to most Sierra Wireless AirLink modems.

Misc (Miscellaneous)

The commands of the “Misc” group are a variety of commands that don’t directly fit in other categories.

Figure 1-3: AceManager : Misc

Enable Event Reporting = n

Enable or disable Event Reporting, by selecting either 1-Turn on ER or 0-Turn off ER. If you choose to enable, click on Write and then Refresh all to see all the ER fields.

- **n=0** : Disables
- **n=1** : Enables

+++

Note: +++ is not preceded by AT nor does it require a carriage return (enter). There must be an idle time (set by S50) on the serial port before and after this command.

AT Escape sequence. If the Raven X is in a data mode (any mode other than PassThru), this command causes the modem to re-enter AT command mode. The “+” is ASCII 0x2B.+++ is not available in AceManager.

Tip: DAE=1 disables the +++ command.

A/

Re-execute last command. A/ is not used in AceManager.

Note: A/ is not preceded by AT.

A

Manually answer an incoming connection. *A is not used in AceManager.*

D[method][d.d.d.d]/[ppppp] or D[method][@name]/ppppp]

Dial a connection to a remote IP and Port using method. Cannot be configured in AceManager.

- **method=P** : Establish a UDP connection
- **method=T** : Establish a TCP connection
- **method=N** : Establish a Telnet connection
- **d.d.d.d=** IP address to contact
- **ppppp=** port to contact

Examples:

ATD - Dial (establish) default connection.

ATDP192.168.13.31/2332 - Dial (establish) UDP session to 192.168.13.31, at port 2332.

To end the connection, issue the +++ escape sequence or drop the DTR line (if Ignore DTR S211=0 or &D2). The default connection is set in S53.

If the method, IP address, or port is omitted, the values from S53 are used. If a telnet connection is requested (N) and the port is not supplied, port 23 will be used instead of the value from S53.

If a domain name is specified, the '@' symbol can be used to explicitly indicate the start of the name. For example, if ATDPHONY is issued, this will be interpreted as dial a UDP connection to "HONY". To dial using the default method to host "PHONY", one would issue ATD@PHONY.

Several special dialing numbers exist to make it easy to establish a PPP or SLIP connection with the modem. ATD#19788 or ATDT#19788 will establish a PPP connection (see \APPP) and ATDT#7547 will establish a SLIP connection (see \ASLIP).

Tip: *The source port of the session is the Device Port (set by S110 or *DPORT).*

DS=n

Allows a PPP connection to be initiated on the host port.

- **n=2** : Initiates the PPP connection.

Cannot be configured in AceManager.

Hn

Hang-Up Command.

- **n=1** : Hang-up

With an AT telnet connection, this command will terminate the host data mode and return the Raven X to an AT mode. Cannot be accessed in AceManager.

O

Online (Remote): Causes the Raven X to go from Command State to data state. Cannot be configured in AceManager.

OPRG=n

Enables/disables over-the-air firmware upgrading of the Raven X. When Sierra Wireless releases a new version of ALEOS, you can upgrade your remote modems with OPRG enabled.

- **n=0** : Disables
- **n=1** : Enables

S53=[method][d.d.d.d][/ppppp]

Destination IP address, port, and method. These are used as defaults for the D (Dial) AT command.

- **method= P** : UDP
- **method=T** : TCP
- **method=N** : Telnet
- **d.d.d.d**=IP address or domain name
- **ppppp**=the port address

Examples:

ATS53=T192.168.100.23/12345

ATS53=foo.earlink.com

Telnet to the specified IP at port 12345.

ATS53=192.168.100.23/12345

Query the specified IP at port 12345.

ATS53=/12345

Query port 12345.

Z

Reset the Raven X. In AceManager, this command is performed with the Reset option on the toolbar.

Tip: **DATZ=1 will disable Z.*

&W

Writes all changed modem settings. If this command is not issued, any modified values will revert back to their previous values at modem reset. Cannot be configured in AceManager.

***DATE=[mm/dd/yyyy],[hh:mm:ss]**

Sets and queries the internal clock. Either the date and time can be specified, or simply one of the two can be specified in which case the unspecified value will remain unchanged. The date and time are always specified 24-hour notation.

- **mm/dd/yyyy=date** in month/day/year notation
- **hh:mm:ss=time** in 24-hour notation

***DPORT=n**

The modem's Device Port which the modem is listening on for inbound packets/data/polls. Can also be set with the command S110.

- **n=1-65535**

***HOSTPAP=n**

Use PAP to request the user login and password during PPP negotiation on the host connection.

- **n=0** : Disable PAP request (Default).
- **n=1** : Takes user login and password from Windows DUN connection and copies to *NETUID and *NETPW.

***NETALLOWZEROIP=n**

Allows the displayed IP address in *NETIP to end in zero (ex. 192.168.1.0).

- **n=0** : Do not allow.
- **n=1** : Allow.

***NETPW=pw**

The password that is used to login to the cellular network, when required.

- **pw=password** (30 characters maximum)

***NETPHONE?**

The modem's phone number, if applicable or obtainable.

***NETROAMPREF=n**

Allow configuration of the roaming preference.

- **n=0** : Restrict to home network only.
- **n=1-3** : Allow roaming to affiliated networks.

n=3***NETUID=uid**

The login that is used to login to the cellular network, when required.

- **uid=user id** (up to 64 bytes)

***STATICIP=d.d.d.d**

Set the static IP required to be received from the network. If the modem does not get this IP address from the network, it will reset the internal hardware and try again. The default is 0.0.0.0, which allows any IP address from the network.

- **d.d.d.d=IP address**

Example:

```
AT*STATICIP=192.168.1.23
```

Caution: *STATICIP does not set the IP address of the modem, it merely tells the modem which IP address to expect. If the expected IP address is not granted while registering on the cellular network, the modem will try to register on the network again until it receives that IP address. If your account is set up for a dynamic IP address and you set an address for *STATICIP, you may not be able to register on the network at all since there is no guarantee you will receive the same dynamic IP address again.*

***STATUSCHK=n**

Checks if an SMS message has been received by the modem.

- **n=1-255** : Seconds between checks.
- **n=0** : Never check.

Serial

This group includes commands specific to general use of the serial port.

GROUPS	MODEM DATA			PRINTABLE VIEW
----- INFO ----- STATUS ----- COMMON Misc Serial TCP UDP DNS Dynamic IP PPP/Ethernet PassThru SMTP Other Friends ----- LOGGING ----- 1X/EV-DO ----- TELEMETRY ----- ADDR LIST	AT	Name	Value	New Value
	S23	Configure Serial Port	115200,8N1	<input type="text"/>
	\Q	Serial Port Flow Control	2	<input type="text"/>
	S50	Data Forwarding Timeout	1	<input type="text"/>
	S51	Data Forwarding Character	0	<input type="text"/>
	E	DB9 Serial Echo	1	<input type="text"/>
	E	Telnet Echo	0	<input type="text"/>
	V	AT Verbose Mode	1	<input type="text"/>
	&D	DTR Mode	2	<input type="text"/>
	S211	DTR Mode	0	<input type="text"/>
	&S	Assert DSR	0	<input type="text"/>
	&C	Assert DCD	1	<input type="text"/>
	*CTSE	Enable CTS to Indicate Network Coverage	0	<input type="text"/>
	Q	Quiet Mode	0	<input type="text"/>
	X	Call Progress Result Mode	0	<input type="text"/>
	*NUMTOIP	Convert 12 digit Number to IP	0	<input type="text"/>

Figure 1-4: AceManager : Serial

En

Toggle AT command echo mode.

- **n=0** : Echo Off.
- **n=1** : Echo On.

Note: With more than one connection types (serial and Telnet) the echo command can be set differently on each interface.

Qn

The AT quiet-mode setting. If quiet mode is set, there will be no responses to AT commands except for data queried.

- **n=0** : Off (Default).
- **n=1** : Quiet-mode on.

S3=n

The standard end of line character used to indicate the end of an AT command. This character is also used as the carriage return character for framing responses and result codes in command state. Cannot be configured in AceManager.

S4=n

The standard line feed character sent by the modem to the host at the end of a response or return code in command state. Cannot be configured in AceManager.

S5=n

This register sets the character recognized as a backspace during command entry. Cannot be configured in AceManager.

S6=n

This register denotes the wait time, in seconds, before a blind dial (no dial tone detection). Cannot be configured in AceManager.

S8=n

Whenever a dial command contains the comma character, the contents of this register specify the pause time for each comma. Cannot be configured in AceManager.

S9=n

Specifies the time that the received carrier must be present for the modem to recognize it and turn on Data Carrier Detect (DCD) if applicable. The implementation is entirely at the IWF modem. Cannot be configured in AceManager.

S10=n

Specifies the amount of time that the carrier from the remote modem can be lost before the modem goes on-hook. This allows temporary disruptions to carrier without disconnecting. A setting of 255 causes the modem to disable Carrier Detect and presume carrier is always present. Cannot be configured in AceManager.

S23=[speed],[databits][parity][stop bits]

Serial line parameters. The settings take affect after reset.

- **speed**=300 | 1200 | 2400 | 4800 | 9600 | 19200 | 38400 | 57600 | 115200 | 230400
- **databits**=7 or 8 (Databits MUST be 8 data bits for PPP mode.)
- **parity**=O : Odd
- **parity**=E : Even
- **parity**=N : None
- **parity**=M : Mark
- **stopbits**=1 | 1.5 | 2

Example:

ATS23=19200,8N1

Sets modem to 19200, 8 databits, no parity, and 1 stop bit.

Tip: Can also be set using `&L=[speed],[databits][parity][stop bits]`

S50=n

Data forwarding idle time-out. If set to 0, a forwarding time-out of 10ms is used. Used in UDP or TCP PAD mode.

- **n=tenths of a second**

S51=n

PAD data forwarding character. ASCII code of character that will cause data to be forwarded. Used in UDP or TCP PAD mode.

- **n=0** : No forwarding character.

S211=n

For applications or situations where hardware control of the DTR signal is not possible, the modem can be configured to ignore DTR. When Ignore DTR is enabled, the modem operates as if the DTR signal is always asserted.

- **n=0** : Use hardware DTR. (default).
- **n=1** : Ignore DTR.
- **n=3** : Ignore DTR and assert DSR. This value is deprecated, and it is recommended to use `&S` to control the DSR instead. When this value is set to 3, `&S` will automatically be set to 0. See also: `&D` and `&S`.

Vn

Command Response Mode.

- **n=0** : Terse (numeric) command responses
- **n=1** : Verbose command responses (Default).

Xn

Extended Call Progress Result mode.

- **n=0** : Turn off extended result codes (Default).
- **n=1** : Turn on result codes. This adds the text 19200 to the CONNECT response.

&Cn

Set DCD mode.

- **n=0** : Always assert DCD.
- **n=1** : Assert DCD when in a data mode (UDP, TCP, PPP, or SLIP) (Default).
- **n=2** : Assert DCD when the modem has network coverage.

&Dn

Set DTR mode.

- **n=0** : Ignore DTR, same effect as HW DTR always asserted (same as S211=1).
- **n=2** : Use hardware DTR (same as S211=0).

&Sn

Set DSR mode.

- **n=0** : Always assert DSR (Default).
- **n=1** : Assert DSR when in a data mode (UDP, TCP, PPP, or SLIP) (Default).
- **n=2** : Assert DSR when the modem has network coverage.

Tip: S211 can also be used to request that DSR is always asserted. If S211 is set to 3 and &S is changed to a non-zero value, S211 will be changed to 1.

\APPP

Set modem operation to PPP mode. Cannot be configured in AceManager.

\ASLIP

Set modem operation to SLIP mode. DTR must be asserted (&D0 or S211=1). Cannot be configured in AceManager.

\Qn

Set or query the serial port flow control setting.

- **n=0** : No flow control is being used.
- **n=1** : RTS/CTS hardware flow control is being used.
- **n=4** : Transparent software flow control. Uses escaped XON and XOFF for flow control. XON and XOFF characters in data stream are escaped with the @ character (0x40). @ in data is sent as @@.

***CTSE=n**

Clear To Send Enable: This feature asserts CTS when there is a network connection.

- **n=0** : Disabled (Default).
- **n=1** : Enable assertion of CTS when there is network coverage.

RS232 voltage levels:

Positive = Network coverage.

Negative = No coverage.

Tip: Flow control (AT\Q) will override this indication, so if you want to use CTS to indicate network coverage, flow control has to be off (AT\Q0).

*NUMTOIP=*n*

Convert 12 digit number to IP.

- **n=0** : Use as name.
- **n=1** : Use as IP address.

*PPNOCARRIER=*n*

Provides a “No Carrier” message to a device connected to the serial port using PPP or CHAP when the cellular connection becomes unavailable.

- **n=0** : Disabled (Default).
- **n=1** : Enabled.

TCP

This group includes commands specific to TCP serial communications.

GROUPS		MODEM DATA		PRINTABLE VIEW
----- INFO ----- STATUS ----- COMMON Misc Serial TCP UDP DNS Dynamic IP PPP/Ethernet PassThru SMTP Other Friends	AT	Name	Value	New Value
	S0	TCP Auto Answer	0	<input type="text"/>
	S7	TCP Connect Timeout	30	<input type="text"/>
	TCPT	TCP Idle Timeout	0	<input type="text"/>
	TCPS	TCP Idle Timeout Secs	0	<input type="text"/>
	S221	TCP Connect Response Delay	0	<input type="text"/>
	S60	Telnet Echo Mode	1	<input type="text"/>
	*ENQ	Enable ENQ on TCP Connect	0	<input type="text"/>

Figure 1-5: AceManager : TCP

S0=*n*

This register determines how the Raven X responds to an incoming TCP connection request. The Raven X remains in AT Command mode until a connection request is received. DTR must be asserted (S211=1 or &D0) and the Raven X must be set for a successful TCP connection. The Raven X will send a “RING” string to the host. A “CONNECT” sent to the host indicates acknowledgement of the connection request and the TCP session is established.

- **n=0** : Off (Default).
- **n=1** : On.
- **n=2** : Use Telnet server mode on TCP connections.

- **n=3** : With a Telnet connection, overrides the client's default echo, allowing the server on the host port to perform the echo. CRLF sequences from the telnet client will also be edited to simply pass CRs to the server on the host port.

S7=n

Specifies the number of seconds to wait for a TCP connection to be established when dialing out.

S60=n

Telnet Client Echo Mode.

- **n=0** : No Echo
- **n=1** : Local Echo (Default)
- **n=2** : Remote Echo

S221=n

Connect Delay: Number of seconds to delay the "CONNECT" response upon establishing a TCP connection. *OR* Number of tenths of seconds to delay before outputting ENQ on the serial port after the CONNECT when the ENQ feature is enabled

TCPS=n

TCP connection time-out (TCPS) units. Specifies a time interval upon which if there is no in or outbound traffic through a TCP connection, the connection will be terminated.

- **n=0** : minutes
- **n=1** : seconds

TCPT=n

Interval to terminate a TCP connection when no in or outbound traffic. This value affects only the TCP connection in TCP PAD mode.

Caution: *TCPT should never be 0 when using the TCP mode. A broken TCP session can result in the modem being left with a TCP half-open connection that can only be terminated with a reset.*

***ENQ=n**

Outputs an ENQ [0x05] after the TCP CONNECT delayed by the Delay Connect Response time (S221).

- **n=0** : Disabled (Default).
- **n=1** : Enable ENQ on CONNECT.

UDP

This group includes commands specific to UDP serial communications.

GROUPS	MODEM DATA	PRINTABLE VIEW
INFO	AT	Name
STATUS	MD	Startup Mode Default DB9 Serial
COMMON	S82	UDP Auto Answer
Misc	S83	UDP Idle Timeout
Serial	HOR	UDP Auto Answer Response
TCP	*UDPLAST	UDP Connect Last
UDP	AIP	Allow Any IP
DNS	*UALL	Allow All UDP
Dynamic IP	*DU	Dial UDP Always
PPP/Ethernet	*USD	UDP Serial Delay
PassThru		
SMTP		
Other		
Friends		
LOGGING		

Figure 1-6: AceManager : UDP

AIP=*n*

Allow IP address.

- **n=0** : Allow only the IP address specified in S53 to connect when UDP auto answer is enabled (S82=2).
- **n=1** : Allow any incoming IP address to connect when UDP auto answer is enabled (S82=2).

Note: Always subject to any Friends filters that may be defined.

HOR=*n*

Half-Open Response - In UDP auto answer (half-open) mode.

- **n=0** : No response codes when UDP session is initiated.
- **n=1** : RING CONNECT response codes sent out serial link before the data from the first UDP packet.

Note: Quiet Mode must be Off.

MD*hh*

Default power-up mode for the serial port: When the Raven X modem is power-cycled, the serial port enters the mode specified by this command after 5 seconds. On startup, typing ATMD0 within 5 seconds changes the mode to normal (AT command) mode. See also S53 to set the port for UDP or TCP.

S82=*n*

Enables UDP auto answer (half-open) mode.

- **n=0** : Normal mode
- **n=2** : Enable UDP auto answer mode.

S83=n

Set or query UDP auto answer idle time-out. If no data is sent or received before the time-out occurs, the current UDP session will be terminated. While a session is active, packets from other IP addresses will be discarded (unless *UALL is set).

- **n=0** : No idle time-out (Default).
- **n=1 - 255** : Time-out in seconds.

***DU=n**

The dial command always uses UDP, even when using ATDT.

- **n=0** : Dial using the means specified (default).
- **n=1** : Dial UDP always, even when using ATDT.

Note: When this parameter is set you cannot establish a TCP PAD connection.

***UALL=n**

Accepts UDP packets from any IP address when a UDP session is active. If there is no UDP session active, an incoming UDP packet will be treated according to the UDP auto answer and AIP settings.

- **n=0** : No effect (Default).
- **n=1** : Accept UDP data from all IP addresses when in a UDP session.

***UDPLAST=n**

If enabled, sets S53 to the last accepted IP address through UDP auto answer. This can be used in conjunction with MD3 so that when there is no UDP session, new ethernet host data will cause a connection to be restored to the last IP accepted through UDP auto answer.

- **n=0** : Does not change S53 setting. (Default).
- **n=1** : Set S53 to the last accepted IP.

***USD=n**

Waits the specified delay before sending the first UDP packet and the subsequent UDP packets out to the port Ethernet.

- **n=0** : No UDP packet delay (Default).
- **n=1 - 255** : Delay in 100ms units, from 100 ms to 25.5 sec.

*Note: *UDPLAST does not change the S53 setting in NVRAM. If the modem is reset, the original S53 setting will be restored from NVRAM.*

DNS

This group includes commands specific to the modem being able to use domain names instead of IP addresses for other configuration options.

GROUPS	MODEM DATA				PRINTABLE VIEW
INFO	AT	Name	Value	New Value	
STATUS	*DNS1	Modem DNS Server 1	68.28.58.11		
COMMON	*DNS2	Modem DNS Server 2	68.28.50.11		
Misc	*DNSUSER	Use Alternate DNS	0.0.0.0		
Serial	*DNSUPDATE	DNS Updates	0		
TCP					
UDP					
DNS					
Dynamic IP					

Figure 1-7: AceManager : DNS

*DNSn=d.d.d.d

Queries the DNS addresses. Your cellular carrier provides the DNS addresses while your modem is registering on their network.

- **n=1 or 2** : First and second DNS address.
- **d.d.d.d=IP address** of domain server.

*DNSUPDATE=n

Indicates whether the modem should send DNS updates to the DNS server specified by *DNSUSER. These updates are as per RFC2136. They are not secure and are recommended only for a private network. In a public network, the IP Logger services should be used instead.

- **n=0** : DNS updates disabled (Default).
- **n=1** : DNS updates enabled.

*DNSUSER=d.d.d.d

Sets a user-provided DNS to query first when performing name resolutions in the modem.

- **d.d.d.d=IP address** of domain server

Dynamic IP

This group includes commands specific to dynamic DNS. Dynamic DNS allows the Raven X to use a dynamic IP address account, with an IP address that can change each time you connect, and still allow you to use a fully qualified domain name to contact the Raven X using IP Manager running on a server with a dynamic DNS updater.

GROUPS	MODEM DATA				PRINTABLE VIEW
----- INFO ----- STATUS ----- COMMON Misc Serial TCP UDP DNS Dynamic IP PPP/Ethernet PassThru SMTP Other Friends ----- LOGGING	AT	Name	Value	New Value	
	*MODEMNAME	Modem Name	603eea33		
	*DOMAIN	Domain			
	*IPMANAGER1	IP Manager Server 1 (IP Adrs)			
	*IPMGRUPDATE1	IPMServer1 Update (Minutes)	0		
	*IPMGRKEY1	IPMServer1 Key	*****		
	*IPMANAGER2	IP Manager Server 2 (IP Adrs)			
	*IPMGRUPDATE2	IPMServer2 Update (Minutes)	0		
	*IPMGRKEY2	IPMServer2 Key	*****		

Figure 1-8: AceManager : Dynamic IP

***DOMAIN=name**

Domain (or domain zone) of which the Raven X is a part. This value is used during name resolutions if a fully qualified name is not provided and also for DNS updates. This value can be up to 20 characters long.

- **name=domain name** (i.e. eairlink.com)

If *DOMAIN=eairlink.com, then when ATDT@remote1 is entered, the fully qualified name remote1.eairlink.com will be used to perform a DNS query to resolve the name to an IP address.

Tip: Only letters, numbers, hyphens, and periods can be used in a domain name.

***IPMANAGERn=[name][IP address]**

Sets a domain name or IP address to send IP change notifications to. Up to two independent IP Manager servers can be set, using either AT*IPMANAGER1 or AT*IPMANAGER2. Updates to a server can be disabled by setting that entry to nothing (for example, "AT*IPMANAGER1=").

- **n=1** : First IP Manager server.
- **n=2** : Second IP Manager server.
- **name=domain name**

***IPMGRKEYn=key**

Sets the 128-bit key to use to authenticate the IP update notifications. If the key's value is all zeros, a default key will be used. If all the bytes in the key are set to FF, then no key will be used (i.e. the IP change notifications will not be authenticated). AT*IPMGRKEY1 is used to set the key to use with AT*IPMANAGER1, while AT*IPMGRKEY2 is used to the key with AT*IPMANAGER2.

- **n=1** : First IP Manager server.

- **n=2** : Second IP Manager server.
- **key=128-bit key** in hexadecimal [32 hex characters]

***IPMGRUPDATE $n=m$**

Sets the number of minutes to periodically send an IP update notification to the corresponding server. This will occur even if the IP address of the Raven X doesn't change.

*IPMGRUPDATE1 is used to set the refresh rate to *IPMANAGER1, while *IPMGRUPDATE2 is used with *IPMANAGER2. If the value is set to 0, then periodic updates will not be issued (i.e. IP change notifications will only be sent when the IP actually changes).

- **n=1** : First IP Manager server.
- **n=2** : Second IP Manager server.
- **m=0, 5-255** : Number of minutes to send an update.

***MODEMNAME=name**

Name of the Raven X (up to 20 characters long) to use when performing IP address change notifications to IP Manager. The value in *DOMAIN provides the domain zone to add to this name.

- **name=modem name** (for example, mymodem)

Example: if *MODEMNAME=mymodem and *DOMAIN=eairlink.com, then the modem's fully qualified domain name is mymodem.eairlink.com.

Automatically Generated Names:

#I3 - The ESN/IMEI will be used as the name.

#CCID - The CCID will be used as the name.

#NETPHONE - The phone number will be used as the name.

Tip: Each modem using IP Manager needs a unique name. Two modems cannot be called "mymodem". One could be "mymodem1" with the other as "mymodem".

PPP/Ethernet

This group includes commands specific to PPP (serial) or Ethernet connections between the Raven X and a connected device.

GROUPS	MODEM DATA			PRINTABLE VIEW
----- INFO ----- STATUS ----- COMMON Misc USB DNS Dynamic IP PPP/Ethernet SMTP Other Firewall Port Forwarding ----- LOGGING ----- REPORT Server 1 ----- EDGE/HSPA ----- IPSEC ----- GRE	AT	Name	Value	New Value
	*HOSTPRIVMODE	Use Private IP	0	<input type="text"/>
	*HOSTPRIVIP	Host Private IP	192.168.13.100	<input type="text"/>
		DHCP network mask	255.255.255.0	<input type="text"/>
	*HOSTPEERIP	Modem Local IP	192.168.13.31	<input type="text"/>
	*HOSTNETMASK	Ethernet Host network mask	0.0.0.0	<input type="text"/>
	*HOSTAUTH	Host Authentication Mode	0	<input type="text"/>
	*HOSTUID	Host User ID	ZCFzUUeLycb2ug01L+3Ikwy==	<input type="text"/>
	*HOSTPW	Host Password	ZCFzUUeLycb2ug01L+3Ikwy==	<input type="text"/>
	*DHCPSEVER	DHCP Server Mode	1	<input type="text"/>
		Host Network 2	0.0.0.0	<input type="text"/>
		Host network mask 2	255.255.255.255	<input type="text"/>
		Host Network 3	0.0.0.0	<input type="text"/>
		Host network mask 3	255.255.255.255	<input type="text"/>
		Default Interface	0	<input type="text"/>
		Default IP	0.0.0.0	<input type="text"/>

Figure 1-9: AceManager : PPP/Ethernet

DHCPSEVER=*n

- Act as a DHCP server for any Ethernet device connecting to the Raven X. DHCP (Dynamic Host Configuration Protocol) allows one device, the DHCP server, to provide dynamic IP addresses to any other device which requests them.
- **n=0** : Disabled (cannot be configured in AceManager).
- **n=1** : Enabled. The modem will act as the primary DHCP server for the network.
- **n=2** : Enabled if no other DHCP server is detected (default). If another DHCP server is detected on the network, the Raven X will not send out replies to DHCP requests.

Tip: For PPPoE, set *DHCPSEVER=0.

HOSTAUTH=*n

Host Authentication Mode: Use PAP or CHAP to request the user login and password during PPP or CHAP negotiation on the host connection. The username and password set in *HOSTUID and *HOSTPW will be used.

- **n=0** : Disable PAP or CHAP request (Default).
- **n=1** : PAP and CHAP.
- **n=2** : CHAP

Tip: For PPPoE, set *HOSTAUTH=1 or *HOSTAUTH=2.

HOSTNETMASK=*n.n.n.n

Subnet mask for the host interface. Allows communication with a subnet behind the host interface.

- **n.n.n.n = subnet mask**, example 255.255.255.0.

HOSTPEERIP=*d.d.d.d

Set or query the IP address that can be used to directly contact the Raven X once a cellular connection is established. If this value is not specified, 192.168.13.31 will be used.

- **d.d.d.d=local or peer IP address** of the modem.

Note: This is not normally used nor needed by user applications.

HOSTPRIVIP=*d.d.d.d

Set or query the private IP address that is to be negotiated by the 1x connection if *HOSTPRIVMODE =1.

- **d.d.d.d=IP Address**

HOSTPRIVMODE=*n

Set or query whether a private or public (network) IP is to be used when the Host initiates a 1x connection to the modem.

- **n=0** : Public (network) IP Mode: When the Host initiates a PPP connection, the host will be given the network IP address that was obtained from the cellular carrier while registering on the network. If the network issues a new IP address, the cellular connection will be closed (since the IP address has changed) and has to be re-initiated. (default).
- **n=1** : Private IP Mode: When the Host initiates a 1x connection, the host will be given the IP address specified in *HOSTPRIVIP. The modem will then perform 1 to 1 NAT-like address translation, which shields the Host from network IP changes.

***HOSTPW=string**

Host Password for PAP, CHAP, or PPPoE.

- **string=password**

***HOSTUID=string**

Host User ID for PAP, CHAP, or PPPoE.

- **string=user id** (up to 64 bytes)

PassThru

PassThru Mode is used to communicate directly to the Raven X internal hardware.

Caution: While the modem is in PassThru mode, ALEOS is disabled. If you need to connect to the Raven X while it is in PassThru mode, you will need to do so with a terminal application. Not all commands are available while the modem is in PassThru mode.

GROUPS	MODEM DATA				PRINTABLE VIEW
INFO STATUS COMMON Misc Serial TCP UDP DNS Dynamic IP PPP/Ethernet PassThru SMTP	AT	Name	Value	New Value	
	*PTINIT	Passthrough Init String			
	*PTREFRESH	Passthrough Init Refresh (Minutes)	0		
	*RESETPERIOD	Modem Reset Period (Hours)	0		
	*CSX1	Passthrough Echo	0		

Figure 1-10: AceManager : PassThru

\APASSTHRU

Sets the modem operation to pass through mode. This mode will pass any characters received on the port Ethernet directly to the internal hardware module and output any characters from the internal hardware module out the port Ethernet. This allows direct access/configuration of the hardware module. Once this mode is entered, the unit must be physically reset to return to normal operation. This command is not available in AceManager.

Note: It may take up to 30 seconds for the hardware module to respond after CONNECT is output.

***CSX1=n**

PassThru Echo : Echo data to the host.

Note: This mode is not available through the remote AT telnet server. You will need to connect to the Raven X with it connected directly to your computer.

- **n=0** : Data will be passed to the host.
- **n=1** : PASSTHRU mode will echo all host received data and will not pass the data to the modem while the modem is not asserting DCD.

*Note: If the modem is asserting DCD, data will be passed from the host to the modem as it normally is when *CSX1=0.*

***PTINIT=string**

Any AT Command string to be passed to the OEM module before entering PASSTHRU mode, e.g. AT&S1V1, etc.

- **string=AT command(s)**

***PTREFRESH=n**

Number of minutes of inactivity in PASSTHRU mode to resend the *PTINIT string to the hardware module.

- **n=0** : Disabled
- **n=1-255** minutes

***RESETPERIOD=n**

In PASSTHRU mode, modem will be reset after this period if no data has been sent or received. Value is in hours.

- **n=0** : Disabled
- **n=1-255** hours

SMTP

SMTP (Simple Mail Transfer Protocol) is the de facto standard for email transmission across the Internet. The Raven X can send messages using SMTP if it has been configured to use a mail server.

Note: You cannot send an Email with your Raven X unless the Email server you have configured allows your Raven X as a relay host. Talk to your network administrator to ensure you can send email through the email server using your Raven X.

SMS (Short Message Service) is another way to send messages via the cellular network. Most SMS commands require the modem to be in PassThru mode.

Note: SMS may not be supported by your account with your cellular carrier.

GROUPS	MODEM DATA			PRINTABLE VIEW
----- INFO ----- STATUS ----- COMMON Misc Serial TCP UDP DNS Dynamic IP PPP/Ethernet PassThru SMTP Other	AT	Name	Value	New Value
	*SMTPADDR	SMTP Server IP Address	<input type="text"/>	<input type="text"/>
	*SMTPFROM	From email address	<input type="text"/>	<input type="text"/>
	*SMTPUSER	User Name (optional)	<input type="text"/>	<input type="text"/>
	*SMTPPW	Password (optional)	*****	<input type="text"/>
	*SMTPSUBJ	SMTP Message Subject	<input type="text"/>	<input type="text"/>

Figure 1-11: AceManager : SMTP

NETSMS2EMAIL=*n

Specify the SMS/E-mail server number. This maybe necessary to send an SMS message to an email address. Cannot be used with AceManager.

- **n=SMS/E-mail server number**

***SMTPADDR=[*d.d.d.d*][*name*]**

Specify the IP address or Fully Qualified Domain Name (FQDN) of the SMTP server to use.

- **d.d.d.d=IP Address**
- **name=domain name** (maximum: 40 characters).

SMTPFROM=*email

Sets the email address from which the SMTP message is being sent.

- **email=email address** (maximum: 30 characters).

SMTPPW=*pw

Sets the password to use when authenticating the email account (*SMTPFROM) with the server (*SMTPADDR).

- **pw= password**

Note: Not required to use SMTP settings but may be required by your cellular carrier.

***SMTPSEND=*email*[*body*]**

Sends an email to the address specified, followed by the body of the email message. The email message is terminated and sent by entering a . or Ctrl-Z on an empty line. Cannot be configured with AceManager.

- **email=email address**
- **body=message body**

***SMTPSTATUS?**

Returns the status of the last issued SMTP message (*SMTPSEND). If no status is available 0 is returned. Once read, the status is cleared out. The status codes returned come from the SMTP server to which that the modem sent the request. Unless the receiving server is not standard, they follow the RFC for SMTP. Cannot be used with AceManager.

Example:

354 = send in progress

250 = sent ok

***SMTPSUBJ=subject**

Allows configuration of the default Subject to use if one isn't specified in the message by providing a "Subject: xxx" line as the initial message line.

- **subject=message subject**

***SMTPUSER=user**

The email account username to authenticate with the SMTP server (*SMTPADDR) for sending email.

- **user=username** (maximum: 40 characters).

Note: Not required to use SMTP settings but may be required by your cellular carrier.

Other

GROUPS	MODEM DATA	PRINTABLE VIEW
INFO	AT	Name Value New Value
STATUS	*IPING	Keepalive Ping Time 0
COMMON	*IPINGADDR	Keepalive Ping Address
Misc	*MSCIUPDADDR	Status Update Address /0
USB	*MSCIUPDPERIOD	Status Update Period (Seconds) 0
Serial	*TPORT	AT Telnet Port 2332
TCP	*TELNETTIMEOUT	AT Telnet Port Timeout (Minutes) 2
UDP	DAE	Disable AT Escape 0
DNS	*DATZ	Disable ATZ Reset 0
Dynamic IP	*SNTP	Enable time update 0
PPP/Ethernet	*SNTPADDR	SNTP Server Address
PassThru	*NETWDOG	Network Connection Wait 20
SMTP	*SNMPPORT	SNMP Port 0
Other	*SNMPSECLVL	SNMP Security Level 0
Low Power	*SNMPTRAPDEST	SNMP Trap Destination IP /0
Friends	*SNMPCOMMUNITY	SNMP Community String public
LOGGING		

Figure 1-12: AceManager : Other

DAE=*n*

AT Escape Sequence detection.

- **n=0** : Enable
- **n=1** : Disable

DATZ=*n

Enables or disables reset on ATZ.

- **n=0** : Normal Reset (Default).
- **n=1** : Disable Reset on ATZ.

IPPING=*n

Set the period to ping (if no valid packets have been received) a specified address (*IPPINGADDR) to keep the modem alive (online).

- **n=0** : Disable pinging (default)
- **n=15-255** minutes

*Note: 15 minutes is the minimum interval which can be set for Keepalive. If you set *IPPING for a value between 0 and 15, the minimum value of 15 will be set.*

***IPPINGADDR=[*d.d.d.d*][*name*]**

Set the IP address or valid internet domain name for the Raven X to ping to keep itself alive (online). *IPPING must be set to a value other than 0 to enable pinging.

- **d.d.d.d=IP address**
- **name=domain name**

***MSCIUPDADDR=*name*[/*port*]**

Modem Status Update Address - where Name/Port is the domain name and port of the machine where the modem status updates will be sent. The status parameters of the Raven X are sent in an XML format.

- **name=domain name**
- **port=port**

MSCIUPDPERIOD=*n

Modem Status Update Period - where n defines the update period in seconds.

- **n=0** : Disabled.
- **n=1-255** seconds

NETWDOG=*n

Network connection watchdog: The number of minutes to wait for a network connection. If no connection is established within the set number of minutes, the Raven X modem resets.

- **n=0** : Disabled.
- **n=minutes** : Default = 120 min.

***RESETCFG**

Wipe the non-volatile data in the modem. Cannot be used with AceManager.

Caution: *You may need to reactivate your modem if you erase the non-volatile data.*

SNMPCOMMUNITY=*string

The SNMP Community String acts like a password to limit access to the modem's SNMP data.

- **string=string** of no more than 20 characters (default = public).

SNMPPORT=*n

This controls which port the SNMP Agent listens on.

- **n=0** : SNMP is disabled.
- **n=1-65535**

SNMPSECLVL=*n

Selects the security level requirements for SNMP communications.

- **n=0** : No security required. SNMPv2c and SNMPv3 communications are allowed.
- **n=1** : Authentication equivalent to "authNoPriv" setting in SNMPv3. SNMPv3 is required to do authentication, SNMPv2c transmissions will be silently discarded.
- **n=2** : Authentication and encryption, equivalent to "authPriv" setting in SNMPv3. SNMPv3 is required to do authentication and encryption, SNMPv2c and SNMPv3 authNoPriv transmissions will be silently discarded. Messages are both authenticated and encrypted to prevent a hacker from viewing its contents.

***SNMPTRAPDEST=host/[port]**

Controls destination for SNMP Trap messages. If port is 0 or host is empty, traps are disabled. Traps are sent out according to the SNMP security level (i.e. if the security level is 2, traps will be authenticated and encrypted). Currently, the only trap that can be generated is linkup.

- **host=IP address**
- **port=TCP port**

***SNTP=n**

Enables daily SNTP update of the system time.

- **n=0** : Off
- **n=1** : On

***SNTPADDR=[d.d.d.d][name]**

SNTP Server IP address, or fully-qualified domain name, to use if *SNTP=1. If blank, time.nist.gov is used.

- **d.d.d.d=IP address**
- **name=domain name**

***TELNETTIMEOUT=n**

Telnet port inactivity time out. By default, this value is set to close the AT telnet connection if no data is received for 2 minutes.

- **n=minutes**

***TPORT=n**

Sets or queries the port used for the AT Telnet server. If 0 is specified, the AT Telnet server will be disabled. The default value is 2332.

- **n=0** : Disabled.
- **n=1-65535**

Tip: Many networks have the ports below 1024 blocked. It is recommended to use a higher numbered port.

***TQUIT**

Disconnects the telnet session. Not available in AceManager..

Firewall

Firewall Mode can limit access to the Raven X from the cellular network and the Internet. Basic Firewall functions are available via AceManager.

Caution: *If you are using Firewall mode you will not be able to use AceManager remotely or Telnet to the modem unless you are contacting the modem from one of the configured IP addresses.*

Note: *Firewall mode will only prevent the Raven X modem from receiving data from those IP addresses not on the Friends List. It cannot prevent data, such as pings, from traversing the network to the modem which may billable traffic even though the modem does not receive the data.*

GROUPS	MODEM DATA			PRINTABLE VIEW
INFO	AT	Name	Value	New Value
STATUS	FM	Firewall Mode	0	<input type="text"/>
COMMON	F0	Friends List IP0	0.0.0.0	<input type="text"/>
Misc	F1	Friends List IP1	0.0.0.0	<input type="text"/>
USB	F2	Friends List IP2	0.0.0.0	<input type="text"/>
Serial	F3	Friends List IP3	0.0.0.0	<input type="text"/>
TCP	F4	Friends List IP4	0.0.0.0	<input type="text"/>
UDP	F5	Friends List IP5	0.0.0.0	<input type="text"/>
DNS	F6	Friends List IP6	0.0.0.0	<input type="text"/>
Dynamic IP	F7	Friends List IP7	0.0.0.0	<input type="text"/>
PPP/Ethernet	F8	Friends List IP8	0.0.0.0	<input type="text"/>
PassThru	F9	Friends List IP9	0.0.0.0	<input type="text"/>
SMTP		Range 1 Start	0.0.0.0	<input type="text"/>
Other		Range 1 End	0.0.0.0	<input type="text"/>
Low Power		Range 2 Start	0.0.0.0	<input type="text"/>
Firewall		Range 2 End	0.0.0.0	<input type="text"/>
Port Forwarding		Range 3 Start	0.0.0.0	<input type="text"/>
LOGGING		Range 3 End	0.0.0.0	<input type="text"/>
PINPOINT		Port Filtering Mode	0	<input type="text"/>
Server 1		Firewall Port 1	0	<input type="text"/>
Misc		Firewall Port 2	0	<input type="text"/>
Serial Port		Firewall Port 3	0	<input type="text"/>
EDGE/HSPA		Firewall Port 4	0	<input type="text"/>
IPSEC		Firewall Port 5	0	<input type="text"/>
GRE				
I/O				

Figure 1-13: AceManager : Firewall

FM=*n*

Firewall mode - Only allow specified IPs to access the Raven X modem.

- **n=0** : Disable Firewall mode

- **n=1** : Enable Firewall mode - Only packets from friends will be accepted, packets from other IP addresses are ignored.

Fn=[d.d.d.d]

Friends List IP address.

- **n=0-9** Friends list index
- **d.d.d.d = IP address**

Using 255 in the IP address will allow any number.

Example: 166.129.2.255 allows access by all IPs in the range 166.129.2.0-166.129.2.255.

Tip: ATF? will return a list of all the current Fn settings.

Firewall Range

You can define three different ranges of start and end. All IP addresses between the start of the range and the end of the range would be allowed.

For example, if Range 1 Start was set to 192.168.13.50 and the Range 1 End was set to 192.68.13.95, then the IP address of 192.168.13.100 would not be allowed since it would be outside of the range; but 192.168.13. 75 would be allowed.

Port Filtering Mode allows only the defined user ports and can block other ports. Port filtering can be configured to block connections on the specified ports (Blocked Ports), allow connections only on the specified ports (Allowed Ports), or not block or allow based on ports (Not Used). Each specified port will be allowed or blocked depending on the Port Filtering Mode.

Note: The Port Filtering is in addition to any port blocking or allowing done by the cellular provider. If the port is blocked by the cellular carrier, setting it for allowed here will have no effect since the connection would be blocked before even reaching the Raven X.

Port Forwarding

Any data coming in on the defined Public Port will be passed to the corresponding Private Port connected to the physical interface specified and using the host IP address..

Note: This feature can be used only in private mode.

GROUPS	MODEM DATA			PRINTABLE VIEW
INFO	AT Name	Value	New Value	

STATUS	Number of PF Entries	5		
COMMON	Public Port 1	8090		
Misc	Host I/F 1	4		
USB	Host IP 1	192.168.13.101		
Serial	Private Port 1	80		
TCP	Public Port 2	0		
UDP	Host I/F 2	0		
DNS	Host IP 2	0.0.0.0		
Dynamic IP	Private Port 2	0		
PPP/Ethernet	Public Port 3	0		
PassThru	Host I/F 3	0		
SMTP	Host IP 3	0.0.0.0		
Other	Private Port 3	0		
Low Power	Public Port 4	0		
Firewall	Host I/F 4	0		
Port Forwarding	Host IP 4	0.0.0.0		
LOGGING	Private Port 4	0		
PINPOINT	Public Port 5	0		
Server 1	Host I/F 5	0		
Misc	Host IP 5	0.0.0.0		
Serial Port	Private Port 5	0		
EDGE/HSPA				
IPSEC				
GRE				
I/O				

Figure 1-14: AceManager: Port Forwarding

Note: There are no AT commands for Port Forwarding parameters, they need to be configured using AceManager.

Number of PF Entries = n

Set value to number of used Port forward rules for performance gain. Each forwarding entry has four parameters.

- **n** = 1-5

Public Port = n

Port number of the Modem/Gateway.

- **n** = 8090

Host/IF = n

Physical connection type to the modem. (USB, Ethernet).

-

Host IP = d.d.d.d

IP address of the connected device/computer.

- **d.d.d.d** = IP address

Private Port = n

Port number on the connected device.

- **n** = 80

Logging

This group includes commands specific to the internal log.

Caution: *Logging is intended for diagnostic purposes only. Extensive use of logging features can cause degraded modem performance.*

GROUPS	MODEM DATA				PRINTABLE VIEW
----- INFO ----- STATUS ----- COMMON Misc Serial TCP UDP DNS Dynamic IP PPP/Ethernet PassThru SMTP Other Friends ----- LOGGING	AT	Name	Value	New Value	
	*DBGPPPLVL	PPP Logging Detail	1	<input type="text"/>	
	*DBGIPLVL	IP Logging Detail	0	<input type="text"/>	
	*DBGCOMMLVL	COM Port Logging Detail	0	<input type="text"/>	
	*DBGETHLVL	Ethernet Logging Detail	0	<input type="text"/>	
	*DBGDHCPLVL	DHCP Logging Detail	0	<input type="text"/>	

Figure 1-15: AceManager : Logging

DBGCOMMLVL=*n

Set the logging level for the host or module COM port.

- **n=0** : No logging
- **n=1** : Host COM Port
- **n=2** : Module COM Port

DBGDHCPLVL=*n

Enable or disable internal DHCP logging.

- **n=0** : No logging
- **n=1** : Log DHCP events.

DBGETHLVL=*n

Sets the logging level for the Ethernet port.

- **n=0** : No logging
- **n=1** : Log errors: invalid/corrupt packets, etc.
- **n=2** : Log the header of all received packets. Note that this can quickly exhaust available space for the event log.

DBGIPLVL=*n

Sets the logging level for the IP subsystem.

- **n=0** : No logging
- **n=1** : Log errors (i.e. invalid/corrupt packets, etc.).

- **n=2** : Log the header of all received packets. Note that this can quickly exhaust available space for the event log.
- **n=3** : Log the header of all received and sent packets. Note that this can quickly exhaust available space for the event log.

***DBGPPPLVL=n**

Sets the logging level for the PPP stack.

- **n=0** : No logging
- **n=1** : Log client events (default)
- **n=2** : Log server events
- **n=3** : Log client and Server events

Modbus, commonly used with telemetry devices, allows a connection via serial port to the modem. Telemetry and Addr List commands are only used when the modem is in one of the Modbus start-up modes. Further, Telemetry and the Addr List are available with all Raven line modems which have a serial port, such as the Raven X and the Raven XT. The Raven line modem User Guides explain in more detail how to use these telemetry related commands.

GROUPS	MODEM DATA				PRINTABLE VIEW
INFO	AT	Name	Value	New Value	
STATUS	RKEY	Radio Keying Enabled	0		
COMMON	MVTYP	Modbus Variable Type	0		
Misc	MVOFF	Modbus Variable Offset	0		
Serial	MVLEN	Modbus Variable Length	0		
TCP	MVMSK	Modbus VMask (hex)	0x0		
UDP	IPL	IP List Dial	0		
DNS					
Dynamic IP					
PPP/Ethernet					
PassThru					
SMTP					
Other					
Firewall					
Port Forwarding					
LOGGING					
REPORT					
Server 1					
1X/EV-DO					
TELEMETRY					
ADDR LIST					
IPSEC					
GRE					

Figure 1-16: AceManager : Telemetry

IPL=*n*

IP List Dial allows access the Modbus IP list using the first two digits of the dial string.

Example: ATDT1234567 would go to ID “12” on the Modbus list and use the associated IP as the destination.

- **n=0** : Disabled
- **n=1** : Enabled

MVLEN=*n*

Modbus Variant ID Length: Length of the RTU ID in a modbus-variant protocol, in bytes.

- **n=1** : This parameter is used to define the length of the RTU ID in Modbus-like protocol data packets.
- **n=2** : This parameter is used when the when the MD is set to hex 63.

MVMSK=*hh*

Modbus Variant ID Mask: Byte hex mask to use when extracting the ID. Specify which bits in the ID field to use. This parameter is used when the when the Mode Default (MD) is set to hex 63.

- **hh=hex value**
 - **00** - no mask, all 8 bits (default)
 - **0F** - only the low order 4 bits

MVOFF=*n*

Modbus (variable mode) Offset: Indicates the offset in the data of where the Modbus ID starts.

- **n=0 - 255**

MVOPT=*n*

Modbus Variant Option: Sets various behavioral options when dealing with a Modbus-variant protocol. This parameter is used when the when MD is set to hex 63. *Cannot be configured in AceManager.*

- **n=0** : No special action (Default).
- **n=1** : Skip leading zeroes in Modbus packets.

MVTYP=*n*

Modbus Variant Type: The data-type of the RTU ID in a modbus-variant protocol. This parameter is used to define the data-type of the RTU ID in Modbus-like protocol data packets. This parameter is used when MD is set to 63.

- **n=0** : Binary (Default)

- **n=1** : ASCII Hex
- **n=2** : ASCII Decimal
- **n=3** : Binary Little Endian

RKEY=n

Enable/disable MDS Radio transceiver keying. Radio keying is designed to assert CTS when a packet is received, delay the time as specified, send the data out the serial port, wait the same amount time, drop CTS. This way, the CTS signal can be used to key a transmitter on and give it time to reach its power level before data is sent to it. Delay interval is specified in S221.

- **n=0** : Off (Default).
- **n=1** : On.

Addr List

GROUPS	MODEM DATA				PRINTABLE VIEW
	AT	Name	Value	New Value	
INFO					
STATUS	Decimal[0xHex]=...	Address Entry	0=		
COMMON		Address Entry	0=		
Misc		Address Entry	0=		
Serial		Address Entry	0=		
TCP		Address Entry	0=		
UDP		Address Entry	0=		
DNS		Address Entry	0=		
Dynamic IP		Address Entry	0=		
PPP/Ethernet		Address Entry	0=		
PassThru		Address Entry	0=		
SMTP		Address Entry	0=		
Other		Address Entry	0=		
Friends		Address Entry	0=		
LOGGING		Address Entry	0=		
TELEMETRY		Address Entry	0=		
ADDR LIST		Address Entry	0=		

Figure 1-17: AceManager : Addr List

MLIST and MLISTX are configured by the fields available in the Addr List group. AceManager automatically differentiates between them to enter the correct command for the modem.

MLISTid=d.d.d.d

Enters an ID and IP address into the Modbus List. ID is a decimal value (1 to 100).

- **id=ID**
- **d.d.d.d=IP address or name**

MLISTXhexid=d.d.d.d

Enters an ID and IP address into the Modbus List. ID is a hexadecimal value (0 to 64).

- **hexid=ID**
- **d.d.d.d=IP address or name**

1x/EV-DO

This group includes commands specific to 1x and EV-DO. If you are not connecting to a modem which uses EV-DO or 1x, you will not see this group in the menu.

GROUPS	MODEM DATA			PRINTABLE VIEW
INFO	AT	Name	Value	New Value
STATUS	+CTA	Dormancy Idle Timer (secs)	0	
COMMON	\$QCMIP	Mobile IP	1	
Misc	~NAMLCK	MSL Code	*****	
Serial		Check Data Link Params	0	
TCP		NAI		
UDP		PHA		
DNS		SHA		
Dynamic IP		MHSS	*****	
PPP/Ethernet		MASS	*****	
PassThru				
SMTP				
Other				
Friends				
LOGGING				
1X/EV-DO				
TELEMETRY				
ADDR LIST				

Figure 1-18: AceManager : 1x/EV-DO

+CTA=n

Inactivity timer, in seconds. Typical network settings cause a link to go dormant after 10 to 20 seconds of inactivity, no packets transmitted or received. This time can be shortened to release the physical RF link sooner when the application only transmits short bursts.

- n=0 : Allows the cellular network to determine the inactivity timer.
- n= seconds (maximum 20 seconds)

\$QCMIP=n

Mobile IP (MIP) Preferences. On a Mobile IP network, a device connects to the network using PPP. During the negotiation process the Raven X is NOT required to present a username and password to authenticate because the authentication parameters are stored in the modem itself.

- n=0 : Disabled, SIP only
- n=1 : MIP preferred
- n=2 : MIP only

*Note: If you are not using a diversity antenna, *EVDODIVERSITY should be disabled.*

Note: Your account with your cellular carrier may not support Mobile IP.

~NAMLCK=nnnnnn

The NAMLCK is the modem's 6-digit OTSL (One Time Subsidy Lock), MSL (Master Subsidy Lock), or SPC (Service Provisioning Code). Your cellular carrier will provide the unlock code.

- **nnnnnn=6 digit unlock code**

Caution: If the number is accepted by the modem, the OK result code is returned. If the number is rejected, the ERROR result is returned. If three successive Errors are returned, the modem must be reset by Sierra Wireless AirLink Solutions to allow any further attempts. The modem permits 99 failures of this command during its lifetime. After that, the modem becomes permanently disabled.

***EVDODIVERSITY=n**

EV-DO Diversity allows two antennas to provide more consistent connection.

- **n=0** : Disabled.
- **n=1** : Allow

***PROVISION=MSL,MDN/MIN[,SID][,NID]**

Tip: It is recommended to use the Setup Wizard for your carrier to provision the modem.

Provision the modem with the lock code and phone number. Cannot be configured in AceManager.

- **MSL=master lockcode**
- **MDN/MIN=phone number**
- **SID=system ID**
- **NID=network ID**

***PROVISION2=MSL,MDN,MIN[,SID][,NID]**

Tip: It is recommended to use the Setup Wizard for your carrier to provision the modem.

A second set of modem provision parameters, when the MDN and MIN (MSID) are different or “split”. Cannot be configured in AceManager.

- **MSL=master lockcode**
- **MDN/MIN=phone number**
- **SID=system ID**
- **NID=network ID**

~NAMVAL=nam[,min,msid,sid,nid]

Tip: *It is recommended to use the Setup Wizard for your carrier to provision the modem.*

Write account activation data. Following writing the values, the modem must be reset.

- **nam=0**
- **min=phone number**
- **msid=second number**
- **sid=0** or the system ID
- **nid=63355** or the network ID

Note: If ~NAMLCK has not been successfully executed, the modem returns ERROR.

- **nam=0**
- **min=phone number**
- **msid=second number**
- **sid=0** or the system ID
- **nid=63355** or the network ID

>> B: PPP over Ethernet (PPPoE)

- [Configuring the Raven X for PPPoE](#)
- [Configuring a PPPoE Connection in Windows](#)
- [Connecting to the Internet with PPPoE](#)

PPPoE (Point-to-Point Protocol over Ethernet) allows a point-to-point connection while using . Just like the dial up protocol on which it is based, PPPoE uses traditional user name and password authentication to establish a direct connection between two Ethernet devices on a network (such as your Raven X and your computer or router).

Application examples for PPPoE with your Raven X:

- Backup connectivity solution for your network.
- Individualized Internet connection on a LAN.
- Password restricted Internet connection.

Only one computer, router, or other network device at a time can connect to the Raven X using PPPoE. If you are using the Raven X connected to a router as a back up Internet connection for your network, you should configure the router to use the PPPoE connection and not the individual computers.

Tip: You may need to use *Private Mode* to configure the IP address of your Raven X to be available on a LAN.

Note: To configure a PPPoE connection on Microsoft Windows XP, 2000 or NT, you will need administrator privileges to the computer you are configuring or access granted by an administrator on the network to add/remove devices to your computer.

Configuring the Raven X for PPPoE

Before you can use PPPoE with your Raven X, you will need to configure it to support PPPoE connections.

1. Configure your Raven X to support PPPoE

- a. Connect your Raven X directly to your computer and start AceManager.
- b. From the groups on the left, select *PPP/Ethernet* under Common.

AT	Name	Value	New Value
*HOSTPRIVMODE	Use Private IP	0	
*HOSTPRIVIP	Host Private IP	192.168.13.100	
	DHCP network mask	255.255.255.0	
*HOSTPEERIP	Modem Local IP	192.168.13.31	
*HOSTNETMASK	Ethernet Host network mask	0.0.0.0	
*HOSTAUTH	Host Authentication Mode	0	
*HOSTUID	Host User ID	ZCFaUUeLycb2ug01L+3Ikwee	
*HOSTPW	Host Password	ZCFaUUeLycb2ug01L+3Ikwee	
*DHCPSEVER	DHCP Server Mode	1	
	Host Network 2	0.0.0.0	
	Host network mask 2	255.255.255.255	
	Host Network 3	0.0.0.0	
	Host network mask 3	255.255.255.255	
	Default Interface	0	
	Default IP	0.0.0.0	

Figure 2-1: AceManager : PPP/Ethernet

- c. Change *HOSTAUTH to 2.
- d. Enter a user name for *HOSTUID for the PPPoE connection.
- e. Enter a password for *HOSTPW for the PPPoE to connection.
- f. Change *DHCPSEVER to 0

Tip: If you leave *HOSTUID and *HOSTPW blank, any computer or device can connect to the PinPoint modem using PPPoE.

Note: AceManager shows the existing values for *HOSTUID and *HOSTPW encrypted and character padded.

2. Optional: Configure *MODEMNAME

PPPoE connections can use a Service Name to differentiate PPPoE devices.

- a. In AceManager, select Dynamic IP from the groups on the left.

- b. Enter a name for *MODEMNAME, such as Raven X or the ESN.

GROUPS	MODEM DATA		PRINTABLE VIEW	
INFO	AT	Name	Value	New Value
STATUS	*MODEMNAME	Modem Name	603eea33	
COMMON	*DOMAIN	Domain		
Misc	*IPMANAGER1	IP Manager Server 1 (IP Adrs)		
Serial	*IPMGRUPDATE1	IPMServer1 Update (Minutes)	0	
TCP	*IPMGRKEY1	IPMServer1 Key	*****	
UDP	*IPMANAGER2	IP Manager Server 2 (IP Adrs)		
DNS	*IPMGRUPDATE2	IPMServer2 Update (Minutes)	0	
Dynamic IP	*IPMGRKEY2	IPMServer2 Key	*****	
PPP/Ethernet				
PassThru				
SMTP				
Other				
Friends				
LOGGING				

Figure 2-2: AceManager : Dynamic IP

Tip: The name you choose will not affect the connection but may need to be configured in PPPoE settings for the router, device or computer you will be connecting to your Raven X.

3. Write the configured settings to your Raven X

- a. Click the *Write* button on the tool bar of AceManager and wait for the message “Write Successful” to appear in the status bar.

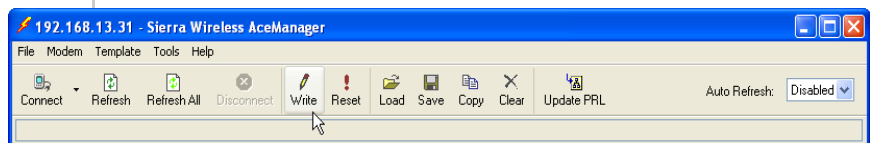


Figure 2-3: AceManager : Write

- b. Press the modem *Reset* button on the front of the modem. Wait until the Network indicator is lit and the modem has once again registered on the network.

Configuring a PPPoE Connection in Windows

1. Create a new network connection

- a. Select *Start > Connect To > Show All Connections*. This will open the Network Connections window.

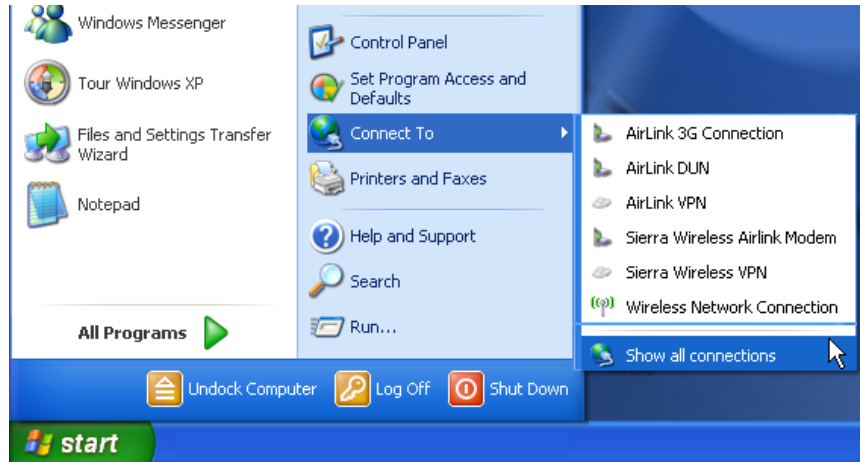


Figure 2-4: Windows : Start menu

- b.** Select *Create a New Connection* under Network Tasks in the menu area on the left. Select *Next* to start installing and configuring the PPPoE connection.

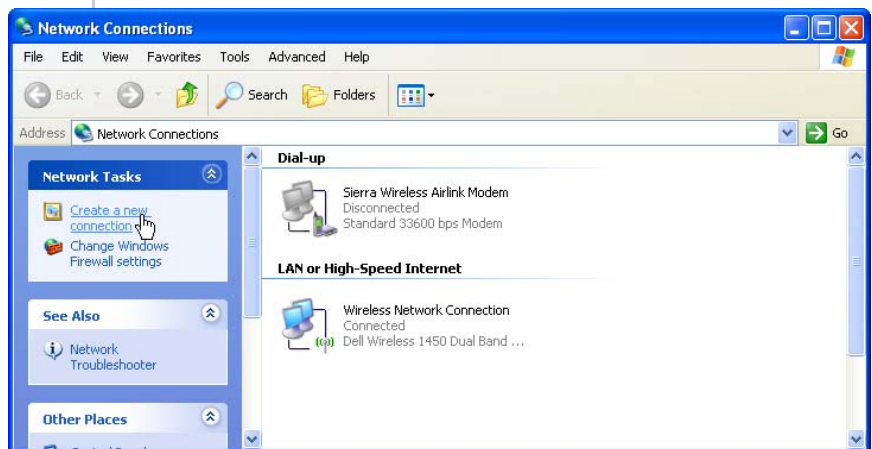


Figure 2-5: Windows : Network Connections

- c.** Click *Next* on the opening screen to begin creating a PPPoE connection.
- d.** *Next*.



Figure 2-6: New Connection Wizard

- e. Select *Connect to the Internet*.
- f. Select *Next*.

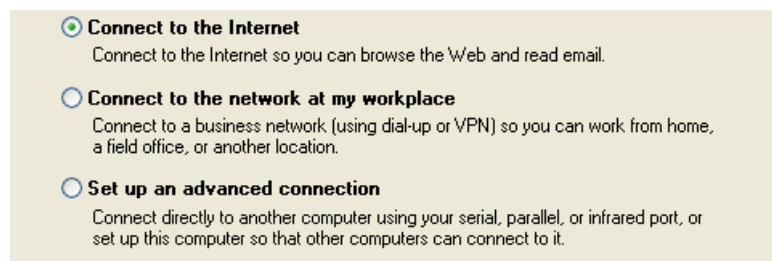


Figure 2-7: New Connection: Type

- g. Select *Set up my connection manually*.
- h. Select *Next*.

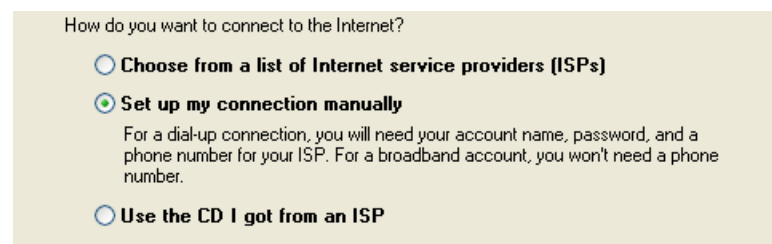


Figure 2-8: New Connection: How do you want to connect?

- i. Select *Connect using a broadband connection*.
- j. Select *Next*.

- ☐ **Connect using a dial-up modem**
This type of connection uses a modem and a regular or ISDN phone line.
- ☒ **Connect using a broadband connection that requires a user name and password**
This is a high-speed connection using either a DSL or cable modem. Your ISP may refer to this type of connection as PPPoE.
- ☐ **Connect using a broadband connection that is always on**
This is a high-speed connection using either a cable modem, DSL or LAN connection. It is always active, and doesn't require you to sign in.

Figure 2-9: New Connection : Connect using broadband

- k. Type in a name for the connection, such as *Sierra Wireless AirLink Modem*.
- l. Select *Next*.

Type the name of your ISP in the following box.

ISP Name

Sierra Wireless Airlink Modem

The name you type here will be the name of the connection you are creating.

Figure 2-10: New Connection: Connection Name

Tip: The name provided here will not effect the connection in any way. It is only a label for the icon. It can be the name of your wireless service provider (Provider), your modem (Raven X), or any other designation for the connection.

- m. *Optional:* If you have multiple users configured for your computer, you may be prompted for Connection Availability. If you select *My use only*, the account currently logged on will be the only one able to use this connection.
- n. Enter the user name and password you configured for *HOSTUID and *HOSTPW above.

Tip: If you want to allow others to use the same login for the modem, select *Use this account name and password...* Select *Next* to continue.

- o. Select *Next*.

Type an ISP account name and password, then write down this information and store it in a safe place. (If you have forgotten an existing account name or password, contact your ISP.)

User name:

Password:

Confirm password:

☒ Use this account name and password when anyone connects to the Internet from this computer

☐ Make this the default Internet connection

Figure 2-11: New Connection: Connection Information

Caution: If you have a LAN connection to the Internet and select *Make this the default Internet Connection* for the PPPoE configuration, you will not be able to use the LAN to connect to the Internet and may also affect the network connection on your computer to the rest of the LAN. Select this option *ONLY* if the Raven X will be your sole network connection.

- p.** If you want to add a shortcut for this PPPoE connection to your desktop, check *Add a shortcut...*
- q.** Select *Finish* to exit the Network Connection Wizard.

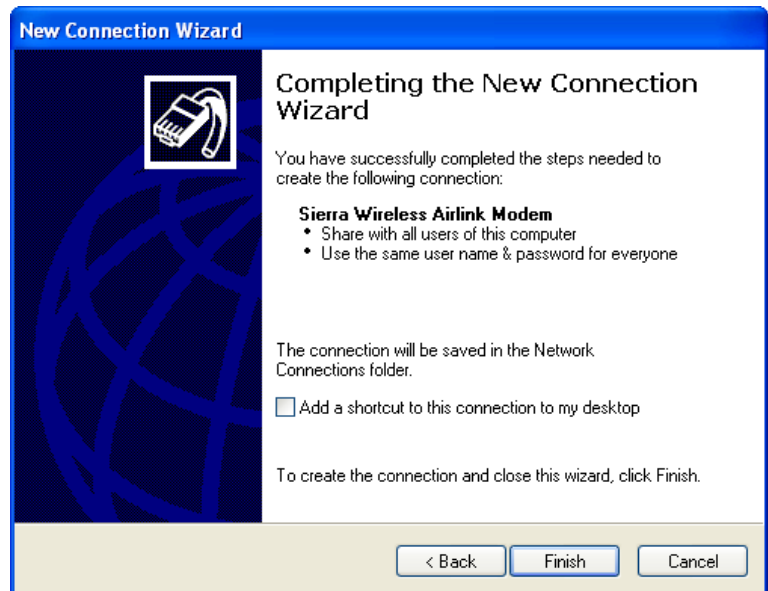


Figure 2-12: New Connection: Finish

2. Configure the PPPoE connection

After you complete the New Connection Wizard, there are a few more things you will want to configure in the connection.

- a. Select *Properties*.

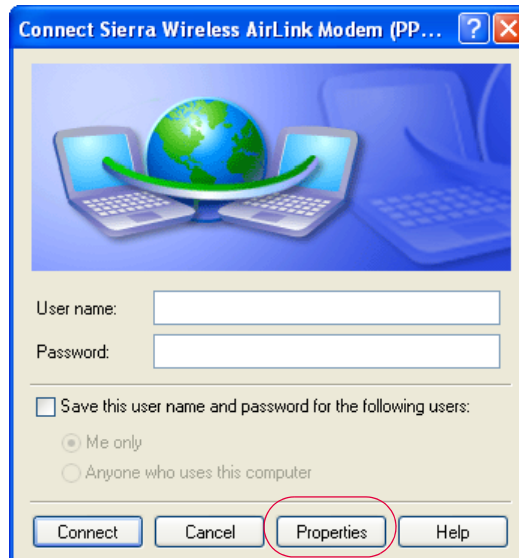


Figure 2-13: PPPoE Connection

- b. *Optional:* On the General tab, if you gave the modem a name with *MODEMNAME above, you can type in that name as the Service Name.

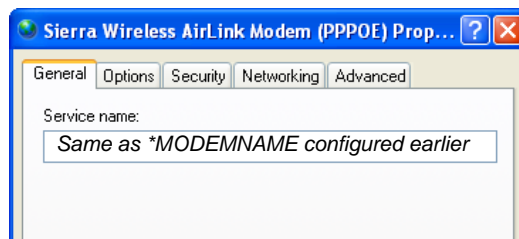


Figure 2-14: PPPoE Connection : Service Name

- c. Select *Networking*.
- d. Select *Settings*.

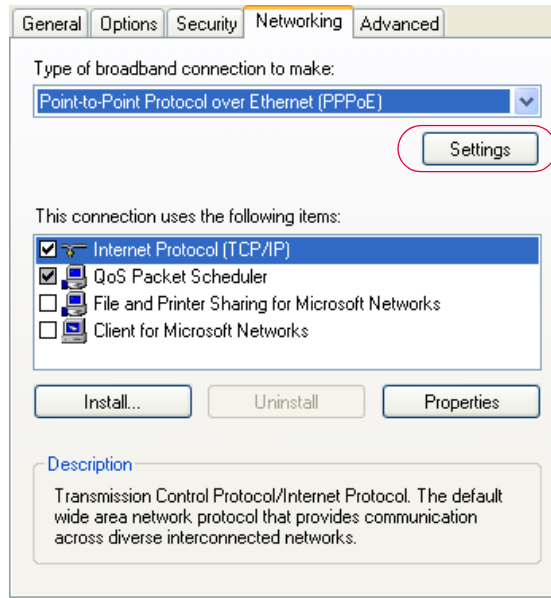


Figure 2-15: PPPoE : Networking

- e. Remove the checks from all three PPP settings.
- f. Select OK.

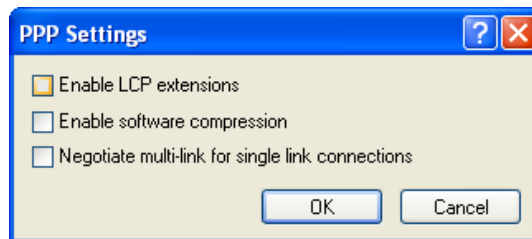


Figure 2-16: PPP Settings

Tip: You may want to check the Options tab and change the settings for applications you might be using. The default options are generally applicable for most uses.

Caution: Unless specifically directed to do so by Support or your network administrator, you do not need to make any changes to the options on the Security tab.

- g. Select OK until you return to the Connect window.

Connecting to the Internet with PPPoE

Now the PPPoE connection can be run and a data connection can be established.

- a. Connect your computer and the modem to the same local network using a hub or a switch.

Note: It is not recommended to connect your computer directly to the modem without a hub or switch.

- b. Start the PPPoE by *Start > Connect To > Sierra Wireless AirLink Modem* (or whatever you named the connection). It will be listed on your Network Connections window under the heading Broadband.



Figure 2-17: PPPoE Connection

- c. Enter the User name and Password you configured for *HOSTUID and *HOSTPW earlier.
- d. Select *Connect* to connect to the modem and the Internet.

When you're connected, an icon should appear in the System Tray, near the time display, showing the connection status.

>> C: Windows Dial-up Networking (DUN)

- Installing a modem driver for Raven X
- Creating a Dial-Up Networking (PPP) Connection
- Connecting to the Internet Using DUN

Dial-up Networking (DUN) allows a computer or other device to use the serial port on your Raven X to connect to the Internet or private network using PPP just like an analog modem using a standard phone line.

Caution: *To install any driver on your computer, you may need to be logged in as Administrator or have Administrator privileges for your login.*

Microsoft Windows XP is used in the examples below. The modem driver installation and DUN setup and configuration is similar in Microsoft Windows products. Examples are not provided here for installing the driver or configuring DUN for any other operating system.

Installing a modem driver for Raven X

Standard installations of Microsoft Windows XP and 2000 include a generic modem driver which will work with your Raven X.

1. Connect the Raven X.

- a. Connect the modem to the computer with a DB-9 cable or the USB port in serial mode.
- b. Plug in the AC adapter, connect the antenna(s) and power on the modem.

2. Install the driver.

- a. Select *Start > Control Panel > Phone and Modem Options* (in Classic View).

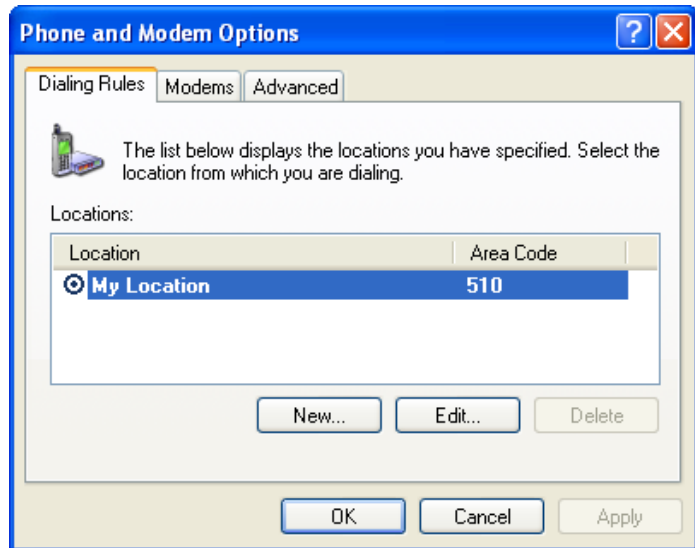


Figure 3-1: Phone and Modem Options

- b.** Select the *Modems* tab.

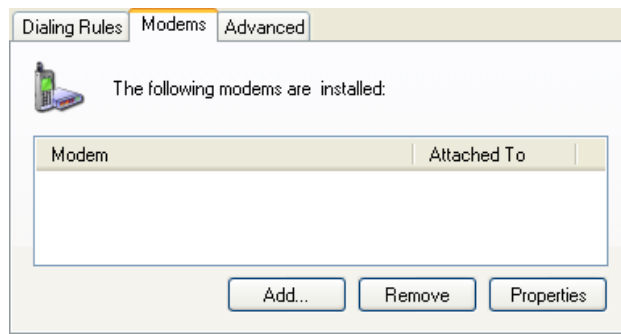


Figure 3-2: Phone and Modem Options: Modems

- c.** Select *Add*.

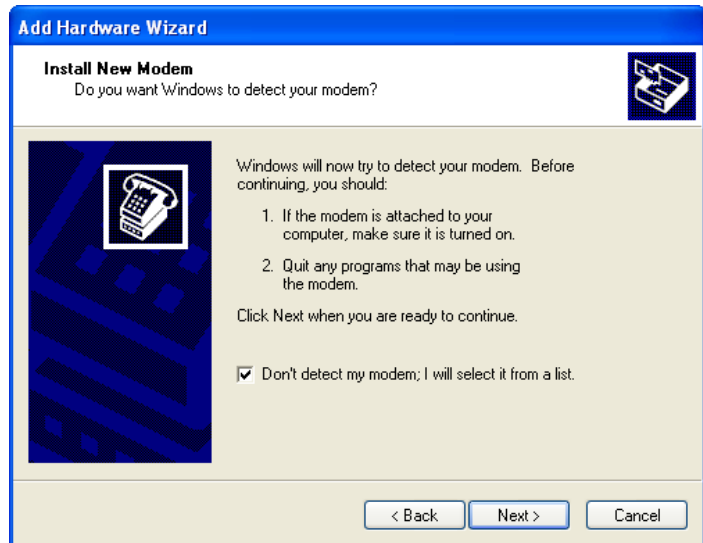


Figure 3-3: Add Hardware Wizard

- d. Check *Don't detect my modem; I will select it from a list.*
- e. Select *Next*.

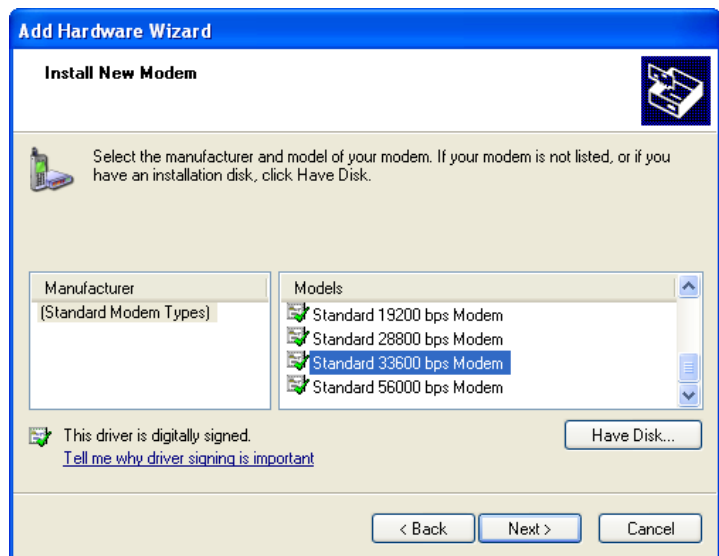


Figure 3-4: Add Hardware Wizard: Install New Modem

- f. Select *(Standard Modem Types)* from the Manufacturers column.
- g. Select *Standard 33600 bps Modem* from the Models column.

Tip: If you have the speed for your modem configured as something other than the default, use the Standard Modem that matches the speed you configured.

h. Select *Next*.

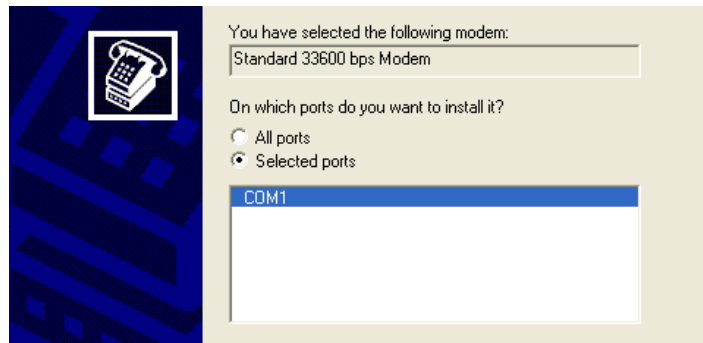


Figure 3-5: Add Hardware Wizard: Select Ports

i. Check *Selected Ports*.

j. Select the COM port the modem is connected to (commonly COM1).

k. Select *Next*.

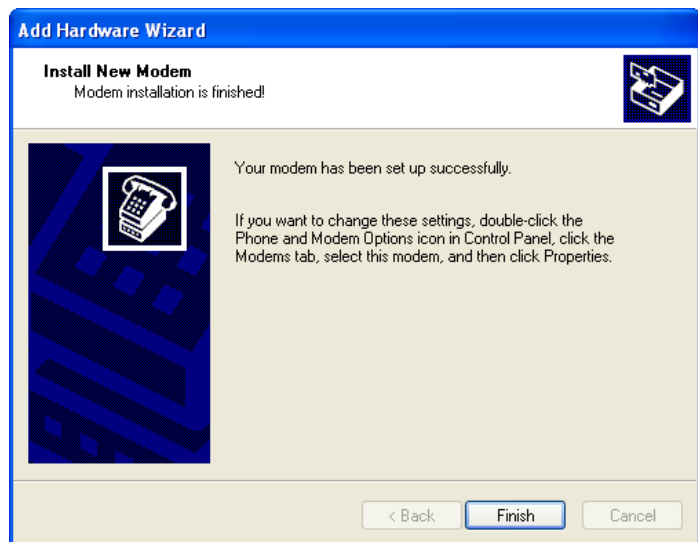


Figure 3-6: Add Hardware Wizard: Finish

l. Once the modem driver is installed, select *Finish*.

3. Configure the driver.

When you return to the *Phone and Modem Options* window, you should see the newly installed modem “attached to” the correct COM port.

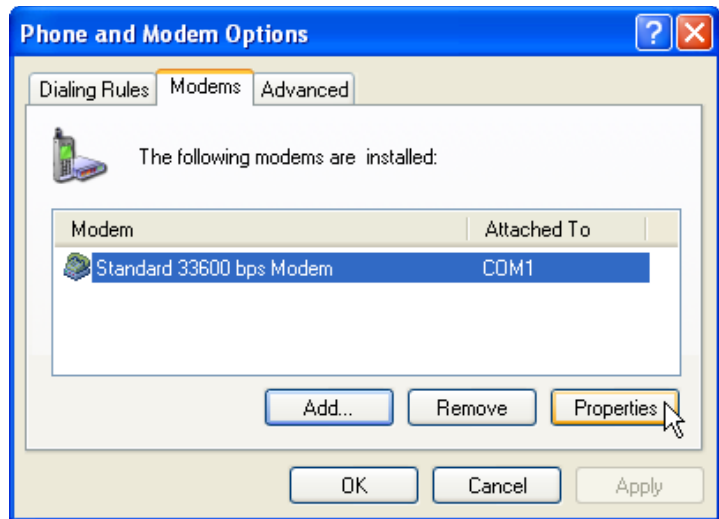


Figure 3-7: *Phone and Modem Options: Modems*

- a. Highlight the modem and select *Properties*.

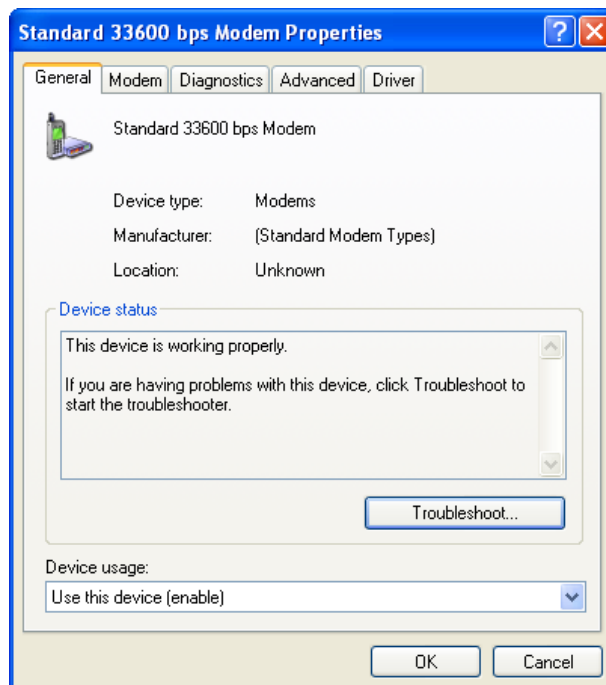


Figure 3-8: *Modem Properties*

- b.** Select the *Modem* tab.

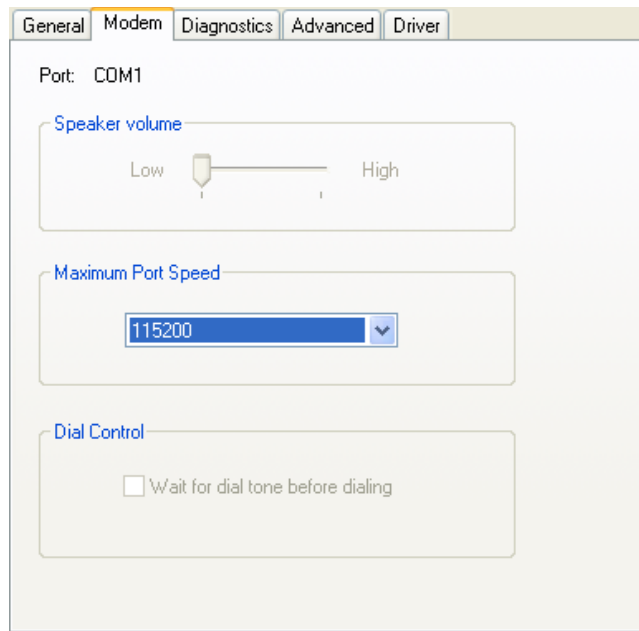


Figure 3-9: *Modem Properties: Modem*

- c.** Maximum Port Speed should be set to 115200 (default).
- d.** Select OK to exit.
- e.** Select OK again to exit out of the Phone and Modem Options.

Creating a Dial-Up Networking (PPP) Connection

Once you have the driver for the modem installed on your computer, you can set up and configure Dial Up Networking (DUN) to use the modem as your connection to the Internet using PPP.

Note: No other device or program can be using the same COM port (serial port) configured for the modem driver.

Caution: *If you have an existing LAN connection, installing DUN for the modem may interfere with the LAN connection. It's recommended to disconnect your LAN connection before using a PPP connection with your Raven X.*

Once the DUN connection is initiated, by default, it will take over as the “default route” for network communication and specifically for Internet access. If you want the two connections to co-exist, you will need to de-select “Use default gateway on remote network” (described later) and use the route command in Windows to setup routing through the modem properly. This guide does not provide information on the route command. You may need to consult with your network administrator to properly configure routing.

1. Create a new network connection.

- a. Select *Start > Connect To > Show All Connections* to open the Network Connections window.

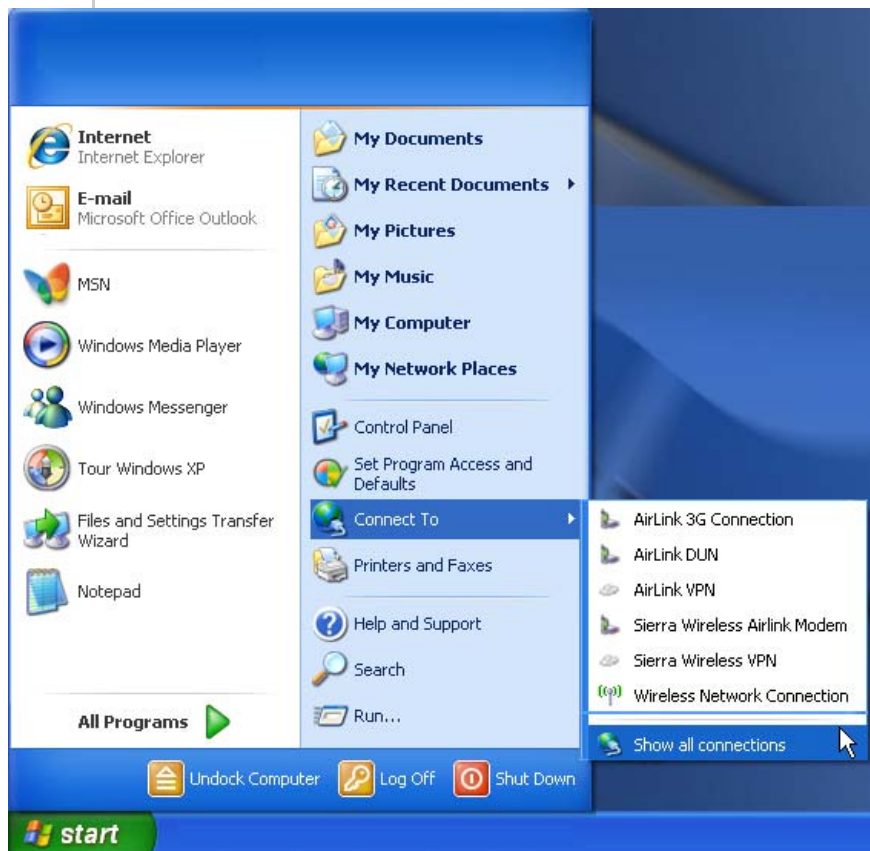


Figure 3-10: Windows : Start menu

- b.** Select *Create a New Connection* under Network Tasks in the menu area on the left.

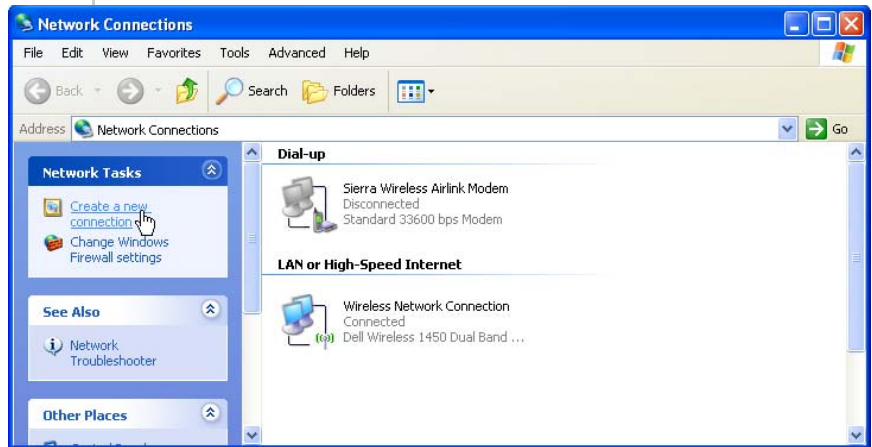


Figure 3-11: Create New Connection

- c.** Select *Next* to start installing and configuring the DUN connection.



Figure 3-12: New Connection Wizard

- d.** Select *Connect to the Internet*.
- e.** Select *Next*.

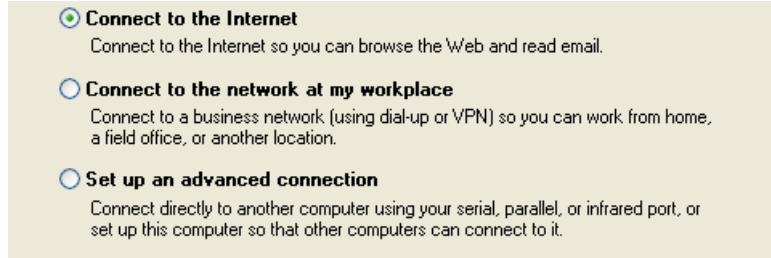
- 
- ☒ **Connect to the Internet**
Connect to the Internet so you can browse the Web and read email.
 - ☐ **Connect to the network at my workplace**
Connect to a business network (using dial-up or VPN) so you can work from home, a field office, or another location.
 - ☐ **Set up an advanced connection**
Connect directly to another computer using your serial, parallel, or infrared port, or set up this computer so that other computers can connect to it.

Figure 3-13: New Connection: Type

- f.** Select *Set up my connection manually*.
- g.** Select *Next*.

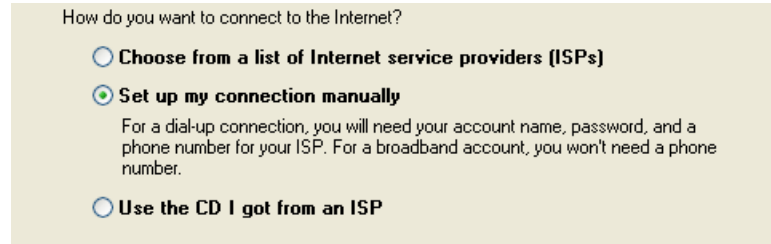
- 
- How do you want to connect to the Internet?
- ☐ **Choose from a list of Internet service providers (ISPs)**
 - ☒ **Set up my connection manually**
For a dial-up connection, you will need your account name, password, and a phone number for your ISP. For a broadband account, you won't need a phone number.
 - ☐ **Use the CD I got from an ISP**

Figure 3-14: New Connection: How do you want to connect?

- h.** Select *Connect using a dial-up modem*.
- i.** Select *Next*.

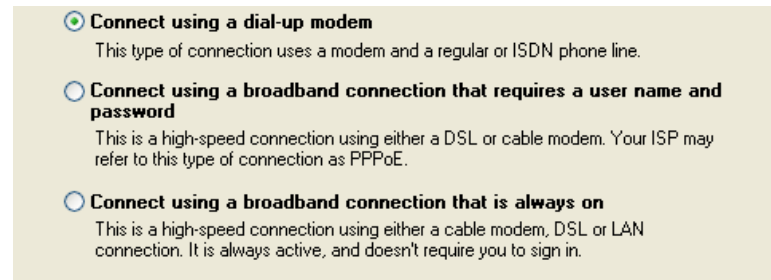
- 
- ☒ **Connect using a dial-up modem**
This type of connection uses a modem and a regular or ISDN phone line.
 - ☐ **Connect using a broadband connection that requires a user name and password**
This is a high-speed connection using either a DSL or cable modem. Your ISP may refer to this type of connection as PPPoE.
 - ☐ **Connect using a broadband connection that is always on**
This is a high-speed connection using either a cable modem, DSL or LAN connection. It is always active, and doesn't require you to sign in.

Figure 3-15: New Connection: Connect using...

- j.** *Optional:* If you have multiple modems installed on your computer, you may be prompted to select the modem to be used. If you only have one modem installed, this option will be omitted.
- k.** Check *Standard 33600 bps Modem*.
- l.** Select *Next*.

You have more than one dial-up device on your computer.

Select the devices to use in this connection:

<input type="checkbox"/>	Modem - BCM V.92 56K Modem (COM3)
<input checked="" type="checkbox"/>	Modem - Standard 33600 bps Modem (COM1)

Figure 3-16: New Connection: Select Modem

- m.** Type in a name for the connection, such as *Sierra Wireless AirLink Modem*.
- n.** Select *Next*.

Type the name of your ISP in the following box.

ISP Name

Sierra Wireless Airlink Modem

The name you type here will be the name of the connection you are creating.

Figure 3-17: New Connection: Connection Name

Tip: The name provided here will not effect the connection in any way. It is only a label for the icon. It can be the name of your wireless service provider (Provider), your modem (Raven X), or any other designation for the connection.

- o.** Type in *10001* as the phone number for the modem to dial.
- p.** Select *Next*.

Type the phone number below.

Phone number:

10001

You might need to include a "1" or the area code, or both. If you are not sure you need the extra numbers, dial the phone number on your telephone. If you hear a modem sound, the number dialed is correct.

Figure 3-18: New Connection: Phone Number

- q.** *Optional:* If you have multiple users configured for your computer, you may be prompted for Connection Availability. If you select *My use only*, the account currently logged on will be the only one able to use this DUN connection.
- r.** Select *Next*.

A connection that is created for your use only is saved in your user account and is not available unless you are logged on.

Create this connection for:

- ☒ Anyone's use
☐ My use only

Figure 3-19: New Connection: Permissions

Generally the modem takes care of the Account Information, User name and Password, for the connection, so you can leave the fields blank (unless otherwise instructed by Support).

- s. If you want to allow others to use the same login for the modem, select *Use this account name and password....*
- t. Select *Next*.

Type an ISP account name and password, then write down this information and store it in a safe place. (If you have forgotten an existing account name or password, contact your ISP.)

User name:

Password:

Confirm password:

☒ Use this account name and password when anyone connects to the Internet from this computer

☐ Make this the default Internet connection

Figure 3-20: New Connection: Connection Information

Caution: If you have a LAN connection to the Internet and select *Make this the default Internet Connection* for the DUN configuration, you will not be able to use the LAN to connect to the Internet and may also affect the network connection on your computer to the rest of the LAN. Select this option *ONLY* if the Raven X will be your sole network connection.

- u. If you want to add a shortcut for this DUN connection to your desktop, check *Add a shortcut*.
- v. Select *Finish* to exit the Network Connection Wizard.

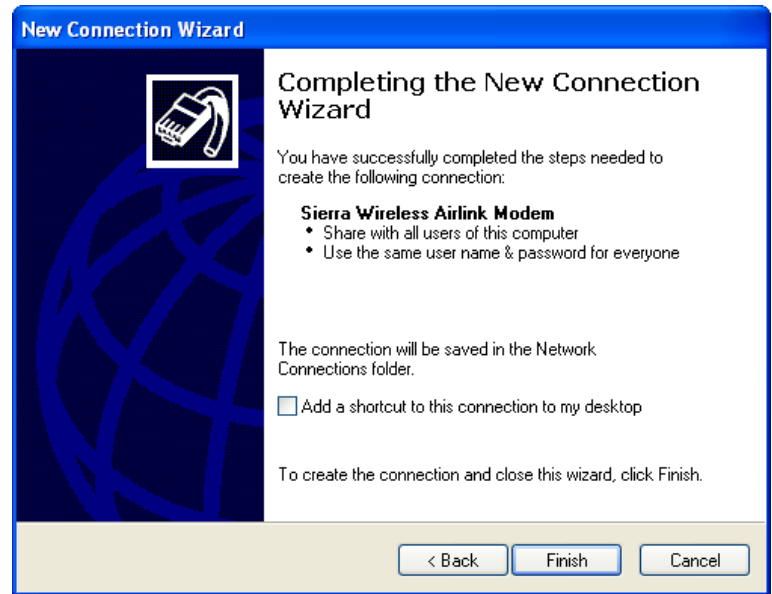


Figure 3-21: New Connection: Finish

2. Configure the DUN connection

After you complete the New Connection Wizard, there are a few more things you will want to configure in the connection.

- a. Select *Properties*.



Figure 3-22: DUN Connection

- b. Uncheck *Use dialing rules*.

- c. Check *Show icon...when connected*.
- d. Select *Configure*, below the Connect using line.

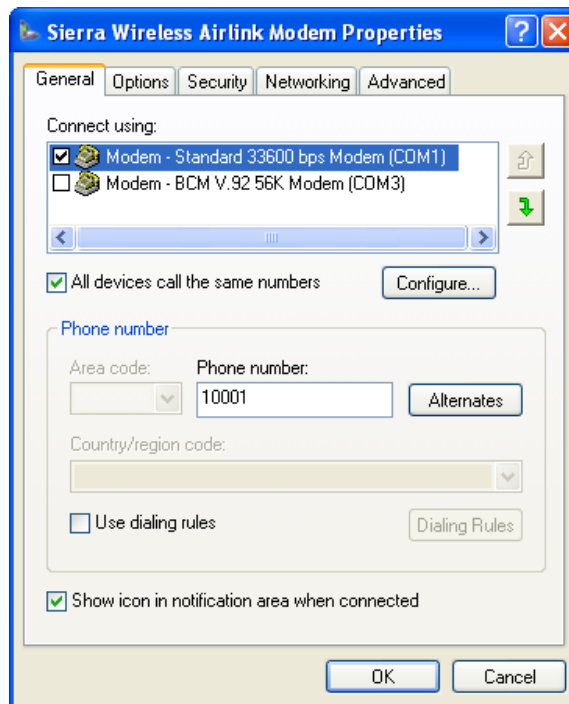


Figure 3-23: DUN Properties

- e. Select *115200* as the Maximum speed.
- f. Check *Enable hardware flow control*.
- g. Do not check any other option.
- h. Select *OK*.

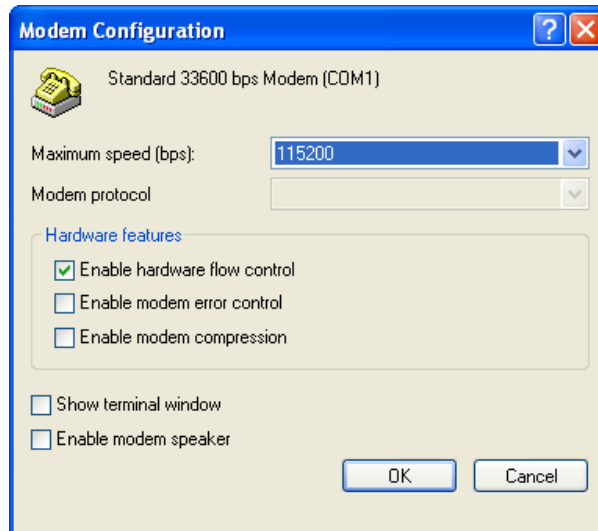


Figure 3-24: Modem Configuration

- i. Back at the main properties screen, select the *Networking* tab.

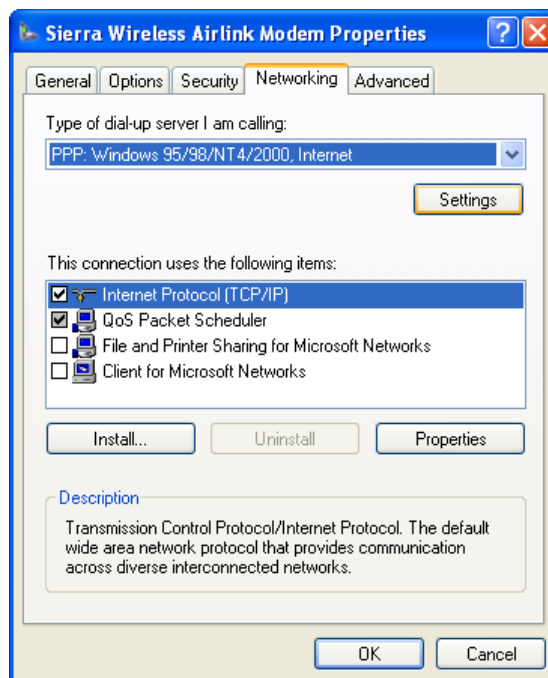


Figure 3-25: Networking

- j. Select *Settings*.
- k. Remove the checks from all three PPP settings.
- l. Select *OK*.

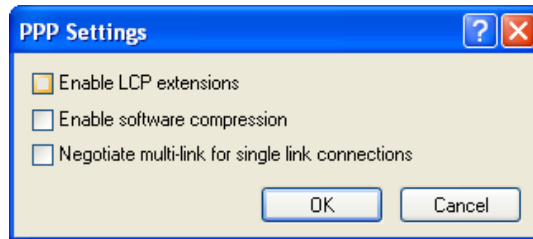


Figure 3-26: PPP Settings

- m.** Select (highlight) Internet Protocol (TCP/IP) and then select *Properties*.

Tip: For most configurations, you will be obtaining the IP address and the DNS server address automatically.

- n.** Select *Advanced*.

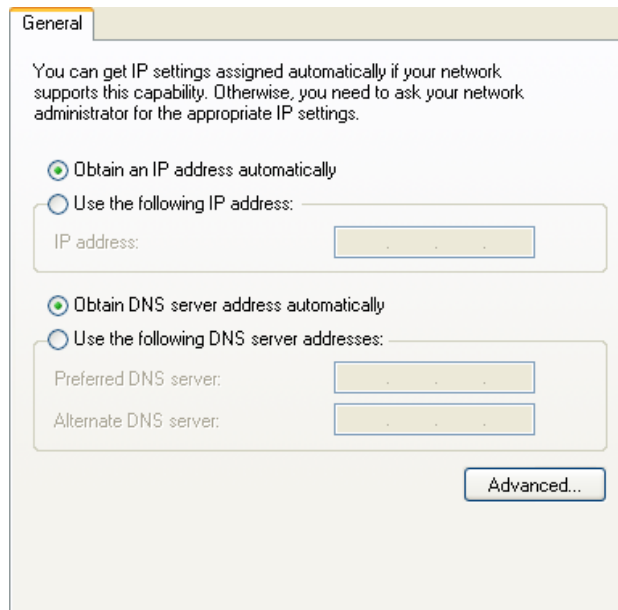


Figure 3-27: TCP/IP Properties

- o.** Uncheck *Use IP header compression*.
- p.** Check *Use default gateway on remote network*.
- q.** Select *OK*.

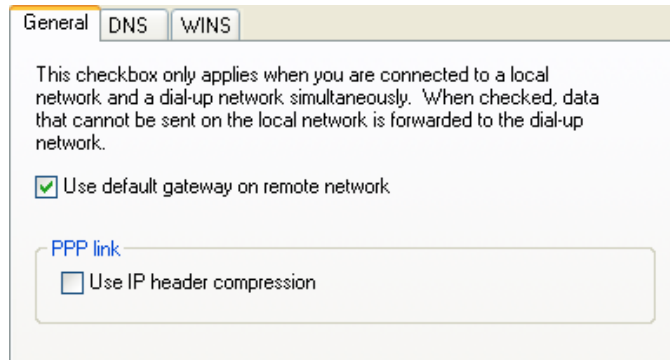


Figure 3-28: Advanced TCP/IP

Tip: You may want to check the *Options* tab and change the settings for applications you might be using. The default options are generally applicable for most uses.

Caution: Unless specifically directed to do so by Support or your network administrator, you do not need to make any changes to the options on the *Security* tab.

- r. Select OK until you return to the *Connect* window.

Connecting to the Internet Using DUN

There are two methods you can use to connect with Raven X to the Internet using DUN, AceView and the Windows DUN connection directly.

AceView

AceView is a small utility which can maintain your DUN connection and monitor the connection of your Raven X to Provider. If you have not already installed AceView you can obtain the most recent version from the Prosoft Technology RadioLinx website.

This guide assumes you have a default installation of AceView.

1. Start AceView.

Start > All Programs > RadioLinx Communications > AceView

Note: The direct DUN connection features of AceView are not available in Windows 98 or Windows NT.

2. Enable the Connection.

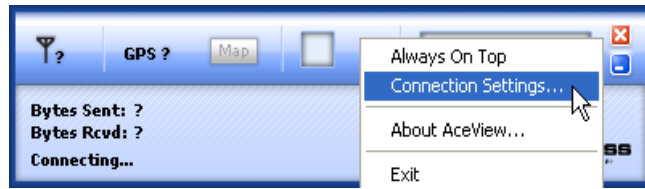


Figure 3-29: AceView: Menu

- a. Right-click on the AceView window to open the menu.
- b. Select *Connection Settings*.

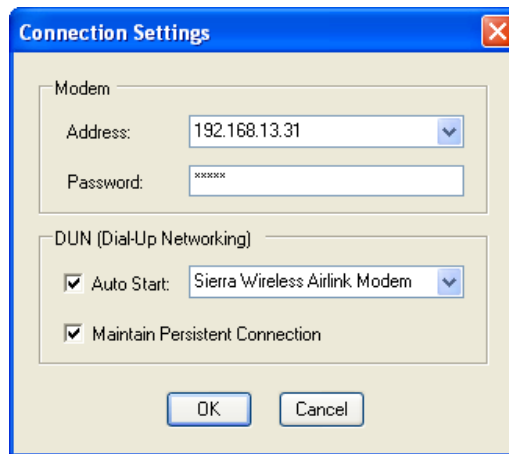


Figure 3-30: AceView: Connection Settings

- c. Select *Auto Start* in the DUN section.
- d. Select *Maintain Persistent Connection*.

When checked, AceView will continually check the DUN connection to ensure it is not down. If so, AceView will attempt to connect again.

Tip: When using the DUN connection, make sure the IP Address is set to the local IP address of the modem, 192.168.13.31 by default.

- e. Select *OK*.
- f. *OK*.

Windows DUN

You can directly use the Dial-up link for the DUN connection.

1. Start the DUN session.

Start > Connect To > Prosoft Technology RadioLinx Modem

If you named the connection differently, use the name of the PPP connection you made earlier.



Figure 3-31: DUN Connection

Tip: Generally you will not need to enter a Username or Password. If you do need to enter either, you can enter these parameters beforehand using *NETUID and *NETPW.

2. Select Dial to connect to the modem and the cellular network.

Note: The speed shown in the connection is the speed between the modem and your computer, it is not the speed of the modem's connection to Provider or the Internet.

When you're connected, an icon should appear in the system tray showing the connection status.

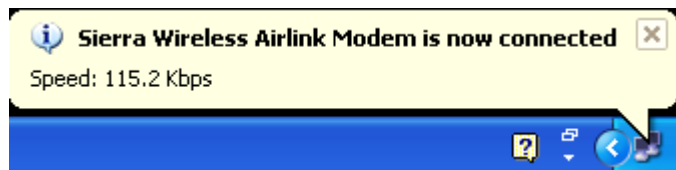


Figure 3-32: Connection indicator

Caution: *For DUN connections on a Windows Mobility or other non-personal computer, the DNS settings may not be configured with the DUN connection. You may need to go into the network settings and add DNS servers manually.*

