

ELBA

MULTI-CYCLONE VACUUM CLEANER MODEL: EVC-B2014CY(RD) Owner's Manual

Please read this manual carefully
before operating your set.

Retain it for future reference.

Record model number and serial
number of the set.

See the label attached on the set and
quote this information to your dealer
when you require service.


For The Warranty Terms & Conditions, Please Refer To Warranty Certificate.

IMPORTANT SAFEGUARDS


When using this appliance, basic precautions should always be followed, including the following:

1. Read all instructions before using.
2. Do not operate the appliance with damaged power cord or plug, after the appliance malfunction, or if it is dropped or damaged in any manner. Return the appliance to the nearest authorized dealer or after-sales service center for examination, repair, electrical or mechanical adjustment.
3. Do not use the appliance if the plug, the mains cord or other parts are damaged.
4. Do not unplug by pulling the power cord. To unplug, grasp the plug, not the cord.
5. Do not leave the appliance unattended while operating. Power off the appliance when not in used.
6. Do not handle the plug or any other parts of the vacuum cleaner with wet hands.
7. Do not put any objects into the hose inlet. Keep it free from dust, lint, hair and anything that may reduce the airflow.
8. Turn off all controls before unplugging.
9. Take extreme care when cleaning on stairs.
10. Do not use the vacuum to suck flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
11. Do not use this vacuum cleaner to suck anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
12. Hold plug when rewinding onto cord reel. Do not allow power cord to whip when rewinding.
13. Do not use this vacuum cleaner without filters in place.
14. Never use any accessories or parts from other manufacturer or that ELBA does not specifically recommended.
15. Close supervision is necessary when your appliance is being used near children or infirm persons.
16. Store the vacuum cleaner in a dry and save place.
17. Do not operate the appliance for other than its intended use.
18. Do not use this vacuum cleaner outdoors or on wet surfaces.
19. This appliance is for domestic use only.
20. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
21. Children should be supervised to ensure that they do not play with the appliance.
22. Save these instructions for future reference.


PRODUCT DESCRIPTION

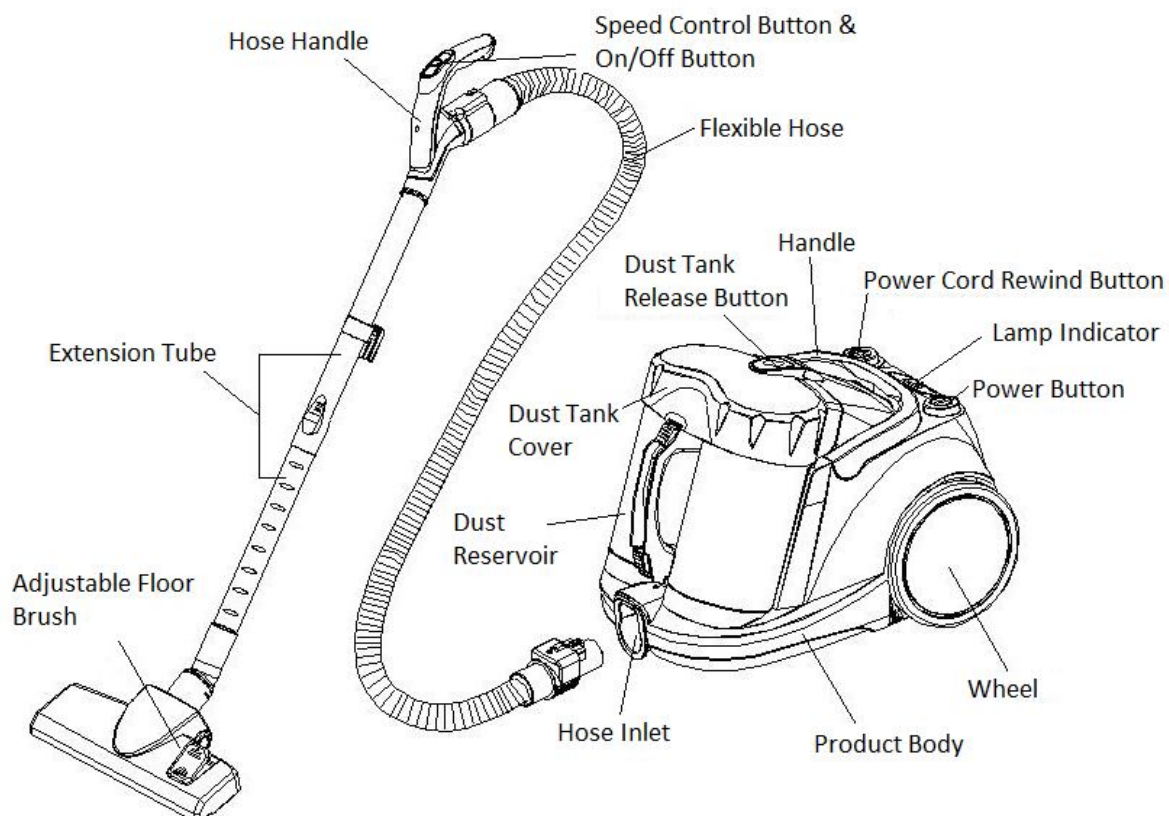

DUST TANK:

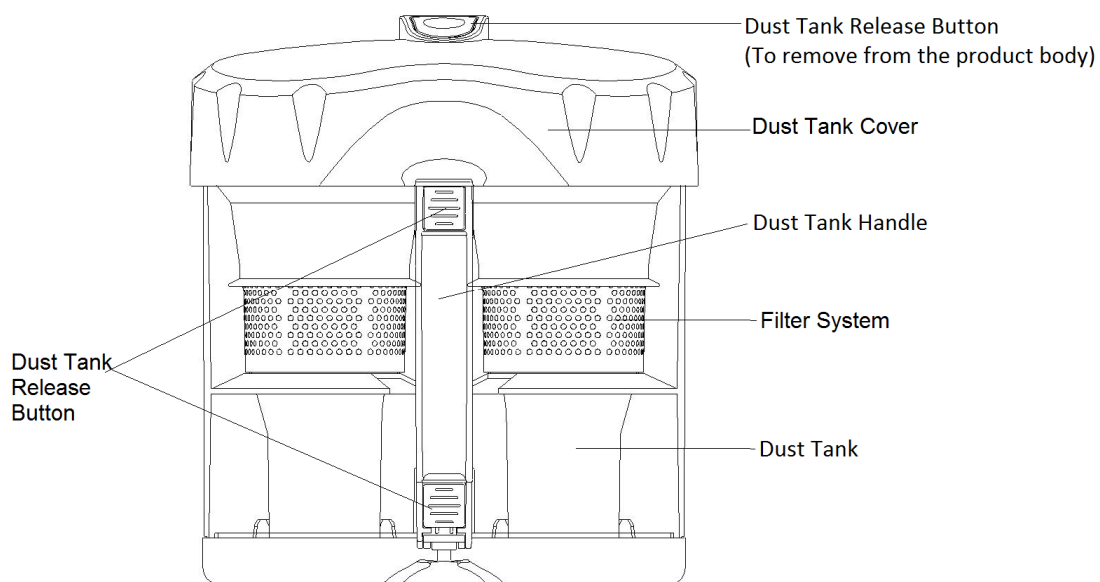

ACCESSORIES:

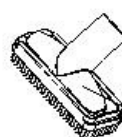





Multi-purpose brush



Crevice Nozzle

PRECAUTIONARY MEASURES

If the floor brush, nozzle or the hose are blocked, disconnect the block-up item at once.

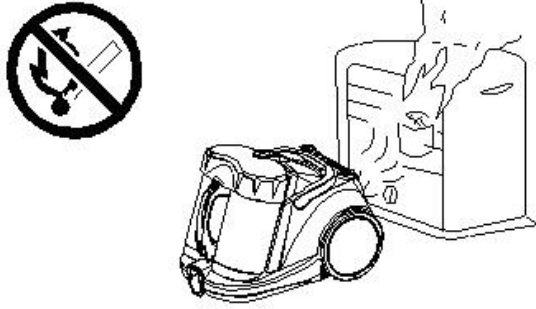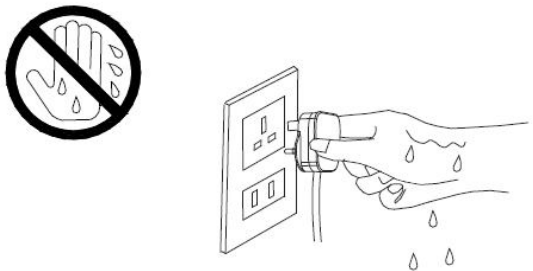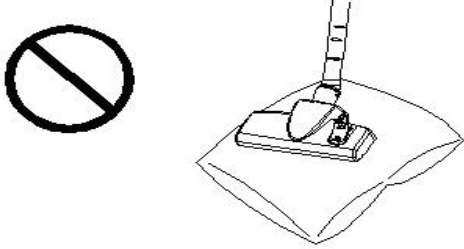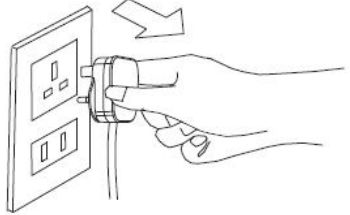
 <p>Do not operate the vacuum cleaner close to heaters like radiators, cigarette butts, etc.</p>	 <p>Make sure your hand is dry before inserting the plug into the wall outlet.</p>
 <p>Before starting to use the vacuum cleaner, remove the large sharp objects from the floor in order to prevent that the filter is blocked and damaged.</p>	 <p>When pulling out the plug from wall outlet, beware and do not pull from the power cord but grasp from the plug itself.</p>

ASSEMBLE THE VACUUM CLEANER

Always remove the plug from the wall outlet before fitting or removing the accessories!


(Fitting the flexible hose)

- Insert the flexible hose into the hose inlet at the product body. Press until it clicks into position.
- To remove the flexible hose, press the clip position down of the hose (where the hose is connected to the air inlet duct) to pull out the hose from the air inlet duct.

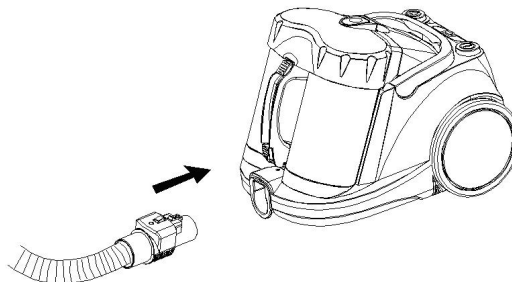


(Fitting the extension tube and accessories)


- Insert the extension tube to the flexible hose by holding the handle.

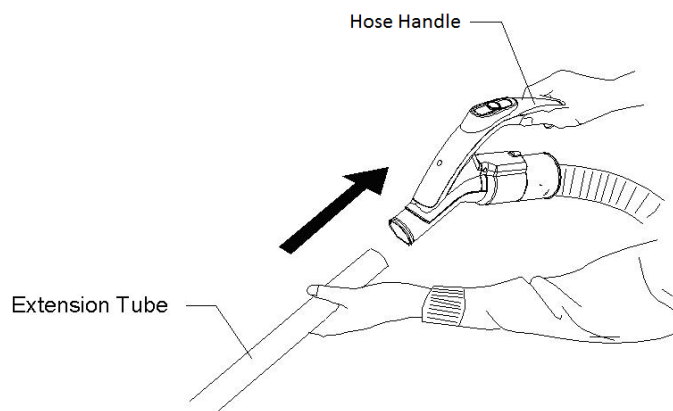


- Fitting the floor brush to the extension tube.

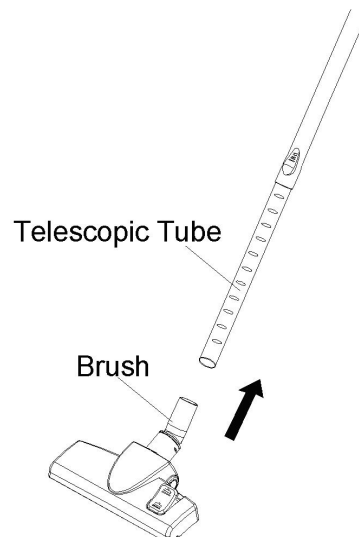


- Ideal for cleaning on carpets and floors.

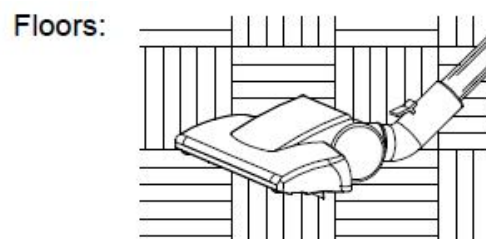

- Cleaning using the accessories-
 - ❖ Crevice nozzle: For cleaning corners, baseboards and cushions.

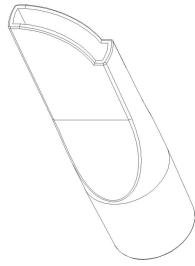

- ❖ Multi-purpose brush: For cleaning furniture, blinds, book, lamp shades and shelves. It can be used as a sofa nozzle as well.

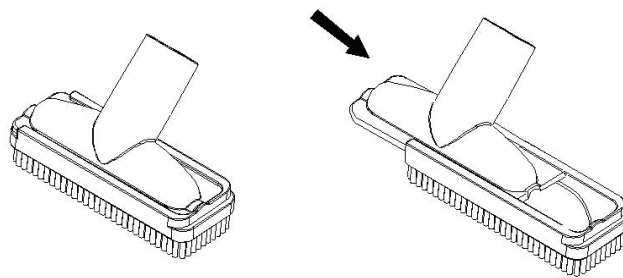


OPERATING THE VACUUM CLEANER

Cautions: Before operating, unwind a sufficient length of power cord and insert the plug into the wall outlet. A yellow mark on the power cord shows the ideal cable length. Do not extend the cord beyond the red mark.


- Power on the vacuum cleaner

Insert the plug to the wall outlet and power on. The indicator light will light up. Press the power button on the product body. At this stage, the vacuum cleaner is ready to be use. The suction power can be control at the hose handle.

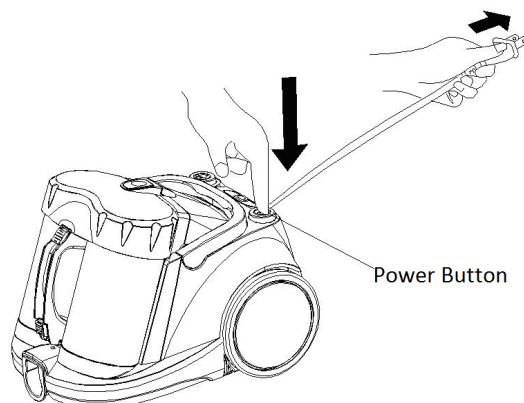

- Power cord rewind button


To rewind the power cord, press the rewind button at the product body with one hand and guide the cable with another hand to ensure that the cable does not whip causing damage.

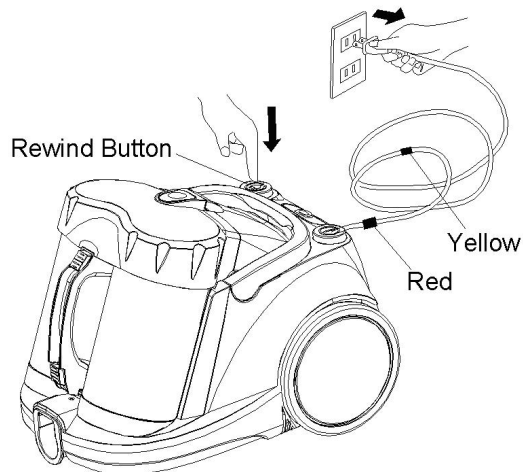

- Adjustable speed control at the hose handle

The suction power can be adjusted by sliding the speed control button at the hose handle. Slide the control button to "Off" to stop operating. When finished cleaning, always power off the switch and unplug the plug from wall outlet.


Notice: If the flexible hose is not fully inserted into the hose air inlet, the vacuum cleaner will not operate.

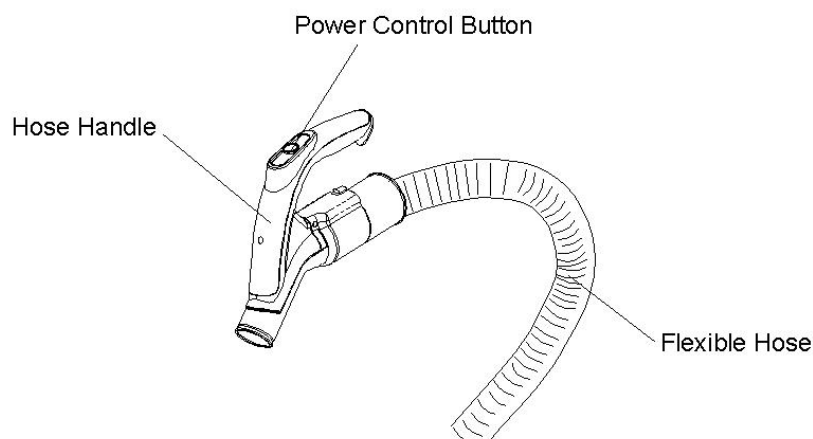


CLEANING AND MAINTENANCE

1) To remove dust from the dust tank

- Press the dust tank release button. Pull out the dust cup by holding the dust tank handle.

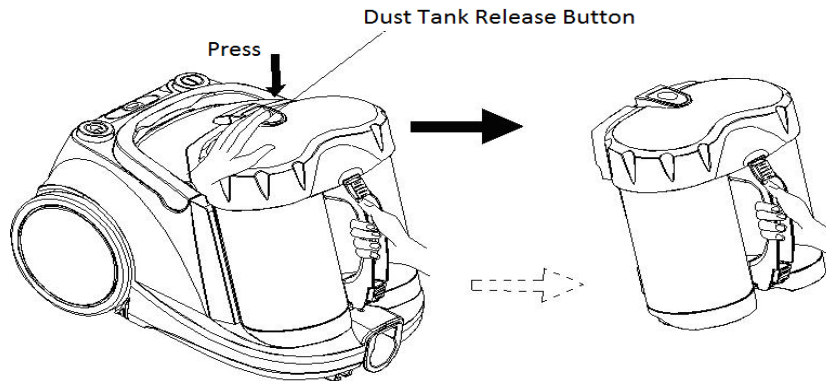


- Press the dust tank (bottom) release button, then the collected dust will drop off from the bottom of the dust cup.
- Clean the filter by pressing the dust tank (top) release button. Remove the filter assembly from the dust tank and use soft brush or wipe using a soft damp cloth. Before storing the filter assembly, make sure it is dry and clean.

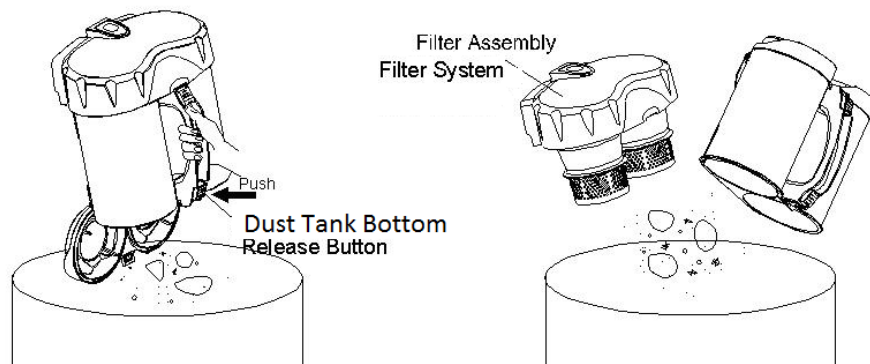


2) Install the dust tank back to the product body

- Push the bottom of the dust tank back to its position until it securely locks.
- Place the dust tank back to the product body.
- Push the dust tank until it is fully sit nicely on the product body.

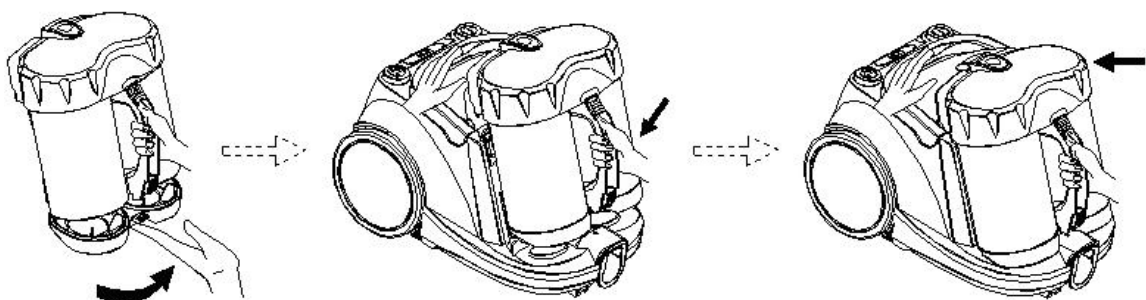


3) Cleaning the inlet and exhaust HEPA filter


- After removing the dust tank, remove the sponge and HEPA filter set (to remove the whole set in a case box).

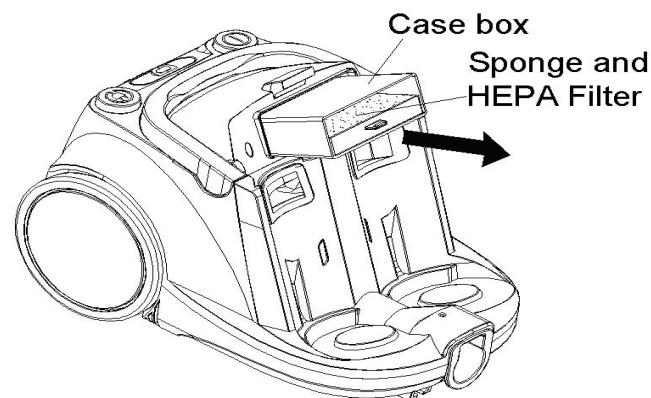


- Remove the filter frame and pull out the sponge and HEPA filter from the case box. Cleaning the sponge and HEPA filter by using soft brush and rinse it under the tap water and dry it completely before using it again.
- This is a washable filter, we recommend to clean the filter to improve the suction power.

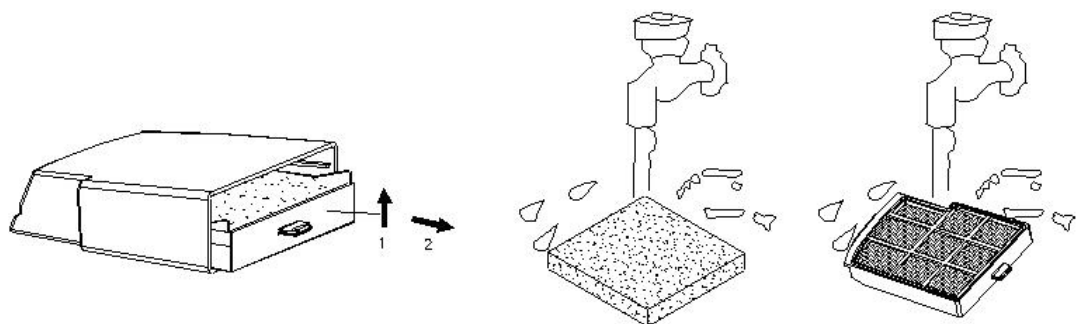

- For exhaust HEPA filter, press the button under the grid.
- Clean the HEPA filter by using a soft brush and rinse it under tap water and dry it completely before using it again.
- This is a washable filter, we recommend to clean the filter to improve the suction power for every 2 months to improve the suction power.

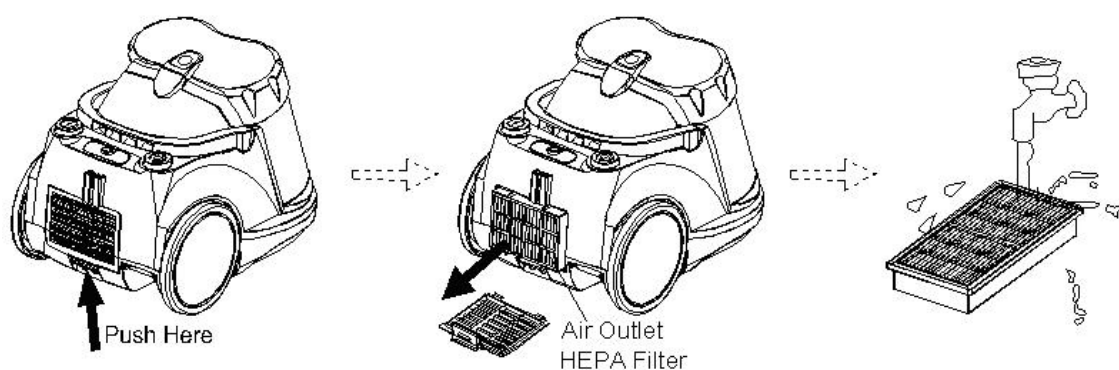

ENVIRONMENT-FRIENDLY DISPOSAL

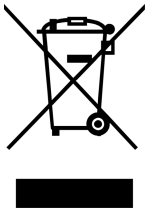

You can help to protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.

ELBA