

MASTER YOUR DEVICE

©2011 Verizon Wireless. All Rights Reserved.
verizonwireless.com



MOTOROLA XOOM™



CONGRATULATIONS

MOTOROLA XOOM™

The fourth generation of wireless has arrived—the best technology with the most cutting-edge innovations. Designed for the future, available now—the Verizon 4G LTE network will change the way you see everything. Lightning fast. Lightning strong. Imagine it, and 4G LTE makes it happen. Become a high-octane version of you—get what you want, when you want it.

- Whenever you see the ~~4G~~ 4G LTE indicator, you know you're connected to the most advanced and reliable 4G mobile network in America. Download speeds up to ten times faster than 3G networks. Movies in minutes, photos in seconds. Stream your favorite video without annoying buffering. Download and view full-length HD quality movies.
- Imagine maximum productivity. Verizon 4G LTE unchains you from your desk and makes your business more nimble than ever before. Blazing-fast responsiveness with the tools you need to help reduce costs, minimize travel, save time, and operate your business wherever you are, at full strength.
- Let the games begin. Rich, addictive multi-player online action gaming, right in your hands.

Not all features, applications, or services may be available with your plan. Please contact your wireless service provider for more information.

CONTENTS

MY VERIZON	3
YOUR MOTOROLA XOOM	5
FIRST STEPS	7
GETTING STARTED	7
SAVE THE DEVICE LABEL	9
BASICS	10
TOUCH TIPS	10
KEY TIPS	11
HOME SCREEN	12
SETTINGS	14
APP MENU	16
KEY TIPS	16
SET UP EMAIL	17
WANT MORE?	17
MANAGE CONTENT	18
CONNECTIONS	18
CONTENT BACKUP	20
APPS & FEATURES	21
POWERFUL APPS	21
VERIZON SAFEGUARDS	22
TROUBLESHOOTING	23

THANK YOU FOR CHOOSING VERIZON WIRELESS

You're now connected to the power of America's largest and most reliable wireless network. This guide will introduce you to the features of your new tablet.

For assistance, please go to verizonwireless.com. You can also contact Customer Service at 1-800-922-0204 or speak with a Customer Service Representative at your local Verizon Wireless Store.

Note: Screen images and icons are simulated. Actual display may vary. Instructions in this guide may change depending on the software version on your device.

IMPORTANT CUSTOMER INFORMATION

Please be advised that many services and applications offered through this unique device are provided by various device, operating system, software and application developers (e.g., Google™, Motorola, Microsoft®, Palm®, Research In Motion® Limited). If you use, link to or download such a service, or an application such as a non-Verizon Wireless location-based GPS type service, chat room, marketplace or social network from this device, you should carefully review the terms of such service or application. If you use any of these non-Verizon Wireless services or applications, personal information you submit may be read, collected, or used by the service or application provider and/or other users of those forums.

 
Verizon Wireless is not responsible for your use of those applications or information you choose to submit or share with others. Specific terms and conditions, terms of use, and privacy policies apply to those applications and services. Please review carefully any and all terms and conditions applicable to those applications and services including those related to any location-based services for any particular privacy policies, risks or waivers. Your Verizon Wireless customer agreement terms and conditions and certain other specially identified terms govern your use of any Verizon Wireless products and services.

REGISTER NOW


Save time. Save money. Register now at [verizonwireless.com/myverizon](https://www.verizonwireless.com/myverizon).

- **Manage your account.** Quickly check your voice, text and data usage or make adjustments to your plan at any time.
- **Get personalized support.** My Support answers your questions quickly.
- **Pay bills your way.** Go green and set up paperless billing, make a one-time payment, or use auto pay and never worry about missing a payment.

YOUR MOTOROLA XOOM

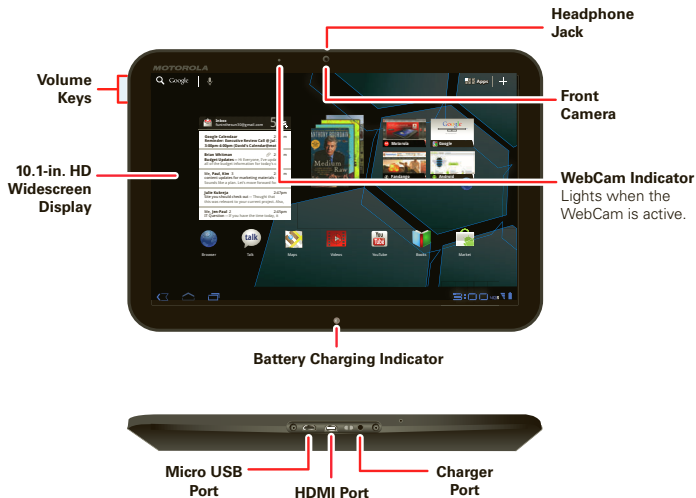

 Note: All screen shots in this guide are simulated. Actual displays and instructions may vary depending on the software version in your MOTOROLA XOOM.

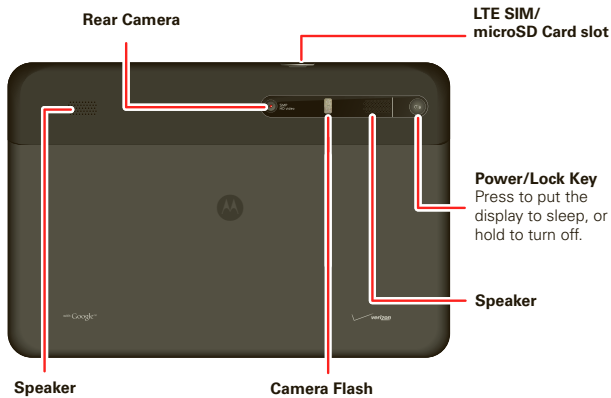

Note: Certain apps and features may not be available in all countries.

 
FIRST STEPS

GETTING STARTED

ASSEMBLY & CHARGE

Caution: Before assembling, charging, or using your device for the first time, please read the important legal and safety information packaged with your product.


- 1 SIM tray out



- 3 SIM card in



 
- 5 microSD card in




- 7 charge up



 - 2 placeholder card out



- 4 placeholder card out

 

- 6 SIM tray in (below microSD card)




Caution: **Power off** the tablet before removing the SIM card or microSD card. If you remove a card while the tablet is **powered on**, it will automatically power off, and you may lose data.

When the tablet is **powered off** and the battery is charging, the charging indicator lights white while the battery charges, then turns green when the battery is fully charged.

Note: The charging indicator does not light when you charge the battery when the tablet is **powered on**.

Note: The battery should only be replaced by a Motorola-approved service facility. Any attempt to remove or replace your battery may damage the product.

STARTUP

- 1 Press and hold Power/Lock  on the back of your tablet to turn it on.
- 2 If desired, change the language setting, then touch **Start**.
When you touch **Start**, your tablet attempts to activate your mobile service (if not already activated).
- 3 If you go on to Wi-Fi setup, you see a **Wi-Fi setup** screen. Connect to an existing network, add a new network, or skip Wi-Fi setup for now and set up later (see “Wi-Fi” on page 18).
- 4 Turn off Google™ location services (not recommended) or touch **Next**.
- 5 Follow the setup wizard to create or log in to your Google Account and go to the home screen.

Record your Google Account information for future reference.

Username: _____

Password: _____

Note: If you have an existing Gmail account, your contacts from that account are synced to your device. Whenever you select a contact from one group, the tablet shows contacts from every group.

SAVE THE DEVICE LABEL

Remove the device label from the back of your MOTOROLA XOOM and affix it below for safekeeping.



 
ATTACH LABEL ATTACH LABEL
LABEL ATTACH LABEL ATTACH
ACH LABEL ATTACH LABEL AT
L ATTACH LABEL ATTACH LAB
H LABEL ATTACH LABEL ATTAC
TTACH LABEL ATTACH LABEL
BEL ATTACH LABEL ATTACH L
CH LABEL ATTACH LABEL ATT
L ATTACH LABEL ATTACH LAB
LABEL ATTACH LABEL ATTACH
TACH LABEL ATTACH LABEL A
EL ATTACH LABEL ATTACH LA

BASICS

TOUCH TIPS

It's all in the touch:

- **Touch:** Choose an icon or option.
- **Touch & Hold:** Open options.
- **Drag:** Scroll or move slowly.
- **Flick:** Scroll or move quickly.
- **Pinch-to-zoom:** Get a closer look at Google Maps™, web pages, or photos.

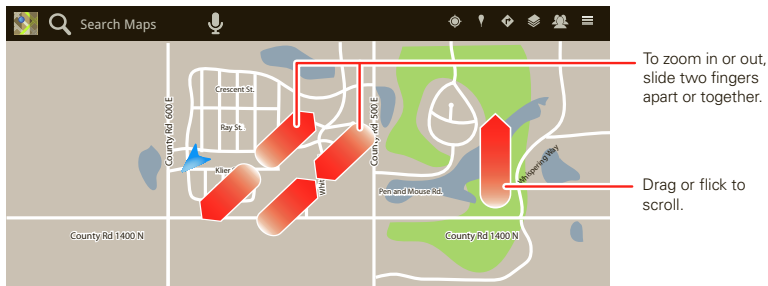


Tip: When using a mouse with the device, you can also double-click to zoom.


KEY TIPS

Home: Touch Home  to return to the home screen.

Back: Touch Back  to return to the previous screen.

Recent apps: Touch  to see recent apps. Touch a displayed app to open it.

Search: Touch  for a text search. Touch  for a voice search.

Menu: Touch Menu  to see a menu for the screen you're on.

HOME SCREEN

 
Your home screen is your personally designed launch pad. You'll see the home screen when you turn on the tablet or touch Home  from a menu.

Touch for text search.

Search by voice.

Open apps menu.

Home Screen Customization
Add widgets, shortcuts, & more.

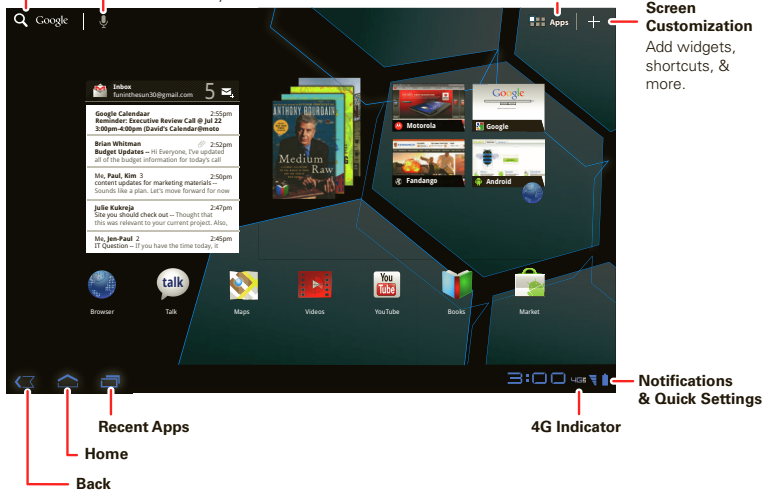


Note: This home screen display is simulated. Actual displays may vary.

The icons at the bottom of the screen show tablet status and also alert you to new emails and events. To see email or meeting reminder, touch the notification panel and touch the notification.

USE & CHANGE YOUR HOME SCREEN

On your home screen, *shortcuts* are icons that open your favorite apps, Web bookmarks, music playlists, and more. *Widgets* show you the date, updates, and more. The Calendar widget is an example of a scrollable widget—you can scroll through your calendar within the widget itself, on the home page, without opening the calendar app. The Books widget is an example of a stacked widget—you can flick through your content within the widget itself, on the home screen, without opening the Books app.

Flick left and right to see more home screen panels of shortcuts and widgets.

- **Customize:** To add widgets, app shortcuts, wallpapers, and more to your home screen, touch  at the top of the screen.



Touch to customize home screen.

- **Resize widget:** Touch and hold the widget, then let go. Once the highlighted frame appears drag one of the pointers to resize the frame.





Touch & hold, then release. Drag a pointer to resize.

NOTIFICATIONS

The notification panel at the bottom of the home screen contains icons that tell you about new messages, available app downloads, network signal strength, and other tablet status indicators. Touch an individual icon to see that email, meeting reminder, or other notification. Or, touch the digital time display to open the entire notification panel to see all new message notifications, status icons, and other useful data.

SEARCH

The search window on your home screen gives you two search options. For a text search, touch the search window, enter your keyword(s), then touch . To search by voice, touch  and speak your keyword(s) when prompted.

SETTINGS

Open the Quick Settings Menu to change settings for brightness, sound, screen orientation, airplane mode, network, and notifications.

 
- 1 Touch the clock at the bottom of the home screen.



- 2 Touch .




- 3 Change a quick setting, or touch  **Settings** to see all tablet settings.

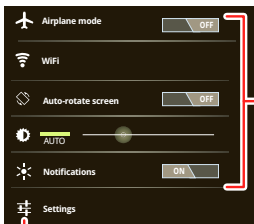

Touch to change quick settings.

Touch to see & modify all tablet settings.

 - 4 Touch a setting on the left to see the options on the right.

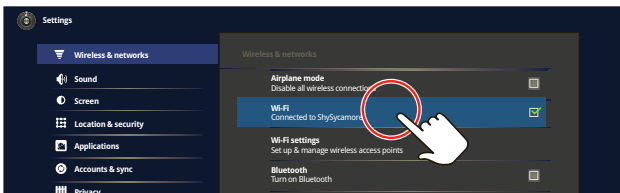

Tip: You can also go to tablet settings by touching  **Apps** >  **Settings**.

APP MENU




Touch  **Apps** from the home screen to see your tablet's apps.



To close the app tray, touch Home  or Back .

KEY TIPS

SLEEP & WAKE UP

Put the touchscreen to sleep by pressing Power/Lock . To wake up the touchscreen, just press the Power/Lock  again, then drag  across the screen.







CHANGE VOLUME

Press the volume keys to adjust the volume.

SET UP EMAIL

The first time you turned on your tablet (see page 7), you may have logged in to your Google Account.

You can add other email accounts:

- If you want to set up additional Google Accounts, touch  **Apps** >  **Settings** > **Accounts & sync** > **Add account**.
- If you want to set up other email accounts, touch  **Apps** >  **Email**, then follow the step-by-step instructions to set up a POP3, IMAP, or corporate account.



WANT MORE?

More help, more accessories, more free stuff. We're here to help.

- **Answers:** To download a Help Center app for your tablet, go to www.motorola.com/xoomhelp and follow the on-screen instructions.
- **Support:** Software updates, PC software, user guides, online help, and more at www.motorola.com/myxoom.
- **Accessories:** Find accessories for your tablet at www.motorola.com/products.
- **Join us:** Get the latest news, apps, tips & tricks, videos and so much more—join us on:

 **YouTube™** www.youtube.com/motorola

 **Facebook** www.facebook.com/motorola

 **Twitter** www.twitter.com/motomobile

MANAGE CONTENT

CONNECTIONS

MOTOROLA XOOM gives you many ways to connect with your world.

4G LTE CONNECTION

Your MOTOROLA XOOM uses the 4G LTE mobile network wherever it's available. You'll know you're connected when you see **4G** on the screen.

WI-FI

It's easy to connect to a Wi-Fi network. Newly added proxy support makes sure you stay connected.

 
- 1 Touch the clock at the bottom of the screen.



- 2 Touch  Settings




3 Touch Wi-Fi.

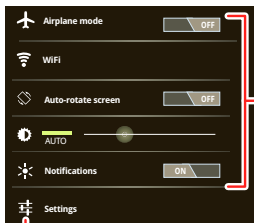

Touch to change quick settings.

Touch to see & modify all tablet settings.

 4 In **Wireless & networks**, select **Wi-Fi**.

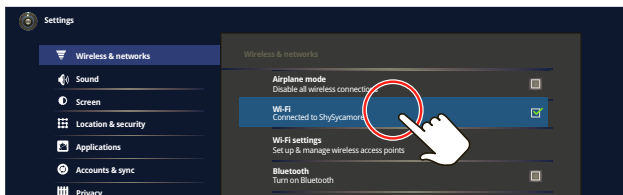

Your tablet scans for and shows all available Wi-Fi networks.

USB CONNECTION

You can transfer HD video, music, pictures, photos and other media content between your tablet and a computer. A USB connection makes it easy. Use the USB cable that came with your tablet to make the connection and do the following:

- **Microsoft™ Windows™ XP, Windows Vista, and Windows 7**—On your computer, press Start, open your list of programs, and select Windows Explorer. Then drag and drop files from your computer to your tablet.

- **Apple™ Macintosh™**—Use Android File Transfer. (You can download it from android.com/filetransfer. Requires Mac OS x 10.5 or later.)

HDMI®

You can snap photos and capture videos, then sit back and enjoy them on your HDTV at home. Your tablet's HDMI port lets you connect it to other HDMI devices.

BLUETOOTH® WIRELESS

With Bluetooth wireless technology, you can enjoy your music on a Bluetooth-enabled stereo headset, or connect to a Bluetooth keypad and mouse for quick and easy text entry. With newly added Bluetooth support for Google Talk, you can chat hands-free using a Bluetooth headset or car kit.

CONTENT BACKUP

You can choose to back up some of your data, such as bookmarks, user dictionary, Wi-Fi passwords, and other settings, to your Google Account on Google servers. Some third-party application may also take advantage of this feature. If you get a new tablet, your tablet is lost or stolen, or if you reinstall an application, you can restore your settings and other data.

 
APPS & FEATURES

POWERFUL APPS

Surf, watch, play—enjoy an out of this world experience with these features, and more:

- Cinematic HD movie playback—Watch HD movies in HD, on your tablet's huge 10.1-inch widescreen display. Thousands of movie titles are now available for rental from Android Market.
- Games—Gaming reaches a whole new level—rich graphics on an HD display, an accelerometer, and a gyroscope. Your tablet delivers it all at lightning-fast speeds with its powerful dual-core processor and 32GB of RAM.
- Google eBooks™—Get your favorite books and read them right on your tablet.
- Android Market™—Android Market is your one-stop shop for movies, books, apps, and games.
- Desktop-like tabbed browsing—Open multiple tabs in a single browser window, and switch between them in a flash.
- Google Talk™—Google Talk now has voice and video capabilities, allowing you to 5chat "face-to-face" with any Google Talk enabled device over Wi-Fi, 3G, or 4G LTE. You can even chat handsfree with a Bluetooth headset or car kit.
- Google Maps™—Of course you can still find local businesses, view maps, and get driving directions. Some new additions make Google Maps really stands out from the rest. Street View zooms you all the way in—you're virtually standing on the street. 3D building outlines give you fantastic detail to the central areas of many cities.
- Photos and Videos—Snap killer photos with a 5MP camera. Capture videos like never before—in amazing 720p HD—with the fully functioning HD camcorder. Choose the lens

on the rear of the tablet or, for self-portraits, the lens on the front. From the home screen, touch **Apps** > **Camera**.

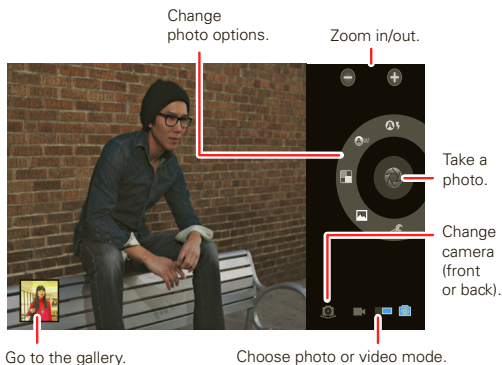

You can also **view and import photos** from a digital camera with a USB connection and Picture Transfer Protocol.

- Google DRM/HDCP—Google's Widevine DRM lets you view locked online video content, and HDCP lets you pipe it to your TV.


Note: For more information on your tablet's apps and features, see the user guide.

VERIZON SAFEGUARDS



Your family; your call. Verizon safeguards give you peace of mind with Family Locator, Content Filters, Spam Controls, Usage Controls, and more. Go to verizonwireless.com/familylocator, verizonwireless.com/spamcontrols, or verizonwireless.com/usagecontrols.

TROUBLESHOOTING

FORCED REBOOT

In the unlikely event that your device becomes unresponsive, try a forced reboot: Press and hold both Power/Lock  and the up-volume key for three seconds.

RESET

To reset your tablet to factory settings and erase all the data on your device, from the home screen, touch the lower right corner of the screen, then touch  **Apps** >  **Settings** > **Privacy** > **Factory data reset**.

Warning: All data on your tablet will be deleted.

TOTAL EQUIPMENT COVERAGE

Sign up for Total Equipment Coverage, so that if your tablet breaks, gets lost or stolen, or malfunctions after the manufacturer's warranty expires, you're covered. Total Equipment Coverage combines Verizon Wireless Extended Warranty and Asurion's Wireless Device Protection. For details, go to verizonwireless.com/equipmentprotection.

Copyright & Trademarks

Motorola Mobility, Inc.
Consumer Advocacy Office
600 N US Hwy 45
Libertyville, IL 60048

www.motorola.com

Note: Do not ship your product to the above address. If you need to return your product for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at:

1-800-734-5870 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

Note: The images in this guide are examples only.

MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. Google, the Google logo, Google Maps, Google Talk, Google Latitude, Gmail, YouTube, Picasa, Android and Android Market are trademarks of Google, Inc. All other product or service names are the property of their respective owners.

© 2011 Motorola Mobility, Inc. All rights reserved.

Caution: Motorola does not take responsibility for changes/modification to the transceiver.

Product ID: MOTOROLA XOOM™ (MZ602)

Manual Number: 68014997001-A



For an interactive guide to your new wireless device,
go to verizonwireless.com