

Kitchen Classics

by **WARING**[®]

PB/MB Series



Blenders

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

TABLE OF CONTENTS

Important Safeguards	1
Warranty	2
Important UK Wiring Instructions	3
Important Hot Blending Instructions	3
Operating Instructions	4
How To Clean Containers With Nonremovable Blades	5
How To Clean Unit Base	5

IMPORTANT: Always unplug the Waring® Blender from outlet when disassembling and assembling.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following.

- 1. READ ALL INSTRUCTIONS:**
2. To protect against risk of electrical shock, do not put appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate the Waring® Blender or any other electrical equipment with a damaged cord or plug, or after the unit malfunctions, or is dropped or damaged in any manner. Return it to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of attachments, including canning jars, not recommended or sold by Waring may cause fire, electric shock, or injury.
8. Do not use outdoors.

9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Keep hands and utensils out of jar while blending to prevent the possibility of severe personal injury and/or damage to the blender. A rubber spatula may be used, but must be used only when the blender is not running.
11. Blades are sharp. Handle carefully.
12. To avoid injury, never place blade assembly on the base without container properly attached.
13. Always operate blender with cover in place.
14. When blending hot liquids, remove center piece of two piece cover. Limit amount of material processed to one cup (8 oz.). Always begin processing at the lowest speed setting. Keep hands and other exposed skin away from the lid opening to prevent possible burns. See Hot Blending instructions.
15. Screw on container bottom firmly. Injury can result if moving blades accidentally become exposed.
16. Do not leave blender unattended while it is running.

SAVE THESE INSTRUCTIONS

WARRANTY

For Waring® products sold outside of the U.S. and Canada, the warranty is the responsibility of the local importer or distributor. This warranty may vary according to local regulations.

WARNING: This warranty is VOID if appliance is used on Direct Current (D.C.).

IMPORTANT UK WIRING INSTRUCTIONS

This appliance is supplied with a fitted plug; however, for your information, should you wish to change the plug, the wires in the mains lead of the appliance are colored in accordance with the following code:

Green and Yellow:	Earth
Blue:	Neutral
Brown:	Live

Warning: The severed plug should be disposed of to avoid a possible shock hazard and should never be inserted into a 13A socket. As the colors of the mains lead of this appliance may not correspond to the colored markings identifying the terminals in your plug, proceed as follow: the wire which is colored Green & Yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol $\underline{\underline{\perp}}$ or colored Green or Green & Yellow. The wire which is colored Blue must be connected to the terminal which is marked with the letter N or colored Black or Blue. The wire which is colored Brown must be connected to the terminal which is marked with the letter L, or colored Red or Brown.

Note: If the terminals of the plug are unmarked or if you are in any doubt, consult a qualified electrician. If a BS1563 Fused Plug is used, this must be fitted with the correct amperage fuse - 3Amp fuse.

IMPORTANT: HOT BLENDING INSTRUCTIONS

To minimize possibility of scalding when blending hot ingredients, the following precautions and procedures must be observed:

1. Limit amount of material processed to one cup (8 oz.) (0.236 liters).
2. Completely remove the lid insert of the two piece container lid before starting motor. (This will allow

venting of the rapidly heated and expanding air present inside container when blender is running.)

3. Start blending on low speed.
4. While blender is running, up to 1½ cups (0.354 liters) of additional liquid can be added. Pour liquid slowly through the opening in the lid.

OPERATING INSTRUCTIONS

1. When placing the container on the unit base, make sure that the unit is turned 0 “OFF” and is at a complete stop. Do not put the container on or take it off while the unit is running. Doing so may damage the drive shaft or blade assembly. For best results, do not fill container above 3 cup level.
2. Be sure the switch is in the 0 “OFF” position and plug the blender into a convenient outlet.
3. The Waring® Blender is ideal for blending ice drinks. A hint when mixing ice drinks: keep the blades in the container covered with liquid, turn the unit on, remove the lid insert on top of the jar lid, and feed the ice cubes slowly into the jar. **NOTE: Never use containers other than Waring® Blender containers with your Waring unit.**
4. Put ingredients into container, then put on cover. Always add liquid ingredients first, unless otherwise specified in recipe. Always hold container with one hand while blending.
5. **CAUTION:** To avoid damage to your blender, do not run the blender if the blades become blocked or jammed during use. Turn the blender 0 “OFF” immediately, remove the container from the blender base and dislodge the material that is blocking or jamming the blade.

HOW TO CLEAN CONTAINERS WITH NONREMOVABLE BLADES

1. Remove the container from the unit base. Remove the lid. Add a cup of cleaning solution, made by adding a few drops of dishwashing detergent to 1 cup of cool water, to the container. Scrub and flush out the interior of the container and the lid to dislodge and remove as much residue as possible. Empty the container.
2. Add more cleaning solution. Put lid on container, place container on unit base, and run on high speed for two minutes.
3. Empty the container and repeat as above, using clean rinse water in place of cleaning solution. Empty, rinse and dry, prior to storing unit.
4. Wash and rinse container prior to initial use, and immediately after each use.

HOW TO CLEAN UNIT BASE

1. To clean the unit base, unplug the power cord. Wipe the exterior surfaces with a soft cloth or sponge dampened with cleaning solution. Rinse with clean water. Do not immerse the base in cleaning solution or water. Wipe the base with dry towel.

For after sales service in the UK and the Republic of Ireland, please contact:

**New Classics Ltd.
14 Market Place
Hatfield, Herts. AL10 OLN
Tel. 01707 265 465**



Waring Consumer Products Division of Conair Corporation
150 Milford Road
East Windsor, NJ 08520

www.waringproducts.com

Printed in USA
PB/MB IB

RV01 0406 027123