 




***USE AND MAINTENANCE
INSTRUCTIONS FOR BUILT-IN OVENS***

Model No: ES9060DSXS



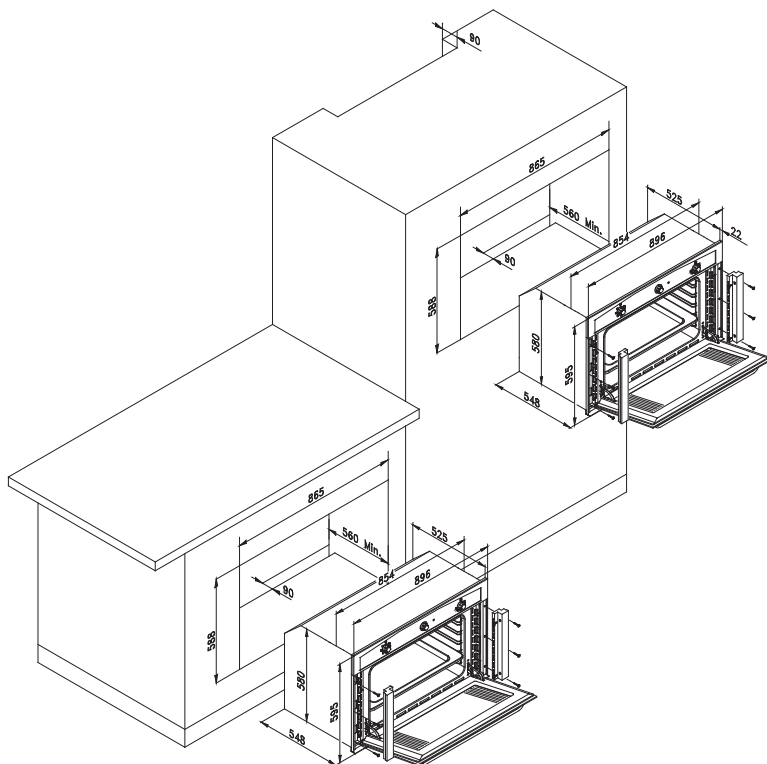

EN	The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.
DE	Dieses Produkt darf am Ende seiner Lebensdauer nicht über den normalen Haushaltsabfall entsorgt werden, sondern muss an einem Sammelpunkt für das Recycling von elektrischen und elektronischen Geräten abgegeben werden. Das Symbol auf dem Produkt, der Gebrauchsanleitung oder der Verpackung weist darauf hin. Die Werkstoffe sind gemäß ihrer Kennzeichnung wiederverwertbar. Mit der Wiederverwendung, der stofflichen Verwertung oder anderen Formen der Verwertung von Altgeräten leisten Sie einen wichtigen Beitrag zum Schutz unserer Umwelt. Bitte erfragen Sie bei der Gemeindeverwaltung die zuständige Entsorgungsstelle.
IT	Il simbolo sul prodotto o sulla confezione indica che il prodotto non deve essere considerato come un normale rifiuto domestico, ma deve essere portato nel punto di raccolta appropriato per il riciclaggio di apparecchiature elettriche ed elettroniche. Provvedendo a smaltire questo prodotto in modo appropriato, si contribuisce a evitare potenziali conseguenze negative per l'ambiente e per la salute, che potrebbero derivare da uno smaltimento inadeguato del prodotto. Per informazioni più dettagliate sul riciclaggio di questo prodotto, contattare l'ufficio comunale, il servizio locale di smaltimento rifiuti o il negozio in cui è stato acquistato il prodotto.
FR	Ce symbole figure sur le produit ou sur son emballage en application de la directive européenne 2002/96/CE sur les Déchets d'Équipement Électrique et Électronique (DEEE). Cette directive sert de règlement cadre à la reprise, au recyclage et à la valorisation des appareils usagés dans toute l'Europe. Ce produit doit donc faire l'objet d'une collecte sélective. Lorsque vous ne l'utiliserez plus, remettez-le à un service de ramassage spécialisé ou à une déchèterie qui traite les DEEE ; vous contribuerez ainsi à éviter des conséquences néfastes pour la santé et l'environnement. Pour tout renseignement sur la mise au rebut et le recyclage de ce produit, veuillez contacter la mairie ou le service de la propreté de votre commune, ou encore le magasin dans lequel vous l'avez acheté.
ES	Este aparato lleva el marcado CE en conformidad con la Directiva 2002/96/EC del Parlamento Europeo y del Consejo sobre residuos de aparatos eléctricos y electrónicos (RAEE). La correcta eliminación de este producto evita consecuencias negativas para el medioambiente y la salud. El símbolo en el producto o en los documentos que se incluyen con el producto, indica que no se puede tratar como residuo doméstico. Es necesario entregarlo en un punto de recogida para reciclar aparatos eléctricos y electrónicos. Deséchelo con arreglo a las normas medioambientales para eliminación de residuos. Para obtener información más detallada sobre el tratamiento, recuperación y reciclaje de este producto, póngase en contacto con el ayuntamiento, con el servicio de eliminación de residuos urbanos o la tienda donde adquirió el producto.
PT	O símbolo no produto ou na embalagem indica que este produto não pode ser tratado como lixo doméstico. Em vez disso, deve ser entregue ao centro de recolha selectiva para a reciclagem de equipamento eléctrico e electrónico. Ao garantir uma eliminação adequada deste produto, irá ajudar a evitar eventuais consequências negativas para o meio ambiente e para a saúde pública, que, de outra forma, poderiam ser provocadas por um tratamento incorrecto do produto. Para obter informações mais pormenorizadas sobre a reciclagem deste produto, contacte os serviços municipais locais, o centro de recolha selectiva da sua área de residência ou o estabelecimento onde adquiriu o produto.
NL	Het symbool op het product of op de verpakking wijst erop dat dit product niet als huishoudafval mag worden behandeld. Het moet echter naar een plaats worden gebracht waar elektrische en elektronische apparatuur wordt gerecycled. Als u ervoor zorgt dat dit product op de correcte manier wordt verwijderd, voorkomt u mogelijk voor mens en milieu negatieve gevolgen die zich zouden kunnen voordoen in geval van verkeerde afvalbehandeling. Voor meer details in verband met het recyclen van dit product, neemt u het best contact op met de gemeentelijke instanties, het bedrijf of de dienst belast met de verwijdering van huishoudafval van de winkel waar u het product hebt gekocht.
RO	Simbolul de pe produs sau de pe ambalaj indica faptul ca produsul nu trebuie aruncat impreuna cu gunoiul menajer. Trebuie predat la punctul de colectare corespunzator pentru reciclarea echipamentelor electrice si electronice. Asigurandu-va ca alti eliminati in mod corect produsul, ajutati la evitarea potentialelor consecinte negative pentru mediul inconjurator si pentru sanatatea persoanelor, consecinte care ar putea deriva din aruncarea necorespunzatoare a acestui produs. Pentru mai multe informatii detaliate despre reciclarea acestui produs, va rugam sa contactati biroul local, serviciul pentru eliminarea deseurilor sau magazinul de la care l-ati achizitionat.
SLO	Simbol na izdelku ali njegovi embalaži označuje, da z izdelkom ni dovoljeno ravnati kot z običajnimi gospodinjstskimi odpadki. Izdelek odpeljite na ustrezno zbirno mesto za predelavo elektricne in elektronske opreme. S pravičnim načinom odstranjevanja izdelka boste pomagali preprečiti morebitne negativne posledice in vplive na okolje in zdravje ljudi, ki bi se lahko pojavile v primeru nepravilnega odstranjevanja izdelka. Za podrobnejše informacije o odstranjevanju in predelavi izdelka se obrnite na pristojen mestni organ za odstranjevanje odpadkov, komunalno službo ali na trgovino, v kateri ste izdelek kupili.
PL	Symbol na produkcie lub na opakowaniu oznacza, że tego produktu nie wolno traktować tak, jak innych odpadów domowych. Należy oddać go do właściwego punktu skupu surowców wtórnych zajmującego się złomowaniem sprzętem elektrycznym i elektronicznym. Właściwa utylizacja i złomowanie pomaga w eliminacji niekorzystnego wpływu złomowanych produktów na środowisko naturalne oraz zdrowie. Aby uzyskać szczegółowe dane dotyczące możliwości recyklingu niniejszego urządzenia, należy skontaktować się z lokalnym urzędem miasta, służbami oczyszczania miasta lub sklepem, w którym produkt został zakupiony.
SK	Symbol na výrobku alebo na jeho obale znamená, že s výrobkom sa nesmie zaobchádzať ako s domovým odpadom. Namiesto toho ho treba odovzdať v zbernom stredisku na recykláciu elektrických alebo elektronických zariadení. Zabezpečte, že tento výrobok bude zlikvidovaný správnym postupom, aby ste predišli negatívnym vplyvom na životné prostredie a ľudské zdravie, čo by bolo spôsobené nesprávnym postupom pri jeho likvidácii. Podrobnejšie informácie o recyklácii tohto výrobku získate, ak zavoláte miestny úrad vo Vašom bydlisku, zberné suroviny alebo obchod, v ktorom ste výrobok kúpili.
CZ	Symbol na výrobku nebo jeho balení udává, že tento výrobek nepatří do domácího odpadu. Je nutné odvézt ho do sberného místa pro recyklaci elektrického a elektronického zařízení. Zajištěním správné likvidace tohoto výrobku pomůžete zabránit negativním důsledkům pro životní prostředí a lidské zdraví, které by jinak byly způsobeny nevhodnou likvidací tohoto výrobku. Podrobnější informace o recyklaci tohoto výrobku zjistíte u příslušného místního úřadu, služby pro likvidaci domovního odpadu nebo v obchode, kde jste výrobek zakoupili.
SV	Symbolen på produkten eller emballaget anger att produkten inte får hanteras som hushållsavfall. Den skall i stället lämnas in på uppsamlingsplats för återvinning av el- och elektronikkomponenter. Genom att säkerställa att produkten hanteras på rätt sätt bidrar du till att förebygga eventuellt negativa miljö- och hälsoeffekter som kan uppstå om produkten kasseras som vanligt avfall. För ytterligare upplysningar om återvinning bör du kontakta lokala myndigheter eller sophämningsstjänst eller affären där du köpte varan
NO	Symbolen på produktet eller på emballasjen viser at dette produktet ikke må behandles som husholdningsavfall. Det skal derimot bringes til et mottak for resirkulering av elektrisk og elektronisk utstyr. Ved å sørge for korrekt avhending av apparatet, vil du bidra til å forebygge de negative konsekvenser for miljø og helse som gal håndtering kan medføre. For nærmere informasjon om resirkulering av dette produktet, vennligst kontakt kommunen, renovasjonsselskapet eller forretningen der du anskaffet det.

DECLARATION OF CE COMPLIANCE

This appliance is in compliance with the following European Directives:

93/68 : General regulations

2006/95/CE : Concerning low tensions

2004/108/CE : Electromagnetic compatibility

CE Regulation n° 1935/2004: this appliance is suitable to come in contact with food products.

GENERAL WARNINGS

This manual is an integral part of the appliance.

It is necessary to keep it for the life cycle of the oven and to read it carefully for the installation, use, maintenance, cleaning and handling of the appliance.

Unplug the appliance before undertaking any sort of intervention on it.

Attention: earth connection is required by law.

Packaging materials (sheets, polystyrene) may be hazardous to children (danger of suffocation). Keep packaging materials out of the reach of children.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Heat forms during cooking and the appliance door, especially if made in glass, can become very hot. To prevent burns, do not touch the door and keep children away.

This appliance was designed for home use only.

The manufacturer will not be held liable for any damage to persons or property caused by improper installation, or by improper, wrong or senseless use.

The manufacturer reserves the right to make any changes to the product which are felt to be useful or necessary without any advance notice.

Do not carry out any modifications, tampering or repair attempts, especially with tools such as screwdrivers on the inside or outside of the appliance.

Repair work, especially on the electrical parts, must be performed only by specialized personnel.

Improper repair work can cause serious accidents, damage the appliance and equipment as well as impair proper operation.

In case of a failure in operation or an indispensable repair job, ask for the intervention of the customer technical service centre.

If the appliance shows visible signs of damage, do not use it; unplug it and contact the assistance service.

The oven must be unplugged as soon as an operating problem is discovered.

Make sure the power cord of the appliance is not crushed by the oven door as this may damage the electrical insulation.

If the power cord has been damaged, it must be replaced by the technical service centre in order to avoid the creation of hazardous situations.

Before closing the oven door, make sure there are no foreign bodies or pets inside the oven.

The oven gets extremely hot during operation and remains hot for a long time, even after it has been turned off, then cools down very slowly until reaching room temperature. Wait for a suitable period of time before carrying out any work such as cleaning.

Do not place heat-sensitive or flammable materials in the oven such as detergents, oven sprays, and so on. Superheated grease and oil may easily catch fire. The rack, the plates and the cooking containers become extremely hot.

Use insulated glove or pot holders.

Never use water in an attempt to extinguish burning grease or oil (there is the danger of explosion). Suffocate the fire with wet cloths.

When using and maintaining the oven, be careful not to get fingers caught in the door hinges to avoid crushing or other injuries. This is specially important when children are around.

Never clean the appliance with high pressure water or steam cleaning equipment. Do not use the appliance to heat the room.

If the door is open there is the hazard of tripping or crushing the fingers; leave the door open only in an ajar position.

Do not sit or lean on the door and do not use it as a work surface.

 
For maintenance, moving, installation and cleaning of the appliance use suitable prevention and protection equipment (gloves, etc.).

Lifting and moving of appliances weighing more than 25 kg must be carried out using proper equipment, or by two persons, in order to avoid risks or injuries.

CONNECTION TO MONO-PHASE ELECTRICITY

Ovens equipped with tri-polar power supply cables are constructed to function with alternating current, and with the voltage and frequency indicated on the technical label on the appliance.

Assembly of the power cable

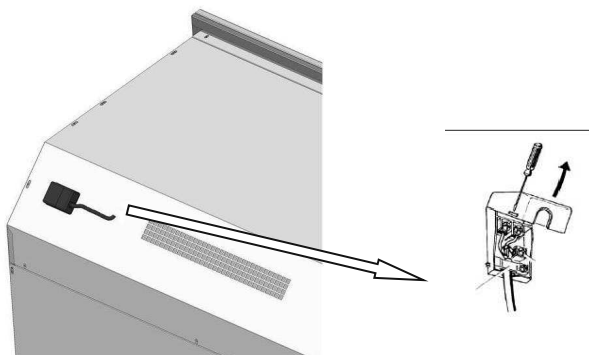

1. Open the terminal board by placing a screwdriver under the side flaps on the cover, pull and then open the cover (see the figure).
2. Install the power supply cable, unscrew the screws on the cable grip and the three screws on contacts L-N- and then attach the wires under the screw heads respecting the colours:

BLUE	- NEUTRAL (N)
BROWN	- LIVE (L)
YELLOW-GREEN	- EARTH (\perp)

3. Attach the cable to the appropriate cable holder.
4. Close the terminal board cover.

Attaching the power supply cable to the mains

For direct connection to the mains power, it is necessary to use a device that ensures that the mains power is disconnected, with a distance between contacts that allows complete disconnection in compliance with surge category III and installation regulations.

Assemble a standard plug for the capacity indicated on the rating label.

The power supply cable must be positioned in such a way that it does not exceed the room temperature by 50°C at any point.

The installer is responsible for correctly hooking-up the electricity connection and adherence to safety regulations.

Before hooking-up to the mains supply, make sure that:

- The socket has a ground connection and complies with legal regulations.
- The socket is able to withstand the oven's maximum power capacity indicated on the rating label (also see below).
- The power supply voltage is within the values listed in the electrical characteristics label (see below).
- The socket is compatible with the appliance plug.
- If this is not the case, replace the socket or the plug.
- Do not use extension cords or multiple sockets.
- Once the appliance is installed, the electrical cable and the electrical power socket must be easy to reach.
- The cable must not be bent or compressed.
- The cable must be periodically checked and only replaced by authorized technicians.

The Company declines all responsibility if these instructions are not adhered to.

Voltage and power supply frequency:

220-240 V~ 50/60 Hz

Replacement of the power cable:

If the power cable needs to be replaced, use cables of the following type only:

- H05 RR-F
- H05 V2V2-F (T90)

which are suitable for the operating capacity and temperature. The green-yellow ground cable must be longer than the other two conductors by approximately 2cm.

INSTALLATION

Important: any adjustments, maintenance, etc. must be executed with the oven disconnected from electricity.

To guarantee proper operation of the built-in appliance, the furniture unit must have suitable characteristics:

- the panels adjacent to the oven must be constructed in heat resistant materials;
- in the case of veneered wood furniture units, the glue must be heat resistant to temperatures up to 100°C;

The oven must be located in a standard opening of 560mm, as shown in the first page of the booklet, whether under a counter or in a column position.

When inserting the oven into a column it is indispensable to ensure adequate ventilation by installing openings as illustrated in the figure.

The oven is secured to the furniture unit by four “A” screws located in the holes of the frame.


Make sure not to lift the oven by its door when inserting it; furthermore, do not place excessive pressure on the door when it is open.

Oven dimensions:


Height	mm 595
Width	mm 896
Depth	mm 547

ACCESSORIES

 Flat rack

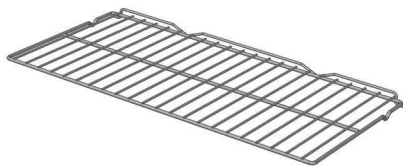

 For the safety of the user the rack has an indented part on both sides which stop it from accidentally coming off the runners (see the figure below). To take the rack out lift it up where the indents are.

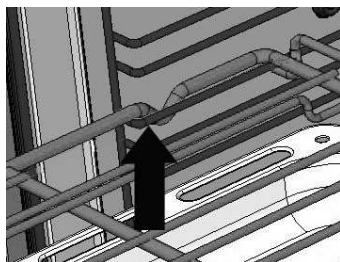


Standard drip pan

The drip pan can be used as a tray for cooking food in which case it goes on top of the rack (see figure (A)) - or as a drip pan when grilling or roasting on the spit; in this case the pan goes in the supports under the rack (B).

A)




 B)




PUTTING THE ACCESSORIES IN THE OVEN

 Position the accessories at the levels shown in the figure below.

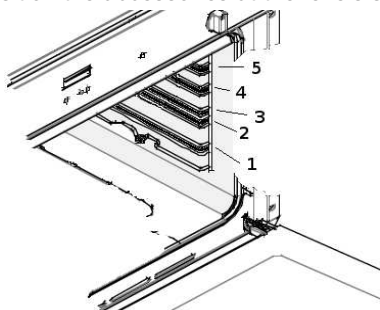

ELECTRONIC PROGRAMMER

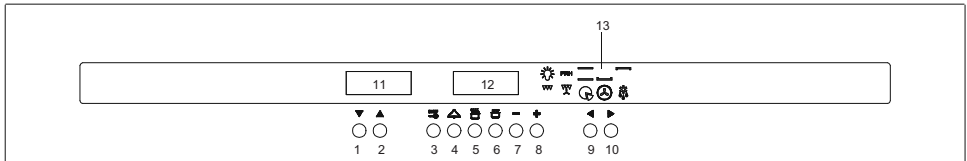 

KEYS DESCRIPTION

1. Decreases temperature
2. Increases temperature
3. ON/OFF and Control Lock Function
4. Minute minder
5. Cooking time
6. End time
7. Time setting
8. Time setting
9. Program setting
10. Program setting
11. Temperature display
12. Timer display
13. cooking function display

OPERATION

The timer flashes on the display when switched on for the first time or after a power cut, and the oven cannot be operated; follow the "Setting the time" procedure to start it.

SETTING THE TIME

touch together the **5.** and **6.** keys and then release them. Use the keys **7.** and **8.** to set the current hour. This operation must be completed in 3 sec. time, while the 2 dots on the timer display keep flashing.

Once you have completed the time setting, wait for the 2 dots stop flashing.

Please note: when the oven is off, the clock's luminous intensity decreases.

By touching any key, the clock returns to maximum luminosity for 60 seconds.

SOUND SIGNAL

The oven performs sound signals to show different functions, as for example the end of cooking. There are 3 different sound levels, which can be modified:

When the oven is switched off, touch the **7.** key, and with each touch the oven performs a different sound level; the last one performed will be automatically set.

SWITCHING ON THE OVEN

touch and release the **3.** key, then you will hear a sound signal.

The timer display will show **ON** , the bulb symbol lights on the display and the internal oven light turns on. Now you can proceed to set a cooking function.

MINUTE MINDER

The minute minder is only a counter of time and it is totally independent from any cooking function. Also it can be used when the oven is switched off.

To set the minute minder, switch on the oven by touching and releasing the **3.** key, then touch the **4.** key.

The display reset to zero and the 2 dots start flashing. Now you have 3 seconds of time to set the desired time up to 23h59m by using the **7.** and **8.** keys.

Once your set time has elapsed, you will hear a sound signal and the bell symbol flashes on the display.

To stop the sound and the flashing symbol just touch one of these keys: **4-5-6-7-8.**

MANUAL OPERATION WITH NO END OF COOKING TIME

Switch on the oven and select one of the available cooking function using the keys **9.** and **10.:** the oven will suggest a preset temperature, which can be changed by using the keys **1.** and **2.** The oven will start heating up to the preset temperature, and the centigrade degree " ° " symbol starts blinking to advise you of this operation.

When the requested temperature has been reached this symbol stops blinking and the oven beeps. To switch off the oven, just touch and release the **3.** key.

COOKING TIME SEMIAUTOMATIC OPERATION

It is recommended to set the duration of cooking

Switch on the oven by touching and releasing the **3.** key, then touch and release the **5.** key. On the timer display the symbol **A** appears. Set the desired time of cooking up to 10h and 00m with the keys **7.** and **8.**

Then you will hear a sound signal and the timer will show the current hour: you can select an available cooking function with the keys **9.** and **10.**

On the timer display the pot symbol appears.

The oven suggests a preset temperature for each function, which can be changed with the **1.** and **2.** keys. The oven starts working for the set time; when this time has elapsed the oven automatically stops cooking. You will hear a sound signal, while the temperature display and the cooking function display turn off, the timer display shows the current hour and the pot and **A** symbol are both blinking.

To stop the sound and exit to the program, just touch one of these keys: **4-5-6-7-8.**

The light bulb symbol appears on the function display and then the oven light turns on. Now the oven is ready to be programmed again; you can select a new cooking function or switch the oven off by touching and releasing the **3.** key.

END OF COOKING SEMIAUTOMATIC OPERATION

It is recommended to set the end of cooking time

Switch on the oven by touching and releasing the **3.** key, then touch and release the **6.** key. On the timer display the symbol **A** appears. Set the desired end of cooking time up to 23h and 59m with the **7.** and **8.** keys.

Then you will hear a sound signal and the timer will show the current hour: you can select an available cooking function with the **9.** and **10.** keys.

On the timer display the pot symbol appears.

The oven suggests a preset temperature for each function, which can be changed by using the **1.** and **2.** keys.

The oven starts cooking and when the fixed time has elapsed, it will automatically turn off.

At the end of the fixed cooking time, the oven beeps, the temperature display and the cooking function display turn off, the timer display shows the current hour and the pot and **A** symbols are both blinking.

To stop the oven beep or to delete the program just touch one of these keys:

4-5-6-7-8. The light bulb symbol appears on the function display and then the oven light turns on.

Now the oven is ready to be programmed again; you can select a new cooking function or switch the oven off by touching and releasing the **3.** key.

AUTOMATIC OPERATION

It is recommended to set the duration and the end of cooking

Switch on the oven by touching and releasing the **3.** key, then touch and release the **5.** key and set the cooking time with the **7.** and **8.** keys.

Then you will hear a sound signal and the timer will show the current hour.

Touch the **6.** key and set the end of cooking with the **7.** and **8.** key.

Another sound signal will be heard and the 2 dots stop blinking: this means the time has been set. On the display you will see the set time, the temperature and function. The oven light turns off.

Now select an available cooking function with the **9.** and **10.** keys.

The oven suggests a preset temperature for each function, which can be changed by using the **1.** and **2.** keys.

Once the 2 dots have stopped blinking, the oven begins the delayed start mode: automatically it will start for the requested duration and stop at the requested time.

When the oven is cooking, you see the selected temperature, the current hour and the selected function on the corresponding displays. The internal oven light turns off. However, both the temperature and the function can be changed by repeating the above mentioned instructions.

At the end of the program, the oven beeps, the temperature display and the cooking function display turn off, the timer display shows the current hour and the pot and **A** symbols are both blinking. To stop the sound signal or to delete the program just touch one of these keys: **4-5-6-7-8.**

The light bulb symbol appears on the function display and then the oven light turns on. Now the oven is ready to be programmed again; you can select a new cooking function or switch the oven off by touching and releasing the **3.** key.

AUTOMATIC AND SEMIAUTOMATIC COOKING RESTRICTIONS

The preheating (PRH) and defrosting functions are not compatible with the above mentioned automatic and semiautomatic operation.

- Once set the preheating or the defrosting function, it is not possible to set either the duration or the end of cooking.
- When programming the oven with the automatic operation, you cannot choose the preheating or the defrosting function.

DISPLAY SYMBOLS

Pot: when it lights up, it shows that a cooking function is on.

The pot does not light up when the oven light, preheating or defrosting function is enabled.

When the pot is flashing, it shows the end of a cooking time. During the delayed start phase, the symbol is off and lights up when the oven starts cooking.

A (automatic): when it lights up, it shows that a cooking time has been set; when flashing, it means the end of a cooking program.

Bell: when it lights up, it means that the minute minder is on.

When flashing, it means the end of the minute counting.

SELECTING THE COOKING TEMPERATURE

With the oven switched on, your favourite cooking temperature can be selected by using the **1.** and **2.** keys: the temperatures increase between the low and high setting with 5 degrees increase, which are shown on the temperature display.

Note: each cooking function has a preset temperature, which can be changed as described above.

SELECTING THE COOKING FUNCTION

With the oven switched on, the cooking function you need can be selected by using the **9.** and **10.** keys: the cooking function icons sequentially light up.

COOKING FUNCTIONS



OVEN LIGHT

The internal oven light turns on by touching and releasing the **3.** key.

To turn it off touch and release again the same key.

When selecting a cooking function, the oven light turns on and once the selected temperature is achieved, the light remains on for another 3 minutes.

During a cooking operation or defrosting it is possible to turn on the oven light by touching one of these keys: **4-5-6-7-8.**

The light remains on for 1 minute. Also it can be turned on when the Controls Lock function is active by touching one of these keys: **4-5-6-7-8.**

PRH PREHEATING

This function allows the oven to be rapidly preheated, before choosing a cooking function.

When this function is operating, a moving symbol appears on the temperature display.

The preheating ends when its preset temperature is achieved by the oven; this temperature cannot be changed.

At this point, the oven beeps, while the light symbol and the oven light turn on.

Now you can choose an available cooking function with the **9.** and **10.** keys.



TRADITIONAL COOKING

Provides traditional cooking with heat from the top and bottom elements.



LOWER ELEMENT MODE

This function is suitable for slow cooking or for warming up meals.



TOP ELEMENT MODE

This function is suitable for gentle cooking, browning or keeping cooked dishes warm.



GRILL HEATING ELEMENT

This function is suitable for grilling small quantities of food (toasts, hot sandwiches, etc.).



GRILL HEATING ELEMENT WITH FAN

This function is suitable for browning and sealing juices and flavour in foods, for example, steak, hamburgers, vegetables, etc.



PIZZA FUNCTION

This kind of cooking is ideal for pizza and vegetable dishes.



FAN OVEN MODE

Provides even heating inside the oven cavity and allows different dishes to be cooked at the same time on different levels.



DEFROST MODE

This function allows to reduce the defrost time for frozen food.

The fan runs without any heating of the oven.

On the temperature display appears the message **dEF**, which means this function is active.

Attention! When using GRILL functions (both static or ventilated) with the door closed, do not set temperature higher than 200°C

OTHER OPERATING FUNCTIONS

OVEN OFF MODE

When the oven is switched off, the temperature and program displays are off and the timer shows the current hour.



“CHILDREN CARE” – CONTROLS LOCK FUNCTION

This function can be enabled in any moment to prevent children to play with the oven. In particular, if this function is enabled with the oven turned off, it will not be possible to switch the oven on: to operate with the oven it is necessary to remove the lock.

To enable the locking function, hold down the **3.** key until the display shows the control lock symbol (about 5 sec.) followed by **ON**, then the display shows again the current hour.

Note: once you have done this operation, it cannot be set any program or cooking function, except for the setting of the minute minder. If the lock is enabled after any program or cooking function, it will only be possible to set the minute minder or to switch off the oven by touching and releasing the **3.** key.

By touching any other key, the control lock symbol appears on the display to remember you that the locking function is enabled.

The automatic or manual switching off of the oven will not disable the locking function.

To disable the locking function hold down the **3.** key until the control lock symbol appears on the display (about 5 sec.) followed by **OFF**, then the display shows again the current hour.

When the locking function is enabled it is not possible to switch it on with the **3.** key, but only to switch it off.

ON / OFF KEY

When the oven is switched on, the **3.** key (ON/OFF) lets you to switch off the oven whatever function is selected and in any moment.

To switch off the oven, just touch and release the key.

When switching off the oven, any cooking function or program is deleted.

To set a new cooking program, follow the corresponding instructions from the beginning.

When the oven is switched on and the locking function is enabled, you can switch off the oven just touching and releasing the **3.** key, but the locking function keeps active.

To disable the lock hold on the **3.** key for about 5 seconds until the control lock symbol appears on the display followed by **OFF**, then the display will show the current hour.

“ ° “ SYMBOL

This symbol appears on the temperature display and represents the centigrade degrees.

If the symbol is blinking it means the oven is heating up to reach the temperature that has been set.

If the symbol is permanently on it means that the set temperature has been reached.

TIMER RESET

With the oven switched on, it is possible to reset the settings of the timer by touching together the **5.** and **6.** keys.

Attention: the oven keeps switched on with the set function, and in manual operation. It is possible to set again a cooking program, or also to switch off the oven by touching and releasing the **3.** key.

REPLACING THE BULB

 
Important: Unplug the appliance from the electrical power supply.

Check that the oven is at room temperature, otherwise wait for it to cool.
Remove the side rack.

To replace the oven bulb **B**, remove the protective cover **A** by turning it anti-clockwise. Replace the burnt-out bulb and fit the protective cover back in place **A**.


Note: Use only 25 W, E-14 type, T 300°C bulbs.

The lamp used in this appliance is a 'special purpose lamp' intended only for the usage with this appliance; is not intended for household room illumination.

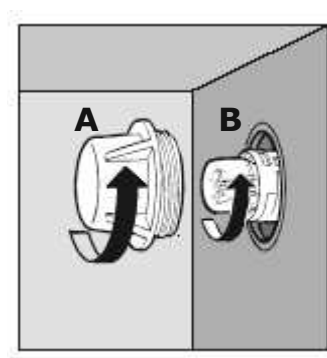

CLEANING OF THE SIDE RACKS

 To remove the side racks just gently press down on the particular A and B.
To reassemble, proceed in reverse.

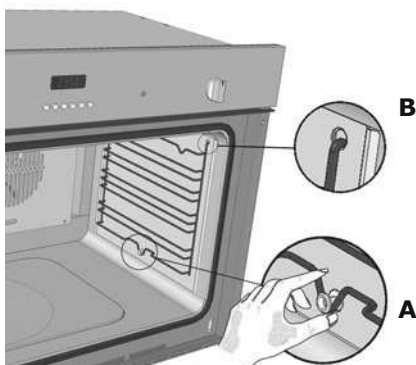

REMOVING THE OVEN DOOR

To aid cleaning and make access to the oven interior easier, both oven doors can be simply removed (see diagram). To make the cleaning operation easier, the door can be removed from the hinges as follows:

 
 
 
The hinges A are provided with two movable bolts B.

When bolt B is raised, the hinge is released from its housing. Having done this, the door must be lifted upwards and removed, sliding it towards the outside;

grip the sides of the door near the hinges when performing these operations.

To refit the door, firstly slide the hinges into their slots.

Before closing the door, remember to rotate the two movable bolts B used to hook the two hinges. Do not soak the door in water.

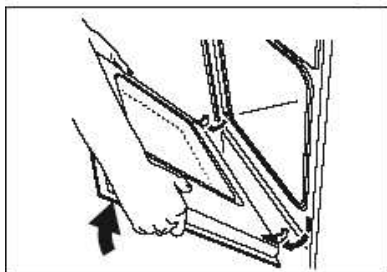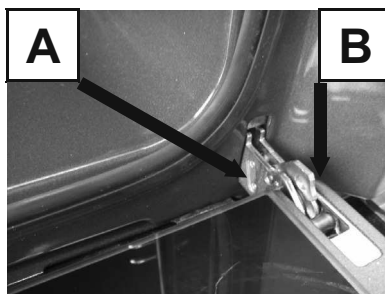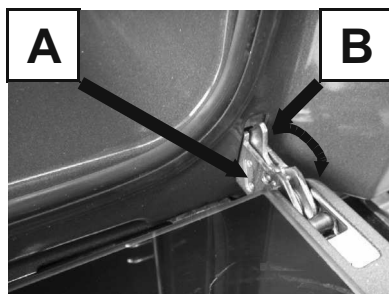

CLEANING AND MAINTENANCE

Important: before carrying out maintenance on the oven, it must always be unplugged from the power supply or disconnected from the mains via the electrical system master switch.

Wait for the appliance to cool down before proceeding with any cleaning operation.

Do not use abrasives, bleach or coarse cleaning material.

Never clean the appliance with high pressure water or steam cleaning equipment.

Do not use abrasive materials or substances for cleaning glass panels, as this may damage them

Wipe the inside of the oven by using a damp cloth with a diluted ammonia product; rinse and dry the oven carefully.

When cleaning the lower part of the oven, you are advised to remove any stains while the oven is still warm, but not hot – the longer you wait, the more difficult it will be to remove them.

For external parts cleaning, use a soft cloth and soapy water, rinse and dry carefully.

Wash the accessories in a dishwasher or in the sink, using an oven cleaner.

Warning: before proceeding with any operation as above, please use suitable prevention and protection equipment (gloves, etc.).

