



**BV13A Built under
freezer**

Instruction manual

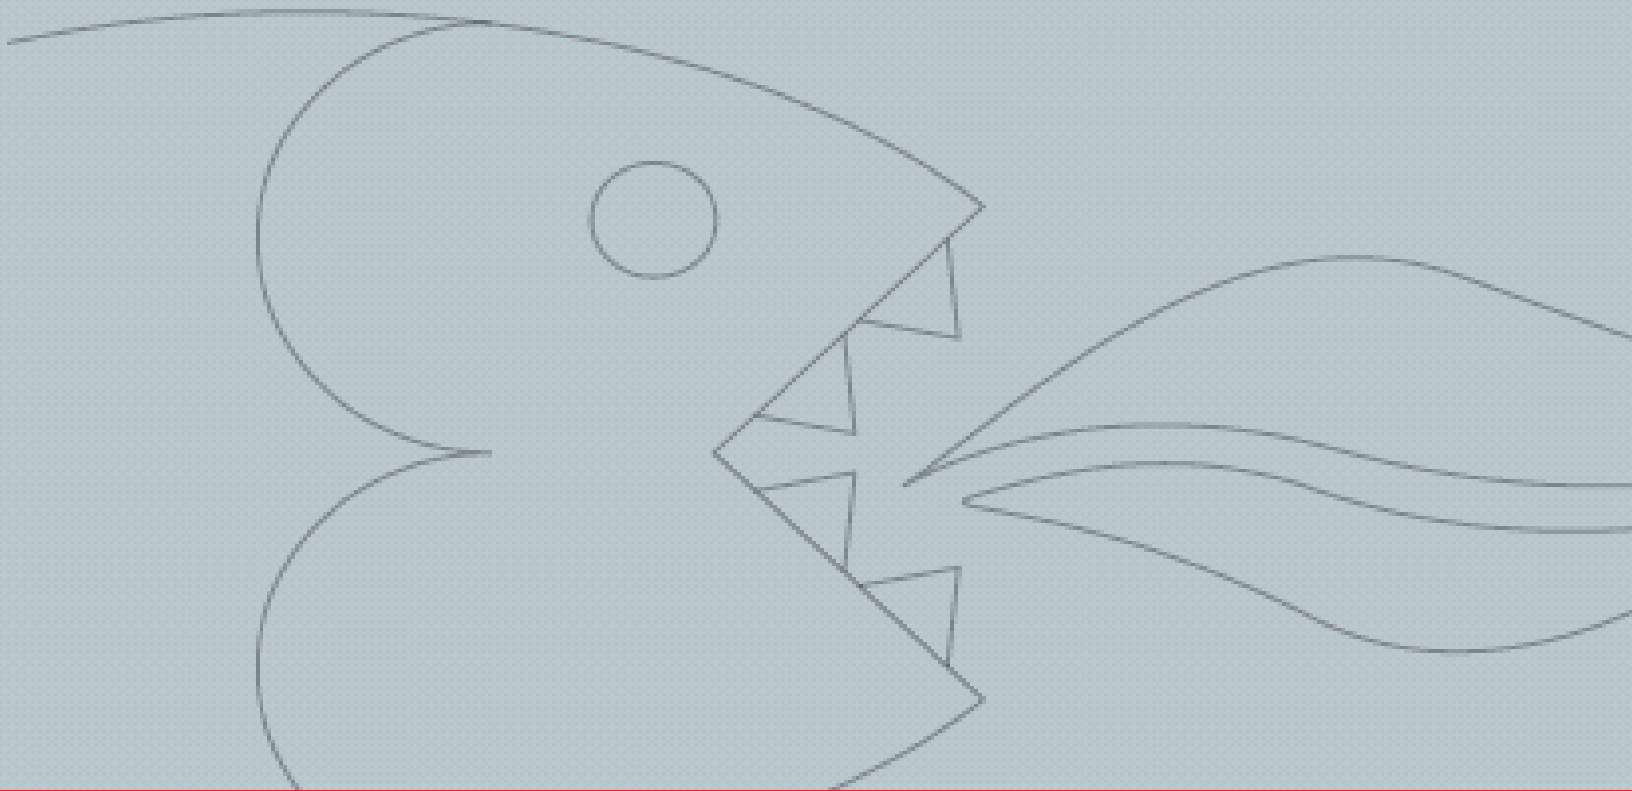

USER MANUAL FOR YOUR BAUMATIC

BV13A Built under freezer

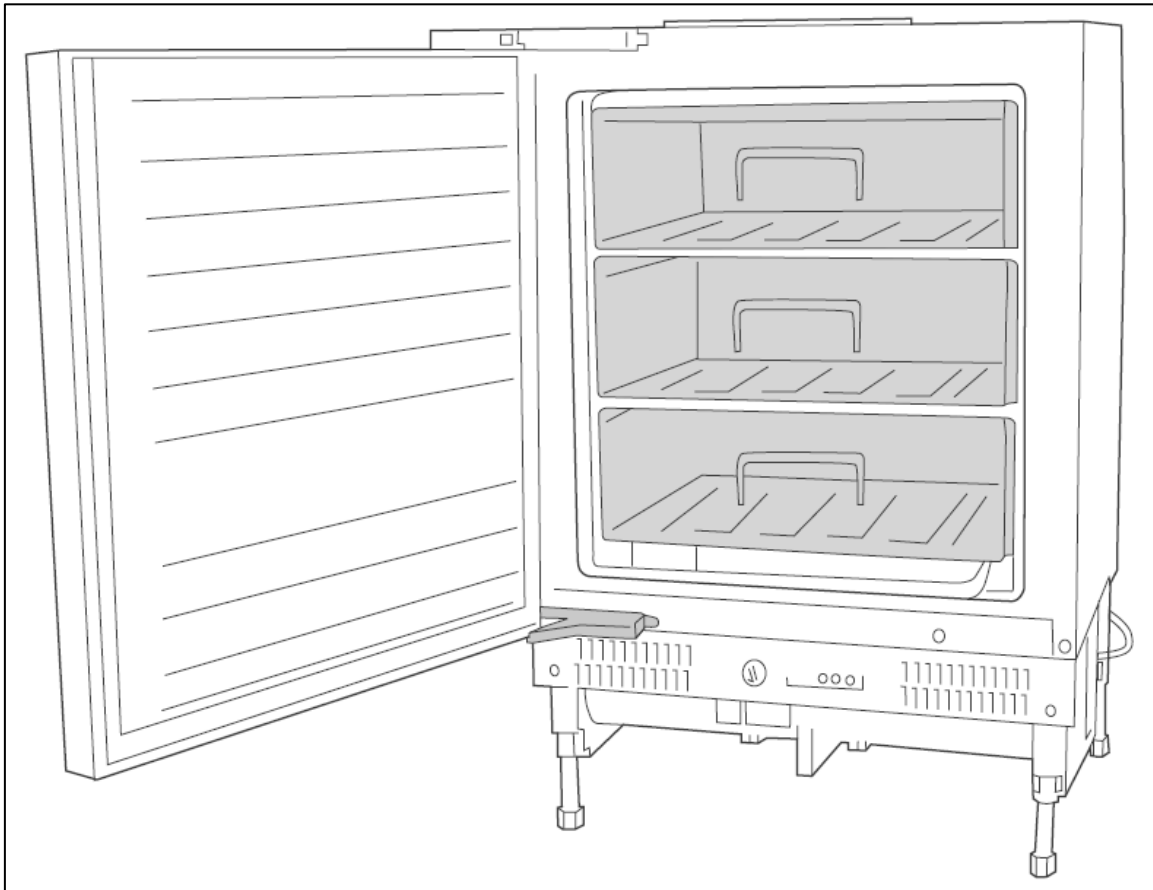

NOTE: This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference. for you or any person not familiar with the operation of the appliance.


Contents

Environmental note	4
Important safety information	5 – 6
Specifications of your freezer	7
Description of the appliance	8
Using your Baumatic freezer	8
Before switching on	8 - 9
During first use	9
Turning on the appliance and setting the thermostat	9-10
Control Panel	10
The ❄️ freezer compartment	11
Freezing fresh food	11-12
Tips on freezing	12
Making ice cubes	12
Freezing with Super Freeze	13
Cleaning and maintenance	14
Defrosting the ❄️ freezer compartment	14-15
Installation	16
Electrical connection	16
Positioning	17
Aperture dimensions	17
Adjusting the height and levelling off your freezer	18
Installing your freezer	19-22
Adjusting the plinth/kickboard	23
Reversing the door of your appliance	23-25
Troubleshooting	26-27
Contact details	28

Environmental note

Note: Before discarding an old appliance, switch off and disconnect it from the power supply. Cut off and render any plug useless. Cut the cable off directly behind the appliance to prevent misuse. This should be undertaken by a competent person. Disable the door lock to make sure that children cannot get stuck inside the appliance.

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.


For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Important safety information



Your safety is of the utmost importance to Baumatic. Please make sure that you read this instruction booklet **before** attempting to install or use the appliance. If you are unsure of any of the information contained in this booklet, please contact the Baumatic Advice Line.

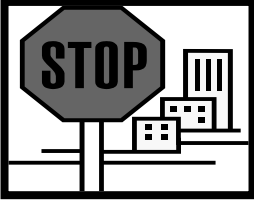

IMPORTANT: Any installation work must be carried out by a qualified electrician or competent person.

Use of the appliance

- Your appliance is only designed to be used in the home. It is suitable for freezing and storing frozen food. If it is used for any other purpose or it is not used correctly, then Baumatic Ltd. will accept no liability for any damage that might be caused.



- Altering the specification of the appliance must not be attempted for reasons of safety.

Before using your appliance

- Check the appliance for any signs of transport damage. If you notice any damage, then you should not connect your appliance to your mains supply and should contact your supplier.

Refrigerant

- Your appliance contains R600a refrigerant, which is a natural gas that does not contain CFCs that can damage the environment. However it is a flammable substance, therefore care should be taken:
 - During the transportation and installation of the appliance, make sure that the refrigeration pipework does not get damaged.
 - If it does become damaged then sources of ignition and open flames should be avoided. Also the room that the appliance is situated in should be thoroughly ventilated.

- Do not place any objects on top of the appliance, as this may damage the table top.





Child safety

- Packaging material should be kept away from children.
- Children should not be allowed to touch the controls or play with the appliance.




General safety

- Do not pull on the power supply cable to remove the plug from your mains supply socket.
- Do not pull out or insert the plug with wet hands.
- Do not attempt to use your appliance outdoors or any place where it is likely to come into contact with the elements.
- Before cleaning the appliance or performing maintenance work, ensure that the appliance has been disconnected from your mains supply.
- Never allow the back coils of the appliance to come into contact with the wall surface.
- Always ensure that the location where you are installing your appliance is free of stored items such as papers and other flammable materials.
- Never block the ventilation openings of the appliance, either on the inside or its exterior.
- It is vital to keep your appliance well ventilated, so that there is proper air flow between the bottom of the unit and the plinth/kick plate which it is sitting on.
- Do not place electrical devices inside of the appliance, such as mixers and electric ice cream makers.

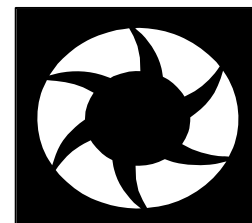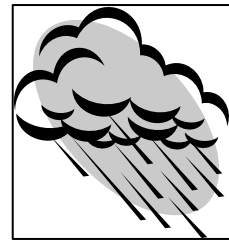

Service

You should not attempt to repair the appliance yourself, as this could cause injury or a more serious malfunction. If you require a service call then please contact the Customer Care Department.

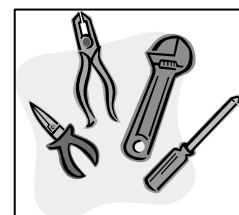

Specifications of your freezer

Congratulations on purchasing a Baumatic freezer.

- Fast freeze switch
- Fast freeze indicator light
- Temperature rise warning light
- Adjustable thermostat
- 3 Freezer drawers
- Chiller section
- Reversible door
- Adjustable feet

Dimensions of appliance

Height:	820 mm
Width:	595 mm
Depth:	550 mm

Dimensions of aperture*

Height:	840 mm – 870 mm
Width:	600 mm (min)
Depth:	570 mm (min)

Energy efficiency class

Energy class: A

Net cubic capacity

Cubic capacity: 102 litres/3.6 cubic ft. (Net)


* Please refer to the installation instructions for more specific information on the size of aperture that you will require.

IMPORTANT: When you install your appliance it is important to bear in mind its climatic rating.

In order to find out the climatic rating of your appliance, you should check the rating plate. The rating plate is located on the front left edge of the inside of the freezer section. You will need to open the door of your appliance to be able to find it.

The rating plate will indicate the ambient temperature range that your appliance will function correctly within.


Description of the appliance

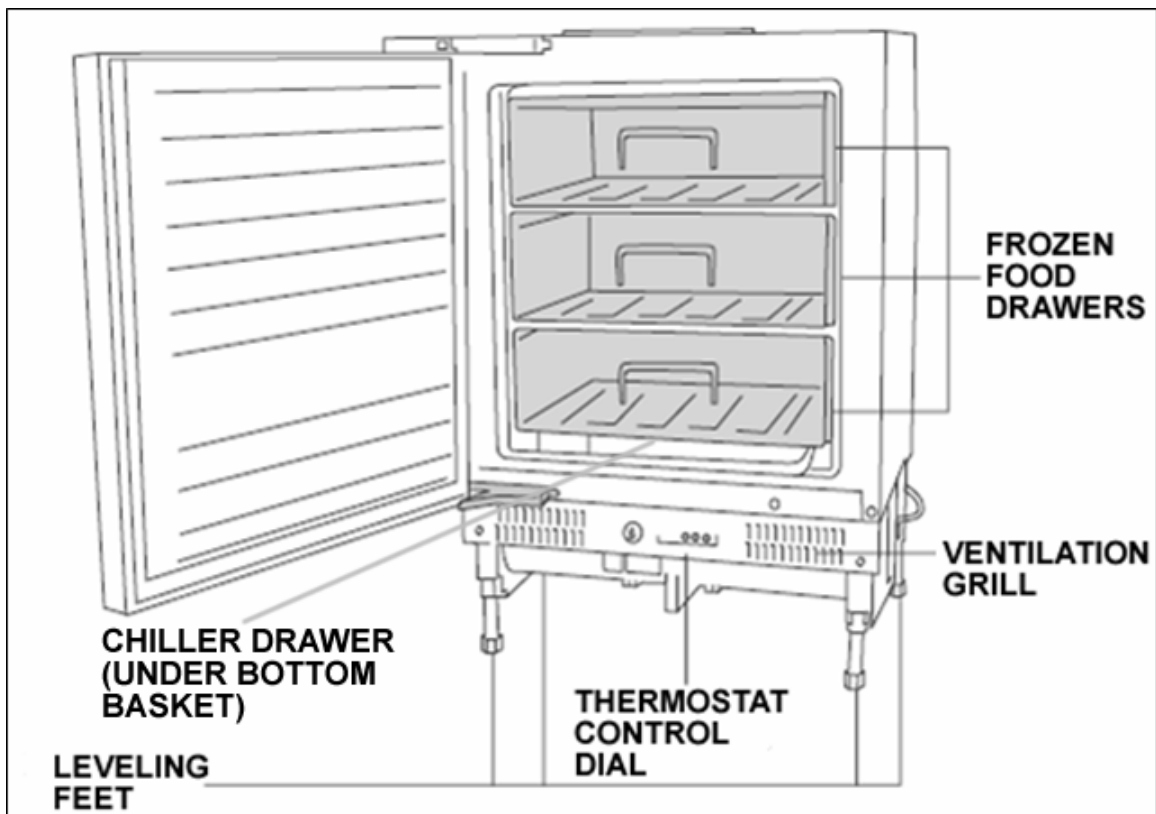

Using your Baumatic freezer

Before switching on


- Make sure that it has been installed by a suitably qualified person, as per the information contained in Baumatic's installation instructions.
- After delivery, wait for eight hours before connecting the appliance to your mains supply. This will allow any refrigerant gasses that may have been disturbed during the transportation process to settle.
- The outside of the appliance and the removable accessories contained within it, should be cleaned with a solution of liquid detergent and water.
- The interior of the appliance should be cleaned with a solution of sodium bicarbonate dissolved in lukewarm water. The interior and accessories should be thoroughly dried, after the cleaning process has been completed.
- There can be an odour when you first switch on the appliance. It will lessen as the appliance starts to cool.

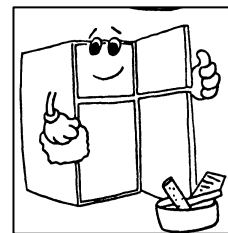

During first use

- When you first switch on the appliance, the compressor will run continuously for approximately 24 hours or until the freezer reaches a cool enough temperature.
- During this period of time, you should try not to open the door frequently or place a large amount of food within the appliance.
- If the unit is switched off or unplugged, you must allow at least 5 minutes before restarting the appliance on the thermostat or connecting it to your mains supply.


Turning on the appliance and setting the thermostat

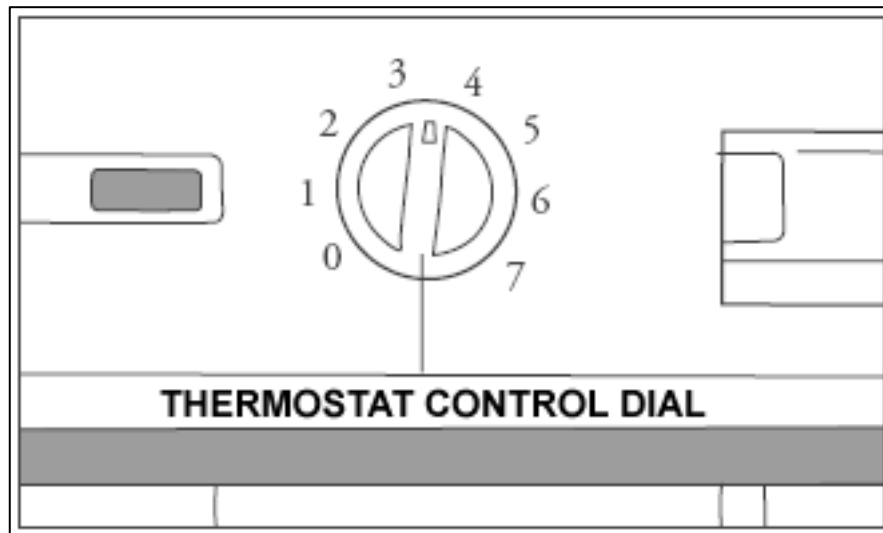


You switch on your appliance by connecting it to your mains supply and setting the thermostat. The thermostat control knob is located at the bottom of the appliance, near to the ventilation grill.

- The thermostat automatically regulates the temperature inside the freezer, depending on what number you have turned the thermostat control knob to: -
- Position <0> means that the appliance will not cool. However the light will still function.
- Position <1> will give you a higher temperature inside the freezer.
- Position <7> will give you a lower temperature inside the freezer.
- Ideally the thermostat should be set to a position between <3> to <4>.

- The freezer can cool down to -18 degrees centigrade and lower.
- **IMPORTANT:** The ambient temperature of the room, the temperature of food and the amount of food that has been placed in the appliance and how often the door is opened, will all affect the temperature being maintained by the appliance.
- On the maximum setting (position <7>), your freezer will work harder to maintain a lower temperature. There is no need to run your appliance on this setting for prolonged periods and you should return the thermostat knob to between <3> to <4>.

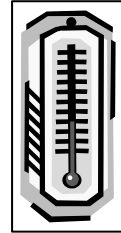

Control panel

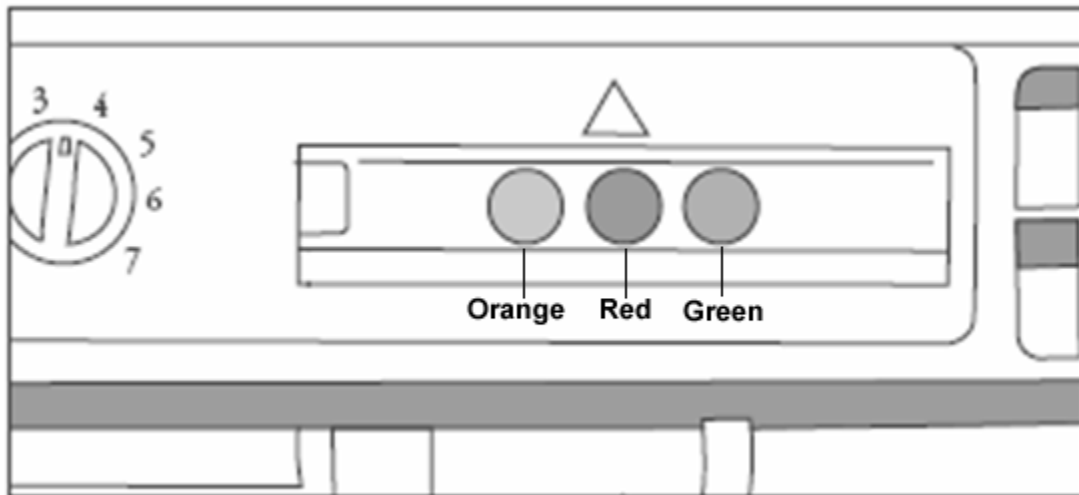

- **Super freeze light (Orange)** - will light up when the super freeze switch has been activated.
- **Temperature rise warning light (Red)** - will light up when the appliance detects a rise in temperature that could affect the contents of your freezer.
- **Power light (Green)** - will light up as soon as the appliance is connected to your mains supply.

The freezer compartment


The freezer compartment is suitable for storing and freezing food.

- The freezer compartment temperature must have already reached -18 degrees centigrade (or lower) before you attempt to store food that is already frozen or freezing fresh food.
- The freezer compartment is only able to freeze a certain quantity of food at one time. You should not attempt to freeze more than 5 kilograms of fresh food within a 24 hour period.
- Warm food should be allowed to cool down before you attempt to freeze it. If you place warm food in the freezer, then the increased humidity will cause quicker ice formation and increase the amount of power that the appliance uses.
- The guidance of the food manufacturer should be followed, in regard to the maximum storage time.
- Thawed foods must not be frozen for a second time.

Freezing fresh food



- To freeze the maximum quantity of fresh food specified above, you should turn the thermostat knob to position <7>, 24 hours prior to attempting freezing.
- For smaller quantities of fresh food, you should turn the thermostat knob to position <7>, approximately 6 hours prior to attempting freezing.
- Alternatively you can use the Super Freeze option (see the “Freezing with Super Freeze” section of this booklet).
- Fresh food should be packed into airtight containers or packaging. This will help to make sure that the food doesn’t dry out or lose its flavour. It will also ensure that flavour does not transfer from other foods.

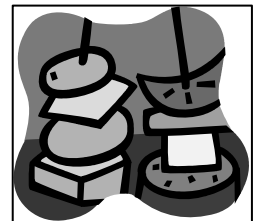




- Do not allow fresh food to touch items that are already frozen.
- After 24 hours you should check that the fresh food is satisfactorily frozen. If it is then the thermostat should be turned down to its normal setting (between <3> and <4>).

Tips on freezing


- Freezer bags, polythene wraps, aluminium foil (extra thick) and special cans for frozen foods are suitable packaging for storing frozen goods in.
- Tape, rubber bands or plastic clips are suitable for sealing bags and wrappings.
- Before sealing a suitable bag, you should compress the air out of it, as this will help the food to freeze more easily.
- Flat packages freeze more easily.

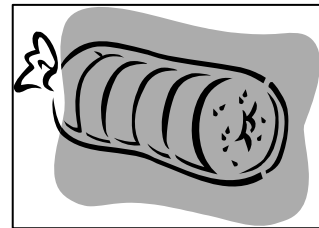


- If you are freezing liquid, then do not fill the container to the brim. Liquids will expand when being frozen.
- **Do not place bottles (glass or tin) containing liquids (especially sparkling liquids) into the freezer as they could cause the bottle to burst during freezing.**

Making ice cubes

- Fill an ice cube tray with water and place it in the freezer compartment.
- After the water is completely frozen and turned to ice, you can twist the ice cube tray (as shown in the drawing below) to dispense the ice.

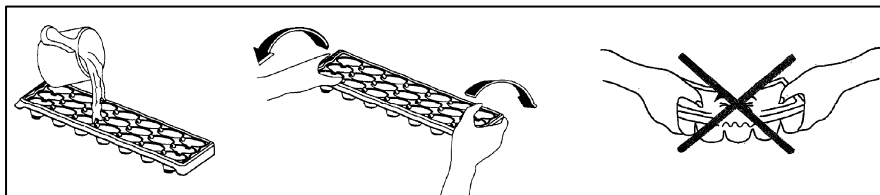


Freezing with Super Freeze

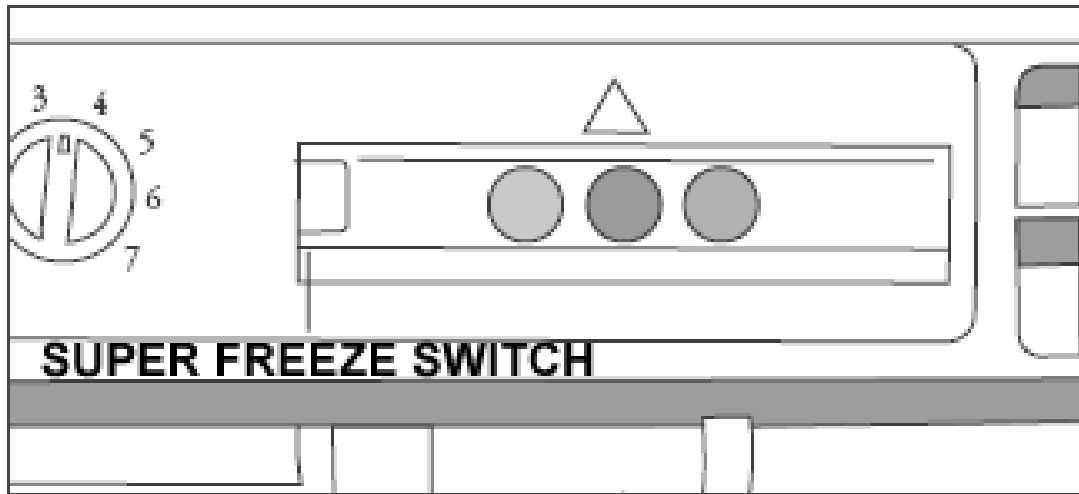


- Slide the Super Freeze switch to the left and the freezer will start to run continuously at its maximum setting.
- The orange Super Freeze light will come on when the Super Freeze setting has been switched on.
- There is no need to adjust the thermostat knob.
- The freezer temperature will decrease and the appliance will get to its lowest temperature.
- Place the food that is to be frozen inside the freezer.
- Once the food is frozen, you should turn off the Super Freeze setting. **DO NOT SLIDE THE SUPER FREEZE SLIDER TO THE RIGHT UNTIL THE FOOD IS FULLY FROZEN.**
- The orange Super Freeze light will go out and your appliance will return to normal operation.
- **IMPORTANT: DO NOT LEAVE THE APPLIANCE RUNNING IN SUPER FREEZE MODE FOR LONGER THAN 24 HOURS AT A TIME.**

Cleaning and maintenance

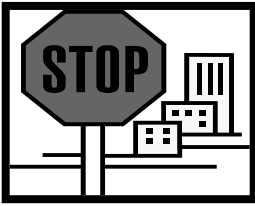

WARNING: PLEASE ENSURE THAT YOUR APPLIANCE IS DISCONNECTED FROM YOUR MAINS SUPPLY BEFORE ATTEMPTING TO CLEAN IT.

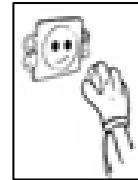


- Do not clean the appliance by pouring water onto it or spraying water over it.



- The freezer should be cleaned periodically, using a solution of bicarbonate of soda and lukewarm water.



- Clean the accessories separately with soap and water. Do not clean them in a dishwasher.

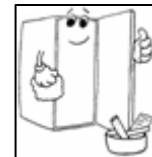

- Do not use abrasive products, detergents or soaps.



- After washing the appliance, wipe over the area that you have cleaned with a damp cloth and then dry it thoroughly.
- When cleaning is complete, dry your hands and then reconnect the plug to your mains supply.


Defrosting the freezer compartment

The frost in the freezer compartment should be removed periodically. You can use a plastic scraper to keep down the amount of frost that builds.

- **IMPORTANT:** The freezer should be defrosted at least twice a year. The number of times that you need to defrost it, will depend on the setting of your thermostat and how much food you freeze and store in the freezer.

- The day before you defrost, turn the thermostat dial to position <7>, this will make sure that the food contained in the freezer is frozen properly.
- Whilst defrosting the appliance, the food should be removed from the freezer and wrapped in several layers of paper and stored in a cool place. The foods rise in temperature will shorten its storage life and therefore the food should be used within a relatively short period of time.
- **DO NOT PLACE FOOD BACK IN THE FREEZER ONCE IT HAS STARTED TO THAW.**
- Set the thermostat knob to position <0> and disconnect the appliance from your mains supply.
- Leave the door to the freezer open. You can place a bowl of warm water inside the freezer to speed up the defrost process.
- You can use a sponge to mop up the defrost water that will run into the bottom of the freezer.
- **IMPORTANT:** You should place some old towels on the flooring that is immediately in front of the appliance. In case any defrost water comes out of the freezer and onto the floor.
- Once all the ice that has built up has melted, then the inside of the freezer should be dried thoroughly. Failure to do this will result in immediate ice build when the appliance is turned back on.
- With dry hands, reconnect your appliance to your mains supply. Set the thermostat knob to position <7> for a 24 hour period, before returning it to the normal setting of between <3> and <4>.
- You should not attempt to freeze fresh food inside the freezer until this 24 hour time period has elapsed.
- **Do not defrost the appliance with other electrical devices (e.g. hair dryer). Do not use sharp metal objects to remove the ice on the freezer, as this could cause damage to the refrigerant system.**

Installation

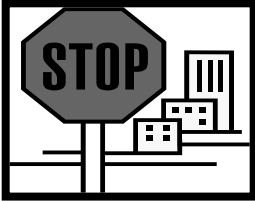

IMPORTANT: Before installation and usage read all the instructions and make sure that the voltage (V) and the frequency (Hz) indicated on the rating plate are exactly the same as the voltage and frequency in your home. The rating plate can be found on the front left edge of the inside of the freezer.

The manufacturer declines all responsibility in the event of the installer failing to observe all the accident prevention regulations in force, which are necessary for normal use and the regular operation of the electric system.

Electrical connection



YOUR FREEZER IS INTENDED FOR FITTED AND PERMANENT INSTALLATION.

We recommend that the appliance is connected by a qualified electrician, who is a member of the N.I.C.E.I.C. and who will comply with the I.E.E. and local regulations.

- Your freezer comes supplied with a 13 amp plug fitted. If in future you need to change the fuse in this plug, then a 13 amp ASTA approved (BS 1362) fuse **must** be used.
- The wiring in the mains lead is coloured as follows:

Brown	Live
Blue	Neutral
Green and yellow	Earth
- As the colours of the wires in the appliance's mains lead may not correspond with the coloured markings identifying the terminals in your spur box, please proceed as follows:

The **brown wire** must be connected to the terminal marked "L" (live), or coloured **red**.

The **blue wire** must be connected to the terminal marked "N" (neutral), or coloured **black**.

The **green and yellow wire** must be connected to the terminal marked "E" (earth), or by the earth symbol, or coloured **green and yellow**.

- When the connection is completed, no stray strands or cut wire should be present. The cord clamp must be secured over the outer sheath.


Positioning

- It is advisable that your appliance is only installed in a location where the ambient temperature of the room, corresponds with the climate classification that is stated on the rating plate of your appliance. Your appliance may not function correctly if the ambient temperature falls outside of the following ranges.

Climate classification	Appropriate ambient temperature
SN	+10 to +32 degrees centigrade
N	+16 to +32 degrees centigrade

- Your appliance should not be located in direct sunlight or exposed to continuous heat or extremes of temperature (e.g. next to a radiator or boiler).
- The door should be able to open completely and freely
- The appliance should be situated so you can easily access the food that is stored in it.
- You should check whether there is an electrical socket available, which will be accessible after your appliance is installed.
- **IMPORTANT:** To allow the door of the appliance to open without fouling the unit that is next to it. It maybe necessary to insert an 18 – 20 mm cabinet side/end panel between the appliance and the base unit. It should be positioned on the same side that the appliance door is hinged on.

Aperture dimensions

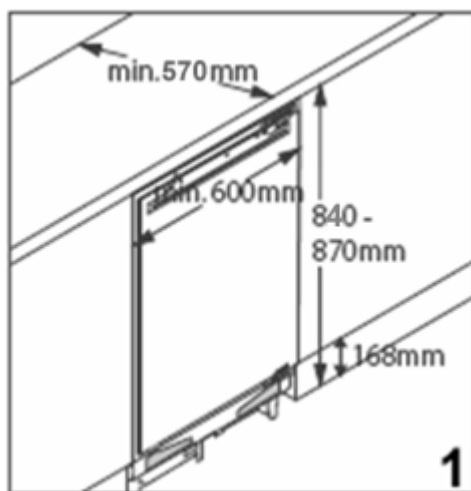


1) Figure 1 shows the aperture size that you will need to be able to install your appliance.

- The appliance must be stood on a level floor. You can use the levelling feet to take into account any minor unevenness in the floor.


Adjusting the height and levelling off your freezer

2) Place the freezer into the aperture. The height and level of the appliance should then be adjusted so it sits properly under the worktop.

- Locate the 4 rotating, levelling feet on each corner of the appliance.

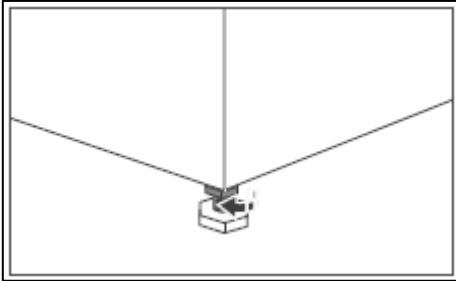


- Loosen the locking nut by turning it clockwise using the spanner.

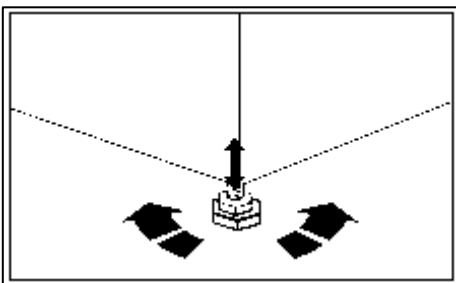

- Turn the foot to either raise or lower the height of the freezer.

- The appliance should be flush with the underside of the worktop and be level.

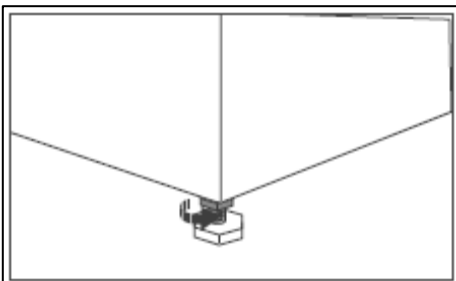

- Fully tighten the locking nut on each leg, against the underneath of the freezer.

IMPORTANT: If the appliance is not level, then the door and door seal may be affected.

Installing your freezer




If you need the appliance door to open from the other side, then please reverse the door before commencing the installation process. (See "Reversing the door section").

Tools required: -


- Tape measure
- Sharp pencil
- Small flat bladed screwdriver
- Spanner
- Bradawl
- Drill
- 3 mm drill bit

IMPORTANT: We recommend that two people install this appliance.

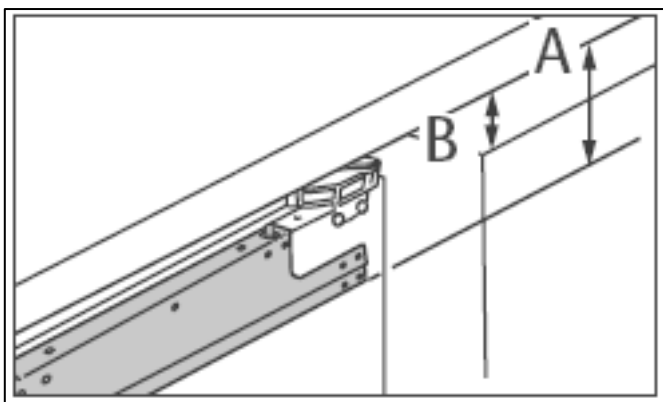


3) Measure from the underside of the worktop to the bottom of the front brackets (**A**).

- Measure from the underside of the worktop to the top of the appliance door (**B**).

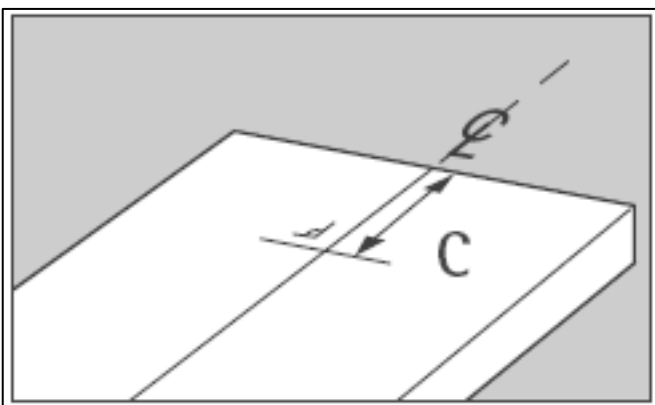


4) Measure the width of the furniture door, at the halfway point mark a line down the inner surface of the furniture door. The line should go down the entire length of the furniture door.

- Deduct measurement (**B**) from measurement (**A**), this gives you distance (**C**).
- Measure distance C from the top of the furniture door and at a 90° angle; mark a line across the centre line.

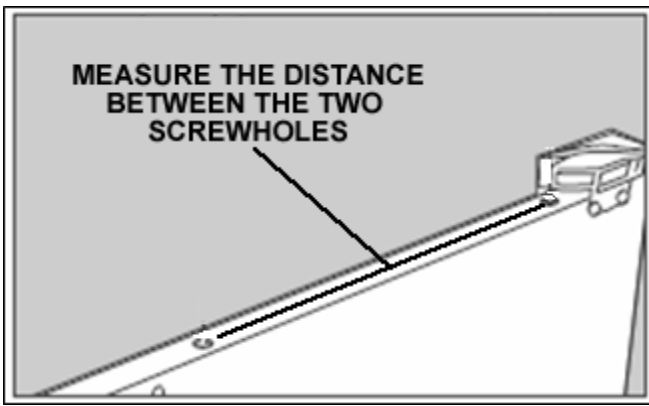


5) Measure the distance between the two screw holes on the top of the freezer door.

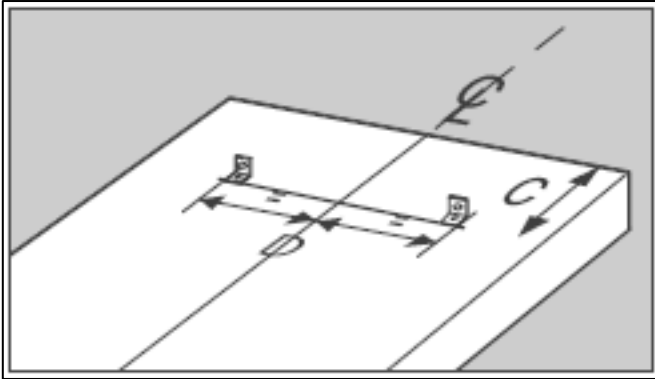

6) Draw a line that is the length of that measurement (D) on the rear of the furniture door. This line should be drawn at the point that you marked in step 4. It must be made at a 90° angle to the centre line.


- Place the front brackets on the horizontal line. Ensure that the bottom of each bracket is in line with the horizontal line that you have just marked.
- **IMPORTANT:** The distance on either side of the centre line must be equal.

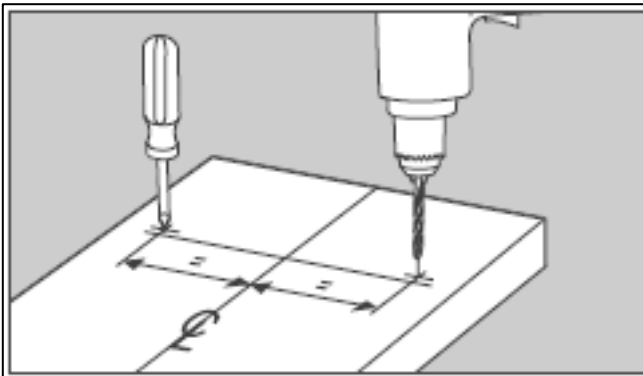

7) Using a bradawl, mark the centre of the holes in the front brackets.


- Remove the brackets.

- Using a drill with a 3 mm drill bit; drill a hole on the two marks that you have just made. The hole should be drilled to a depth of 5 – 8 mm.

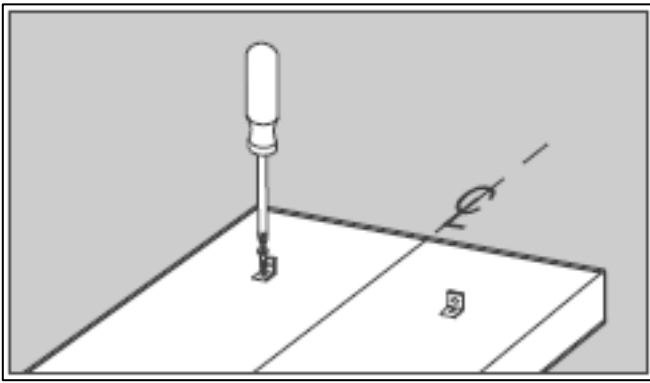

8) Using the screws provided, secure the front brackets to the inside of the furniture door on the holes that you have just drilled.

IMPORTANT: These screws must be securely tightened.

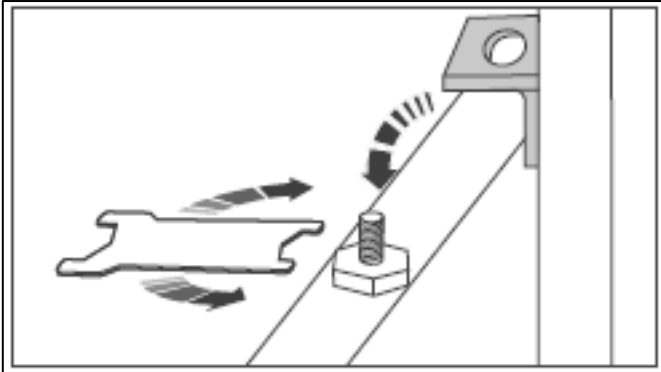


9) Tighten the upper retaining bolts to the top of the appliance door.

- Place the furniture door over the retaining bolts that you have just secured.
- Adjust the level of the furniture door using the levelling nuts at the bottom of the bolts.
- **IMPORTANT:** The furniture door should line up with the rest of your cabinet doors.



10) At the bottom of the freezer door, there are two holes. You should secure the lower fixing brackets to these holes using the screws provided. The longer section of the lower fixing bracket should be connected to the bottom of the freezer door.


- Mark the position of the holes in the centre of the fixing brackets onto the furniture door and then remove the furniture door.
- Using a drill with a 3 mm drill bit; drill a hole on the two marks that you have just made. The hole should be drilled to a depth of 5 – 8 mm.

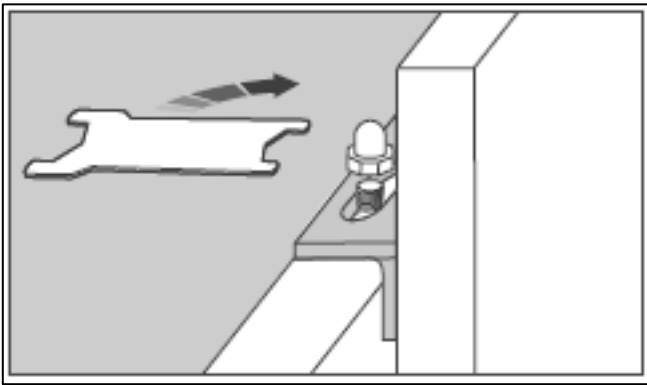

11) Rehang the furniture door and make the same adjustments that you made in step 9.


- Tighten the retaining nuts at the top of the appliance door.

- Secure the bottom of the furniture door to the appliance door, using the two fixing brackets, tightening screws into the two holes that you made in step 10.

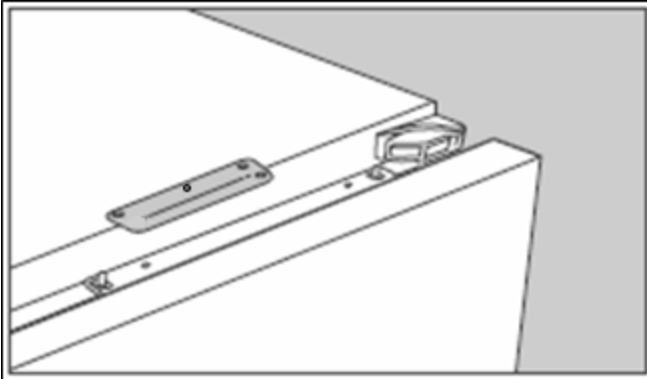

12) The bracket at the top of the freezer door should be flush with the underside of the work top.

- If the bracket isn't flush, then you should raise the level of the appliance, using the levelling feet (See the "Adjusting the height and levelling off your freezer" page).

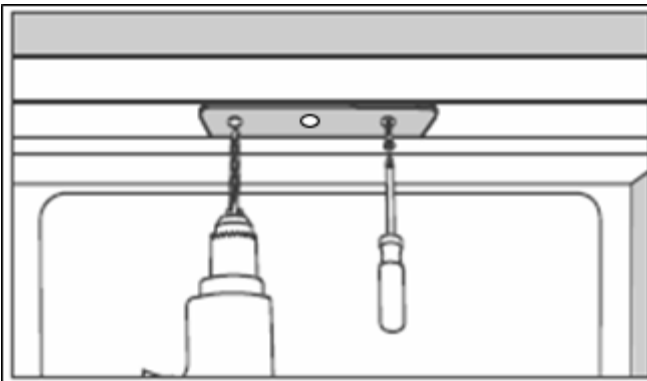

13) Open the appliance door.


- Use a suitably sized drill bit to drill through the three holes in the bracket, into the work top. **IMPORTANT:** The drill bit should be appropriate for the material that your work top is made from.
- Secure the bracket to the underside of the worktop, using the screws provided. **IMPORTANT:** These screws should be fully tightened.



Check that the door opens and shuts without snagging, as well as checking that the door is sealing correctly.

Adjusting the plinth/kickboard

When the appliance has been fitted, you may decide to attach a plinth or kickboard to match your existing kitchen units.

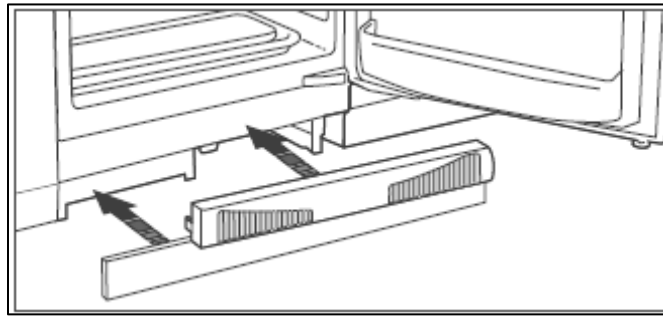

- Remove the grid on the base of the freezer by releasing the fastenings just inside of the grill on each side. Then pull the grid towards you.
- Insert the plinth/kickboard and then refit the grid in its original position to hold it in place.

Reversing the door of your appliance



This procedure **MUST** be completed before the furniture door is attached.




Any parts that you remove from the appliance whilst reversing the door, should be retained for later use.




WARNING- Take care when opening the hinges, they are sprung loaded and there is the risk of injury if they close on your hand.

Tools required: -

- Phillips screwdriver
- Flat bladed screwdriver
- Socket set

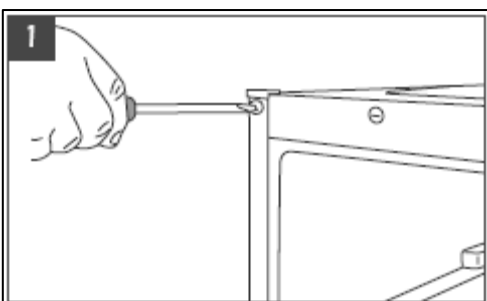


1) Remove the blanking plates from the outside of the appliance door.

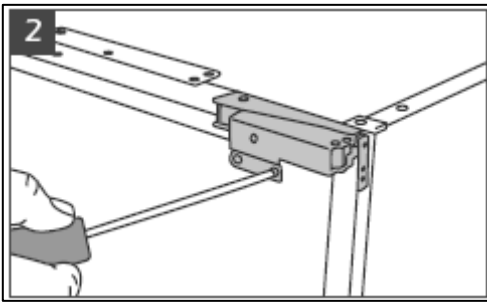


2) With the door closed, remove the screws on the outside of the hinges.

- You should start with the top hinge first.

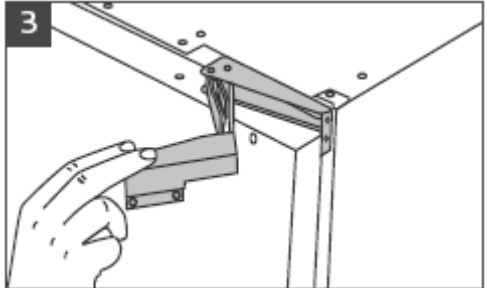


3) Carefully open the hinges away from the appliance door.

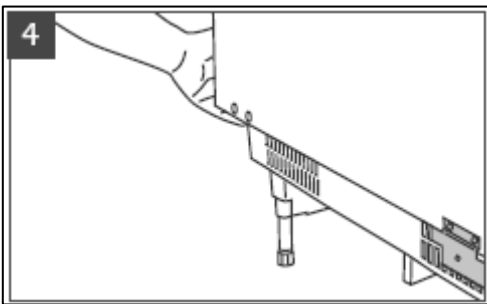


4) Remove the door from the main body of the appliance.

- **IMPORTANT:** Support the bottom of the door as you remove it and be careful not to damage the hinges.

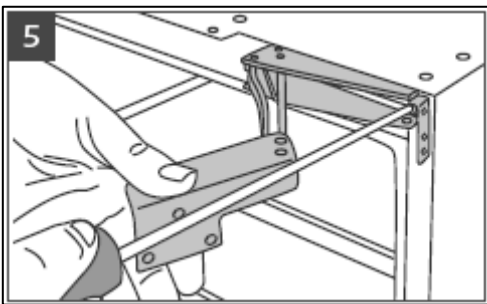


5) With the top hinge open, undo the screws holding it to the cabinet and then remove it.

- **IMPORTANT:** Be careful that the spring does not shut. We recommend that you use a long shafted screwdriver to perform this step.

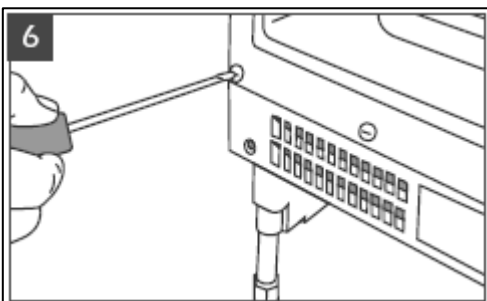


6) Remove the blanking plates for the cabinet

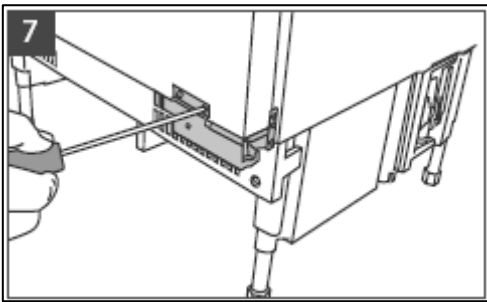


7) Turn the hinge over and place it on the **diagonally opposite corner** of the cabinet.

- Securely screw it into place.

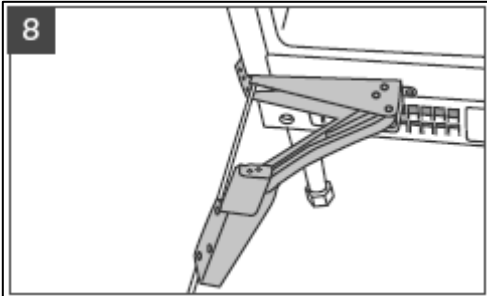


8) Repeat steps 5 - 7 on the remaining hinge (i.e. remove it and attach it to the diagonally opposite corner).

- Replace the cabinet blanking plates.

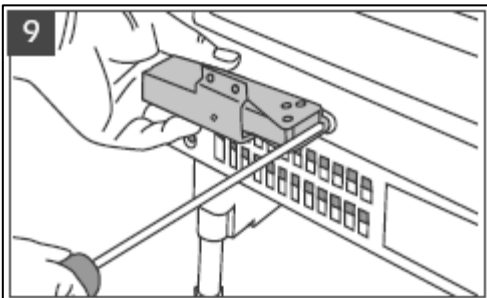

9) Carefully rehang the door.

- Shut the appliance door and then close the hinges.
- Insert the screws on the outside of the hinges.

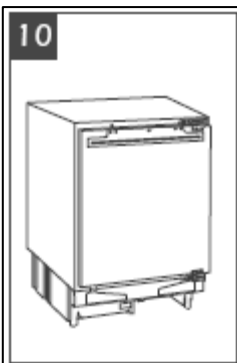

10) Check that the freezer door is aligned horizontally and vertically.

- Check that the door seals are sealing on all sides of the appliance.
- Tighten the hinge bracket screws.

- **IMPORTANT:** You must ensure that these screws are fully tightened.

Troubleshooting



IMPORTANT: If your freezer appears not to be operating properly, before contacting the Customer Care Department, please refer to the checklist below.



My freezer does not appear to be working/there is no power to my appliance.

- Check that the plug is fully inserted into the power socket.
- Check that there is power to your mains supply (e.g. that there hasn't been a power cut or that the fuse hasn't blown).
- Check that the thermostat inside the appliance has not been turned to the <0> position.
- Check that your mains supply voltage, corresponds to the voltage stated on the rating plate of your appliance.



My freezer appears to be performing poorly

- Check that the appliance isn't overloaded and that food hasn't been packed too tightly into it.
- The thermostat setting is too low; you should turn the thermostat up higher.
- Ensure that the door is closing properly and that the door has not been opened for a prolonged period in error.
- Ensure that there is adequate ventilation for your appliance.



My freezer is noisy

- The refrigerant gas that circulates the pipework in the appliance may make a slight noise, even if the compressor is not running.
- If the noise worsens or the appliance gets louder than normal; check that it is levelled off correctly, that nothing is touching the rear of the fridge and that nothing placed inside the appliance is rattling.



Ice has quickly formed on the inner back wall of my freezer

- Check that food has not been pushed too far back inside the appliance, so that it is in contact with the inner back wall.



IMPORTANT: If your appliance appears not to be operating correctly, then you should disconnect it from your mains supply and then contact Baumatic Customer Care on telephone number (0118) 933 6911.

DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.

Please note that if an engineer is asked to attend whilst the product is under guarantee and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

The appliance must be accessible for the engineer to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then he will not complete a repair.

This includes situations where appliances have been tiled in, sealed in with sealant, have wooden obstructions placed in front of the appliance, like plinths. Or any installation other than the one specified by Baumatic Ltd. has been completed.

Please refer to the conditions of guarantee that appear on the warranty card that you receive with the appliance.

**United Kingdom**

Baumatic Ltd.,
Baumatic Buildings,
6 Bennet Road,
Reading, Berkshire
RG2 0QX
United Kingdom

Sales Telephone

(0118) 933 6900

Sales Fax

(0118) 931 0035

Customer Care Telephone

(0118) 933 6911

Customer Care Fax

(0118) 986 9124

Spares Telephone

(01235) 437244

Advice Line Telephone

(0118) 933 6933

E-mail:

sales@baumatic.co.uk
customercare@baumatic.co.uk
spares@baumatic.co.uk
technical@baumatic.co.uk

Website:

www.baumatic.co.uk

Republic of Ireland

01- 6266 798

Czech Republic

Baumatic CR spol s.r.o.
Amperova 495
46215, Librec
Czech Republic

+420 800 185 263

www.baumatic.cz

Slovak Republic

Baumatic Slovakia, s.r.o.
Skultetyho 1
831 04 Bratislava 3
Slovakia

+421 255 640 618

Germany

Baumatic Gmbh
Janderstrasse 9
Mannheim, 68199
Germany

+4962 112 9190

www.baumatic.de

Italy

Baumatic Italia S.R.L.
Via Caltana 129
Campodarsego (Padova), 35011
Italy

+3904 9920 2297

www.baumatic.it

Holland

Baumatic Benelux B.V.
Grindzuigerstraat 22
1333 MS ALMERE
The Netherlands

+3136 549 1555

www.baumatic.nl



Baumatic®

www.baumatic.com