
Table of Contents

Safety Precaution	2
1. Reference	
1.1 General Features	3
1.2 Accessories	4
2. Basic Function	
2.1 Front Panel	5
2.2 Rear Panel	6
2.3 Remote Control Unit	7
3. Installation and Connection	
3.1 Connecting to Dish LNB and TV	9
4. Installation and Operation	
4.1 Installation.....	10
4.2 Edit Channel.....	15
4.3 Setting	17
4.4 Times.....	19
4.5 Expansion.....	20
4.6 Other Useful Information	21
5. Additional Information	
5.1 Trouble Shooting.....	24
5.2 Technical Specifications.....	25
5.3 Glossary	26



Safety Precaution

This STB has been designed and manufactured to satisfy the international safety standards. Please read the following safety precautions carefully before operating this receiver.

Main Supply:

Before operating, please check the units operating voltage is 100~240V AC 50/60Hz.

Overload:

Do not overload a wall outlet, extension cord or adapter, neither use damaged power cord or touch it with wet hand as this may result in electric shock.

Liquid:

The receiver shall not be exposed to dripping or splashing water, and that no objects filled with liquids, such as base, shall be placed on the apparatus.

Ventilation:

Keep the slots on top of the receiver uncover to allow sufficient airflow to the unit. Do not put the receiver on soft furnishings or carpets. Do not expose the receiver to direct light or do not place it near a heater or in humid conditions. Do not stack other electronic equipments on top of the receiver.

Cleaning:

Plug out the receiver from the wall outlet before cleaning. Clean the receiver by a soft cloth or mild solution of washing-up liquid (no solvents).

Connection:

Disconnect the receiver from the mains when you connect it to satellite LNB or disconnect it from LNB. Failure would possibly cause damage to the LNB.

Location:

Put the receiver indoor in order to avoid lightening, raining or sunlight.

Uncover:

Do not remove the cover, to reduce the risk of electric shock. Contact qualified and licensed service personnel to repair the receiver, or contact your dealer.

1. Reference

1.1 General Features

- DVB-S/DVB-S2 Satellite Compliant (MPEG-II/ MPEG-IV/ H.264).
- DiSEqC 1.0, 1.1, 1.2 & 1.3 (USALS) Compatible.
- SCPC & MCPC Receivable from C/Ku Band Satellites LNB Supported.
- Universal, Single, Single S & C Band Wide band LNB.
- Sensitive Tuner with Loop-Through.
- PAL / NTSC Conversion.
- Variable Aspect Ratio (4:3, 16:9) with Pan Vector or Letter Box.
- Output Resolution: 576p & 576i, 720p & 1080i.
- HDMI with Upscale to Improve Picture Quality.
- 4 Favorite Groups and Parental Lock Function.
- 5 Kinds of Sort Function for Channels.
- On-screen Display with True Full Color Resolution.
- Teletext and Subtitle Supported (OSD).
- 7 days EPG (Electronic Program Guide) for On-Screen Channel Information.
- Multi Language Menu.
- Capacity for Sorting Multi Channel.

1.2 Accessories

Unpack the unit and check to make sure that all of the following accessories are included in the packaging.

- 1 x User manual
- 1 x Remote Control Unit (RCU)
- 2 x AAA Batteries
- 1 X HDMI CABLE

2. Basic Function

2.1 Front Panel



1. Display (13 VFD)

13 digit VFD display, vacuum fluorescent display

2. Power Button

The **POWER** button is used to turn the power on or to make it on Standby Mode.

3. CH Buttons

Change channels or items from top to bottom on the menus.

4. VOL Buttons

Change channel's volume from high to low.

5. Menu Button

Press to pop up the MENU from OSD

6. OK Button

Press to choose wanted function in OSD


7. Smart Card Slot

Socket for a TV operator Smart Card.

8. USB port

USB2.0 port for connect to any external USB devices such as USB Disk or HDD.

 2.2 Rear Panel

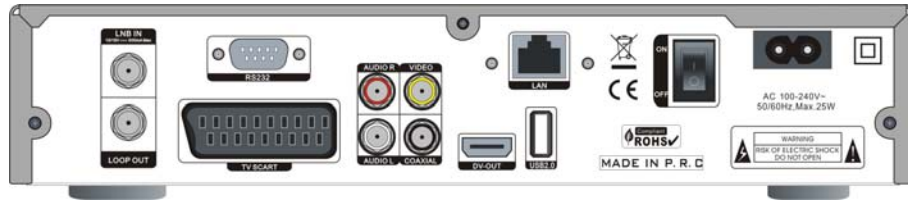

1. LNB IN 13/18V 500mA Max

Connect the Satellite Dish LNB.

2. LNB OUT

Output the Dish LNB IN signal.

3. TV SCART

Connect to TV set player with Scart cables.

4. VIDEO/AUDIO

RCA output for CVBS format.

5. DV-OUT

HDMI signal output

6. USB

USB 2.0 Host Port.

7. COAXIAL

Digital Audio output

8. LAN

Connection for INTERNET.

9. RS-232

Connect to serial port of PC for software upgrade.

10. Power Switch

To Turn ON or OFF the main power of this STB.

2.3 Remote Control Unit (RCU)

You can control this receiver by this remote controller with full function.

1. POWER:

Power on / off button, can set to Standby mode.

2. MUTE:

Turn the sound On/Off.

3. SLEEP:

Setting the time for turning the receiver off

4. PVR:

Press to display the RECORDING files you have recored via this box

5. NUMERIC KEY (0~9) :

Input number or change channel

6. TV/RADIO:

Switch between TV and RADIO.

7. SAT:

Show the scanned satellite list.

8. EPG (Electronic Program Guide) :

Show the TV/Radio program guide.

9. MENU:

Activate main menu or exit.

10. CH+/-:

Change channel up or down.

11. VOL+/-:

Change volume in viewing mode.

12. OK:

Confirm the highlighted menu item.

Open the channel list.

13. FAV: To view the favorite channels.




- 14. EXIT:** Exit current menu step by step.
- 15. AUDIO:** Select or change the Audio.
- 16. ZOOM:** To zoom out the current TV channel
- 17. PAUSE:** To stop the current TV channel playing
- 18. PAGE+/-:** Page up/down in menu or channel list
- 19. RECALL:** Move to the previous viewed channel.
- 20. USB:** Press to enter into USB MENU
- 21. INFO:** Show the information of the current channel.
- 22. SUB:** Showing Subtitle information if the channel contains.
- 23. F1:** Functional key for future use
- 24. TXT:** Show the teletext content if teletext is transmitted.
- 25. TIME:** Setup event timer.
- 26. DISPLAY:** Switch the TV type.
- 27. **: Activate Multi picture menu and select picture
- 28. FIND:** Quickly find channels
- 29. MODE:** Switch 4:3 & 16:9 Screen Formats
- 30. **: Fast backward.
- 31. **: Fast forward
- 32. **: Start playing / Release pause
- 33. /USB:** Stop recording and enter USB menu
- 34. **: Play previous item
- 35. **: Play next item.
- 36. **: Pause/time shift
- 37. **: Start recording

3. Installation and Connection

The following diagram shows you how to connect the HD receiver, TV, LNB and other equipment, please read this first if you are not sure about the connection, and it will guide you to the correct connection.

3.1 Connecting to Dish LNB and TV

 You can connect one fixed dish LNB directly to the LNB IN, or connect at least two dish LNB by DiSEqC Switch, you can also connect to HH mount dish LNB.

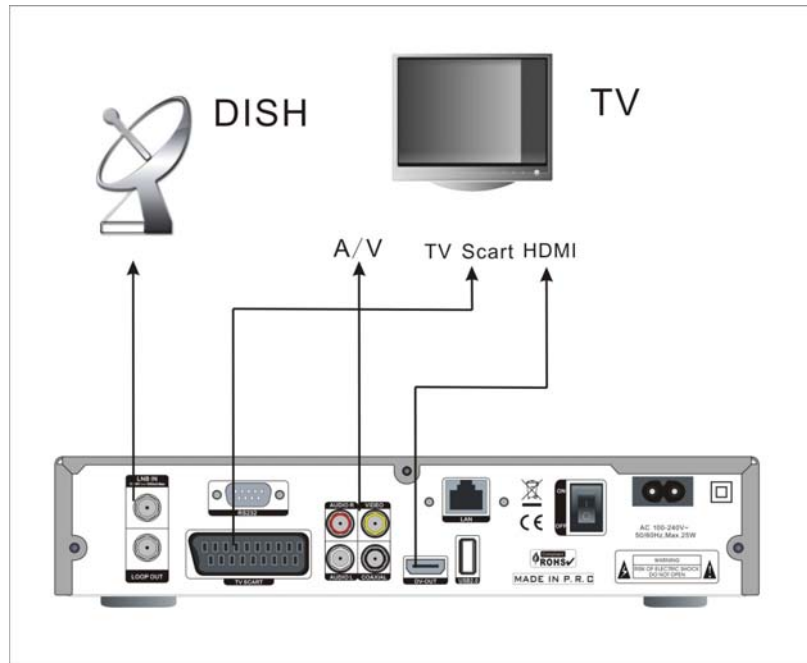

Add

Add satellite by using the Red key. Here you can input new Satellite angle, Satellite Direction (east, west), Band (ku,c). OK to confirm the setting and this new satellite will be added to the end of the Satellite list.



Edit

Select the satellite then press green button. You can change the satellite's name, angle, direction and band. Input the characters which you want to edit using the browser.



Delete

You can delete the user's satellite. Select the satellite that you want to delete from the satellite list. You will be asked to confirm whether delete the satellite or not. If you press ok key, all the channels in the selected satellite and transponder will be deleted, and the selected satellite will disappear.



Transponder List

If you change the satellite, the transponder will be changed automatically. You will find the transponder list of selected satellite here. Press the sat button can switch the TP and SAT list. In this menu you can Add, Edit, Delete, Transponder. The Operation similar to the above, you can input the transponder frequency, symbol rate, and choose polarization (Ver, Hor)



B: LNB Type and LNB Power

Here you need to check the LNB frequency according to your antenna, set the correct frequency or define yourself, and keep LNB power to be 13/18V.

C: 22KHz

In case you are using two antennas connected to a 22KHz tone switch box. You can supply either 22KHz by setting "OFF" to select antenna.

D: DiSEqC1.0 DiSEqC1.1

If you connect antenna to DiSEqC Switch, you need to specify the DiSEqC input to which your selected satellite have been configured.

E: Motor

When you enable this option, and press **OK**, you will get this window to show you how to adjust position of the dish.



Move Auto [W/E]

Press RIGHT/LEFT button, the dish will be motorized to East/West continuously, it will stop until it find the best signal.

Move Continue

Press RIGHT/LEFT button, the dish will be motorized to East/West continuously until you press LEFT/RIGHT again.

Move Step

Press RIGHT/LEFT button, the dish will be motorized to East/West by step.

Store Position

Save the current position you searched for the selected satellite.

Go to Position

Press OK button to move the dish to the stored position.

Go to Reference

Press OK button to move the dish to 0 position.

Set West Limit

Enable West limit.

Set East Limit

Enable East limit.

Disable Limit

Disable West limit and East limit.

F: Channel search

In this menu, you can select scan mode like TP/blind/network scan, you also can select all Channels & FTA Channels by setting the search option



G: Start Search Channels

After set above step, press ok you will be asked whether delete all exist channels if there are existing channels on selected satellites or TPs, you can choose yes or no, will start searching. During searching the TV Channel and Radio Channel will be listed separately.



Factory Default

 
You can erase all the channels and settings. If select All, press OK you will be asked to select "start" or "quit". If select "start" all data and setting will be lost. (as well as channel list, radio list and scramble channel list). In the end, you also can save or load default channel list.

Save User Data

Enter this menu, you can save the STB data to your STB when you press OK on RCU, STB data will be saved automatically

Load User Data

In case you make a factory default, or you delete the channel list by mistake, enter this menu, you can load the STB data for which you already saved from flash to your STB

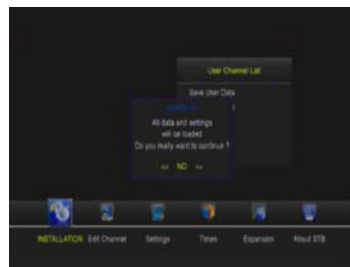

Spectrum

A tool for expert to view the strength of signal in your STB

4.2 EDIT CHANNEL

In this menu you can set program edit like delete, lock, rename, move and swap the selected channel, set FAV and so on.



TV Channels

Here you can Select Channel, Delete Channel, Skip Channel, Move Channel, Lock Channel. Select TV Channels, you will get this window.

Move

Press OK to select the channel you want to move, and move to the position you like, or just input the numeric key, the channel you selected will move to that position



Delete

Here you can delete the channel you choose, and press OK to select and press again OK to confirm delete

Lock

Here you can lock one channel, press OK to input password, and you can have a channel with locking.

Rename

Select channel that you want rename from channel list, press F1 button, then using the **UP/ DOWN /LEFT /RIGHT** keys to select characters which you want to edit. Press **OK** to confirm your selection. In this menu, you can set the word with the extend. Caps on or off.

Swap

You can select the channel that you want to swap from the channel list, press F2 button, you will be asked to swap the channel to put where, input the destination number and press **OK**. Then you can swap one channels from one position to another.

NOTE: Radio Channels operation similar to the above

Favorites

Press **MENU** button, here you can sort the channels in different type, such as news, movies, music, sports, Using the **UP/DOWN** keys select any sort press **OK**, then you can set the channels FAV type by pressing FAV key.



NOTE: Radio favors operation similar to the above.

4.3 SETTINGS

Here you can setup TV output and Video output according to the standard of your country.

 
System Settings

In this menu, you can choose MENU LANG, set AUDIO LANG, setting Digital Audio, menu transparency, TXT transparency, Display MODE, TV Type, SCREEN MODE, SCART OUTPUT etc... all in this menu




Parental Control

In this menu, you can set the password to Installation, Edit Channel, System, and also you can change the password, this is for the purpose of children misplaying with your STB.

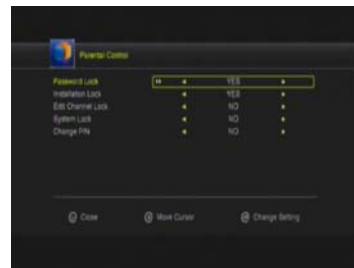

USALS Setup

 In this menu, you can set up USALS setting, and then you can use your DISH motor.

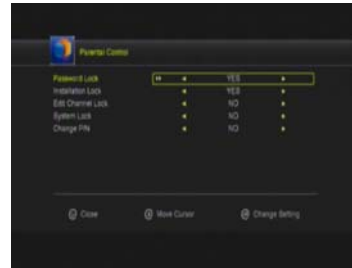

CA MENU

In this menu, insert the smart card, and you will get smart card info, and you can watch the scrambled channels.

4.4 TIMES

Time Settings

 
In this MENU, you can change the TIME MODE and setting time manually, or adjust GMT time.

The default time setup is auto, but you can select manual and input manually, select the time zone of your country and you will get the correct current time which is based on TDT (Time and Data Table) in the stream of the current channel service.



Event Timer

In this menu, you can set up the timer for event you have selected, so the STB will change the channel you already set up when the event time is on due.

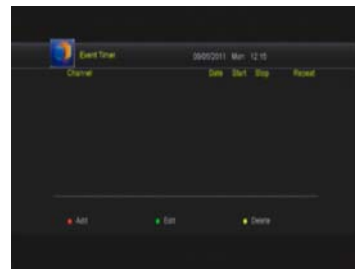

Sleep Timer

In this menu, you can set the sleep timer 15min, 30, 45, etc.. 120min, so that the STB will power off automatically on time.

 
Standby Hour

In this menu, you can set the standby hours of your STB, so that your STB will power off automatically on time.

4.5 EXPANSION

Games

Some classic games which will give your some happy times to play with !!

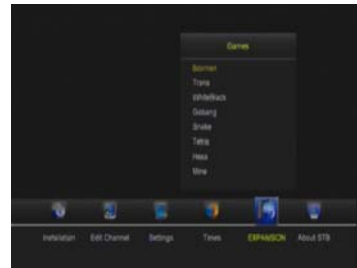


Multi Pictures

In this menu, user can watch 9 different small TV in one windows, we called it MULTI PICS



USB (Worked with a USB Device)

 USB menu only working when a USB device is connected with your STB !!

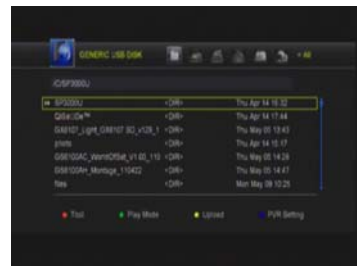

A. Tool

Press RED button, you will have tool function, and you can Rename Delete, Move, and Create new Folder, Sort, and Format disk in this menu to the USB device connected to your STB

B. Play Mode

Press GREEN button, you will have Loop, and Slideshow Interval, and Photo view mode, to gain the viewing experience of your multimedia pleasure

C. Upload

Press YELLOW button, you will have upload function, and you can upload data to your USB or to your ftp.

D. PVR Setting

Press PVR Setting, you can set the PVR path, and some other settings, for example, RECORD MODE, RECORD TIME, etc....

Note: USB support FAT & FAT32, NTFS

4.6 Other Useful Information

This will guide you on how to use general info while watching TV program or listening Radio program with some buttons on your RCU.



FAV

In viewing mode, you can get the favorite channel group by pressing FAV, press **FAV** button to change category. If you did not set favorite channel in advance, it will show with no FAV program.



EPG

In this view, you can get the electronic program guide if applicable. You can get the detailed information about that program by pressing OK button

Book

You can Switch Pre/Next Day EPG by Pressing **Red/Yellow** Key. In this menu, Press **Blue** key go to Book. Here you can set your favorite channels to begin broadcasting at future time you set, including both TV and Radio, press green button you can get the schedule directly, Here you can Add, Edit and Delete the event which you set.



Note: You can add multi- groups event timer.

SAT

Press **SAT** button on the remote control, you will get this menu which contains the satellites you searched and stored, select one satellite and press **OK**, all channels will be listed under that satellite you selected.



 
Channel List-OK

In viewing mode press **OK** button and you will get this window. Press / to view channel in different types, ALL, FTA, Scrambled and MPEG4/H264. Press SAT button, select one satellite and press OK, all channels will be listed under that satellite you selected.



TXT:

Show the teletext content if teletext is transmitted

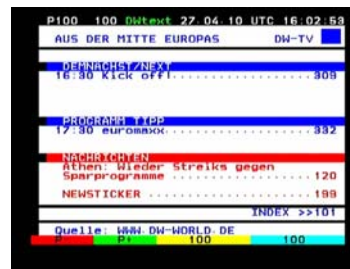

P100	100	Internet	27.04.10	UTC	16:02:55
AUS DER MITTE EUROPAS DW-TV					
PROGRAMMZEICHEN					
16:30	Kick off!		309		
PROGRAMMZEICHEN					
17:30	europamax		332		
NACHRICHTEN					
Athen: Wieder Streiks gegen Sparprogramme					
..... 120					
NEWSTICKER					
..... 199					
INDEX >>101					
Quelle: LWN DW-WORLD.DE					
100 100					

Subtitle

Press **SUB** button to show subtitle.



5. Additional Information

5.1 Trouble Shooting

You might meet abnormal working of this STB with various reasons. Check the following which may help you.

Problem	Possible causes	What to do
LED on the front panel fail to light up/is not lit.	Main supply cable is not connected.	Check if the main supply cable is plugged into the power socket.
No picture or sound.	Satellite dish is not aiming to satellite accurately. No signal or weak signal. The LNB is faulty. The cable is faulty.	Adjust the dish. Check the signal strength indicator in one of the channels search submenus. Check the cable connections, LNB and other equipment connected to LNB & receiver, or adjust dish. Replace the LNB. Replace the cable.
Bad picture/blocking error.	Satellite dish is not aiming to the satellite accurately. Signal too strong. Satellite dish is too small. LNB noise factor too high. The LNB is faulty.	Adjust the dish. Connect an attenuator to LNB input. Change to a larger dish. Change LNB with lower noise factor. Replace the LNB.
No startup menu on screen after turning on STB for the first time.	The system is connected by SCART cable and the TV is not in AV/ EXT mode.	Switch the TV to the appropriate AV input.
The remote control is not working.	Battery exhausted. Remote control is not aimed correctly STB is in standby mode.	Change the batteries (both). Aim the remote control at the STB. Check that nothing blocks the front panel. Check if LED indicator on the front panel is showing the time, press the power button to switch off standby mode.
You have forgotten your password.		Contact the dealer or Service Provider. They will help you set it up again.
Poor picture quality or Less channels in scanning.	Low LNB power or signal loss in cable.	Change the LNB power to 14V/19V in Antenna setup menu.

5.2 Technical Specification

Tuner & Demodulator

Frequency Range	950 MHz to 2150 MHz
Input Connector	F-type, IEC 169-24, Female
Signal Level	-25 to -65 dBm
RF Impedance	75 Ω ,unbalanced
IF Band width	55 MHz/8Hz(Per 5Msps)
LNB Power &	Vertical : +13 V, 14V +/-5%
Polarization	Horizontal : +18 V, 19V+/-5% Current : 500 mA Max. Overload Protection
LNB Tone Switch	22KHz+/-2KHz, 0.6Vpp+/-0.2V
DiSEqC Control	Version 1.0/1.2 Compatible, Tone burst A/B
Demodulation	QPSK/8PSK
Symbol Rate	1~45Ms/s/SCPC,MCPC
FEC Decode	Convolution Code Rate 1/2, 2/3, 3/4, 5/6 and 7/8 with Constraint Length K=7

MPEG

Transport Stream	MPEG-4/H.264, MPEG-2 ISO/IEC 13818
Profile Level	MPEG-4/AVC, MPEG-2 MP@ML, MP@HL
Input Rate	15 Mbit/s Max
Aspect Ratio	4:3, 16:9
Video Resolution	720 x 576, 720 x 480, 1280 x 720, 1920 x 1080
Audio Decoding	MPEG / MusiCam Layer I & II
Audio Mode	Single channel/Dual channel/Joint stereo/Stereo
Sampling	32, 44.1 and 48 KHz

A/V and Data In/Out Connector

TV SCART	RGB, CVBS, L, R out
LNB IF Input	F type, IEC 169-24 Female
LNB IF Output	F type, IEC 169-24 Female

Power Supply

Input Voltage	100 - 240V AC, 50/60Hz,
Power Consumption	Max. 18 W
Standby Power C	3W
Protection	Separate internal fuse. Input shall have lightening Protection

Physical Specification

Weight (Net)	Around 2.0 kg
Operating Temp	0° C + 40° C
Storage Temp	-40° C to + 65° C

5.3 Glossary

Antenna

A device collects and radiates electromagnetic waves. Includes a satellite dish and broadband antenna.

DiSEqC

DiSEqC(Digital Satellite Equipment Control)system, it is a communication bus between satellite receivers and peripheral equipment using the only existing coaxial cable.

DVB

The Digital Video Broadcast group was created to establish a technical framework for the introduction of digital video broadcasting systems.

LNB (low-noise block converter) or LNBF

An electronic unit mounted on the satellite dish. It receives signals reflected by the dish and converts them to signals that can be used by the digital satellite receiver.

GHz

The prefix Giga means milliard, and Hertz means cycles per second. Signals in the GHz range are often called microwaves.

MHz

The prefix mega means million, and Hertz means cycles per second.

MPEG

Moving Picture Experts Group. Established by the International Standards Organization to provide the basis for a picture coding and compression system.

 Forward Error Correction (FEC)

A system of error control for data transmission.

 PID(Packet Identifier)

A set of numbers that identifies transport stream packets containing data from a single data stream.

 Polarization

Polarizations allows several programmers to be fit into the same frequency band. The signals from a satellite are transmitted either with linear (vertical or horizontal) polarizations or circular (right or left) polarizations.

 QPSK(Quaternary Phase Shift Keying)

Phase-shift keying in which four different phase angles are used.

 Transponder

An automatic device that receives, amplifies and retransmits a signal on a different frequency.

 Symbol rate

Speed of the digital transmission

 RGB

Red, Green, Blue. Color signals are routed in separate cables in order to provide a high quality TV picture.

 Scrambled TV programmer

Some TV programmers are transmitted in scrambled form.

SCART

A 21-pin connector used for connection of the receiver, VCR and TV. Also named Euro connector or Parietal connector.

S/PDIF

Sony/Philips Digital Interface Format. Digital audio output.

RCA

Coaxial connector used to connect the receiver to an external amplifier.