

LINEA 1 INSTRUCTION MANUAL

CHAPTER 1 - INTRODUCTION

Thank you for purchasing the Linea 1 PDA. Please read this manual carefully to familiarize yourself with the PDA's many features, and to ensure years of reliable operations.

NOTICE

We assume no responsibility for any damage or loss resulting from the use of this manual.

We strongly recommend that separate, permanent printed records be kept of all data. Under certain circumstances, such as exposure to an electrostatic discharge, data may be lost or altered, or the unit may become inoperative until reset. Therefore, we assume no responsibility for data lost or otherwise rendered unusable, whether as a result of improper use, repair, battery replacement, or use after the specified battery life has expired from similar causes.

We assume no responsibility, directly or indirectly, for financial losses or claims from third persons resulting from the use of this product and all of its functions, such as stolen credit card numbers, the loss or alteration of stored data, etc.

This product was not designed to bend or survive extreme pressure. Do not carry it in your trouser pockets. When in a bag or briefcase, make sure that it is stationary and well padded and protected.

To provide a longer product life, a lid cover is provided with the Linea in order to avoid scratches or damage when carrying the product. Do not apply harsh chemicals or water to the display. Do not store the product in environments where temperature ranges can be extreme.

The information provided in this manual is subject to change without notice.

SAFETY TIPS

- Be careful not to scratch the touch screen. Use only the supplied stylus or other plastic-tipped pens designed for the touch-sensitive screen. Never use an actual pen or pencil, fingernails or other sharp objects on the surface of the touch screen.
- The Linea should be protected from rain and moisture. Treat the Linea as you would other electronic devices.
- Do not drop your Linea or subject it to strong impacts.
- Protect your Linea from extreme temperatures.
- The touch screen can be cleaned with a soft cloth lightly moistened with a window cleaning solution. Commercial cleaners are sold separately.

CHAPTER 2 - WORKING WITH THE LINEA

BATTERY INSTALLATION

Before you start using the Linea, you must install the three included CR2032 Lithium batteries. Check the back of the PDA. You will see the battery compartment door. Slide the door lock switch to the unlock position. Remove the battery compartment door. Install the batteries with the + sign on the battery facing you. After you have installed the batteries, put the battery compartment door back on the unit.

IMPORTANT NOTE – YOU MUST LOCK THE BATTERY COMPARTMENT DOOR BEFORE USING THE PDA. YOUR PDA WILL NOT OPERATE UNTIL THE DOOR IS LOCKED IN PLACE BY MOVING THE LOCKING SWITCH TO THE LOCKED POSITION!

DO NOT APPLY UNNECESSARY FORCE WHEN REMOVING OR REPLACING THE BATTERY COVER. THE COVER SHOULD EASILY FIT INTO ITS PLACE IN THE BACK OF THE UNIT.

Note: Battery voltages are constantly monitored; a low battery warning message will show when power level gets too low. Replace the batteries when this message is displayed. You can change the battery without losing any information. Do not try to operate or synchronize the Linea with a low battery; data can be corrupted or lost.

The data that has been synchronized to the computer can be restored to the Linea by synchronizing again.

CHAPTER 3 - RESET INITIALIZATION


YOU MUST RESET THE LINEA BEFORE USING IT FOR THE FIRST TIME. FOLLOW THESE RESET INSTRUCTIONS:

To ensure smooth operation you need to reset the organizer. Insert a pointed object, such as a pencil point or the open end of a paperclip into the RESET hole located on the back of the unit. Press lightly until the PDA displays "ERASE DATA" and "KEEP DATA". Touch "ERASE DATA" to reset or touch "KEEP DATA" to keep data.

NOTE: RESET WILL CLEAR THE MEMORY OF ALL DATA AND SETTINGS.

When the initialization is complete, the display switches to the clock screen.

Back Light

Tap the  icon to turn the back light on or off.

CHAPTER 4 - ON – SCREEN KEYBOARD DATA ENTRY

You can use the virtual on – screen keyboard for data entry.

USING THE ON – SCREEN VIRTUAL KEYBOARD

When entering new records or editing existing records in any application, the virtual keyboard will automatically appear on the bottom of the touch screen. Tap the character keys to enter each character.

Normal Character Keyboard:

1	2	3	4	5	6	7	8	9	0
Q	W	E	R	T	Y	U	I	O	P
A	S	D	F	G	H	J	K	L	@
CAP	Z	X	C	V	B	N	M	SP	Int

1	2	3	4	5	6	7	8	9	0
q	w	e	r	t	y	u	i	o	p
a	s	d	f	g	h	j	k	l	@
CAP	z	x	c	v	b	n	m	SP	Int

International Character Keyboard:

À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É
Ê	Ë	Ì	Í	Î	Ï	Ö	Ø	Ù	Ú
Û	Ü	Ý	Þ	ß	À	Á	Â	Ã	Ä
Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î

À	Á	Â	Ã	Ä	Å	Æ	Ç	È	É
Ê	Ë	Ì	Í	Î	Ï	Ö	Ø	Ù	Ú
Û	Ü	Ý	Þ	ß	À	Á	Â	Ã	Ä
Å	Æ	Ç	È	É	Ê	Ë	Ì	Í	Î

Symbol Keyboard:

1	2	3	4	5	6	7	8	9	0
!	"	#	\$	%	&	'	()	*
+	,	-	.	/	:	;	<	=	>
? [\] ^	_	`	~	€	£	¥	¢

Cap (caps lock), SP (Space)

INTERNATIONAL CHARACTERS

1. Touch the **Int** key on the on–screen virtual keyboard to activate the international character keyboard.
2. Touch the **En** key on the on–screen virtual keyboard to return to normal character keyboard.

Symbols

Touch the **SYM** key to activate the symbol keyboard.

CHAPTER 5 - MENU



The PDA's built-in functions can be accessed by either tapping on the icon itself with the included stylus or by tapping the Menu icon. Tapping the Menu icon will give you access to the complete array of functions built into your Linea. Those functions include: Phone book, Planner, todo, clock, translator, calculator, memo, expense, anniversary, web book, alarm, stop watch, game, memory optimization, memory usage, PC Sync, password, and system preferences.

CHAPTER 6 - HOME AND WORLD TIME, DAILY ALARM AND STOP WATCH



This screen is used to select and set the Home City, Home Time and World City. Display this screen at anytime by tapping the Menu icon and then tapping time icon on the left.

01-Jan-2003		Wed	
12:25:48		AM	
New York			
U.S.A.			
Set	DST	Home	

Note: The Home prompt on the lower right part of the display indicates Home Time mode.

SETTING DATE AND TIME

To set the correct time in the Home Time mode, tap the **set** prompt located at the lower left part of the display. Tap the date, time and city fields to edit that field.



Editing the Date

1. In the Home Time setting mode, tap the date for the date selection screen.
2. Change the year by tapping on the right or left arrows next to the year.
3. Change the month by tapping on the right or left arrows next to the month.
4. Select the desired date from the provided calendar.
5. Tap **ok** to confirm.

Editing the Time

1. In the Home Time setting mode, tap the time for the time selection screen.
2. Select the desired hour and minute from the lists. If in 12-hour clock mode, tap **AM** or **PM** as preferred. In the minute field, tap the up or down arrows for one-minute increments.
3. Verify that the time at the upper part of the display corresponds to the desired time.
4. Tap **ok** to confirm.

Selecting Home City

To select a country and city for Home Time mode:

1. Tap on the city name, **New York U.S.A.**, to enter the Country and City list selection.
2. Tap any of the letter keys on the last line of the screen to quickly access and display a city and country. Use the up/down keys to scroll through the country and city list. Tap the Place/city tab on the upper right to sort world Places/cities alphabetically.
3. Tap the selected city in the list to make it the city showing in the Home Time mode. Tap OK again to confirm the settings.

Setting Daylight Savings (DST)

In the home time view screen, tap DST to turn Daylight Savings on or off. When turning DST on, the displayed time will increase one hour.

Setting World City

1. In World time view screen, tap set to select the world city.
2. Follow same procedure used for the home city to select world city.

 
Viewing Home Time and World Time

Home time and world time can be viewed from any function by pressing the menu key and then tapping time icon. Tap **home/world** on the lower right part of the display to toggle between Home Time or World Time modes.

DAILY ALARM



Tap the menu icon and tap alarm icon for the daily alarm screen.

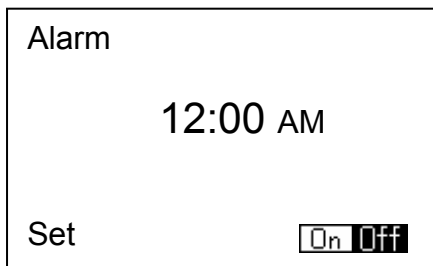

To set the daily alarm:

 
1. Touch **set** to enter a new alarm.
2. Select the alarm time as in **Editing Time** above.
3. Tap the **On/ Off** key to activate/deactivate the alarm time.
4. Tap **ok** to save the settings.

When home time reaches the time set for the daily alarm, the alarm tone will beep for 30 seconds. Press any key or Tap anywhere on the screen to stop the sound. **The alarm is activated if the Linea is off or on.**

STOP WATCH



Tap the Menu key and tap stop watch icon for the stop watch screen.

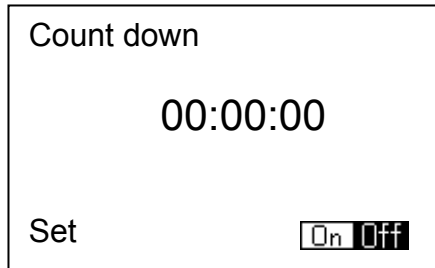

To set stop watch time:

1. Touch **set** to select a count down value.
2. The maximum time for counting down is 99:59.
3. Tap the **On/ Off** key to activate/deactivate the stop watch.
4. A beep tone will turn on automatically for 30 seconds when the time is counting down to 00:00 and count down is enabled. Tap any key to stop the beep tone.

CHAPTER 7 – PASSWORD



Tap the Menu icon and tap the password icon to enter the password.

You can assign a password to the Linea. For security purposes, the entire unit can be locked from normal view or use unless the proper password is entered. **Keep a record of your password!**

IF YOU FORGET YOUR PASSWORD THERE IS NO WAY TO ACCESS ANY HIDDEN RECORDS. THERE IS NO "BACK DOOR" INTO THE SYSTEM. YOU MUST RESET THE LINEA AND CLEAR ALL THE MEMORY.

Assigning a Password

1. The Linea will prompt you to enter a new password.
2. Use the keyboard to enter the password.
The characters will be shown as * during entry.
3. Tap **ok**.
4. The Linea will prompt you to confirm the new password by entering the password again.
5. After entering password again, tap **ok**. Password is now assigned.

After assigning a password you must enter the password every time the Linea is turned on.

Deleting a Password

1. If a password is set and the user wants to delete it, tap the menu icon and tap the password icon.
2. The Linea will prompt you to enter your existing password.
3. Use the keyboard to enter the password.
4. Tap **ok**.
5. If correct password is entered, the screen message "Enter a new password" appear, tap **ok** to confirm deletion.

Changing a Password


1. Tap the Menu icon and tap the password icon.
2. The Linea will prompt you to enter your existing password.
3. Use the keyboard to enter the password.
4. Tap **ok**.
5. The Linea will prompt you to enter a new password.

CHAPTER 8 - PHONE BOOK



Tap the phone icon on the keyboard or tap the phone icon in the menu mode. This application allows you to keep names, addresses, phone numbers, email address and other information about your contacts.

 PHONE LIST MODE

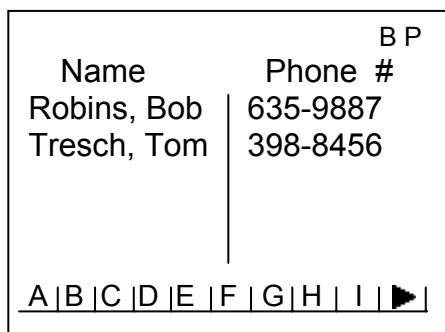

A Phonebook record can consist of all or part of the information below. You do not need to enter all of this information.

1. Last name
2. First name
3. Company
4. Title
5. TEL (H)
6. TEL (W)
7. Fax
8. Mobile
9. Pager
10. Email
11. Address
12. City
13. State
14. Zip
15. Note

Phone list view shows the list of names, sorted alphabetically according to each name "Last Name, First Name" stored in the record's name field. To view the phone list sorted by Company name, tap 'Name' at the first line of the display.

		B P
Company	Name	
ABC Co.	Robins, Bob	
XYZ Ltd.	Tresch, Tom	
<div> <div>A</div> <div>B</div> <div>C</div> <div>D</div> <div>E</div> <div>F</div> <div>G</div> <div>H</div> <div>I</div> <div>▶</div> </div>		

CREATING, EDITING AND DELETING PHONE RECORDS

Add a new record

1. Tap the New icon to add a new record.
2. The cursor is ready for you to start entering characters in the last name field.
 - As soon as you start entering data into a field, the field name disappears leaving the field icon on the beginning of the line to remind you which field you are currently editing.
 - Use the stylus to tap a new entry location.
 - Use the **Up/Down** keys to move the cursor to a different line.
 - Tap **Page Up/Page Down** to see more fields.
 - Tap the **GRP** key to assign the record to the **B**(business) or **P**(personal) category.
 - Tap **ok** to save the information.

Editing records

1. To edit a specific record, tap the record then tap the edit icon.
2. Tap the field requiring editing.
3. Enter new information.
4. Tap **ok** to save the information and return to the list mode.

Deleting records

1. To delete a record, tap the record then tap the del icon.
2. Press ok to remove the record.

FINDING PHONE RECORDS









There are several ways to find phone records in the Phonebook application. They are as follows:

- Tap the alphabet key on the last line of the screen to quickly move to the beginning of that group of letters.
- Press the **up/down** keys to scroll through a long list of contacts.
- Press the **Page up/Page down** keys, on the side of the PDA to scroll each page of the list at a time.
- Tap **GRP** key to select the **B**(Business), **P**(Personal) or **BP**(All) category name to be viewed.
- Tap **Find** key to enter desired text for searching.

VIEWING PHONE RECORDS

Switch from a phone list view to an individual record view by double tapping the corresponding record.

B ▾

	Robins
	Bob
	ABC Co.
	Engineer
	398-8456
	467-0939
	357-6245
	343-7243

- Tap the desired field to see the detail.
- Touch the **Up/Down** arrows to see more fields.
- Tap the line to enlarge the content of the line.
- To go back to the list view, touch **Esc**.

CHAPTER 9 - Scheduler



Tap the Menu icon and then the scheduler icon to start the scheduler application.

SCHEDULER LIST MODE

A schedule record consists of:

1. Date
2. Start time
3. End time
4. alarm
5. Note

Scheduler list view shows the list of records, sorted chronologically according to the date and start time stored in the record. To view the scheduler list sorted by Note, tap 'Note' at the first line of the display.

B P

Date	Note
16-Jan-2003	Plan1
01-Jan-2003	Plan2

A
B
C
D
E
F
G
H
I
▶

CREATING, EDITING AND DELETING SCHEDULER RECORDS

Add a new record

1. Tap the New icon to add a new record.
2. The cursor is ready for you to start entering characters in the note field.
 - Tap date to edit scheduler date
 - Tap start/end time to modify the start/end time
 - Tap alarm to toggle the alarm on/off of the record
 - Use the stylus to tap a new input location.
 - Tap the group to assign the record to the **B**(business), **P**(personal) category.
 - Tap **ok** to save the information and return to the List mode.

Editing records

3. To edit a specific record, tap the record then tap the edit icon.
4. Tap the field requiring editing.
5. Enter new information.
6. Tap **ok** to save the information and return to the list mode.

Deleting records

7. To delete a record, tap the record then tap the del icon.
8. Press ok to remove the record.

FINDING SCHEDULER RECORDS

There are several ways to find records in the scheduler application. They are as follows:

- Tap the alphabet key on the last line of the screen to quickly move to the beginning of that group of letters.
- Press the **up/down** keys to scroll through a long list of contacts.
- Press the **Page up/Page down** key to scroll each page of the list at a time.
- Tap **GRP** key to select the **B**(business), **P**(personal) or **BP**(All) category name to be viewed.
- Tap find Key to enter desired range of date and text for searching.

VIEWING SCHEDULER RECORDS

Switch from a scheduler list view to an individual record view by double tapping the corresponding record.


P

alarm: ☒

Date: 01-Jan-2003

Start time: 12:00AM

End time: 06:00PM

 Plan2

- Tap the note field to see the detail of the note.
- Touch the **Up/Down** arrows to see more on the note if exist.
- Tap the line to enlarge the content of the line (only in note field).
- To go back to the list view, touch **Esc**.

CHAPTER 10 - PLANNER

Tap the **Calendar** icon to enter the planner mode. Tap **Calendar** icon again to toggle among monthly, weekly and daily planner.

The monthly planner function is used to view one month of planner, anniversary and todo activities.


Icons next to a specific date indicate the type of events specified for that date.

A dot on the upper indicates an anniversary event.

A dot in the middle indicates a todo event.

A dot on the lower indicates scheduler event.

B P

◀2003▶  2 3 4

◀ Jan ▶ 5 6 7 8 9 10 11

12 13 14 15 16 17 18

19 20 21 22 23 24 25

26 27 28 29 30 31

Finding the desired date in the planner


Tap page up / page down to scroll one month at a time

Tap up / down to scroll one week at a time

Tap left / right to scroll one day at a time

The weekly planner function is used to view one week of scheduler, anniversary and todo activities.

B P v

2002 ◀ ▶ 29 30 31  2 3 4

12 00:00

01:00

02:00

03:00

04:00

05:00

Tap page up / page down to scroll through the twenty-four hours time bar.
 Tap up / down to scroll one week at a time
 Tap left / right to scroll one day at a time

The daily planner function is used to view one day's records.

They are listed in the following order.

1. anniversary
2. todo
3. scheduler

Creating new records in the planner

You can add new anniversary, todo and scheduler in planner by pressing new key. Select the desired record type and follow the procedures used in creating scheduler records.

Finding and Viewing Records

Follow the procedures used in finding and viewing scheduler records.

Editing and Deleting Records

Follow the procedure used in editing and deleting scheduler records.

CHAPTER 11 - TO DO



Tap the **ToDo** icon or tap todo icon in menu to activate the todo application. This application allows you to keep track of important tasks.

TO DO LIST MODE

A record consists of:

1. Due Date
2. Priority ranking from 1 to 5
3. Status of the task: Done/Pending
4. The details of the task

The To Do list has four columns. The first column shows the status. The second column shows the due date. The third column shows the priority ranking and the last column contains note of tasks.


		B P	
S	Date	P	Note
<input checked="" type="checkbox"/>	16-Dec-2001	3	Meetin
<input type="checkbox"/>	01-Feb-2003	1	Dinner
<div> <div>A</div> <div>B</div> <div>C</div> <div>D</div> <div>E</div> <div>F</div> <div>G</div> <div>H</div> <div>I</div> <div>▶</div> </div>			

The sorting order for the To Do item list can be toggle by tap the first line of the screen.

- Sorted by due date
- Sorted by priority ranking

Finding and Viewing TO DO records

Follow the procedures used in finding and viewing scheduler records.

	B
Done?	<input checked="" type="checkbox"/>
Priority:	3
Due Date:	16-Dec-2001
 Meeting	

Creating, Editing and Deleting TO DO records

Follow the procedures used in creating, editing, deleting scheduler records.

CHAPTER 12 - ANNIVERSARY



Tap anniversary icon in menu to activate Anniversary application. This application allows you to track important events.

ANNIVERSARY LIST MODE

A record consists of:

1. Date
2. Alarm
3. The details of the anniversary

Anniversary list view shows the list of Date, sorted chronologically according to the date (day and month only) stored in the record. To view the anniversary list sorted by Note, tap 'Note' at the first line of the display.

B P	
Date	Note
29-Feb-2004	Ann's Birthda
01-May-2000	Mary's Birthd
A B C D E F G H I ►	

Finding and Viewing Anniversary Records

Follow the procedures used in finding and viewing scheduler records.

B	
alarm:	<input checked="" type="checkbox"/>
Date:	29-Feb-2004
	Ann's Birthday

Creating, Editing and Deleting Anniversary Records

Follow the procedures used in creating, editing, deleting scheduler records.

CHAPTER 13 – NOTES – (MEMOS)



Tap the memo icon in the Menu mode to activate the memo application.

Notes List Mode

A note or memo record consists of:

1. Date (non-editable)
2. Time (non-editable)
3. To/From
4. Subject
5. Note




Notes list shows the list of text memos, sorted by entry date. To view Note list sorted alphabetically tap 'Note' at the first line of the display.

B P	
Date	To
01-Jan-2004	Van
02-Jan-2004	Maggie
A B C D E F G H I ►	

Finding and Viewing Notes Records

Follow the procedures used in finding and viewing scheduler records.

P

Date: 01-Jan-2004
Time: 01:00AM
 Van
 Lunch
 Lunch Time is 1:00pm

Creating, Editing and Deleting Notes Records

Follow the procedure used in creating, editing and deleting scheduler records.

CHAPTER 14 – WEB BOOK



Tap web book icon in menu to activate web book application. This application allows for storing URL information.

Web book List Mode

A web book record consists of a URL and a descriptive note.

The Web book list function shows the list of records sorted by URL. To view web the book list sorted alphabetically by note, tap 'Note' at the first line of the display.

B P



URL	Note
abc.com	ABC Co.
ming.com	Ming's Co.

A B C D E F G H I ▶

Finding and Viewing web book Records

Follow the procedures used in finding and viewing scheduler records.

B

 abc.com
 ABC Co.

Creating, Editing and Deleting web book Records

Follow the procedure used in creating, editing and deleting scheduler records.

CHAPTER 15 – EXPENSE



Tap expense icon in the Menu. This application allows for storing shopping information.

Expense List Mode

A expense record consists of:

1. Date
2. Type
3. Payment
4. Amount
5. Note

The Expense list has three columns. The first column shows the expense date. The second column shows the type. The third column shows the amount.

B P		
Date	Type	Amount
01-Jan	Ente	65.00
02-Jan	Meal	100.00
A B C D E F G H I ►		

The sorting order for the expense list can be changed by tapping the first line of the screen.

- Sorted by date
- Sorted by type

Expense Sum

To see the sum of the report tap the **Amount** on the first line while in expense list mode. The options are as follows:

Between: DD-MM-YY

And: DD-MM-YY

Type: ALL

Pay by : ALL

Sum = 0.

Tap the above fields to select and input the desired summing criteria.

Finding and Viewing Expense Records

Follow the procedures used in finding and viewing scheduler records.


P

Date: 02-Jan-2004

Type: Meals

Pay by: Visa

Amount: 100

 Dinner

Creating, Editing and Deleting Web Book Records

Follow the procedure used in creating, editing and deleting scheduler records.

Below are choices for expense type.

- Meals
- Entertainment
- Hotel
- Airfare
- Train
- Taxi
- Car rental
- Fuel
- Phone
- Sample
- Souvenir
- Gift
- Miscellaneous

Below are choices for expense payment method.

- Visa
- Mastercard
- American Express
- Diner Club
- Credit Card

- Check
- Cash
- Other

CHAPTER 16 – CALCULATOR



Tap the **CAL** icon or tap calculator icon in Menu to activate a full function 12-digit calculator. Functions include arithmetic operations (+, -, x, ÷ and %). Memory storage operations such as MR, MC, M+, M-, are also available

Calculations are performed in the order of the entry, not by algebraic conversion.

- "M" on the display indicates a number is stored in Memory.
- "E" on the display indicates an error: a number longer than 12 digits or when divided by 0. Tap [AC] to clear the error.
- [C] – Clear the last entered value. Tap twice to cancel calculation.
- [AC] – All cancel by pressing once.
- [M+]/[M-] – Adds/subtracts the currently displayed value to/from the current memory contents.
- [MR] – Recall the numbers stored in memory.
- [MC] – Clear the number after recall from the memory.
- [+/-] – Switches the sign between positive and negative.

The leftmost column in the calculator view includes all the conversion functions. See Chapter 17: CONVERSIONS for details.

CHAPTER 17 - CONVERSIONS



Tap the Calculator icon to access the Calculator mode. Metric and Currency Conversions are available in this mode. Conversions are treated as calculator functions. The amount has to be entered in the Calculator mode before selecting the desired conversion function.

METRIC CONVERSION

kilometer ⇔ mile
 hectare ⇔ ace
 ace ⇔ square meter
 litre ⇔ gallon
 pint ⇔ gallon
 ton ⇔ pound
 gram ⇔ ounce
 °F ⇔ °C

For Converting Physical Measurements:

1. Enter the amount to be converted in the calculator mode.
2. Tap the Metric Conversion box in the calculator mode.
3. Tap the arrow corresponding to the desired metric conversion and conversion direction.
4. Result is displayed in the Calculator mode.

CURRENCY CONVERSION

Hm\$1 ⇔ other
 Hm\$1 ⇔ GBP
 Hm\$1 ⇔ YEN
 Hm\$1 ⇔ ITA
 Hm\$1 ⇔ ESP
 Hm\$1 ⇔ FR
 Hm\$1 ⇔ SFR
 Hm\$1 ⇔ EURO

In order to use the currency conversion, first set the exchange rate:

1. Tap the Rate box in the Calculator mode.
2. Tap line of a currency to be set.
3. Enter the value amount of \$1 (or one home currency unit if other than a dollar) using the digit keys on the keyboard. Use the ← key to correct entries.
4. When all currencies are set, tap **ok** to confirm.

Currency Conversion is treated as a calculator function. To convert an amount from one currency to another:

1. Enter the amount to be converted in the Calculator mode.
2. Tap the Currency Conversion box in the Calculator mode.
3. Tap the arrow corresponding to the desired currency and conversion direction.
4. Result is displayed in the calculator mode.

EURO CONVERSION

EURO ⇔ BEF
EURO ⇔ DEM
EURO ⇔ ESP
EURO ⇔ FRF
EURO ⇔ IEP
EURO ⇔ ITL
EURO ⇔ LUF
EURO ⇔ NLG

Follow the procedures used in Currency Conversion previously.

Note that Euro Conversion rates are set for the given currencies, therefore the Set Currency function does not apply to Euro Conversion.

PC SYNCHRONIZATION



To perform PC synchronization you must first connect the Linea to your PC. To connect the Linea to your PC, turn off your computer and plug the supplied cable into the serial communication port on the PC.

Note: The Linea PDA requires a dedicated serial port. It cannot share a port with an internal modem, hand held or any other device. If you are unsure about the exact location of the serial port on your computer, refer to the user's manual supplied with the computer.

1. Install the PDO Desktop software from the included CD ROM if you are going to use the Royal Desktop Personal Information Manager. **IF YOU ARE GOING TO SYNCHRONIZE YOUR RECORDS WITH MICROSOFT OUTLOOK, DO NOT INSTALL PDO DESKTOP. INSTALL COMPANIONLINK INSTEAD.** The installation routine should start automatically when you insert the supplied CD into your PC. Simply follow the PC-screen prompts to install the correct PC software package.
2. After installation you will have two shortcuts on the PC Desktop. They are labeled PDO Desktop and SmartSync.
3. SmartSync must now be configured to work with your PC. To configure SmartSync double click on the SmartSync desktop shortcut. SmartSync will launch and appear in the lower right corner of the PC screen in the system tray.
4. Right click on the SmartSync icon and select SmartSync Settings. Here you can select the appropriate Comport (COM1, COM2, etc) for your PC. Select the correct port and Click on Apply and OK.
5. SmartSync must appear in the system tray in order for the synchronization process to function. You will have to manually start the SmartSync process unless you have selected the "Load SmartSync automatically when computer starts" option in SmartSync Settings.
6. Connect the provided cable between the PC Comport and the Linea. Make sure the cable fits snugly.
7. On the Linea go to the Menu and scroll down to Syn. Icon. Click OK and then answer "Yes" to initiate the sync procedure.
8. You will see the sync process start on the PC and "In Progress" will appear on the Linea. When successfully finished a message will appear on the PC, "Sync OK" and on the Linea1 you will see "OK".

SYSTEM PREFERENCES



System Preferences define the general settings of Linea; these settings are:

- Language – selects the prompt language.
Options are:
ENGLISH
ITALIANO
DEUTSCH
FRANCAIS
ESPAÑOL
PORTUGUÊS
DUTCH
- LCD contrast – select the suitable contrast for easy viewing of the screen.
- Date and Time formats – tap your desired format.
- Key Tone – tap **off** to cancel the key click tones.
- Auto Shut-off – select from 1,2,3,4 or 5 minutes.

MEMORY USAGE



This function allows you to keep track of the memory space left in the Linea. Memory capacity is shown as percentage used.

MEMORY OPTIMIZATION



Perform this optimization regularly in order to fully utilize the memory.

The process might take a few minutes. Once the procedure is started, do not turn the unit OFF. The unit will not accept any input while the memory optimization is processing. The screen will automatically return to the Menu screen after finishing the process.

CHAPTER 18 - SPELL CHECK AND TRANSLATOR

Spell Check

To start the spell checker, tap the **Spell** icon.

To check spelling, enter the word and tap ok to start checking.

If the word is correct, a message "CORRECT" shown.

If the word is incorrect, related words and the corresponding number of words found are shown. The following screen message is displayed

FOUND XX
?????

XX-the number of corresponding words found
?????-the related word

To view characters which are not displayed, tap up / down or page up / page down for off-screen characters.
Tap the line to enlarge the content of the line.

Translator



Tap the **Spell** icon twice or tap the translator icon in menu to enter translator application.

Screen message shown in the following format

Source:		English							
Target:		Italiano							
Input Searching String :									
-									
1	2	3	4	5	6	7	8	9	0
Q	W	E	R	T	Y	U	I	O	P
A	S	D	F	G	H	J	K	L	@
CAP	Z	X	C	V	B	N	M	SF	Int

There are 7 languages for translation:

ENGLISH
ITALIANO
DEUTSCH
FRANÇAIS
ESPAÑOL
PORTUGUÊS
DUTCH

Tap Source and Target to select source and target language.




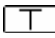
Enter the word for translation, Tap ok to start translation. Maximum length is 16 characters.

The first line shows the inputted or corresponding source word, the second line shows the translated word.

To view characters which are not displayed owing to the restriction of the screen, tap up / down for off-screen characters.

To go to next/previous keyword, press page up/page down key.

Tap the line to enlarge the content of the line.

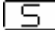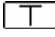	FOOD
	NUTRIMENTO M.
	CIBO M.
	ALIMENTO M.

CHAPTER 19 - GAME



Tap the Menu icon followed by the game icon to enter the game mode.

There are two games.

1. Hangman Game
2. Matching Game

Hangman Game

The user is required to guess the word with only the length of the word given initially. Enter letters which may be contained within the word. If the guess is correct, the letter will be shown on the screen in its appropriate position(s) within the word.

The user will win the game if the entire word is guessed correctly within 9 attempts.

Matching Game

Match symbols hidden each square in the fastest times to win

1. Select the game level by tapping level.
2. Tap a square to view the hidden symbol, tap a second square that matches the first symbol.
3. The game is finished when all matching symbols pairs are found.