

KOLEOS

QUICK GUIDE





WELCOME TO YOUR KOLEOS

Note

Congratulations on your choice: comfortable, adjustable and high performing, Koleos is an easy, everyday car. Koleos can also offer you real four wheel drive capacity and optimum safety in all situations.

The main functions of your Koleos are explained in this document.


This document does not replace the driver's handbook.

Please read the complete Driver's Handbook for more detailed information on the equipment mentioned in the reference guide for your Koleos.

Detailed information regarding your vehicle's use, maintenance and warranty, as well as videos and simulators, are all only a click away in the Koleos e-Guide, accessible at www.e-guide.renault.com.




Front and engine compartment	3
Passenger side	4
Rear seats	5
Rear	6
Accessing the vehicle	7
RENAULT card	8
Dashboard	9
Audio/telephone system	11
Telephone/navigation system	13
Lights/wipers	15
Driver's position: settings	16
All-wheel drive system	18
Heating and air conditioning system	19
Assisted parking brake	20
Cruise control/speed limiter	20
Fuel	21
Gadgets	22

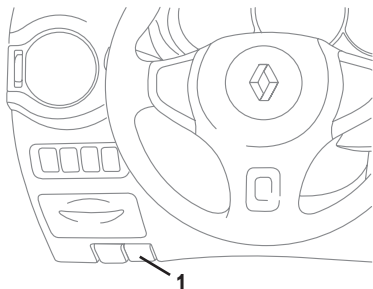

Opening the bonnet

Pull the control **1** and push the lever **4** (movement **A**).

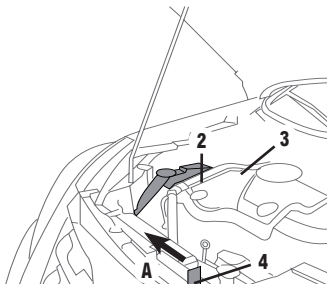


Screen washer fluid level

Add some fluid to reservoir **2** if necessary.

Coolant level

The level indicated on the reservoir **3** should be between MIN and MAX.

If it is necessary to top up this level, it is essential to do so when the engine is cold.

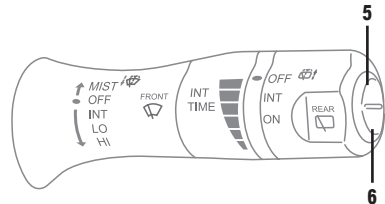


Engine oil level

You can check the oil level on the instrument panel: when the ignition is switched on and for 30 seconds, press once on either button **5** or **6**. The oil level is displayed on the instrument panel.

You must observe the service intervals and the standards governing the oils tested for your engine. Refer to the maintenance service and warranty booklet for your vehicle and to Section 4 of your Driver's Handbook for the precautions to follow when filling with oil.



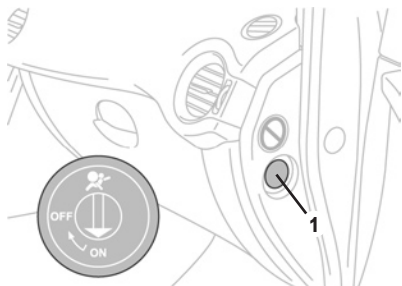


Deactivating the front passenger air bag

When fitting a child seat (only rear-facing child seats can be fitted in this seat), it is essential to deactivate the air bag: with the vehicle stationary, insert the key integrated in the RENAULT card in switch **1** and turn it to **OFF**.

With the ignition on, you must ensure that warning light **2** is on.

Reposition the switch immediately to **ON** as soon as you are no longer using the child seat.

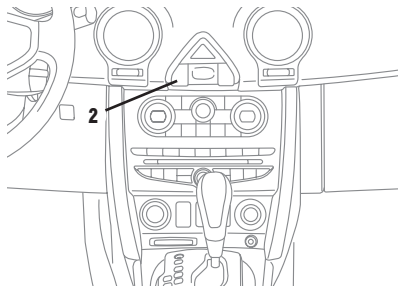


Activation of the front passenger air bag

You should reactivate the air bag as soon as you remove the child seat from the front passenger seat to ensure the protection of the front passenger in the event of an impact.

To reactivate the air bag: with the vehicle stationary, insert the key integrated in the RENAULT card in switch **1** and turn it to the **ON** position.


With the ignition on, you must ensure that warning light **2** is off.

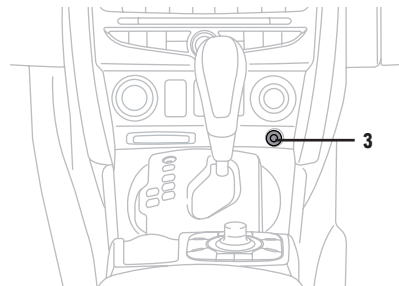

Audio connection socket

You can connect your audio player to your vehicle. There is a dedicated socket on the centre console **3**.

Refer to the audio system equipment instructions for a detailed view of connection.

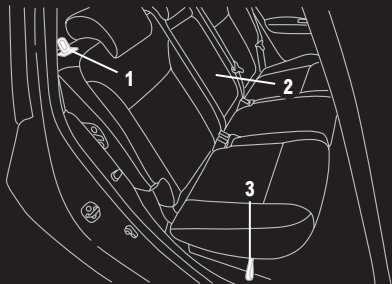


Adjusting the rear seatbacks

(depending on vehicle)

There are 5 position settings for adjusting the inclination of each rear seatback. Tilt it while raising the lever 1.

Ski hatch


Lowering the rear centre armrest 2 provides access to a ski hatch.

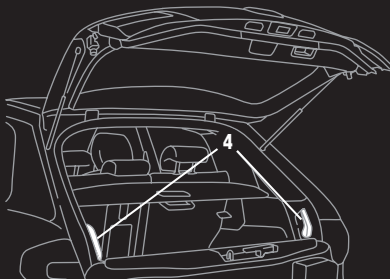

Folding the rear seats

In all cases, pull the strap 3 and tilt the seat squab then lift the control 1 and lower the seatback.

Depending on the vehicle, you can also pull the seats down from the rear of the vehicle. Pull handle 4 on the side to fold down.

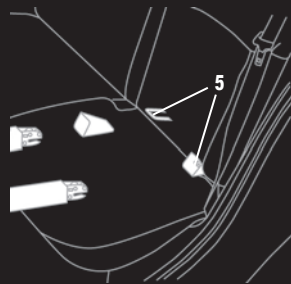

ISOFIX system


Each rear side seat is fitted with the ISOFIX child seat mounting system 5.

Depending on the type of child seat used, installation requires specific precautions.

Refer to the information on "Child safety" in Section 1 of your driver's handbook for the special features.

Consult your approved dealer to find out about the equipment available for your vehicle.

Ensure that nobody is near to the bench seat when you fold it down.
Remember to remove anything on the rear bench seat.

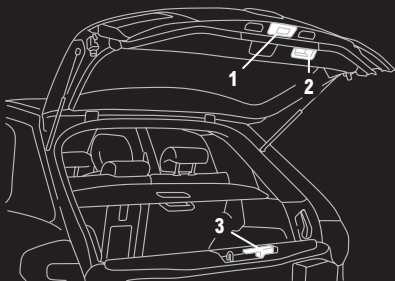

Double opening tailgate

This enables complete and quick access to the luggage compartment.


OPENING

Quick access: press the switch 1, lift the upper section.

Complete access: pull handle 3 and guide the lower section downwards.

CLOSING


Lift the lower section and ensure it is correctly locked, then close the top section using the handle 2.

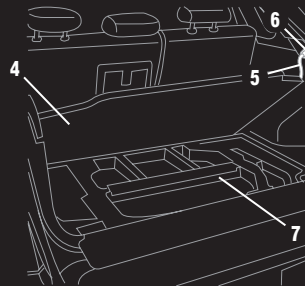

Emergency spare wheel

This is located in the luggage compartment. To access it, lift the luggage compartment carpet 4 and the storage compartment 5 to the hook 6.

Note: depending on the vehicle, there may be a lower panel. You must remove it before accessing the emergency spare wheel (refer to your Driver's Handbook).

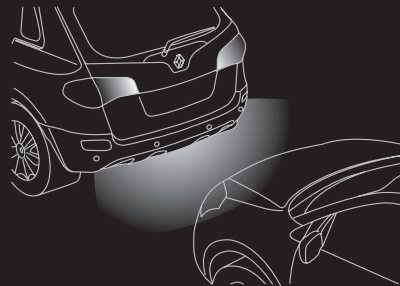

Parking distance control

On equipped vehicles, the parking distance control measures the distance between the rear and/or the front of the vehicle and any obstacles that are nearby.

When approaching an obstacle during manoeuvres, the beeps become faster and then sound continuously when 25 cm from the obstacle.

You can temporarily or permanently deactivate the system using the switch located on the dashboard: refer to your Driver's Handbook.

The lower section of the tailgate can carry a weight of up to 200 kg. This must be evenly distributed.

Locking/unlocking the vehicle

The RENAULT card system replaces the traditional key. Access to the vehicle is simple: a single press is all that is needed, whether from a distance or up close.

REMOTE CONTROL RENAULT CARD

Press:



to unlock;



to lock;



to switch on the exterior lights from a distance;




to lock/unlock the luggage compartment only.



for vehicles fitted with deadlocking, **one single press** on this button (or on one of the door handle or luggage compartment buttons) prevents the vehicle from opening, even from inside.

To lock the vehicle without deadlocking it, **press twice**.

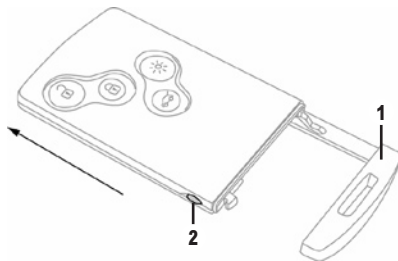

“HANDS-FREE” RENAULT CARD

With the card on your person, in addition to the RENAULT card remote functions, the following are possible:

- automatic unlocking by pulling a door handle;
- manual locking by pressing on one of the door handle or luggage compartment buttons.

Note: if necessary, you can use the manual mode (in this case the hands-free mode will be operational again the next time the engine is started) or the key **1**. To release it, press button **2**.

Note: in all cases:

- two flashes of the direction indicator lights confirm locking;
- one flash of the direction indicator lights confirms unlocking.

SPECIAL FEATURES

- never leave the RENAULT card in the vehicle;
- the detection zone of the card, necessary for locking and unlocking the vehicle, depends on the surrounding environment or location of the card.

AUTOMATIC WINDOW CLOSING

If all windows in the vehicle are fitted with a one-touch mode you can close them simultaneously by

pressing **twice** on button  or on one of the door handle buttons.

Important: for vehicles fitted with deadlocking press and hold the button for more than one second.

Never leave your vehicle with the Renault card inside and never leave a child (or a pet) unsupervised, even for a short while.

Starting the engine

With the remote control RENAULT Card in the reader **2** or hands-free RENAULT card in the interior detection zone (excluding certain high locations such as the sun visor etc.) apply the following starting conditions:


MANUAL GEARBOX

With the gear lever in neutral, press button **1**.

AUTOMATIC TRANSMISSION

With the lever in position **P**, press button **1**.

Note: for vehicles fitted with the hands-free RENAULT card, press the brake pedal to start the engine.

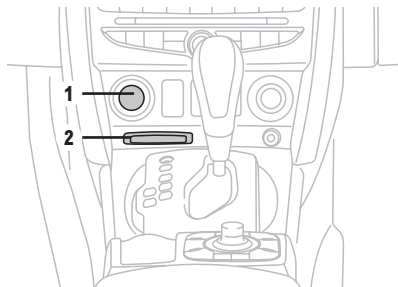

Stopping the engine

With the vehicle stationary, press button **1**.


Accessing functions

To access all the vehicle functions, press button **1** without pressing the pedals.

Press the button twice to stop the operation.

Depending on the case, these functions will switch off at the latest when the vehicle is locked.



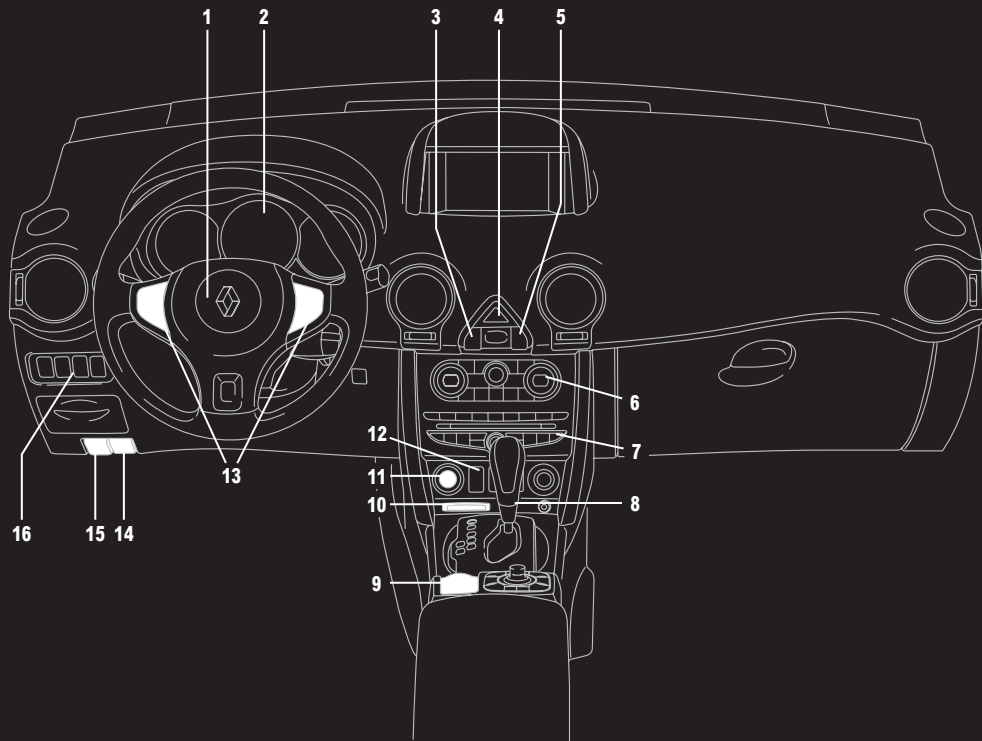


1 Horn and location for driver's air bag.

2 Instrument panel

– Warning lights:


The  warning light means you should **drive very carefully** to an approved Dealer as soon as possible. If you fail to follow this recommendation, you risk damaging your vehicle.

Warning light  requires you to stop immediately, for your own safety, as soon as traffic conditions allow. Switch off the engine and do not restart it. Contact an approved Dealer.


– Distance before service:

When the message “service due in...” along with the remaining distance appears, this notifies you when the next service is due.

Later, if necessary, the message “service vehicle” requires that the vehicle be serviced as soon as possible.

3  front passenger airbag disconnection warning light.

4 Hazard warning lights.

5 Front passenger seatbelt warning light: if warning light  lights up, the front passenger seatbelt has not been fastened.

6 Heating and ventilation controls.

7 Location for radio or storage.

8 Gear lever.

9 Assisted parking brake control.

10 RENAULT card reader.

11 Engine start/stop button.

12 Controls:

– deceleration speed control;

– cruise control/speed limiter.

13 Cruise control/speed limiter controls.

14 Bonnet release control.

15 Fuel filler flap opening control.




16 Controls for:

– headlight beam adjustment;

– adjusting the brightness of the instrument panel and dashboard;

– deactivating the parking distance control;

– deactivating the electronic stability program.

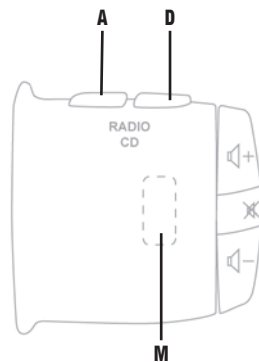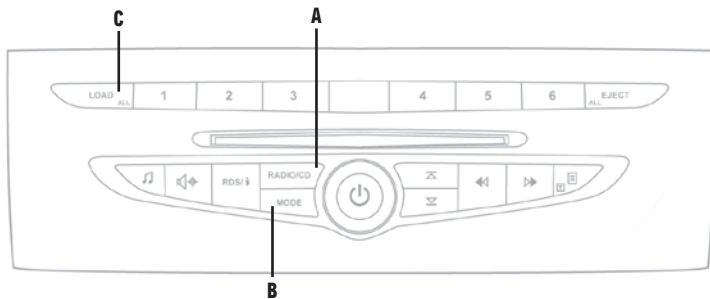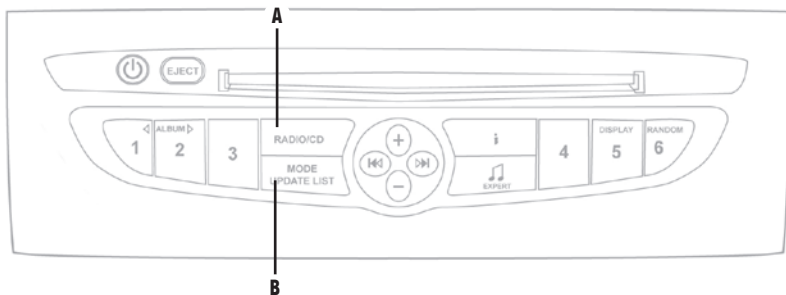

LISTENING TO THE RADIO OR A CD

Select the source (radio FM or CD) by pressing one of the buttons **A** or **D**.

FM radio SOURCE

To select a radio station from a list in alphabetical order:

- depending on the equipment, press **B**, **M** (at the rear of the steering column control) or **K** (see next page) to bring up the “LIST” or “A...Z”;
- turn control knob **M** to scroll through the list of radio stations.

To store a radio station to one of the buttons numbered 1 to 6:

- select the radio station;
- press on one of the buttons from 1 to 6, until a beep sounds;
- to recall a stored radio station, press the corresponding button.

CD SOURCE

Insert a CD in the player, or for vehicles fitted with a 6 CD changer, press button **C** before inserting the CD. The system will start reading the CD automatically.

BOSE
Better sound through research®



Your vehicle may be fitted with a made-to-measure BOSE® Hi-Fi system in the passenger compartment, which is intended to provide a high level of sound quality for the driver and passengers.

Hands-free Bluetooth® telephone control






(depending on vehicle)

In order to use your hands-free telephone system, you must pair your Bluetooth® mobile telephone to the system when using it for the first time.

In order to do this, refer to the manual for your telephone and the manual for the equipment.

After this, as soon as the vehicle is started, your telephone will be recognised and automatically connected to the hands-free system (if the Bluetooth® connection for your telephone is activated).

To access the telephone menu of the hands-free system, press button **D** on the steering column control.

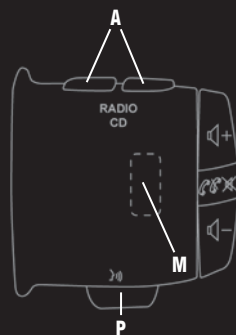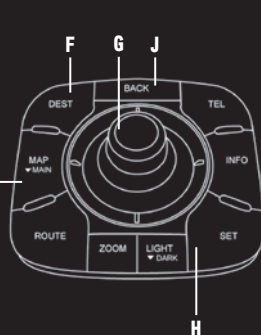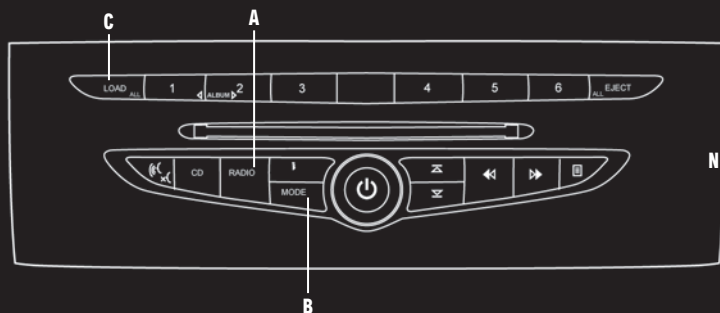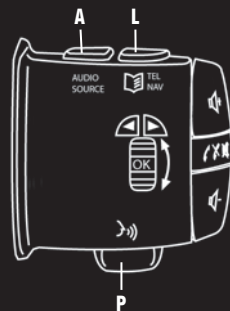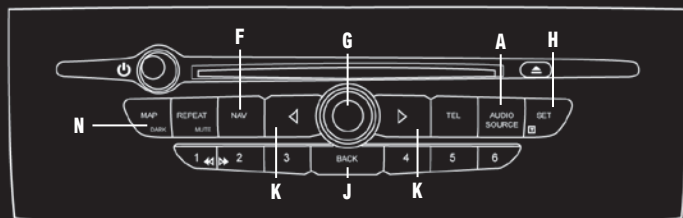

Refer to the previous page for information on operating the radio.

ENTERING AN ADDRESS AND STARTING THE GUIDANCE

- Press **F**;
- turn the rotary push-button **G** to select “New address” or “Address” then press to confirm;
- enter the address fields (town and street) using the keypad on the screen. To select and confirm a character, rotate then press button **G**;
- when entry is complete, select “Guidance” or “Start” and follow the voice guidance and on-screen directions to your destination.

CANCELLING AN ACTION

Press **J** (BACK) if you wish to return to the previous menu or erase an entered character.

DISPLAYING THE MAP

Press button **N** (MAP) to return to the map at any time.

ACCESSING LISTS

(depending on the equipment: addresses, phone numbers and logs)

- Press **F** or **L**;
- turn and press button **G** or control knob **M** to confirm, depending on equipment:
 - “Previous destinations”;
 - or
 - “Addresses (address book and log)” then the tab “Destination logs” using the buttons **K** (located on the front panel, or at the rear of the steering column control);
- turn and press button **G** or control knob **M** to scroll and confirm the required address.

VOICE RECOGNITION


Your vehicle may have the voice recognition function (button **P**). You can control certain functions of the system with your voice. For further information, refer to the manual for this equipment.

RECONFIGURE YOUR BLUETOOTH® TELEPHONE

In order to use your hands-free telephone system, you must pair your Bluetooth® mobile telephone to the system when using it for the first time.

- Press **H**;
- select “Telephone” using button **G**;
- depending on the equipment, select:
 - “Connection” and “Manage list of telephones” and “None (Add New)”;
 - or
 - “Bluetooth options” then “Register a Bluetooth telephone”;
- it is essential to then refer to the manual of your telephone.

After this, as soon as the vehicle is started, your telephone will be recognised and automatically connected to the hands-free system (if the Bluetooth® connection for your telephone is activated).

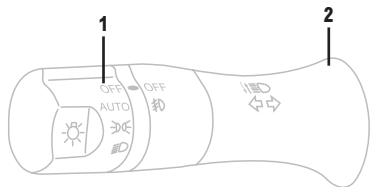

Lighting

Turn the ring **1** to:



to switch on the side lights;




to switch on the dipped headlights;

AUTO to activate the automatic operation of the headlights (depending on vehicle);

Hazard lights: pull the stalk towards you;

Main beam headlights: ring **1** in position , then push the stalk.

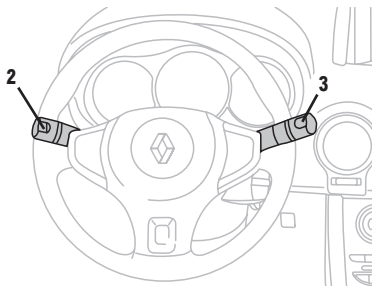

Turn the ring **2** to:




to switch on the front fog lights;

Turn ring **2** then release it to:



to switch on the rear fog light.

To switch them off, repeat the operation.

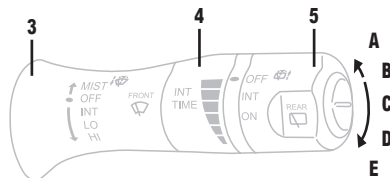

Wiping

Position handle **3** to obtain:


- **A:** Wiping on request;
- **B:** Stop;
- **C:** Intermittent wiping or, depending on the vehicle, automatic wiping;
- **D:** Continuous slow wipe;
- **E:** Continuous fast wipe.

Windscreen washer: pull stalk **3**;

Rear screen washer: push stalk **3**.

Rear screen wiper: turn ring **5**.

Note: to adjust the wiping speed and the sensitivity of automatic wiping, turn ring **4**.

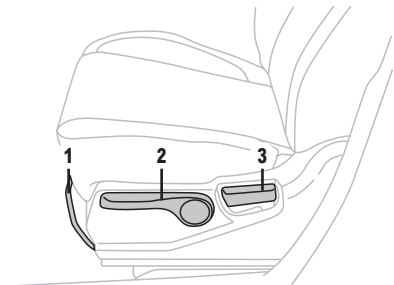

Manually controlled seats

TO MOVE THE SEAT FORWARDS OR BACKWARDS

Lift the switch **1**, slide the seat then release the switch. Check that it is correctly locked.


TO RAISE OR LOWER THE SEAT

Move the switch **2** as much as necessary to:

- raise: move upwards;
- lower: move downwards.

TO TILT THE SEATBACK

Lift the switch **3** and position the seatback.

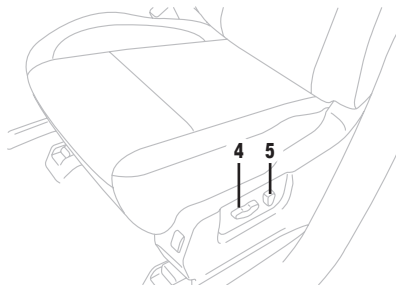

Electrically controlled seats

TO MOVE THE SEAT FORWARDS OR BACKWARDS


Move the switch **4** forwards or backwards to the required position.

TO RAISE OR LOWER THE SEAT

Move the switch **4** up or down until the required height is reached.

TO RAISE OR LOWER THE FRONT OF THE SEAT BASE

On the driver's side, raise or lower the front of the switch **4** until the required height is reached.

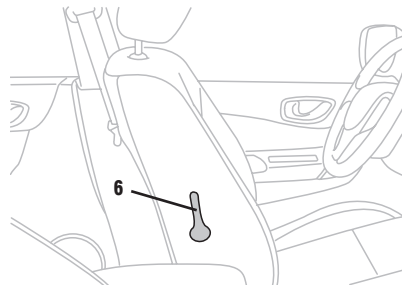


TO TILT THE SEATBACK

Move the top of the switch **5** forwards or backwards until the required angle is reached.

Adjusting the lumbar support on the driver's seat

Lower handle **6** to increase the support and lift it to decrease it.

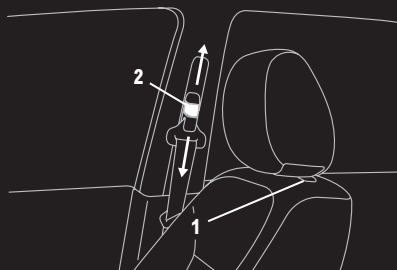

Headrest

RAISING THE HEADREST

Lift the headrest.

LOWERING THE HEADREST

Press button **1** then lower the headrest.


TO ADJUST THE ANGLE OF THE HEADREST

Tilt the top of the headrest.

Seat belt

ADJUSTING THE HEIGHT

Pull the control **2** then adjust the seatbelt.

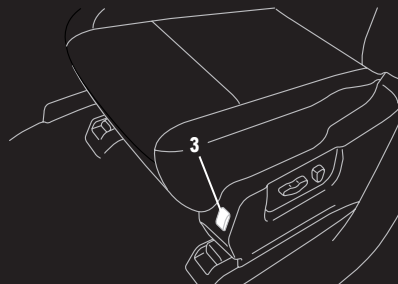


Heated seats

For equipped vehicles, press the top of button **3** (for maximum heat) and the bottom (for moderate heat).

To switch it off, return button **3** to the centre position.

The system maintains the required temperature with a thermostat.

A warning light on the instrument panel comes on when the front passenger seat heating is in operation.

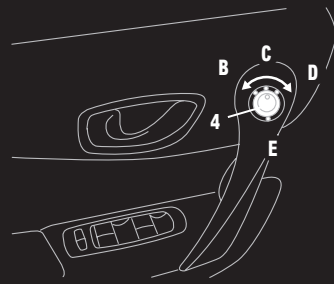

Door mirrors


ADJUSTMENT

With the engine running, move button **4** to select the door mirror to be adjusted.

FOLDING DOOR MIRRORS

Move button **4** to position **E**: the door mirrors fold in.

To reset them for driving, return to position **B**, **C** or **D**.

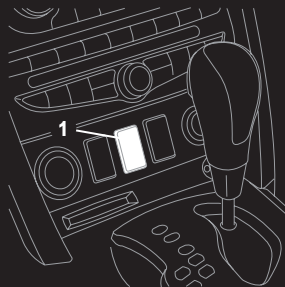


All-wheel drive system: 4 drive wheels (4WD)

For equipped vehicles and depending on traffic conditions, switch 1 is used to select one of the following modes:

- **AUTO**: default mode each time the engine is started, the system controls the engine torque on each wheel;
- **2WD**: this mode uses the front wheels only;
- **4WD Lock**: this mode uses the front and rear axles, each with 50% of the power.


Refer to the Driver's Handbook for special notes on the system.

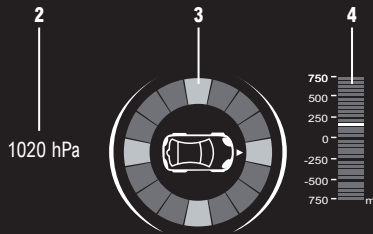

All-terrain information

Depending on the vehicle, the display in the centre of the dashboard shows information related to vehicle usage. Refer to the multimedia equipment instructions to access the following information:

- barometer 2;
- compass 3;
- altimeter 4;
- incline 5;
- front wheel lock angle 6;
- slope 7.

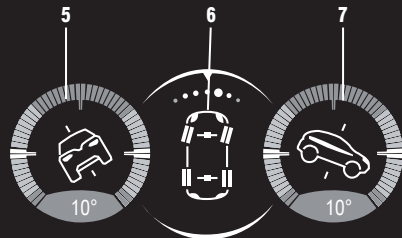


BAROMETER AND COMPASS

These functions show you the atmospheric pressure, the direction in which the vehicle is travelling and the current altitude.

SLOPE AND INCLINE

These functions show the incline of the vehicle, the angle of lock of the front wheels and the slope angle.


Refer to the multimedia instructions for details of the system.

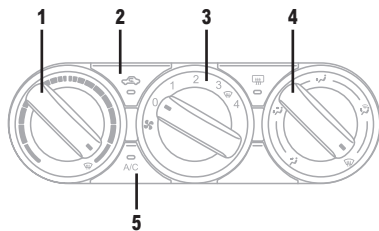

Manual air conditioning

If you want to:

- select the temperature: turn control **1**;
- activate/deactivate air recirculation: press switch **2**;
- adjust the ventilation speed: turn control **3**;
- change the distribution of air: scroll through the **5** positions by turning control **4**;
- activate/deactivate the air conditioning: press switch **5**;

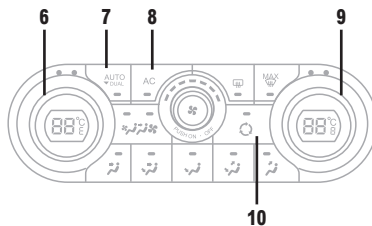

Automatic climate control

To obtain the full benefit from the automatic heating and air conditioning system, select the right and left-hand temperatures using controls **6** and **9** then press button **7**.

Note: pressing one of the other buttons will exit automatic mode according to your requirements.


Pressing button **7** once, for longer than **2** seconds, adjusts the passenger temperature from the driver's temperature.


AIR CONDITIONING

Button **8** activates (integrated indicator on) or inhibits (integrated indicator off) the operation of the air conditioning.

AIR RECIRCULATION

If you wish to isolate the passenger compartment from the external air, press button **10**; the integrated warning light on the button comes on.

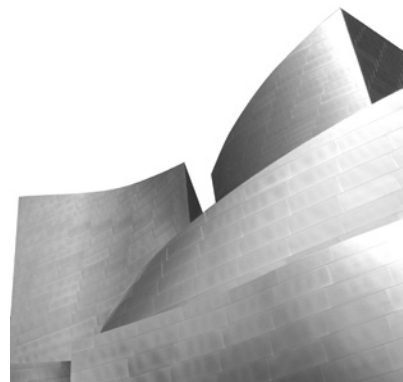

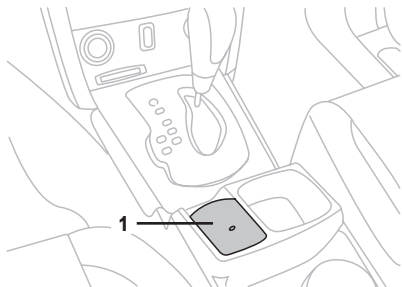


Electronic parking brake

The parking brake is automatically activated when the engine is switched off by pressing the engine start/stop button (except if the engine has stalled).

The parking brake is automatically deactivated: with the engine running and a gear engaged, as soon as the clutch is released (manual gearbox) when accelerating.

The assisted parking brake, like the manual parking brake, also enables:

- manual engagement: lift switch 1;
- manual release: with the brake pedal depressed, press switch 1.

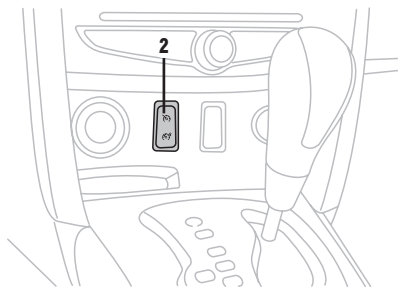

Cruise control/speed limiter

If fitted to the vehicle, activate the cruise control or speed limiter by moving switch 2:




: cruise control;

Note: you can always interrupt the cruise control operation by pressing on either the brake pedal or the clutch.



: speed limiter.

You can always exceed the limiter speed by depressing the accelerator pedal fully.

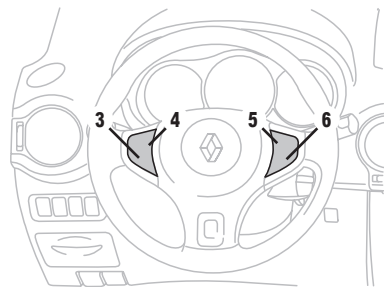

Cruise control/speed limiter controls

2 Main "On/Off" switch.



3 Programmed speed activation, storage and decrease switch (-).

4 Programmed speed activation, storage and increase switch (+).

5 Programmed speed activation, storage and recall (R).

6 Switching the function off (with stored programmed speed) (O).

Refer to Section 2 of your driver's handbook.

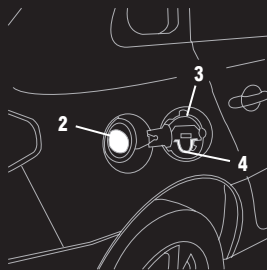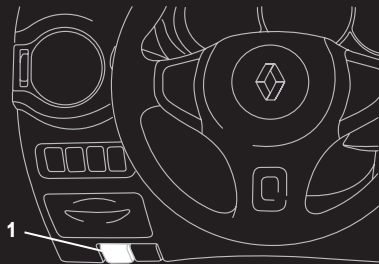

Fuel tank

The fuel tank capacity is **approximately 65 litres**.

FILLING


Pull control **1**: cover **3** opens.

Undo cap **2** and, during filling, place it in the storage space **4**.

Retighten cap **2** after filling and turn it until you feel it locking into position.


If the low fuel level warning light comes on when driving, fill the tank as soon as possible. After the warning light comes on, you have approximately 30 miles (50 km) left, driving at moderate speed.



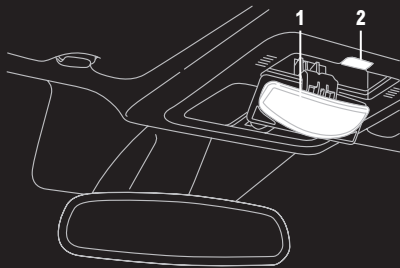

Child minder mirror


Press button **2** to release the mirror **1**. You can adjust it vertically. To store it, lift it until it clips into place.

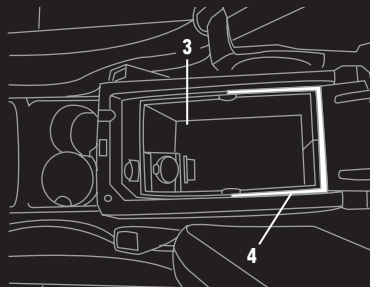

Storage compartments

Depending on the vehicle, there are several storage compartments (with a volume of more than 70 litres) including, amongst others: the removable arm rest storage compartment **3** (using the handle **4**), the glovebox, the flaps under the rear passenger footwells, the luggage compartment side storage compartments etc.

The location of other storage compartments can be found in your Driver's Handbook.

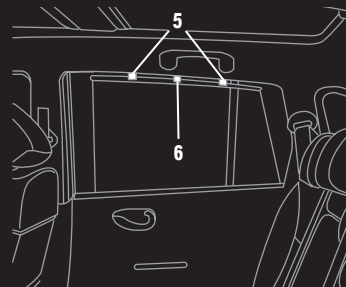

Sun visors

There are rear door sun visors, depending on the vehicle.

To position them, pull the centre tab **6** and bring the two hooks **5** into their housings.

To store them, lift the centre tab **6** to release the hooks **5**, and hold the net while folding away.

(www.e-guide.renault.com)



9 9 9 1 0 4 5 8 7 R

NG