

VIORETM TECHNOLOGY & INNOVATION

OPERATING INSTRUCTIONS

22" 1080p LCD Multimedia Television ***with Built-in Universal iPod Dock for Audio/Video Playback,*** ***DVD Player, 3-in-1 Card Slot, and USB Port*** **LCD22VXF7MPT**



AIR (TV)/CABLE MODE SELECTION

The Air/CABLE menu option is set to the "CABLE" (Cable Television) mode at the factory. If you want to use an antenna for the built-in TV tuner, this menu option must be set to the "Air" mode. Please refer to page 12 of the owner's manual for the details of this menu.

	<p>FOR QUESTIONS OR TECHNICAL SUPPORT PARA PREGUNTAS O APOYO TECNICO Please call: / Favor de llamar al: 1-877-777-1428 (USA/CANADA/ PUERTO RICO) Please do not return this TV to the store Por Favor NO Regrese este Televisor a la Tienda</p>	
---	---	---

Contents

Caution	1	Caution
	2	Safety Information
TV information	3	Unit and Accessory
	3	Product Feature
	4	Getting Started-Front View
	5	Getting Started-Rear View
Remote control	6-7	Remote Control Key Functions
	8-10	Basic operation
Menu operation	10-11	Picture menu options
	11-12	Sound menu options
	12-13	Channel menu options
	13-15	Settings menu options
	16	Settings menu options in VGA/PC
	17	Settings menu options in Component
	18	Parental Control
IPOD operation	19-24	IPOD Operation
DVD operation	25-26	DVD basic operation
	26	Disc Care
	27-28	DVD System Setup
Playing Flash Media	29-30	Playing Flash Media
Troubleshooting Specification	31	Simple Troubleshooting
	32	Technical Specification

Caution



The lightening flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.



The exclamation point within an equilateral triangle is intend to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Correct disposal of this Product

(Waste Electrical & Electronic Equipment (WEEE))

Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste.

Please dispose of this equipment at your local community waste collection/ recycling centre.

In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!



3124140
CONFORMS TO UL STD. 60065

This unit complies with America safety directives.



This unit complies with FCC directive.



This unit is a "CLASS 1" laser product. This product uses a visible laser beam which could cause hazardous radiation exposure. Ensure the recorder is operated as instructed. Do not remove any covers or look into the DVD drawer opening whilst power is applied. Do NOT modify or adjust any controls that may affect laser emissions. Should the appliance become faulty consult a qualified technician.

Safety Information

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

Electrical safety

- The TV set should only be connected to a mains supply which matches that stated on the label on the mains adaptor
- To prevent overload, don't share the same mains supply socket with too many other items of equipment.

Do not place any connecting wires where they may be stepped on or tripped over.

Do not place heavy items, which may damage the leads, on them.

Hold the Mains plug, not the wires, when removing from a socket.

During a thunderstorm or while leaving the TV for long periods, disconnect the aerial (if outdoor) and mains adaptor from the supply.

Do not allow water or moisture to enter the TV or mains adaptor. Do NOT use in wet or moist areas such as Bathrooms, steamy kitchens or near swimming pools.

- Pull the plug out immediately, and seek professional help if:

the mains plug or cable is damaged

liquid is spilt onto the set, or if it is accidentally exposed to water or moisture

anything accidentally penetrates the ventilation slots

the set doesn't work normally.

Do NOT remove the safety covers. There are no user serviceable parts inside. You may invalidate the warranty. Qualified personnel must only service this apparatus.


To avoid battery leakage, remove exhausted batteries from the remote control handset, or when not using for a long period.

Do NOT break open or throw exhausted batteries on a fire.

Physical safety

- Do NOT block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around.
- Do NOT tap or shake the TV screen, you may damage the internal circuits. Take good care of the remote control, do not drop.
- To clean the TV use a soft dry cloth. Do NOT use solvents or petrol based fluids. For stubborn stains, you may use a damp soft cloth with dilute detergent.


Unit and Accessory

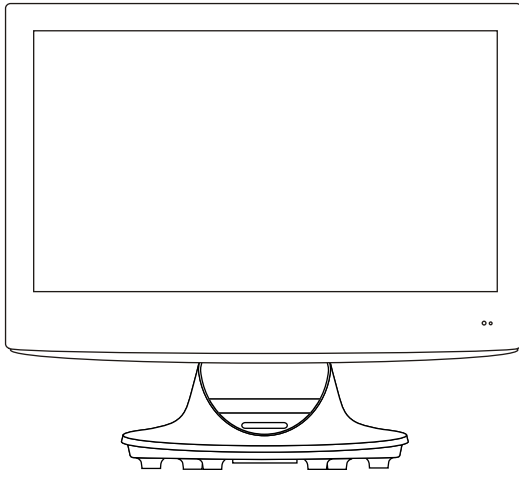

TV set



Remote Control(batteries: 2xAAA)

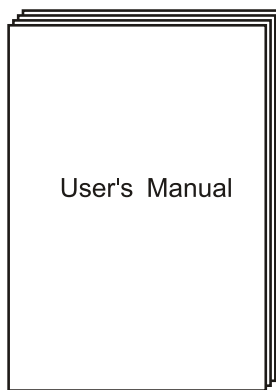

User's Manual




Power Cable

Product Feature

- 21.6" wide screen (measured diagonally) Full-HD 1080p LCD Television
- Built-in progressive scan DVD player
- iPod Dock for playback of music and video from iPod
- Integrated ATSC/NTSC/QAM TV tuner
- Integrated 3-in-1 Card Reader (SD, MS, MMC) and USB Port for playing digital media files
- HDMI input for true digital connection
- VGA port for connection to PC
- Built-in 2.1-channel speaker system with 20W output power

Getting Started

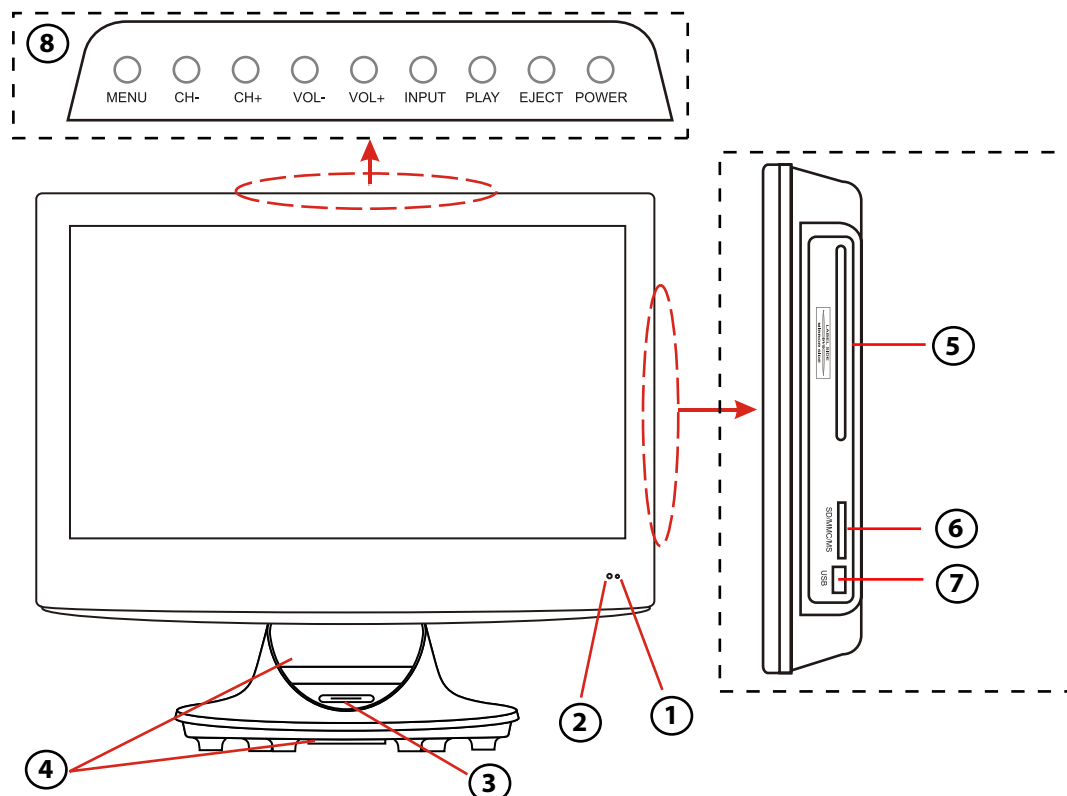

1. LED Power Indicator (Power on/Standby)

Indicator on(Red)	Standby mode
Indicator on(Green)	Power on mode

2. Infrared Remote Receiver

The effective receiving range for the signal is 5-8 metres from the front of the remote control window, and 30 degrees to the left or right side and 20 degrees above or below the remote control Window.

3. Universal iPod Dock

- Audio/Video Playback
- Charging iPod

4. 2.1 Channel Speaker System

- Mid-range/tweeters located on upper section of TV stand
- Woofer located on underside of TV stand

CAUTION: A sensitive low-frequency speaker (woofer) is located on the underside of this multimedia TV. Please remove the protective film covering the woofer before use. Please take care when handling the unit by the base – do not press on or damage woofer.

5. Disc Slot

Insert a 12 cm disc with the label side facing back as indicated by the label next to the slot.

6. 3-in-1 Card Slot (SD/MMC/MS)

7. USB Port

8. The functions of the buttons:

MENU : Press to display the OSD menu, press again to exit the menu.

CH+/- : Press to scan through channels.

VOL+/- : Press to adjust the volume.


INPUT : Press to display the input source menu.

PLAY: Play/Pause the disc playing.


 
EJECT : Eject the disc.


POWER : Turn on/standby the TV set.

Rear view

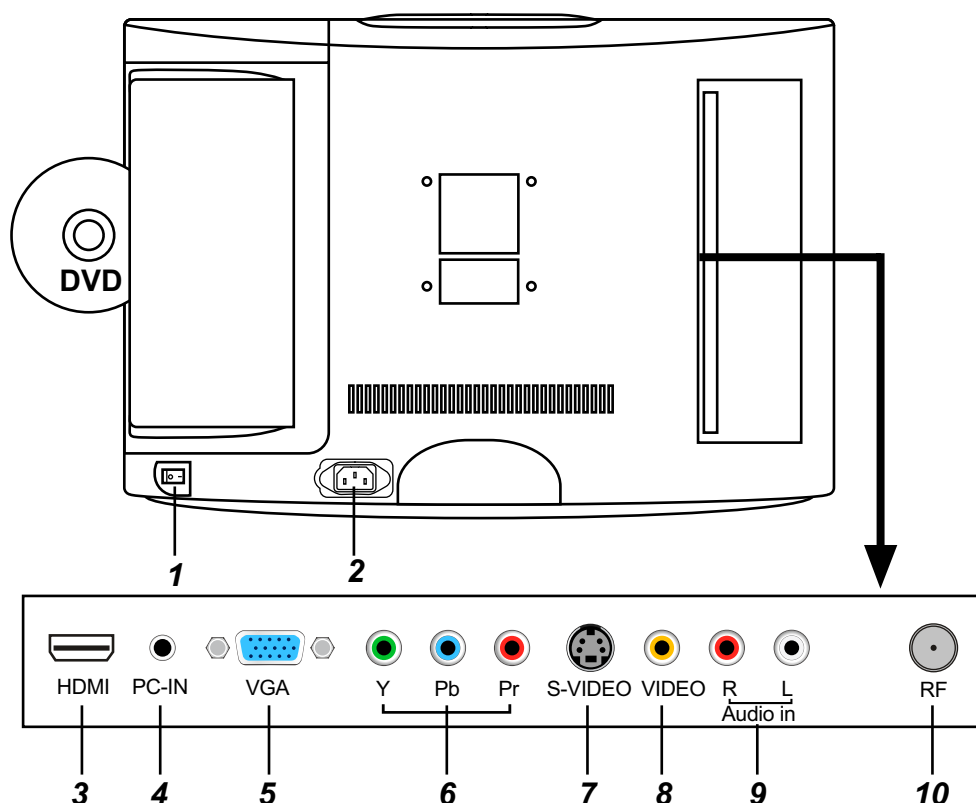

1. **Switch:** Switch on/off the power supply.

- To turn on the LCD TV
Press  on the back of the LCD TV to  first.
- Be sure to turn off the power and unplug both units from the wall outlet before making any connections.

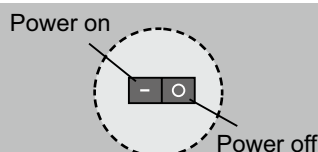

2. **AC Power IN:** Connect to an earth 100-240V, 50/60Hz AC outlet with the Power Cable.

3. **HDMI:** Connect it to the HDMI of DVD or other equipment.

4. **PC-IN:** Connect it to the audio output terminal of PC.

5. **VGA:** For PC display. Connect it to the D-Sub 15 pins analog output connector of the PC.

6. **YPbPr:** (Component) Connect them to the video output terminals of DVD or other equipment. (used in Component mode).

7. **S-VIDEO:** Connect it to S-Video output terminal of DVD or other equipment.

8. **VIDEO:** (Composite) Connect it to video output terminal of DVD or other equipment.


9. **L/R Audio in:** Connect them to audio output terminals (For Video-Composite/S-Video/YPbPr-Component).

10. **RF:** Connect antenna or cable 75 Ohm coaxial to receive TV signal.

Wall Mounting

The TV is provided with mounting holes for a VESA approved wall mounting bracket (NOT SUPPLIED). Remove the Posi screws holding the base to the base bracket and lift the base away (do not remove the base mounting bracket). Mount the VESA bracket using 4 x M4 x10 Iso metric threaded screws (not supplied). Do not use screws longer than 10 mm, damage will occur to the internal parts. Fit the wall bracket securely following the manufacturers instructions.

Remote Control Key Functions

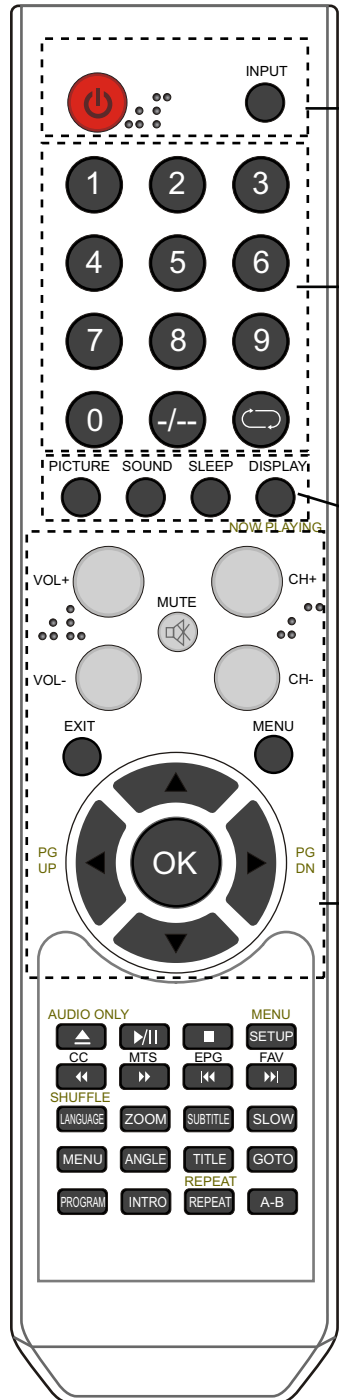

POWER
Switch on LCD TV when at standby mode or vice versa.

INPUT
Press to cycle through the input source.

NUMBER BUTTONS
Press 0-9 to select a TV channel directly when you are watching TV. Then press "OK" key to confirm.
-/--
Press this button to enter a program number for multiple program channel such as 2-1, etc.
↶
Return to the previous channel viewed.

PICTURE
Select the picture mode.

SOUND
Select the sound mode.

SLEEP
Time shutting down

DISPLAY
Press to display the source and channel's information.

MUTE
Press to mute the sound. Press again or press VOL+/- to unmute.

EXIT
Clears all on-screen displays and returns to TV viewing from any menu.

MENU
Brings up the main menu to the screen.

▲ ▼ ◀ ▶ OK
Allows you to navigate the on-screen menus and adjust the system setting to your preference.

VOL+/-
Press to increase / decrease the sound level.


CH+/-
Press to scan through channels. To scan quickly channels, press and hold down either +/- button.

AUDIO ONLY
▲ (Yellow)
▶/II (Yellow)
■ (Yellow)
◀ (Yellow)
▶ (Yellow)
◀◀ (Yellow)
▶▶ (Yellow)
SHUFFLE (Yellow)
LANGUAGE (Yellow)
ZOOM (Yellow)
SUBTITLE (Yellow)
SLOW (Yellow)
MENU (Yellow)
ANGLE (Yellow)
TITLE (Yellow)
GOTO (Yellow)
PROGRAM (Yellow)
INTRO (Yellow)
REPEAT (Yellow)
A-B (Yellow)

MENU
SETUP (Yellow)
FAV (Yellow)

Note: Buttons labeled in yellow are for controlling iPod-specific functions

Remote Control Key Functions

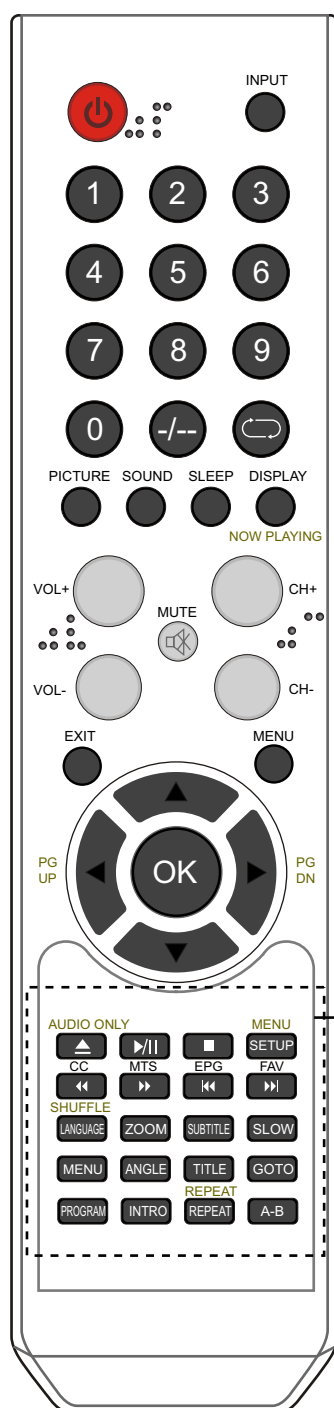

CC

Press to display the closed caption.

MTS

Press to select the audio channels.

EPG

Press to enter the EPG menu directly.

FAV

Press to add or remove favorite channel.

Buttons for DVD operating

▲ : Load/eject DVD disc.

▶|| : Play/pause DVD program.

■ : Stop DVD program.

SETUP: DVD system setup.

◀◀ : DVD fast reverse.

▶▶ : DVD fast forward.

◀◀ : DVD previous chapter.

▶▶ : DVD next chapter.

LANGUAGE: Select the DVD disc language.

ZOOM: Adjust picture size in DVD mode.

SUBTITLES: Turn on/off the DVD subtitle display.

SLOW: Play DVD program at slow speed.

MENU: DVD play list / Disc menu.

ANGLE: Select DVD picture angle.

TITLE: DVD title.

GOTO: Play your favorite title/chapter/track.

PROGRAM: Edit the DVD program and play.

INTRO: If you play CD, it will scan program with 3S.

REPEAT: Repeat playing the title or chapter.

A-B: Select and play the preferable paragraph of DVD program by pressing this button twice at the beginning and end of it.

Note: Buttons labeled in yellow are for controlling iPod-specific functions

Menu Operation

Basic operation

Turning on and off the TV

TURN ON LCD TV

1. Connecting to the AC input cable, at this time the TV will enter standby mode and indicator show red.
2. Use the **POWER** button can turn ON LCD TV from standby mode.

TURN OFF LCD TV

Press the **POWER** button on TV or on the remote control to enter standby mode. The indicator is red.

Select on screen language

NOTE: If this is the first time you run the LCD TV, the Initial Setup Menu will appear in the picture, and the items of this menu also exist in other menus, so you are able to change the values after you set them up.



Language

Press ▼ / ▲ button to select this item, then press OK / ► button to select the OSD language.

Tuning Band

Press OK / ► button to select Tuning Band mode. (Available tuning band mode: Air, Cable)


Auto Channel Search

Press ▼ / ▲ button to select this item, then press OK / ► button to enter the Auto Channel Search Program.

Volume adjustment

1. Press the **VOL+/-** button to adjust the volume.



2. If you want to switch the sound OFF, press the **MUTE**  button.
You can cancel this function by pressing the **MUTE** or **VOL+/-** button.



The OSD (On Screen Display) in this document may be different from your TV's, because this is just an reference for your product.

How to adjust the OSD screen

- Press the **MENU** button to display the mains menu.
- Use **▲ / ▼ / ◀ / ▶ / OK** buttons to operate the available menus.



The OSD (On Screen Display) function enables you to adjust the screen status conveniently since it provides graphical presentation.

Choosing a TV channel

- Using the **CH+/CH-** button on the TV set or on the remote control.
 - Press **CH+** button to increase channel number.
 - Press **CH-** button to decrease channel number.
- Using **0-9** number buttons and **-/--** button.
 You can select the channel number by pressing 0 to 9 or **-/--** button, and press **OK** button to confirm.
- Example
 - Select channel 5: press "5" button, then press **OK** button.
 - Select channel 62: press "6" button, and press "2" button, then press **OK** button.
 - Select channel 152: Press "1" button, and press "5" button, and press "2" button, then press **OK** button.
 - Select channel '5-1': press "5" button, and **-/--** button, and "1" button, then press **OK** button.

Note: After select the number button, the number will be memorized.

Selecting input source

You can select the input source by pressing the **INPUT** button on the remote control or on the TV set.




Picture menu options



In this manual, the OSD (On Screen Display) may be different from your TV's because it is just example to help the TV operation.

Press the **MENU** button, and use **▲ / ▼** button to select the **Picture** menu as below.

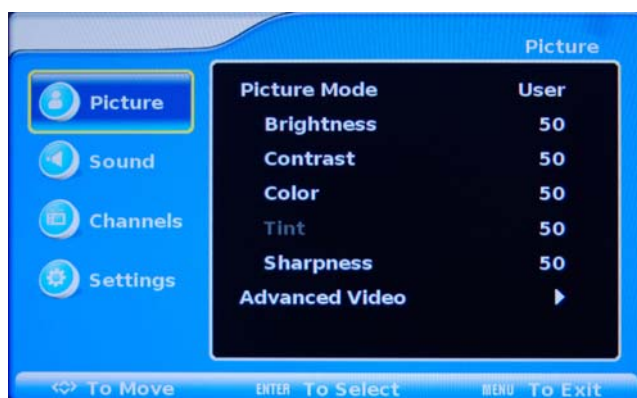

1. Use **▲ / ▼** button to select what you want to adjust in the **Picture** menu.
2. Press **OK** button, and adjust by **◀ / ▶ / ▲ / ▼ / OK** buttons.
3. When you adjusted to your preference, press **MENU** button to exit.

Picture Mode

Select the type of picture which best corresponds to your viewing requirements by selecting picture mode in **Picture** menu. You may select the picture mode directly by pressing the **PICTURE** button on the remote control, and change picture mode to **User** then you can adjust.

Brightness

Press **▲ / ▼** button to select and press **OK/ ▶** button to enter, then press **◀ / ▶** button to adjust the brightness of the picture.

Contrast

Press **▲ / ▼** button to select and press **OK/ ▶** button to enter, then press **◀ / ▶** button to adjust the contrast of the picture.

Color

Press **▲ / ▼** button to select and press **OK/ ▶** button to enter, then press **◀ / ▶** button to adjust the color saturation.

Tint

Press **▲ / ▼** button to select and press **OK/ ▶** button to enter, then press **◀ / ▶** button to adjust the tint of the picture. (In NTSC mode only)

Sharpness

Press **▲ / ▼** button to select and press **OK/ ▶** button to enter, then press **◀ / ▶** button to adjust the sharpness level of the picture.

Advanced Video

Press **OK/ ►** button to enter the submenu as below:



Aspect Ratio: Select the ratio of picture display.

Color Temperature: Press **OK/ ▼/▲** button to select the color temperature from Cool/Normal/Warm.

Noise Reduction: Press **OK/ ▼/▲** button to select the level of noise reduction from Off/Low/Medium/High.

3D Y/C: Press **OK/ ▼/▲** button to set the 3D/YC on/off.

Gradient Enable: Press **OK/ ▼/▲** button to set the Gradient Enable on/off.

Blue Screen: Press **OK/ ▼/▲** button to set the Blue Screen on/off.

If the function is turned on, the TV will display blue screen when there's no signal.

Sound menu options

Press the **MENU** button, and use **▲ / ▼** button to select the **Sound** menu as below.



1. Use **▲ / ▼** button to select what you want to adjust in the **Sound** menu.
2. Press **OK** button, and adjust by **◀/►/▲/▼** / **OK** buttons.
3. When you adjusted to your preference, press **MENU** button to exit.

Sound Mode

Select the Sound mode in Sound menu. You may select the Sound mode directly by pressing the **SOUND** button on the remote control.

When you select "User" as the Sound mode, you could operate the Treble and Bass item.

Treble: High frequencies intensity.

Bass: Low frequencies intensity.

Balance

Press **▲ / ▼** button to select and press **OK/ ►** button to enter, then press **◀/►** button to adjust the sound balance.

Audio Channel

Press **▲ / ▼** button to select and press **OK/ ►** button to enter, and select the Audio channel mode: Mono Stereo, SAP.


Audio Language

Press **▲ / ▼** button to select and press **OK/ ►** button to enter, and select the Audio language.


Note: The function will be unavailable if the program system does not provide the audio language.

Advanced Audio

Press ▲ / ▼ button to select and press **OK** / ► button to enter the submenu.

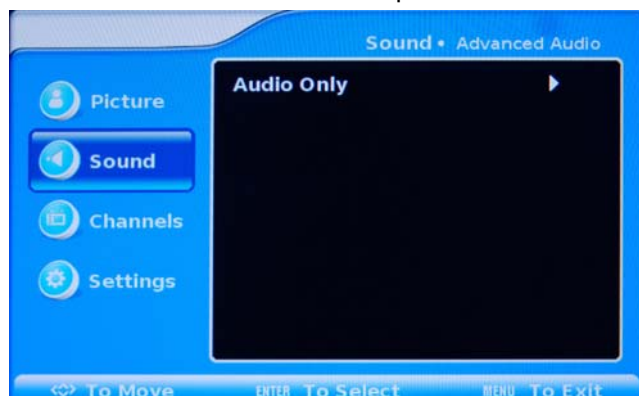

Audio Only: Press **OK** / ◀ / ► button to set the video on/off. Select “YES”, the video will hide, hold down power 3 sec. to restore.

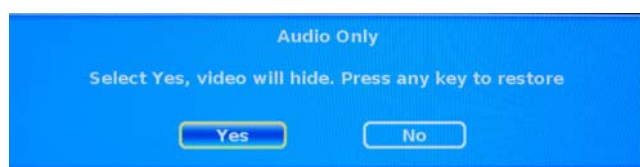

Channels menu options

Press the **MENU** button, and use ▲ / ▼ button to select the **Channels** menu as below.



1. Use ▲ / ▼ button to select what you want to adjust in the **Channels** menu.
2. Press **OK** button, and adjust by ◀ / ▶ / ▲ / ▼ / **OK** buttons.
3. When you adjusted to your preference, press **MENU** button to exit.

Tuning Band

Select **Tuning Band** mode. (Available tuning band mode: Air/Cable)


If select Air, the range of channel is 2-69, and if select Cable, the range of channel is 1-135.

Auto Channel Search

Press the **OK** / ► button on the item to start Auto Channel Search.

Note: 1. It will search all the channels include digital and analog channels.

2. You could cancel the auto searching by pressing **MENU** button.

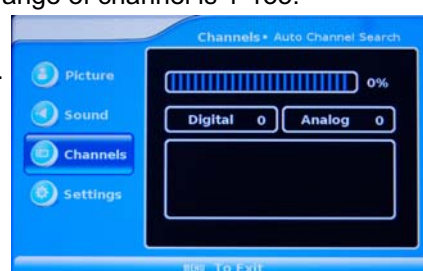

Manual Add Channel

When the channels are found, use **OK** button to add it to the channel list.

Manual Channel Set

Press **OK** button to display a channel list that you can select channel as below:



Favorite Channels

Press **OK** button to display the channel list that you can select channel as below:



Channel Labels

Allows you to name the channel that is selected. Use ◀ / ▶ button to move the cursor and use ▼ / ▲ button to input the name and then press **OK** button to confirm.



Settings menu options

Press the **MENU** button, and use ▲ / ▼ button to select the **Settings** menu as below.



1. Use ▲ / ▼ button to select what you want to adjust in the **Settings** menu.
2. Press **OK** button, and adjust by ◀ / ▶ / ▲ / ▼ / **OK** buttons.
3. When you adjusted to your preference, press **MENU** button to exit.

Parental Control Menu

You need to enter the password for the submenu. And the original password is 0000.



US Ratings Menu: Press ▲/▼ button to select and press OK / ► button to enter the **US Ratings Menu**.



Canadian Ratings Menu: Press ▲/▼ button to select and press OK / ► button to enter the **Canadian Ratings Menu**.



Advanced Rating: Press ▲/▼ button to select and press OK / ► button to set advanced rating on/off.

Advanced Rating Lock: Press ▲/▼ button to select and press OK / ► button to enter the **Advanced Rating Lock Menu**.

Note: You could not operate the menu if you turn the **Advanced Rating** function off.

Password Set: You need to enter the correct old password before setting a new password, and after set the new password, you need to enter it again to confirm it.



Time Set Menu

Press ▲/▼ button to select and press OK / ► button to enter the **Time Set Menu** as below that allows you to set the time the TV will display.



Time Set Mode: Press OK / ► button to select the time set mode from **AUTO** and **MANUAL**.

You should set the Time Set Mode to "Manual" first if you want to change the value of Time Zone/Year/Date/Time.

Time Zone: Press ▲/▼ button to select, and press OK / ► button to select the time zone for your TV.

Closed Caption

Press ▲ / ▼ button to select and press OK / ► button to enter the **Closed Caption**.



CC Mode: Press OK / ► button to enter and select CC mode.

Analog CC: Press OK / ► button to enter and select analog CC mode.

Digital CC: Press OK / ► button to enter and select digital CC mode.

Advanced CC Settings: Press OK / ► button to enter Advanced CC Settings menu.

Style: Press ► button to select CC style between Automatic and custom. You need to set it to Custom first if you want to change the value of items below.

Size: Normal/Large and Small.

Font: From Font 1 to Font 7.

Text Color: Red/Green/Blue/Yellow/Magenta/Cyan/Black/White.


Text Opacity: Solid/Flashing/Transparent/Translucent.

Background Color: Black/White/Red/Green/Blue/Yellow/Magenta/Cyan.

Background Opacity: Solid/Flashing/Transparent/Translucent.

Edge Effect: None/Raised/Depressed/Unifrom/Left Shadow/Right Shadow.

Edge Color: Black/White/Red/Green/Blue/Yellow/Magenta/Cyan.

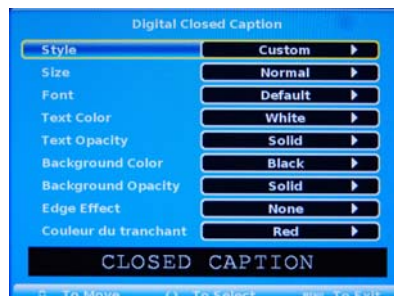

Menu Setting

Press ▲ / ▼ button to select and press OK / ► button to enter the **Menu Setting** submenu.



Language: To select language of the OSD.

Transparency: To select the transparency of the OSD.

Sleep Timer: Press OK / ► button to select the number of minutes to set your TV sleeps automatically.


Reset

Press ▲ / ▼ button to select and press OK / ► button to reset all the settings above.

Settings menu options in VGA/PC

Select input source "VGA/PC".

Press the MENU button, and use ▲ / ▼ button to select the **Settings** menu as below.

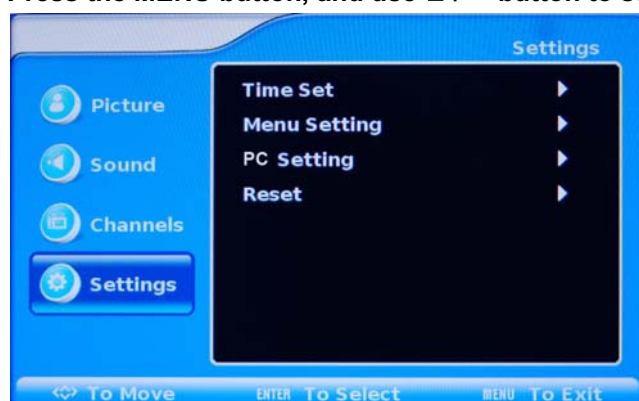

PC Setting

Press ▼ / ▲ button to select PC Setting, then press **OK** / ► button to enter the PC Setting menu.



Horizontal Position: Press ▼ / ▲ button to select and press **OK** / ► to enter, then press ◀ / ▶ to adjust the horizontal position of the picture.

Vertical Position: Press ▼ / ▲ button to select and press **OK** / ► to enter, then press ◀ / ▶ to adjust the vertical position of the picture.

Phase: Press ▼ / ▲ button to select and press **OK** / ► to enter, then press ◀ / ▶ to adjust the phase of the picture.

Clock: Press ▼ / ▲ button to select and press **OK** / ► to enter, then press ◀ / ▶ to adjust the clock of the picture.

Auto Adjustment: Press **OK** / ► to auto adjust the VGA settings.

Reset: Press **OK** / ► to reset the VGA settings to factory default.

Settings menu options in Component(YPbPr)

Select input source “Component”.

Press the MENU button, and use ▲ / ▼ button to select the **Settings** menu as below.



Component Set

Press ▼ / ▲ button to select Component Set, then press **OK** / ► button to enter the Component Set menu.



Horizontal Position: Press ▼ / ▲ button to select and press **OK** / ► to enter, then press ◀ / ▶ to adjust the horizontal position of the picture.

Vertical Position: Press ▼ / ▲ button to select and press **OK** / ► to enter, then press ◀ / ▶ to adjust the vertical position of the picture.

Phase: Press ▼ / ▲ button to select and press **OK** / ► to enter, then press ◀ / ▶ to adjust the phase of the picture.

Clock: Press ▼ / ▲ button to select and press **OK** / ► to enter, then press ◀ / ▶ to adjust the clock of the picture.

Reset: Press **OK** / ► button to reset the Component Settings to factory default.

Parental Control (page 13-14)

Press "ok" to enter the sub-menu and then uses the 0-9 to enter the correct password : 0,0,0,0.

If used, this optional feature can "block" undesirable programming from appearing on the TV. Parental Control offers the user a wide variety of options and settings that restrict or "block" the programming that can appear on the TV. Parental control allows the user the capability of defining which program rating they consider acceptable, to the younger or more sensitive viewer. It can be preset and turned either on or off by the user who specifies the secret 4-number code, the password. The number of hours blocked are specified. General audience and children viewer blocks should both be programs into the TV's memory. Viewer ratings are specified for both TV and the motion picture industry; both rating systems should be used, for complete coverage.

The ratings are based on the ages of children.

Overview

To insure complete coverage for all TV programs, (movies and regular TV shows) choose a rating for MPAA, from the selections below. And choose ratings from the TV Parental Guidelines Rating System below, using the Age Block option for General Audiences, and for Children. In addition to those, you may wish to add additional restrictions from the Content Block menu. See the Parental Control menu, and submenus example below.

Things to Consider before Setting Up Parental Control

Determine which rating you consider acceptable to the viewer. (For example, if you choose TV-PG, all more restrictive ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14, or TV-MA rated programming.)

Do you want to block the auxiliary video source entirely? (Blocks the signal sent by the equipment, such as a VCR, connected to the TV Audio/Video input jacks) Or leave unblocked, then choose allowable ratings. Block program "Content" based on individual parameters such as: Strong Dialog, Bad Language, Sex Scenes, Violence Scenes, or Fantasy Violence Scenes; in the Content Blk option.

Select a secret password; in the Set Password option. Use the number keys on the remote. Don't forget the password, it is the only way you can access the Parental Control menu and change rating selections, or turn Parental Control off.

Do you want Parental Control to be active all the time? If not, you can turn it on or off with the Lock On/Off option.

- * You can set different Parental Control viewing restrictions for general audiences and for children both can be active at the same time.
- * Simply specifying one content block such as Sex Scenes, will not automatically block another content in the programs from appearing.
- * Even if you choose to leave the Aux inputs unblocked, the ratings you specify will automatically restrict the programming that appears from the video sources.
- * You can not disable Parental Control by disconnecting the TV from power. Block hours will automatically reset to the original block time setting specified if power is disconnected.

Information

MOTION PICTURE ASSOCIATION OF USA (MPAA) RATING SYSTEM

Grade	Meaning
G	General Audiences Content not offensive to most viewers
PG	Parental Guidance Suggested Content is such that parents may not want their children to view the program.
PG-13	Parental Strongly Cautioned Program is inappropriate for preteens, with a greater degree of offensive material Suggested than a PG rated program
R	Restricted viewing Not for children under age 17. Strong elements of sex and/or violence.
NC-17	No Children under age 17 Not for children under age 17 under any circumstances. Strong sexual content.
X	Hard Core Films Same as NC-17 rating.
No Rating	No Rating MPAA Not Rated

TV PARENTAL GUIDELINE RATING SYSTEM

Grade	Meaning
TV-Y	Young Children Content not offensive to most viewers
TV-Y7	Children 7 and over Considered suitable for children over 7, may contain Fantasy Violence Scenes.
TV-G	Parental Audience Considered suitable for all audiences; children may watch unattended.
TV-PG	Parental Guidance Suggested Unsuitable for younger children, may contain: Suggestive Dialog, Bad Language, Sex, and Violence Scenes
TV-14	Parents Strongly Cautioned Unsuitable for children under 14, may contain: Strong Dialog, Bad Language, Sex, and Violence Scenes.
TV-MA	Mature Audience Only Adults only, may contain: Strong Dialog, Bad Language, Sex, and Violence Scenes.

Canadian Rating:

Canadian English is used throughout all of Englishspeaking Canada (E, C, C8+, G, PG, 14+, 18+).

Canadian French is used in Quebec (E, G, 8 ans +, 13 ans +, 16 ans +, 18 ans +).



Note
















The V-Chip will automatically block certain categories that are 'more restrictive'.

If you block TV-Y category, then TV-Y7 will be automatically blocked.

Similarly, if you block TV-G category, then all the categories in the 'young adult' will be blocked(TV-G, TV-PG, TV-14 and TV-MA).

iPod Operation

The following iPod models are supported by this TV for music playback. Certain models from the below list can support video playback and photo viewing in addition to music playback. Please refer to the following sections on playing videos and viewing photos for details.

 iPod touch 2nd generation 8GB 16GB 32GB	 iPod nano 4th generation (video) 8GB 16GB	 iPod classic 120GB	 iPod touch 1st generation 8GB 16GB 32GB	 iPod nano 3rd generation (video) 4GB 8GB
 iPod classic 80GB 160GB	 iPod nano 2nd generation (aluminum) 2GB 4GB 8GB	 iPod 5th generation (video) 60GB 80GB	 iPod 5th generation (video) 30GB	 iPod nano 1st generation 1GB 2GB 4GB
 iPod 4th generation (color display) 40GB 60GB	 iPod 4th generation (color display) 20GB 30GB	 iPod 4th generation 40GB	 iPod 4th generation 20GB	 iPod mini 4GB 6GB


1) Docking your iPod

- ▶ Locate the dock adapter plate supplied with your iPod and insert into the iPod dock as shown below.
- ▶ Insert your iPod into the iPod dock as shown below. Make sure all cases or “skins” are removed from the iPod before docking.




When connecting an iPod to this iPod Dock, please ensure that the correct adapter plate is used. FAILURE TO DO SO MAY RESULT IN DAMAGE TO THE iPod.


- ▶ Turn on the LCD TV. The iPod is recognized and the TV automatically switches to iPod mode.

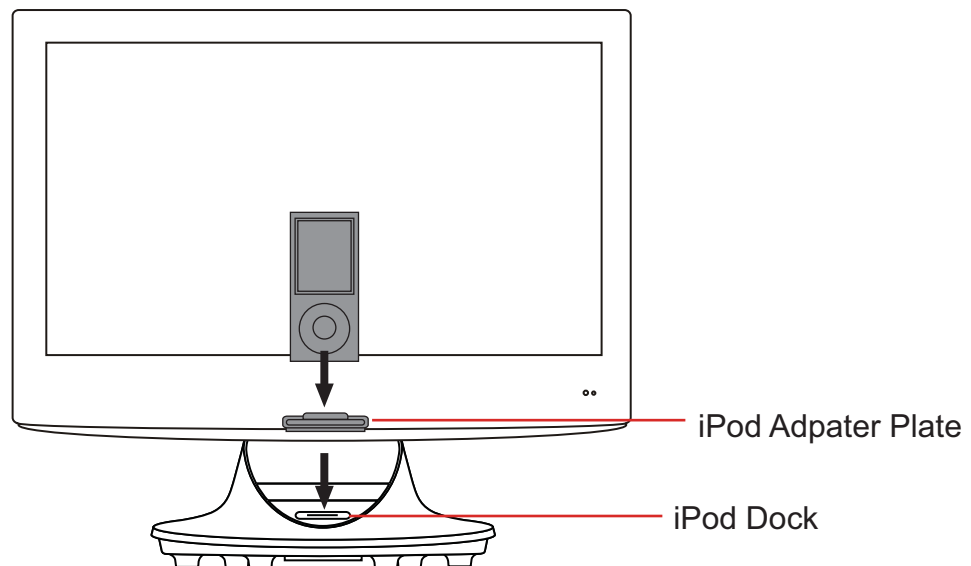

NOTE: A docked iPod will charge when the TV is powered ON. When the TV is in standby mode the iPod will not charge.

 2) iPod-specific keys on the remote control

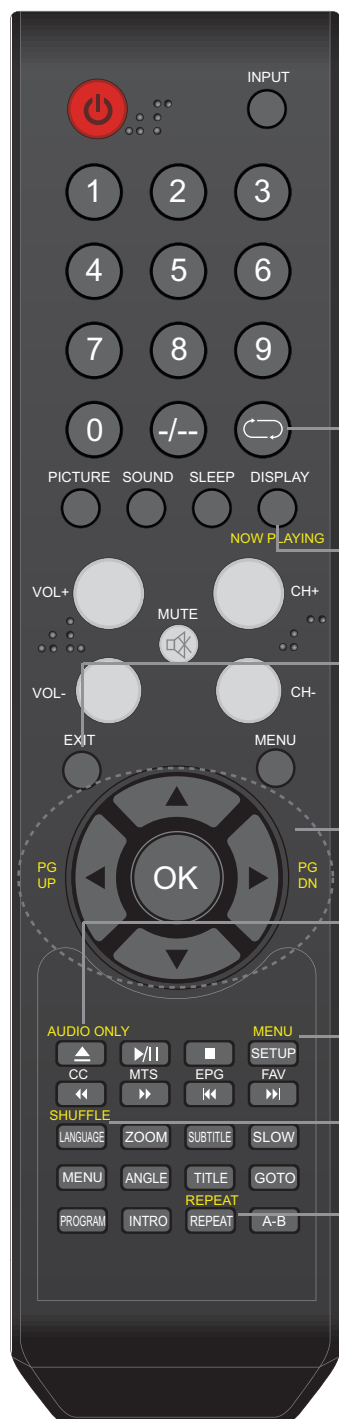

 : Press to toggle between **Manual Mode** and **iPod Mode**

- **iPod Mode**: TV displays iPod menu. iPod is controlled via menu.
- **Manual Mode**: TV does not display iPod menu. Most iPod functions are controlled using control keys on iPod.

NOW PLAYING: Press to return to the song or video you are playing.

EXIT: Exit the iPod menu.

▲ ▼ ◀ ▶: Press to navigate through the menus

OK: Press to confirm your selection

PG UP/PG DN: Press to move one page up / Move one page down

AUDIO ONLY: Press to blank the TV menu display while still playing audio. Press any key to restore display.

MENU: Press to return to the previous menu or display/hide the iPod menu.

SHUFFLE: Press to switch between Shuffle modes – Shuffle Off, Shuffle Songs, Shuffle Albums.

REPEAT: Press to switch between Repeat modes – Repeat Off, Repeat One, Repeat All.


3) Getting Started – Playing Music and Videos

- ▶ If your iPod has just been docked, the TV will automatically display the main iPod menu as below.
- ▶ If you have been viewing another source (TV, HDMI, DVD etc.) select “iPod” from the source menu to launch the iPod menu.



Main iPod menu

The main iPod Menu is similar to the main menu shown on and iPod's own LCD display. The layout and operation is similar. Menus are navigated using the ▲▼◀▶ keys and selections made using **OK**.

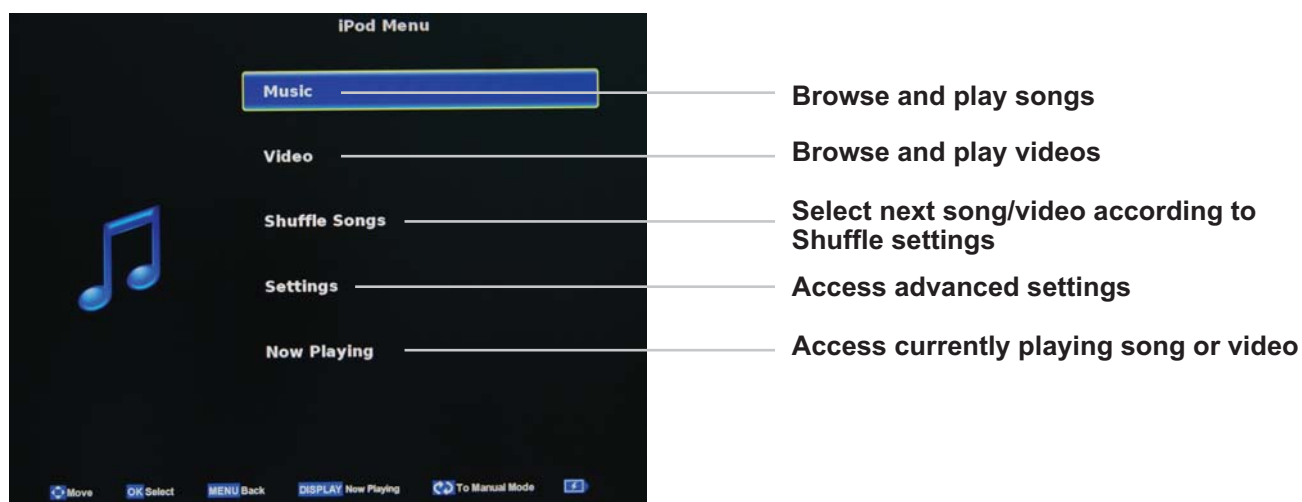

NOTES:

- The images of menus shown in this user manual are samples only. Actual menu contents will vary depending on the data loaded onto the specific iPod used.
- Reading the contents of the iPod and displaying the iPod main menu may take a short period of time. If the iPod main menu is not displayed after 1 minute, disconnect the iPod and re-connect


Playing Music









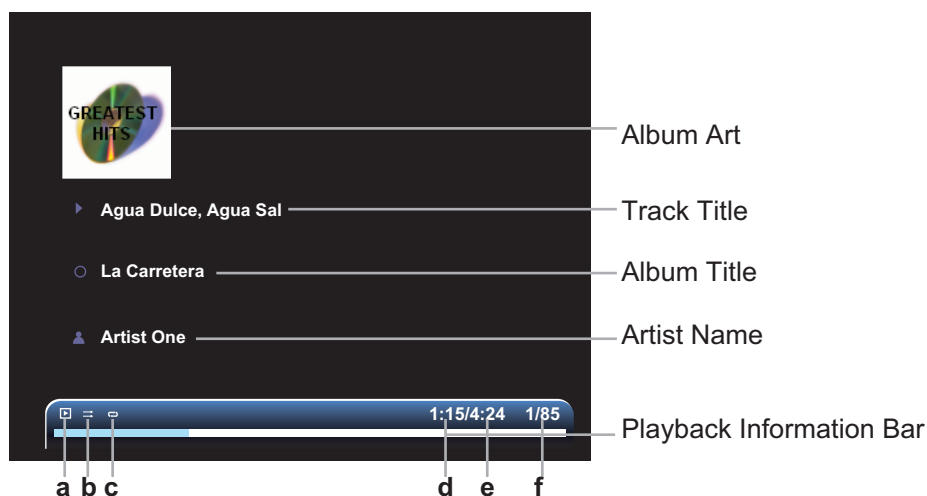

- ▶ Select **Music** from the main iPod Menu and press **OK**. The **Music Menu** is displayed as below. Music is arranged according to Playlists, Artists, Albums, Genres, etc.
- ▶ Select **Playlists**, **Artists** etc, chose the song, artist or album you wish to hear and select a track. Press **OK** and playback begins. The **Now Playing Screen** is displayed.



Now Playing Screen – Music Playback

The **Now Playing Screen** allows you to see artist, album and track information at-a-glance. This is the screen you will see most often when listening to music




- a. Playback state: Play , Pause , Fast forward , Fast reverse 
- b. Shuffle Setting: Shuffle off , Shuffle Songs , Shuffle Albums 
- c. Repeat Setting: Repeat Off , Repeat One , Repeat All 
- d. Elapsed time.
- e. Total track length
- f. Track position on album or in playlist

Playing Video


Video playback is supported by certain iPod models including iPod touch 1st and 2nd generation, iPod nano 3rd and 4th generation, iPod classic and iPod 5th generation. Other models do not support video playback.

- ▶ Select **Video** from the main iPod Menu and press **OK**. The **Video Menu** is displayed as below. Videos are categorized as Movies, Music Videos, TV Shows, Video Podcasts or Rentals.
- ▶ Select **Movies**, **TV Shows** etc, chose the series or movie you wish to watch. Press **OK** and playback begins. The **Now Playing Screen** is displayed.

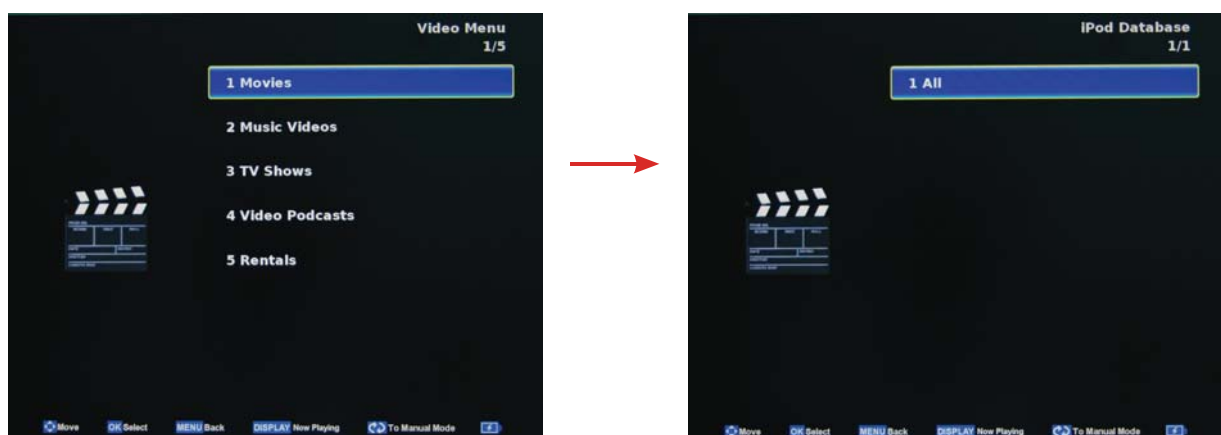

Now Playing Screen – Video Playback

The **Now Playing Screen** gives you at-a-glance information about the video you are viewing. The playback information bar shown at the bottom of the screen is the same as for music playback and is described in detail above.

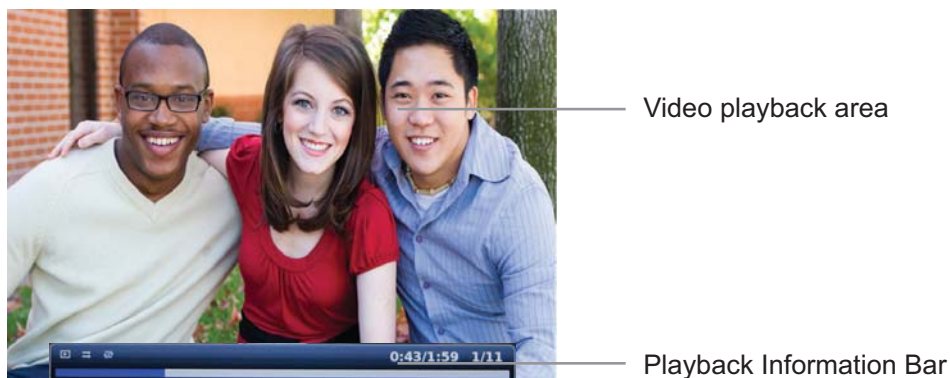

HINT: Press **EXIT** to hide the playback information bar.

Shuffle Songs


Shuffle songs or videos according to the **Shuffle** settings.

► Select **Shuffle Songs** from the main iPod Menu and press **OK**. The next song/video is played according to the Shuffle settings.

Settings Menu

Allows you to adjust **Shuffle** and **Repeat** settings.

- Select **Settings** from the main iPod Menu and press **OK**.
- Adjust the **Shuffle** and **Repeat** settings using the **OK** button.

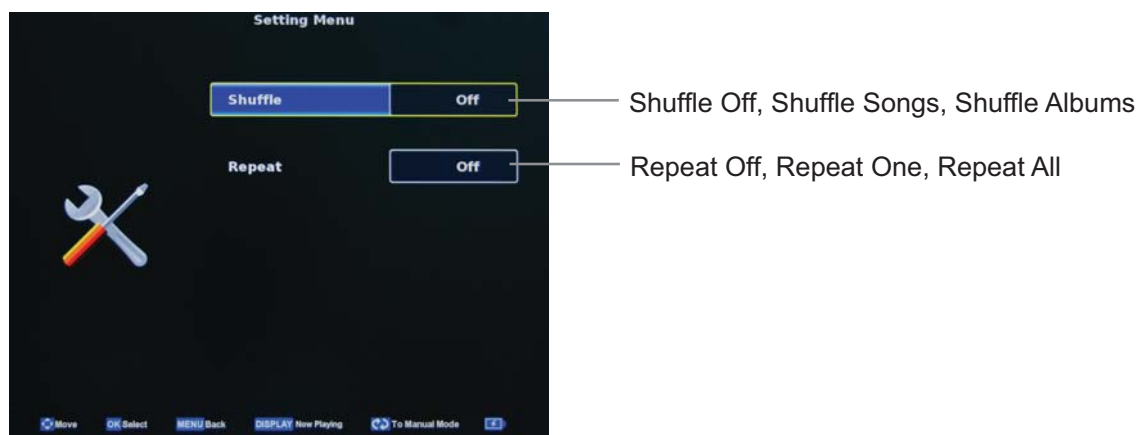

Now Playing

Allows you to quickly access the currently playing song or video on the **Now Playing Screen**.


 
- Select **Now Playing** from the main iPod Menu and press **OK**. The **Now Playing Screen** is displayed.


4) Viewing Photoes

This TV can be used as a large screen for conveniently viewing photoes stored on your iPod. Photo viewing is supported by certain iPod models including iPod touch 1st and 2nd generation, iPod nano 3rd and 4th generation, iPod classic and iPod 5th generation. Other models do not support photo viewing. Photo viewing is supported in Manual Mode only. iPod functions can be controlled by using the basic navigation and playback keys on the remote or directly via the control panel of the iPod.

NOTE: The steps in this section require navigation of iPod menus and control of iPod settings. Details of menus and settings vary between iPod models. A degree of familiarity with the operation of your particular iPod model is required. All slideshow parameters including accompanying music, speed, transition style etc. are controlled by the iPod. Please refer to your iPod user manual for details.

To view photoes after docking your iPod:

- ▶ Press  on the remote control to select **Manual Mode**. The screen displays “ **Return to iPod Mode**”.
- ▶ Enable the “**TV Out**” function on your iPod. Ensure that “**TV Signal**” is set to “**NTSC**”. These settings are usually located in the “**Slideshow Settings**” menu of your iPod. For best viewing, set the TV out format to “**Widescreen**” if available or set the TV aspect ratio to “**Normal**” for viewing 4:3 photos.
- ▶ Select a photo album from your iPod photo library. A typical operating sequence is shown below. The sequence may be different for your particular iPod model. Please refer to your iPod user manual for details.

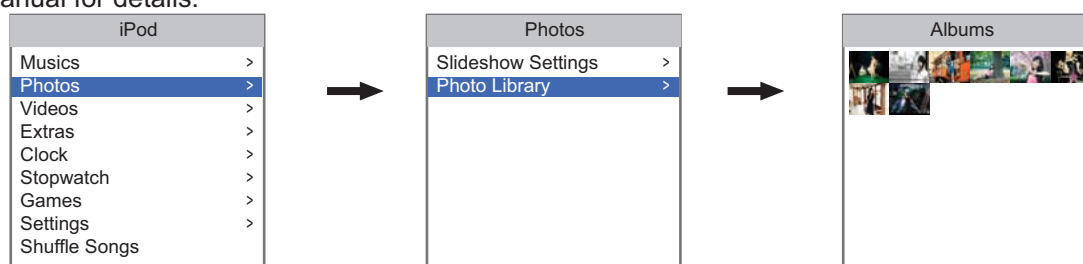

- ▶ Choose a photo to view. Select the photo once to view it on the iPod screen. Select the photo again to start a slideshow. The photo is displayed on the TV screen. You may configure the accompanying music, slideshow speed, transition styles etc. using the iPod menus. Please refer to your iPod user manual for details.



NOTE:

- To start a slideshow on iPod touch models, tap the ► icon shown at the bottom of the photo or album you are currently viewing. If you do not see the ► symbol, tap the photo to show the controls.
- Press **ZOOM** button on the remote control to adjust the aspect ratio for the picture display mode on the screen.

DVD Basic Operation

Turn on your TV then use the INPUT button on the remote control or on the TV to select DVD mode. If there is no disc in the DVD players the screen will show "NO DISC".

Place a disc

Insert a disc according to the silk.

Do not touch the playing surface.

Hold the disc around the outside with your fingers and place the disc into the slot. The player will automatically draw the disc into the player.

To "Eject" the disc, press the "▲" (EJECT) button on the remote control or on the TV.

Play

The contents of each disc vary, as to how the disc was authored and what features are included. Some discs start playing as soon as they have been read, some need "Play" selecting in the Menu. Different play modes are offered, such as Menu Play, Sequence Play and other modes.

Using the Display Feature

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc discs.
2. Loading and playing DVDs (two pages)
 - Press DISPLAY button once to show the first page:
 - "Disc Type, Title * / * (the playing title / total titles), Chapter * / * (the playing chapter / total chapters), Elapsed Time of the Disc".
 - Press the button again to show the second page:
 - "Language * / * (the serial number of playing language / the amount of optional languages) or Off, Language Type, Audio Type, Subtitle * / * (the serial number of playing subtitle / the amount of optional subtitles) or Off, Angle * / * (the serial number of playing angle / the amount of optional angles) or Off".
 - Press the button for the third time, the display menu fades out.
3. Loading and playing SVCD discs (two pages)
 - Press Display button once to show the first page:
 - "Disc Type, Track * / * (the playing track / total tracks), Mute, PBC, Repeat Mode, Elapsed Time of the Playing Track".
 - Press the button again to show the second page:
 - "Language * / * (the serial number of playing language / the amount of optional languages) or Off, Language Type, Audio Type, Subtitle * / * (the serial number of playing subtitle / the amount of optional subtitles) or Off".
 - Press the button for the third time, the display menu fades out.
4. Loading and playing VCD
 - Press Display button once to show the first page:
 - "Disc Type, Track * / * (the playing track / total tracks), Mute, PBC, Repeat Mode, Elapsed Time of the Playing Track".
 - Press the button again, the display menu fades out.
5. Loading and playing CD, HD-CD, WMA, Digital Audio / JPEG discs
 - Press Display button once to show the first page:
 - "Disc Type, Track * / * (the playing track / total tracks), Mute, Repeat Mode, Elapsed Time of the Playing Track".
 - Press the button again, the display menu fades out.

Subtitles

1. Compatible with DVD, SVCD discs.
2. Press the Subtitle button on the remote once, and the subtitle info banner appears
3. When a DVD or SVCD is recorded with subtitles, you can use the Subtitle feature to view the subtitles on-screen. By default, subtitles are off. The info banner will display Subtitle Off.
4. To display subtitles, press the Subtitle button again. The default language with its responding serial number will be displayed in the info banner and subtitles will be displayed in that language. There are 8 supported subtitles: Chinese, English, Japanese, French, Spanish, Portuguese, Germany and Latin. With each consecutive press of the Subtitle button, the subtitle switches. For example, "Language Icon: [1 English DTS 6CH] or [Off]" (the availability of the subtitles are disc-dependent). To turn subtitles off, press the Subtitle button until Subtitle Off is displayed.

Zoom In the Video Image

1. Compatible with DVD, SVCD, VCD, JPEG discs.
2. The Zoom Function allows you to enlarge the video image.
3. Press Zoom repeatedly to activate the function and choose the required zoom factor: Zoom 2, Zoom 3, Zoom 4, Zoom 1/2, Zoom 1/3, Zoom 1/4, Zoom Off.

Digital Audio Disc

1. Compatible with Digital Audio discs
2. The player will search the disc directory automatically and display the contents on screen.
3. The player will then start to play the first track, of the selected directory.
4. To change directories use the direction buttons.

Disc Care

About Disc Terms

Title

Generally, pictures or music compressed on a DVD are divided into several sections, "title".

Chapter

The smaller section unit of picture or music in a DVD under the title, usually one title is comprised of one or more chapters and each of them is numbered for easy searching, but some discs may not have a recording chapter.

Track

A segment of picture or music on a CD, Each track is numbered for searching.

Care of Disc

Video disc contains high-density compressed data that needs proper handling.

1. Hold the disc with fingers by outer edge and/or the center spindle hole. Do not touch the discs surface.
2. Do not bend or press the disc.
3. Do not expose the disc to direct sunlight or heating sources, Store discs in cabinet vertically, and in dry condition.



Prevent exposure to:

Direct sunlight, Heat or exhaust from a heating device, Extreme humidity

Clean the disc surface with a soft, dry cleaning cloth, Wipe the disc surface gently and radially from center toward the outer edge.


Do not apply thinner, alcohol, chemical solvent, or sprays when cleaning. Such cleaning fluids will permanently damage the disc surface.

DVD System Setup

System operation will define the setting of the set; these definitions will be stored until you change them again.

General Steps of Setup Menu

1. Pause or Stop the player. Press **SETUP** on the remote control. The main menu will be shown as below.

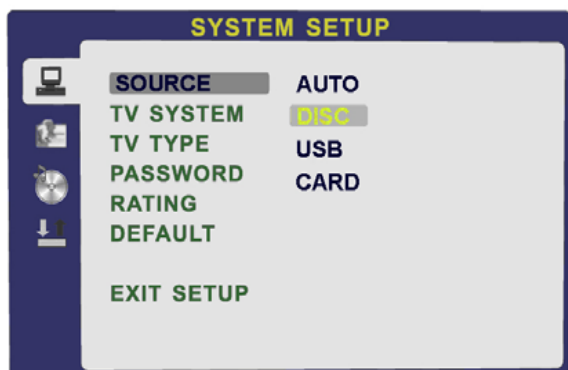


2. Press the **▲/▼** button to select the Icon of the desired section, e.g. "TV System" and press **►** button to open that section.
3. Press **▲/▼** to select the desired feature and again press **►** button to open that section.
4. Press **▲/▼** to select the desired feature and then press **"OK"** to select the new setting.
- 5 To exit the menu, press **"SETUP"** or **▼** button to select EXIT SETUP and then press **"OK"** When launching the setup routine, the pressing of the following buttons will turn off the setup menu, while the choices that have been changed will be saved.

Menu specification

1. SYSTEM SETUP

The system setup options are illustrated below:

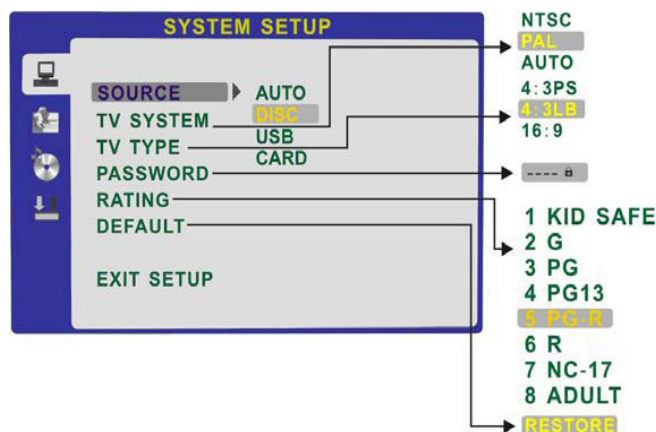

SOURCE

Select the source of the information you want to play: AUTO, DISC, CARD, USB

TV SYSTEM

According to the Color system of your TV, select proper TV TYPE.

PASSWORD

The password option is initialized as locked. You cannot set the ratings limit or change the password. To enable these features you must unlock the Password. The default password is


"0000". Using the ▲/▼ button, move the highlight to "PASSWORD", press ► the button and enter "0000". You will see the padlock symbol open. You may now change the RATING or put in a new password number. If the Lock symbol is BLUE you must press ► the button to enter the lock field, the lock symbol will change to YELLOW, you may now enter a new 4 digit number. Please remember or write down the new Password and keep safe.

RATING

The Rating feature is a rating limit feature, like movie ratings. This helps you to control what DVD the family watches. There are 8 levels of selection, from KIDS SAFE to ADULT. Adult is the "play all" selection.

2. LANGUAGE SETUP


The language setup options are illustrated below:

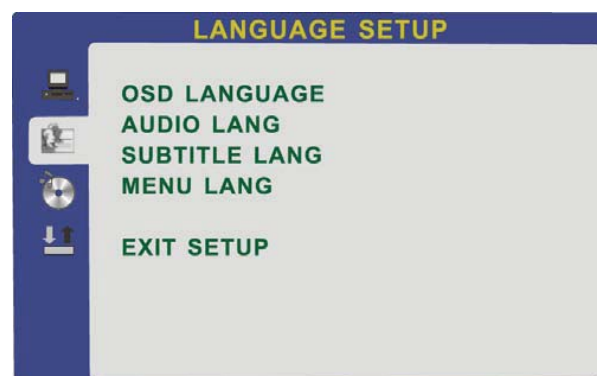

- **OSD LANGUAGE:** The OSD will display in the language you choose.
- **AUDIO LANG:** If the disc you are playing has the language you choose, it will output audio in that language.
- **SUBTITLE LANG:** If the disc you are playing has the language you require you may select this either in the Menu or using the "SUBTITLE" button on the Remote control. You may also switch this OFF.
- **MENU LANG:** If the disc you are playing has the language you require you may select this.

3. AUDIO SETUP


- **TONE:** Use the ▲/▼ button to move the scroll and adjust the tone.

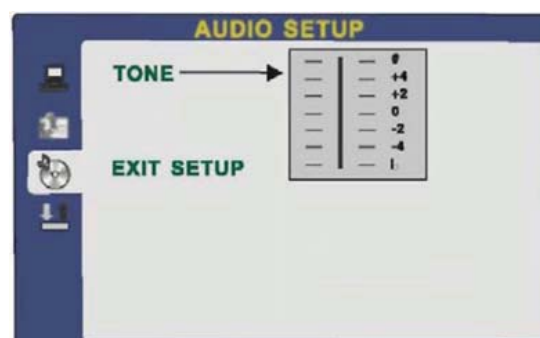

4. DIGITAL SETUP

The video setup options are illustrated below:


- **DYNAMIC RANGE:** Use the ▲/▼ button to move the scroll and adjust the dynamic range.
- **DUAL MONO:** Choose the mode of the audio output.
There are four modes: STEREO, MONO L, MONO R, MIX MONO.

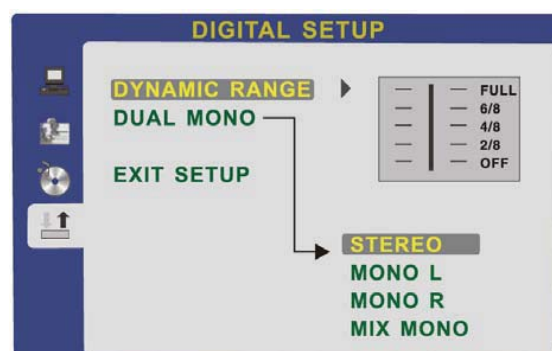

Playing media files from the USB and SD card slots

- The following files formats **are supported** by this TV: JPG, MP3, WMA, MP4 (DivX3.11-5.11, Xvid), MPEG1 (DAT, MPG, MPEG), MPEG2 (mpeg, mpg).
- File formats including the following **are not supported** by this TV: BMP, PNG, AAC, DivX 6, DivX HD, Vob, ts.
- The following cards are supported by this TV: SD, MMC, Memory Stick (MS).
- Only full-size card formats are supported. If you wish to use compact formats such as miniSD, microSD, Memory Stick Duo etc., please be sure to use an adapter to convert to the full-size format.

1) Insert your USB device or card.

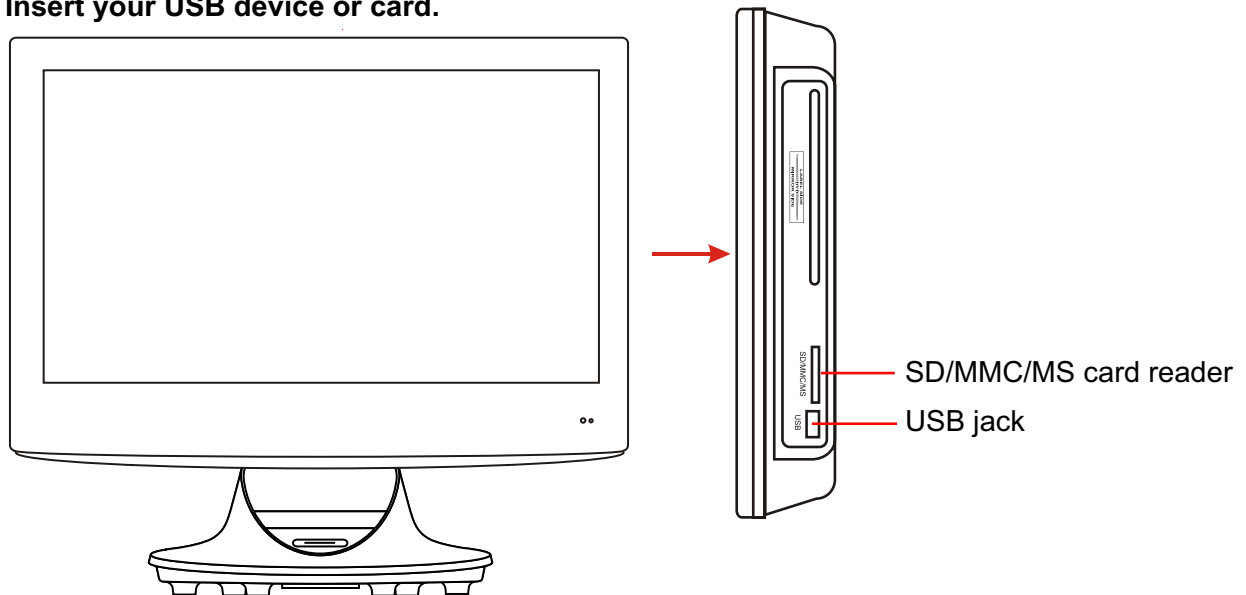


2) Select DVD from the source menu. All card and USB functions are accessed from the DVD source.

3) Enter the USB or CARD operation screen


Press **SETUP** button on the remote control to display the DVD setup menu on DVD mode as the picture below:



- ▶ Select **SYSTEM SETUP** using ▲▼ and press **OK** to select
- ▶ Select **SOURCE** and press **OK** to select
- ▶ Select **USB/CARD** and press **OK** to enter the folder and file navigation screen as below.

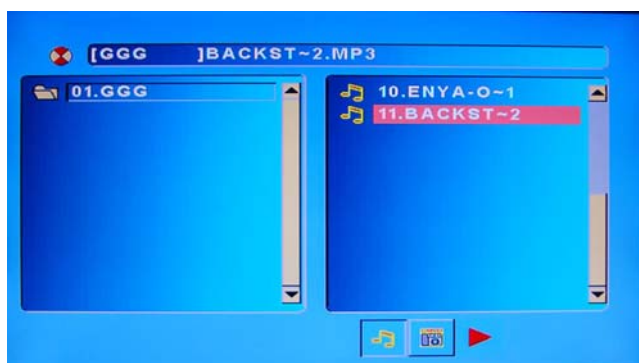

3) Play the Music, Video or view the Photos

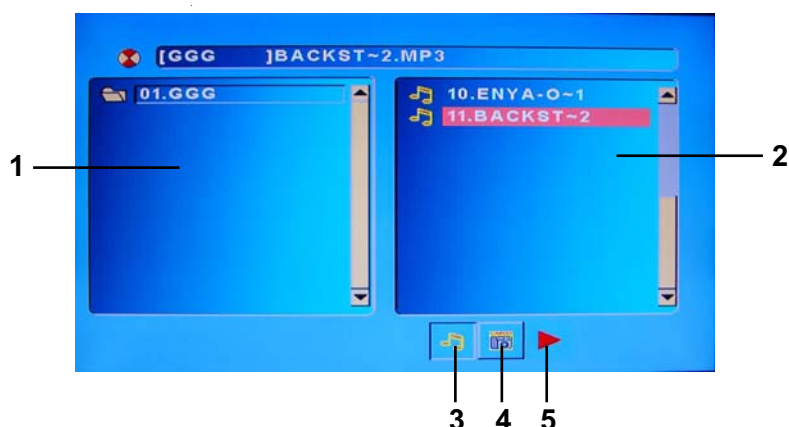

- ▶ Use ◀▶ to select (3) - Music, (4) - Photo or (5) - Movie. The list of folders is displayed in area (1).
- ▶ Select area (1) using the ◀▶ keys and select the folder using ▲▼. The list of files is displayed in area (2).
- ▶ Select area (2) using the ◀▶ keys and select the file you wish to play using ▲▼.
- ▶ Press **OK** button to begin playback.

NOTE:

1. Playback controls and settings are same as for DVD playback.
2. Pressing the **STOP** button on the remote control during playback will halt playback and return to the file and folder navigation screen.
3. The following keys have specific functions during photo playback:
 - ◀▶ : Rotate image
 - ▲▼ : Flip image
 - ▶▶ : Display the next photo
 - ◀◀ : Display the previous photo

Simple Troubleshooting

If the display fails or the performance dramatically, check the Display in accordance with the following instructions. Performs to check the peripherals to pinpoint the source of the failure. If the Display still fails to perform as expected, contact the dealer for assistance.

SYMPTOM	DEALING METHOD
NO POWER	Check the power connection. Pull the plug out, wait for 60 seconds, then reconnect the power and run the set
NO PICTURE	Check the antenna connection. Try other TV channel due to the TV station problem. Modify the brightness or contrast setting.
NO SOUND	Increase the volume. Check that if the set is on the mute state or not. Check the voice setting condition. Check the voice mode setting condition.
ABNORMAL COLOR	Check the antenna connection
NO RESPONSE OF THE REMOTE CONTROL	Check the effect of the batteries, if needed, please replace the batteries or clean the remote sensor window. The distance between the set and the remote control should be less than 6 meters.
The SCREEN FLASH IN VGA MODE	The parameter is too big. Please use safety mode when restart the PC, and set the parameter of the monitor according to the instruction.
SOME INTERFERE IN THE VGA MODE	Please modify parameter of the monitor according to the instruction.
CLEAN THE TV SET	Please pull the plug out when clean the LCD screen. Using soft, clean cloth to wipe it off. If need to clean further, please use dry cloth, don't use naphtha or other thinner liquid.
COLOR SPOT	This product uses high definition LCD panel, and the panel has its special character, there maybe existed some color spots, so when the user find few color spots it's not a quality problem. The standard for inspecting this panel is the same which is out of the scope to replace the product.

Technical Specification

LCD Panel	Panel Size	22 inch(diagonal)
	Brightness	300 cd/m ²
	Contrast	800:1
	Resolution	1366X768
Input Connector	Video	1
	S-Video	1
	Audio(L/R)	1
	VGA	1
	PC Audio	1
	HDMI	1
	YPbPr	1
	RF	1
Power Source		AC100-240V 50/60Hz
Power Consumption		60W

The cabinet design and electronics specifications will be modified without prior notice for improving the performance.

VIORE™ LIMITED WARRANTY

FLAT PANEL TELEVISION

This **VIORE** brand Product, as supplied and distributed by **VIORE** and delivered new in the original carton to the original purchaser is warranted by **VIORE** against manufacturing defects in materials and workmanship for a limited warranty period of one (1) year on parts and labor. However, there will be only a 90 day parts and labor limited warranty for commercial use.

This Limited Warranty does not apply to store display products and product sold as a "marked down" special, in "as is" condition, "open box", products missing accessories, no fault found or damaged at time of delivery to **Viore**.

Proof of purchase within one year from date of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is evidence the Product is within the limited warranty period. The Bill of Sale, Receipt or Receipted Invoice must be presented as a pre-condition to obtaining the limited warranty service.

This limited warranty begins on the original date of purchase, and is valid only on Products purchased through **VIORE** authorized dealers and used in the United States by the original purchaser. To receive warranty service, the purchaser must contact **VIORE** for problem determination and service procedures. Warranty service may only be performed by a duly authorized **VIORE** service center. The original dated bill of sale, receipt or receipted invoice must be presented upon request as proof of purchase to **VIORE** or **VIORE's** authorized service center.

VIORE will repair or if repairs cannot be made, **VIORE** will replace this Product at no charge if the Product is defective as specified in this limited warranty during the limited warranty period. **VIORE** may use new, or remanufactured parts or products to repair or replace the Product at its sole discretion. All replaced parts and Products become the property of **VIORE** and must be returned to **VIORE**. Replacement parts and Products assume the remaining original limited warranty, or ninety (90) days, whichever is longer.

Product freight needs to be prepaid by original purchaser and shipped in either its original packaging or packaging affording an equal degree of protection. **VIORE** shall not be responsible for or obligated to replace damaged goods. If you reside in California and you cannot transport the television due to the size, weight, and method of attachment, **VIORE** will provide transportation for the television to the repair facility. If you reside in a state other than California, you are responsible for the costs of transporting the television to a repair facility.

If the product is received damaged by **VIORE**, it is the responsibility of the consumer to file a claim against the carrier. **VIORE** will only store the damaged product for 30 days and reserves the right, in its sole discretion, to dispose of the damaged product or ship it back to the consumer at consumer's expense after 30 days.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this product, and shall not apply to the following, including, but not limited to: damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by **VIORE** which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems; burned-in images. **VIORE** does not warrant uninterrupted or error-free operation of the product.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON VIORE. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. VIORE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

To obtain warranty service, please contact **VIORE** at:

Phone: 1-877-777-1428
www.viore.com

© 2009 VIORE, Inc. All rights reserved. Reproduction in whole or in part without written permission is prohibited. "iPod" is a trademark of Apple, Inc., registered in the U.S. and in other countries. "Made for iPod " means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks of HDMI Licensing LLC. All other trademarks are trademarks of their respective owners. Features and specifications are subject to change without notice.