

Owners & Installation

Masport®

I31-3 Gas Inbuilt

Model: I31-NG3 Natural Gas
I31-LP3 Propane

Manual



PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

LISTINGS AND CODE APPROVALS

These gas appliances have been tested in accordance with AG 103, NZS 5262 and have been certified by the Australian Gas Association for installation and operation as described in these Installation and Operating Instructions.

Your unit should be serviced annually by an authorised service person.

WARNING:

Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information consult an authorised installer, service agency or the gas supplier.

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance.

Installation and service must be performed by an authorised installer, service agency or the gas supplier.

FOR YOUR SAFETY

What to do if you smell gas:

- Do not try to light any appliance
- Do not touch any electrical switch: do not use any phone in your building.
- Immediately call your gas supplier from a neighbour's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Head Office - New Zealand
1-37 Mt Wellington Hwy. Panmure,
P.O. Box 14349
Auckland 6.
Ph. (9) 570-9009
Fax. (9) 527-1294

Australia
P.O. Box 533
Braeside, Victoria, 3195

MASPORT GAS FIREPLACE INBUILT FIREPLACE

TO THE NEW OWNER

Congratulations! You are the owner of a state-of-the-art Gas Inbuilt Fireplace by Masport. The Masport Gas Fireplace Series of hand crafted appliances has been designed to provide you with all the warmth and charm of a fireplace, at the flick of a switch. The model I31-3 of this series has been approved by Australian Gas Association for both safety and efficiency. As it also bears our own mark, it promises to provide you with economy, comfort and security for many trouble free years to follow. Please take a moment now to acquaint yourself with these instructions and the many features of your Masport Fireplace.

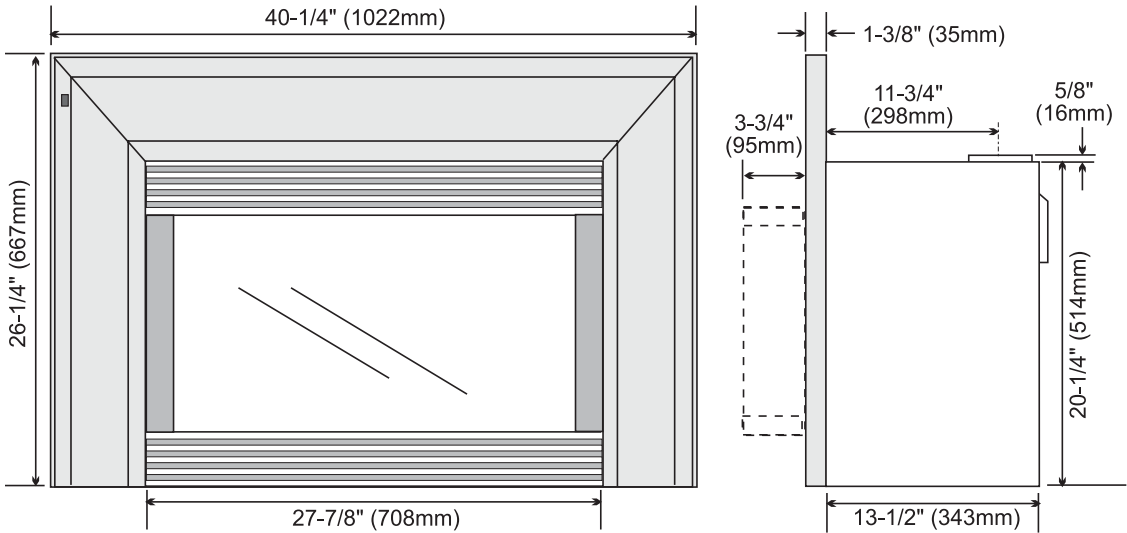


TABLE OF CONTENTS

MASPORT GAS FIREPLACE INSERT

	Page		Page
Unit Dimensions	2	Operating Instructions	
Safety Label	4	Operating Instructions	16
		Lighting Procedure	16
		Shutdown Procedure	16
		First Fire	16
		Automatic Convection Fan Operation	16
		Normal Operating Sounds of Gas Appliances	16
		Copy of Lighting Instruction Plate	17
		Maintenance	
		Maintenance	18
		- Gold Plated Trim	18
		- Log Replacement	18
		- Door Glass Replacement	18
		- Bay Glass Removal	18
		- Flush Glass Replacement	18
		- Glass Gasket	19
		- Fan Maintenance	19
		Trouble Shooting	20
		Parts List	21
		Warranty	
		Warranty	27
Installation			
For Your Safety	5		
Specifications	5		
Installation Checklist	5		
Materials Required	5		
Minimum Fireplace Dimension	6		
Clearances to Combustibles	6		
Gas Connection	6		
Draft Diverter Connection	7		
Flueing	7		
- Combustion & Ventilation	7		
Gas Pressure Test	7		
Gas Insert Aeration System	7		
Test for Flue Spillage	7		
Optional Brick Panel	8		
Log Installation	8		
Faceplate & Trim	10		
Glass Front Installation			
- Standard Flush Door (1 panel)	10		
- Flush Louvres	10		
- Optional Bay Door (3 panel)	11		
- Bay Louvres	11		
Cast Faceplate Installation	12		
Cast Faceplate Grill Installation	13		
Barossa Curved Front	14		
Optional Remote Control	15		
Optional Wall Thermostat	15		
Wiring Diagram	15		

DATA BADGE

This is a copy of the label that accompanies each Masport I31-3 Gas Inbuilt fireplace. We have printed a copy of the contents here for your review.

DATA BADGE NOTE: Masport units are constantly being improved. Check the label on the unit and if there is a difference, the label on the unit is the correct one.

Masport

Model	○	○	○	○	○
Gas Type	Nat	Prop	**ULPG	Nat	Prop
Model	P36-NG	P36-LP	P36-LP	I31-3NG	I31-3LP
Gas Consumption	33mj.	31mj.	31mj.	31mj.	31mj.
Manifold Pressure	1.0kP	2.7kPa	2.7kPa	.9kPa	2.59kPa
Injector Size -Front:	1x#37	1x#52	1x#52	1x#37	1x#52
	2.65mm	1.6mm	1.6mm	2.65mm	1.6mm
- Rear	NA	NA	NA	NA	NA
AGA Approval number to Code AG103	5815	5815	5815	5498	5498
<i>** Approved for use on Universal LPG as per gas testing standard NZS 5262.</i>					

Electrical Conforms to AS3100 240V 50Hz 1.0 amp Max.

Distributed by:
Masport Pty. Ltd.
 Industrial Drive
 Braeside, Victoria. 3195

Masport Ltd.
 1-37 Mt. Wellington H/Way
 Auckland 6
 New Zealand

 To be installed in a non-combustible fireplace by an authorised person in accordance with installation instructions provided with the appliance. See P36 Zero Clearance, and I31 & I43 Zero Clearance Box instructions

908-063b

Serial Number **237**

DO NOT OPERATE THIS APPLIANCE BEFORE READING THE INSTRUCTIONS BOOKLET.
DO NOT PLACE ARTICLES ON OR AGAINST THIS APPLIANCE
DO NOT STORE CHEMICALS OR FLAMMABLE MATERIALS, OR SPRAY AEROSOLS NEAR THIS APPLIANCE.
DO NOT OPERATE WITH PANELS, COVERS OR GUARDS REMOVED FROM THIS APPLIANCE.
DO NOT ENCLOSE THIS APPLIANCE.

908-602

○ THE GUARD IS FITTED TO THIS APPLIANCE TO REDUCE THE RISK OR FIRE OR INJURY FROM BURNS AND NO PART OF IT SHOULD BE PERMANENTLY REMOVED.

○ FOR PROTECTION OF YOUNG CHILDREN OR THE INFIRM, A SECONDARY GUARD IS REQUIRED.

(Australia Only)

IMPORTANT: SAVE THESE INSTRUCTIONS

The Masport Gas Fireplace must be installed in accordance with these instructions. Carefully read all the instructions in this manual first.

Note: Failure to follow these instructions could cause a malfunction of the heater which could result in death, serious bodily injury, and/or property damage. Failure to follow these instructions may also void your fire insurance and/or warranty.

FOR YOUR SAFETY

This appliance requires air for proper combustion. Always provide adequate combustion and ventilation air. Follow instructions and information in the current AG 601, NZS 5261 or local codes. Consult the "authority having jurisdiction" to determine the need for a permit prior to starting the installation.

GAS PIPE TESTING

The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 3.45 kPa.

Specifications:

Fuel: Natural Gas or Propane (see page 7)
Electrical: 240 volt 50 hz system
Fan/Blower: 2-speed, 127 CFM
Log Sets: Ceramic fibre

BEFORE YOU START

Installation is to be carried out ONLY by an authorised person.

- 1) The appliance shall be installed in accordance with the manufacturer's installation instructions, local gas fitting regulations, municipal building codes, water supply regulations, electrical wiring regulations, with AG 601. (AGA gas installation code) NZS 5261 (New Zealand)
- 2) **Installation and repair should be done ONLY by an authorised person.**
- 3) The appliance should be inspected before use and at least annually by an authorised service person. More frequent cleaning may be required due to excessive lint from carpeting, bedding material, etc. It is imperative that control compartments, burners

and circulating air passageways of the appliance be kept clean and free from excessive lint from carpeting.

- 4) See general construction and assembly instructions. This appliance may only be installed in a flued, non-combustible fireplace. The appliance and flue should be enclosed when installed or passing through a living area, where children may come in contact with it.
- 5) Always connect this space heater to a chimney and flue to the outside of the building envelope. Never flue to another room. Make sure that the flue is properly sized and is of adequate height to provide the proper draft.
- 6) Inspect the flueing system annually for blockage and any signs of deterioration.
- 7) Any safety glass removed for servicing must be replaced prior to operating the appliance.
- 8) To prevent injury, do not allow anyone who is unfamiliar with the operation to use the fireplace.

INSTALLATION CHECKLIST

The Masport Gas Insert is installed as listed below.

- 1) Unit Location - check Clearances to Combustibles on page 6.
- 2) Make the gas connections (see page 6).
- 3) Install the flue or liner to the sliding draft diverter. See page 7.
- 4) Install Flueing, page 7. Slide the unit into the fireplace. Attach draft diverter to the insert.
- 5) Test gas pressure, page 7. Check aeration, page 7.
- 6) Test for flue spillage, page 7.
- 7) Install the optional brick panels. See page 8.
- 8) Install the log set. See page 8.
- 9) Assemble and install the faceplate and trim. See page 10.
- 10) Install the glass front (page 10) and optional Bay Front (page 11).
- 11) Install both louvres, flush (page 10) or Bay (page 11).
- 12) Install Optional Remote Control and Optional Wall Thermostat, page 15.

13) Final check: Before leaving this unit with the customer, the installer must ensure that the appliance is firing correctly. This includes:

- a) Locking the appliance to ensure the correct firing rate.
- b) Adjusting the primary air, if required, to ensure that the flame does not carbon. See page 7.
- c) Ensuring that the appliance is flueing correctly. See page 7.

MATERIALS REQUIRED

No electric power supply is required for the gas control to operate. A 240 Volt AC power cord is hooked up to the fan switch and blower. Plug 3 wire cord into a suitable receptacle. Do not cut the ground terminal off under any circumstances.




When connected with 240 volts, the appliance must be electrically grounded in accordance with local codes.

Note: This unit is equipped with a heat sensor thermodisc which will prevent the blower from operating until the unit reaches the correct temperature.


INSTALLATION

MINIMUM FIREPLACE DIMENSIONS

The minimum fireplace dimensions for the Masport gas space heater are shown in the following diagrams:

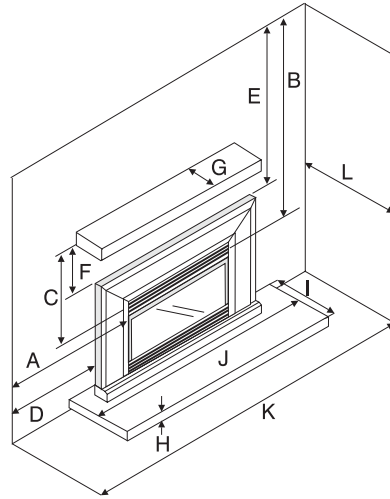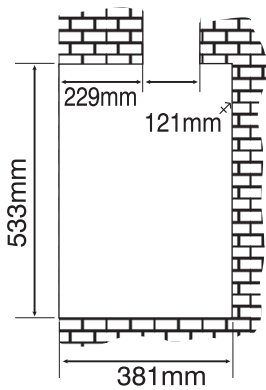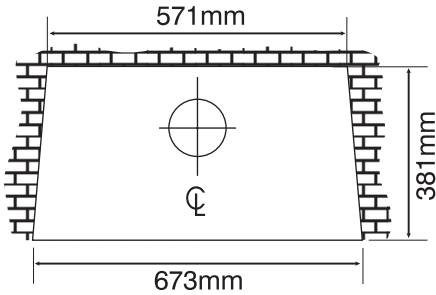

Mantel Clearances with Bay and Flush Louvers in Masonry Installation

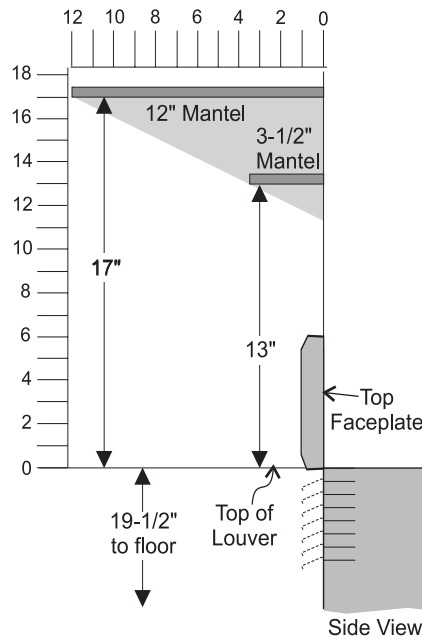


NOTE: Mantel clearances for installation into a Zero Clearance Kit are different. Please refer to the Zero Clearance Kit Manual for details.

Note: A non-combustible mantel may be installed at a lower height if the framing is made of metal studs covered with a non-combustible board.

GAS CONNECTION

GAS CONNECTION WARNING:
Only persons licensed to work with gas piping may make the necessary gas connections to this appliance.

- 1) If the appliance is to be installed into an existing chimney system, thoroughly clean the masonry or factory built fireplace.
- 2) The gas connection is 12" BSP.

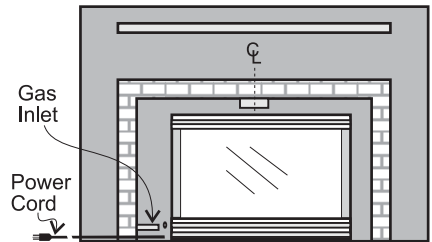

- 3) Locate the center point where the flue will pass through the chimney above the appliance. Move the appliance into the exact location where it is to be installed. Ensure that the Insert is level.
- 4) The installer must provide a valve with a plugged tapping, accessible for test gauge connection, immediately upstream of the gas supply connection to the appliance.

CAUTION: If the glass is removed or opened for servicing, it must be replaced and closed prior to operating the appliance. The glass must be fixed in the door when operating.

MINIMUM CLEARANCES TO COMBUSTIBLES

The minimum fireplace clearances for the Masport gas space heater are shown in the following diagrams:

	From Unit	
Sides	A	255 mm
Ceiling	B	1205 mm
Mantle	C	see Mantel Clearances
	From Surround (660 mm x 1016 mm)	
Sides	D	100 mm
Ceiling	E	1055 mm
Max. Mantle Depth	G	305 mm
Hearth Height	H	0 mm
Hearth Depth	I	405 mm
Hearth Width	J	1015 mm
Min. Alcove Width	K	1220 mm
Max. Alcove Depth	L	915 mm

SPECIFICATIONS		
	NATURAL GAS	PROPANE
INJECTOR SIZE	#37 2.65mm	#52 1.6mm
INPUT RATING	Min. 17 mj/h Max. 31 mj/h	Min. 17 mj/h Max. 31 mj/h
MANIFOLD PRESSURE	Max. 0.9 kPa	Max. 2.59 kPa

DRAFT DIVERTER CONNECTION

- 1) Attach the flue to the flue collar on the detachable draft diverter. The flue collar of the appliance will fit inside a standard flue and may be fastened directly to the flue by sheet metal screw. Diagram 1.

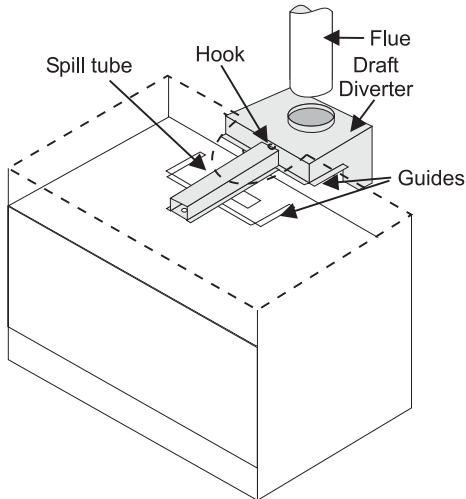


Diagram 1

- 2) Before pushing the appliance into position inside the fireplace, align the draft diverter with the guides on the insert top and push forward. While pushing the unit back into place keep pulling the draft diverter forward until the screw hole in the spill tube aligns with the screw hole in the top of the firebox. The screw is secured through the inside top of the firebox into the bottom of the spill tube. (If screw holes do not line up then draft diverter is not positioned correctly.) Diagram 2.

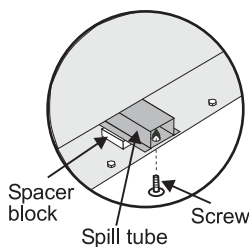


Diagram 2

NOTE: Final gas connection should be after unit is in place to avoid damage to line when pushing the unit into position.

FLUEING

THE APPLIANCE MUST NOT BE CONNECTED TO A CHIMNEY FLUE SERVING A SEPARATE SOLID FUEL BURNING APPLIANCE.

This appliance is designed to attach to a 100 mm diameter twin skin or listed gas fuel type flue liner running the full length of the chimney. A minimum flue height of 3.6 m. is recommended. The Masport Inbuilt Fireplace incorporates its own internal draft diverter, so no additional external draftdiverter is required.

Periodically check that the flue is unrestricted and an adequate draft is present when the unit is in operation. (See page 7 for spillage test.)

Before installing flue system ensure that the damper plate is open and secure to prevent the damper plate from falling down and crushing the liner.

Install to AG 601,(Australia) NZS 5261 (New Zealand).

Combustion and Ventilation Air

WARNING: This appliance needs fresh air for safe operation and must be installed with provisions for adequate combustion and ventilation air available to the room in which it is to be operating.


Air for combustion is drawn in through the front of the unit, therefore, the front of the unit must be kept clear of any obstructions.

GAS PRESSURE TEST

The unit is preset to give the correct gas input at the specified manifold pressures shown on the label. The maximum gas manifold pressure is:

Natural Gas	0.95 kPa
Propane	2.65 kPa

The manifold pressure is controlled by a regulator built into the gas control, and should be checked at the pressure test point. The pressure check should be carried out with the unit burning and the setting should be within the limits specified.

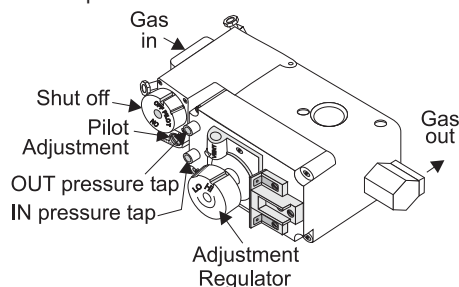

GAS INSERT AERATION SYSTEM

The aeration adjustment rod is attached to the air shutter which is located just above the orifice bracket. The rod is used to adjust the aeration on the main burner without having to take the appliance apart.

The burner aeration is factory set but may need adjusting due to either the local gas supply, air supply or altitude. This adjustment is performed by the installer. (Pull the rod for a more yellow flame, or push the rod to make the flame bluer.)

Natural Gas:	8 mm open
Propane:	full open

Note: Any damage due to carboning resulting from improperly setting the aeration controls is NOT covered under warranty.

TEST FOR FLUE SPILLAGE

A "spillage" test must be made before the installed unit is left with the customer. Follow the procedure below:

- 1) Start all exhaust fans in the home and then close all external doors and windows in the house.
- 2) Light the unit and set controls to maximum. Turn fan off.
- 3) After five minutes, test that there is a "pull" on the flue by placing a smoke match, cigarette or similar device which gives off smoke, in front of the spill tube. To ensure a valid test, place a scrap piece of sheet metal (or other noncombustible material) between the spill tube and the upper louvre, this will prevent the natural convection of the unit from interfering with the test. See diagram 1.


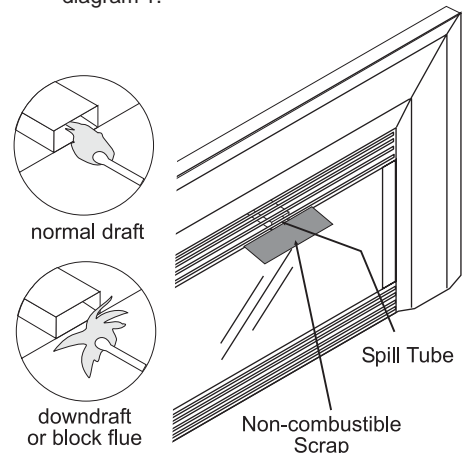


Diagram 1

INSTALLATION

The smoke should be drawn into the spill tube. If the smoke is still not drawn into the spill tube, turn the unit off and check for the cause of the lack of draft. If necessary, rectify.

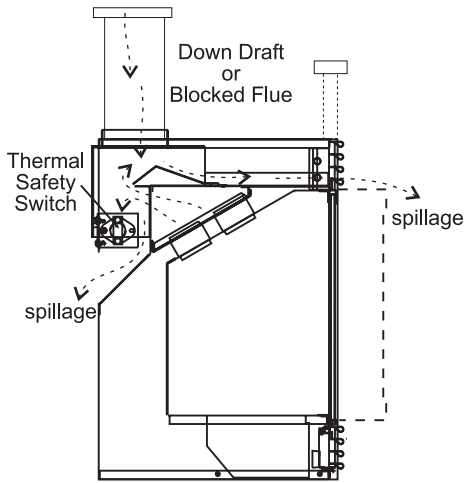

For wind turbulent sites, a wind cap may remedy the problem.

Note: The thermally activated safety switch will sense the change in temperature and shut down the gas valve in the event of a severe downdraft or a blocked or disconnected flue. The switch acts as a safety shut-off to prevent a build-up of carbon monoxide. If the flue is blocked or has no "draw", the switch will automatically shut off the supply of gas within 5 - 10 minutes. Tampering with the switch can result in carbon monoxide (CO) poisoning and possible death.

If the heater turns off because of lack of draft during the spillage test, check for the cause and if necessary, rectify.

The thermally actuated safety switch will automatically reset after it has cooled off. The switch will continue to cycle until the draft problem is corrected. **DO NOT BY-PASS OR DISCONNECT THIS SWITCH.**

OPTIONAL BRICK PANEL

- 1) Unwrap the brick pattern panels from the protective wrapping.
- 2) Remove the glass front if it is already installed (see manual).
- 3) Put the rear brick panel flat against the back of the unit.
- 4) Before installing the side brick panels, loosen the screws for the brick tabs enough so that you can slide the brick tabs on to the screws easily but that the tabs are secure. For the location of the side brick tab screws see diagram 1.

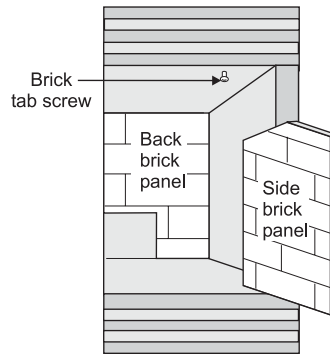


Diagram 1

- 5) Remove the brick tabs and slide the side brick panels into position. See diagram 2. Install the brick tabs. See diagram 2.

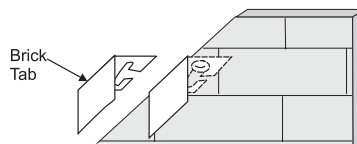


Diagram 2

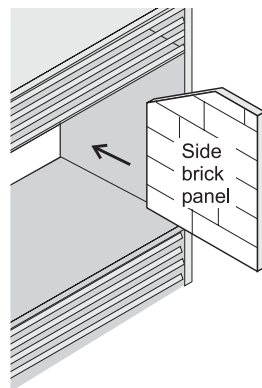


Diagram 3


LOG SET INSTALLATION

Read the instructions below carefully and refer to the diagrams. If logs are broken do not use the unit until they are replaced. Broken logs can interfere with the pilot operation.

The gas log kit contains the following:

- | | | | |
|----|-------|-----------------------------------|---------|
| a) | 02-43 | Rear Log | 902-227 |
| b) | 02-45 | Front Right Log | 902-229 |
| c) | 02-56 | Middle Left Log | 902-230 |
| d) | 02-46 | Left Top Log | 902-231 |
| e) | 02-47 | Center Log | 902-232 |
| f) | 02-48 | Middle Right Log | 902-226 |
| g) | 02-44 | Front Left Log | 902-228 |
| h) | | Embers and Rockwool | |
| i) | | Vermiculite and Ember combination | |


Note: Install Optional Brick Panels prior to installing logs.

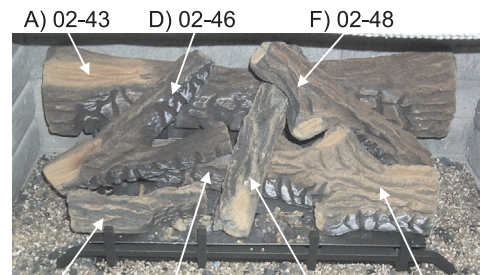

G) 02-44 C) 02-56 E) 02-47 B) 02-45


The "02" refer numbers (i.e. 02-43) are molded into the rear of each log.

- 1) Carefully remove the logs from the box and unwrap them. The logs are fragile, handle with care - **do not force into position.**
- 2) Sprinkle the vermiculite and ember combination around the firebox base.

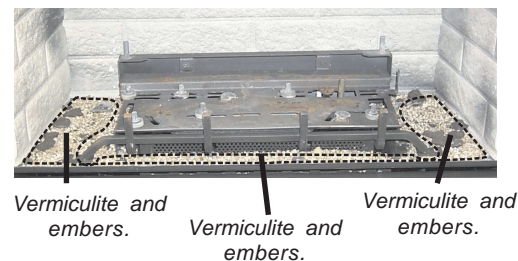

- 3) Place Rear Log A)02-43 on the two pins on the rear log support.

INSTALLATION

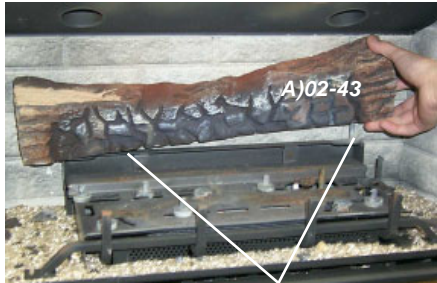

Pins on Rear Log Support

- 4) Place Front Right Log B)02-45 on the two pins as shown.




- 5) Place the Middle Left Log C)02-56 on the two pins as shown.




Logs A)02-43, C)02-56, and B)02-45 in position

- 6) Place the Left Top Log D)02-46 on the pin on Log C)02-56 and on top of the cutout on Log A)02-43.

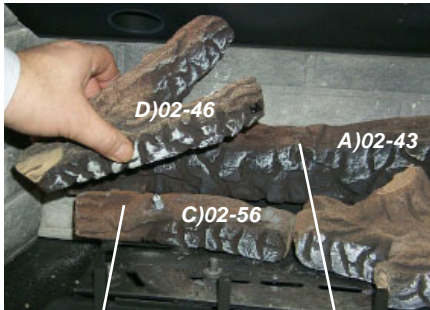

Pin Cutout

- 7) Place the notch in Center Log E)02-47 over Log B)02-45 and across the cutout on Log A)02-43.

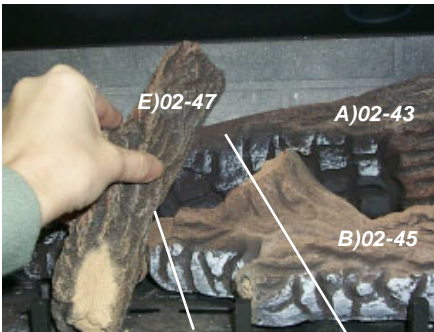


Notch Cutout




Logs D)02-46 and E)02-47 in position.

- 8) Position notch in Front Right Log F)02-48 on Log E)02-47 and push the bottom right edge against the bracket on the burner tray and the front edge of the rear burner.

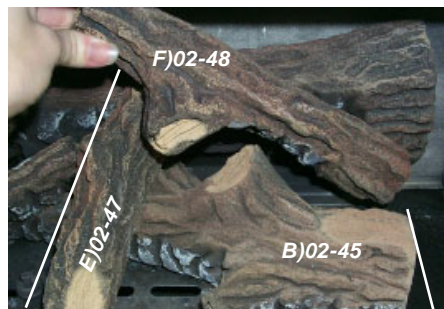

Notch Bracket

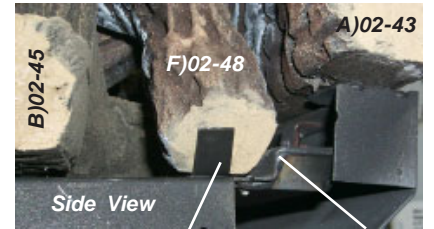


Side View Bracket Front edge of rear burner

The bottom right edge of Log F)02-48 must sit snugly against the bracket and the front edge of the rear burner.

- 9) Place Front Left Log G)02-44 onto the 2 front pins as shown.




- 10) Place the embers and Rockwool on the exposed front burner tray.

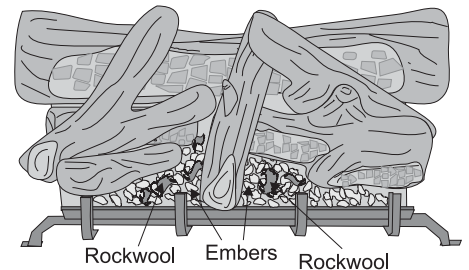

Rockwool Embers Rockwool

- 11) Test fire to ensure proper light off (make sure flame flows smoothly from one end of burner to the other. If there is any flame hesitation, check that area for any blockage of the burner port.

- 12) Install flush glass and optional bay glass as per instructions in this manual.

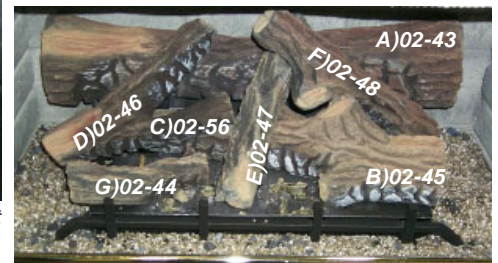

INSTALLATION

FACEPLATE & TRIM INSTALLATION

- 1) Lay the faceplate panels flat, face down on something soft so they don't scratch.
- 2) Take the top faceplate and align the holes in it with the holes in the side panels. Using the screws provided, attach from the top of the panel (the holes in the top panel are slightly larger than the holes in the side panel to facilitate easier installation). See diagram 1.

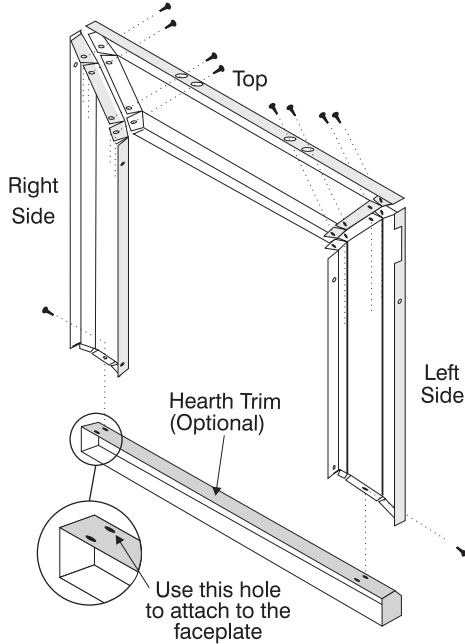


Diagram 1

Hint: Don't tighten the trim to the bottom of the faceplate side panels with the screws provided. See diagram 1.

- 3) Using the connectors provided, join the left side trim (with the ON/OFF switch) to the top trim. Connect the right side trim to the top trim. See diagram 2.


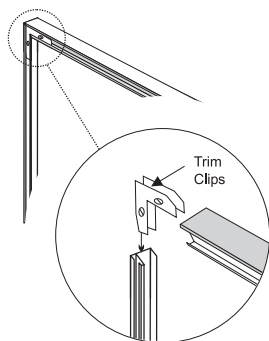


Diagram 2
Rear View: Trim Assembly

- 4) Place the trim on the assembled faceplate panels, aligning the wire connections from the switches with the notch on the left side panel.
- 5) Hookup the 3 Fan Switch wires to the fan switch on the left side trim. Diagram 3.

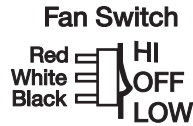

WARNING: The 3 wires are to the Fan and the 2 wires are to the ON/OFF burner switch. DO NOT connect to the wrong switch.

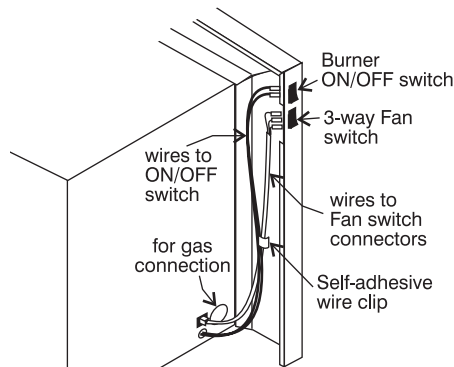


Diagram 3

WARNING:

Ensure that the wires do NOT touch the firebox

- 6) Connect the 2 burner ON/OFF switch wires by taking the yellow and orange wires with the female ends and connecting them to the burner ON/OFF switch.
- 7) Tuck the wires into the faceplate to keep them away from the inbuilt firebox using the clip provided. Attach the clip to the rear of the faceplate to ensure that the wires do not touch the side of the unit. See diagram 3.
- 8) The power cord should be run behind the faceplate panel.
- 9) Attach the brass trim to the faceplate by drilling a 1/8" hole through into the faceplate using the hole in the trim as a guide. Fasten the trim to the faceplate panels using the plated screws. See diagram 4.
- 10) Attach the faceplate panels* to the inbuilt fireplace body using the 4 remaining black screws. See diagram 5.
- 11) Push the Masport logo plate into the two holes in the bottom left corner of the faceplate. See diagram 4.

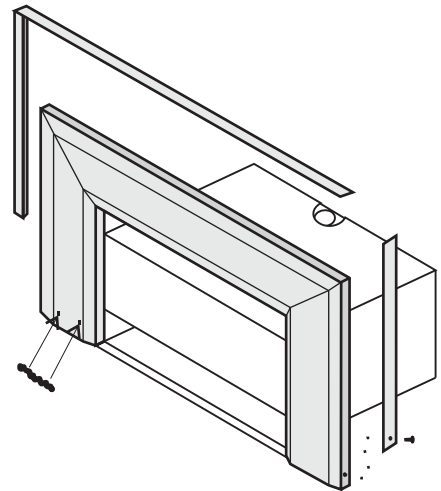


Diagram 4


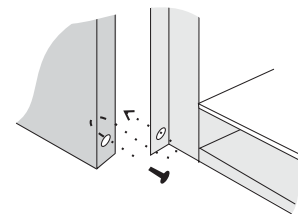


Diagram 5


FLUSH FRONT INSTALLATION

- 1) Install Logs before going on to the next step. See the Log Installation instruction sheet or page 8 in the manual.
- 2) Install the bottom glass trim by hooking the trim into the lip on the firebox base. The trim will not fit into place if the glass is installed first.

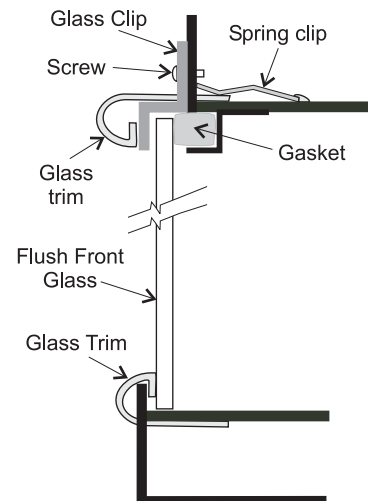


INSTALLATION

- Place the bottom of the flush glass behind the bottom glass trim.
- Secure the glass with the two glass clips at the top corners of the glass. Secure glass clips with the screws provided. Do not over tighten as this could break the glass.
- Slide in the top glass trim under the spring clips.

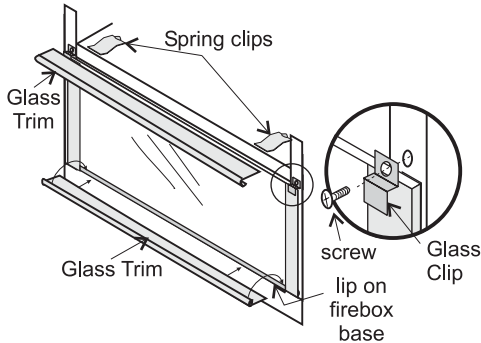


- Install safety screen (only in Australia) by inserting the 4 brackets into the 4 slots.

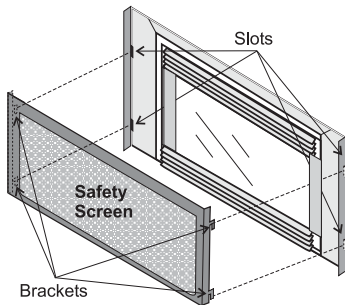

Note: Optional safety screen only in Australia.

FLUSH LOUVRES

- The top louver is held in place by friction fit, if the louver needs to be adjusted; bend the bracket out as shown in the diagram.

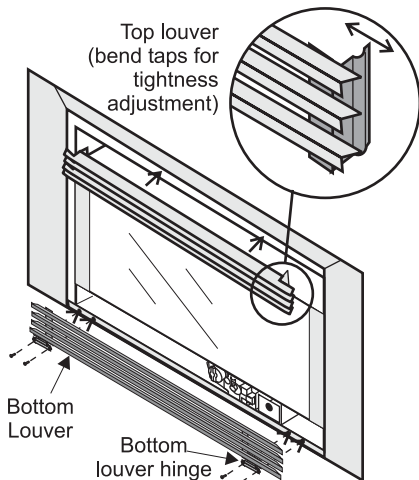


Note: Top and bottom louvres and brackets are different.


- The bottom louver has a hinge that is attached (2 screws per hinge) to the lip on bottom of the unit.

BAY FRONT INSTALLATION


- Place the bay door onto the 2 pins on the top of the unit.

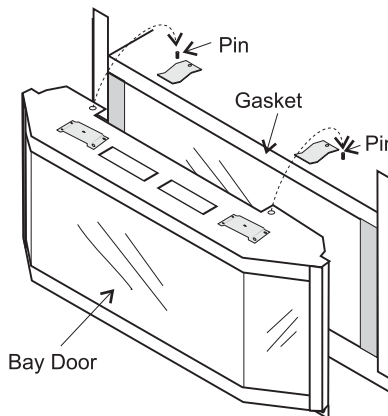

- Position 2 magnets on the back of each trim piece close to the ends. Place the top and bottom trim pieces on the bay front.

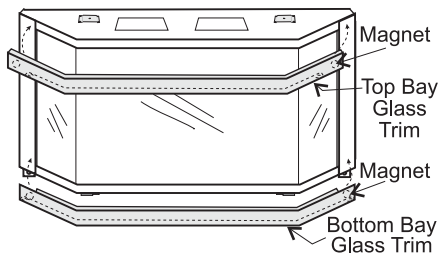


Note: The top and bottom trim pieces are different, check diagrams above and below.

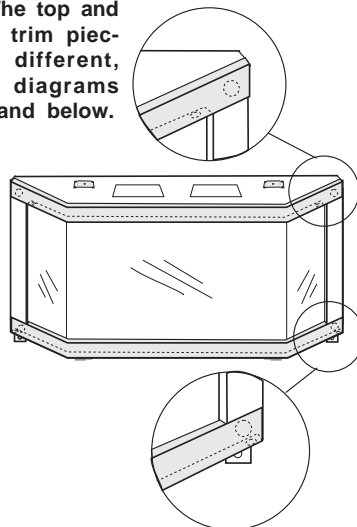

- Install top and bottom louvres.


BAY LOUVRES

- Install top louver by sliding the two bracket clips into the brackets located on top of the bay door. See below. The fitted louver leaves a small gap between faceplate bottom and louver top.

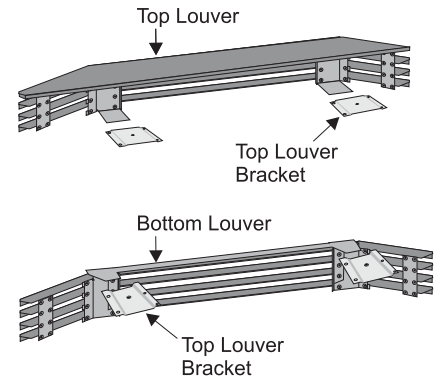

- Install bottom louver by sliding the two bracket clips into the brackets located underneath the bay door and secure with 2 screws into the bracket on the bottom of the Bay Front as per diagram above.

- Slide the valve extension knobs onto the valve knobs. Match the correct ext. knob with the valve knob.

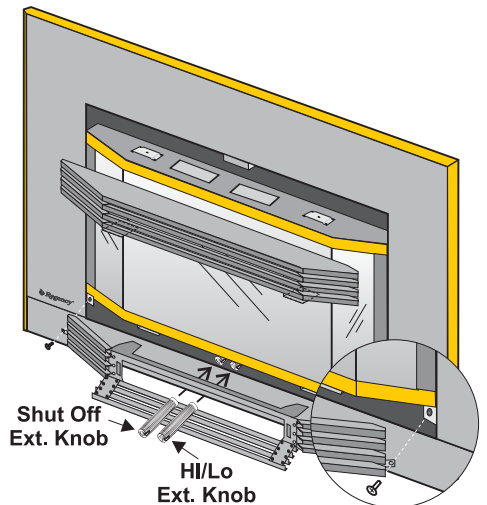

INSTALLATION

CAST FACEPLATE INSTALLATION

NOTE: Do not install Cast Faceplate when unit is installed into a Zero Clearance Unit.

- 1) Lay the faceplate panels flat, face down on something soft so they don't scratch.
- 2) Attach the side filler brackets to the left and right sides using 3 screws and washer per side.

NOTE: There are filler brackets specifically for each side. The way to differentiate this is that on the side of the brackets there are 2 mounting holes. The side where there is a 7/16" gap from the top of the bracket to the mounting hole, must face the top.




- 3) Attach the right and left cast sides to the top using 2 screws per side.




Ensure that the top and sides are aligned.

- 4) Use a measuring tape to ensure that the distance between the left and right side pieces is 28" (711mm).

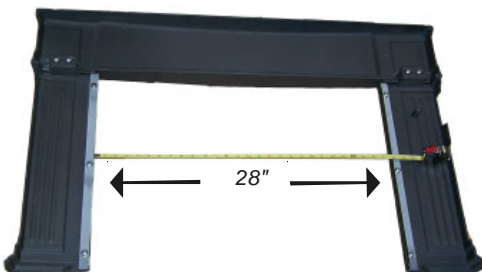

- 5) Connect the ON/OFF switch wires by taking the black and red wires with the blue female ends thru the hole provided and connecting them to the ON/OFF switch.
- 6) Connect the fan switch wires by taking the black and red wires with the male ends (in the grey harness) thru the hole provided and connect them with the wire connectors from the fan speed control.
- 7) Insert wires into the strain relief and install into switch box assembly.

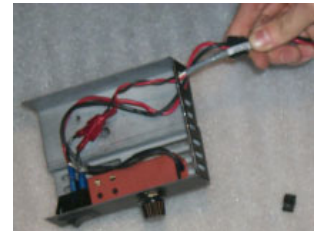

- 8) Place the switch box assembly over the boss on the rear left side piece and secure with one screw.

Switch Box Assembly



Boss on rear left side piece.

- 9) Tuck the wires into the faceplate to keep them away from the insert using the clip provided. Attach the clip to the rear of the faceplate to ensure that the wires do not touch the side of the unit.
- 10) The power cord should be run behind the faceplate panel.




- 11) Mount the cast faceplate panels onto the insert body, sliding the side filler brackets into the space between the glass and the firebox. Secure using the 4 remaining black screws, 2 per side.



Slide side filler bracket into gap between glass and fire box.



- 12) Install the glass trim by inserting the side hooks on the glass trim into the 4 slots between the faceplate and the glass. Push the glass trim down firmly with both hands to lock into place.

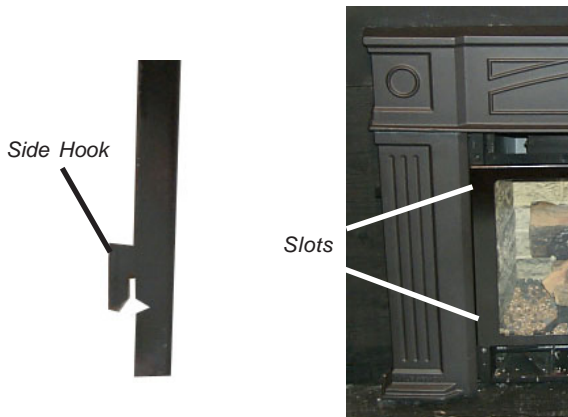

- 13) To put on the Regency logo, peel the sticker from the back of the logo and place it centered on the bottom left hand corner of the faceplate.




Regency Logo

Left Hand Side Faceplate

CAST FACEPLATE GRILL INSTALLATION

- 1) Install logs and flush glass before going on to the next step. See manual for details.
- 2) Before the grills are inserted onto the firebox, the U31 grill stop bracket needs to be inserted in the bottom left corner just under the firebox with the screw supplied.

U31 Grill Stop Bracket

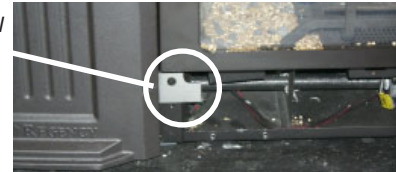

- 3) The top louver, shown in diagram 1, is held in place by friction fit, if the louver needs to be adjusted; bend the convex bracket out as shown in diagram 2.
- 4) The bottom louver has 2 hinges that are attached (2 screws per hinge) to the lip on bottom of the unit.

Note: The top louver should be placed with the curved cut-out facing up.



Diagram 1

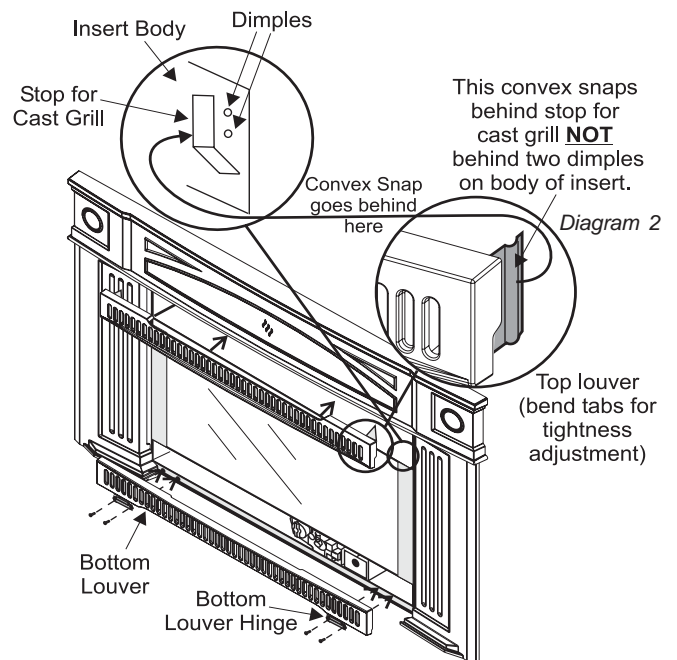


Diagram 3

Note: The top and bottom grills and brackets are different.

INSTALLATION

BAROSSA CURVED FRONT INSTALLATION


- 1) Install bottom louver by matching the holes in louver bracket with holes in firebox frame and secure using 2 screws on each side.



Secure louver by using 2 screws.



- 2) Pull down louver.
3) Fix brackets onto firebox, one on each side using 1 screw per side.

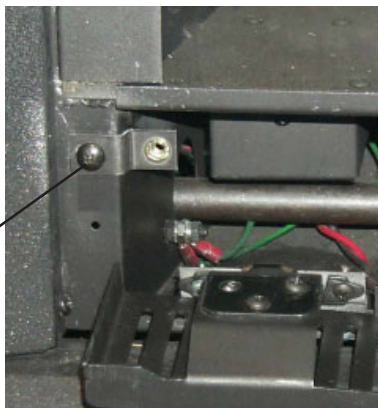

Secure bracket with screw.


- 4) Fit plates on back of screen into brackets on top of firebox. Press in to secure from top.



Brackets on firebox.



- 5) Secure bottom of screen using 1 screw on each side into the brackets fixed onto the firebox in step 3.

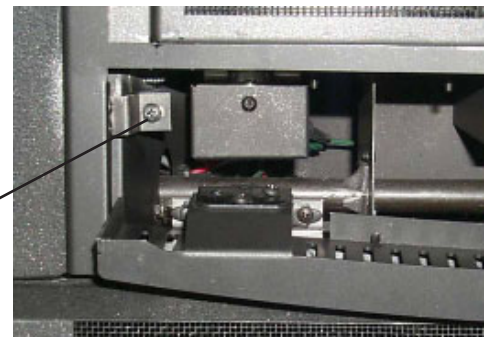

Secure with screw.

- 6) Close louver.

INSTALLATION

OPTIONAL REMOTE CONTROL

Use the Optional Remote Control Kit approved for this unit. Use of other systems may void your warranty.

The remote control kit comes with a hand held transmitter, a receiver and a wall mounting plate.

- 1) Choose a convenient location on the wall to install the receiver and the receptacle box (protection from extreme heat is very important). Run wires from the fireplace to that location. Use Thermostat Wire Table.
- 2) Connect the two wires to the gas valve.
- 3) Install a 9V alkaline battery in both receiver and the transmitter. Install the receiver and

cover in the wall. The remote control is now ready for operation.

CAUTION
Do not connect the millivolt remote control wires to the 240V wires.

CAUTION
Do not connect the millivolt wall thermostat wires to the 240 V wires.

Thermostat Wire Table

Recommended Maximum Lead Length (Two-Wire) When Using Wall Thermostat (CP-2 System)

Wire Size	Max. Length
14 GA.	15.24 m
16 GA.	9.75 m
18 GA.	6.10 m
20 GA.	3.66 m
22 GA.	2.71 m

OPTIONAL WALL THERMOSTAT

A wall thermostat may be installed if desired. Use chart below to determine thermostat wire length.

Note: Preferable if the thermostat is installed on an interior wall.

Use a CSA, UCL or UL approved millivolt thermostat, 250-750 millivolt rated. A non-anticipator type thermostat must be used.


WIRING

No electrical power supply is required for the gas control to operate. However, a 240V A.C. power supply is needed for the fan/blower operation.

Caution: Ensure that the wires do not touch any hot surfaces and are away from sharp edges.

WARNING: Electrical Grounding Instructions
This appliance is equipped with a three pronged (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from this plug.

CAUTION:
Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

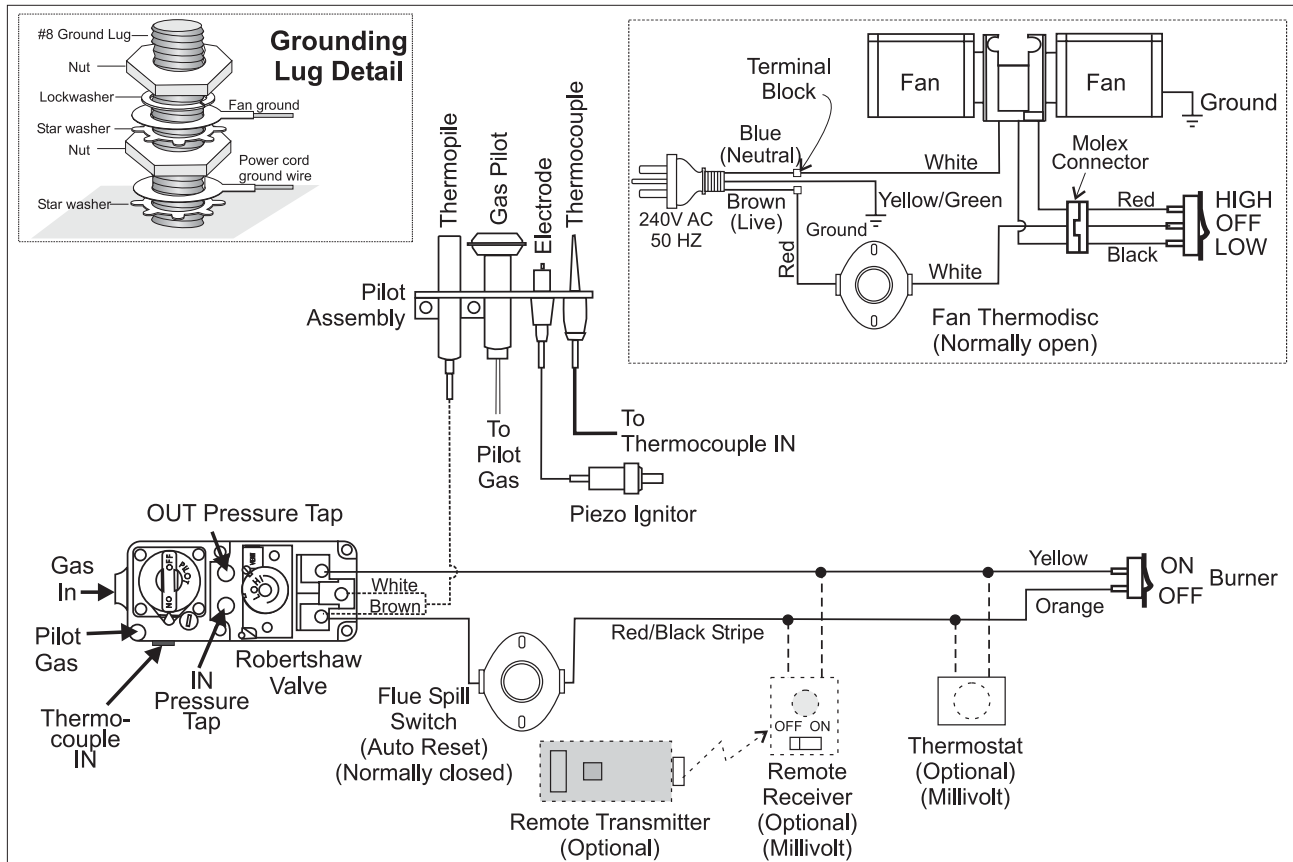


OPERATING INSTRUCTIONS

OPERATING INSTRUCTIONS

Before operating this appliance, proceed through the following check list.

- 1) Read and understand these Instructions before operating this appliance.
- 2) Check to see that all wiring is correct and enclosed to prevent possible shock.
- 3) Check to ensure there are no gas leaks.
- 4) Make sure the glass door is in place. Never operate the appliance with the door glass removed.
- 5) Verify that all flueing and the cap is unobstructed.
- 6) Verify log placement. If the pilot cannot be seen when lighting the unit - the logs or the embers have been incorrectly positioned.
- 7) The unit should never be turned off and on again without a minimum of a 60 second wait.
- 8) When lighting the appliance, the inside of the glass may fog up. This will burn off after a few minutes of operation.

DO NOT BURN THE APPLIANCE WITH THE GLASS ASSEMBLY REMOVED.

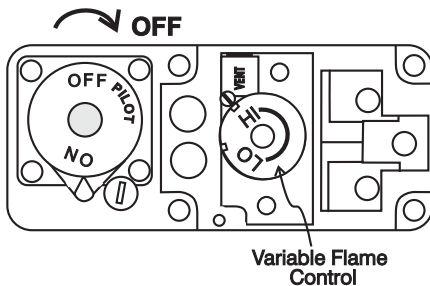

LIGHTING PROCEDURE

IMPORTANT: Gas cock knob cannot be turned from "PILOT" to "OFF" unless it is partially depressed.

- 1) Open the bottom louvre assembly
- 2) If the control knob is in the "OFF" position proceed to Step 5.
- 3) Push in gas control knob slightly and turn clockwise to "OFF". Knob cannot be turned from "PILOT" to "OFF" unless knob is pushed in slightly. Do not force.

- 4) Wait five minutes to allow gas, that may have accumulated in the main burner compartment, to escape. If you do smell gas, follow the instructions on the front of this manual. If you don't smell gas continue on to the next step.
- 5) Turn the gas control counter clockwise to "PILOT".
- 6) Push in control knob all the way and hold in. Continually push and release the black button on spark igniter until pilot lights. Continue to hold the control knob in for approximately one minute, then release the gas control knob. The pilot flame should continue to burn. If the pilot does not remain lit, repeat operation allowing a longer period before releasing gas control knob.
- 7) Turn gas control knob counter clockwise to "ON".
- 8) Use the rocker switch to operate main burner.
- 9) Rotate the variable flame control to adjust the flame height higher or lower.
- 10) Close the bottom louvre assembly.

SHUTDOWN PROCEDURE

- 1) Use the rocker switch to turn off the main burner.
- 2) Open the bottom louvre assembly.
- 3) Push in the gas control knob slightly and turn clockwise to "OFF". Do not force.
- 4) Disconnect all electric power and gas to the appliance if service is to be performed.

FIRST FIRE

The first fire in your stove is part of the paint curing process. To ensure that the paint is properly cured, it is recommended that you burn your fireplace for at least four (4) hours the first time you use it with the fan on. When first operated, the unit will release an odour caused by the curing of the paint, the burning off of any oils remaining from manufacturing. Smoke detectors in the house may go off at this time. Open a few windows to ventilate the room for a couple of hours.

The glass panel may require cleaning after the unit has cooled down.

DO NOT ATTEMPT TO CLEAN THE GLASS WHILE IT IS HOT.

Note: When the glass is cold and the appliance is lit, it may cause condensation and fog the glass. This condensation is normal and will disappear in a few minutes as the glass heats up.

DO NOT BURN THE APPLIANCE WITHOUT THE GLASS FRONT IN PLACE.

AUTOMATIC CONVECTION FAN OPERATION

The fan operates automatically, press the High/Low Fan switch on the side of the faceplate to adjust to the desired speed. The fan will turn on as the stove comes up to operating temperature. After the unit has been turned off and the unit cooled to below a useful heat output range the fan will shut off automatically.

NORMAL OPERATING SOUNDS OF GAS APPLIANCES

It is possible that you will hear some sounds from your gas appliance. This is perfectly normal due to the fact that there are various gauges and types of steel used within your appliance. Listed below are some examples. All are **normal operating sounds** and should not be considered as defects in your appliance.

Blower:

Masport gas appliances use high tech blowers to push heated air farther into the room. It is not unusual for the fan to make a "whirring" sound when ON. This sound will increase or decrease in volume depending on the speed setting of your fan speed control.

Burner Tray:

The burner tray is positioned directly under the burner tube(s) and logs and is made of a different gauge material from the rest of the firebox and body. Therefore, the varying thicknesses of steel will expand and contract at slightly different rates which can cause "tickling" and "cracking" sounds. You should also be aware that as there are temperature changes within the unit these sounds will likely re-occur. Again, this is normal for steel fireboxes.

Blower Thermodisc:

When this thermally activated switch turns ON it will create a small "clicking" sound. This is the switch contacts closing and is normal.

OPERATING INSTRUCTIONS

COPY OF LIGHTING INSTRUCTION PLATE

MAINTENANCE INSTRUCTIONS

FOR YOUR SAFETY READ BEFORE LIGHTING

This appliance must be installed in accordance with local codes, if any; if not, follow the current CAN1-B149/ANSI Z 223.1 (Australia: AG601, New Zealand: NZS 5261)

WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life. Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to the owner's information manual provided with this appliance. For assistance or additional information consult a qualified installer, service agency or gas supplier.

A) This appliance has a pilot which must be lighted by hand, following the instructions below exactly.

B) BEFORE LIGHTING smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance
- Do not touch any electric switch, do not use any phone in your building
- Immediately call your gas supplier from a neighbors phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

C) Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.

D) Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

This appliance needs fresh air for safe operation and must be installed so there are provisions for adequate combustion and ventilation air.

CAUTION: Hot while in operation. Do not touch. Severe Burns may result. Due to high surface temperatures keep children, clothing and furniture, gasoline and other liquids having flammable vapors away. Keep burner and control compartment clean. See installation and operating instructions accompanying appliance.

LIGHTING INSTRUCTIONS

STOP! Read the safety information above on this label.

- 1) Push in gas control knob slightly and turn clockwise to "OFF". Knob cannot be turned from "PILOT" to "OFF" unless knob is pushed in slightly. Do not force.
- 2) Wait five (5) minutes to clear out any gas. If you then smell gas STOP! follow "B" in the safety information above on this label. If you don't smell gas, go to the next step.
- 3) Turn knob on gas control counterclockwise to "PILOT".
- 4) Push in control knob all the way and hold in. Immediately push black button on spark igniter until pilot lights. Continue to hold the control knob in for about 1/2 minute after the pilot is lit.

Release knob and it will pop back up. Pilot should remain lit. If it goes out, repeat steps 3) and 4). If knob does not pop up when released, stop and immediately call your service technician or gas supplier.

If the pilot will not stay lit after several tries, turn the gas control knob to "OFF" and call your service technician or gas supplier.

- 5) Turn gas control knob counterclockwise to "ON".
- 6) Use rocker switch to operate main burner.

PILOT BURNER
VEILLEUSE

THERMOPILE
ELEMENT
THERMO-
ELECTRIQUE

TO TURN OFF GAS APPLIANCE

- 1) Push in the gas control knob slightly and turn clockwise to "OFF". Do not force.
- 2) Turn off all electric power to the appliance if service is to be performed.

DO NOT REMOVE THIS INSTRUCTION PLATE

908-649

Pilot Flame:

While the pilot flame is on it can make a very slight "whisper" sound.

Gas Control Valve:

As the gas control valve turns ON and OFF, a dull clicking sound may be audible, this is normal operation of a gas regulator or valve.

Unit Body/Firebox:

Different types and thicknesses of steel will expand and contract at different rates resulting in some "cracking" and "ticking" sounds will be heard throughout the cycling process.

**ANY SERVICING OR
REPAIRS SHOULD
BE CARRIED
OUT ONLY BY AN
AUTHORISED
PERSON.**

WARNING: CHILDREN AND ADULTS SHOULD BE ALERTED TO THE HAZARDS OF HIGH SURFACE TEMPERATURE AND SHOULD STAY AWAY TO AVOID BURNS OR CLOTHING IGNITION. YOUNG CHILDREN SHOULD BE CAREFULLY SUPERVISED WHEN THEY ARE IN THE SAME ROOMS AS THE APPLIANCE.

- 1) Always turn the gas valve to off before cleaning. For relighting, refer to lighting instructions. Keep the burner and control compartment clean by brushing and vacuuming at least once a year. When cleaning the logs, use a clean soft paint brush as the logs are fragile and easily damaged.
- 2) Clean (never when unit is hot) appliance, door and louvres with a damp cloth. Never use an abrasive cleaner. The gold louvres (and optional gold door) may be scratched if abrasives are used to clean them. The heater is finished in a heat resistant paint and should only be refinished with heat resistant paint (not with wall paint). Masport uses StoveBrite Paint - Metallic Black #6309.
- 3) Make a periodic check of burner for proper position and condition. Visually check the flame of the burner periodically, making sure the flames are steady; not lifting or floating. If there is a problem, call an authorised service person.
- 4) The appliance and flueing system must be inspected before use, and at least annually, by an authorised field service person, to ensure that the flow of combustion and ventilation air is not obstructed. During the annual service call, the burners should be removed from the burner tray and cleaned. Replace the embers but do not block the pilot.
- 5) Keep the area near the appliance clear and free from combustible materials, gasoline and other flammable vapours and liquids.

MAINTENANCE

CAUTION: ANY SAFETY SCREEN OR GUARD REMOVED FOR SERVICING AN APPLIANCE MUST BE REPLACED PRIOR TO OPERATING THE APPLIANCE.

CLOTHING OR OTHER FLAMMABLE MATERIAL SHOULD NOT BE PLACED ON OR NEAR THE APPLIANCE.


- 6) Each time the appliance is lit, it may cause condensation and fog the glass. This condensation and fog is normal and will disappear in a few minutes as the glass heats up.

Never operate the appliance without the glass properly secured in place, with broken glass or with the door open.

- 7) Verify proper operation after servicing.
- 8) Periodically check the pilot flames, there should be three strong blue flames approx. 3/4" long - 1 flame to the front burner, and 1 to the thermopile and one to the left. See diagrams below.


Correct flame pattern has two strong blue flames: 1 flowing around the thermopile and 1 reaching towards the rear burner (it does not have to be touching the burner).

Rear of Burner
 ○○○○○○○○○○○○○○○○○○○○○○○○○○○○○○○

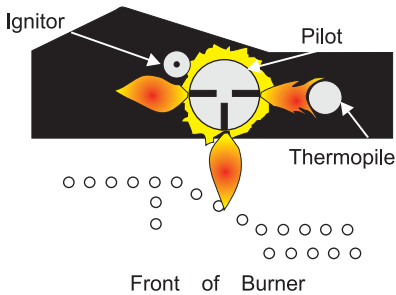

Top View of pilot flame

Incorrect flame pattern will have small, probably yellow flames, not coming into proper contact with the rear burner or thermopile.

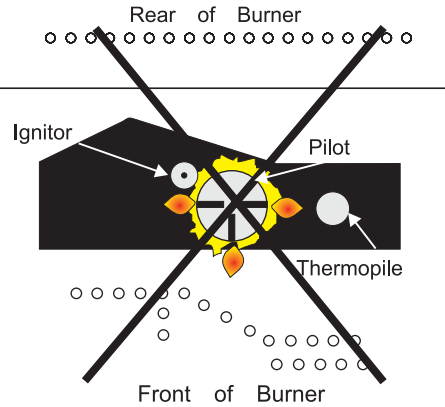

Top View of pilot flame

If you have an incorrect flame pattern, contact your Masport dealer for further instructions.

WARNING
Do not spray aerosols in the vicinity of this appliance while in operation.

GOLD-PLATED TRIM

The 24 carat gold plated finish on the trim requires little maintenance, and need only be cleaned with a damp cloth. DO NOT use abrasive materials or chemical cleaners, as they may harm the finish and void the warranty.

Clean any fingerprints off before turning the unit on. If the top louvres start to discolour, check the door gasket seal and replace if necessary.

LOG REPLACEMENT

The unit should never be used with broken logs. Turn off the gas valve and allow the unit to cool before opening door to carefully remove the logs. The pilot light generates enough heat to burn someone. If for any reason a log should need replacement, you must use the proper replacement log. The position of these logs must be as shown in the diagram under Log Installation.

NOTE: Improper positioning of logs may create carbon build-up and will alter the unit's performance which is not covered under warranty.

DOOR GLASS REPLACEMENT


Your Masport stove is supplied with high temperature, 5 mm Neoceram ceramic glass that will withstand the highest heat that your unit will produce. In the event that you break your glass by impact, purchase your replacement from an authorised Masport dealer only, and follow our step-by-step instructions for replacement.

WARNING: do not operate appliance with the glass front removed, cracked or broken. Replacement of the glass should be done by a licensed or authorised service person.

Bay Glass Removal

- 1) Remove the door from the unit and place on a soft surface to prevent scratching.
- 2) Remove the nuts holding the glass retainers in place.
- 3) Remove the glass retainers (sides, top and bottom).
- 4) Replace the glass. **The glass must have gasketing around it.**
- 5) Reverse the previous steps, replace the retainers and fasten with the nuts but do not over tighten, as this can break the glass.
- 6) Replace door on the stove and check the seal.

Flush Glass Replacement

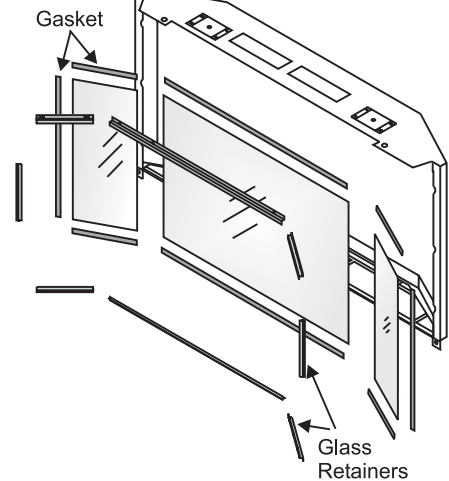

Slide old glass out of the side frames and replace with new glass.

GLASS GASKET

If the glass gasket requires replacement use 7/8" flat glass gasket (Part # 936-243) for the Bay Front and for the Flush Front.


FAN MAINTENANCE

If your fan requires maintenance or replacement, access to the fan is through the plate on the rear wall of the firebox. **NOTE: the unit MUST NOT be operated without the fan access panel securely in place.**

CAUTION: Label all wires prior to disconnection when servicing controls. Wiring error can cause improper and dangerous operation.


To remove fan:

- 1) Turn the unit off and allow it to cool to room temperature.
- 2) Unplug or disconnect power source to stove.
- 3) Remove glass front (see page 10).
- 4) Remove logs.
- 5) Remove brick panels.
- 6) Remove the Grate by removing the screws on each side of the grate.

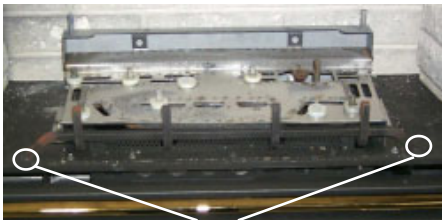



Remove the 2 screws holding the grate in position.

- 7) Remove the Burner Tray by removing the screws on each side of the tray. Push the tray to the left and lift up.

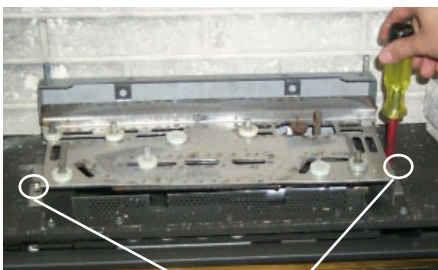

Remove the 2 screws, push Burner Tray to the left, and lift off.


- 8) Remove the 11 screws holding the Access Panel in place.
- 9) Remove the Fan Air Duct by removing 4 screws, 2 per side.
- 10) Unplug the black wires from the fan motor (from inside the stove).
- 11) Lift Fan Assembly off of the 2 pins, tip forward and pull through firebox opening.
- 12) Disconnect green wire from power cord.

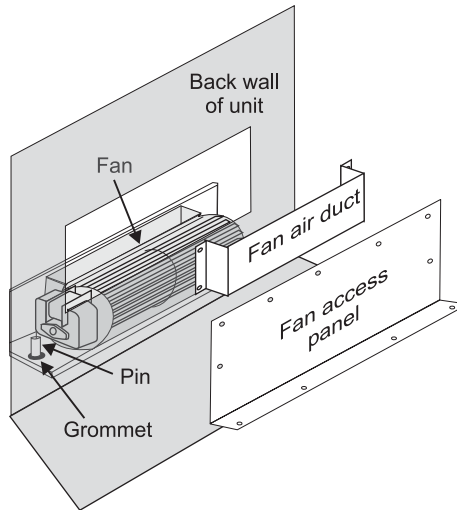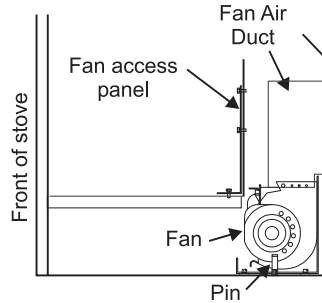


Replacing fan:

Reverse above steps. Hint for pushing fan down onto pins - rub a bit of dish soap on the grommet so it will slide more easily onto the pin. Check to make sure the fan is seated properly on the pins, this is very important- try to move the fan back and forth, there should be no noise, if there is check that the grommets haven't come loose.

When replacing the Burner Tray, slide the aeration adjustment rod through the opening in the front of the Valve Assembly.

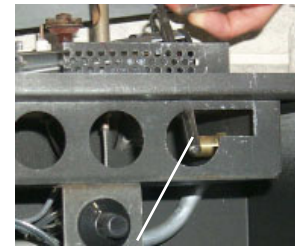

Aeration Adjustment Rod

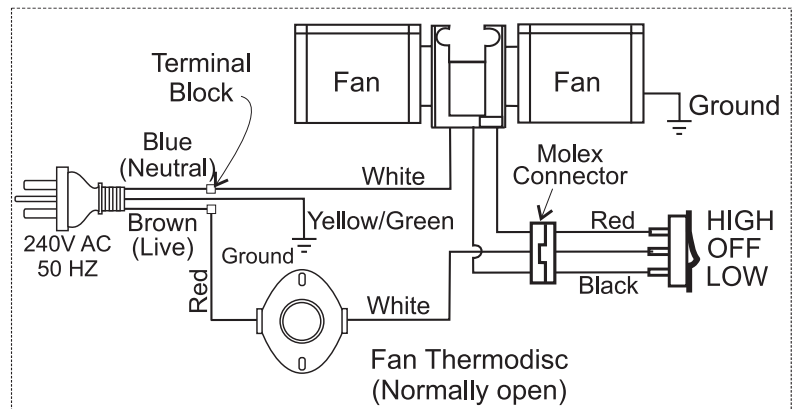

MAINTENANCE

TROUBLE SHOOTING MASPORT GAS SPACE HEATER		
SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
1) Thin black coating [soot] forms on viewing glass.	a) Incorrect gas pressure b) Not enough combustion air	Check and correct gas pressure if sooting continues open aeration shutter on burner. Note: To clean glass, remove and wipe with cloth or paper towel
2) A change in flame appearance or burner operations	a) A change in gas pressure b) Carbon dirt or lint	Check gas pressure. Clean out carbon, spider webs, lint etc. from burner area.
3) No air flow	a) Fan failure	Check and replace fan assembly Check and replace fan switch Check and replace thermodisc
4) Burners will not light.	a) Pilot flame out b) Control knob on pilot c) Low voltage from Thermopile. *280mil volts on pilot *120mil volts when main burner is on	Relight [follow lighting procedure completely] Adjust pilot. Thermopile, check and replace if faulty
5) Pilot goes out.	a) Check thermocouple voltage	Replace thermocouple.



SERVICE SHOULD BE CARRIED OUT BY AUTHORIZED PERSONNEL ONLY

ABNORMAL OPERATION

If main burner does not light but pilot stays on, shut down heater and contact your dealer. If excessive carbon on logs or glass contact your dealer for service.

THE MAJOR CAUSE OF OPERATING PROBLEMS WITH GAS HEATERS IS IMPROPER GAS PRESSURE

Such problems as changes in flame colour or configuration, burner outages, intermittent operations, changes in heat output, excessive burner noise, are nearly always the result of changes in gas pressure or improper gas pressure at time of installation.

THE MOST IMPORTANT ITEM TO CHECK DURING THE INSTALLATION AND THE FIRST THING TO CHECK WHEN PROBLEMS OCCUR IS GAS PRESSURE.

CHECK DATA PLATE FOR CORRECT PRESSURE SETTINGS

INCORRECT INSTALLATION OR GAS PRESSURE SETTINGS ARE NOT COVERED BY WARRANTY, A SERVICE OR CALLOUT FEE WILL BE CHARGED IN THESE CIRCUMSTANCES

MAIN ASSEMBLY

Part#: Aust. New Zealand Description


Aust. New Zealand Description

- 1) 400-011 556043 Fan Opening Cover
- 400-553/P 556044 Fan Assembly (240 V)
- 2) 910-155/P 560023 Fan Motor (240 V)
- 4) 910-714 560061 Power Cord 240 Volts
- 910-707 Wire Harness (Fan end)
- 910-771 556045 Wire Harness (Faceplate)
- 5) 400-068 560091 Thermodisc Cover Mounting Plate
- 6) 400-023 Thermodisc Bracket
- 7) 910-142 560037 Thermodisc-Fan Auto ON/OFF
- 8) 910-006 560062 Terminal Block
- 10) 400-540 400540 Draft Diverter Assembly
- 11) * Spill Switch Bracket
- 12) 910-220 556047 Spill Switch
- 13) * Levelling Bolts 5/16 x 3 Hex Head

- 400-945 551997 Brick Panel (Set)
- 33) 902-255 Brick Panel - Back
- 34) 902-176 Brick Panel - Left Side
- 35) 902-177 Brick Panel - Right Side
- 36) 400-090 560234 Brick Clips
- 38) 402-046 Glass Support Trim - Black
- 159) 936-233 560115 3/4" Rope Gasket

*Not available as a replacement part.

- 948-217 551867 Logo Plate - Masport
- 918-044a Manual - Masport

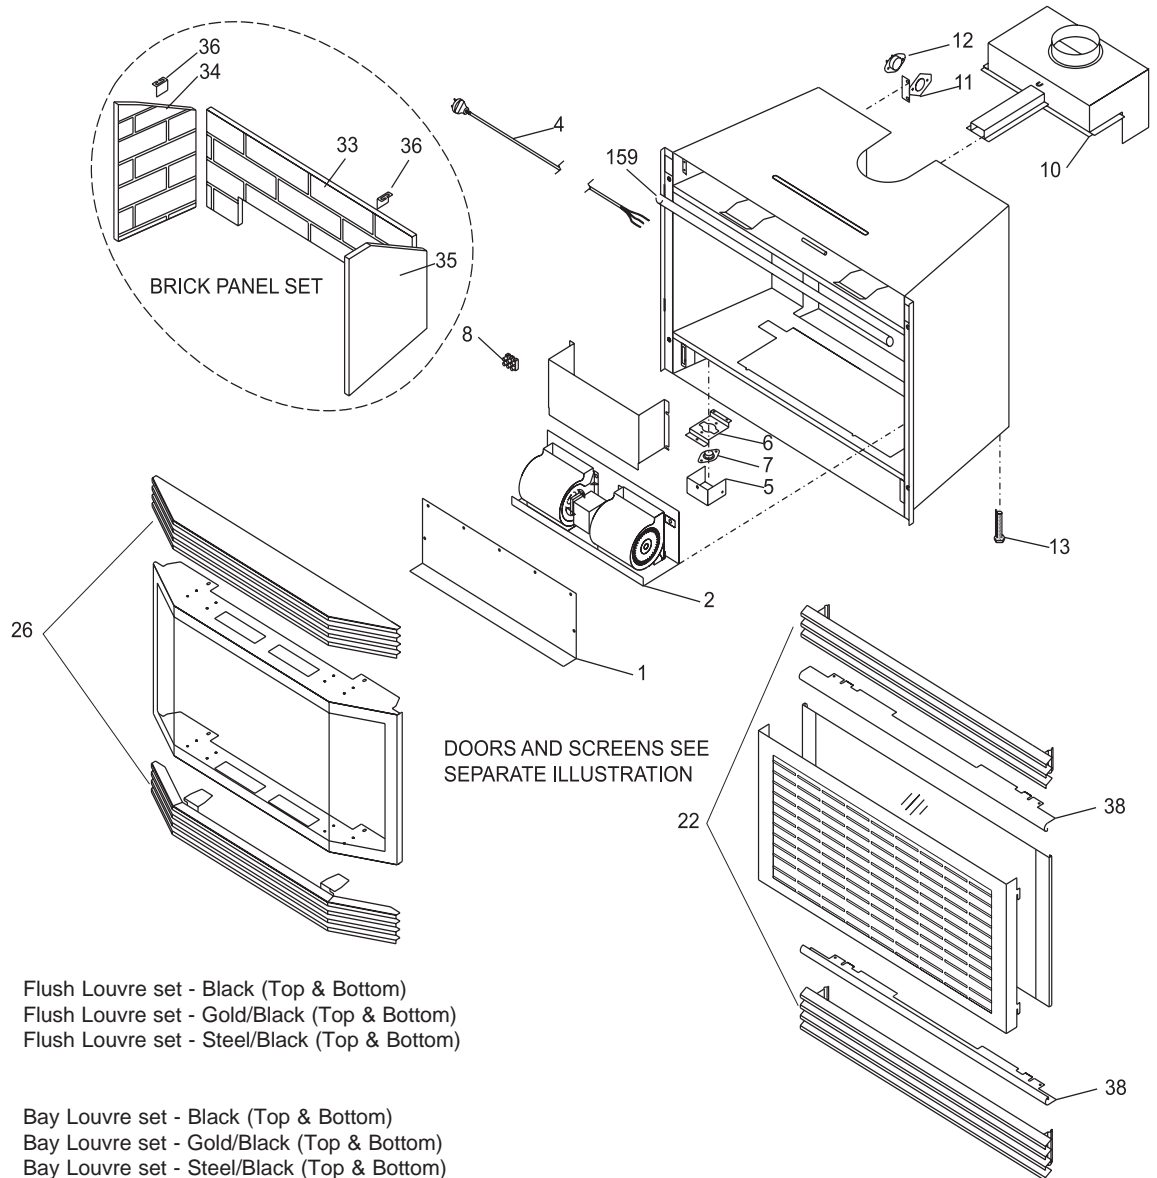


- 22) 402-920 Flush Louvre set - Black (Top & Bottom)
- 402-922 Flush Louvre set - Gold/Black (Top & Bottom)
- 402-924 Flush Louvre set - Steel/Black (Top & Bottom)
- 26) 400-990 Bay Louvre set - Black (Top & Bottom)
- 400-992 Bay Louvre set - Gold/Black (Top & Bottom)
- 400-993 Bay Louvre set - Steel/Black (Top & Bottom)

PARTS LIST

BURNER ASSEMBLY & LOG SET

Part#:	Aust.	New Zealand	Description
	402-565/P		Valve Assembly - Nat. Gas
	402-566/P		Valve Assembly - Propane
52)	910-026	560270	RobertShaw Valve - Nat. Gas
	910-027	560271	RobertShaw Valve - Propane
53)	910-190	597004	Piezo Ignitor and nut
54)	*		Valve Heat Shield
55)	904-702		Gasket - Valve Heat Shield
56)	*		Pilot Bracket
57)	904-240	560259	Burner Orifice Nat. Gas #37
	904-390	556155	Burner Orifice Propane # 52
58)	910-424	910-424	Pilot ON/OFF Extension Knob
59)	910-426	910-426	Flame HI/LOW Extension Knob
60)	402-019		Grate Assembly
62)	402-537		Burner Assembly - Nat. Gas/Propane
63)	910-034	556133	Pilot Assy (Nat. Gas) - 3 flame convertible top
	910-035	556138	Pilot Assy (Propane) - 3 flame convertible top
65)	*		Burner Shroud Gasket
69)	402-935	402-935	Log Set
	402-572	402-572	Ember Package
86)	910-386	560099	Thermocouple
87)	910-341	556090	Thermopile
92)	902-267		Rear Log
93)	902-231		Left Top Log
94)	902-232		Center Log
95)	902-226		Middle Right Log
96)	902-230		Middle Left Log
97)	902-229		Front Right Log
98)	902-228		Front Left Log

*Not available as a replacement part.

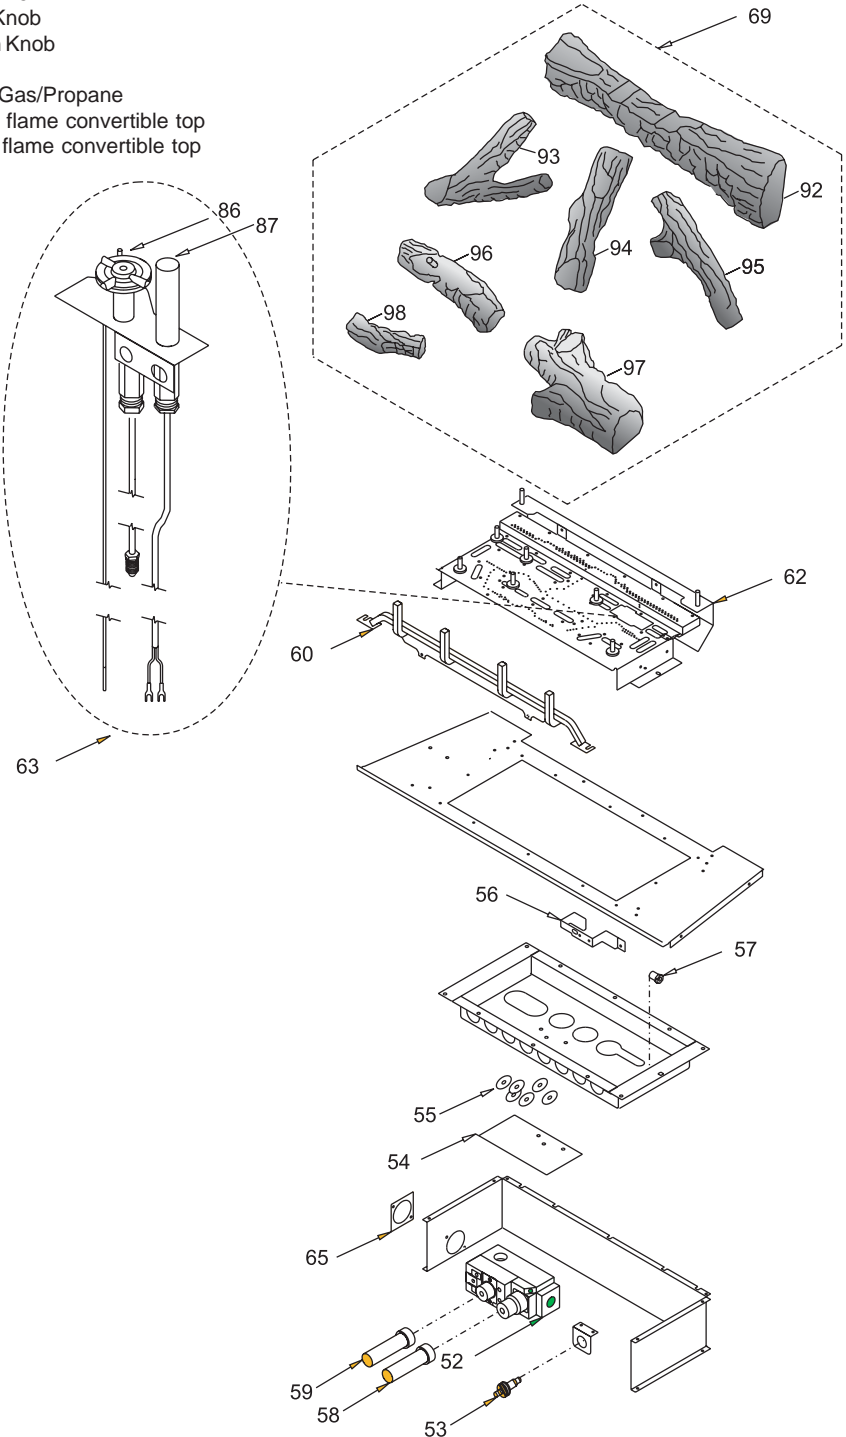

Faceplate Assembly



Part#: Aust. New Zealand Description

87)	910-140	560036	Fan HI/OFF/LOW Switch
88)	910-246	560024	Burner ON/OFF Switch
	401-912	531779	Faceplate & Trim Complete - Regular
91)	*		Faceplate Side Right - Regular
92)	*		Faceplate Top - Regular
93)	*		Faceplate Side Left - Regular
	401-522		Trims Packaged - Regular
94)	*		Faceplate Trim Right - Regular
95)	*		Faceplate Trim Top - Regular
96)	*		Faceplate Trim Left Assy - Regular
	401-913		Faceplate & Trim Complete - Oversize
141)	*		Faceplate Side Right - Oversize
142)	*		Faceplate Top - Oversize
143)	*		Faceplate Side Left - Oversize

Aust. New Zealand Description

	401-524		Trims Packaged - Oversize
144)	*		Faceplate Trim Right - Oversize
145)	*		Faceplate Trim Top - Oversize
146)	*		Faceplate Trim Left Assy - Oversize
172)	400-950	551397	Hearth Trim 1" - Regular
	320-940		Hearth Trim 1" - Oversize
176)	400-926	588638	Hearth Trim 2" - Regular
	320-942		Hearth Trim 2" - Oversize
180)	400-928	588639	Hearth Trim 4" - Regular
	320-944		Hearth Trim 4" - Oversize
184)	400-959	588644	Hearth Trim 6" - Regular
	320-946		Hearth Trim 6" - Oversize

*Not available as a replacement part.

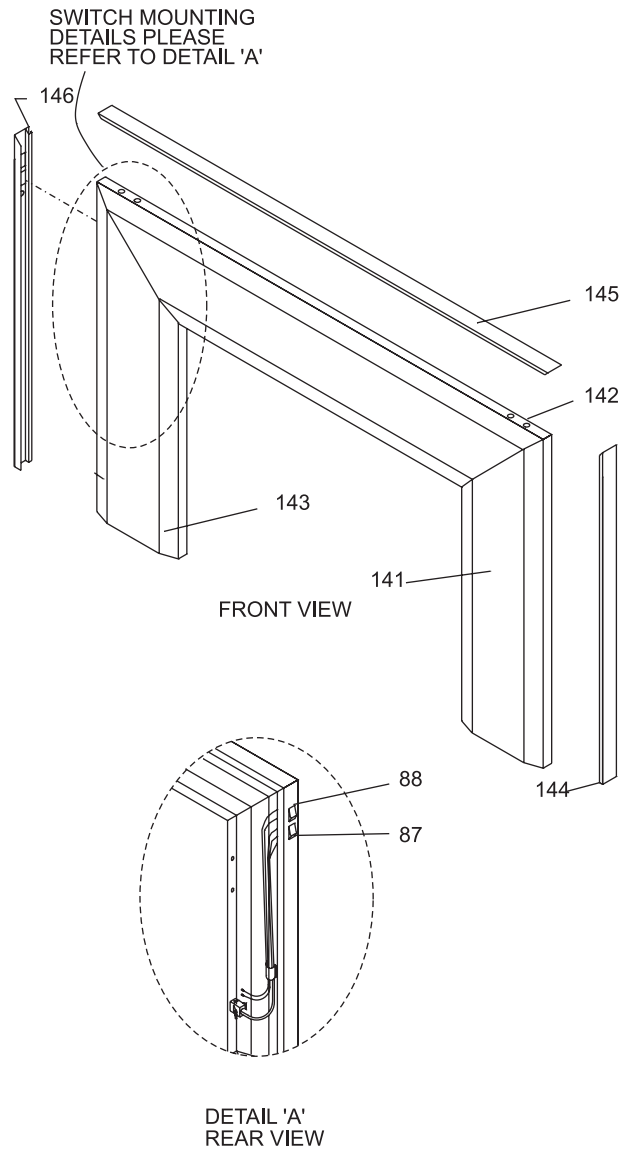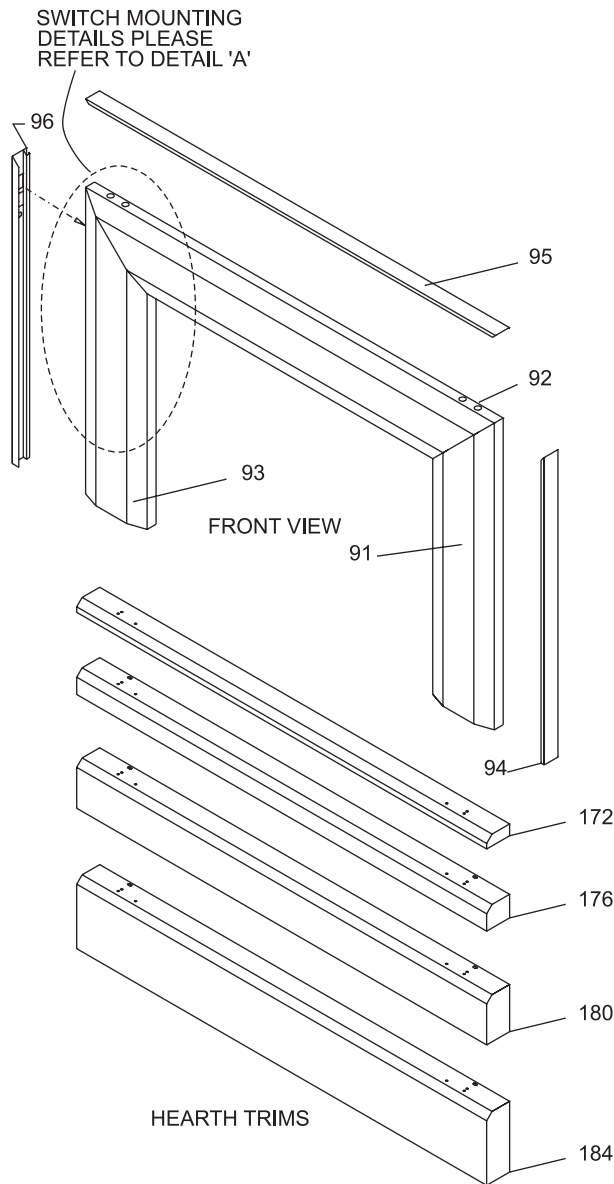


PARTS LIST

Bay & Flush Front Assembly

Part#:	Aust.	New Zealand	Description	Aust.	New Zealand	Description
Bay Door						
	400-988		Complete Bay Front c/w Black Trim			
102)	*		Glass Retainer Side (Top & Btm)			
103)	*		Glass Retainer Front (Top & Btm)			
106)	940-315/P		Side Glass			
107)	936-243	560087	Gasket			
108)	940-314/P		Center Glass			
110)	902-183	902-183	Bay Brick Panel			
	400-935	531868	Bay Door Trim Set - Gold			
	400-989		Bay Door Trim Set - Steel			
111)	*		Bay Door Trim Top			
112)	904-196	560049	1" Round Ceramic Magnet			
113)	*		Bay Door Trim Bottom			
Flush Door						
149)	400-531/P	400-531	Flush Screen - Packaged			
	402-515/P		Complete Flush Front Assembly			
107)	936-243	560087	Gasket			
153)	*		Glass Side Trim			
154)	*		Flush Glass			
156)	936-238	560106	Flush Glass Gasket			
157)	*		Screw #10-24 x 1/2" Truss Hd Machine			
158)	*		Flush Glass Bracket			
160)	403-927		Barossa Curved Front			

*Not available as a replacement part.

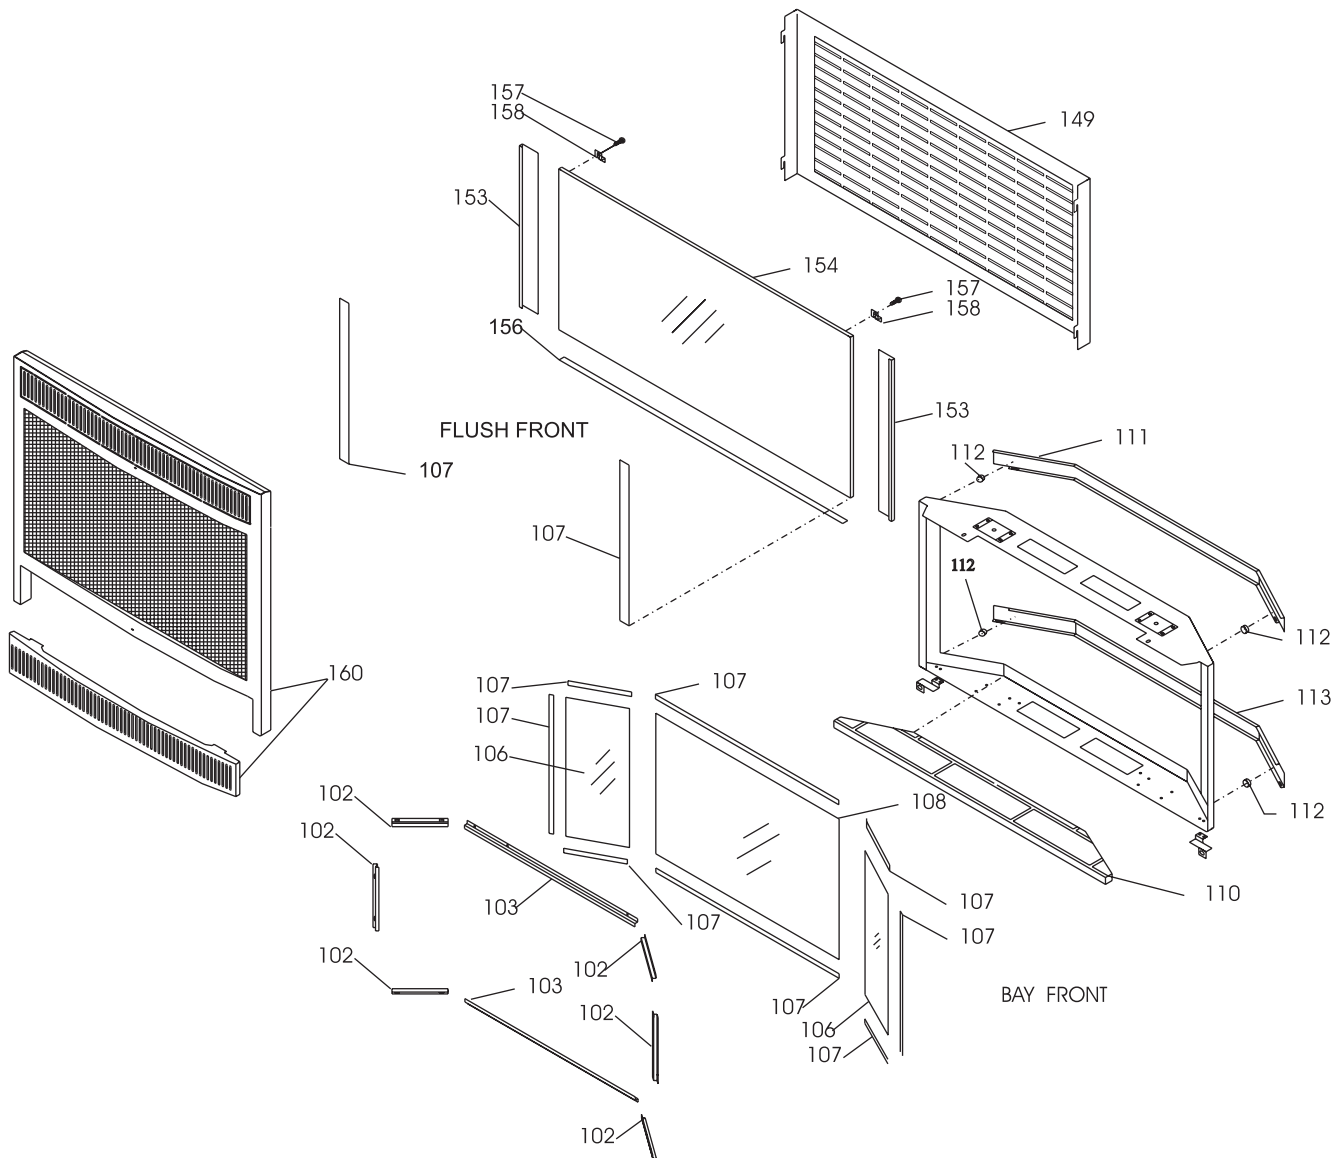

A series of horizontal lines for taking notes, starting with a thick header line and followed by numerous thin lines.

THE MASPORT EXPRESS WARRANTY

All new Masport Gas appliances are warranted, subject to the following conditions, to be free from defects in material or workmanship under normal use. The Express Warranty on all parts, including firebox components but excluding fans, flues and flue accessories is two years from date of original purchase as well as labour costs involved in the repair or replacement. The Express Warranty on fans, flues and accessories is for a period of twelve months from date of original purchase and includes labour costs involved in the repair or replacement.

This Express Warranty applies only with respect to defects in material and workmanship under normal and proper use of the NEW UNIT in its unmodified condition. Masport's obligation under this Express Warranty is limited to the repair or replacement, at its option, by an approved Masport Gas Service Agent (Retailer) of any part found to be defective in material or workmanship.

Labour costs involved in the repair or replacement are also covered under this Express Warranty as per the time condition outlined.

If an approved Masport Gas Service Agent is requested to attend on a service call that is not covered under this Express Warranty, a call out charge may be applicable, regardless of whether a repair is carried out or not.

Masport can accept no obligation whatsoever for any incidental, consequential or special damages or expenses resulting from any product defect. This Express Warranty applies from the date of original purchase, applies to the original purchaser, and is not transferable. The decision to repair or replace defective components will be made by Masport or its agent and actioned by an approved Masport Service Agent.

This Express Warranty Does Not Cover:

1. Defects, malfunctions or failures caused by incorrect installation, normal wear and tear, misuse, neglect, accidental damage or failure to follow the fuel selection, product operating and maintenance instructions, or resulting from installations, repairs or modifications to the equipment carried out by unauthorised persons.
2. Defects, malfunctions or failures caused by an act or omission of other persons after the product has left Masport's control.
3. The costs of collection and delivery of the equipment.
4. The cost of labour or materials as a consequence of faulty installation of gas supply line, flue, burner or log settings, or non-compliance with local codes.

The Express Warranty is not intended to exclude any rights the purchaser may have under the laws of the place, state, or country of purchase. Nothing in this Express Warranty limits or restricts any other statutory right or remedy available to the purchaser.

How You Obtain Warranty Service:

Provide proof of the date of purchase. Should the need for a warranty claim arise reasonable proof of the purchase date is required therefore you should retain your sales receipt. Where flueless appliances are not permanently installed, they should be returned to a Service Agent for evaluation.

Make the faulty part(s) available for inspection by Masport and/or its agents so that the validity of the claim can be established by them.

Australia Distributor:

Masport Pty Limited
P.O. Box 533
Braeside, Victoria, 3195

New Zealand:

Masport Limited
P.O. Box 14-349
Panmure
Auckland 6

For your own records, please complete the following:

Model: _____	Serial Number: _____
Retailer: _____	

Purchase Date: _____	

