



User's Guide

12-590

## AM/FM Stereo Headset Radio



*Thank you for purchasing your AM/FM Stereo Headset Radio from **RadioShack**. Please read this user's guide before installing, setting up, and using your new Headset.*

## Package contents

- Headset Radio
- User's Guide

## Features

- Lightweight design with built-in antenna.
- Adjustable headband and bass enhancement.



## ① Install battery

Slide open the battery door and insert one AAA battery (not supplied) matching the polarity symbols (+ and -) marked inside.



### **Battery Notes:**

- *When the sound weakens, replace the battery.*
- *Dispose of old batteries promptly and properly. Do not burn or bury batteries.*
- *Use only fresh batteries of the required size and recommended type.*
- *If you do not plan to use your headset for a week or more, remove the battery. Batteries can leak chemicals that can damage electronic parts.*

## ② Using the radio

1. Slide **POWER OFF/ON** to **ON** to turn on the radio. The last tuned station plays.
2. Slide **AM/FM/FMST** to select a band.
3. Turn **TUNING** to find a station.
4. Adjust the sound controls **VOL** and **BASS BOOST OFF/ ON**.

### Listening safely

Do not wear headphones, earphones, or earbuds while operating a motor vehicle or riding a bicycle. This can create a traffic hazard and could be illegal in some areas. To protect your hearing:

- Do not listen at extremely high volume levels. Extended high volume listening can lead to permanent hearing loss.
- Set the volume to its lowest level, then turn on your audio device and adjust the volume to a comfortable listening level.
- Avoid increasing the volume. Your ears will adapt to the volume level, so a level that does not cause discomfort might still damage your hearing.

## BASS BOOST OFF/ON

Switch to **ON** to enhance bass frequencies.

## POWER OFF/ON

Turn the radio on or off.

## TUNING

Rotate to find stations.

## Battery door

Slide to open.

## AM/FM/FMST

Slide to select a band.

## VOL

Adjust the volume.

## Frequency indicator



## Caring for your headset

- Keep the headset dry. If it gets wet, wipe it dry immediately.
- Handle the headset carefully. Do not drop it.
- Use and store the headset only in room temperature environments.
- Keep the headset away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

## Specifications

Power .....	1 AAA battery
Output power .....	10 mW (10% THD)
Frequency range.....	FM: 88 - 108 MHz
.....	AM: 520 -1720 kHz
Weight .....	3.5 oz (99 g)

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

## FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will

not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local **RadioShack** store or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your equipment. Changes or modifications not expressly approved by **RadioShack** may cause interference and void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

## Limited Warranty

**RadioShack** warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a **RadioShack**-owned store or an authorized **RadioShack** franchisee or dealer. **RADIOSHACK MAKES NO OTHER EXPRESS WARRANTIES.**

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store in the U.S. **RadioShack** will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products,

and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

**RADIOSHACK** EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, **RADIOSHACK** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF **RADIOSHACK** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact **RadioShack** at:

**RadioShack** Customer Relations

300 RadioShack Circle, Fort Worth, TX 76102

04/08

[www.RadioShack.com](http://www.RadioShack.com)



Protect the environment by recycling used electronics.  
Go to [E-CyclingCentral.com](http://E-CyclingCentral.com) to find an electronic  
recycling center near you.

©2009. **RadioShack** Corporation.  
All rights reserved. **RadioShack** and **RadioShack.com** are  
trademarks used by **RadioShack** Corporation.

Printed in China  
AO0340AAA1

12-590  
11A09