

# Cook Like A “Pro”

## Use a Meat Thermometer.

- Eliminates Guesswork
- Prevent under or over cooking.
- Insures Food Safety

How to use a meat thermometer:

1. Insert thermometer in center of thickest part of steak or roast.  
Make sure thermometer is not touching bone or fat.
2. Wait 10 to 15 seconds before reading.
3. Remove meat from heat when thermometer reads:

	Degree of Doneness	Remove when Thermometer Reads	Final Cooked Temperature
<b>BEEF, VEAL OR LAMB</b> Roast, Steak or Chops	Rare	130°F - 135°F	140°F
	Medium Rare	135°F - 140°F	145°F
	Medium	150°F - 155°F	160°F
	Well Done	160°F - 165°F	170°F
<b>GROUND BEEF, PORK, LAMB AND VEAL</b> Patties, Meat Loaf or Meat Balls	Medium (Cook until light gray and no longer pink in center)	160°F	160°F
<b>PORK</b>	Medium	150°F - 155°F	160°F
<b>HAM</b> Fully Cooked, Whole Fully Cooked, Sliced Fres, Raw (Leg)	To Reheat	140°F	145°F
	To Reheat	165°F	165°F
	Medium	150°F	160°F
<b>POULTRY</b> Whole Chicken/Turkey*	Well Done	165°F - 170°F in thigh/ 165°F in breast	180°F in thigh 170°F in breast
	Well Done	165°F	170°
Parts: Bone-In, Boneless	Well Done	165°F	170°
<b>GROUND POULTRY</b>	Well Done	165°F	165°F
<b>SEAFOOD/FISH</b>	Medium Rare	135°F - 140°F	145°F
	Medium	145°F	150°F - 155°F

\* If whole chicken or turkey is stuffed, stuffing must reach 165°F.

Source: U.S. Dept. of Agriculture and Federal Food Code.



FLAMELESS ELECTRIC GRILLS



No Open Flame

## Owners Manual

### Model 4400-EC-448 Electri-Chef® Grills

OUTDOOR USE ONLY



**4400-EC-448-PB-D-32”**  
(with optional rotisserie)

Read this manual in its entirety before operating any controls on the grill. For safe operation, every person who uses this grill must understand and follow the correct operational procedures. Do not allow children to operate this grill.

**\*\* Save this manual for future reference \*\***

# Table of Contents

Table of Contents .....	Page 1
Information & Model Definitions.....	Page 2
Safety Details .....	Page 3
Safeguards .....	page 4 & 5
Unpacking Instructions for CB/PB .....	Page 6
Assembly Instructions for CB/PB.....	Page 7
Unpacking Instructions for TT.....	Page 8
Unpacking Instructions for I/IM .....	Page 9
Assembly Instructions for I/IM .....	Page 10 & 11
Operating Instructions .....	Page 12
Cleaning & Service .....	Page 13 & 14
Warranty .....	Page 15
Grill Labels.....	Page 16
Notes .....	Page 17
Company Information .....	Page 18

If you have any questions about the assembly or operation of your Electri-Chef® Model 4400-EC-448 Grill, please contact Electri-Chef® Customer Service at

**1-800-442-7207**

**Email: [info@electri-chef.com](mailto:info@electri-chef.com)**

**Fax: 254-938-7055**

**Electri-Chef® Grills**

P.O. Box 1026  
Temple, TX 76503



# NOTES



We hope you will take the time to read this manual. By taking the time to read this manual you will receive the maximum cooking benefits of your Electri-Chef® grill and also be informed about the safety and operation. To activate the warranty on your Electri-Chef® grill please take the time to fill out the enclosed registration card and mail it back to the manufacturer.

We know you will be completely satisfied with the Electri-Chef Model 4400-EC-448 Grill. If you have any questions regarding the assembly, operation or safety procedures of your new Electri-Chef® grill please contact us in one of the following ways.

**1-800-442-7207**

**Email: info@electri-chef.com**

**Fax: 254-938-7055**

## **This manual contains the following information:**

- Unpacking Instructions
- Maintenance Instructions
- Shipment Inventory
- Operating instructions
- Assembly Instructions
- Warranty

## **This manual applies to models:**

<b>4400-EC-448-I-S</b>	<b>4400-EC-448-TT-S</b>	<b>4400-EC-448-PB-D</b>
<b>4400-EC-448-IM-S</b>	<b>4400-EC-448-I-D</b>	<b>4400-EC-448-TT-D</b>
<b>4400-EC-448-CB-S</b>	<b>4400-EC-448-IM-D</b>	<b>4400-EC-448-JA/CT</b>
<b>4400-EC-448-PB-S</b>	<b>4400-EC-448-CB-D</b>	

## **MODEL DEFINITIONS**

ex: <b>4400</b>	<b>EC</b>	<b>448</b>	<b>*</b>	<b>S or D</b>
Model Series	<i>Electri-Chef</i>	Grilling Area (Sq. In.)	see below	S= Single Control D= Dual Control
	I = Island		PB = Pedestal Base	
	IM = Island Marine		TT = Table Top	
	CB = Closed Base		JA/CT = JA Countertop	

4400 = Model Series

EC = Electri-Chef®

208-220 Volts - Single Phase - 30 Amp

$$\left( \begin{array}{ccccc} \text{Amps} & \times & \text{Volts} & = & \text{Watts} \\ 24 & \times & 220 & = & 5280 \end{array} \right)$$



**CAUTION**

Island enclosures must be built of fire resistant materials.

# 1.0 Safety Details



## WARNING

• THIS OWNERS MANUAL SHOULD BE READ COMPLETELY BEFORE ATTEMPTING TO USE OR SERVICE THE ELECTRI-CHEF® MODEL 4400-EC-448 GRILL. FAILURE TO FOLLOW THE INSTRUCTIONS IN THIS MANUAL COULD RESULT IN PROPERTY DAMAGE, SEVERE PERSONAL INJURY, OR DEATH.

It is important to note that some vital statements throughout this manual and on the decals affixed to the Electri-Chef® Model 4400-EC-448 Grill are preceded by bars containing the words DANGER, WARNING, CAUTION, or NOTE. For your protection we recommend you take special notice of these safety procedures. Safety procedures are essential and must be followed.

If any of the labels on the grill become damaged, have been removed or cannot be easily read, they should be replaced immediately to avoid possible property damage, personal injury, or death. Contact your Electri-Chef® distributor, dealer or Electri-Chef® Service Center.



## DANGER

- A DANGER INDICATES AN IMMEDIATE HAZARD WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.



## WARNING

- A WARNING INDICATES AN IMMEDIATE HAZARD WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.



## CAUTION

- A CAUTION INDICATES HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN PRODUCT OR PROPERTY DAMAGE OR MINOR PERSONAL INJURY.



## NOTE

- A NOTE PROVIDES KEY INFORMATION TO MAKE PROCEDURES MORE EASILY UNDERSTOOD.

The safety procedures listed must be followed whenever the Electri-Chef® 4400-EC-448 Grill is being operated, repaired, or serviced. Specific warnings appear throughout this manual and on the Electri-Chef® 4400-EC-448 Grill

# Grill Labels

### CAUTION - FOR YOUR SAFETY

To ensure continued protection against risk of electric shock, connect to properly grounded outlets only. Disconnect from electric outlet before cleaning or any service work is done on unit

 
### OPERATING INSTRUCTIONS

- Clean drip trays before each use
- Read owners manual before
- Turn timer past 10
- Select grilling temperature
- Set timer to desired time
- When grilling is complete turn temperature control to "0" and allow timer to time out automatically

### ATTENTION

Débranchez l'appareil de la prise de courant quand vous ne l'utilisez pas, avant d'enlever ou d'installer des pièces et avant de le nettoyer.

Les appareils à cordon qui doivent (être mis à la terre) par le cordon et la fiche, conformément à l'article 27.6.1, doivent porter le marquage suivant, ou l'équivalent, à un endroit bien en vue: [ATTENTION. Pour ne pas compromettre la protection contre les risques de choc électrique, ne brancher qu'à une prise correctement mise à la terre.]

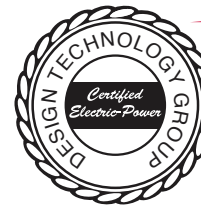

**Electri-Chef®**  
FLAMELESS ELECTRIC GRILLS

P.O. Box 1026  
Temple, TX 76503

MODEL  
4400 EC  
336

208/220 Volts at 20 AMP/4400 Watts  
Outdoor Use Only



# 7.0 Warranty

## LIMITED LIFETIME, 5, 3 AND 1 YEAR WARRANTY

THE STAINLESS STEEL GRILL ASSEMBLIES OF THIS PRODUCT ARE WARRANTED FOR THE LIFETIME OF THE ORIGINAL CONSUMER PURCHASER FROM THE DATE OF PURCHASE, AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP.

THE COOKING GRID IS WARRANTED TO THE ORIGINAL CONSUMER PURCHASER FOR FIVE ( 5 ) YEARS FROM DATE OF PURCHASE AGAINST BURN-OUT OR DEFECTS IN MATERIALS AND WORKMANSHIP.

THE STAINLESS STEEL HEAT - FLAVOR PLATE IS WARRANTED TO THE ORIGINAL CONSUMER PURCHASER FOR THREE ( 3 ) YEARS FROM DATE OF PURCHASE, AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP.

ALL OTHER COMPONENTS, ELECTRICAL OR MECHANICAL ARE WARRANTED TO THE ORIGINAL CONSUMER PURCHASER FOR A MINIMUM OF ONE ( 1 ) YEAR FROM THE DATE OF PURCHASE OR THE WARRANTY TIME OF THE MANUFACTURE OF THE COMPONENT, ELECTRICAL OR MECHANICAL, WHICH EVER WARRANTY TIME PERIOD IS LONGER, AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP.

THIS WARRANTY DOES NOT COVER DAMAGE OR FAILURES CAUSED BY MISUSE, UNCONTROLLED FLARE-UPS, NEGLIGENCE OR COMMERCIAL USE. IF ANY WARRANTED PART FAILS DURING ITS WARRANTY PERIOD, SEND THE FAILED OR DEFECTIVE PART(S) TO ELECTRI-CHEF GRILLS FOR REPAIR OR REPLACEMENT AT THE MANUFACTURER'S OPTION WITHOUT CHARGE. THE TRANSPORTATION COST FOR RETURNING FAILED OR DEFECTIVE COMPONENTS ARE THE RESPONSIBILITY OF THE CONSUMER.

REPAIR OR REPLACEMENT OF A DEFECTIVE COMPONENT(S) IS THE SOLE REMEDY UNDER THIS LIMITED WARRANTY. IN NO EVENT WILL ELECTRI-CHEF BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE LIMITATION OR EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. ANY IMPLIED WARRANTY OF THIS PRODUCT SHALL BE LIMITED IN DURATION TO ONE ( 1 ) YEAR DATE OF PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON THE DURATION OF IMPLIED WARRANTY, SO THIS LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

**Electri-Chef® Grills**

P.O. Box 1026  
Temple, TX 76503

# 1.1 Important Safeguards

## **READ and SAVE THESE INSTRUCTIONS**

Do not touch hot surfaces. Use handles or knobs.

To protect against electrical shock do not immerse cord or plugs in water or other liquids.

This appliance should not be used by children.

Unplug from outlet before cleaning. Allow to cool before servicing.

Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

Do not use appliance for other than its intended use.

Fuel, such as charcoal briquettes, is not to be used with appliances.

Use only on properly grounded outlet.

Servicing of this appliance should be performed by an authorized service representative.

**Do Not Use** extension cord.

Clean Drip Tray before each use.

## **READ and SAVE THESE INSTRUCTIONS**

# 1.1 Importantes Mesures de Securite

Appliquez les mesures de securite elementaires suivantes lor vous utilisez un appareil electrique:

- a) Lisez toutes les instructions.
- b) Ne touchez pas les surfaces qui peuvent etre chaudes. Utilisez les poignees ou les boutons.
- c) Pour eviter les chocs electriques, ne plongez pas le cordon, la fiche ou liap pareil portatif (indiuier au besoin diautres pieces similaires) dans lieau ou autre liquide.
- d) Surveillez bien les enfants siils utilisent un appareil ou siils se trouvent a proximite d'un appareil en marche.
- e) (i) Appareils portatifs. Debranchez l'appareil de la prise de courant quand vous ne l'utilisez pas, avant d'enlever ou d'installer des pieces et avant de le nettoyer. Laissez l'appareil refroidir avant de le manipuler.  
(ii) Appareils branches a demeuer. Assurez-vous que l'appareil est ARRETE quand vous ne l'utilisez pas, avant d'eniever ou d'installer des pieces et avant de le nettoyer.
- f) Appareils portatifs. Ne faites pas fonctionner l'appareil si le cordon ou la fiche sont endommanges, si l'appareil ne fonctionne pas correctement, s'il est tombe ou s'il a ete tombe ou s'il a ete endommagement. confiez au service de reparation recommande le plus proche tout examen, reparation ou reglage electrique ou mecanique de l'appareil.
- g) L'utilisation d'accessoires non recommandes par le fabricant de l'appareil peut causer des blessures.
- h) N'utilisez pas l'appareil a exterieur (cette consigne peut etre omise si le produit est destine a etre utilise a l'exterieur.
- i) Ne laissez pas le cordon pendre par-dessus le bord d'une table ou d'un comptoir et assurez-vous que le cordon n'est pas en contact avec des sur faces chaudes.
- j) Ne placez pas l'appareil pres d'un bruleur a gaz allume ou d'un element electrique ou tension ou dans un four allume.
- k) Sovez tes prudent en deplacant un appareil qui contient de l'huile ou un autre liquide chaud.
- l) Le cas echeant branchez toujours la fiche a l'appareil et assurez-vous que l'interruptuer de celui-ci est a la position ARRET (OFF) avant de brancher lafiche dans la prise. Pour de brancher l'appareil, placez l'interrupteur a ARRET (OFF) puis retirez la fiche de la prise de courant.
- m) N'utilisez l'appareil que pour la fonction a laquelle il est destine.
- n) Evitez de troucher les pieces mobiles.
- o) Conservez ces instructions.

## 6.0 Caring for the Exterior of Your Stainless Electri-Chef® Grill Continued



### DANGER

NEVER ATTEMPT TO SERVICE OR REPAIR YOUR GRILL WHILE PLUGGED INTO THE ELECTRIC OUTLET.



### WARNING

Disconnect from electric outlet before cleaning or any service work is performed on this grill unit.

#### Cleaning Exterior

##### Regular Cleaning...

- Wash down the surface regularly using water containing soap or mild detergents.
- Always rinse the surface with fresh water after cleaning.
- Polishing the surface with a soft dry cloth can complete a thorough cleaning operation.
- When wiping or polishing stainless steel, always follow the direction of the original grain or "brush" finish.

##### Cleaning Aids...

- Never use abrasive materials such as scouring pads or wire wool.
- Use a brush or soft damp cloth to remove loose deposits.
- Use a cream cleanser and soft cloth for stubborn deposits.

All grades of stainless steel can stain and discolor as a result of long term surface deposits and can never be accepted as completely maintenance free. In order to achieve maximum corrosion resistance, the surface of the stainless steel must be kept clean. Surface contamination and the formation of deposits must be prevented. These deposits may be minute particles of iron or rust from other sources used on the building or new premises and not removed until after the stainless steel items have been fixed. Industrial and even naturally occurring atmospheric conditions can produce deposits which can be equally corrosive, e.g. salt deposits from marine conditions. Strong acid solutions are sometimes used to clean masonry and tiling of buildings but these should NEVER be permitted to come into contact with metals, including stainless steel.

For additional information, please contact  
Electri-Chef® by calling (800) 442-7207  
or via e-mail at [info@electri-chef.com](mailto:info@electri-chef.com)

## 6.0 Cleaning, Service & Maintenance of Your Electri-Chef® Model 4400-EC-448 Grill

### **NOTE**

Do not use high intense heat to clean grid. Using high intense heat for cleaning only bakes grease and food to grid and wastes electricity. This practice may result in a grease fire which may cause damage to the grill and its electronic components.

### **WARNING**

Disconnect from electric outlet before cleaning or any service work is performed on this grill unit.

### **NOTE**

It is recommended to use rubber or plastic gloves during cleaning of grill.

### **CAUTION**

NEVER USE any abrasive cleanser, wire brush, metal scouring pads or any other abrasives on the stainless steel surfaces of the grill.

#### Cleaning Interior

- A. Disconnect grill from electric outlet.
- B. Remove Grease Drip Tray and dispose of drip tray liner if required.  
Replace with heavy duty aluminum foil if a disposable liner is not available.
- C. Use a spray oven-cleaner ("Easy-Off Fume Free Max" is recommended) and **FOLLOW THE DIRECTIONS ON THE CAN** for two hour cleaning. Disregard the "BBQ Grill Cleaning" warning statement about grill surfaces located on the can. Your all stainless steel interior and exterior surfaces of your grill WILL NOT be damaged from the use of the Easy-Off oven cleaner.
- D. After cleaning, wipe grill dry and reconnect to the electric outlet.
- F. Cleaning of Cooking Grid.
  1. Follow "BBQ Grill Cleaning" on back of Easy-Off can. After completion replace cooking grid.
- G. Cleaning of Stainless Steel Heat Plate.
  1. Remove cooking grid from grill. Remove stainless steel Heat Plate from grill and scrape excess burnt food and grease onto paper or into plastic bag for disposal. Replace Heat Plate and Cooking Grids.

#### Service & Maintenance

There is very little service or maintenance required except for cleaning.

**If you encounter any operational problems with your Electri-Chef® Grill, unplug the grill from the electric outlet and call your dealer where you purchased the grill or call**

**Electri-Chef® Grills customer service department during normal business hours.**

**Call 1-800-442-7207 or Email: info@electri-chef.com**

## 2.0 Unpacking Instructions for CB & PB Models

This section describes how to unpack your Electri-Chef® Model 4400-EC-448-CB or Model 4400-EC-448-PB Grill

### Step 1

- A. Cut nylon straps holding carton.
- B. Lift carton off grill.
- C. Remove all foam packing.
- D. Before continuing read Owner's Manual.

### Step 2

- F. Remove grill from carton bottom.
- G. Remove all items from boxes or shipping enclosures.
- H. Remove tape from grease tray.
- I. Open grill hood and remove warming rack from corrugated sheet and remove all other packing material from under cooking grids and stainless steel heat plate.

### Shipment Inventory

Below is a complete list of grill components and hardware that you should have received with your shipment. If you are missing any of the items listed below, immediately contact the dealer from whom you purchased your grill or contact Electri-Chef® Grills customer service at 1-800-442-7207

#### A. Items in carton

1. Grill body, base with collapsable shelves
2. One (1) Owner's Manual.
3. One (1) warming rack.
4. Four (4) swivel casters (or 4 adjustable legs if leg option ordered).
5. Four (4) cooking grids.



## 2.1 Assembly Instructions for CB & PB Continued

This section describes how to assemble your Electri-Chef® Model 4400-EC-448 Grill

### NOTE

**No grill assembly is required for the Model 4400-EC-448-CB.  
The grill comes fully assembled and ready to use.**

**No grill assembly is required for the Model 4400-EC-448-PB.  
The grill comes fully assembled.  
Anchoring is required before use.**

**For additional information, please contact  
Electri-Chef® by calling (800) 442-7207  
or via e-mail at [info@electri-chef.com](mailto:info@electri-chef.com)**


## 5.0 Operating Instructions

Your grill has now been unpacked and assembled. It is now time to plug your grill into a 220 Volts Single Phase 30 AMP outlet.

### WARNING

Plug this unit into a properly grounded 220 Volt - Single Phase - 30 AMPS outlet.

**Figure 4a Grill Single Control**

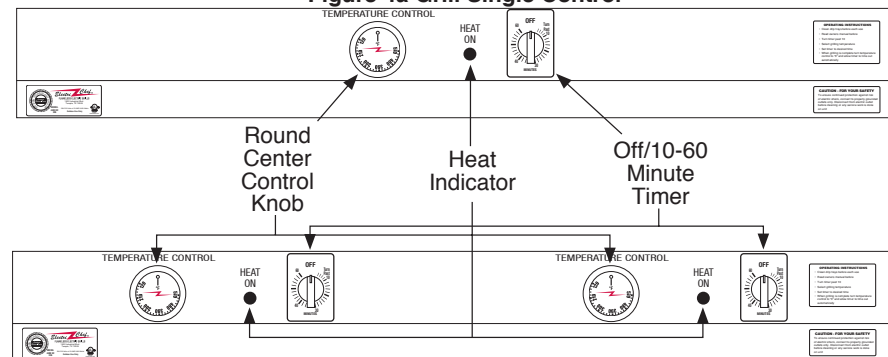 

**Figure 4b Grill Dual Control**

Follow the instructions on the control panel of your grill and other suggestions in this section to operate your Electri-Chef® Model 4400-EC-448 Grill.

Your Single control grill in Figure 4a, consist of one (1) Round Temperature Control Knob and one (1) OFF/10-60 Minute Timer and one (1) Heat Indicator.

Your Dual control grill in Figure 4b, consist of two (2) Round Temperature Control Knobs and two (2) OFF/10-60 Minute Timers and two (2) Heat Indicator.

- The Round Temperature Control Knob controls the grill temperature through a range of 0 (OFF) 120° - 570°

Preheat grill 10 - 12 minutes at desired temperature control setting before grilling.

### OPERATING INSTRUCTIONS

1. Read owners manual before operating this grill
2. Plug into 220 Volts @ 30 AMP outlet
3. Set timer to desired time
4. Select grilling temperature
5. When grilling is complete turn temperature control to "0" and allow timer to time off automatically

### General notes for above

1. Always check grease trays for excess grease or food particles before each use. If required, remove excess grease or food.
2. It is recommended that all grilling, cooking or baking be accomplished with the grill hood in the closed position.
3. At the completion of any grilling, cooking or baking, do the following:
  - A. Turn round temperature control knob to zero (0). (OFF)
  - B. Allow timer to time out. Do not force to zero (0). (OFF)
  - C. Clean cooking grid with soft wire brush of any excess greas and food particles.

### NOTE

Allow the timer to time out on its own. Components may be damaged by forcing timer to "0". (OFF)



## 4.2 Assembly Instructions for Island Model (continued)

### Step 3.2


Attaching the Lower Grill Flange to Island Grill

#### Island Lower Grill Flange

##### Notes

1. The Lower Grill Flange is attached to the power cord. There is no way of removing the Lower Grill Flange without damaging it or the power cord.
2. Attach the Lower Grill Flange to the Island Grill as shown in diagram 1.a with a phillips screwdriver, using the screws in the enclosed bag labeled Lower Grill Flange Mounting Screws.

 Diagram 1.a

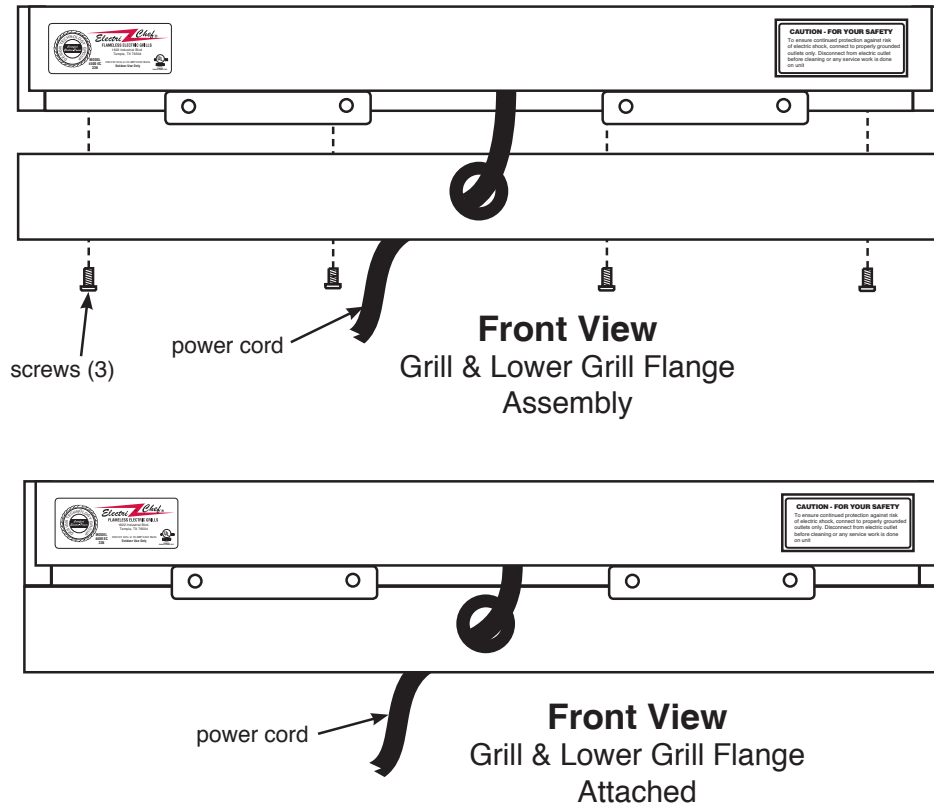

## 3.0 Unpacking & Assembly for TT Models

This section describes how to unpack your Electri-Chef® Model 4400-EC-336-TT Grill

### Step 1

- A. Cut nylon straps holding carton.
- B. Lift carton off grill.
- C. Remove all foam packing.
- D. Before continuing read Owner's Manual.

### Step 2 - Assembly

- E. Remove grill from carton bottom.
- F. Attach legs (4) on each corner of the grill body.

### Step 3

- G. Remove all items from boxes or shipping enclosures.
- H. Remove tape from grease tray.
- I. Open grill hood and remove warming rack from corrugated sheet and remove all other packing material from under cooking grids and stainless steel heat plate.

### Shipment Inventory

Below is a complete list of grill components and hardware that you should have received with your shipment. If you are missing any of the items listed below, immediately contact the dealer from whom you purchased your grill or contact Electri-Chef® Grills customer service at 1-800-442-7207

#### A. Items in carton

1. Grill body
2. One (1) Owner's Manual.
3. One (1) warming rack.
4. Four (4) legs.
5. Four (4) cooking grids.

## 4.0 Unpacking Instructions for 448-I & 448-IM

This section describes how to unpack your Electri-Chef® Model 4400-EC-448-I/IM Grill

### Step 1

- A. Cut nylon straps holding carton.
- B. Lift carton off grill.
- C. Remove all foam packing.
- D. Before continuing read Owner's Manual.

### Step 2

- F. Remove grill from carton bottom.
- G. Remove all items from boxes or shipping enclosures.
- H. Remove tape from grease tray.
- I. Open grill hood and remove warming rack from corrugated sheet and remove all other packing material from under cooking grids and stainless steel heat plate.

### Step 3.1 Assembly

- J. See Island Cut-Out Information Page (see page 10)

### Shipment Inventory

Below is a complete list of grill components and hardware that you should have received with your shipment. If you are missing any of the items listed below, immediately contact the dealer from whom you purchased your grill or contact Electri-Chef® Grills customer service at 1-800-442-7207

#### A. Items in carton

- 1. Grill body
- 2. One (1) Owner's Manual.
- 3. One (1) warming rack.
- 4. Four (4) cooking grids.
- 5. Four (4) Lower Grill Flange Mounting Screws

## 4.1 Assembly Instructions for Island Model (continued)



 
# CAUTION

Island enclosures must be built of fire resistant materials.

### Step 3.1

Place grill in island cut-out

### Island Cut-Out

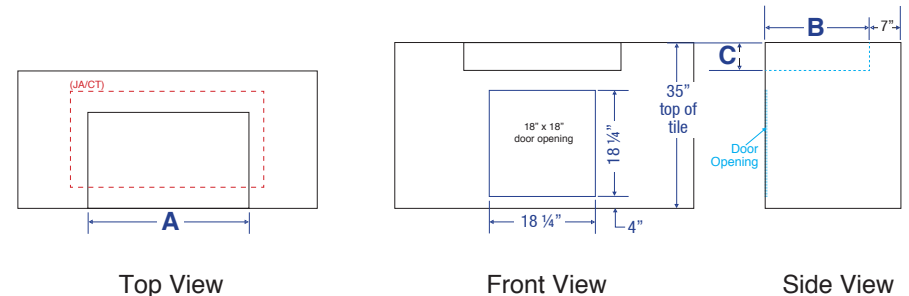

### Notes

- 1. No under grill support required on the island.
- 2. Grill has mounting flanges on sides & back which sit on top of island surface, tile, etc.
- 3. Grill cut-out should be (single & dual control use same cut-out dimensions):

#### Island Model 448-I

- A. 32 1/4" left to right
- B. 16 1/4" front to back
- C. 7 3/4" from top of island surface

#### Island Model 448-IM

- A. 33 5/8" left to right
- B. 16 3/4" front to back
- C. 7 3/4" from top of island surface

#### Island Model 448-JA/CT

- A. 37" left to right
- B. 21" front to back

- 4. Be sure 220 Volt @30 amp outlet is located behind island.
- 5. Island should be constructed of fire resistant materials or grill cut-out should be lined with 1/2" thick fire resistant materials.