# WAGAN Corp. Limited Warranty Registration Form

All WAGAN Corporation products are warrantied to the original purchaser of this product. Warranty Duration: This product is warrantied to the original purchaser for a period of one (1) year from the original purchase date, to be free of defects in material and workmanship. WAGAN Corporation disclaims any liability for consequential damages. In no event will WAGAN Corporation be responsible for any amount of damages beyond the amount paid for the product at retail. In the event of a defective item, please ship the item, prepaid, with a complete explanation of the problem, your name, address and daytime phone number. WAGAN Corporation will, at its option, replace or repair the defective part. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA and does not extend to any units which have been used in violation of written instructions furnished.

Warranty Disclaimers: This warranty is in-lieu of all warranties expressed or implied and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

Warranty Performance: During the above one (1) year warranty period, a product with a defect will be replaced with a comparable model when the product is returned to WAGAN Corporation with an original store receipt. The replacement product will be in warranty for the balance of the one (1) year warranty period.

- Please activate my limited warranty for WAGAN Corp. 2395 150W USB INVERTER
- Enclosed copy of original sales receipt.

Name		
Mail Address		
City		
State, Zip Code		
Item Purchased	2395 150W USB INVERTER	
Stores Name		
Date of Purchase		
Signature	Date	

All WAGAN Corporation Products must be registered within (30) days of purchased to activate this warranty. Mail the complete registration form, along with a copy of the original receipt to:

> Attn: Customer Service WAGAN Corporation 3589 Yale Way, Fremont, CA 94538 Email: customerservice@wagan.com Phone: (Toll Free) 1-800-231-5806 (Local) 1-510-490-9221

Hours of Operation: Monday through Friday 8:00 A.M. - 5:00 P.M.

© 2007 WAGAN Corp.








User's Manual

Thank you for purchasing Smart AC 150 Watt with USB by Wagan Tech. With normal care and proper treatment it will provide years of reliable service. Please read all operating instructions carefully before use.

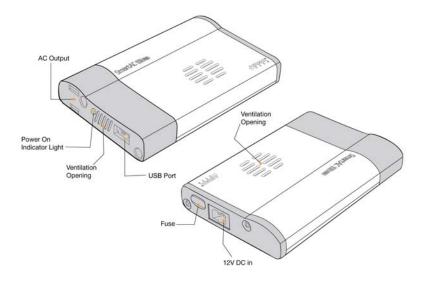

#### GENERAL INFORMATION

Read, understand and comply with these instructions before using this inverter. Keep this User's Guide for future reference.

This inverter is powered from a 12 volt DC source and provides 120 volts AC 60Hz through one North American standard outlet. The AC waveform is a modified sine wave (MSW) which approximates the sine wave of household electrical service. This inverter powers AC appliances up to 150 watts. A removable DC power cord connects to a 12 VDC cigarette lighter socket. The cigarette lighter plug is removable to reveal an airline power plug. There is a USB power port that can be used to charge cell phones, PDAs and MP3 players. Safety features include automatic shutdown in the event of overheat, overload, under voltage and over voltage conditions.



#### OPERATING ENVIRONMENT/ USER RESPONSIBILITY

- The 12 volt supply must provide between 10 to 14.5 volts DC
- Make sure the inverter is connected to the correct voltage and polarity.
- Unplug or disconnect the inverter when it is not in use.
- Unplug the inverter when starting the vehicle's engine.
- Keep at least one inch of clearance around the inverter for air flow.
- Keep the inverter and all cords dry.
- Secure the Inverter to keep it from changing position while a vehicle is moving.
- Know the wattage requirements of your appliances. Appliance total wattage can not exceed 150 watts.
- Do not connect the inverters AC output to another AC power source. Damage will result, voiding the inverter's warranty.
- Do not use an extension cord between the DC power source and the DC input of the inverter. An extension cord can create a voltage drop that can reduce efficiency and output

#### WARNINGS

- Keep the inverter away from children.
- Do not operate the inverter with wet hands because of an electrical shock hazard.
- This device produces voltage similar to wall outlets at home and should be treated with the same caution.

# **OPERATION**

Connection to a 12 volt power source is though the removable DC power cord. One end plugs into a receptacle on the inverter; the other end has an accessory socket plug. The accessory socket plug allows the inverter to be easily connected to a cigarette lighter socket or accessory socket in a vehicle. Removing the accessory socket plug allows the inverter to be powered from an airline power receptacle.

© 2007 Wagan Corporation.
All Rights Reserved.
Wagan and Wagan.com are trademarks used by Wagan Corporation.

# FOR POWER CORD WITH CIGARETTE LIGHTER ADAPTER INSTALLED:

- 1. Connect the DC cord to the inverter.
- 2. Insert the DC plug into the vehicles accessory socket
- 3. Turn the ignition switch to the accessory position, if necessary.
- 4. Insert appliance plug(s) into AC socket(s) at the front of the inverter.
- 5. Turn on the power switch that is located on the front of the Inverter
- 6. The green LED will light to confirm that AC output is present.
- 7. After use, turn OFF the inverter and disconnect the plugs from the accessory socket and inverter.

# NOTE FOR VEHICLE USE

This inverter has features that will prevent your battery from being completely discharged. An audible alarm will sound when the battery voltage is 10.5 volts. If you hear this alarm we recommend operating your engine for 10-20 minutes to recharge the vehicle's battery.

# FOR AIRLINE USE

- 1. Connect the DC cord to the inverter.
- Remove the cigarette lighter plug adapter
- 3. Plug into Airline accessory socket
- 4. Insert appliance plug(s) into AC socket(s) at the front of the inverter.
- 5. Turn on the power switch that is located on the front of the Inverter
- 6. The green LED will light to confirm that AC output is present.



7. After use, turn OFF the inverter and disconnect the plug from the Airline socket.

#### **USB POWER PORT**

When the inverter is powered, the USB Power Port provides 5 volts DC up to 0.5 Amps for charging cell phones, PDAs and MP3 players. The user supplies the charging/power adapter cord.

- 1. Follow the above instructions to power the inverter.
- 2. Connect the device to the adapter cord
- 3. Plug the USB connector into thee USB Port
- 4. Turn on the device
- 5. After use, turn off the device and turn off the inverter.
- 6. Disconnect the USB connector from the inverter.
- 7. Disconnect the inverter from its power source.

#### **CAUTIONS**

If you use a battery charger to recharge your battery, be sure to disconnect the inverter first. Failure to disconnect the Inverter prior to connecting a charger may result in an input voltage spike that can damage the Inverter.

Powering this inverter with greater than 15 volts DC can damage the inverter and void the warranty.

Do not use an extension cord between the DC power source and the DC input of the Inverter. An extension cord on the DC input can create a voltage drop that can reduce efficiency and output.

Do not open the case of the inverter. There are no user serviceable parts inside.

© 2007 Wagan Corporation.

All Rights Reserved.

Wagan and Wagan.com are trademarks used by Wagan Corporation.

Do not let the cord of the inverter or any appliance cord get wet. Do not operate this inverter in or around water. Water can damage the inverter. Water damage is not covered under warranty.

# **MAINTENANCE**

Little maintenance is required to keep your inverter operating properly. Periodically clean the exterior of the unit with a damp cloth to prevent accumulation of dust and dirt.

# TROUBLESHOOTING

Operating a TV Monitor or TV/DVD or TV/VCR Combination

Picture tube type TVs and Monitors have a high initial surge of power when they are turned on. If the device does not start up on the first try, switch the device on every 2-3 seconds until the screen comes on. Some screens may take 2-5 tries before starting.

If the inverter does not appear to be functioning, check the following possible causes:

- (1) Poor contacts. Clean contact parts thoroughly.
- (2) Blown DC fuse. Check fuse in body of inverter.

Replace any blown fuse with same type and rating.

- (3)Battery voltage is too low Start the engine or recharge the battery. Replace battery if needed.
- (4) Shuts down on overload. Reduce the wattage of the load.
- (5) Thermal shutdown. Under heavy loads for extended periods of time, the inverter will shut down to prevent damage from excess heat. Reduce the load and allow the inverter to cool before restarting the inverter.



Output voltage: 115VAC MSW Frequency: 60Hz

MODEL NO:	ITEM 2395
DC Input Voltage	12V (10-15V)
USB Output Voltage	5V
USB Output Current	O.5A MAX.
Output Wave Form	Modified Sine wave (MSW)
Output Power	150 Watts
Surge Power Capacity	300 Watts
Efficiency	Over 90%
No load Current	<0.4A
Battery low Shutdown	DC 9.5_ +O.5V
Alarm And Thermal Shutdown (Automatic Recovery)	55 deg +/- 5 deg C
Fuse in body of the inverter.	20A
Power Switch	DC Input ON/OFF
Dimensions (LxWxH)	118x80x20 mm 4.64x3.14x0.78 in.
Net weight	365 Grams 12.9 Oz