

CONAIR®



2-in-1 Fabric Steamer

Model CGS19A

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

READ ALL INSTRUCTIONS BEFORE USING
KEEP AWAY FROM WATER



DANGER — Any appliance is electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not place in, or drop into water or other liquid.
4. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in or on an ironing board.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
3. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.


4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
5. Iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking. Do not attempt to repair the appliance. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used.
6. Keep the cord away from heated surfaces.
Do not allow cord to contact heated surfaces.
Do not pull or twist cord. Let appliance cool completely before putting away. Loop cord loosely around appliance when storing.
7. Never drop or insert any object into any opening.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Do not use an extension cord to operate appliance.
10. Surfaces of this appliance may be hot when in use. Do not let heated surfaces touch eyes or bare skin.
11. Do not let the soleplate sit on any surface or on the appliance power cord while it is hot or plugged in.
12. Unplug this appliance before filling or emptying.
Do not overfill.
13. While emitting steam, this appliance may cause burns if it is used too close to the skin, scalp or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water coming from steam vents, test appliance before each use by holding it away from body.
14. Do not operate steamer without properly filling the water tank.
15. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
16. Burns could occur from touching hot parts, hot water, or steam. Use care when removing water tank or when you turn a steam appliance upside down – there may be hot water in reservoir.
17. To reduce likelihood of circuit overload, do not operate another high wattage appliance on the same circuit.

18. When installing or removing attachment, please be sure the unit is off and no steam is being released to avoid contact with hot water.
19. Use caution when installing or removing attachment as it may contain hot water from condensation. Ensure the attachment is dry or cooled off to avoid contact with hot water.
20. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
21. If an extension cord is necessary, a 10 amp cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange cord so it is not tripped over.
22. Do not iron a garment while it is on person.
23. Do not use continuous steam for more than 10 seconds. A flooding of the steam chamber may occur, causing hot water to drip from the soleplate.
24. Iron must be used and rested on a stable surface.
25. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

FILLING INSTRUCTIONS

1. Place the unit on a stable surface.
2. While holding the water reservoir with one hand, move the release lever toward the power cord.
3. With the reservoir released, pull up on the reservoir to remove it from the body of the unit.
4. Turn the reservoir over, revealing the rubber inlet cover.
5. Open the inlet cover and fill the tank with everyday tap water (filtered water may reduce hard water problems).
6. Close the inlet cover and return the reservoir to its place, making sure that the reservoir is secure

GETTING TO KNOW YOUR STEAMER

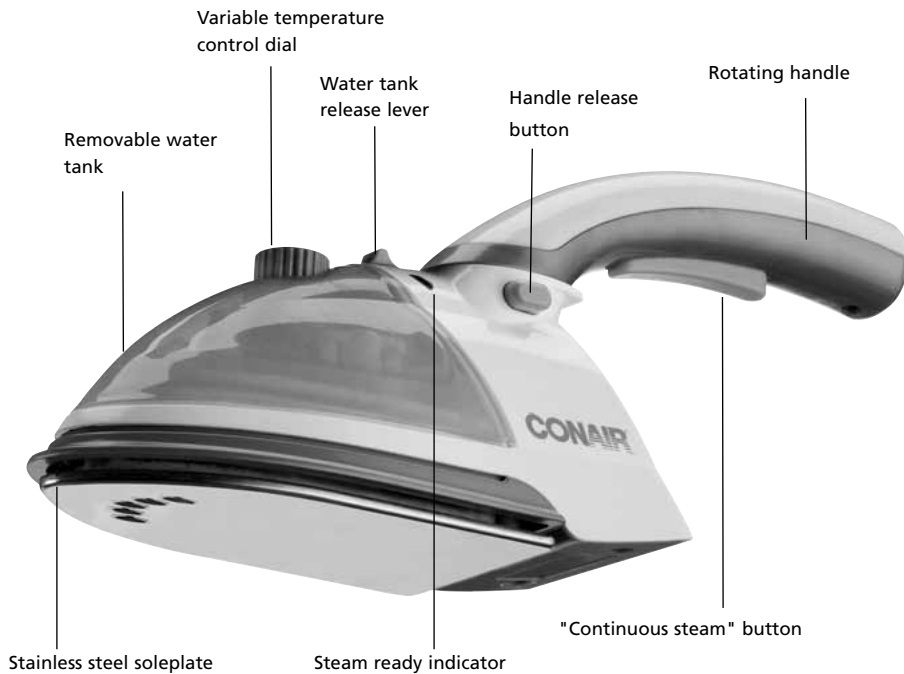

OPERATING INSTRUCTIONS

1. The CGS19A Fabric Steamer functions as both a steamer and an iron. Simply depress the rotating handle release button and rotate the handle out for steaming and in for ironing.
2. Plug the unit into your electrical outlet. Both red and green lights will glow. Red light indicates the appliance is plugged in and the green light indicates the appliance is heating up. When the green light goes off, the appliance is ready. The appliance can be used continuously, regardless of the status of the green light. Do not press the steam button before the green light goes off for the first time.
3. Remove the soleplate cover/attachment; rest unit vertically with soleplate elevated.
4. If using the unit for pressing, turn the Variable Temperature Control Dial to the appropriate setting for the fabric that you will be pressing. Check the fabric label to confirm your fabric type.

Settings are as follows:

Low: 1 dot (·) for synthetic fabrics

Medium: 2 dots (··) for wool and silk

High: 3 dots (···) for cotton and linen

Steam becomes available at the high setting.

5. When first using the device, test on an old cloth, as there may be sediment left from transportation or manufacturing.
Unplug the device when it is not in use.

REMOVING OR REPLACING THE SOLEPLATE COVER WITH LINT FABRIC BRUSH AND CREASE ATTACHMENTS

The lint/fabric brush and crease attachments are designed to attach to the soleplate for easy use.

1. Use caution when removing or replacing the attachments to avoid touching a hot surface. It is recommended that the appliance cools off before attachments are changed.
2. Holding the unit in one hand, turn it over so the attachment is facing up.

- Using the other hand, turn the locking cover tab and push the attachment away from the handle. Grab the ribbed surface on the side of the attachment and pull off.
- After use, reverse the process in step two.

Removeable
Lint/Fabric Bristle
& Soleplate cover



Crease
Attachment

FOR UPRIGHT STEAMING

- Turn the variable temperature control dial to the High 3 dots (···) setting. The unit will take approximately two minutes to reach this temperature. When the temperature has been achieved, the green light will turn off.
- Holding the steam vents away from you and anyone else in the room, engage the trigger. Steam should now be released from the vents in the soleplate.

The unit is equipped with a convenient trigger for continuous steam. To start flow of steam, press and hold trigger. Initial use may need 2-5 seconds to wait for steam to come out. Steam will emit until the trigger is released. Do not press the steam button for longer than 10 seconds; otherwise hot water may leak from the soleplate.

When you have finished using the unit, or are resting, be sure to elevate the soleplate. Please be sure to turn the variable temperature control dial to the "min" position. Unplug the unit and replace the soleplate cover for storage.

STEAMING TIPS

- To prepare your fabric for steaming, brush it with the (included) fabric brush. This will loosen the fibers and allow better steam penetration.


2. Hang your garment or fabric.
3. Pass the steam jets just above the fabric where the wrinkles are.
It may take a few passes to remove the wrinkles completely.
4. After use, empty any remaining water from the tank to avoid leakage.

CREASE ATTACHMENT TIPS

The crease attachment is designed for use with one hand. Fabric and garments should easily slide into the attachment.

Do not touch any part of the crease attachment when in use.

1. Hang your garment or fabric.
2. Pull the fabric taut from the bottom and insert into the crease attachment.
3. Pass the steamer up and down around the fabric until the desired crease is achieved and/or wrinkles are removed.

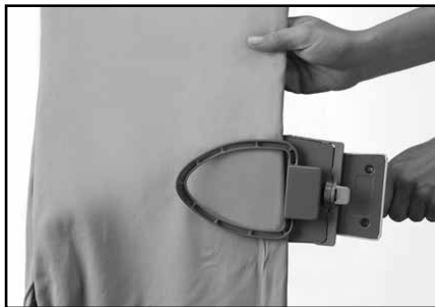

IRONING TIPS

When using the soleplate for pressing fabrics, follow these steps to ensure professional results:

1. Be sure the temperature control dial is set to the correct temperature for the fabric you are pressing. Fabric type and care recommendations are found on the fabric label.
2. Do not let the soleplate sit in one place on the fabric as it may scorch the fabric.

3. When pressing, it is recommended that you use an ironing board to achieve good results and prevent damage to furniture and other surfaces.
4. If pressing different types of fabrics, start by pressing delicate fabrics first at lower temperatures and gradually progress to higher temperatures.

STORAGE

1. Turn off and unplug appliance after using.
2. Allow to cool before storing.
3. Empty any remaining water from the tank to avoid leakage.
4. Store in a cool, dry place, out of reach of children.

TROUBLE SHOOTING

PROBLEM	POSSIBLE	CAUSE SOLUTION
Steamer fails to heat	Steamer is not plugged in	Plug into power outlet and switch product on
No steam	Water level is low	Switch product off and refill water container

Note: Minerals in water will vary in different areas. To ensure continued operation of the steamer, never store without cleaning and removing excess water from the water container and the water reservoir.

LIMITED ONE YEAR WARRANTY

This product is subject to the express warranty given on the warranty card included with the product, as may be amended by reference to and in accordance with the terms of the warranty cards displayed on Conair Australia website www.conairaustralia.com.au

To make a warranty claim you must retain your proof of purchase. Further details can be found at www.conairaustralia.com.au and click on 'customer service'.



©2012

Conair Australia Pty Ltd,
Suites 20 & 21, Ground Floor, 7 Narabang Way,
Belrose NSW 2085, Australia
Customer Service Hotline Australia: 1800 650 263
New Zealand: 0800 266 247
E-mail us at: aus_info@conair.com

IB-12/059A