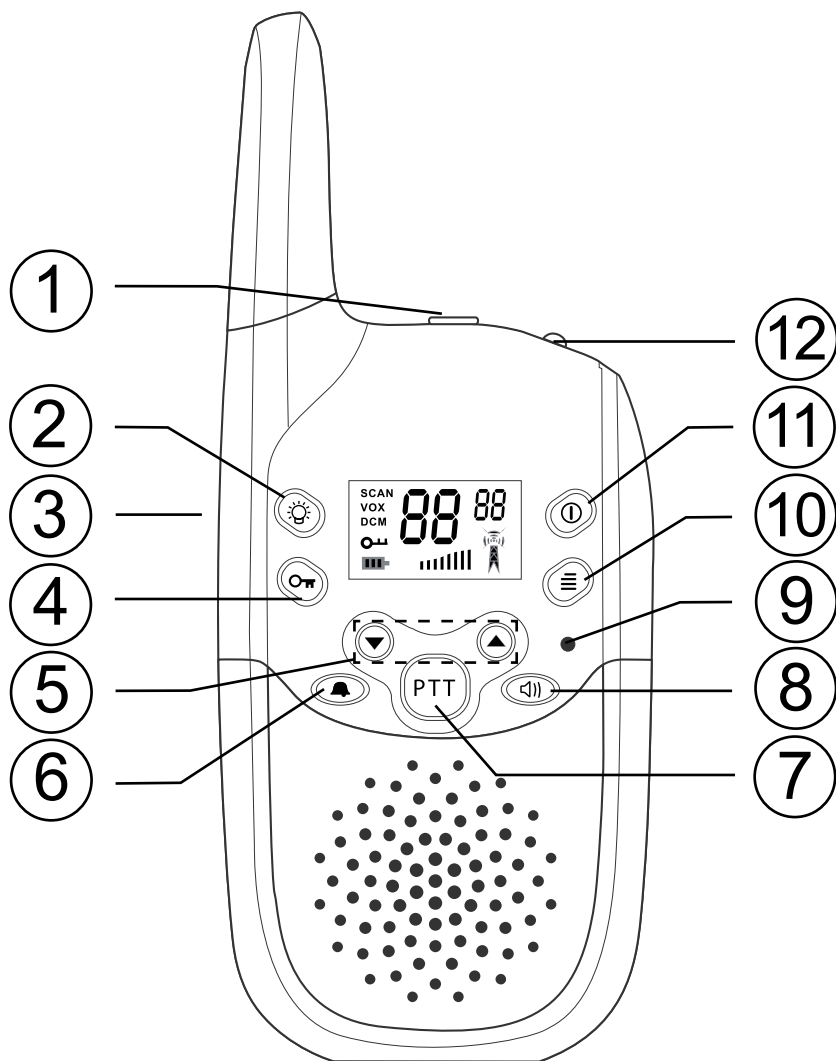 


**DORO**  
say it with style

Manual



doro bm35



## English

- |                         |                             |
|-------------------------|-----------------------------|
| 1 Headset socket        | 7 Push to Talk (PTT) button |
| 2 Torch button          | 8 Monitor button            |
| 3 Charging socket       | 9 Microphone                |
| 4 Button lock           | 10 Menu button              |
| 5 Volume/Scroll buttons | 11 On/Off button            |
| 6 Call button           | 12 Torch Light              |

## Area of use

The handset is intended for both indoor and outdoor use, it is NOT resistant to rain, water, rough or other careless treatment.

In ideal conditions ie: line of sight with no obstructions between handset/s and monitor, the range can be up to 3 km.

## Batteries

1. Remove the belt clip by lifting the small locating tab and pushing the clip upwards.
2. Before removing the battery cover release the locking clasp at the base of the handset.
3. Insert the rechargeable battery pack ensuring correct battery polarity is observed.
4. Refit the battery cover and belt clip. Charge the handset for 24 hours before use.

*Please note!*

*The rechargeable battery pack has been installed the handset must be charged for 24 hours before use.*


## Charging bm35 (using adapter)

Connect the mains adapter to the socket on the left of the handset and an electrical wall socket.

## Charging bm35+1 (with charging stand)

Connect the mains adapter to the socket on the rear of the charging stand and to an electrical wall socket. Place the handset in the charger with the buttons facing out.

## Battery indicator and charging

The symbol  in the display indicates when the batteries require charging. The indicator has three segments which disappear as the battery charge decreases, and will flash when the battery is running low. Charge the equipment as soon as possible when the indicator flashes!

The battery indicator will stop flashing when charging is complete (approximately 14 hours/ initially 24 hours). Fully-charged batteries will last for approximately 30 hours in standby or 2 hours operational time. These times apply at normal room temperature.

*Please note!*

*Never charge ordinary (non-rechargeable) batteries in the handset, since this will ruin the equipment. The guarantee does not cover this type of damage. The equipment must be charged initially for 24 hours before use during which time the handset cannot be used. The recharging system used in this model may result in it becoming warm. This is normal and will not damage the equipment.*

## Important!

**Although the baby monitor offers a practical solution in looking after a child it cannot replace a parent or guardian.**

**Make sure the equipment is always out of reach, never place the unit in the child's bed or playpen.**

**To avoid acoustic feedback by not placing the handset and baby monitor close to one another.**

**Radio signals can be blocked if the equipment is used in areas with high sources of interference from other electronic equipment.**

**Regardless of the selected channel or transfer code, you may experience 'radio chatter' from other PMR units within the operating range.**

## Belt clip

A belt clip is included and fitted to the back of the handset. The belt clip enables the handset to be attached to a belt, waistband or similar. You can remove the belt clip by lifting the small locating tab and pushing the clip upwards..

### *Important!*

*Please note when programming all references to press = to press and then immediately release the button.*

## Switching the Handset on/off

Press and hold **1** for a few seconds to turn the handset on or off.

## To communicate

1. Make sure that all handsets (and monitor unit) are set to the same channel and transfer code. See below.
2. Press and hold **PTT** (Push To Talk) to speak.

### *Please note!*

*If you are unable to communicate it may be because different channels or transfer codes have been selected, the battery is running low or the units are too far apart.*

## Channel selection

All UHF/CB radio equipment share the available designated channels. If the chosen channel is in use select an alternate channel, the selected channel number will be displayed in standby mode. Please refer to the frequency/channel allocation table on page 8.

1. Press **≡**. The current selected channel flashes.
2. Select the desired channel using **▲/▼**.
3. Press **PTT**.

## Transfer code selection

There are 38 transfer codes available which can be used to filter out unwanted signals. However, your conversation may still be overheard irrespective of which code is used. To enable communication between handsets (as well as monitor to handset), the same transfer code must be used on all units. In order to communicate with equipment that cannot select a code, enter code 0.

1. Press **≡** repeatedly until the small digits in the top right hand corner of the display flash.
2. Scroll to the desired transfer code using **▲/▼**.
3. Press **PTT** to confirm.

## Scanning

You can scan all available channels to locate any signals being transmitted. Once a signal has been located the display will show the channel number, and a signal will be heard for a few seconds.


You can press **PTT** to stop at the located channel.

Please note: while searching battery consumption will be significantly higher than normal.

1. Press **≡** and **▲** at the same time. The unit will start searching.
2. To stop scanning press **≡**.

## Monitor function

The monitor function can be used in weak signal areas to locate any other signal being transmitted.


1. Press and hold  for at least five seconds.
2. To stop monitoring press **PTT**.


 
 
 
## Cordless baby monitor/Voice control (VOX)

This function is practical for use as a baby monitor, i.e. put one handset close to the baby (but out of reach) and carry the other one with you. You can then hear when the sound exceeds the set level of sound sensitivity.


Remember to reduce the volume on the unit that is placed close to the baby.


 
 
 
This handset can be used without having to press the **PTT** button to transmit. By setting the correct level, the handset can automatically determine when you are speaking. Test different settings until the sensitivity selected is acceptable. Please note that however accurate your setting there is always a small risk that increased noise from the surroundings may activate the transmitter, this may result in the initial word being unclear. The transmitter will shut off two seconds after you have finished speaking.

**VOX** will be displayed while the function is active. If the handset transmits by itself the sensitivity is set too high and will need to be adjusted. Press  to be able to temporarily interrupt and change the setting.

1. Press  repeatedly until **VOX** is displayed.
2. Scroll to the desired setting using / (=off, 1=least sensitive....3=most sensitive).
3. Press **PTT** to confirm.



 
 
 

## Call melody

You can select different call melodies (=off).

1. Press  repeatedly until  is displayed.
2. Scroll to the desired melody (1 -5) using /.
3. Press **PTT** to confirm.


 
 
 
 

## Termination (Roger) tone

If selected a beep tone will be heard when you release the **PTT** button. This can be used as a reminder to the other person that you have finished talking and are waiting for a response.

1. Press  repeatedly until  is displayed.
2. Scroll to the desired setting using / (=off, =on).
3. Press **PTT** to confirm.


 

 
 

 
 
## Key tone

If selected a tone will be heard when the handset buttons are pressed, this can be switched on or off.

1. Press  repeatedly until  is displayed.
2. Scroll to the desired setting using / (=off, =on).
3. Press **PTT** to confirm.



## Searching two channels

You can enter a different channel for simultaneous listening while using the selected operating channel.





 



1. Press  repeatedly until **DCM** is displayed.
2. Scroll to the desired setting using / (=off). Press .
3. Scroll to the desired transfer code using /. Press .
4. Press **PTT** to confirm.

## Key lock

This function locks buttons  and / to prevent unintentional usage.

1. To activate the key lock press  until the display shows the key symbol.
2. To deactivate the key lock press and hold  until the key symbol disappears.

## Timer

1. Press  until  is displayed.
2. Press  to start the timer.
3. You can display a split time by pressing . Press  again to revert to the ongoing timer.
4. Press  to stop the timer.
5. Press  to reset the timer.
6. Press  until the display returns to the standby mode.

# English

## UK

If you cannot resolve the fault using the faultfinder section, technical support is available on the Premium Rate Number: 0906 302 0114.

Calls cost 50 pence per minute (prices correct at the time of going to press), and is operational between 9AM - 5PM Monday-Friday excluding Bank Holidays. Alternatively, E-mail on: [tech@doro-uk.com](mailto:tech@doro-uk.com)

You can contact us in writing: Consumer Support Group, Doro UK Ltd., 22 Walkers Road, North Moons Moat, Redditch, Worcestershire, B98 9HE, (regarding any Spares or Technical query), or

Telephoning (Spares only): 01527 584377

Web site: [www.doro-uk.com](http://www.doro-uk.com)

## Guarantee

This product is guaranteed for a period of 12 months from the date of purchase. Proof of purchase is required for any service or support required during the guarantee period. This guarantee shall not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, not reasonably maintained or any other circumstances on the purchaser's part. Furthermore, this guarantee shall not apply to a fault caused by a thunderstorm or any other voltage fluctuations.

This guarantee does not in any way affect your statutory rights. (As a matter of precaution, we recommend disconnecting the telephone during a thunderstorm.)

## Australia and New Zealand

### AUSTRALIA

DORO Australia Pty Ltd

PO Box 6760

Baulkham Hills BC NSW 2153

Australia

Consumer Support

Ph: Ph: 1300 885 023

Fax: (02) 8853-8489

Email: [support@doro.com.au](mailto:support@doro.com.au)

Web site: [www.doro.com.au](http://www.doro.com.au)

### NEW ZEALAND

Atlas Gentech (NZ) Limited

Private Bag 14927

Panmure

Auckland

New Zealand

Consumer Support

Ph: 0900-500-25 (Toll Call)

Fax: (09) 574-2722

Email: [support@atlasgentech.co.nz](mailto:support@atlasgentech.co.nz)

The product complies with AS/NZS 4365.  N13 Z109

## Operating Channels and Frequencies (AU/NZ only)

Channel	MHz	Channel	MHz	Channel	MHz
1 *	476.425	15.....	476.775	29.....	477.125
2 *	476.450	16.....	476.800	30.....	477.150
3 *	476.475	17.....	476.825	31 *	477.175
4 *	476.500	18.....	476.850	32 *	477.200
5 **	476.525	19.....	476.875	33 *	477.225
6 *	476.550	20.....	476.900	34 *	477.250
7 *	476.575	21.....	476.925	35 **	477.275
8 *	476.600	22 ! .....	476.950	36 *	477.300
9.....	476.625	23 !.....	476.975	37 *	477.325
10.....	476.650	24.....	477.000	38 *	477.350
11.....	476.675	25.....	477.025	39.....	477.375
12.....	476.700	26.....	477.050	40.....	477.400
13.....	476.725	27.....	477.075		
14.....	476.750	28.....	477.100		

\* These channels are the repeater access channels (**du** mode).

\*\* Designated emergency channels.

! Speech telephony is not permitted on these channels.



# DECLARATION OF CONFORMITY

WE DORO AB  
Of Skiffervägen 80  
SE-224 78 Lund  
Sweden

As the EU/EES/EC/EEA Authorised representative declare under our sole responsibility that the product

Model: Doro bm35  
Description: 2-Way Radio

IS IN CONFORMITY WITH DIRECTIVE: 1999/5/EC

Authorised by:

Signed 

Name (printed): Per Carlenhag  
Position in company: Quality Manager  
Date of issue: 8 November 2004

Copies of this document will be held on file for a period of 10 years after the last production.

Supplier: DORO AB  
Skiffervägen 80  
SE-224 78 Lund  
Sweden



Product: Doro bm35

This product is in conformity with the essential requirements of the following specifications:

Radio - EN 300 296-2  
EMC - EN 301 489-1, EN 301 489-5  
Safety - EN 60065

This product is intended for use only within the following countries: United Kingdom, France, Sweden, Denmark, Norway, Turkey, Poland and Finland.







English

Version 1.0