


Disney: ELECTRONICS

User's Guide

SMOOTHIE MAKER



QUICK REFERENCE

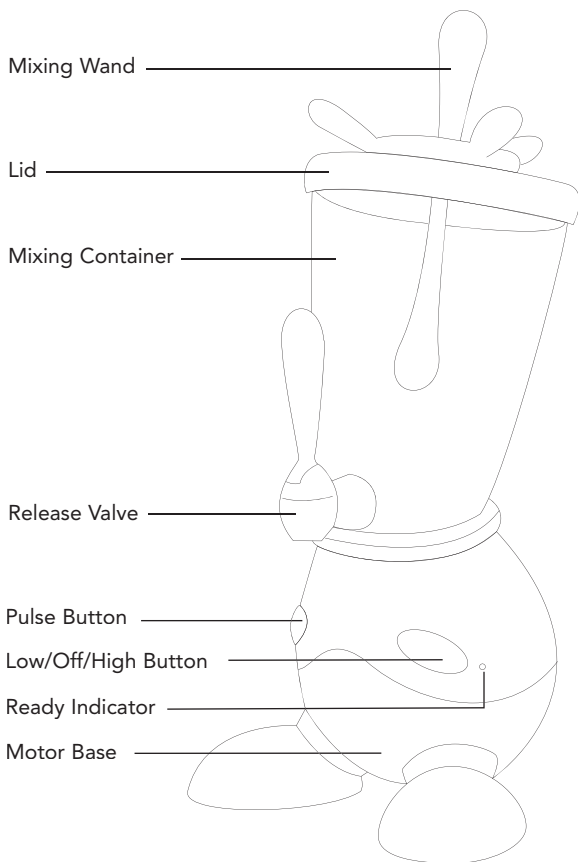

IMPORTANT SAFEGUARDS

WARNING: This Smoothie Maker is not a toy. Close adult supervision is necessary when used by or near children. Please do not leave this unit unattended with children.

When using electrical appliances, basic safety precautions should always be followed including:

- Read all instructions before using.
- To protect against electrical shock, do not put cord, plugs, or the motor assembly in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or if the appliance is dropped or damaged in any manner. If you experience any problem with your machine, unplug it immediately and call Back to Basics™ at 1.800.688.1989.
- The use of accessory attachments not recommended or sold by Back To Basics Products, Inc. may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter.
- Do not let the cord come into contact with hot surfaces, including a stove.
- Do not place on or near a hot gas or electrical burner or in a heated oven.
- Turn off the machine before removing the mixing container from the base and before placing the mixing container on the base.

IMPORTANT SAFEGUARDS

- Do not use appliance for other than intended use.
- Do not run motor without mixing container properly attached to motor base or when mixing container is empty.
- Keep hands and utensils (other than included mixing wand) out of container while blending to reduce risk of severe injury to persons or damage to the machine.
- Blades are sharp, handle carefully.
- Always operate this appliance with the lid in place.
- Do not blend excessively hot liquids. Never pour boiling water into the mixing container.
- Be sure to turn switch to off position after each use.
- To disconnect, grip plug and pull from wall outlet. Never pull on cord to disconnect.
- Never leave the house while the appliance is on.
- A short cord set is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- Extension cords may be used if care is exercised in their use. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop where it can be tripped over.
- After running motor continuously for three minutes, wait at least five minutes before running the motor again.
- This appliance has a polarized plug (one blade is wider than the other). To reduce risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

IMPORTANT SAFEGUARDS

IMPORTANT

This unit has been designed with a special safety switch.
Please note:

1. The unit will not operate without the mixing container properly locked onto the motor base and the lid properly assembled to the mixing container.
2. When the lid is properly assembled to the mixing container, the white indicator light marked 'Ready' (to the right of the low-off-high button) will automatically light up. If the light will not turn on, or if the light turns off during the mixing cycle, simply press the lid down firmly onto the mixing container until the light turns on.

SAVE THESE INSTRUCTIONS.

INTENDED FOR HOUSEHOLD USE ONLY.

CARE & CLEANING

Before using the first time and after each use, be sure to thoroughly wash the mixing container, valve, lid, and mixing wand. To prolong the life of your Smoothie Maker, do not wash parts in the dishwasher. Open the container valve while washing to rinse out the valve. Unscrew and disassemble valve for cleaning after each use.


If you experience any problem with your machine, unplug it immediately from the electrical outlet, then contact Back to Basics™ at 1.800.688-1989.

CLEANING

CLEANING VALVE

To disassemble valve for cleaning:

1. Remove the valve from the container by unscrewing the entire valve counter-clockwise.
2. Remove the Cap from the Valve Body by unscrewing it counter-clockwise.
3. Squeeze Cap and Stopper together and slide the Lever off the Stopper Pin.
4. Remove the Spring.
5. Remove the Stopper and Stopper Pin by pulling the rubber rim of the Stopper. The Stopper and Pin are tightly fit and need not be separated.
6. Clean all parts in warm soapy water, dry and reassemble in the order shown.

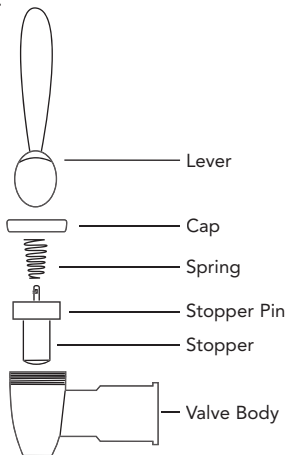

OPERATION

Smoothies Made Easy!

The Smoothie Maker mixing container is conveniently marked to create perfect smoothies. To make a frozen blend of your favorite healthy foods, follow these simple steps:

LOCK MIXING CONTAINER TO BASE

To assemble the mixing container to the motor base, line up the release valve with the arrow on the motor base that says "align valve". Next, rotate the container clockwise until release valve points to the front of the machine. (Note: unit will not operate without the mixing container locked onto the motor base and the lid properly placed on the mixing container.)

ADD LIQUIDS

Add any combination of liquid ingredients up to the LIQUIDS mark under SERVES 2. Liquids include any soft ingredients such as fruit, milk, fruit juice, herbal supplements, or yogurt in any combination you think would be tasty.

We are, of course, partial to the Back To Basics® smoothie mixes, which quickly and easily make three delicious 8-ounce smoothies.

ADD ICE

Add ice or frozen ingredients until the total level reaches the FROZEN STUFF line on the side of the mixing container. Frozen ingredients include ice, frozen fruit, frozen yogurt, ice cream, etc.

PRESS LID ONTO MIXING CONTAINER

Place lid on mixing container and firmly press into place. When the lid is properly assembled to the container, the white indicator light marked "ready" (to the right of the low-off-high switch) will light up. (Note: the smoothie maker will

OPERATION (CONTINUED)

not operate if the lid is not properly attached to the mixing container.)

SMOOTH IT

With the lid on and the mixing wand set in the hole in the lid, move the switch to LOW to get things started. After 30 seconds, go ahead and move the switch to HIGH. Continue until smooth. Turn the mixing wand counter-clockwise for best mixing results.

SERVE IT

To serve the smoothie, move the switch to LOW, place a cup under the release valve, and pull the release valve lever forward. Stir the smoothie with the mixing wand while dispensing thick smoothies. As the smoothie level reaches the bottom of the mixing container, a thick mix may stop dispensing. Add a few tablespoons of liquid to increase the flow. When the mixing container is empty, shut off the machine and enjoy.

You can continue making smoothies one after another, but make sure to give your smoothie maker a 5 minute rest after every 3 minute run. When you are finished, be sure to wash the container, lid, and mixing wand.

THICKER SMOOTHIE

To make a thicker smoothie, add more frozen ingredients.

THINNER SMOOTHIE

To make a thinner smoothie, add more liquid ingredients.

WARRANTY

Congratulations! We hope you enjoy the hours of healthy, fun, and delicious smoothies that you can make with the Disney® Smoothie Maker. We have designed the Smoothie Maker with you in mind. You will find this unique machine not only easy to use, but fun for the whole family.

Your Disney® Smoothie Maker is warranted by Back to Basics™ for one year from the date of purchase to be free from mechanical defects in material and workmanship. The manufacturer's obligation is limited to replacing or repairing such defects during the warranty period at no charge, providing the product is sent prepaid to:

Back to Basics Products, Inc.
675 West 14600 South
Bluffdale, UT 84065

After repairing or replacing the product, Back to Basics™ will pay for return postage. This warranty does not cover damage from misuse of this product. If service is required, do not return the product to the store. Do one of the following:

- Send a note to us explaining the problem. Include your name, address, and phone number.
- For faster service, call 1.801.571.7349.
- Most service problems are resolved by replacing a broken or defective part. If this is not the case, we will give you instructions for returning the unit.

Please complete and return this product warranty card or register your product online at: backtobasicsproducts.com within 10 days of purchase.

THIS INFORMATION IS FOR INTERNAL USE ONLY

☐ Mr. ☐ Mrs. ☐ Ms. ☐ Miss Model: Disney® Smoothie Maker

1. Name _____

2. Address _____

City _____ State _____ Zip Code _____

3. E-Mail Address _____

4. Age: 18-24 ☐ 25-34 ☐ 35-49 ☐ 50+ ☐

5. Marital Status: ☐ Married ☐ Single

6. Number of Children in the House : 12 yrs and under _____ 13-18 yrs _____

7. Income: ☐ Below \$25,000 ☐ \$25,000-\$50,000 ☐ \$50,000-\$75,000 ☐ \$75,000+

8. Where was this product purchased? _____

9. How did you become aware of this product?

<input type="checkbox"/> Gift	<input type="checkbox"/> Recommendation from friend
<input type="checkbox"/> TV advertisement	<input type="checkbox"/> Saw product in store
<input type="checkbox"/> Print Ad	<input type="checkbox"/> TV shopping program
<input type="checkbox"/> Magazine article	<input type="checkbox"/> Internet
	<input type="checkbox"/> Other _____

10. Check the two most important reasons influencing your purchasing of this Back to Basics product:

<input type="checkbox"/> Gift	<input type="checkbox"/> Recommended by sales person
<input type="checkbox"/> Special offer	<input type="checkbox"/> Recommended by friend
<input type="checkbox"/> Product appearance	<input type="checkbox"/> Prior experience with Back to Basics
<input type="checkbox"/> Ease of operation	<input type="checkbox"/> Back to Basics brand reputation
<input type="checkbox"/> Quality/durability	<input type="checkbox"/> Value for price
<input type="checkbox"/> Product features	<input type="checkbox"/> Product packaging
	<input type="checkbox"/> Other _____

11. Why did you purchase this product?

☐ Purchased as a replacement/upgrade of broken product
☐ Purchased as secondary product in addition to product(s) already owned
☐ First product(s) ever owned
☐ Received as a gift

12. Would you be interested in being contacted via e-mail for promotions, recipes, new product information, etc.?

☐ YES ☐ NO

COMMENT _____

Fold here and mail registration card within 10 days of purchase to validate warranty.

Place
Stamp
Here

BACK TO BASICS PRODUCTS, INC.
675 West 14600 South
Bluffdale, UT 84065 USA



Back to Things that Work™

For additional operating assistance, please visit our website at
www.backtobasicsproducts.com or contact customer service at 1.801.571.7349

Distributed by Back to Basics Products, Inc., Bluffdale UT
Disney Elements © Disney 2004.

© 2004 Back to Basics Products, Inc., Bluffdale UT 84065
All right reserved