

REMINGTON®

Rotary Shaver



PR1250

PR1270

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery



Visit www.productregister.co.uk/remington
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington®.
- 3 Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- 4 An appliance should never be left unattended when plugged into a power outlet, except when charging.
- 5 Keep the power plug and cord away from heated surfaces.
- 6 Make sure the power plug and cord do not get wet.
- 7 Do not plug or unplug the appliance with wet hands.
- 8 Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- 9 Do not twist or kink the cable, or wrap it round the appliance.
- 10 Store the product at a temperature between 15°C and 35°C.
- 11 Do not use attachments other than those we supply.
- 12 The appliance, including its cord, must not be used, played with, cleaned or maintained by persons under eight years old and should at all times be kept out of their reach.
- 13 Do not immerse the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors.
- 14 Never operate this shaver if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of this shaver is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. It cannot be repaired.
- 15 For use on facial hair only. Not intended for shaving the hair on your head.
- 16 For household use only.



KEY FEATURES

- | | |
|-------------------------------------|--|
| 1 On/off switch | 2 Pivoting head and cutter assembly |
| 3 Individual flexing heads | 4 Hairpocket |
| 5 Charging indicator light (PR1250) | 6 Low/Full/Charging indicator light (PR1270) |
| 7 Detail trimmer | 8 Trimmer release button |
| 9 Power port | 10 Adaptor |
| 11 Cleaning brush (not shown) | 12 Head guard |

GETTING STARTED

It is recommended that you use your new shaver daily for up to four weeks to allow time for your beard and skin to become accustomed to the new shaving system.


To confirm the model number of your shaver, please refer to the packaging or to the open the trimmer where the model is printed in the upper right corner of the rating information.

CHARGING YOUR SHAVER

- 1 Ensure the appliance is turned off.
- 2 Connect the shaver to the adaptor and then to the mains.
- 3 Press the power switch to turn the product on.
- 4 Charge for at least 24 hours when using for the first time.
- 5 Allow 4 hours for a full charge generally.
- 6 When charging, the green indicator light will show (PR1250) or slowly flash (PR1270). When fully charged, the green indicator light will turn off (PR1250) or the green indicator light will show for 5 minutes and then turn off (PR1270).
- 7 To preserve the life of your batteries, let them run out every 6 months then recharge for 24 hours.
- 8 The shaver automatically adjusts to a mains voltage between 100V and 240V.

INSTRUCTIONS FOR USE

SHAVING

-  Note: PR1250 can only be used cordless. PR1270 can be used either with the cord attached or cordless.
- 1 Make sure your shaver is properly charged.
 - 2 Switch the shaver on.
 - 3 Stretch the skin with your free hand so the hairs stand upright.
 - 4 Only apply light pressure on the shaving head while shaving (pressing too hard can damage the heads and make them vulnerable to breakage).
 - 5 Use short, circular strokes.

TRIMMING

- 6 Slide the trimmer button to release the detail trimmer.
- 7 Hold the trimmer at a right angle to your skin.

 
 
 
 
 
 
 
 
 
 
- 8 Place the trimmer at desired trim line for a quick, easy, professional trim.
- 9 To retract the trimmer, push down until it locks into position.

➡ **Tips for best results**

- Ensure your skin is dry. Always hold the shaver at right angles to the skin so that all three heads are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid damage to the rotary heads.

👁 CARE FOR YOUR SHAVER


Care for your appliance to ensure a long lasting performance. We recommend you clean your product after each use. The easiest and most hygienic way to clean the appliance is by rinsing the appliance head after use with warm water.

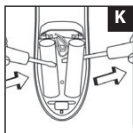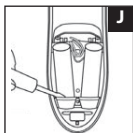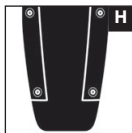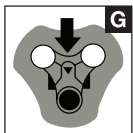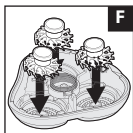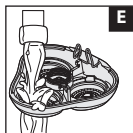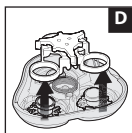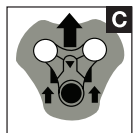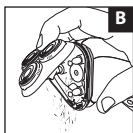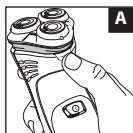

*** CLEANING CAUTIONS**

- Ensure the appliance is switched off and unplugged from the mains before cleaning.
- Open the shaver head by pressing the release button on the front of the shaver (Fig. A) and flipping open the head away from the body of the shaver (Fig. B).
- Hold the cutter assembly so that the blue cutter is facing towards you. Slide the inner cutter carrier away from the blue cutter to release it from the assembly (Fig. C).
- Pull the inner cutter carrier away from the inner cutters (Fig. D).
- Thoroughly brush hairs from the inner and outer cutters. Rinse out remaining debris (Fig. E).
- Place the inner cutter carrier back into position and lock into place (Fig. F-G).
- Align the spring hinge into the slot at the back of the hair pocket and press into place. Snap the head assembly closed.

*** WARNING:**

- Detach the hand-held part from the supply cord before cleaning in water.
-  Shaver heads suitable for cleaning under an open water tap.

*** CAUTION**

- Do not submerge in water as damage will occur.
- Shaver heads can be rinsed with water. The water temperature should not exceed 70 degrees. Unplug the shaver before cleaning with water.
- Keep the adaptor and cable dry.

*** CLEANING TRIMMER**

- Lubricate the teeth of the trimmer every six months with a drop of sewing machine oil.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- * DANGER:** Once the shaver has been dismantled for disposal, do not attempt to reassemble and/or use.
- Unplug the shaver.
- Remove the head from the shaver (Press release button and pull head straight away from the shaver body).
- Using a small screwdriver, pry front cover from the shaver.
- Remove the 4 screws located on the front of the shaver. (Fig. H)

- Remove rear cover from inner housing to expose batteries (Fig. I)
- Pry batteries free from circuit board and cut wires (Fig. J – K)
- Dispose of battery properly.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



For further information on recycling see www.remington-europe.com

► SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Defects from repair by an unauthorized dealer are not covered.

Consumables are excluded.


Your statutory rights are not affected.


If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➔ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

Model No. PR1250/PR1270

13/UK/ PR1250/PR1270 T22-0001786 Version 09/13

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2013 SBI