MOVIE CUBE F400

User Manual



TABLE OF CONTENTS

SAFETY WARNINGS	3
PREFACE	4
1. Main Features	4
Back panel	4
2. Remote Control	5
3. Installation Guide	6
DVB-T	6
1. Channel Menu	8
2. EPG Function	9
3. Channel Settings	0
4. Program Manager	0
5. Timeshifting	1
6. EPG Manager12	2
7. PVR Manager	2
MOVIE PLAYER	5
MIRACAST	6
SAMBA	8
1. Samba server	9
2. Samba client	9
FIRMWARE UPGRADE	1

CAUTIONS:		
4	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to "dangerous voltage" and to prevent from a risk of electric shock.	Warning: To reduce the risk of electric shock, don't open the cabinet. Refer servicing to qualified personnel only.	The exclamation point within an equilateral triangle is intended to alert the user to important operating and maintenance (servicing).
flower vase, washbowls, kitchen sink	ere contact with or immersion in wate <s, etc.<="" laundry="" pools,="" swimming="" td="" tubs,=""><td></td></s,>	
· · · · ·	lamp stand on the cabinet; otherwise	
	ected to a power supply only of the ty	· · -
	t. If you are not sure of the type of po	wer supply (for example, 120 or 230
V) to your home, consult your local of		
	les. Do not open the cabinet or touch	any parts in the inner mechanism.
Consult your local dealer for technic	al service if the opening is required.	
Note: To ensure proper use of this p	roduct, please read this User manual	carefully and retain for further
reference.		
Note: This product installs diodes. Do	o not open the cabinet to avoid the ur	nit direct exposure to radiation.
Unit Cleaning: After the unit power i soft cloth lightly moistened with a m	s turned off, you can clean the cabine ild detergent solution.	t, panel and remote control with a
Attachments: Never add any attachn	nents and/or equipment without the	manufacturer consent; as such
additions may result in the risk of fire	e, electric shock, or other personal inj	ury.
Power-Cord Protection: Place the po	ower-supply cord out of the way, wher	e it will not be walked on. Please
take special attentions to cords at pl	ugs, convenience receptacles, and the	e point where they exit from the
unit.		
Object and Liquid Entry: Never put o	bjects of any kind into this F400 throu	igh openings, as they may touch
	ut parts that could result in a fire or el	
on the F400.		
Parts Replacement: When the unit p	arts need to be replaced, user should	make sure the service technician
use the replacement parts specified	by the manufacturer or having the same	me characteristics as the original
part. Unauthorized replacement may	y put the unit In the risk of fire, electri	c shock or other hazards.
	nces and repairs are done, user is requ	
-	ety check to ensure the machine is In	-
	abinet are provided for ventilation to	
	to be blocked by placing the F400 on a	
nor should it be placed over a radiat	–	

PREFACE

Thank you for purchasing the new F400!

Please read this manual thoroughly before any use and keep it well for future reference. It will help you keep abreast with many of the exciting features and contains important safe measurements and correct operational information, so please read all the information carefully in order to avoid any damage.

1. MAIN FEATURES

DVB-T TV Receiver

Supports the reception of Digital Video Broadcasting Terrestrial (DVB-T) and the Electronic Program Guide (EPG)

Media-player

- Video formats: MKV, MOV, MPG, AVI, VOB
- Audio formats: AAC, MP3, WMA
- Photo formats: JPG, BMP, GIF

PVR

- Supports 3 recording modes:
- EPG Reservation Recording
- Manual Reservation Recording
- One Button Recording

BACK PANEL



1. RF signal input

- 2. Optical Jack
- 3. RJ45 connector
- 4. HDMI
- 5. Power input

POWER	Standby on/off
тν	Switch to DVB-T
FR	Press to fast rewind the current
	playback. Press repeatedly to
	select speeds
FF	Press to fast forward the current
	playback. Press repeatedly to select
	speeds.
STOP	Press to stop playback or recording
PLAY/PAUSE	Press to begin/pause playback
REC	Record the current program
MENU	Display channel list or task bar on
	video player.
HOME	Press to enter the home screen
BACK	Press to return to the previous
	screen while navigating menus.
Navigational	Press the arrow buttons to navigate
buttons	on different menus, and the OK
	button to confirm. UP/DOWN for
	next/previous channel.
V-/V+	Decrease or increase the volume.
Pointer	Select to enable mouse pointer
MUTE	Disable Audio output
P+/P-	Select next/previous channel.
RED	Teletext function key
GREEN	Manual Recording Menu
YELLOW	Audio selection
BLUE	Channel info

3. INSTALLATION GUIDE

(1) Press "TV" and "OK" button at the same time for 3 seconds to pair the remote control.

(2) Use the navigational buttons to start installation and configure language, screen size, network connection.

As soon as the setup is completed, start enjoying your TV BOX F400 watching your favorite DVB-T channels or using any other application from the main menu.

13 :49 TUE, FEBRUARY 24	DVBPlayer VouTube Play Store Movie Cube	Google MoviePlayer Applications Settings	

DVB-T

Open "DVBplayer" application to configure DVB-T. Select "auto" and press "OK".

No. N	ame	Туре	Hide	Lock	Signal Quality
mov	Settings Auto Manual cancel 	TUE, JANUARY 20	ok Play S Movie (3	

6

Select your country (or Europe if not in the list) then press "OK".

NB: If no channel is found during the scan, run it once again and uncheck "fast scan" option" to perform a full scan.



No.	Name	Туре	Hide	Lock	Signal Quality
22	LCI	TV			aul
23	NRJ12	TV	<u>~</u>	~	anti
24	TF1	TV	<u>~</u>		antl
25	France 3	TV	<u>~</u>		antl
26	LCP	TV		VBPlayer Google	anti
27	France Ô	TV		i 📄 🛛 🎬	anti
28	France 5	ТV / (YouTube MoviePlaye	anti
29	France 2) 🖌		anti
30	Chérie 25	TUE, JANUARY 20	<u>~</u>		anti
31	L'Equipe 21	TV	e e e e e e e e e e e e e e e e e e e	Play Store Application	i and
32	HD1	TV	<u>~</u>	B 🛛 🖂	anti
33	RMC DECOUVERTE	TV	- M	lovie Cube	anti
34	NUMERO 23	TV		Settings	anti
35	6ter	TV	1	<u>~</u>	anti
Q 🐲	Press Back to close this n	nenu			

Press "back" button once finished to display DVB-T.

1. CHANNEL MENU

Press the right arrow on navigation buttons to display channel taskbar. Press "OK" to display "Channel List" (or press "Menu" button).



•		TV	<u> </u>
	2	France 2 HD	
	3	France 3	
	4	CANAL+	\$
	5	France 5	
	6	M6HD	
	7	ARTE HD	
	8	D8	
	9	W9	

2. EPG FUNCTION

Select "EPG" from channel taskbar to display EPG information.

1 TF1 2015-0) 15:52: 12:00		SA). HC	ensonge[D. Avec Males			Lycéenne orphe	line, Madison est ba 15:00	llottée d'i	nternat e 16:00
01-20 Tuesday		12.00			13.00		14.00	L'île	du mensonge		4 mar
01-21 Wednesday	le m	Le jouri	nal	1			Clem. "C'e	est la rentrée	i		4 mar
01-22 Thursday											
01-23 Friday	Γ										
01-24 Saturday											
01-25 Sunday											
01-26 Monday											
			Oł	KBoo	okPlay/Book	Record RE	D KEYEIT I	Details			

From that menu you can also book a recording or channel view by pressing "OK" on the selected program.

1 TF1 2015-0	HD 2-24 15 13:0	:42: ^{Camp}	nping paradis. "Ca. [,] ing paradis. "Ca swingue 14:00		D. Avec L. Ou	ırnac, Princess Erika. Tom f 16:00	ait appel 17:00
02-24 Tuesday	13.0				a	4 mariages pour 1 l	Bienv
02-25 Wednesday	P		Play	۲		4 mariages pour 1 l	Bienv
02-26 Thursday			Record				
02-27 Friday			Cancel	Ok			
02-28 Saturday							
03-01 Sunday							
03-02 Monday							
		()KBookPlay/BookRec	ord RED KEYEIT Deta	ails		

Press "back" button to Exit.

3. CHANNEL SETTINGS

Select "Channel settings" from channel taskbar to configure DVB-T options:

- Enable subtitle
- Set Picture size
- Select audio mode
- Run Channel scan
- Reset DVB-T default settings
- Set time from DVB-T
- Select storage device for recording and timeshifting
- Define timeshift options
- Set parental rating age

SettingsTSubtitleOffImage: SubtitleOffImage: Picture SizeAutoImage: Picture SizeAudio TrackStereoImage: Audio TrackStereoImage: Picture SizeStereoImage: Picture SizeImageImage: Picture SizeImage				
T Subtitle Off Image: Subtitle Off Image: Picture Size Auto Image: Auto Track Stereo Image: Other Auto Track Stereo Image: Channel Search Stereo Image: Factory data reset Factory data reset Image: Set password Image: Off Image: Select storage device Select storage device Image: Timeshifting setting Image: Off				
 Picture Size Auto Audio Track Stereo Channel Search Factory data reset Set password Update system time Off Select storage device Timeshifting setting 		Settings		
 Audio Track Stereo Channel Search Factory data reset Set password Update system time Select storage device Timeshifting setting 	Τ	Subtitle	Off	
✓ Channel Search ☑ Factory data reset ✓ Set password ☑ Update system time ☑ Select storage device ﷺ Timeshifting setting		Picture Size	Auto	
 Factory data reset Set password Update system time Off Select storage device Timeshifting setting 	()	Audio Track	Stereo	
▶ Set password ♥ Update system time ●Off ★ Select storage device ★ Timeshifting setting ●	م	Channel Search		
⊕ Update system time ● Off ≴ Select storage device ☆ Timeshifting setting	\$	Factory data reset		
\$ Select storage device ** Timeshifting setting	P	Set password		
🗱 Timeshifting setting	Œ	Update system time	Off	
		Select storage device		
Parental rating age	:);;;	Timeshifting setting	•	
	~	Parental rating age	All	

4. PROGRAM MANAGER

Select "Program manager" from channel taskbar to manage channel options:

- Use the red button on the remote to create a new group
- The green button to select a group
- The yellow button to lock/unlock channel
- The blue button to delete a group

D8					
TV	Movie	Sports	News		
No.					
45	PLANETE+	\$	•		
42	CANAL+ SPORT	\$	▼		
43	CANAL+ CINEMA	\$	▼		
4	CANAL+	\$	•		
16	i>TELE		▼		
14	France 4		▼		
8	D8		▼		
18	Gulli		•		
17	D17		▼		
15	BFM TV		▼		
1 RED KEV, add par			Ylock/unlock program		delete group
HED KEYadd her	w group GREEN KEYgroup		TIOCK/UNIOCK program	BEUE KEY	uelete group

A long press on "OK" button will display advanced channel options.

D8						
TV		Movie	Sports	News		
No. 45	PLANE	Edit			Hide	Favorite
42	CANAL					
43	CANAL	Move				
4	CANAL					
16		Favorite				
14	France	Hide				
8	D8					
18	Gulli	Radio				
17	D17			•		
15	BFM TV			▼		
						delete group
			p program – YEE LOW K	EYlock/unlock program	n BLUE KEY-	

5. TIMESHIFTING

Select "Timeshifting" from channel taskbar to pause live program:

- Select the play/pause option to continue/pause playback
- The FR/FF option to fast rewind/forward on the channel playback
- The "..." option to hide taskbar

				(
00:00:00	*	▶	• • •	00:00:00	

Timeshift function can be activated by pressing Play/Pause button on the remote control. Press "stop" or "back" button to return to the live channel program.

6. EPG MANAGER

NO.	Name	Time	Enable
1	Bienvenue chez nous	02-24 17:00 ~ 02-24 18:00	✓
10.00 11.00 1	manages pour riune de		

Select "EPG Manager" from channel taskbar to manage scheduled channel view

7. PVR MANAGER

Select "PVR Manager" from channel taskbar to schedule or playback a recording

2015-02-24 15:47:08				
ALL	RECORDING	RECORDED	SCHEDULED	
Channel			File Name	
TF1 HD I	Le juste prix 02-24 18	00 ~ 02-24 18:55	/	
	Press RED key t	o create new record		

Scheduled recording

2015-02-24 17:26:13 ALL RECORDING RECORDED SCHEDULED Channe Program 02-24 18:00 ~ 02-24 18:55 TF1 HD Le juste p 1 France 2 HD France 3 CANAL+ \$ France 5 M6HD ARTE HD D8 W9 Press RED key to create new record

Press on the red button to display the channel list.

Press again on the red button to create a new record.

	PVR Settings							D
Cha		You can	set sta	rt time				
Т		23		2014	14			
		24	Feb	2015	15	: 47		
		25	Mar	2016	16	48		
		Duration	Time		Min			
		Cancel				C)k	
		Pr	ess RED l	key to creat	e new reco	ord		

<u>Playback recording</u>

Select the recording you want to play

		2015-02-2	25 11:19:58		
ALL	REC	ORDING	RECORDED		SCHEDULED
Channel					File Name
L'Equipe 21		01-09 10:3	2 ~ 01-09 11:02	da1/DV	BRecordFiles/REC_20140
D17	Top Club	01-10 14:3	5 ~ 01-10 14:56	/storag	e/external_storage/sda1/
TF1 HD		02-04 15:1	7 ~ 02-04 15:32	/storag	e/external_storage/sda1/
D8		05-14 15:2	3 ~ 05-14 15:25	/storag	e/external_storage/sda1/
L'Equipe 21		05-15 08:0	5 ~ 05-15 08:06	/storag	e/external_storage/sda1/
TF1 HD		05-19 13:3	7 ~ 05-19 13:38	/storag	e/external_storage/sda1/
France 2 HD		06-06 09:3	1 ~ 06-06 09:46	/storag	e/external_storage/sda1/
France 2 HD		06-06 09:4	9 ~ 06-06 10:04	/storag	e/external_storage/sda1/
France 2 HD		06-06 10:4	1 ~ 06-06 11:11	/storag	e/external_storage/sda1/
TF1 HD		06-10 12:3	7 ~ 06-10 12:42	/storag	e/external_storage/sda1/
TF1 HD	test	12-10 16:4	5 ~ 12-10 16:46	/storag	e/external_storage/sda1/
	P	ress RED key to	create new record		

Press "OK" to play the video

NB: Videos can also be played from Filebrowser application by selecting USB device, DVBRecordfiles folder and the corresponding ".amrec" file

		2015-02-2	25 11:20:17		
ALL	RECO	RDING	RECORDED		SCHEDULED
Channel	Program		Time		File Name
L'Equipe 21		01-09 10:3	2 ~ 01-09 11:02	/DVBR	ecordFiles/REC_20140109_
D17	Top Club	01-10 14:3	5 ~ 01-10 14:56	/storag	e/external_storage/sda1/
TF1 HD					e/external_storage/sda1/
D8	Play				e/external_storage/sda1/
L'Equipe 21	Delete				e/external_storage/sda1/
TF1 HD					/external_storage/sda1/
France 2 HD	Car	ncel	Ok		/external_storage/sda1/
France 2 HD		06-06 09:4	9 ~ 06-06 10:04	/storag	e/external_storage/sda1/
France 2 HD		06-06 10:4	1 ~ 06-06 11:11	/storag	e/external_storage/sda1/
TF1 HD		06-10 12:3	7 ~ 06-10 12:42	/storag	e/external_storage/sda1/
TF1 HD	test	12-10 16:4	5 ~ 12-10 16:46	/storag	je/external_storage/sda1/
	Pr	ess RED key to	create new record		

MOVIE PLAYER

Select "MoviePlayer" application on the main menu to play your videos. Press "OK" on your USB device





Select the video to play and press "OK".

Use the taskbar to set different options (repeat mode, audio track, subtitle, 3D ...)

00:00:13 -			00:01:04
<u>_</u>			•••



MIRACAST

To use the miracast function, you need to activate first the wi-fi on TV Box settings



Then select "Miracast" application on the applications menu.



Enable the screen mirroring function on your Smartphone or tablet and run once again the "search device" option if not appearing in the device list.

🛜 Miracast			SEARCH DEVICE	RENAME DEVICE	VERSION INFORMATION
	finding peers				
	O Press Back to	cancel			
Devices List :		Discovery Initiated			
Device: Movie Cub	e The TV Box_d2b3				

Use then the screen mirroring function on your Smartphone or tablet to establish connection.



SAMBA

To use the Samba function, select Samba Client or Server application on application menu



1. SAMBA SERVER

This function allows to share the content of the USB device connected the F400 over the local network. Open Samba Server application and turn on samba server.

GENERAL SETTINGS PREFERENCES	
Samba Server	ON
On or Off Samba Server	
Samba Server Status	
Samba Server is running.	
ACCOUNT PREFERENCES	
User Name	
The username allow you to access your Android device	
Password	
Password to supply when connecting to your Android device	
NAME PREFERENCES	
WorkGroup Name	
The name of your WorkGroup	

On that menu, you can also check samba server status, set the user and password and change the workgroup or netbios name.

2. SAMBA CLIENT

This function allows to connect the F400 to share folders on the local network. Open Samba Client application and click on workgroup list to browse your network.



You can also mounted the shared folder manually

🗐 Sa	amba Setting
	WorkGroup List
	Mount over IP
Mount L	ist

You just need to enter the IP address of the PC, the shared folder name and user name/password if protected.

Samba Setting			
WorkGroup List			
Mount over IP	User Login		
Mount List	IP address		
	Folder name		
	User name		
	Password		
	Cancel	Mount	

The shared folder will be displayed in the mount list once connected. It will be shown as USB device on MoviePlayer, FileBrowser applications.

Samba Setting
WorkGroup List
Mount over IP
Mount List
Slide Show on 192.168.1.48

To disconnect the shared folder, select it in the mount list and choose "unmount".

FIRMWARE UPGRADE

You will be automatically prompted when a new firmware update will be available online.

Otherwise you can check for a new update, by using "OTA upgrade" application.

Then follow the steps if a new firmware is available or, close the application if your system is up to date.

OTA Upgrade	
Checking for system update	
Your system is up to date.	

You can also update manually the F400 by using the "upgrade" application.

APPS										
			TV	, O	/	6	8	8	"	
AppInstaller	Browser	Downloads	DVBPlayer	FileBrowser	Flash Player Settings	Gallery	Google	Google Settings	Hangouts	Miracast
=3		E			$\mathbf{\hat{n}}$			sembe	٩٩	5
Movie Cube	MoviePlayer	OTA Upgrade	PicturePlayer	Play Movies & TV	Play Music	Play Store	Samba Client	Samba Server	Settings	Upgrade
YouTube										

Copy the ".ZIP" firmware file to a USB flash drive and plug it to the F400. Then select "Local upgrade" and press "OK" once the file is selected and follow the steps to upgrade.

Upgrade				
🅢 Local Upgrade				
9 Network Upgrade				
	Choose Upgrade Method			