

The ARITECH logo is displayed in a blue, sans-serif font with a stylized arrow pointing to the right.

-----> CS-175-275-575 Series  
-----> LCD User Guide

an **interlogix**  
company

**98/482/EC Declaration**

(Applies to products that have CE mark attached)

This equipment has been approved in accordance with Council Decision 98/482/EC for Pan-European single terminal connection to the public switched telephone network (PSTN). However, due to differences between the individual PSTNs provided in different countries, the approval does not, of itself, give an unconditional assurance of successful operation on every PSTN network termination point.

Aritech is an Interlogix company.

© 2001 Interlogix B.V.

All rights reserved. Interlogix B.V. grants the right to reprint this manual for internal use only.

Interlogix B.V. reserves the right to change information without notice.

## Contents

LCD keypad .....	4	Setting the keypad tone .....	16
Preparing your system .....	6	Setting the system clock .....	17
Turning on your system .....	7	Viewing zone status .....	19
Turning off your system .....	8	Viewing alarm memory .....	20
Turning off your system in case of alarm .....	9	Reading the event log .....	21
Bypassing (excluding) one or more zones.....	10	Adjusting view/brightness of the LCD (text display) .....	22
Life safety functions .....	12	Service messages display .....	23
Resetting fire detectors .....	13	Glossary of terms .....	26
Changing user codes.....	14		
Deleting user codes.....	15		

## LCD keypad


**Power (green):** When lit, the system is connected to the mains power.

**Ready (green):** When lit, the system is ready to be turned on.

**Fire (red):** When lit, the fire zone has been activated.

**LCD display:** Messages.

**Chime:** Press to turn the chime on and off.

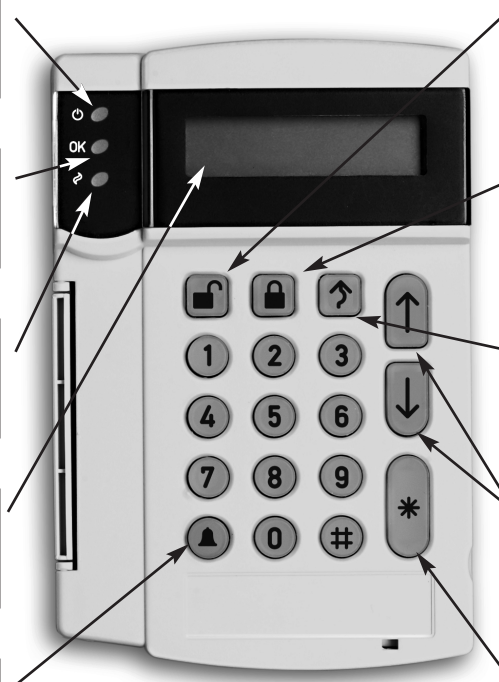

**Stay:** Press to arm perimeter protection when on the premises.


**Away:** Press to arm complete system when leaving the premises.


**Bypass:** Press to bypass (exclude) a zone (or zones) in the event of a zone fault.


**Navigation:** Press to scroll through menu on LCD display.


**Star:** Used to enable certain functions.


## LCD keypad


 Power (green). The power light is on if the system is connected to the mains and if the battery is okay. The power light will flash if the system has a low battery condition or when the battery is not connected. The power light is off if the mains is cut.


 Ready (green). The ready LED is on when the system is ready to arm, and flashes when the system is ready to force arm. If the LED is off, the system cannot be armed, generally because there is a zone fault.

 Fire (red). When the fire LED is lit, a fire zone has been activated. A rapidly flashing fire LED means that there is a problem with the fire zone.

 Stay. This function key part arms your system. Pressing it disarms all interior zones but leaves the perimeter protected.


 Away. Press to arm all zones before leaving.

 Bypass. Press to bypass (exclude) zones.


 Navigation keys. These allow you to scroll through lists and options on the LCD display.

 Chime. Press to turn the chime on and off.

 Hash key. Used to access modules and locations.

 Star. Used to access tasks and enter data.

## Preparing your system

System Not Ready  
For help, press 

LCD Message: Your system is NOT ready to be turned on,  
doors or windows might be open.



User Action: Use the up/down arrow.

X Fault  
Zone X

or

X Bypass  
Zone X

LCD Message: Zone information.



User Action: Press the bypass key if you want to bypass (exclude)  
a zone, so you can arm part of your system.

X Fault Bypass  
Zone X

or

X Okay  
Zone X

LCD Message: Zone information.



User Action: Press #.

System Ready  
Type code to arm

LCD Message: Your system is ready to be turned on.

## Turning on your system

### OPTION 1: Using the function keys (This feature must be programmed by the installer.)

System Ready  
Type code to arm

LCD Message: Your system is ready to be turned on.



.....

User Action: For stay mode, push the stay button,  
for away mode push the away button.

System Armed  
Zone(s) Bypassed

or

System Armed  
All Zones Secure

LCD Message: Your system is either protected  
partially or completely.

### OPTION 2: Typing your user code

System Ready  
Type code to arm

LCD Message: Your system is ready to be turned on.



.....

User Action: Type your user code for arming.

System Armed  
All Zones Secure

LCD Message: Your system is turned on.

## Turning off your system

System Armed  
All Zones Secure

LCD Message: Your system is turned on.



..... User Action: Type your user code to turn off your system.

System Ready  
Type code to arm

LCD Message: Your system is ready to be turned on.



## Turning off your system in case of alarm

ALARM Zone X

LCD Message: An alarm has occurred in zone X.



..... User Action: Type your user code to turn off your system.

X Alarm Mem.  
Zone X

LCD Message: The last alarm is shown on the LCD message for verification.




..... User Action: Press # to leave this LCD message.

System Ready  
Type code to arm

LCD Message: Your system is ready to be turned on.

## Bypassing (excluding) one or more zones

System Not Ready  
For help, press 

LCD Message: Your system is NOT ready to be turned on.



..... User Action: Use the up/down arrow.

1 Okay  
Zone 1

LCD Message: Shows the state of the first zone.



..... User Action: Use the up/down arrow.

2 Okay  
Zone 2

or

2 Bypass  
Zone 2

LCD Message: Zone information.



..... User Action: Press the bypass key to toggle between 'Okay' and 'Bypass'.

2 Bypass  
Zone 2

or

2 Okay  
Zone 2

LCD Message: Zone information.



..... User Action: Press # to exit this menu.



## Bypassing (excluding) one or more zones (continued)

System Ready  
Type code to arm

LCD Message: Your system is ready to be turned on.



..... User Action: Type your user code to turn on the system.

System Armed  
Zone(s) Bypassed

LCD Message: Your system is turned on,  
but zone(s) are bypassed (excluded) and not protected.

## Life safety functions

You must press and hold the keys for 2 seconds to activate these functions!

### FIRE



... **User action:** Press keys 1 and 3 together for two seconds. FIRE. A fire alarm is started and a message is sent to the central station.

### MEDICAL



... **User action:** Press keys 4 and 6 together for two seconds. MEDICAL. A medical alert is sent to the central station.

### PERSONAL ATTACK



... **User action:** Press keys 7 and 9 together for two seconds. A personal attack alert is sent to the central station, and if programmed the sirens can be heard.

## Resetting fire detectors

ALARM  
fire alarm

LCD Message: Alarm message after a fire alarm.



..... User Action: Type your user code to turn the system off.

8 Alarm Mem.  
fire alarm



..... User Action: Press #

System Ready  
Type code to arm

LCD Message: Your system is turned off, and the fire detector has been activated.



..... User Action: Press \* 7 in order to reset the fire alarm  
The smoke detector has been reset. This may take 10 seconds.  
The fire LED (red) will turn off.

System Ready  
Type code to arm

LCD Message: Your system is turned off, and the fire detector has been reset. The fire LED goes off if all detectors have been reset.

## Changing user codes

System Ready  
Type code to arm

LCD Message: The system is ready to be turned on.



..... User Action: Press \* 5.

Please Enter  
Your Code

LCD Message: The system asks for a master user code.



..... User Action: Enter your master user code.

Enter 2 digit ID

LCD Message: Enter the two digit ID for the new or existing user.



..... User Action: Enter the user ID, for example 18,  
or # to cancel operation.

Enter new code  
18 \* \* \* \*

LCD Message: Enter the new code for this user.



..... User Action: Type the new user code, for example, 6543.

## Deleting user codes

System Ready  
Type code to arm

LCD Message: The system is ready to be turned on.



..... User Action: Press \* 5.

Please Enter  
Your Code

LCD Message: The system asks for a master user code.



..... User Action: Enter your master user code.

Enter 2 digit ID

LCD Message: Enter the two digit ID for the new or existing user.



..... User Action: Enter the user ID, for example 18,  
or # to cancel operation.



..... User Action: Press  four times to delete the current user.

## Setting the keypad tone

System Ready  
Type code to arm

LCD Message: The system is ready for arming.



..... User Action: Press \* 0.

Raise tone  
Lower tone

LCD Message: You will hear the current tone.



..... User Action: Use up/down arrow to adjust the keypad tone.



..... User Action: Use # to accept the tone you like.



## Setting the system clock

System Ready  
Type code to arm

LCD Message: The system is ready to be turned on.



..... User Action: Press \* 97.

Please Enter  
Your Code

LCD Message: The system asks for a user code.



..... User Action: Enter your user code.



## Setting the system clock (continued)

Wed 16:09  
29 November 01

**LCD Message:** Current date and time are shown.



..... **User Action:** Use the up/down arrow to change the hour, then minutes, day of the week, day of the month, month and year.



..... **User Action:** After you have the correct value, press \* to move to the next item in the list.

System Ready  
Type code to arm

**LCD Message:** After selecting the year, the system will bring you back to the first step.

## Viewing zone status

System Ready  
Type code to arm

LCD Message: The system is ready to be turned on.



..... User Action: Press \* and up arrow.

1 Okay  
Living room

LCD Message: The first zone is shown.



..... User Action: Use either up or down arrow to scroll.

2 Okay  
Bed room

LCD Message: The second zone is shown.



..... User Action: Use either up or down arrow to scroll.

3 Okay  
Front entrance

LCD Message: The third zone is shown.



..... User Action: Press # to exit this menu

## Viewing alarm memory

System Ready  
Type code to arm

LCD Message: The system is ready to be turned on.



..... User Action: Press \* 3.

3 Alarm Mem.  
Zone 3

LCD Message: The first alarm in memory is shown.



..... User Action: Use either up or down arrow to scroll.

5 Alarm Mem.  
Zone 5

LCD Message: The second alarm in memory is shown.



..... User Action: Use either up or down arrow to scroll.

6 Alarm Mem.  
Zone 6

LCD Message: The third alarm in memory is shown.



..... User Action: Press #, to exit this menu.

## Reading the event log

System Ready  
Type code to arm

LCD Message: The system is ready to be turned on.



..... User Action: Press \* 90.

Please Enter  
Your Code

LCD Message: The system asks for a user code.



..... User Action: Enter your user code.

Event	Open 5	User or zone
Date/Time	9/25 17:32 P3*	Partition

LCD Message: User 5 has opened partition 3 at 17:32 on September 25th.



..... User Action: Use up/down arrow to scroll through the events.

Close 5  
9/25 17:32 P2\*

\* The event has not been reported to the central station.

LCD Message: User 5 has closed partition 2 at 17:32 on September 25th.



..... User Action: Press # to exit this menu.

## Adjusting viewing angle/brightness of the LCD (text display)

System Ready  
Type code to arm

LCD Message: The system is ready to be turned on.



User Action: Press \* 91.

Please Enter  
Your Code

LCD Message: The system asks for a user code.



User Action: Enter your user code.

Raise view ↑  
Lower view ↓

LCD Message: Change the viewing angle of the LCD.



User Action: Use arrow keys to change followed by \* to accept.

Brighten ↑  
Dim ↓

LCD Message: Change the brightness of the LCD.



User Action: Use arrow keys to change followed by \* to accept.

## Service messages display

Service Required  
Type \*2 for help

LCD Message: Please contact your installer.



..... User Action: Press \* 2 to see what is causing the problem.

Expansion  
box tamper

LCD Message: This message represents a tamper  
of an expansion box or a keypad.



..... User Action: Press # to exit the menu.



## Service messages display (continued)

### Control Over-current

A short circuit of a control's power supply has occurred.

### Control Siren trouble

Open circuit has occurred on the bell or siren circuit.

### Control Box tamper

(Optional) The Box Tamper circuit has activated.

### Control Phone trouble

The phone line connected to the control is not operating properly.

### Control Fail to comm.

The control tried to send a message to the Central Station, but failed.

### Control Ground fault

A short to ground has been detected on a control circuit.

### Control Loss of time

Your system has lost total power and needs the clock reset.

### Control Power trouble

The mains power to your system is not on.

### Control Low Battery

The standby battery is low.

### Expansion over-current

A short circuit of an expansion devices' power supply has occurred.





## Service messages display (continued)

**Expansion  
Aux. comm. fail**

An auxiliary reporting device has failed to communicate.

**Expansion  
Power trouble**

The mains power to an expansion power supply is not on.

**Expansion  
Low battery**

An expansion power supply has a low battery

**Expansion  
Box tamper**

A box containing an expansion device has been opened.

**Expansion  
Trouble**

An expansion device or keypad is not reporting to the control panel.

**Expansion  
Siren trouble**

Open circuit has occurred on the bell or siren circuit of the expander.

**Zone Tamper,  
Press \***

A zone is tampered. Press \* to identify the tampered zone.

**Zone Low Batt,  
Press \***

A wireless device has a low battery. Press \* to identify the zone.

**Zone Lost,  
Press \***

A wireless zone device is not reporting to the control. Press \* to identify the zone.

**Zone Trouble,  
Press \***

A zone has some form of trouble (probably wiring). Press \* to identify the zone.

## Glossary of terms

**Armed** The security system is turned on.

**Away Mode** Turns on all of the security system.

**Central station** Location which monitors the alarm data sent during an alarm report.

**Chime feature** An option that allows the keypad to sound a ding-dong whenever an entry/exit door is opened.

**Event Log** A temporary log kept in the memory of the security system, which contains all the alarms and faults that occurred between turning your system on and off.

**Fire detector Reset** The fire detector once activated must be explicitly reset to become operational again. The system cannot be armed after a fire alarm until the fire detector has been reset.

**Fire LED** A steady fire LED means a fire zone has been activated. A rapidly flashing fire LED means that a fire zone is in a trouble condition.

**Forced arming** An option that allows the system to be armed with one or more zones open. When the system is ready to be force armed, the ready LED flashes. Zones that are not closed do not create an alarm.

**Function Key** A key dedicated for a particular task.

**Group bypass** An option that allows the user to bypass multiple zones with a single operation.

**LCD** Liquid Crystal Display. This is the text display which gives you information about your system.

**LED** Light Emitting Diode. The LEDs on the keypad give system status information.

**Master user code** A master arm/disarm code that can also program parts of the system.

**Partitioned system** A system divided into multiple areas in which its own user or users control each area.

**Perimeter** The outer edge of the protected area. →→

## Glossary of terms (continued)

**Power LED** When lit, the system is connected to the mains power.

**Ready LED** When lit, the system is ready to be turned on.

**Stay Mode** Turns on the perimeter protection part of the security system.

**Tamper** If the security system is interfered with, a tamper is recorded. You should contact your installer.

**User code** A four or six digit code used to arm or disarm the system.

**Zone** An area protected by a group of one or more detection devices.

  
ISO 9001 Certified  
14 5113 999-1