

PROheat™ All-Rounder

USER'S GUIDE

ProHeat All Rounder EX7700E 220-240V



Safety Instructions

Product View

Assembly

Special Features

Operation

Maintenance and Care

Troubleshooting

Replacement Parts



IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING YOUR CLEANING SYSTEM.

Always connect to a properly Earthed outlet. Unplug from outlet when not in use and before conducting maintenance or troubleshooting.



WARNING: To reduce the risk of fire, electric shock, or injury:

- Use indoors only
- Do not immerse
- Use only on surfaces moistened by cleaning process
- Do not leave machine when it is plugged in
- Do not service machine when it is plugged in
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard
- Do not use machine if it has been dropped, damaged, left outdoors or dropped into water
- Do not expose to rain, store indoors
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces
- Do not carry the appliance while in use
- Do not unplug by pulling on cord; unplug by grasping plug not the cord
- Do not handle plug or appliance with wet hands
- Do not put any object into appliance openings, use with blocked opening or restrict air flow
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts
- Do not pick up hot or burning objects
- Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapours
- Do not use appliance in an enclosed space filled with vapours given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapours

- Remove plug from electrical outlet before cleaning or maintaining the appliance
- Not intended for use by young children or infirm persons without supervision
- Young children should be supervised to ensure that they do not play with the appliance
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, petrol, etc.)
- Do not modify the Earthed plug
- Do not allow to be used as a toy
- Do not use for any purpose other than described in this User's Guide
- Use only manufacturer's recommended attachments
- Use only cleaning products formulated by BISSELL for use in this appliance to prevent internal component damage
- Keep openings free of dust, lint, hair, etc.
- Keep appliance on a level surface
- Turn off all controls before unplugging
- Be extra careful when cleaning stairs
- Pay close attention when working around children

SAVE THESE INSTRUCTIONS.

THIS MODEL IS FOR HOUSEHOLD USE ONLY.




WARNING: This appliance must be Earthed.

IMPORTANT FOR OPERATION ON
A 220-240 VOLT A.C. 50/60 Hz POWER
SUPPLY ONLY.

If your appliance is fitted with a nonrewireable BS 1363 plug it must not be used unless a 13 amp (ASTA approved to BS 1362) fuse is fitted in the carrier contained in the plug. Spares may be obtained from your BISSELL supplier. If for any reason the plug is cut off, it must be disposed of, as it is an electric shock hazard should it be inserted into a 13 amp socket.



Product view - water filtrated vacuum mode

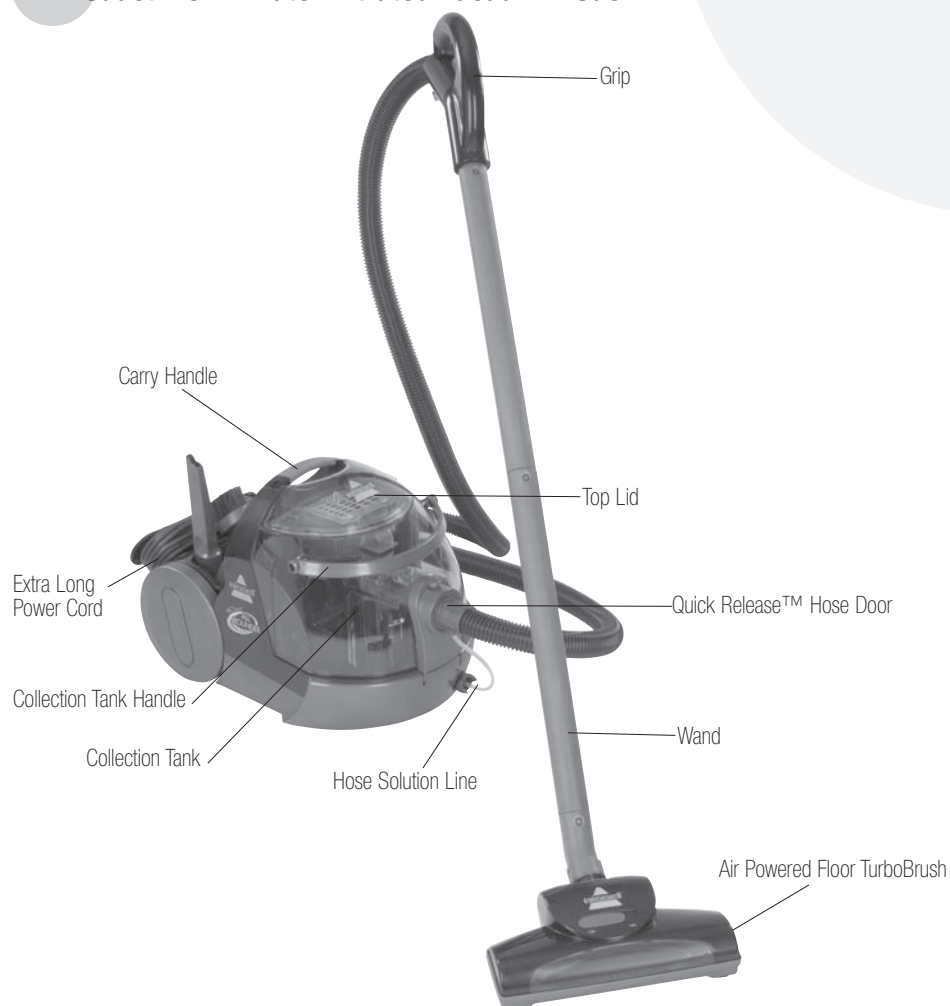

Optional Accessories:

Some or all of these may have come with your unit. These items are available for purchase. To order replacement parts, additional tools or formulas, please refer to page 17-18.



Air Powered Floor TurboBrush



Multi-Surface Floor Tool



5" Brush



Crevice Tool - (works for wet cleaning too)



Upholstery Dusting Brush



Carpet Deep Cleaning Tool



Quick Dry Hard Floor Tool (Shown with Microfibre Pad)



4" Upholstery Tool



Drain Cleaner



Product view - wet cleaning mode



Keep plenty of genuine BISSELL deep cleaning formulas on hand so you can clean whenever it fits your schedule. Always use genuine BISSELL deep cleaning formulas. Non-BISSELL cleaning solutions may harm the machine and void the warranty.

BISSELL Formulas:

These items are available for purchase. To order replacement parts, additional tools or formulas, please refer to page 17-18.



1.42 L
Fibre Cleansing
Formula™ with
Scotchgard™
protector



1.42 L
Multi- Allergen
Removal™ Formula™
with Scotchgard™
protector



1.42 L
Pet Odor and Soil
Removal™ Formula™
with Scotchgard™
protector



1.42 L
Natural Orange
Extract Formula with
Scotchgard™ protector



1.42 L
Lavender Essence
Formula with
Scotchgard™
protector



.95 L.
Hard Floor
Solutions™
Formula

How to use this guide

This user's guide has been designed to help you get the utmost satisfaction from your BISSELL PROheat All-Rounder. You'll find assembly and operating instructions, safety precautions, as well as maintenance and troubleshooting instructions. Please read this user's guide thoroughly before assembling your product.

Pay particular attention to the product diagram, assembly instructions, and part names. Locate and organize all parts before assembly. Familiarize yourself with the parts and where they go. Following this user's guide will greatly enhance your ability to get the most performance from your BISSELL PROheat All-Rounder for many years.









WARNING:

Do not plug in your cleaner until you have completely assembled it per the following instructions and are familiar with all instructions and operating procedures.

Assembly

Your PROheat All-Rounder is easy to assemble and requires no tools:

1. Attach hose to Quick Release™ Hose Door by inserting fitted end and turning clockwise until you hear it click into the locked position.
2. Attach hose solution line to unit by inserting fitted end into the machine. Turn clockwise until it snaps into place.
3. Snap the two wand pieces together by lining up tabs with holes and clicking together. Be sure that the wand piece with the adaptor (see figure 4a) is the one you will attach to the tool to. Attached assembled wand to grip using the same technique.
4. Snap the desired tool on the end of the wand. Place wand adaptor into the wand caddy on the side of the unit.
5. Place either tool caddy or solution tank (if wet clean mode is desired) onto the back of the machine.

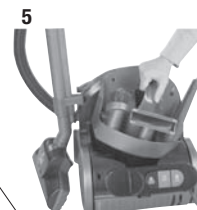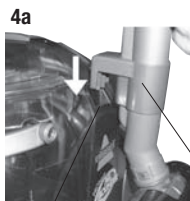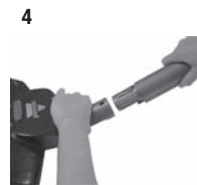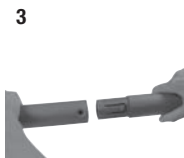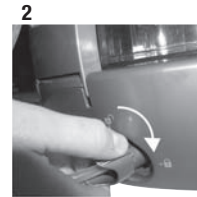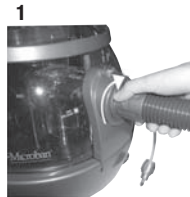

Wand Caddy

Wand Adaptor



Special features of your BISSELL PROheat All-Rounder

Your BISSELL PROheat All-Rounder is a complete home cleaning system. Not only does it come with a lot of unique features, it has been designed with you, the customer, in mind.

Built-in heater

PROheat All-Rounder models all feature a patented built-in heater which heats the hot tap water you put in it up to 25 degrees hotter to safely optimize cleaning effectiveness. The heater will never allow the cleaning solution temperature to exceed 190 degrees. The heater switch on the back of the machine controls the heater so you have the option to turn off the heat if you want to.

Quick dry hard floor tool

BISSELL's unique hard floor tool uses a combination of gentle scrubbing action and strong suction to clean your hard floor surfaces and leave them dry within minutes.

Hard floor Microfibre pad

Soft and gentle microfibre pad is washable and re-usable, time and time again.

Tool caddy


The onboard tool caddy can be used to store any tools you are not currently using.

Cleaning tools


Your PROheat All-Rounder comes with a variety of advanced tools, each one just right for a specific job. Some of these tools have multiple uses.

Air powered floor TurboBrush:

Perfect for carpets and rugs, this air-powered floor TurboBrush comes with an air flow adjuster. When using on normal length carpets and rugs set the selector to Low. For especially thick or long carpet or rugs, switch the selector to High. Additional airflow will be brought in from the top of the brush in the High position.

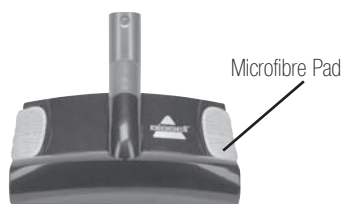

Top View

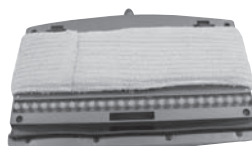



Bottom View



Special features of your BISSELL PROheat All-Rounder

Cleaning tools (continued)

Multi-surface floor tool:

May be used on both carpet/rugs or hard floor surfaces. For use on carpets, make sure the tab is in the down position . This will hide the soft outer brushes. For hard floor surfaces, press the opposite tab in the down position . This will engage the soft outer brushes.

Crevice tool: May be used for both dry vacuuming or wet cleaning.

NOTE: In wet cleaning mode the crevice tool will spray water and cleaning solution. Take care not to press the trigger when in water filtrated vacuum mode.



Quick Release™ Hose Door™

The handy Quick Release™ Hose Door ensures that the machine's hose never rests on your carpet or hard floors, keeping them clean and dry while filling or emptying the tanks.

Wand caddy

Perfect for storage or when you take a break from cleaning, the wand caddy holds the grip, wands and tools firmly in place

Operation

Vacuuming

Getting Ready

Reminder: In order to maximize the cleaning and filtration power of the PROheat All-Rounder and avoid damaging the machine, make sure there is always water in the collection tank. Be sure to fill up to the fill line with clean tap water





1. If desired, make sure the tool caddy is in the back of the machine. Store appropriate vacuuming tools as needed.
2. Attach desired tool to end of wand (or directly to grip).



Operation

Getting Ready (continued)

3. Remove the collection tank from the unit by opening the Quick Release Hose Door and lifting the tank straight up by the handle.
4. Remove the top lid from the collection tank and set aside.
5. Fill the collection tank to the fill line (located on side of tank) with clean, cold water.
6. Replace the top lid back onto the top of the collection tank
7. Set the collection tank back in the machine
8. Select "WATER FILTER VACUUM" with the mode selector.
9. Close the Quick Release Hose Door tightly until it clicks into the locked position.
10. Plug into a proper outlet and press the ON/OFF button down into the ON position.

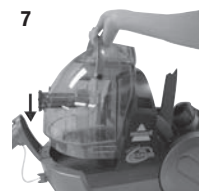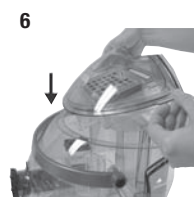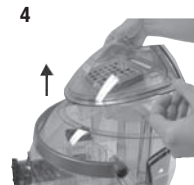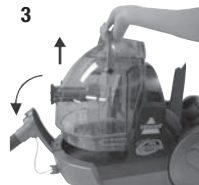

Emptying the tank

1. Open the Quick Release™ Hose Door and remove the collection tank by lifting straight up with the tank handle.
2. Remove the top lid from the collection tank and set it aside.
3. Empty dirty water into a sink or toilet, or outside. Pour the dirty water out from the corner of the tank. Rinse out the tank thoroughly.
4. Refill the tank if needed and replace the top lid back onto the top of the collection tank.
5. Set the collection tank back in the machine.
6. Close Quick Release hose door tightly until it clicks into locked position.
7. If finished vacuuming, refer to the Maintenance and care section starting on page 14.

Wet cleaning

Before you clean

1. Plan activities to give your carpets time to dry.
2. Thoroughly dry vacuum the area to be cleaned.
3. Plan your cleaning route to leave an exit path. It is best to begin cleaning in the corner farthest from your exit.



Operation

Getting ready to wet clean

NOTE: Remove tool caddy if in place.

1. Attach the desired wet cleaning tool to end of wand or grip.
2. Open the Quick Release™ Hose Door and select "WET CLEAN" with the mode selector.
3. Place the clean solution tank on a flat surface.
4. Fill the solution tank by first unscrewing the measuring cap. Always use genuine BISSELL formulas to maximize cleaning and for the safety of your machine. Fill tank to fill line with hot tap water. Add two full measuring caps of formula. Screw measuring cap tightly back onto the solution tank.
5. Place the solution tank back in the machine.
6. Plug into a proper outlet and press the ON/OFF, wet clean and heater (if desired) buttons down into the ON position.


Note: Allow one minute for the built-in heater to warm up before cleaning. The PROheat All-Rounder will be fully warmed and will provide optimal performance after one minute of continuous heated cleaning.

Carpet Cleaning

1. Attach carpet deep cleaning tool to end of wand.
2. Place carpet deep cleaning tool directly on carpet. Pull the spray trigger to spray cleaning solution while pulling the wand towards you.
3. Keeping nozzle of the carpet deep cleaning tool firmly against the carpet surface, continue to make slow forward and backward wet passes until no more dirt can be removed.
Do not overwet
4. Release spray trigger and make slow forward and backward passes over the same area to remove any residual dirty water.
5. Repeat wet cleaning passes until water being pulled up appears clean.
6. Continue passes without pressing the spray trigger until you can't see any more water being pulled up.

Tip:

Move furniture to another area if cleaning an entire room.

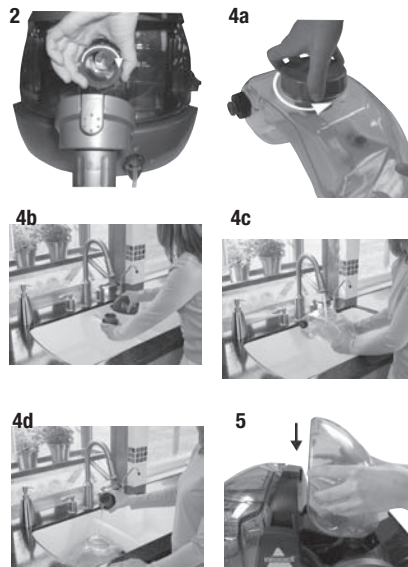

ATTENTION:

Some Berber carpets have a tendency to fuzz with wear. Repeated strokes in the same area with an ordinary vacuum or deep cleaner may aggravate this condition.



Operation

Carpet Cleaning (continued)

7. Continue to clean entire carpet working in one meter by one meter sections.
8. If machine loses suction, stop spraying and check the collection tank level. Empty if necessary.
9. If the machine stops spraying turn off wet clean button immediately and check the solution tank level.



NOTE: Never run in wet clean mode when the clean water formula tank is dry or missing.

When you are finished

1. Turn off the heater, wet clean, and power buttons.
2. Remove the collection tank from the unit by opening the quick release hose holder and lifting the tank straight up by the handle.
3. Remove the top lid from the collection tank and set it aside.
4. Empty dirty water into a sink, toilet or outside. Pour the dirty water out from the corner of the tank. Rinse out the tank thoroughly.

NOTE: You may leave the solution tank with water and formula in it so you are ready for the next use.

6. Allow all parts to dry before storing.

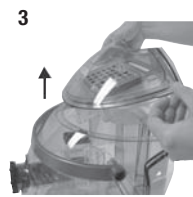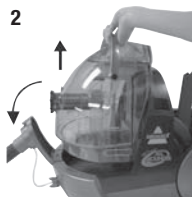

Hard floor cleaning

1. See "Getting Ready to Wet Clean" on Page 10.
2. Be sure to use BISSELL Hard Floor Solutions in the solution tank for hard floor cleaning. Fill the formula tank by first unscrewing the measuring cap. Always use genuine BISSELL formulas to maximize cleaning and for the safety of your machine. Fill tank to fill line with hot tap water. Add one full cap of formula. Screw measuring cap tightly back onto the solution tank.
3. Set the solution tank back in the machine.



Operation

Hard floor cleaning (continued)

4. Attach microfibre pad to quick dry hard floor tool by attaching to the Velcro strips on the top of the tool.
5. Attach the quick dry hard floor tool to end of the wand.
6. Place tool directly on the hard floor surface, resting on the pad.
7. Squeeze the spray trigger to moisten the pad with cleaning solution.
Caution: Do not oversaturate.
8. Move the tool back and forth across the floor to clean. Squeeze spray trigger as needed.
9. Tilt the tool forward and pull back. This will create the best suction and will help get the hard floor surface as dry as possible.
10. Continue until room is complete.
11. See "When You Are Finished" instructions on page 11.
12. Be sure to remove the microfibre pad and clean it by hand or machine wash as needed. Allow it to dry completely before next use.


2



Upholstery cleaning

Your PROheat All-Rounder comes with special tools for vacuuming and wet cleaning upholstery, stairs and more.

1. **Important!** If using to wet clean upholstery, check the upholstery tags proceeding.
 - a. Check manufacturer's tag before cleaning. "W" or "WS" on the tag means you can use your PROheat All-Rounder. If the tag is coded with an "X" or an "S" (with a diagonal stripe through it), or says "Dry Clean Only", do not proceed with deep cleaning. Do not use on velvet or silk. If manufacturer's tag is missing or not coded, check with the furniture maker or the furniture dealer.
 - b. Check for colourfastness in an inconspicuous place.
 - c. If possible, check upholstery stuffing. Coloured stuffing may bleed through fabric when wet.
 - d. Plan activities to allow upholstery time to dry.
 - e. Vacuum thoroughly.

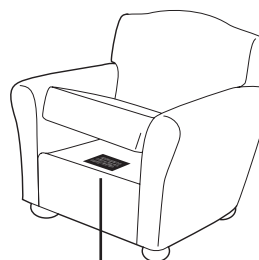

Manufacturer's tag



Operation

Upholstery cleaning (continued)

2. Refer to the "Getting Ready to Wet Clean" on page 10.
3. Attach the desired wet cleaning tool to the wand or grip.
4. Clean by pressing the spray trigger to spray solution onto the area to be cleaned. Slowly move the tool back and forth over the soiled surface. Release the spray trigger to suction soiled water. Continue to clean the area, working in small sections, until no more dirt can be removed. Suction as needed to remove as much water as possible.
Caution: Do not overwet.
5. Remove and rinse tools in clean, running water. Dry and put away.
6. See "When you are finished" instructions on page 11.

Tip:

It is recommended that you suction clean water from the tap to rinse out the hose.

Cleaning fluid section

Keep plenty of genuine BISSELL Formula on hand so you can clean and protect whenever it fits your schedule. Always use genuine BISSELL deep cleaning formulas.



1.42 L
Fiber Cleansing
Formula™ with
Scotchgard™
protector
item # 710E



1.42 L
Multi-Allergen
Removal™ Formula
with Scotchgard™
protector
item # 720E



1.42 L
Pet Odor and Soil
Removal™ Formula
with Scotchgard™
protector
item # 730E



1.42 L
Natural Orange
Extract Formula™
with Scotchgard™
protector
item # 740E



1.42 L
Lavender Essence
Formula™ with
Scotchgard™
protector
item # 750E



1.42 L
Lavender Essence
Formula™ with
Scotchgard™
protector
item # 750E



Maintenance and care

Machine storage

Once your cleaning is complete make sure the dirty water from the collection tank is emptied. Rinsed out and dry before the next use. For wet cleaning, the solution tank can be left filled and ready to use.

Note: Store your PROheat All-Rounder in a protected dry area. Since this product uses water it must not be stored where there is a danger of freezing. Freezing will damage the internal components and void the warranty.



WARNING:

To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL Deep Cleaning Formula intended for use with the deep cleaner. Non-BISSELL cleaning formula may harm the machine and void the warranty.



Maintenance and care

Machine care

For best results, a few simple steps can assure your machine is well maintained after your cleaning is complete.

1. Press all buttons OFF. Unplug the machine and wrap the cord.
2. After emptying the dirty water from the collection tank, rinse it out thoroughly with hot water. Remove all inner parts (water filtration tower and mode selector) if desired. Rinse them and allow to dry before returning into tank.
Note: To remove inner parts, turn mode selector to remove. Pull mode selector straight out towards you. The water filtration tower can now be taken out through the top of the tank.
3. For wet cleaning, remove and clean all tools that were used. Allow to dry before storing.
4. Remove the hose, taking care to keep both ends up to avoid spilling. Dump out any remaining water and flush clean with hot tap water. Allow to dry before storing.


5.
 - a. Pre-motor filter: Take apart the top lid by pulling the tab away from the separator. Inspect the foam filter. If dirty, rinse clean and allow to dry before returning it to the machine. Re-assemble the top lid by placing the filter in its spot and re-attaching the separator. Use care to make sure the "T" pieces are lined up under the shallow grooves on the top lid itself. For replacement of this part, see pages 18-19.
 - b. HEPA Media filter: This filter is located at the back of the machine, underneath the Quick Release Cord Wrap. Use one finger to depress the latch and pull the door down. Open towards you and down to the ground. Use two hands to remove the filter from its slot. If dirty, rinse clean and allow to dry before returning it to the machine. Make sure the filter door is fully closed prior to operating the machine. For replacement of this filter see pages 18-19.



Water Filtration Tower



Mode Selector

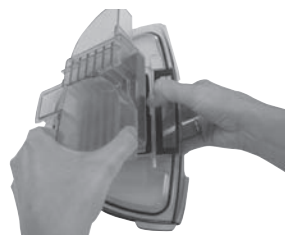

Troubleshooting

Reduce Spray or No Spray

Possible Cause

1. Make sure power is on
2. Solution tank may be empty
3. Tank may not be seated properly
4. Hose solution line may be disconnected
5. Wet clean is not turned on

Machine is not suctioning

Possible Cause

1. Collection tank may not be placed properly
2. Collection tank may not be assembled properly
3. Wand tool connections are not tight
4. Collection tank is full
5. Float has tripped
6. Pre-motor filter is dirty

Built-in heater light does not illuminate

Possible Cause

1. The heater button has not been depressed
2. The ON/OFF button has not been depressed



WARNING:

To reduce the risk of fire, electric shock or injury unplug from outlet before servicing.

Remedies

1. Press power button if needed
2. Fill tank according to directions
3. Turn ON/OFF, heater and wet clean button off. Remove and reseat tank
4. Check connection at front of machine
5. Depress wet clean button to turn on

Remedies

1. Open Quick Release™ Hose Door, lift out tank and re-seat. Re-latch Quick Release™ Hose Door
2. Check to make sure the top lid is properly seated
3. Check all connections (At grip, wand and tool) Push tight if necessary.
4. Empty collection tank by following instruction on page 9
5. Check to see if tank needs to be emptied. Make sure float is down towards bottom of tank.
6. Remove top lid. Remove and clean pre-motor filter by following instructions on page 15. Filter must be completely dry before using again

Remedies

1. Depress the heater button
2. Depress the ON/OFF button

Other maintenance or service not included in the manual should be performed by an authorized service representative.



Replacement parts - BISSELL PROheat All-Rounder

Below a list of common replacement parts*. While not all of these parts may have come with your specific machine, all are available to you for purchase, if desired.

Item Part No. Part Name

1	203-7063	Multit-Surface Floor Tool
2	203-7064	Air Powered Floor TurboBrush
3	203-7073	5" Brush
4	203-7066	Wand
5	203-7067	Adaptor
6	203-7068	Crevice Tool
7	203-7069	Upholstery Dusting Brush
8	203-7070	Carpet Deep Cleaning Tool
9	203-7071	Carpet Deep Cleaning Tool Brush Strip
10	203-7072	Carpet Deep Cleaning Tool Adaptor
11	203-7065	4" Upholstery Tool
12	203-7074	Quick Dry Hard Floor Tool (pads not included)
13	203-7076	Hard Floor Microfibre Pads (2 Pack)
14	203-7077	Drain Cleaner
15	203-7078	Tool Caddy
16	203-7079	Hose Grip Assembly
17	203-7080	Measuring Cap
18	203-7082	Pre-Motor Filter
19	203-7083	HEPA Media Filter
20	203-7084	Solution Tank
21	203-7085	Small cap/insert
22	203-7086	HEPA Filter Door
23	203-7087	Float
24	203-7088	Diverter
25	203-7089	Water Filtration Tower
26	203-7090	Water Filtration Tower Gasket
27	203-7091	Separator with Filter
28	203-7092	Top Lid Assembly
29	203-7093	Lid
30	203-7096	Collection Tank
31	203-7097	Collection Tank Assembly
32	203-7098	Motor Duct Gasket
33	203-7099	Quick Release™ Hose Door™ Assembly
34	203-7100	Carry Handle Assembly
35	203-7102	Caster Wheel
36	710E	1.42 L Fiber Cleansing Formula™ with Scotchgard™ protector
37	720E	1.42 L Multi-Allergen Removal™ Formula with Scotchgard™ protector
38	730E	1.42 L Pet Odor and Soil Removal™ Formula with Scotchgard™ protector
39	740E	1.42 L Natural Orange Extract Formula™ with Scotchgard™ Protector
40	750E	1.42 L Lavender Essence Formula™ with Scotchgard™ protector
41	0484	0.95 L Hard Floor Solutions™

***Not all parts are included with every model.**



Replacement parts - BISSELL PROheat All-Rounder

