MiFi[®]2



User Guide



©2013 Novatel Wireless, Inc. All rights reserved. The information contained in this document is subject to change without notice and should not be construed as a commitment by Novatel Wireless, Inc.

Patents and Licenses

Visit www.novatelwireless.com/patents for a complete list of all Novatel Wireless patents.

Software License

Proprietary Rights Provisions:

The software drivers provided with this product are copyrighted by Novatel Wireless and/or Novatel Wireless' suppliers. Although copyrighted, the software drivers are unpublished and embody valuable trade secrets proprietary to Novatel Wireless and/or Novatel Wireless' suppliers. The disassembly, decompilation, and/or reverse engineering of the software drivers for any purpose is strictly prohibited by international law. The copying of the software drivers, except for a reasonable number of back-up copies, is strictly prohibited by international law. It is forbidden by international law to provide access to the software drivers to any person for any purpose other than processing the internal data for the intended use of the software drivers.

U.S. Government Restricted Rights Clause:

The software drivers are classified as "Commercial Computing Device Software" and the U.S. Government is acquiring only "Restricted Rights" in the software drivers and their Documentation.

U.S. Government Export Administration Act Compliance Clause:

It is forbidden by US law to export, license or otherwise transfer the software drivers or Derivative Works to any country where such transfer is prohibited by the United States Export Administration Act, or any successor legislation, or in violation of the laws of any other country.

Trademarks and Service Marks

Novatel Wireless is a trademark of Novatel Wireless, Inc., and the other trademarks, logos, and service marks (collectively the "Trademarks") used in this user manual are the property of Novatel Wireless or their respective owners. Nothing contained in this user manual should be construed as granting by implication, estoppel, or otherwise, a license or right of use of Novatel Wireless or any other Trademark displayed in this user manual without the written permission of Novatel Wireless or its respective owners.

- Novatel Wireless and the Novatel Wireless logo are all trademarks of Novatel Wireless, Inc.
- MiFi and the MiFi logo are registered trademarks of Novatel Wireless, Inc.
- Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Apple®, Mac®, and Mac OS® are trademarks of Apple, Inc., registered in the U.S. and other countries.
- microSDHC, microSD, SD Card, and the SD logo are trademarks of SD-3C LLC.
- DLNA is a registered trademark, DLNA disc logo is a service mark, and DLNA Certified is a trademark of the Digital Living Network Alliance. Digital Living Network Alliance is a service mark of the Digital Living Network Alliance.

The names of actual companies and products mentioned in this user manual may be the trademarks of their respective owners.

Novatel Wireless Revision History

Part Number	Revision	Description	Date
90026783	R1	Initial release	22 Mar 2013

FCC ID: PKRNVWMIFI5792

Contents

Getting Started	
Device Overview	
Package Contents	
System Requirements	
Insert Battery and Power On	
Connect to Your MiFi 2	
Components	
Power Sources for Your MiFi 2	
Service Status Icons	
Touchscreen lcons	
MiFi 2 Web Interface	
MiFi 2 Web Interface Navigation	
SIM Card and Battery Instructions	
Insert the SIM Card	
Insert and Charge the Battery	
Remove the Battery	
Remove the SIM Card	
Battery Advisory	
Wi-Fi Setup	
Set Up a Wi-Fi Connection	
Log into the MiFi 2 Web Interface	
Configure Security	
Change the Web Interface	
Change the Wi-Fi Password	
Accessing MiFi 2 Features	
MiFi 2 Web Interface	
MiFi 2 Web Interface Home Page	
Connected Devices	
On the MiFi 2 Touchscreen	
On the MiFi 2 Web Interface	
Data Usage	
On the MiFi 2 Web Interface	
Settings	
On the MiFi 2 Web Interface	
Device Settings	
Preferences	
Web Interface Login	
Backup and Restore	
General	
Advanced	
Mobile Settings	

Mobile	
APN Profiles	
Network Selection	61
Manual DNS	
SIM Lock	
Advanced Settings	
Firewall	
LAN	
Port Filtering	
MiFi Media Center	
On the MiFi 2 Web Interface	
Status	
Media	73
Photos	
Videos	
Music	
Messages	
On the MiFi 2 Web Interface	
File Sharing	
Enable File Sharing	
Accessing Shared Files	81
On the MiFi 2 Web Interface	
Settings	
View Files	
GPS	
On the MiFi 2 Web Interface	
Enable GPS	
Wi-Fi Protected Setup	
Customer Support	
On the MiFi 2 Touchscreen	
On the MiFi 2 Web Interface	
About	
On the MiFi 2 Web Interface	
Current Status	
Internet Status	
Wi-Fi	
Device	
Device Info	
Diagnostics	
Modem	
HSPA Status	
LTE Status	
Logs	101
Software Update	102

Troubleshooting	
Overview	
Common Problems and Solutions	
Using the Master Reset Button	
Technical Support	
Customer Service	
Product Specifications and Regulatory Information	
Product Specifications	
General	
Display	
Technology/Bands	
Environmental	
Regulatory	
Safety Hazards	
Proper Battery Use and Disposal	
Guidelines for Safe and Responsible Battery Use	
Limited Warranty and Liability	
Glossary	
Glossary	

1

Getting Started

Device Overview Components SIM Card and Battery Instructions Wi-Fi Setup Configure Security Data Usage

Device Overview

With the powerful, easy-to-use MiFi[®] 2 Intelligent Mobile Hotspot by Novatel Wireless you can connect up to 10 Wi-Fi enabled devices to fast 4G LTE[™] Internet* and use a brilliant interactive touchscreen to manage your connection. With this next generation intelligent mobile hotspot you can keep your tablets, laptops, gaming consoles, smartphones, e-Readers and other devices connected for up to 11 hours without recharging**.

With a tap on the full color touchscreen you can check data usage, access connection details including Wi-Fi network name and password, view and block connected devices, enable MiFi Media Center and more. See battery level, network and signal strength at a glance. Connect with confidence—global MiFi 2 provides a secure, reliable connection when and where you need it, worldwide [†].

Package Contents

The MiFi 2 package includes:

- MiFi 2
- Rechargeable battery
- Charger
- USB cable
- Quick Start Guide

System Requirements

To manage your MiFi 2, you need the following:

- A computer or computing device supporting Wi-Fi 802.11 b/g/n
- Internet browser software: i.e., Microsoft Internet Explorer 8.0 or higher, Firefox, Safari, Opera, Chrome, etc.

*Contact your carrier for coverage and details.

^{**}Battery usage varies according to number of connected devices and level of activity.

[†] International roaming rates may apply. Contact your service provider for details.

Insert Battery and Power On

Lift the battery door to open the battery compartment. Insert the SIM card in the SIM card slot if it is not already installed, then insert the battery. Replace battery door to secure the battery in place.



• Press and release the power button. Your MiFi 2 is ready to use when the touchscreen displays the interactive icons.



- 2 To lock the touchscreen, press and release the power button. To unlock, press and release the power button and slide the lock tab.
- **O** To power off the device, press and hold the power button for 3 seconds to display the Shut Down window, then tap Yes.





Connect to Your MiFi 2

You can connect up to 10 compatible Wi-Fi enabled devices. To connect wireless devices (computers, tablets, e-readers, cameras, media players, smartphones, etc.):







4 After you connect your computer to your MiFi 2 using Wi-Fi, you can access the MiFi 2 Web Interface to customize settings, change your password, access applications and more. Browse to (http://my.mifi), and log in using the default password: admin. (See Log into the MiFi 2 Web Interface on page 24.)

5 Configure security for your MiFi 2. (See <u>Configure Security</u> on page 26.)

Components



- **O** Power Button Powers the MiFi 2 on and off.
- Status Bar Displays current device status information, including signal strength, time, GPS, messages, connected devices and battery level.
- **3** Touchscreen Icons Provides touchscreen access to the MiFi 2 applications.
- **Micro USB Port** The A/C charger and USB cable connect here.
- **Screen Sleep Indicator** Flashes blue when the device is in sleep mode.
- **6** Touchscreen The interactive device display screen.
- **Battery Door** Remove to access battery and SIM card slot.
- **8** SIM Card Slot Active SIM card must be installed for network access.
- **Reset Button** Resets the device to factory default settings.
- Image: Image



Power Sources for Your MiFi 2

Your MiFi 2 will work from its battery or when plugged into a power source.

- **Battery** The battery lasts up to 11 hours. Charge the battery by plugging in the A/C charger. While the battery is charging the charging battery status icon displays on the MiFi 2 touchscreen status bar. When the battery is fully charged, the message "Battery is fully charged, please disconnect power" displays on the touchscreen. When disconnected from power and fully charged, the battery status icon displays fully charged.
- **A/C wall charger** Charge your device by plugging it into either the A/C charger connected to a wall socket or to your computer USB port using the cable.

Service Status Icons

Status icons at the top of the MiFi 2 touchscreen and on the Status bar of the MiFi 2 Web Interface indicate the device status. The appearance of each icon varies according to the current device status.

Status Icon	Status	Description
No icons	The display is off, and the LED is also off.	The device is powered off or not receiving power.
Network signal strength status	Network signal strength icon displaying 0-5 bars.	More bars indicate a stronger signal.
Network LTE connection status	Network connection icon.	Identifies the type of network the MiFi 2 is currently connected to.
Data transfer status	Active data transfer icon	The icon displays when data is being transferred to and/or from the MiFi 2.
GPS status	Active GPS icon.	The icon displays when GPS is turned ON and position information is available.
Message status	An unread message(s) icon.	The icon and number of messages displays when there are unread SMS messages.
Connected device status	Connected device(s) icon.	The icon and number of connected devices displays when there are devices connected to the MiFi 2.
Battery status	Battery level icon.	The icon fills to indicate the amount of remaining battery life.

Touchscreen Icons

Display Icon		Description
No icons		The device is powered off or not receiving power.
Connection Info	WIFI	Displays the Wi-Fi Network Name and Wi-Fi Password for your MiFi device, Wi-Fi Security type, maximum number of connected devices, MiFi 2 Web Interface address and Password.
Connected Devices		Displays details of devices currently connected to or blocked from your MiFi 2.
Data Usage		Enables you to check your data plan summary, data used, remaining days in your billing cycle, and more.
Settings	\$	Allows you to access and configure your MiFi 2 device settings.
MiFi Media Center		Provides access to movies, music and photos stored on your microSD card from connected devices.
Messages		Connects you to text messages delivered to your MiFi 2, including notifications from your service provider.
File Sharing	C	Allows you to upload and download files stored on your microSD card from compatible connected devices.
GPS	Ó	Allows you to share location information with connected devices.
Wi-Fi Protected Setup	wps	Allows you to connect WPS-enabled devices to MiFi 2 without using a keyboard.
Customer Support	•	Displays your wireless number and device model.
About	i	Provides access to current status device information, and software updates.

MiFi 2 Web Interface

The MiFi 2 Web Interface is part of your MiFi device where you can log in to customize settings, change your password, get information and access applications.



MiFi 2 Web Interface Navigation

Each page contains a menu bar to help you navigate. The navigation panel is at the left of the browser interface on each page and contains the following:

- MiFi Home takes you to the MiFi 2 Home page. (See <u>MiFi 2 Web Interface</u> on page 12.)
- **Connected Devices** takes you to the Connected Devices page, where you can view devices currently connected to your MiFi 2 and see blocked devices. (See <u>Connected Devices</u> on page 31.)
- **Data Usage** takes you to the Data Usage page, where you can view your current data usage and manage your account. (See <u>Data Usage</u> on page 35.)
- **Settings** takes you to the Settings page, where you can customize your device, hotspot, mobile and advanced settings. (See <u>Settings</u> on page 37.)
- **MiFi Media Center** takes you to the Media Center page, where you can view and share your movies, music and photos with connected devices. (See <u>MiFi Media Center</u> on page 69.)

- **Messages** takes you to the Messages page, where you can view your unread messages sent to your MiFi 2. (See <u>Messages</u> on page 77.)
- File Sharing takes you to the File Sharing page, where you can customize your file sharing settings, and view all files stored on a microSD card installed in the MiFi device. (See File Sharing on page 80.)
- **GPS** takes you to the GPS page, where the GPS receiver on the MiFi device can determine your current location. (See <u>GPS</u> on page 85.)
- Customer Support displays your wireless number and device model. (See <u>Customer</u> <u>Support</u> on page 91.)
- **About** takes you to the About page, where you can get details regarding current status, device information, and software updates. (See <u>About</u> on page 93.)

Insert the SIM Card

To insert the SIM card:





2 Steady the MiFi 2 with one hand and place the thumb of your other hand on the battery door thumb notch.





3 Using normal thumb pressure on the thumb notch, lift the battery door up to remove the door completely.



4 Hold the card with two fingers and insert into the SIM card slot, being careful not to touch the gold contacts on the back of the card.



9 Push the top of the SIM card firmly until it clicks into place in the card slot.



Insert and Charge the Battery

Insert and charge the MiFi 2 battery prior to use.

To insert the battery:



• With the battery door removed, insert the battery into the battery well, matching the gold contacts.



2 Push firmly to snap the battery into place.



To charge the battery:

Connect the A/C charger to the USB cable and plug into the MiFi 2's micro USB port. The charging battery status icon is displays on the MiFi 2 touchscreen status bar while the battery is charging.



When the battery is fully charged, the message "Battery is fully charged, please disconnect power." displays on the touchscreen. Remove the USB cable from the MiFi 2's micro USB port. When disconnected from power and fully charged, the battery status icon displays fully charged .

IMPORTANT The battery door cover on your MiFi 2 lifts off to open and snaps on to close. No tools are required to remove or install the battery or battery door. Using any type of tool could result in damage to the device and to the battery. If excessive force appears necessary to remove the door or the battery, please return the MiFi 2 to the vendor where you purchased the device.

Remove the Battery

WARNING! Never use tools, knives, keys, pens or any type of object to force the door open or to remove the battery. Using any of these types of objects could result in puncturing the MiFi 2 battery.



Place your MiFi 2 on a flat surface with the battery door facing up.



2 Steady the MiFi 2 with one hand and place the thumb of your other hand on the battery door thumb notch.



3 Using normal thumb pressure on the thumb notch, lift the battery door up to remove the door completely.



4 Use your forefinger to pull the battery up slightly so that it moves out of the battery well.



6 Lift the battery out of the battery well.



Remove the SIM Card

To remove the SIM card:





• To release the SIM card from the slot, push and release the top of the SIM card.



3 To remove the SIM card, hold the card with two fingers and pull gently, being careful not to touch the gold contacts on the back of the card.



Battery Advisory

- As with any battery-operated mobile device being used for a certain amount of time, the MiFi 2 device can get warm to the touch. This is normal and within standard specifications, and poses no hazard.
- The MiFi 2 device is configured to automatically stop charging and disconnect the battery if the temperature rises above a set threshold. When the temperature falls below that threshold, the battery reconnects and the unit starts charging again.
- Always use Novatel Wireless original batteries and chargers.
- It normally takes at least four hours to fully charge the battery. If the device is in use the battery may take longer to charge.
- Do not use sharp objects to access the battery well; this may damage the device and the battery.
- Do not use excessive force to remove the battery or to access the battery well.
- Battery life depends on the network, signal strength, temperature, features, and accessories you use.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F).
- Never leave the device in an unattended vehicle due to uncontrollable temperatures that may be outside the specified temperature for this device.
- Some batteries perform best after several full charge/discharge cycles.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.
- Avoid placing the device on vibrating surfaces for long period of time (such as a washer or dryer).
- Avoid placing the device near 802.11-radiating devices such as microwave ovens and 2.4 GHz cordless telephones.
- Do not place the device in a closed space where there is no air circulation (e.g., do not wrap the device in a blanket or place it under a pillow).
- Whenever you remove or insert either the battery or the SIM card, ensure your MiFi 2 device is not connected to any device or power source.
- Never use tools, knives, keys, pens or any type of object to force the door open or to remove the battery. Using any of these types of objects could result in puncturing the MiFi 2 device battery.
- Battery disposal: Contact your local recycling center for proper battery disposal.
- In the event of a battery leak: Do not allow the liquid to come in contact with skin or eyes. If contact is made, wash the area with large amounts of water and seek medical advice.

Wi-Fi Setup

To properly set up your MiFi 2 device, you need to do both of the following tasks:

- Set up a Wi-Fi Connection
- Log into the MiFi Web Interface Home Page

Set Up a Wi-Fi Connection

To connect to your MiFi 2:



• Press the **Power** button.

Tap the Connection Info icon icon to display your device's Wi-Fi Network Name (SSID) and password.



Use your normal Wi-Fi manager on your computer to locate the MiFi 2 Wi-Fi Network Name (SSID) and select it.

Wireless Network Connection	^
MIFI2-XXXX	lter
Guestnet	.al
Matrix-FreeWiFi	31
Free Public WiFi	2

	0	Ð	∦	ŝ
AirPort: Looking for Turn AirPort Off	Netw	orks.	••	No.
✓MIFI2-XXXX				ŝ
Guestnet Matrix-FreeWiFi			-	(t. (t.
Join Other Network. Create Network Open Network Prefe		s		

Windows: Click **Connect**.

Mac OS X: Click the MiFi device network name.



Windows only: The steps to connect to a Wi-Fi network vary depending on your operating system version and whether you use the native application or third-party software.



6 A window prompts you for the Wi-Fi password. Type the Wi-Fi password (found on the device) and click **OK**.

Type the netwo	ork security key	
Security key:	•••••••	
		OK Cancel



The Wi-Fi password is found on the device and is case-sensitive. Be sure to type it in exactly as it is NOTE printed.

Log into the MiFi 2 Web Interface

• From your computer's Web browser, type <u>http://my.mifi</u> (alternatively, <u>http://192.168.1.1</u>) without adding "www" in the address bar and press the **Enter** or **Return** key.

The MiFi Home page launches.



2 Click **Login**.

3 Type the web interface password: **xxxxxxxx** (case sensitive) into the login field (the default is admin).



6 Click **Login**.

The MiFi 2 Home page opens.



Configure Security

Although your device is pre-configured to have security enabled, you should change the password to a password you can easily remember and that is hard for others to guess.

Using security with your wireless network is very important. It is recommended that you configure security immediately by changing the following:

- Change the Web Interface Password
- Change the Wi-Fi Password

Change the Web Interface

- Open your browser, go to <u>http://my.mifi</u>, and then click Login. (See Log into the MiFi 2 Web Interface on page 24).
- 2 Enter the device password and then click **Login**.
- **6** Click **Change MiFi 2 Web Interface Password** in the MiFi Quick Links panel.



The **Settings > Device Settings > Web Interface Password** page opens.

4 Type your current Web Interface password into the **Enter Current password** field.

NOTE There are two types of passwords:

- The Web Interface password to access the MiFi 2 Web Interface to configure settings.
- The Wi-Fi password (also called the Wi-Fi key or network security key) that you need to connect your MiFi 2 to your computing device(s).
- Select a new Web Interface password and type it into the **Enter new password and Confirm new password** fields.

6 Click **Save Changes**.

NOVATEL WIRELESS.		ail	LTE 👣 🔲 Log In
	🧟 Settings		Θ
MiFi Home	Device Settings Hotspot Setting	gs Mobile Settings Advance	ed Settings
Connected Devices	Preferences Web Interface Pase	word Backup and Restore	
💚 Data Usage	You can change the password to Display Web Interface passwor		
Settings	Turn off to prevent the MiFi 2 Web I touchscreen.	nterface Password from displaying c	on the ON
MiFi Media Center	Change MiFi 2 Web Interface Pa	assword	You will be locked out if you enter an
Messages	Enter new password: Confirm new password:	•••••	Incorrect password too many times. Use at least 6 characters.
File Sharing			Save Changes
🧑 GPS			U
Customer Support			
i About			
			powered by MiFi*

This is the new Web Interface Password you use when you log into the browser interface.



You can find your current Web Interface password by tapping **Connection Info** on the MiFi 2 touchscreen.

Change the Wi-Fi Password

You can use WEP (64- or 128-bit), WPA-PSK, WPA2-PSK, or WPA/WPA2 mixed mode security.

IMPORTANT Record your Wi-Fi password (also referred to as the Wi-Fi key or network security key depending on your operating system).

- **1** Open your browser, go to <u>http://my.mifi</u>, then click **Login**.
- **2** Enter the Web Interface password and then click **Login**.
- Click Settings on the Navigation panel and then select Hotspot Settings. The Hotspot Settings > General window opens.
- Enter your new Wi-Fi password in the Wi-Fi Password (Key) field. The password must be 8-63 ASCII characters.
- S Click **Save Changes**. A confirmation message will display in the green bar near the top of the page when the changes have been successfully saved. You will need to reconnect all Wi-Fi devices using the new Wi-Fi password.

>		and the	E 💽 Log Out
NOVATEL WIRELESS			
	💐 Settings		Θ
MiFi Home	Device Settings Hotspot Setting	s Mobile Settings Advance	ed Settings
Connected Devices	General Advanced		
	Wi-Fi network name (SSID):	MIFI2-XXXX	
🥎 Data Usage	802.11 mode:	802.11b + 802.11g + 802 *	
~	Wi-Fi Security:	WPA2 Personal/PSK (AES) *	
Settings	Wi-Fi password (key):	200000000	8~63 ASCII characters.
MiFi Media Center			For greater security use a mixture of numbers, upper and lower case letters and other symbols.
Center	Maximum Wi-Fi connected devices:	10 -	
Messages	Display the Wi-Fi password:	×	Turn off to prevent the WI-FI password (key) from displaying on the touchscreen
File Sharing	Note: Devices connected to this MiFi on the number of devices connected		erformance may vary depending
🧑 gps			Save Changes
O Customer Support			
i About			
			powered by MiFi*

2

Accessing MiFi 2 Features

MiFi 2 Web Interface Connected Devices Data Usage Settings MiFi Media Center Messages File Sharing GPS Wi-Fi Protected Setup Customer Support About

MiFi 2 Web Interface

MiFi 2 Web Interface Home Page

The MiFi 2 Web Interface Home page is the first page you see when you connect to your MiFi 2. This is where you click **Login** to go to the MiFi 2 Login page and enter your 8-digit password to log in and customize your device and access advanced features and settings.

The MiFi 2 Web Interface allows you to check data usage and available data storage, view details for connected devices, enable file sharing, GPS, and the MiFi Media Center, read messages, and change the MiFi settings.



The Connected Devices application allows you to view devices currently connected or blocked from connection to your MiFi 2. You can also block and unblock devices from this screen.

The Connected Devices page contains the following.

- **Connected Devices** a list of compatible devices currently connected to your MiFi 2.
- **Blocked Devices** a list of compatible devices currently blocked from connecting to your MiFi 2.

On the MiFi 2 Touchscreen

1 Tap the **Connected Devices** icon 🧰 to display the Connected Devices page.



••••• LTE	1:04PM	a a 10 a a a a a a a a a a a a a a a a a
Back 💾	Connected De	evices 10
	are currently connec as are listed at the bo	
Device 1_ SD		>
Device 2_ SD		>
Device 3_ SD		>

2 Tap the connected device name to display detailed information about the device, including the device type, time connected, and Mac and IP address. Tap **Block** at the top right side of the screen to add the device to the Blocked Devices list.

ILLTE	1:04PM	⊂, ³ 🏫 10 🚃
Back	Device 1_SD	Block
Device Type	?	Generic
Time Connecte	ed Of	I/28/2013 1:02 PM
MAC Address	x	x:xx:xx:xx:xx:xx
IP Address	x	xx.xxx.x.x

•••• LTE	1:04PM	□ ³ 📫 ¹⁰ 🔤
Back	Device 1_SD	Block
Device Type	?	Generic
Time Connecte	ed C	01/28/2013 1:02 PM
MAC Address	×	
IP Address	x	xx.xxx.x.x

• Tap **Unblock** at the top right side of the page to remove a device from the Blocked Devices list.

Go to http://my.mifi/connecteddevices to manage your connected devices.

1	Provided Devices		
MiFi Home	() View devices currently connected to your MiFi 2. Blocked devices are a	lso displayed.	
10	Connected Devices		10 of 10
Connected Devices	Device_1 IPv4: xxxxxxxx.x.x I MAC address xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx	Ø	Block
📝 Data Usage	Device_2 IPv4: xxx.xxxx.x.x.I MAC address.xxxxxxxxxxxxxxxxx	Ø	Block
Settings	Device_3 IPv4: xxxxxxxxxx I MAC addressbxxxxxxxxxxxxx	1	Block
Settings	Device_4 IPv4: xxxxxxxxx I MAC address xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx	1	Block
MiFi Media Center	Device_5 IPv4: xxx.xxx.x.x.I MAC address.xxxxxxxxxxxxxxxxx		Block
3	Device_6 IPv4: xxx.xxxx.x.x I MAC address.xxxxxxxxxxxxxxxxxxxx	1	Block
Messages	Device_7 IPv4: xxx.xxxx.x.x I MAC address.xxxxxxxxxxxxxxxxx	1	Block
File Sharing	Device_8 IPv4: xxx.xxx.xxx I MAC address.xxxxxxxxxxxxxxxxxxxx	1	Block
gps	Device_9 IPv4: xxx.xxx.xx I MAC address.xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx	1	Block
Customer Support	Blocked Devices		
) About	Device_10 IPv4: xxxxxxxxx I MAC addresstxxxxxxxxxxxxxxxxx		Unblock

On the MiFi 2 Web Interface

To access the Connected Devices page and display a list of compatible connected and blocked devices, click **Connected Devices** on the Navigation panel. The Connected Devices page contains the following:

- Connected Devices a list of compatible devices currently connected to your MiFi 2.
- **Blocked Devices** a list of compatible devices currently blocked from connecting to your MiFi 2.



- **1** Click the pencil icon to assign a name to a connected device.
- 2 Enter the desired name into the name field, then select the type of device from the device type drop-down menu.

	I Devices y connected to your MiFi 2. Blocked de	
Connected Devices	y connected to your MIFT 2. DIOLKED U	10 of 10
Other	Device_1	~

3 Click the check mark to finalize the changes.

Connected Devices				
View devices currently connected to your MiFi 2. Blocked devices are also displayed.				
Connected Devices	10 of 10			
Laptop Device_1	-lb			
	Finish			

4 Click **Block** to add a connected device to the Blocked Device list.



6 Click **Unblock** to remove a device from the Blocked Devices list.

You can quickly and easily check your data usage directly on the MiFi 2 touchscreen, or on the MiFi 2 Web Interface.

On the MiFi 2 Touchscreen

- To display your data plan summary, data used, and days remaining in your billing cycle, tap the Data Usage view icon on the touchscreen.
- **2** To update the data plan summary, click **Refresh**.




On the MiFi 2 Web Interface

To access the Data Usage page, click Data Usage on the Navigation panel. The Data Usage page contains the following.

- Alert Level alerts will be generated to warn you that data usage is approaching or has reached the alert level specified on this page.
- **Reset Data Counter** use to restart the data counter and set the last reset date to today's • date.
- **Settings** use to select your desired usage alert level and cycle start date.

💖 Data Usage		0
Your estimated data usage is display	yed below.	
15 GB Alert Level		
5 GB of 15 GB used		රිරි % remaining
21 days remaining. Next cycle begin	ns on Mar 01	
Last reset on 02/01/2013		
Reset Data Counter		
Settings		
Usage alert level:	15 GB 🔻	If the desired level is not listed, select
usage alert level.	15 68	'None'.
Circle start date:		Data counter resets on this day of the month.
Cycle start date:	1 *	Data counter recets on one day of the month.
Note: Actual billed data usage may	be higher than the estimated usage	e displayed above.
		Save Changes

- To display your estimated data usage, reset your data counter, and manage your settings, select the **Data Usage** tab on the Navigation panel on the MiFi 2 Web Interface Home page.
- 2 Click **Reset Data Counter** to restart the data counter, and to set the last reset date to today's date.
- **3** To set your data usage alert level, select the desired option from the Usage alert level drop-down menu. If the desired option is not available, select None, and data usage will be recorded and displayed, but no alerts will be generated.
- To set the day of the month you wish the data counter to reset to zero, select the desired day from the cycle start date drop-down menu.
- **6** Click **Save Changes**.



NOTE Actual billed usage can be higher than estimated data usage displayed on the usage meter.

The Settings page allows you to configure and customize your MiFi2. You can enable/disable Airplane Mode, Cellular Data access, and International Roaming; configure Screen Timeout and Brightness settings; set Sound Alerts and device Wi-Fi Range; configure USB Mode and select from available language options.

On the MiFi 2 Touchscreen

1 Tap the **Settings** icon 😫 to display the Settings page.



To enable Airplane Mode, slide the Airplane Mode ON/OFF button to ON. Wi-Fi and cellular radios will be turned off, and File Sharing and MiFi Media Center will still be accessible over USB. An airplane icon will display in the upper left corner of the touchscreen to indicate the device is in Airplane Mode, and the ON/OFF buttons will fade for unavailable options.



3 To disable all Internet traffic, slide the **Cellular Data** ON/OFF button to **OFF**.





To enable International Roaming, slide the International Roaming button to ON, then click Yes to accept data roaming charges that will apply to data usage outside the U.S., Puerto Rico and the U.S. Virgin Islands.



S To configure the amount of time the touchscreen displays after a period of inactivity, tap **Screen Timeout**. Scroll to select a timeout interval from 30 seconds to 5 minutes, or never to disable Screen Timeout. If Screen Timeout is set to never, Automatic Shutdown is disabled.



The screen sleep indicator on the front of the MiFi 2 touchscreen will flash blue when the device is in sleep mode.



•••11 LTE	12:30 PI	1 Ô	– ³	(1 0	
Back	Screen Tin	eout			
30 sec	onds				
1 minut	e				
🗸 2 minu	tes				
5 minu	tes				

6 To adjust touchscreen brightness, tap **Screen Brightness**. Slide the brightness indicator button to set the desired level.





To enable or disable sound alerts, tap Sound Alerts. Scroll to select from available alerts, including Battery, Data Usage, International Roaming, Connecting Devices, microSD Card and Power. Slide the ON/OFF button ON to enable the selected alert.

12:30 PM	Ċ۵ (7 ³ 6	1 0 🗾 .
Setting	gs		
			>
\bigcirc			>
•			
			>
		Settings	2



To configure the device Wi-Fi Range, tap Device Wi-Fi Range. Select High for the largest network area, or Low to conserve battery power.

📲 LTE 12:30 PM 🥝 🗬 🏪 💭	LIE 12:30 PM 🙆 🗬 3 🖴 10 🥅	
Back Settings	Back Wi-Fi Range	
Sound Alerts	✓ High (Best range)	
奈 Wi-Fi Range 📀	Low (Saves battery)	
🖞 USB Mode 👔 🔹 🗲	Personalize at http://my.mifi	

To configure your USB Mode connection, tap USB Mode. Select Charge Only to recharge the battery via USB cable, or Tethering over USB to connect the device over a USB cable with a data connection. Windows XP users must install drivers from the MiFi 2 Web Interface.



••••• LTE	12:30 PM	Ø □ ³	🖀 10 📃
Back	🜵 USB Mo	de	
✔ Charge On	ly		
Tethering o	over USB 🔋		
Per	rsonalize at http:/	//my.mifi	





To display and select from the available language options, tap Language, then select from the list of languages listed. To access and configure additional features and settings, login to the MiFi 2 Web Interface at http://my.mifi, then select Settings > Device Settings > Preferences.





On the MiFi 2 Web Interface

To access Advanced, Hotspot, and Mobile Setting options, select the **Settings** tab on the Navigation panel on the MiFi 2 Web Interface Home page.



The Settings page contains the following:

- **Device Settings** (See <u>Device Settings</u> on page 42.)
- Hotspot Settings (See <u>Hotspot Settings</u> on page 52.)
- Mobile Settings (See Mobile Settings on page 58.)
- Advanced Settings (See <u>Advanced Settings</u> on page 64.)

Device Settings

The Device Settings menu includes the following additional menu options.

- **Preferences** (See <u>Preferences</u> on page 43.)
- Web Interface Password (See <u>Web Interface Password</u> on page 47.)
- **Backup and Restore** (See <u>Backup and Restore</u> on page 49.)

NOVATEL WIRELESS.		ad t	ТЕ	🤣 🔲 Log Out
	🥸 Settings			ø
MiFi Home	Device Settings Hotspot	Settings Mobile Settings A	Advanced Setting	s
Connected Devices	Preferences Web Interfac	ce Password Backup and Restor	re	
	Device Preferences			
🤎 Data Usage	Device name:	MiFi2	This is the File Sharin	name you will see when using g and MIFI Media Center.
Settings				tters, numbers, underscores (_)
0	USB mode:	Ethernet over USB	Ŧ	
MiFi Media Center	Automatic shutdown:	After 30 minutes	 Shut down connected. 	the MIFI 2 when no devloes are
	Turn off display:	After 5 minutes	-	
Messages	User Preferences			
File Sharing	Language:	English	-	
•	Date format:	mm/dd/yyyy	-	
🧑 GPS	Time:	12 Hour	Ŧ	
0	Distance:	Feet	-	
Customer Support	Number format:	3,234.00	*	
				Save Changes
About				
				powered by MiFi*

Preferences

The Preferences section allows you to customize your MiFi device settings and preferences. The Preferences section displays the following:

- **Device Preferences** allows you to set auto shutdown preferences and to enable Ethernet over USB. Select your shutdown preference from the **Automatic Shutdown** drop-down menu. Click **Enable Ethernet over USB** to enable.
- **User Preferences** allows you to change date and time, temperature, distance and numeric format preferences.

💐 Settings			0
Device Settings Hotspot Setting	s Mobile Settings Advan	108	d Settings
Preferences Web Interface Pass	word Backup and Restore		
Device name:	MiFi2		This is the name you will see when using File Sharing and MIFI Media Center. Use only letters, numbers, underscores (_) and dashes (-).
USB mode:	Ethernet over USB	Ŧ	
Automatic shutdown:	After 30 minutes	Ŧ	Shut down the MIFI 2 when no devices are connected.
Turn off display:	After 5 minutes	Ŧ	
User Preferences			
Language:	English	Ŧ	
Date format:	mm/dd/yyyy	Ŧ	
Time:	12 Hour	Ŧ	
Distance:	Feet	Ŧ	
Number format:	3,234.00	Ŧ	
			Save Changes

Setting Device Preferences

To set device preferences:

• Select the USB mode you want to use from the **USB mode** drop-down menu.



Select the automatic shutdown time interval you want to use from the **Automatic shutdown** drop-down menu. If **Turn off display** is set to **Never**, Automatic shutdown is disabled.

Device Settings Hotspot Set	tings Mobile Settings Ad	lvance	d Settings
Preferences Web Interface F	Password Backup and Restore		
Device Preferences			
Device name:	MiFi2		This is the name you will see when using File Sharing and MIFI Media Center.
			Use only letters, numbers, underscores (_) and dashes (-).
USB mode:	Ethernet over USB	Ŧ	
Automatic shutdown:	After 30 minutes	•	Shut down the MIFI 2 when no devices are connected.
Turn off display:	After 5 minutes After 10 minutes After 30 minutes		our reade.
	Never		

- Select the time interval you want to use to turn off the display from the **Turn off display** drop-down menu. Choose from 30 seconds, 1 minute, 2 minutes, 5 minutes, or never.
- **G** Click **Save Changes**.

Setting User Preferences

To select the language, and set the date, time, distance and number format preferences:

• Select the language you want to use from the **Language** drop-down menu. You can choose between English and French.

Device Settings Hotspot Setting	gs Mobile Settings Adv	/ance	ed Settings
Preferences Web Interface Pas	ssword Backup and Restore		
Device Preferences			
Device name:	MiFi2		This is the name you will see when using File Sharing and MIFI Media Center.
			Use only letters, numbers, underscores (_) and dashes (-).
USB mode:	Ethernet over USB	Ŧ	
Automatic shutdown:	After 30 minutes	Ŧ	Shut down the MIFI 2 when no devices are connected.
Turn off display:	After 5 minutes	Ŧ	
User Preferences			
Language:	English	-]
Date format:	English Français		
Time:	12 Hour	Ŧ	
Distance:	Feet	Ŧ	
Number format:	3,234.00	Ŧ	
			Save Changes

2 Select the date format you want to use from the **Date format** drop-down menu.

You can choose between European (dd/mm/yyyy) and U.S. (mm/dd/yyyy) date formats.

Device Settings Hotspot Sett	ings Mobile Settings	Advance	d Settings
Preferences Web Interface P	assword Backup and Resto	ore	
Device Preferences			
Device name:	MiFi2		This is the name you will see when using File Sharing and MIFI Media Center.
			Use only letters, numbers, underscores (_) and dashes (-).
USB mode:	Ethernet over USB	Ŧ	
Automatic shutdown:	After 30 minutes	Ŧ	Shut down the MIFI 2 when no devices are connected.
Turn off display:	After 5 minutes	Ŧ	
User Preferences			
Language:	English	Ŧ	
Date format:	mm/dd/yyyy	*	
Time:	dd/mm/yyyy		
Distance:	Feet	Ŧ	
Number format:	3,234.00	Ŧ	
			Save Changes

3 Select the time format you want to use from the **Time** drop-down menu.

You can choose between 12 and 24 hour formats.

Device Settings Hotspot Setting	ngs Mobile Settings Adva	anced Settings
Preferences Web Interface Pa	ssword Backup and Restore	
Device Preferences		
Device name:	MiFi2	This is the name you will see when using File Sharing and MIFI Media Center.
		Use only letters, numbers, underscores () and dashes (-).
USB mode:	Ethernet over USB	v
Automatic shutdown:	After 30 minutes	 Shut down the MIFI 2 when no devices are connected.
Turn off display:	After 5 minutes	*
User Preferences		
Language:	English	*
Date format:	mm/dd/yyyy	*
Time:	12 Hour	
Distance:	12 Hour 24 Hour	
Number format:	3,234.00	•
		Save Changes

Gelect the number format units you want to use from the **Number format** drop-down menu.

Device Preferences		
Device name:	MiFi2	This is the name you will see when using File Sharing and MIFI Media Center.
		Use only letters, numbers, underscores (and dashes (~).
JSB mode:	Ethernet over USB	T
Automatic shutdown:	After 30 minutes	 Shut down the MIFI 2 when no devices are connected.
urn off display:	After 5 minutes	Ŧ
Iser Preferences		
.anguage:	English	.
Date format:	mm/dd/yyyy	Ŧ
ïme:	12 Hour	T
Distance:	Feet	T
lumber format:	3,234.00	-

6 Click **Save Changes**.

Web Interface Login

The Web Interface Password section displays the following:

- **Display Web Interface password** allows you to turn the MiFi 2 Web Interface Password display on the Connection Info page of the touchscreen ON or OFF. The default setting is ON.
- **Change MiFi 2 Web Interface Password** allows you to change the Web Interface Password on your MiFi 2.

🤹 Settings		0	
Device Settings Hotspot Set	ttings Mobile Settings Advan	ped Settings	
Preferences Web Interface Password Backup and Restore			
You can change the passwo	ord for this MiFi 2 Web Interface.		
Display Web Interface passv	word		
Turn off to prevent the MiFi 2 Web Interface Password from displaying on the touchscreen.			
Change MiFi 2 Web Interface Password			
Enter current password:	••••	You will be locked out if you enter an Incorrect password too many times.	
Enter new password:	•••••	Use at least 6 characters.	
Confirm new password:	•••••]	
		Save Changes	

Displaying the Web Interface Password on the Touchscreen

To change the display of the Web Interface Password on the MiFi 2 touchscreen:

• To turn the Web Interface Password display ON, slide the ON/OFF button to **ON**.



2 To turn the Web Interface Password display OFF, slide the ON/OFF button to **OFF**.



Changing the MiFi 2 Web Interface Password

To change your current Web Interface Password:

- Enter your current Web Interface Password in the Enter current password field.
- 2 Enter your new Web Interface Password in the **Enter new password** field.
- **③** Enter your new Web Interface Password in the **Confirm new password** field.
- **G** Click **Save Changes** to save the changes made to your Web Interface Password.

Device Settings Hotspot Setting	gs Mobile Settings Advanc	ed Settings		
Preferences Web Interface Pase	Preferences Web Interface Password Backup and Restore			
() You can change the password t	for this MiFi 2 Web Interface.			
Display Web Interface passwor	ď			
Turn off to prevent the MiFi 2 Web Interface Password from displaying on the touchscreen.				
Change MiFi 2 Web Interface Pa	assword			
Enter current password:	•••••	You will be locked out if you enter an incorrect password too many times.		
Enter new password:	•••••	Use at least 6 characters.		
Confirm new password:	•••••			
		Save Changes		

Backup and Restore

The Backup and Restore section displays the following:

- **Backup** allows you to save your device settings to your computer.
- **Restore** allows you restore settings from a previously saved backup file.
- **Restore to Factory Defaults** restores all settings and preferences to the factory default.

🧟 Settings		0
Device Settings Hotspot Setting	gs Mobile Settings Advance	ed Settings
Preferences Web Interface Pass	word Backup and Restore	
Back up your MiFi device settin file will only work with this partie	ngs and preferences to your compute icular MiFi device.	er. Please note that the backup
Backup		
Save your MiFi device settings to yo	our computer.	
Enter your MiFi Web Interface password:		You will be locked out if you enter an incorrect password too many times.
	Back Up Now	
Restore		
Restore settings from a previously sa	ved backup file.	
Enter your MiFi Web Interface password:		You will be locked out if you enter an incorrect password too many times.
Select a file:	No file selected Choose File	
	Restore Now	
Restore to Factory Defaults		
Restore all settings to the factory de	faults.	
	Restore Factory Defaults	

Backing Up Your MiFi 2 Settings

To save your MiFi 2 settings to your computer:

• Enter your Web Interface Password in the Enter your MiFi Web Interface password field and click Back Up Now.



Restoring Your MiFi 2 Settings

To restore settings from a previously saved backup file on your computer:

- Enter your Web Interface Password in the Enter your MiFi Web Interface password field.
- **2** Click **Choose File** to select a file to restore.
- Olick **Restore Now** to restore the selected backup file.

Restore		
Restore settings from a previously sa	aved backup file.	_
Enter your MiFi Web Interface password:	*******	You will be locked out if you enter an incorrect password too many times.
Select a file:	No file selected Choose File	
password:	No file selected Choose File Restore Now	

Restoring Your MiFi 2 to Factory Defaults

To restore all device settings to the original factory settings:

• Click Restore Factory Defaults.



Hotspot Settings

The Hotspot Settings menu includes the following additional menu options.

- **General** (See <u>General</u> on page 53.)
- **Advanced** (See <u>Advanced</u> on page 56.)

	💐 Settings		Ø
MiFi Home	Device Settings Hotspot Setting	ngs Mobile Settings Advanc	ed Settings
Connected Devices	General Advanced		
	Wi-Fi network name (SSID):	MIFI2-XXXX	
🤎 Data Usage	802.11 mode:	802.11b + 802.11g + 802	
	Wi-Fi Security:	WPA2 Personal/PSK (AES)	
Settings	Wi-Fi password (key):	XXXXXXXXXX	8~63 ASCII characters.
MiFi Media Center			For greater security use a mixture of numbers, upper and lower case letters and other symbols.
Center	Maximum Wi-Fi connected devices:	10 -	
Messages	Display the Wi-Fi password:	\checkmark	Turn off to prevent the WI-FI password (key) from displaying on the touchscreen
Eile Sharing	Note: Devices connected to this Mi on the number of devices connected	Fi 2 use data from your data plan. P ed and other factors.	erformance may vary depending
🧑 gps			Save Changes
Customer Support			
i About			

General

The General section displays the following:

- Wi-Fi network name (SSID) name of the network you are connected to. You can change the name to something more descriptive if you want; for example, if there are several MiFi devices in your area you might put your name in the network name; for example, "Sarah's MiFi".
- **802.11 mode** the type of wireless networking you are currently using. The available modes are:
 - 802.11b +802.11g
 - 802.11b only
 - 802.11g only
 - 802.11n only
 - 802.11b+802.11g+802.11n
 - 802.11g+802.11n
- Wi-Fi Security the type of security the profile is using.
- Wi-Fi password (key) password used to access the Wi-Fi network. The required format varies by the type of security.
- **Maximum Wi-Fi connected devices** select the number of devices you want to allow to connect to your MiFi device (1 10).
- **Display the Wi-Fi password** turn off to prevent the Wi-Fi Password (Key) from displaying on the touchscreen.

Changing Your Network Name (SSID) and Settings

Your MiFi 2 allows you to change the network name and Wi-Fi password.

To change your network name and settings:



• Enter the new network name in the **Wi-Fi network name (SSID)** field.

2 Select the 802.11 mode from the **802.11 mode** drop-down menu.

General Advanced		
Wi-Fi network name (SSID):	MIFI2-xxxx	
802.11 mode:	802.11b + 802.11g + 802 *	
Wi-Fi Security:	802.11b only 802.11g only	
Wi-Fi password (key):	802.11n only 802.11b + 802.11g + 802.11n	8~63 ASCII characters.
	802.11g + 802.11n	For greater security use a mixture of numbers, upper and lower case letters and other symbols.



3 Select the desired security from the **Wi-Fi Security** drop-down menu.

WEP 64 bit is the least secure but the most compatible with other systems. WPA/WPA2 is the most secure but the least compatible with other systems. Choose the most secure protocol that works with the computers and other computing devices you want to connect to your MiFi 2.

General Advanced		
Wi-Fi network name (SSID):	MIFI2-xxxx	
802.11 mode:	802.11b + 802.11g + 802 💌	
Wi-Fi Security:	WPA2 Personal/PSK (AES)	
Wi-Fi password (key):	WPA2 Personal/PSK (AES)	8~63 ASCII characters.
	WPA/WPA2 Mixed Mode	For greater security use a mixture of numbers, upper and lower case letters and other symbols.

6 Enter the new network key in the **Wi-Fi password (key)** field. Write down the new network name and network key.

General Advanced		
Wi-Fi network name (SSID):	MIFI2-XXXX	
802.11 mode:	802.11b + 802.11g + 802 💌	
Wi-Fi Security:	WPA2 Personal/PSK (AES) 🛛 🔻	
Wi-Fi password (key):	XXXXXXXXXX	8~63 ASCII characters.
	2	For greater security use a mixture of numbers, upper and lower case letters and other symbols.

Select the maximum number of Wi-Fi connections (1 - 10) from the **Maximum Wi-Fi** connected devices drop-down menu.

Device Settings Hotspot Setting:	s Mobile Settings Advance	d Settings
General Advanced		
Wi-Fi network name (SSID):	MIFI2-XXXX	
802.11 mode:	802.11b + 802.11g + 802 💌	
Wi-Fi Security:	WPA2 Personal/PSK (AES) -	
Wi-Fi password (key):	XXXXXXXXXX	8~63 ASCII characters.
		For greater security use a mixture of numbers, upper and lower case letters and other symbols.
Maximum Wi-Fi connected devices:	10	
Display the Wi-Fi password:	3 4	Turn off to prevent the WI-FI password (key) from displaying on the touchscreen
Note: Devices connected to this MiFi	5	rformance may vary depending
on the number of devices connected	9	
	10 Ju	Save Changes

6 Click the **Display the Wi-Fi password** check box to display the Wi-Fi password (key) on the touchscreen.

General Advanced		
Wi-Fi network name (SSID):	MIFI2-XXXX	
802.11 mode:	802.11b + 802.11g + 802 💌	
Wi-Fi Security:	WPA2 Personal/PSK (AES) 🛛 🔻	
Wi-Fi password (key):	XXXXXXXXXX	8~63 ASCII characters.
		For greater security use a mixture of numbers, upper and lower case letters and other symbols.
Maximum Wi-Fi connected devices:	10 👻	
Display the Wi-Fi password:	YE.	Turn off to prevent the WI-FI password (key) from displaying on the touchscreen
Note: Devices connected to this MiFi	2 use data from your data plan. Pe	rformance may vary depending
on the number of devices connected	and other factors.	
		Save Changes

Click Save Changes.

IMPORTANT You must write down the new network name and Wi-Fi password before you click **Save Changes**. Your wireless connection will be disabled at this point and you must reconnect with the new settings you just established.

Advanced

The Advanced section displays the following:

- **Broadcast Wi-Fi Network Name (SSID)** makes your MiFi 2 device SSID visible to other compatible Wi-Fi enabled devices.
- **Wi-Fi Privacy Separation** prevents devices connected to your MiFi 2 from communicating with each other.
- WMM (Wi-Fi Multimedia) allows you to give a higher priority to real time applications.
- **Channel** allows you to select a specific communication channel, or to let the MiFi 2 automatically select a channel.
- Wi-Fi Power enables you to select the size of your Wi-Fi network.

To configure your Hotspot Advanced Settings:

- To make your MiFi 2 visible to other compatible, Wi-Fi enabled devices, click the Broadcast
 Wi-Fi network name (SSID) check box.
- To prevent connected devices from communicating with each other, click the Wi-Fi privacy separation check box.

General Advanced			
Broadcast Wi-Fi network name (SSID):	\checkmark		
Wi-Fi privacy separation:	- They		If enabled, connected devices cannot communicate with each other.
Wi-Fi Multimedia (WMM):	~ ~		WMM gives higher priority to real time applications like video and Skype. WMM is mandatory if using 802.11n, and should be enabled even if not using 802.11n.
Channel:	Automatic	Ŧ	
Wi-Fi power:	High Power - better perfor	Ŧ	Adjust the size of your MIFI 2's WI-FI network area.
			Save Changes

- To give higher priority to real-time applications like video and Skype, click the Wi-Fi Multimedia (WMM) check box. It is mandatory to enable WMM when using 802.11n, and recommended for all other protocols.
- **G** To select a specific communication channel, choose from the drop-down menu options. To allow the device to automatically select the channel, choose the **Automatic** option.

5 To configure the Wi-Fi coverage area for your MiFi 2, select from the drop-down menu options. Select Low Power - longer battery life to limit the size of your Wi-Fi network and conserve battery life, or High Power - shorter battery life to maximize the size of your Wi-Fi network.

General Advanced		
Broadcast Wi-Fi network name (SSID):	\checkmark	
Wi-Fi privacy separation:		If enabled, connected devices cannot communicate with each other.
Wi-Fi Multimedia (WMM):	~	WMM gives higher priority to real time applications like video and Skype. WMM is mandatory if using 802.11n, and should be enabled even if not using 802.11n.
Channel:	Automatic III III III III III III III III III I	
Wi-Fi power:	High Power - better perfor Low Power - longer battery life High Power - better performance	Adjust the size of your MIFI 2's WI-FI network area. Save Changes

6 Click **Save Changes**.

Mobile Settings

The Mobile Settings menu includes the following menu options.

- **Mobile** (See <u>Mobile</u> on page 59.)
- **APN** (See <u>APN</u> on page 60.)
- **Network Selection** (See <u>Network Selection</u> on page 61.)
- Manual DNS (See Manual DNS on page 62.)
- **SIM Lock** (See <u>SIM Lock</u> on page 63.)

	🧟 Settings
MiFi Home	Device Settings Hotspot Settings Mobile Settings Advanced Settings
Connected Devices	Mobile APN Network Selection Manual DNS SIM Look
🤎 Data Usage	Manage your mobile broadband data connection.
-	Cellular Data
Settings	Turn off cellular data to prevent all internet traffic from using the mobile broadband ON ON
	International Roaming
Center	Turn off international roaming to prevent additional data charges when roaming.
3 Messages	Technology: Automatic (LTE, 4G, 3G, 💌
,	Save Changes
File Sharing	
🧑 GPS	
Customer Support	
i About	

Mobile

The Mobile section displays the following:

- **Cellular Data** turn off cellular data to prevent all internet traffic from using the mobile broadband connection.
- International Roaming turn on to access the Internet when traveling internationally.
- **Technology** select desired technology options. Choose from Automatic (LTE, 4G, 3G, 2G); 4G, 3G, 2G; LTE only; and 2G only.



Slide the **ON/OFF** button to enable or disable cellular data or international roaming.

APN Profiles

This section is for **enterprise use only**. Changing default settings may adversely affect your Internet connection. The APN Profiles section displays the following:

- Active APN Profile choose between Default or Custom.
- **APN** enter a name for your Custom APN Profile in the APN field.

Device Settings Hotspot Set	tings Mobile Setting	js Advance	d Settings
Mobile APN Network Sel	ection Manual DNS	SIM Look	
Changing default settings m	ay adversely affect you	r internet conne	ection.
Active APN profile:	Custom	Ŧ	
APN:	Broadband]
Authentication:	None]
User name:]
Password:			
			Save Changes

To change your active APN profile:

- **1** Select an available profile from the Active APN Profile drop-down menu.
- 2 Enter the name of the APN profile in the APN field.
- Select authentication from Authentication drop-down menu. Choose from None, PAP, and CHAP.
- G For PAP or CHAP Authentication, enter your User name as specified by your service provider in the User name field. If Authentication is None, this can be left blank.
- **S** For PAP or CHAP Authentication, enter your Password as specified by your service provider in the Password field. If Authentication is None, this can be left blank.
- **6** Click **Save Changes**.

Network Selection

Your MiFi 2 automatically connects to the optimal mobile network available. In many cases you can also connect to a network manually if multiple networks are available. Manual network selection will not be available if there are no additional available networks.



Manual DNS

The Manual DNS section displays the following:

- Enable Manual DNS allows you to select a specific DNS address.
- DNS Address 1 allows you to enter your primary DNS address.
- **DNS Address 2** allows you to enter a secondary DNS address if you have one. This field can also be left blank.

Device Settings	Hotspot Settings	Mobile Settings	Advanced Settings
Mobile APN	Network Selection	Manual DNS	SIM Look
Your MiFi dev manually.	vice automatically sel	ects a Domain Nam	e Server (DNS). You can also select one
Enable manual DN	IS:		
NS address 1:			Mandatory

To enable Manual DNS:

- Click the **Enable Manual DNS** check box.
- 2 Enter the primary DNS address in the DNS Address 1 field.
- Enter a second DNS address in the CNS Address 2 field. This field may be left blank if you do not have a second DNS address.
- **G** Click **Save Changes**.

Device Settings Hotspot S	ettings Mobile Settings	Advanced Settings
Mobile APN Network S	election Manual DNS	SIM Look
Your MiFi device automatimanually.	tically selects a Domain Nar	me Server (DNS). You can also select one
Enable manual DNS:	~	
DNS address 1:	XXX.XXX.X.X	Mandatory
DNS address 2:		Optional
		Save Changes

SIM Lock

The SIM Lock section displays the following:

- **SIM Status** displays the current SIM status.
- **Desired Action** allows you to select Enable PIN Lock from the drop-down menu.
- Enter current SIM PIN allows you to enter your desired PIN.

The SIM card in your MiFi device can be locked using a PIN. If the SIM card is locked, you must enter a PIN before connecting to the Internet. To lock your SIM card:

- Select **Enable PIN Lock** in the **Desired Action** drop-down menu.
- Ocontact your service provider to request a SIM PIN code.
- **6** Enter a PIN in the **Enter Current SIM PIN** field.
- **G** Click **Save Changes**.

Device Settings	Hotspot Settings	Mobile Settings	Advance	d Settings
Mobile APN	Network Selection	Manual DNS	SIM Lock	l i i i i i i i i i i i i i i i i i i i
		vice can be locked us you are able to conne		i the SIM card is looked you ernet.
SIM status:	R	eady		
Desired action:	E	Enable PIN lock	*	
Enter current PIN:	>	00000000		Contact your service provider for the default PIN.
3 attempts remain	until your SIM is PU	K locked.		
		times will PUK lock y ur service provider to		d you will be unable to use this SIM.
				Save Changes

Advanced Settings

The Advanced Settings menu includes the following menu options:

- **Firewall** (See <u>Firewall</u> on page 65.)
- LAN (See <u>LAN</u> on page 66.)
- **Port Filtering** (See <u>Port Filtering</u> on page 67.)

	😪 Settings 🛛 🕑
MiFi Home	Device Settings Hotspot Settings Mobile Settings Advanced Settings
Connected Devices	Firewall LAN Port Filtering
	The firewall determines which Internet traffic is allowed.
💚 Data Usage	VPN Passthrough
Settings	VPN Passthrough allows connected devices to establish a VPN tunnel to a remote server ON
MiFi Media Center	
Messages	
Eile Sharing	
🧑 gps	
Oustomer Support	
i About	

Firewall

The Firewall section displays the following:

• VPN Passthrough – allows connected devices to establish a VPN tunnel to a remote server or device.



To allow connected devices to establish a VPN tunnel to a remote server or device:

• Slide the ON/OFF button to **ON**.

LAN

The LAN section displays the following:

- IP Address the address that identifies the MiFi 2 on the network.
- Subnet Mask the standard address for the MiFi 2 subnet.
- MAC Address the physical address or hardware address of your MiFi device.
- **Enable DHCP Server** allows the device to automatically assign a local IP address to a new device joining your network (such as a wireless printer or another computer).
- Start DHCP Address Range at the current range of IP addresses assigned by the MiFi DHCP server.
- **Current DHCP Address Range** the beginning range of IP addresses assigned by the MiFi DHCP server.

💐 Settings			Ø
Device Settings Hotspot Setting	ngs Mobile Settings	Advanced Settings	
Firewall LAN Port Filtering			
IPv4			
IP address:	XXX.XXX.X		
Subnet mask:	XXX.XXX.XXX		
MAC address:	*****		
Enable DHCP server:	\checkmark		
Start DHCP address range at:	x.x.xxx.xxx		
Current DHCP address range:	xxx.xxx.x.x - xxx.xxx.x.	xxx	
			Save Changes

Port Filtering

Port Filtering allows you to enhance the security of your system by only allowing certain applications to reach the Internet. The Port Filtering section displays the following:

- **Port Filtering** restricts internet traffic to specific applications. Slide the ON/OFF button to ON to turn Port Filtering on.
- **Applications** select the check box next to one or more application (DNS, NNTP, SNMP, FPO, POP3, Telnet, HTTP, SMTP) to turn the particular application on.
- **Custom Applications** select **Add Custom Application** to add an application not included in the applications section.



To enable Port Filtering and restrict Internet traffic to specific applications:

- Click the **Port Filtering** check box.
- **2** Click the application check box to enable/disable the selected application.
- **6** Click **Save Changes** to apply any changes made to the Port Filtering application settings.

Device Settings Hotspot Settings Mobile Settings Advanced Settings
Firewall LAN Port Filtering
Port Filtering
If on, only traffic from selected applications can access the Internet. Note that DNS is always allowed.
Applications
Select the applications you wish to allow.
 Email (POP3, IMAP, SMTP)
✓ FTP
✓ НТТР
V HTTPS
✓ Telnet
Custom Applications You can define your own applications and then enable or disable them as needed. To define an application you need to know the outgoing ports used by the application.
Add Custom Application Save Changes

To enable Port Filtering for custom applications:

• Click Add Custom Applications.

- 2 Enter the desired name in the App Name field.
- **③** Enter the appropriate values in the Begin Port and End Port fields.
- **G** Select either TCP or UDP from the Protocol drop-down menu.
- **6** Click the check mark to finish editing the application.
- **6** Click **Save Changes** to save and apply the settings.

	efine your own application n you need to know the ou			eeded. To define	an
Enable	App Name	Start Port	End Port	Protocol	Delete
~	Custom App 1	XXXX	XXX		

MiFi Media Center allows you to place movies, music and photos on a microSD card inserted in the MiFi 2 - up to 32 GB. Play them on connected devices using a web browser or on DLNA capable TVs or players.

To enable the MiFi Media Center, tap the **MiFi Media Center** icon on the MiFi 2 touchscreen, or select **MiFi Media Center** on the Navigation panel on the MiFi 2 Web Interface.

On the MiFi 2 Touchscreen

1 Tap the MiFi Media Center icon 📴 to display the MiFi Media Center page.



To access the MiFi Media Center and display a list of available video, audio and image media files, slide the ON/OFF button to ON.

12:30	рм 🙆 🗬 ³ 🏰 10 🛙	📑 LTE 12:30 PM 🙆 🗬 ³ 🏰 ¹⁰) 🔜
Back MiFi I	1edia Center	Back 🔐 MiFi Media Center	
Access and play movies, on your microSD card o			
MiFi Media Center 💡	ON	Play from a web browser	>
Available Media	Videos	Play media from a DLNA compatible device	e. 📏
	Music	3 Find more on Media Center at: http://my.mifi/mediacenter/	

3 For more MiFi Media Center options, go to <u>http://my.mifi/mediacenter</u>.

On the MiFi 2 Web Interface

To view and share your media files with connected devices, play your media files in your web browser, and access MiFi Media Center applications, select the **MiFi Media Center** tab on the Navigation panel on the MiFi 2 Web Interface Home page.



The MiFi Media Center page contains the following.

- **Status** (See <u>Status</u> on page 71.)
- Media (See Media on page 73.)

Status

Turning on the MiFi Media Center makes the media content on the microSD card available to connected devices. To view and share your media files with other DLNA capable devices:

1 Select the **Status** tab to display the MiFi Media Center Status page.

MiFi Media Center	0
Status Media	
MiFi Media Center enables you to access and play movies, music and photos stored on yo microSD TM card on connected devices.	ur
 Use the Media tab to view and play files in your web browser. Use a DLNA app on your connected device. 	
Enable MiFi Media Center	
Turning on the MiFi Media Center makes the media content on the microSD card available to connected devices.	OFF

Slide the ON/OFF button to **ON** to enable the MiFi Media Center and display MiFi Media Center status details and options.

🎝 MiFi Media Cent	er Ø
Status Media	
microSD™ card on connected	
Use the Media tab to view Use a DLNA app on your (v and play files in your web browser. connected device.
Enable MiFi Media Center Turning on the MiFi Media Center available to connected devices.	makes the media content on the microSD card
MiFi Media Center Status	
Server name:	MiFi2
Server status:	Not streaming
microSD card status:	Available
Videos:	2
Music:	3
Photos:	55
Rescan Content Clear Cache	Restart MiFi Media Center


③ To rescan the contents on the microSD card, click **Rescan Content**. Click **Confirm** to begin the rescan.

MiFi Media Center Status	
Server name:	MiFi2
Server status:	Not streaming
microSD card status:	Available
Videos:	2
Music:	3
Photos:	55
Rescan Content Clear Ca	che Restart MiFi Media Center
20	

To clear your cache and ensure that you have the latest versions of stored files, click **Clear Cache**. Click **Confirm** to delete the cached files.

9
Media Center



6 To restart the MiFi Media Center Server, click **Restart Server**. Click **Confirm** to begin the restart.

MiEi Madia Cantas Status	
MiFi Media Center Status	
Server name:	MiFi2
Server status:	Not streaming
microSD card status:	Available
Videos:	2
Music:	3
Photos:	55
Rescan Content Clear Cache	Restart MiFi Media Center



Media

The Media menu enables you to browse your media and displays these additional menu options.

- **Photos** (See <u>Photos</u> on page 74.)
- Videos (See <u>Videos</u> on page 75.)
- **Music** (See <u>Music</u> on page 76.)

🎒 MiFi Med	ia Center		Ø
Status Media			
Photos Videos	Music		
Browse the media	files on the micros	6D card inserted into this MiFi	device.
My Library:		Album	Ŧ
Album			
Wi-Fi_device UI 41 item(s)	Screenshots 55 item(s)		

Photos

The My Library drop-down menu allows you to browse and sort the photo files on the MiFi 2 microSD card using these options:

- **Album** sorts photo files by album.
- All Photos sorts all photo files.
- **By Date** sorts photo files by date.
- **By Folder** sorts photo files by folder.

Status Media				
Photos Videos	Music			
Browse the media	files on the microSI	D card inserted into	this MiFi devi	2 8.
My Library:		By Date Album	Ŧ	
		All Photos By Date		
By Date		By Folder	<u>_</u>	
- ALL -	2012	2013		
5 item(s)	4 item(s)	2 item(s)		

Videos

The My Library drop-down menu allows you to browse and sort the video files on the MiFi 2 microSD card using these options:

- All Videos sorts all video files.
- **By Date** sorts video files by date.
- **By Folder** sorts video files by folder.

Status Media	
Photos Videos Mus	ic
Browse the media files of	on the microSD card.
My Library:	All Videos All Videos By Date
All Videos	By Folder
Dry Tortugas_1 File Size: 9.67 MB Format: video/quickt Year: 2012	00:30 Wildlife in HD File Size: 25.03 MB Format: video/x-ms Year: 2009

Music

The My Library drop-down menu allows you to browse and sort the music files on the MiFi 2 microSD card using these options:

- **Album** sorts music files by album.
- All Tracks sorts music files by track.
- Artist sorts music files by artist.
- Artist/Album sorts music files by artist/album.
- **By Folder** sorts music files by folder.

Status Media	
Photos Videos Music	
Browse the media files on the micros	SD card inserted into this MiFi device.
My Library	All Tracks
	All Tracks
All Tracks	Artist Artist/Album By Folder
Albino	Allemande
Artist: Brian Boyko Album: Free PD	Artist: J. S. Bach Album: Unknown
Artist: J. S. Bach Album: Unknown	

The Messages page lists the SMS messages delivered to your MiFi 2 by your service provider. All messages are listed in order by date, with unread messages indicated in bold on a colored background. All messages are marked as read once they are displayed on this page.

On the MiFi 2 Touchscreen

- Tap the **Messages** icon is to display the Messages page. The number of unread messages appears at the top of the page.
- 2 To delete a message, tap the garbage can and tape Delete on the Confirm Delete message screen.









On the MiFi 2 Web Interface

Select the **Messages** tab on the Navigation panel on the MiFi 2 Web Interface Home page.



• Click **Delete** next to a message to delete only that message.

Messages		0
Read and delete messages.		
	0 unread	of 3
1-xxx-xxx-xxxx New message #3	03/11/2013 2:08 PM	- Im
1-xxx-xxx-xxxx New message #2	03/11/2013 2:07 PM	Delete this message
1-xxx-xxx-xxxx New message #1	03/11/2013 2:07 PM	×
	Delete	All

• Click **Delete All Messages** to delete all messages listed.

Messages		•
Read and delete messages.		
	0 unread	0
1-xxx-xxx-xxxx New message #3	03/11/2013 2:08 PM	×
1-xxx-xxx-xxxx New message #2	03/11/2013 2:07 PM	×
1-XXX-XXX-XXXX New message #1	03/11/2013 2:07 PM	×

File Sharing

Your MiFi 2 includes a microSD card slot that allows you to store files and share them with connected devices. microSD cards are sold separately.

The File Sharing page enables you to share files stored on the microSD card with other compatible devices, like your laptop and tablet, that are connected to the MiFi 2.

Enable File Sharing

Insert a microSD card. File sharing is not enabled by default. If file sharing is enabled, devices connected to your MiFi 2 can access the files on your microSD card.

NOTE

- Be careful not to touch the contacts.
- Do not force the card into the slot. Check the orientation of the card if you have difficulties, and be sure it slides easily into the slot.
- Your MiFi 2 supports both microSD and microSDHC (High Capacity) cards up to 32GB. (For the purposes of this User Guide, microSD is used.)

On the MiFi 2 Touchscreen

1 Tap the File Sharing icon 😑 to display the File Sharing page.



2 Slide the File Sharing ON/OFF button to ON.



Scroll to the lower part of the page to access instructions for using File Sharing on Windows, Mac or Tablets. For more File Sharing options, go to http://my.mifi/filesharing.

Accessing Shared Files

Instructions for Windows 7:

- **1** Click the Windows Start button and select **Computer**. The microSD card appears under Networks.
- If the microSD card does not appear under Networks, go to Start and type in \\MiFi2.
- **3** If prompted for a user name, enter **guest**. Do not enter a password.



NOTE Instructions for other Windows versions may vary.

Instructions for Mac:

The microSD card will appear automatically under the 'shared' menu in the finder.

Instructions for iOS, Android, and other Mobile Devices:

Files may be downloaded and viewed from a connected mobile device through the web browser by going to http://my.mifi/files.

On the MiFi 2 Web Interface

To access the File Sharing page, click **File Sharing** on the Navigation panel. The File Sharing page contains the following menu options:

- Settings (See <u>Settings</u> on page 83.)
- View Files (See <u>View Files</u> on page 84.)



From this page you can enable file sharing and see how much free space you have available on the microSD card. You can also decide to protect your files with a password or make them available to everyone connected to your MiFi 2.

Settings

The Settings section allows you to enable/disable File Sharing, check your microSD card status, and provides instructions for accessing shared files. The Settings section displays the following:

- File Sharing slide the ON/OFF button to enable/disable File Sharing.
- microSD Card Status displays microSD card availability and amount of unused storage.
- Accessing Shared Files provides instructions for accessing files from Windows, Mac and Tablets.

E File Sharing
Settings View Files
Using File Sharing you can share files stored on your microSD card with connected devices, like your laptops and tablets.
File Sharing Insert a microSD card to share files.
microSD card status: Available
microSD Card Storage
3.6 GB of 3.7 GB remaining
Accessing Shared Files
Look for this name in the network: MIFi2
Windows Click the Windows Start button and select Computer. The microSD card will appear under 'Networks'. If it does not appear, go to Start and type in \\MiFi2
If prompted for a user name type in guest. Do not enter a password.
Mac OS X The microSD card will appear automatically under the 'shared' menu in the finder.
iOS, Android, and other Mobile Devices Files may be viewed and downloaded from a connected device via the web browser by going to http://my.mifi/files

View Files

The View Files section allows you to view all files on the microSD card installed in the MiFi 2.

追 File Sharing		6
Settings View Files		
View the files on the microSD™ card inse Current Folder /	erted in this MiFi device.	
File Name	Last Modified	Size (KB)
Albino.mp3	2012-Oct-05 22:04:38	4445.9
Allemande.mp3	2012-Oct-05 22:05:20	4972.9
Dry Tortugas	2012-Oct-05 22:18:00	
Ellis Island.zip	2012-Oct-05 22:02:04	22155.7
Texas_Bluebonnetts.pps	2012-May-16 21:14:02	2139.5
Screenshots	2012-Jul-18 21:47:24	
Sarabande.mp3	2012-Oct-05 22:05:58	5345.1
Wildlife	2012-Oct-05 22:18:22	

To view or download and save files on the microSD:

- Click on the folder name to display all files in the folder.
- **2** Click on the desired file to view an image of the file, or to download and save.

The GPS page allows you to enable GPS and to enable GPS over Wi-Fi (NMEA). The GPS receiver on the MiFi 2 can determine your current location, often even indoors.

On the MiFi 2 Touchscreen

1 Tap the **GPS** icon 🙆 to display the GPS page.





2 To accept the GPS Privacy Agreement and enable GPS, slide the ON/OFF button to **ON**.





3 Scroll to the lower part of the page to view all current GPS location details.

II LTE	12:30 PM 🙆 🗬 ³ 🏰10 🚃
Back	🤣 GPS
Latitude	32.895658
Longitude	-117.201286
Altitude	420 ft

LTE 1.	2:30 PM	Ó	- ³	(0) 10	
Back (GPS				
Altitude				42	20 ft
Accuracy				15	53 ft
Download GPS drivers	at	ht	tp://r	ny.mifi/	gps
Personaliz	e at http:/	//my.r	nifi		

On the MiFi 2 Web Interface

To access the GPS page, click **GPS** on the Navigation panel. The GPS page contains the following:

- Enable GPS (See Enable GPS on page 87.)
- Current Position
 - GPS Over Wi-Fi
 - Port Number
- Download Enable GPS Over Wi-Fi Drivers



Enable GPS

To enable GPS and GPS over Wi-Fi:





Click the Enable GPS over Wi-Fi check box.

Click **Save Changes** to activate and save your selections.

🧑 GPS			Ø
1 The GPS receiver of	an determine your current	location and make it	available to connected devices.
Enable GPS			
-	fy your location and make S you are accepting the te		
Current position:			
Google	Property Mra Sorrento Pi Jamba Juice 11	Par uopuezos Par uopuezos Ref Morehouse Dr Map	Map Satellite Outaicomm MEMS - Technologies Outaicomm Bidg S Outaicomm Bidg S Out
Latitude:	32.8957	Altitude:	291 ft
Longitude:	-117.201	Accuracy:	85 ft
GPS over Wi-Fi (NMEA) Enable GPS over Wi-Fi: Port number: Download GPS over Wi-	✓		GPS over WI-FI provides GPS location information to connected devices. Existing GPS-enabled applications on the connected devices can use this information.
			Save Changes

NOTE - You must download and install the GPS Over Wi-Fi Drivers to create a virtual NEMA (GPS) port on your computer before you can use the GPS Over Wi-Fi feature.

To download GPS Over Wi-Fi Drivers:



GPS over Wi-Fi (NMEA) Enable GPS over Wi-Fi:	~	GPS over WI-FI provides GPS location Information to connected devices. Existing GPS-enabled applications on the connected devices can use this information.
Port number:	11010	
Download GPS over Wi-Fi Driver	rs ad GPS over Wi-Fi Drivers	Save Changes

A Help page displays a download overview and links to the available downloads.

2 Click the appropriate link to download the driver to your computer.

Downloads
Overview
Driver download and installation is needed to use the GPS over Wi-Fi feature. This driver will create a virtual NMEA (GPS) port on your computer. The NMEA (GPS) data is obtained from the MiFi device, and provided to GPS applications as if you had a GPS receiver attached to your computer.
Available Downloads
Windows
This driver provides support for the GPS over Wi-Fi feature on all versions of Windows. For Windows XP, it also provides Ethernet (TCP/IP) over USB, allowing Internet access via the MiFi device when connected over a USB cable.
For Windows Vista and later, Ethernet (TCP/IP) over USB is supported natively, and no driver is needed.
Macintosh
This driver creates the virtual NMEA (GPS) port used by the GPS over Wi-Fi feature.
Linux
This driver creates the virtual NMEA (GPS) port used by the GPS over Wi-Fi feature.

Wi-Fi Protected Setup

The Wi-Fi Protected Setup application allows you to set up WPS (Wi-Fi Protected Setup) on your MiFi 2 to easily connect to other WPS-enabled devices.

On the MiFi 2 Touchscreen

1 Tap the **Wi-Fi Protected Setup** icon **w** to display the Wi-Fi Protected Setup page.





To enable WPS, slide the ON/OFF button to ON. Wi-Fi must be restarted and existing connections may be briefly interrupted.

WPS
Wi-Fi must be restarted. Existing connections may be briefly disrupted.
Continue?
No Yes
Personalize at http://my.mifi



S To enable the WPS Push button method, tap **WPS Push button method** >. Find and push the WPS button on your connecting device.





To enable the WPS PIN method, tap WPS PIN method >. Find the WPS PIN on your connecting device, then click Enter WPS PIN.





The Customer Support page displays your wireless number and device model.

On the MiFi 2 Touchscreen

Tap the **Customer Support** icon (?) to display the Customer Support page, and display your wireless number and your device name. For additional Customer Support options, contact your service provider.





On the MiFi 2 Web Interface

To access the Customer Support page, click **Customer Support** on the Navigation panel. The Customer Support page contains the following:

- Your Wireless Number displays your wireless number.
- Self Service Support refers to the MiFi 2 User Guide..
- **Customer Support** refers you to your service provider for assistance.
- **Advanced** takes you to the Advanced Support page where you can enter the code provided to you by your service provider and unlock your device.

NOVATEL WIRELESS.		all ut	Ø 🗆	Log Out
	Oustomer Support			0
MiFi Home	Manage your account and obtain more information a Your Wireless Number	bout your MiFi 2 device.		
Connected Devices	x-xxx-xxx-xxxx			
🥎 Data Usage	Self Service Support MiFi 5792 User Guide			
Settings	Customer Support Please contact your service provider for assistance.			
MiFi Media Center	Advanced			
Messages				
File Sharing				
🧭 GPS				
O Customer Support				
i About				
				»MiFi

About

The About application allows you to view current status, device information, and software updates.

On the MiFi 2 Touchscreen

1 Tap the **About** icon *i* to display the About page.





Tap Current Status > to display the network , network status, technology, signal strength, MiFi media center, file sharing, and GPS status details.

•••11 LTE	12:30 PM	Ô	\square^3	🗥 🔁
Back	Current Sta	tus		
Network				AT&T
Network Stat	us			Dormant
Technology				LTE
Signal Streng	th			-67



Tap Device Info > to display your wireless number, the device manufacturer, model number, IMEI, SIM#, and software version.

••••• LTE 12:30	рм 🙆 🗬 🎥 10 🚃
Back Device	e Info
Wireless Number	X->00(->00(->000(
Manufacturer	Novatel Wireless, Inc.
Model Number	MiFi 5792
IMEI	>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>

1:	2:30 PM	Ô	- ³	10	
Back De	vice Inf	0			
IMEI		Х	00000	0000000	00X
SIM Number		>0000	00000	0000000	00X
Software Version		1.0 (L1.44	.6 M1.4	4.6)
Personaliz	e at http:/	/my.m	ifi		

S Tap Software Update > to display the current software version, last update, and to Check for Updates.



On the MiFi 2 Web Interface

To access the About page, click **About** on the Navigation panel. The About page contains the following.

- **Current Status** (See <u>Current Status</u> on page 96.)
- **Device Info** (See <u>Device Info</u> on page 98.)
- **Diagnostics** (See <u>Diagnostics</u> on page 99.)
- Logs (See Logs on page 101.)
- **Software Update** (See <u>Software Update</u> on page 95.)

NOVATEL WIRELESS.		ail tre	🧑 🔳 Log Out
	i About		Ø
MiFi Home	Current Status Device Info	Diagnostics Logs Software Update	
Connected Devices	Internet Status Connection status:	Dormant	
🥎 Data Usage	Network name: Technology: Connection time:	XXXX LTE 00:01:30:32	
🤹 Settings	Data sent: Data received:	232.48 КВ 27.12 КВ	
MiFi Media Center	IP address: Subnet mask: Gateway:	xx.xxx.xxx.xxx xxx.xxx.xxx.xxx xx.xxx.x	
Messages	DNS:	xx.xxx.xx.x xxx.xx.xx.x	
🕕 File Sharing	Wi-Fi Wi-Fi network name (SSID):	MIFI2-XXXX	
🧑 GPS	Wi-Fi security: Wi-Fi password (key): Channel:	WPA2PSK XXXXXXXX 1	
Customer Support	Wi-Fi mode: Connected devices:	BGN 1	
l About	Maximum devices allowed:	10	
	Device microSD card:	Available	
	Total space:	3.73 GB	
	Available space:	3.62 GB	
	File Sharing:	On	
	MiFi Media Center:	On	
	GPS status:	Acquired	
			powered by MiFi

Current Status

The Current Status section displays the following:

- Internet Status (See Internet Status on page 96.)
- Wi-Fi (See <u>Wi-Fi</u> on page 96.)
- Device (See <u>(See Device on page 97.)</u>.)

Internet Status

- **Connection Status** displays the connection status for the Internet connection and indicates if an error condition exists.
- **Network Name** network to which the MiFi 2 is currently connected.
- **Technology** network technology used for the current connection.
- **Connection Time** the period of time that has elapsed since the current session started.
- **Data Sent** —the amount of data transmitted during the current Internet session. Each session restarts from zero.
- **Data Received** the amount of data received for the current Internet session. Each session restarts from zero.
- IP Address the IP address assigned to the MiFi 2.
- Subnet Mask the network mask associated with the IP address of the MiFi 2.
- Gateway the gateway IP address associated with the IP address of the MiFi 2.
- **DNS** the Domain Name Server currently used by the MiFi 2.

Wi-Fi

- Wi-Fi Network Name (SSID) name of the network (SSID) that you are connected to.
- Wi-Fi Security security type for the current profile.
- Wi-Fi Password (Key) the network key (Wi-Fi Key, password) for the wireless network.
- **Channel** channel that is being used.
- Wi-Fi Mode current wireless mode.
- **Connected Devices** clients that are currently connected to the device.
- **Maximum Devices Allowed** maximum number of clients that are allowed to connect to the device.

Device

- **microSD Card** indicates whether the microSD card is available.
- **Total Space** indicates the size of the microSD card.
- Available Space indicates how much free space is available on the microSD card.
- File Sharing indicates if File Sharing is enabled or disabled.
- MiFi Media Center indicates if the MiFi Media Center is enabled or disabled.
- **GPS Status** shows the current status of the GPS receiver.

Device Info

The Device Info section displays the following:

- **Manufacturer** the manufacturer of the MiFi 2 device.
- **Model** the official model name and number for the MiFi 2 device.
- MiFi 2 Software Version the currently installed version of MiFi 2 software.
 - **MiFi OS Version** the currently installed version number for the OS (Operating System) and its components.
 - **Modem FW Version** the currently installed version of the firmware used to control the MiFi's 4G modem function.
 - Wi-Fi FW Version the currently installed version of the Wi-Fi firmware.
 - Web UI Version the currently installed version of the MiFi 2 Web Interface.
 - **LCD UI Version** the currently installed version of the software controlling the LCD touchscreen.
 - **PRI Version** the current configuration version applied to the MiFi 2.

🥡 About		0
Current Status Device Info	Diagnostics Logs Software Update	
Manufacturer:	Novatel Wireless, Inc.	
Model:	MiFi 5792	
MiFi Software Version:	1.0 (L1.44.6 M1.44.6)	
MiFi OS version:	1.44.6	
Modem FW version:	MDM9X15-1.44.6 1 [2013-02-15 22:59:40]	
Wi-Fi FW version:	3.1.1.826	
Web UI version:	1.44.6.0000	
LCD UI version:	1.44.6.0000	
PRI version:	PRI.90026776 REV 114 MIFI5792 BELL	
MiFi, the MiFi logo, Novatel Wir trademarks of Novatel Wireless,	reless and the Novatel Wireless logo are trademarks or registered Inc.	

Diagnostics

The Diagnostics section displays the following:

- Modem (See Modem Status on page 97.) •
- HSPA Status (See <u>HSPA Status</u> on page 100.) •
- LTE Status (See <u>4G LTE Status</u> on page 94.)



NOTE - Diagnostics details are used only for troubleshooting and technical support.

🪺 About		0
Current Status Device Info	Diagnostics Logs Software Update	
This detailed information is	used only for troubleshooting and technical support.	
Modem		
Phone number (MDN):	x-xxx-xxx-xxxx	
IMEI:	*****	
IMSI:	xxxxxxxxxxxxxxxxxxxxxxxx	
FW version:	MDM9X15-1.44.6 1 [2013-02-15 22:59:40]	
SIM status:	Ready	
ICCID:	xxxxxxxxxxxxxxxxxxx	
HSPA Status		
Status:	Not available	
Technology:		
Network ID:	xxxxxx	
Cell ID:		
RSSI:		
Roaming:		
LTE Status		
Status:	Available	
Signal strength:	-63dBm	
SNR:	-18	
Roaming:	None	

Modem

- **Phone number (MDN)** the wireless telephone number for the MiFi 2. This number changes if the SIM is changed.
- **IMEI** the International Mobile Equipment Identity (IMEI) for this device. This number does not change when the SIM is changed.
- **IMSI** the International Mobile Subscriber Identity (IMSI) is a unique identification associated with all GSM, UMTS and LTE mobile subscribers. It is stored in the SIM and changes if the SIM is changed.
- Wireless Number the wireless telephone number for the MiFi 2. This number changes if the SIM is changed.
- **FW Version** the current version of firmware installed on the MiFi 2.
- **SIM Status** indicates current status of the SIM card.
- ICCID the unique identification number assigned to the SIM card. It does not display if there is no SIM installed, or a SIM error condition exists.

HSPA Status

- **Status** refers to 4G HSPA and all preceding technologies. The following states are supported: disabled, not available, available.
- **Technology** displays current technology in use for the GSM/WCDMA/HSPA network.
- **Network ID** the name or ID of the GSM/WCDMA/HSPA network.
- **Cell ID** identifies the cell tower currently in use.
- **RSSI** displays the RSSI measure of signal strength in decibels. This is always a negative number, and higher absolute values indicate a stronger signal.
- **Roaming** indicates if the current connection is a roaming connection.

LTE Status

- **Status** displays current LTE network status. Possible status values are disabled, not available, or available.
- **Signal Strength** indicates the strength of the LTE signal. This is always a negative number, and higher absolute values indicate a stronger signal.
- **SINR** indicates the signal quality. Higher numbers indicate a better signal.
- **Roaming** indicates if the current connection is a roaming connection.

Logs

The Logs section displays the following:

- Enable logs allows you to enable the logs as needed.
- **Delete system log** deletes all existing log data.



🥡 About		0
Current Status Device I	nfo Diagnostics Logs	Software Update
Logs are for troublesho	oting and are not needed for n	ormal operation.
Logs		
Enable logs:	~	
Delete system log:	After 1 day	 Mobile Network Log is lost upon shutdown.
		Save Changes

Click **Save Changes** to activate and save your selections.

Software Update

The Software Update section displays the following:

- **Current Software** displays the current version of software installed, last check for updates, and any updates available. If an update is available it is automatically downloaded and you will be prompted on the MiFi 2 touchscreen to install it.
- Last Update displays the details of the last update installed.
- **Update History** displays the details of all updates that have been downloaded and installed.

🥡 About		0
Current Status Device Info	Diagnostics Logs	Software Update
Current Software		\cup
Current software version:	1.0 (L1.44.6 M1.44.6)	
Checked for update:		You can check for updates using the MIFI 2 touchscreen.
Update available:	No	
Last Update		
Never updated		
Update History		
Never updated		

Troubleshooting

Overview Common Problems and Solutions Using the Master Reset Button

Overview

When properly set up, your MiFi 2 is a highly reliable product.

- Ensure that you are in the coverage area.
- Ensure you have an active subscription plan.
- Ensure the SIM card is correctly installed.
- Restarting your computer and your MiFi device can resolve many issues.
- Ensure the battery is fully charged.

IMPORTANT Before contacting support, be sure to restart your computer and restart your device.

Before you read on, all of the steps mentioned here are given in more detailed form elsewhere in the user guide. When a reference is given, click the link to go to more detailed information.

The following are some common problems and solutions.

The MiFi 2 touchscreen status bar displays no service available.

- Ensure that you are in the coverage area.
- Ensure you have an active rate plan.
- Ensure the SIM card is correctly installed.
- Restarting your MiFi 2 can resolve many issues.
- If you are inside a building or near a structure that might block the signal, change the position or location of the device. For example, try moving your MiFi 2 close to a window.

The device has no power.

The MiFi 2 does not turn on when the **Power** button is pressed.

- Ensure the battery is properly seated in the device.
- Ensure the battery is fully charged. Plug in the A/C charger for at least four hours.

I forgot my password.

- Tap Connection Info on the MiFi 2 touchscreen to find your Wi-Fi Network Name (SSID) and Password, and your MiFi 2 Web Interface Password.
- You can reset the device to factory defaults using the Master Reset button. See Using the Master Reset Button on page 109.

l cannot connect to my MiFi 2.

- Make sure the MiFi 2 is powered on.
- Make sure your Windows PC Wi-Fi / Mac AirPort is turned on. (Check your computer's Help if you need assistance.)
- **Open your wireless network connection list.**
 - Windows: Right-click the wireless icon and select View Available Networks.
 - Mac: Click the AirPort icon in the menu bar and pull down the list of networks.

Gelect the MiFi 2's Wi-Fi network name.

Windows: Click Connect.

Mac: Connects automatically after you select the MiFi 2's network name and enter the Wi-Fi password.

When your computer is connected to your MiFi 2, the MiFi 2 touchscreen will display the message "Connected Devices: A device has connected to the MiFi 2." The number of connected devices will also display on the status bar of the touchscreen

My network does not appear in the wireless network list.

- Verify that the MiFi 2 is powered on.
- Refresh your network list.
 - Windows: Click the refresh button **5** on the upper right corner of the Wireless Network Connection page. If that does not work you can try the following:
 - 1. Open Network Connections.
 - 2. Right-click Wireless Network Connection and select Properties.
 - 3. Click the Wireless Networks tab.
 - 4. Delete any unused wireless connections from the **Preferred Networks** list and click **OK**.
 - 5. Restart your computer.
 - Mac: Click the AirPort icon in the menu bar and select Turn AirPort Off. Then click it again and select Turn AirPort On.

I can connect to my MiFi 2 but I cannot connect to the Internet.

Check the user name, password, and access point name (APN) in your connection profile. If any of these are wrong, you cannot connect to the network.

I see the network name but I cannot connect to my MiFi 2.

- Check that you are connecting to your MiFi 2 device. If another MiFi 2 device is in the area, you may be trying to connect to the wrong MiFi 2 device.
- ▶ If your MiFi device has a Wi-Fi password, check that you entered the correct password.

How do I disconnect from the network?

- From the MiFi 2 touchscreen:
 - 1. Hold the power button until the **Shut Down** message displays.
 - 2. Tap Yes to shut down the MiFi 2 device and disconnect from the network.

How can I find out how many users are connected to my MiFi device?

- From the MiFi 2 touchscreen:
 - Check the **Connected Devices** icon and the status bar at the top of the touchscreen. The number of connected devices displays to the right of the icon. You can also swipe the carousel to display the **Connected Devices** icon and the number of connected devices.

Where can I find information about Internet connectivity and my Wi-Fi setup?

Tap **About > Current Status** on the MiFi 2 touchscreen.

How do I check the wireless number, model number and firmware versions of my MiFi 2?

- From the MiFi 2 touchscreen:
 - Tap the **About** icon *i*, then tap **Device Info** > to display your wireless number, manufacturer, model number, IMEI, SIM# and software version.
- From the MiFi 2 Web Interface:
 - Select About > Device Info to display the manufacturer, model number and MiFi 2 software version details.

How can I check the battery level of my MiFi 2?

- From the MiFi 2 touchscreen:
 - Check the Battery status icon is displayed on the status bar at the top right side of the touchscreen. A warning message displays when the remaining battery charge reaches 10%, and the battery icon turns red to indicate that the battery needs to be recharged.
- From the MiFi 2 Web Interface:
 - Check the Battery status icon is played on the status bar at the top right side of any page.

Where can I find my IMEI number?

- From the MiFi 2 touchscreen:
 - Tap the **About** icon *i*, then tap **Device Info** > to display the IMEI number.
- From the MiFi 2 Web Interface:
 - Select About > Diagnostics to display the Modem Status section which includes the IMEI number.
How do I check the available space on the microSD card?

- From the MiFi 2 touchscreen:
 - Tap the **File Sharing** icon (). The microSD storage information displays above the counter at the bottom of the page.
- From the MiFi 2 Web Interface:
 - Select **File Sharing** > **Settings**. The microSD storage information displays under the microSD Card Status section.

How do I turn off my MiFi device?

- 1. Press and hold the **Power** button until the **Shut Down** message displays.
- 2. Tap **Yes**.

What is the default Web Interface Password?

> The default Web Interface Password is **admin**.

How do I access information on the Wi-Fi network and Wi-Fi clients?

- From the MiFi 2 touchscreen:
 - 1. Tap the **Connected Devices** icon 🕋 to display the Connected Devices page showing all devices currently connected to or blocked from your MiFi 2.
 - 2. Tap the name of a specific connected device to display the device type, time connected, MAC address, and IP address for that device.
- From the MiFi 2 Web Interface:
 - Select **Connected Devices** from the MiFi 2 Web Interface Navigation panel to display all devices currently connected to or blocked from your MiFi 2, including IP and MAC address details.

I am having trouble connecting to my office VPN.

- From the MiFi 2 Web Interface:
 - 1. Select Settings > Advanced Settings > Firewall.
 - 2. Slide the VPN Passthrough ON/OFF button to **ON**.

My MiFi device keeps going to sleep after a period of time when I'm idle.

This is a customizable setting which allows you to adjust the period of inactivity before the device turns off in order to conserve battery life.

- From the MiFi 2 Web Interface:
 - 1. Select Settings > Device Settings > Preferences > Automatic Shutdown.
 - 2. Select **Never** from the drop down menu to disable Automatic Shutdown.

Your MiFi 2 comes with a master reset button that allows you to return it to its factory default state.

The master reset button is recessed in a hole on the back of the device. You need a paper clip or similar object to push the button.



• Make sure your MiFi 2 is powered on.



Locate the master reset button on the back of the device directly below the raised SIM card section.



Insert a paper clip into the hole and hold the button down for five (5) seconds.

Your list of wireless networks now shows the original default network when you first configured your device.

O Connect to your MiFi 2 again and re-configure it. Your pre-configured profile information stays the same, but for any custom profiles you have to enter your APN and other information again.

Technical Support

Customer Service

Contact your service provider for assistance.

When calling, you may be asked for the wireless number of your MiFi 2. Your MiFi 2's wireless number can be found on the device by tapping **O Customer Support**, or on the MiFi 2 Web Interface by going to **Customer Support**.

4

Product Specifications and Regulatory Information

Product Specifications Regulatory Safety Hazards Proper Battery Use and Disposal Limited Warranty and Liability

Product Specifications

General

Name:	MiFi® 2 Intelligent Mobile Hotspot by Novatel Wireless
Model:	MiFi 5792
Approvals:	FCC, PTCRB, DLNA, RoHS, WEEE
Weight:	120 g (4.26 oz)
Dimensions:	102.9 x 73.1 x 8.6 mm (4.05 x 2.88 x 0.34 in)
Wireless Network:	LTE, HSPA+, EDGE, GPRS
Wireless Network - Wi-Fi Mode:	802.11b/g/n
Default SSID:	MIFI2-XXXX
Battery:	Rechargeable, lithium ion battery
- Size:	2900 mAh
- Time Required to Full Charge:	4 hrs
- Life:	Up to 11 hrs
Chipset:	QUALCOMM 9215
Interface Type:	USB
microSD/SDHC:	Up to 32 GB

Display

Touchscreen:	TFT color display	
--------------	-------------------	--

Technology/Bands

Dual-band LTE:	700 MHz and AWS (1700/2100 MHz)
Tri-band DC HSPA+/HSPA+/ HSPA/UMTS:	850/1900/2100 MHz
Quad-band EDGE/GPRS:	850/900/1800/1900 MHz

Environmental

Operating Temperature:	-20 ° C to +60° C (-4° F to 140° F)
Storage Temperature:	-20° C to 60° C (-4° F to 140° F)
Drop:	1 meter (3.28 feet) drop, no damage – fully operational
Vibration Stability:	5 Hz to 500 Hz, 0.1 octave/second

Regulatory

Federal Communications Commission Notice (FCC – United States)



Electronic devices, including computers and wireless modems, generate RF energy incidental to their intended function and are therefore subject to FCC rules and regulations.

This equipment has been tested to, and found to be within the acceptable limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment.

This equipment generates radio frequency energy and is designed for use in accordance with the manufacturer's user manual. However, there is no guarantee that interference will not occur in any particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures.

• Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

This device complies with Part 15 of the Federal Communications Commission (FCC) Rules and Industry Canada ICES-003 for EMI compliance. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.

2. This device must accept any interference received, including interference that may cause undesired operation.

WARNING: DO NOT ATTEMPT TO SERVICE THE WIRELESS COMMUNICATION DEVICE YOURSELF. SUCH ACTION MAY VOID THE WARRANTY. THE MIFI 5792 MODEM IS FACTORY TUNED. NO CUSTOMER CALIBRATION OR TUNING IS REQUIRED. CONTACT NOVATEL WIRELESS TECHNICAL SUPPORT FOR INFORMATION ABOUT SERVICING YOUR WIRELESS COMMUNICATION DEVICE.

FCC CAUTION: Any changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

MODIFICATIONS: The FCC requires that you be notified that any changes or modifications made to this device that are not expressly approved by Novatel Wireless, Inc. may void your authority to operate the equipment.

NOTE: The Radio Frequency (RF) emitter installed in your modem must not be located or operated in conjunction with any other antenna or transmitter, unless specifically authorized by Novatel Wireless Technologies.

RF CONTENT

FCC EQUIPMENT AUTHORIZATION ID: PKRNVWMIFI5792

This device is authorized for use in mobile and portable applications. At least 10 mm (0.4 inches) of separation between the MiFi device and the user's body must be maintained at all times.

This product has been evaluated for SAR and meets the FCC Guidelines for exposure to radio waves.

Safety Hazards

Do not operate your MiFi 2 device in an environment that may be susceptible to radio interference resulting in danger, specifically:

Areas where prohibited by the law

Follow any special rules and regulations and obey all signs and notices. Always turn off your MiFi 2 device (or the host device and remove the modem from the USB port) when instructed to do so, or when you suspect that it may cause interference or danger.

Where explosive atmospheres may be present

Do not operate your modem in any area where a potentially explosive atmosphere may exist. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Be aware and comply with all signs and instructions.

Users are advised not to operate the modem while at a refueling point or service station. Users are reminded to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. Potential locations can include gas stations, below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Near medical and life support equipment

Do not operate your device around medical equipment, life support equipment, or near any equipment that may be susceptible to any form of radio interference. In such areas, the host communications device must be turned off. The device may transmit signals that could interfere with this equipment.

On an aircraft, either on the ground or airborne

In addition to FAA requirements, many airline regulations state that you must suspend wireless operations before boarding an airplane. Please ensure that your MiFi 2 device (or the host device) is turned off and if in USB Mode, your modem is removed from the USB port prior to boarding aircraft in order to comply with these regulations. The modem can transmit signals that could interfere with various onboard systems and controls.

While operating a vehicle

The driver or operator of any vehicle should not operate a wireless data device while in control of a vehicle. Doing so will detract from the driver or operator's control and operation of that vehicle. In some countries, operating such communications devices while in control of a vehicle is an offense.

Electrostatic discharge (ESD)

Electrical and electronic devices are sensitive to electrostatic discharge (ESD). Macintosh native connection software might attempt to reinitialize the device should a substantial electrostatic discharge reset the device. If the software is not operational after an ESD occurrence, then restart your computer.

Proper Battery Use and Disposal

CAUTION! Never dispose of batteries in a fire because they might explode:

WARNING! In the event of a battery leak:

- Do not allow the liquid to come in contact with the skin or the eyes. If contact has been made, wash the affected area with large amounts of water and seek medical advice.
- Seek medical advice immediately if a battery has been swallowed.

Contact your local recycling center for proper battery disposal.

Guidelines for Safe and Responsible Battery Use

- Do not disassemble or open, crush, bend or deform, puncture, or shred.
- Do not modify or remanufacture, attempt to insert foreign object into the battery, immerse or expose to water or other liquids, or expose to fire, explosion, or other hazard.
- Only use the battery for the system for which it was specified.
- Only use the battery with a charging system that has been qualified with the system per this standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic or conductive object to contact the battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard. Use of an unqualified battery may present a risk of fire, explosion, leakage, or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the device or battery. If the device or the battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion, or other hazard.

Limited Warranty and Liability

Novatel Wireless, Inc. warrants for the 12 month period immediately following receipt of the Product by Purchaser that the Product will be free from defects in material and workmanship under normal use. THESE WARRANTIES ARE EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

The exclusive remedy for a claim under this warranty shall be limited to the repair or replacement, at Novatel Wireless' option, of defective or non-conforming materials, parts or components. The foregoing warranties do not extend to (I) non conformities, defects or errors in the Products due to accident, abuse, misuse or negligent use of the Products or use in other than a normal and customary manner, environmental conditions not conforming to Novatel Wireless' specification, of failure to follow prescribed installation, operating and maintenance procedures, (II) defects, errors or nonconformity's in the Product due to modifications, alterations, additions or changes not made in accordance with Novatel Wireless' specifications or authorized by Novatel Wireless, (III) normal wear and tear, (IV) damage caused by force of nature or act of any third person, (V) shipping damage, (VI) service or repair of Product by the purchaser without prior written consent from Novatel Wireless, (VII) products designated by Novatel Wireless as beta site test samples, experimental, developmental, reproduction, sample, incomplete or out of specification Products, or (VIII) returned products if the original identification marks have been removed or altered.

5



Glossary

Glossary







• VPN — Virtual Private Network. A secure private network that runs over the public Internet. Commonly used to connect to an office network from elsewhere.

VPN Passthrough — A feature that allows a client to connect to a VPN server.

WAN — Wide Area Network. A public network that extends beyond architectural, geographical, or political boundaries (unlike a LAN, which is usually a private network located within a room, building, or other limited area).

WEP — Wired Equivalent Privacy. An IEEE standard security protocol for 802.11 networks. Superseded by WPA and WPA2.

• Wi-Fi (R) — Wireless Fidelity. Any system that uses the 802.11 wireless standard developed and released in 1997 by the IEEE.

• Wi-Fi Client — A wireless device that connects to the Internet via Wi-Fi.

WLAN — Wireless Local Area Network. A typically low-power network that transmits a wireless signal over a span of a few hundred feet and usually only to stationary devices. Wi-Fi is the most common WLAN.

- WPA/WPA2 Wi-Fi Protected Access. A security protocol for wireless 802.11 networks from the Wi-Fi Alliance.
- **WWAN** Wireless Wide Area Network. Wireless network technologies deployed over a large geographical area to a large number of users (see WLAN). This service is usually provided through cellular network operators. WWAN connectivity allows a user with a laptop and a WWAN device to surf the Internet, check e-mail, or connect to a virtual private network (VPN) from anywhere within the coverage area of the network operator.