Androstick

Makes Your TV Smart

User Manual

Model: FV-D11

Before operating the unit, please read through this manual. The manual contains important safety information and tutorials about the product.

For more information: www.artwaytech.com, www.androstick.com

Contents

| FEATURES | 5 |
|--|----|
| PRODUCT&ACCESSORIES | 5 |
| QUICK INSTALL GUIDE | 6 |
| Install Information | 6 |
| INTERFACE | 7 |
| Remote Control Operating | 8 |
| INSTALLING WIZARD | 9 |
| WELCOME PAGE | 9 |
| INSTALLING WIZARD | 9 |
| MAIN LAUNCHER | 12 |
| LAUNCHER MENU | 13 |
| MEDIA PLAYER | 14 |
| BROWSER | 15 |
| APPLICATIONS | 16 |
| Install from USB-disk/Micro SD card | 16 |
| Install from Browser | 16 |
| Install from ApkInstaller | 16 |
| Remove Applications | 16 |
| SETTINGS | 17 |
| ADVANCED FEATURES | 19 |
| DLNA (Digital Living Network Alliance) | 19 |

| General Introduction | 19 |
|------------------------------|----|
| Operating Introductions | 19 |
| Google TV Remote | 21 |
| General Introduction | 21 |
| Operating Introductions | 22 |
| VPN(Virtual Private Network) | 24 |
| Introduction & Attention | |
| Operating Manual | |
| EXCEPTION HANDLING | |
| Systems restore | |
| SPECIFICATIONS | |

SAFETY WARNING!

Before operating the unit, please read this manual thoroughly.

PLACEMENT

- Do not place the unit on an unstable cart, stand, tripod, bracket, table, or shelf.
- Do not expose the unit to direct sun-light and other sources of heat.
- Do not handle liquids near or on the unit.
- Never spill liquid of any kind into the unit
- Do not put the unit near appliances that create magnetic fields.
- Do not put heavy objects on top of the unit

POWER SUPPLY

- Make sure the USB power supply can offer 5V/1A.If not, please use a 5V/1A output AC adapter instead.
- Please unplug power supply and aerial plug when the weather is thunder-storm or lightning.
- Please unplug power supply, when there is nobody at home or didn't use over a long period of time.
- Please keep power cord from physical or mechanical damage.
- Please use exclusive power cord, don't modify or lengthen it.
- Please check and ensure AC source is connected with the ground.

TEMPERATURE

- Do not place the unit near or over a radiator or a heater register.
- If your unit is suddenly moved from a cold to a warm place, unplug the power cord for at least two hours so
 that moisture that may have formed inside the unit can dry completely

HUMIDITY

- Do not expose machine in rain, damp or place near water.
- Ensure the indoor drying, cool.

VENTILATION

- Keep the ventilation openings clear.
- Ensure that the unit has enough space for ventilation around

BATTERY

- Accurate transaction and recall scrap battery after using.
- Please don't let kid touch battery, in case of dangerous don't throw battery into fire.

FEATURES

Androstick is a brand new product that based on Android OS. You can use it:

- Surf the Internet via Wi-Fi
- Communicate with your friends via SNS applications
- Enjoy movies, music and photos via media player

PRODUCT&ACCESSORIES



QUICK INSTALL GUIDE

Install Information



Normal Condition:

Insert D11 into TV's HDMI input interface.

Connect D11's mini USB port to TV's USB port via USB supply line for power supply. (*ATTENTION: Make sure the USB power supply can offer 5V/1A. If not, please use a 5V/1A output AC adapter instead!)



Special Condition (NO ENOUGH ROOM FOR D11 AROUND THE TV'S HDMI INPUT INTERFACE):

Connect D11 to TV's input interface through HDMI extended line. Power supply as above.

INTERFACE



Left:

2.5mm interface: I/R remote control receiver; Mini USB interface: Power supply (5V/1A)



Right:

Signal light: (Red light during running, no light when shut down)



Back:

USB2.0 interface: Input with USB-disk or mobile HDD Micro SD Card slot: Support up to 32GB

Remote Control Operating

| | lcons | Features |
|-------|---------|--|
| | Ċ | Power |
| | PG+ PG- | Page up/ Page down |
| | | Mouse/keypad |
| | | Call out search bar (also can input web address) |
| Enter | | Home button |
| | | Directions & Confirm |
| | | Call out menu |
| | | Notification Bar |
| | | Back |
| | | Previous |
| | | Play/Pause |
| | | Next |

INSTALLING WIZARD

WELCOME PAGE

When the Androstick D11 is first powered up, Welcome Page will be shown. It will help you to configure the device



INSTALLING WIZARD

Choose your language:

| Language | English (United Kingdom) |
|-----------------------|--------------------------|
| | English (New Zealand) |
| | English (Singapore) |
| Choose your Language: | English (United States) |
| | 日本語 (日本) |
| | русский (Россия) |
| | 中文(简体) |
| | 中文 (繁體) |

Choose your Wi-Fi network access point:

| Network | |
|------------------------|---|
| Choose your | Wireless network(WiFi) |
| network: | <u> </u> |
| | |
| | |
| | |
| Choose Access Point | 1 0 |
| Choose Access Point | 6 6 |
| Choose Access Point | |
| Choose Access Point | Rew Ro |
| Choose Access Point | ت ت ا ا ا ا ا ا ا ا ا ا ا ا ا ا ا ا ا ا |
| Choose Access Point | Image: second system Image: |

Configuration Result:

| State | |
|-------|----------------------------------|
| | Language English (United States) |
| | Network wireless network |
| | Time zone GMT+08:00 |
| | Date 11/24/2011 |
| | Time 10:03 AM |
| | Complete |
| | |

Adjust screen size, using the arrow buttons

on remote control:



User can setup the Language, Network, Time Zone, Data/Time, and adjust screen size.

Reminder: If you want to skip this wizard, press " key. If you finish this wizard once, it will not auto-open when system booted.

MAIN LAUNCHER

Press the arrow buttons



to select the icon and 'ENTER' the sub-screen:



LAUNCHER MENU

| Wallpaper Setting | In a manufactor of the second | | | | |
|---------------------|---|---|--|--|--|
| LAUNCHER MENU LIST | EXAMPLE | DESCRIPTION | | | |
| Wallpaper Setting | Choose Wallpaper | You can change your wallpaper into live ones or other beautiful pictures | | | |
| Notification Config | Notification Config Notice remind | You can open or shut down the function of notice reminder | | | |
| Task Manager | RunningGardice RunningGardice RunningGardice RecentTable Messender Strage 0% Concle Strage 0% | You can manage applications as follows: Running App Process Running Service Running Task Recent Task | | | |
| Widget config | | You can manage your widgets here | | | |



The "Picture", "Music" and "Video" are the media player for local storage. You can play the media on the USB-disk, Micro SD card etc.



Music player



Picture player

The following table shows the codec or format the product can play (more detail at general outline):

| Туре | Format | | |
|----------------------------|--|--|--|
| Video (Upper to 1080P) | H.264 (MKV, AVI, TS, M2TS, MOV, WMV, MP4, FLV) | | |
| | DIVX (AVI) | | |
| | MPEG1, MPEG2, MPEG4 (RM, VOB, MPG, MPEG, | | |
| | TS, M2TS) | | |
| | VC1 | | |
| | WMV | | |
| Audio | MP3 | | |
| | WMA | | |
| | AAC | | |
| | OGG | | |
| | WAV | | |
| | M4A | | |
| Picture (Resolution < 20M) | BMP | | |
| | JPG/JPEG | | |
| | GIF | | |
| | PNG | | |

BROWSER





随和相政策 Google 元全手册 G

You will use the following key:

• Arrow buttons:

Select and confirm to choose or enter

• (I) Menu Key:

Call out the Browser's menu, include forward, edit bookmark, refresh etc.

- Back key: Back to the last page
- Search key : Call out the search bar for searching or input new web address.

You can use the keys to browse up/ down the web page.

APPLICATIONS





• Install from USB-disk/Micro SD card

- 1. Open the "File Manager".
- 2. Choose your USB-disk or any other mass storage's folder.
- 3. Find you application, and press it.
- 4. Press the install button.
- 5. You can find the application in "App manager" after installation.

Install from Browser

- 1. Open the Browser.
- 2. Press search key and input your website address.
- 3. Download an APK file if there is a link for download this file (*Before download, you must have your Micro SD card in the card slot).
- 4. You can find the file in your Micro SD card folder.
- 5. Install it use "File manager".

• Install from ApkInstaller

- 1. Open the ApkInstaller.
- 2. Find the icon of the application, and enter it.
- 3. Press the install button.
- 4. You can find the application in "App manager" after installation.

Remove Applications

- 1. Enter SETTINGS
- 2. Enter "Applications--Manage applications"
- 3. Find the application you want to remove in tab "All"
- 4. Enter the icon and press "Uninstall"
- 5. Press "OK" to confirm uninstall

SETTINGS



| •)) | Wi-Fi settings |
|-----|---------------------|
| ٥ | Display |
| 1 | Applications |
| ₩ | Factory data reset |
| μa | Storage |
| A | Language & keyboard |
| S | System upgrade |
| 0 | About device |

| Setup settings | Brief description |
|--|--|
| Wireless & networks | Check to turn on Wi-Fi so you can connect to Wi-Fi networks |
| Wi-Fi Turn on WI-Fi Nettwork notification Notify me when an open network is available Wi-Fi networks Add Wi-Fi network | Check to receive an alert when an open Wi-Fi network becomes available Opens a dialog where you can add a Wi-Fi network by entering its SSID (the name it broadcasts) and security type |
| Display | Output mode: |
| Display settings | • 1080p |
| | • 1080i |
| Set your TV output mode. | • 720p |
| Overscan Ratio Set your TV display position | Set your display overscan ratio |
| Applications | Compatibility Mode |
| Compatibility Mode | Manage applications |
| Run older apps in Compatibility mode. This require rebooting. | Running services |
| Manage applications Manage and remove Installed applications | Storage use |
| Running services View and control currently running services | |
| Storage use View storage used by applications | |
| Reset to factory defaults | This will erase all data from your device's internal storage |
| This will erase all data from your device's internal storage, including: | To also clear music, pictures, and other data, the Micro SD card |
| Your Google account System and application data and settings Downloaded applications | needs to be erased |
| To also clear music, pictures, and other user data, the SD card needs to be erased. | |
| Erase SD card Erase all the data on the device's SD card, such as music or photos. | |
| Reset device | |

| Storage settings | Total space |
|--|-------------------------------------|
| SD card | Available space |
| Total space Unavailable | Erase USB storage |
| Available space | Available space of internal storage |
| Mount SD card Insert an SD card for mounting | |
| Erase SD card Erases all data on the device's SD card, such as music and photos Internal storage | |
| Available space 3.46GB | |
| Language & Keyboard | Select language |
| Language settings | User dictionary |
| Select language English (United States) | Android keyboard |
| User dictionary | |
| Keyboard settings | |
| Android keyboard | |
| Android keyboard Onscreen keyboard settings | |
| Built-in keyboard Built-in, physical keyboard settings | |
| System updates | Updating system |
| About module | Status |
| Model number | Model number |
| Android version | Android version |
| 2.3.4 | Baseband version |
| Kernel version 2.6.34 | Kernel version |
| 28de78c@7a86c7a #2 | Build number |
| | Wi-Fi IP address |
| Wi-Fi IP Address Not connected | Wi-Fi MAC address |
| Wi-Fi MAC address | |
| | |

ADVANCED FEATURES

DLNA (Digital Living Network Alliance)

• General Introduction

DLNA (Digital Living Network Alliance) seeks for more convenience, choices and enjoyment of your digital content through DLNA Certified devices. You can share/transfer/play/control media files from different devices through Wi-Fi.



- 1) Android TV play the shared media files from notebook, phone or tablet PCs. (DMP)
- 2) Android TV shares its media files, and other devices or itself can play the shared files (DMS)
- 3) Android TV can be a display terminal of other devices(DMR)
- 4) Mobile phone can be the controller of the Android TV as well as push media files into the TV(DMC)

• Operating Introductions

1) Enter the APP *MediaSharing*. You will see a list of devices that support DLNA on the left.

| | 0 | ۲ | | | | | C devices E transfer |
|--------------|--------------|--------|----------|-------------|-----------------|------|-----------------------------|
| AppInstaller | Calendar | Camera | Email | FileBrowser | Free Task Manag | Maps | Android TV - teest derive |
| | | | ê | \$ _ | | | |
| Market | MediaSharing | Search | Settings | Welcome | | | C C ^{enter} |
| | | J | | | | | C PC Poor motorid bax |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | * |

2) Choose the right device on the left, you will see a list of media files that the device shared.



3) Choose and press the media file you want to play. It will take a little longer for video files. Music and picture play screenshots are as followed:



Operating tips:

You can drag the progress bar during playing music or video. You can also have basic functions like forward/rewind and Prev/Next

Picture player can zoom in/out and rotate the picture as you like, it also provide filmslide function Manu of MediaSharing

| Q devices | | 8 | | |
|-----------------------|-----------|------|--------|--------|
| Android TV | | | Audios | Images |
| • Interested which we | | | | |
| • | | | | |
| | | | | |
| • | | | | |
| • KOTOCHTCHEN | | | | |
| • ******** | C refresh | 🚖 se | ttings | |
| | | | | |



Operating tips:

Refresh: Refresh the list of supported devices

Settings: Turn on/off the function of sharing, turn on/off *run service when boot up* and set TV's device name

Set the APP for mobile phone

| 🕒 🖧 🖞 🛛 🔛 🛜 📶 🌆 🏹 16:25 | 🕒 🖧 🖞 🛛 🔛 🛜 📾 🗺 😭 16:27 | 🖪 🖧 🖞 🛛 🕄 🛱 📶 🗺 😭 16:28 |
|-------------------------|---------------------------|--------------------------|
| | | devices settings |
| select device | httpex.puata 2011-10-31 | share enable |
| | | audio share |
| Chen mobile | | video share |
| □ Android TV-MediaR∈ | | |
| 🖵 Sony Internet TV | | |
| | | run service when boot up |
| cancel | httpex.puata httpex.puata | set device name |
| | | ok |

Operating tips:

① Install the APP for mobile phone. It will search for supported devices automatically in the current Wi-Fi environment. You can use different devices to play the media file you chose, such as *Android TV* (*AML*8726).

2 You can also have basic controller functions on your mobile phone. As you can control forward/rewind, prev/next and filmslide and etc.

Google TV Remote

• General Introduction

Google TV Remote is an app that makes your mobile phone into a fully functional Google TV remote. Use the mouse pad, arrow keys, and the full range of buttons. It allows you to turn the TV and AVR on/off so you can use this as the primary remote. Even search using your voice!



• Operating Introductions

1) Search and download the APP as below, install into your mobile phone:



Make our AML8726 product and your mobile phone connected to the same Wi-Fi connection. Open the GTV Remote, it will search for our product automatically.



Androstick FV-D11 User Manual



Tips:

- If you haven't found our product at first time, press "Wait"
- If you haven't found our product after several times of trying, please press "Cancel" and insert IP of our product manually
- Choose "Connect" if ID of the product is shown. Or you may choose "Add other device" to user other device
- Waiting for pairing code after clicking "Connect"

3) Insert the pairing code of our product on your mobile phone to connect.



Androstick FV-D11 User Manual

Artway Technology

| a 🖬 🔊 | ₽ 3 Q 3 | 🤊 🖬 🔛 | 2 15:57 | a 4 | 36 | 🖁 🖣 🖗 | 15:08 | | | | 24 |
|-------|----------------|-------|---------|------------|----------|--------|-------|-----|---|----|-----|
| DVR | | | | DVR | Guide | Info | | | | | |
| ø | | | B | ۲ | <u> </u> | | B | | | | |
| - 44 | n | | 886 | | 11 | | ₩ | | | | |
| Ente | r PIN co | de | | €€ | ₩I | | | | | | |
| cvtm1 | ref | | | PG- | сн+ | Recall | -▶ | | | | |
| 7240 | | | | Esc | | | 4 | Esc | 0 | : | 4 |
| | Pair | Canc | el | 4 | 0 | | A | ¢ | | : | ♠ |
| Ď | | | | Č | | •* | Ξ | Č | | •* | |
| Q, | | | | Q | | Ŷ | | Q | | Ŷ | ••• |

VPN (Virtual Private Network)

Introduction & Attention

VPN: Virtual Private Network

Attention: Before action, make sure the product is connected to a Wi-Fi hotspot. VPN function cannot run via Ethernet!

• Operating Manual

Please confirm your network is connected via Wi-Fi. You can check from Settings.



Choose Settings-VPNs and press Add VPN.



There are several connections according to different ways of implementing. Such as: PPTP(Point to

Point Tunneling Protocol), L2TP(Layer 2 Tunneling Protocol), L2TP/IPSec PSK(Pre-Shared Key based), L2TP/IPSec CRT(Certificate based)

| Add PPTP VPN Point-to-Point Tunneling Protocol | | | |
|---|--|--|--|
| Add L2TP VPN Layer 2 Tunneling Protocol | | | |
| Add L2TP/IPSec PSK VPN Pre-shared key based L2TP/IPSec VPN | | | |
| Add L2TP/IPSec CRT VPN Certificate based L2TP/IPSec VPN | | | |

The following operation example is based on PPTP

| VPN name VPN name not set | ۲ |
|--|---|
| Set VPN server VPN server not set | |
| Enable encryption PPTP encryption is enabled | ✓ |
| DNS search domains DNS search domains not set | |
| | |

Process:

Set VPN name.

Set VPN server.

Enable encryption or not.(Enable by Default)

Set DNS search domains

Return to launcher after setting complete

| VPN name | ۲ | | | | | | | | | |
|----------------------------|---------|----------|--|--------------------|-----|-----|--------|---|----|----|
| Set VPN server | | ۲ | Set VPN server VPN server not set | | | | | | | |
| Enable encryption VPN name | | X | Enable encryption Peter encryption a enable Set VPN server | | | | | | | |
| DNS search domains HKVPN | нкири | | | DNS search domains | | | | | 1 | |
| OK | Cancel | | | | OK | | Cancel | | 1 | |
| | | | | | | | | | | |
| | | | | | | | | | | |
| | | | 4 | | | | - | • | | |
| q w e r t | y u i | ор | 1 2 | 5 | 4 5 | 6 | / | ð | 9 | U |
| a s d f | g h j k | 1 | @ # | \$ | % & | * | - | + | (|) |
| 🔹 z x c | v b n m | 421 | ALT | ! " | | : ; | / | | 2 | •8 |
| ?123 , | - | Done | ABC | | | | | | Do | ne |



Enter Settings-VPNs and choose the VPN you added last step. Input the Username and Password to connect.(You can tick off Remember username in case of forgetting)

| Add VPN | | | |
|---------------------|-------------------|--------|--|
| VPNs | | | |
| HKVPN Connecting | | | |
| | | | |
| | Connect to HKVPN | | |
| | Username: C | | |
| | Password: | | |
| | Remember username | | |
| | Connect | Cancel | |
| | | | |
| | | | |
| | | | |
| | | | |

When connecting success, you can surf the Internet via VPN

EXCEPTION HANDLING

Systems restore

If the Androstick D11 cannot start successfully, please proceed as follows:

*Please read carefully before operation!

- 1. Unplug your storage devices, such as: Micro SD card, USB-disk, mobile HDD and etc.
- 2. Unplug the power supply
- 3. Press the RECOVERY button (as the figure below), then plug in the power, release the RECOVERY button

until you see the screen as follow

| reboot system now apply update wipe data/factory reset wipe cache partition set efuse item | |
|--|--|
| E:failed to mount /sdcard (No such file or directory) E:failed to mount /sdcard (No such file or directory) E:cannot mount /sdcard (No such file or directory) E:Can't mount /sdcard/factory_update_param.aml E:failed to mount /udisk (No such file or directory) E:failed to mount /udisk (No such file or directory) E:can't mount /udisk/factory_update_param.aml E:failed to mount /sdcard (No such file or directory) E:failed to mount /sdcard (No such file or directory) E:can't mount /sdcard (No such file or directory) E:can't mount /sdcard (No such file or directory) E:failed to mount /sdcard (No such file or directory) E:can't mount /sdcard (No such file or directory) E:failed to mount /udisk (No such file or directory) | |

4. Use Up/Down buttons to choose "wipe data/factory reset" and enter it

| Android system recovery | |
|--|---------|
| Android system recovery | utility |
| reboot system now apply update | |
| wipe data/factory reset | |
| wipe cache partition set efuse item | |

5. Use Up/Down buttons to choose "Yes -- delete all user data" and enter it

(*Warning!: It will delete all of user's information after confirmation)

| Confir THIS | m wipe of all user data? CAN NOT BE UNDONE. | |
|----------------|--|--|
| No | | |
| Yes - | - delete all user data | |
| No | | |
| No | | |

6. Use Up/Down buttons to choose "reboot system now" and enter it, the product will reboot after confirmation



7. The product will enter the system successfully

SPECIFICATIONS

| OS | Android 2.3 |
|------------|--|
| ARM | ARM Cortex A9 |
| Frequency | Up to 1GHz |
| RAM | 512MB DDR2 |
| ROM | Built-in 4GB NAND Flash |
| | Mini USB 2.0 port(For Power Supply) x1 |
| 1/0 | I/R remote signal receiver input x1 |
| 1/0 | Micro SD slot (support up to 32GB) x1 |
| | USB 2.0 input x1 |
| Networking | Built-in WIFI |
| | ENGLISH, CHINESE simplified, CHINESE traditional and JAPANESE |
| Language | and etc. |
| Display | Aspect Ratio : 16:9 |
| Specs | Resolution: 1920 x 1080P (Full HD) |
| | Video Formats: Full-format 1080P HD video decoding play |
| | Supported Video decoding: MPEG 1, MPEG 2, MPEG4, H.264, H.263, |
| | VC-1, RV30/40, |
| Media | Supported Audio decoding: PCM, LPCM, MP3, AAC, MPEG Audio, |
| Format | WM |
| | Supported subtitle formats: SRT,SSA,ASS,SUB |
| | Music format: WMA,MP3,WAV,OOG,AAC, M4A |
| | Picture format: JPG,GIF,BMP,PNG |
| | FTI(First Time Installation) |
| | Screen keyboard or support USB keyboard, wireless keyboard and |
| | mouse |
| Footuro | Video, music, picture player |
| reature | File manager; ApkInstaller |
| | Email, Gmail and etc.(support POP, IMAP, Exchange) |
| | Support kinds of third-party softwares |
| | Support Adobe Flash |