

# Clarion®

Owner's manual  
Mode d'emploi  
Manual de instrucciones

## AXZ610

AM/FM CASSETTE PLAYER  
WITH CD/MD CHANGER CONTROL

LECTEUR DE CASSETTE AM/FM AVEC  
COMMANDE DE CHANGEUR CD/MD


RADIO DE AM/FM Y REPRODUCTOR DE  
CASSETES CON CONTROL DE CAMBIADOR DE  
DISCOS COMPACTOS/MINIDISCOS

## Clarion Co., Ltd.

All Rights Reserved. Copyright © 2001: Clarion Co., Ltd.  
Printed in China / Imprimé en Chine / Inpreso en China

PE-1716B  
280-7624-00

### ProAudio

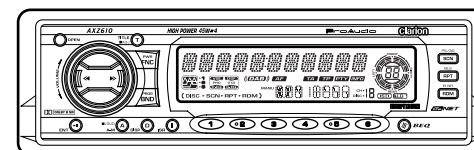

NET **TOUCH n-GO**

Thank you for purchasing this **Clarion** product.


- \* Please read this owner's manual in its entirety before operating this equipment.
- \* After reading this manual, be sure to keep it in a handy place (e.g., glove compartment).
- \* Check the contents of the enclosed warranty card and keep it carefully with this manual.
- \* This manual includes the operating procedures of the CD changer, MD changer, AUX, DAB, DSP DVD, PHONE MUTE and TV tuner connected via the CeNET cable. The CD changer, MD changer and TV tuner have their own manuals, but no explanations for operating them are described.

## Contents


---

<b>1. FEATURES</b> .....	3
<b>2. PRECAUTIONS</b> .....	3
Handling Cassette Tapes .....	4
Flip Down Panel .....	4
<b>3. CONTROLS</b> .....	5
<b>4. NOMENCLATURE</b> .....	6
Names of Buttons .....	6
Display Items .....	6
<b>5. DCP</b> .....	7
<b>6. REMOTE CONTROL</b> .....	8
Inserting the Batteries .....	8
Functions of Remote Control Unit Buttons .....	9
<b>7. OPERATIONS</b> .....	10
Basic Operations .....	10
Radio Operations .....	12
Tape Operations .....	14
Other Handy Functions .....	16
<b>8. OPERATIONS OF ACCESSORIES</b> .....	18
CD Changer Operations .....	18
MD Changer Operations .....	20
TV Operations .....	21
AC Processor Operations .....	23
Digital Radio / DAB Operations .....	26
DVD deck control .....	30
<b>9. TROUBLESHOOTING</b> .....	31
<b>10. ERROR DISPLAYS</b> .....	32
<b>11. SPECIFICATIONS</b> .....	33

## 6. REMOTE CONTROL

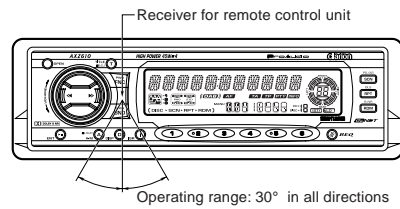

### Remote control unit

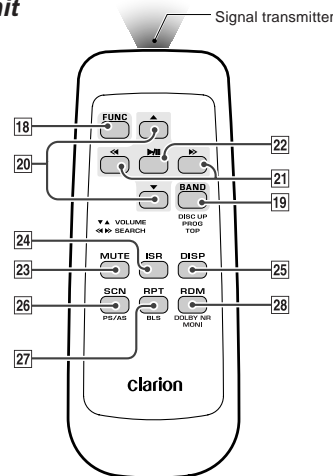


### Inserting the Batteries

1. Turn the remote control unit over, then slide the rear cover in the direction of the arrow.
2. Insert the AA (UM-3/1.5V) batteries that came with the remote control unit facing in the directions shown in the figure, then close the rear cover.

#### Notes:

Using batteries improperly can cause them to explode. Take note of the following points:

- When replacing batteries, replace both batteries with new ones.
- Do not short-circuit, disassemble or heat batteries.
- Do not dispose of batteries into fire or water.
- Dispose of spent batteries properly.

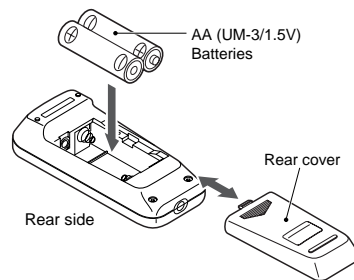

## 1. FEATURES

- Rotary Encoder Volume Control
- Touch-n-Go Flip Down Detachable Aluminum Face
- Controller for Optional DSP / EQ, TV Tuner and DVD Deck Modules
- Capability to Read CD TEXT Data from Clarion Compatible CD Changer
- BEAT EQ with 3 Adjustment Modes
- CeNET with Balanced Audio Line Transmission and Dynamic Noise Canceling
- **MAGTUNE**® FM Reception System
- Full Logic Tape Transport with True Function / Auto Reverse with Dual Azimuth Adjust
- Dolby® B Noise Reduction
- 4-Channel Line Level Output with Fader Control
- 180W (45W×4) Maximum Power Output

## 2. PRECAUTIONS

This unit uses a precision mechanism. Even in the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to consult the dealer or an experienced radio/TV technician for help.

### CAUTION

**CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

#### INFORMATION FOR USERS:

**CHANGES OR MODIFICATIONS TO THIS PRODUCT NOT APPROVED BY THE MANUFACTURER WILL VOID THE WARRANTY AND WILL VIOLATE FCC APPROVAL.**


## Handling Cassette Tapes

Using any of the following types of cassette tapes can cause malfunctions.

- Cassette tapes with low recording levels
- Cassette tapes in which the unrecorded section between tracks is shorter than 4 seconds
- Cassette tapes with noise or the like recorded between tracks
- Cassette tapes on which there are long unrecorded sections in the middle of a track

### Handling precautions

- Slack in the tape can cause malfunctions. In particular for prerecorded cassette tapes and 90-minute tapes, take up any slack in the tape before inserting it into the cassette player.

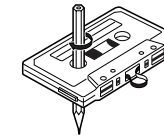

- Avoid using cassettes of 120 minutes or longer. (Such cassettes have extremely thin tape, so the tape can become stretched or cut.)
- Periodically play a cleaning cassette in the player to clean the head.
- Keep magnet items like magnets, and iron and steel items like screwdrivers away from both cassette tapes and the tape head in the player.
- Do not oil the cassette mechanism.
- Do not use any cassette tapes with peeling labels or deformed cases. Such cassette tapes can cause breakdowns.
- When not using the player, always take the cassette out of the mechanism. Exposing a cassette to direct sunlight, extreme temperatures or high humidity can damage the cassette.

## Flip Down Panel

This unit uses a flip-down structure that makes possible large-size displays.

### CAUTION

**When opening and closing the FLIP DOWN PANEL, be careful not to catch your fingers. They could be injured.**


1. Always use this unit with the FLIP DOWN PANEL closed.
2. Do not force operations or use this device abnormally when opening or closing the FLIP DOWN PANEL.

3. Do not use the FLIP DOWN PANEL as a tray to place objects on when it is open.
4. When closing the FLIP DOWN PANEL, do not press the OPEN button [1].
5. Strong impacts to the operating or display section can cause damage or deformation.
6. If the FLIP DOWN PANEL does not open fully, gently open it with your hand.


**Be sure to unfold and read the next page.**  
 Veuillez déplier et vous référer à la page suivante.  
 Cerciórese de desplegar y de leer la página siguiente.

### 3. CONTROLS / LES COMMANDES / CONTROLES


Source unit / Appareil pilote / Unidad fuente

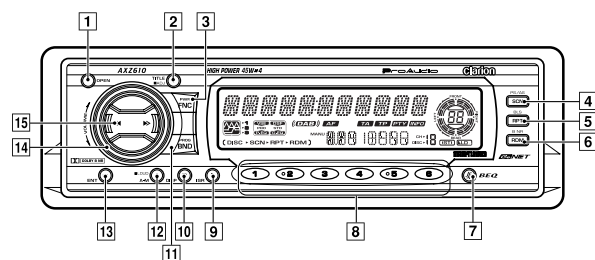

With the FLIP DOWN PANEL opened / Ouverture du PANNEAU RABATTABLE / Apertura del PANEL ABATIBLE

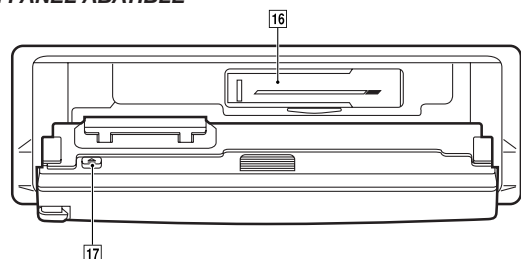

Display / Afficheur / Visualizador

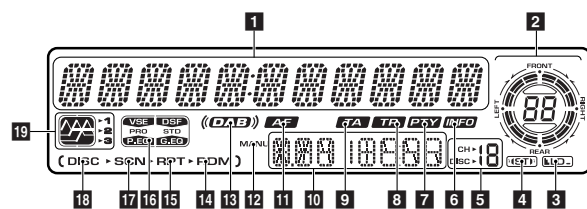

**Note:** Be sure to unfold this page and refer to the front diagrams as you read each chapter.  
 Remarque: Veuillez déplier cette page et vous référer aux schémas quand vous lisez chaque chapitre.  
 Nota: Cuando lea los capítulos, despliegue esta página y consulte los diagramas.

### 4. NOMENCLATURE

**Note:**  
 • Be sure to read this chapter referring to the front diagrams of chapter "3. CONTROLS" on page 5 (unfold).

#### Names of Buttons

- |                                       |                                       |
|---------------------------------------|---------------------------------------|
| 1 OPEN button                         | 9 ISR (instant station recall) button |
| 2 TITLE button                        | 10 DISP (display) button              |
| ADJ (adjust) button                   | 11 BND (band) button                  |
| 3 POWER button                        | PROG (program) button                 |
| FNC (function) button                 | 12 A-M (audio mode) button            |
| 4 SCN (scan) button                   | LOUD (loudness) button                |
| PS/AS (preset scan/auto store) button | 13 ENT (enter) button                 |
| 5 RPT (repeat) button                 | Play/pause button                     |
| BLS (blank skip) button               | 14 Rotary knob                        |
| 6 DOLBY NR button                     | 15 SEARCH button                      |
| RDM (random) button                   | 16 Cassette tape insertion slot       |
| 7 BEQ (Beat EQ) button                | 17 Eject button                       |
| 8 Preset buttons (1 to 6)             |                                       |
| Direct buttons (1 to 6) (7 to 12)     |                                       |

#### Display Items


- |  |   |
|--|---|
| 1 Operation status indication<br>* Clock, Volume, etc. are displayed.  | 10 Function mode indication<br>* The names of modes being selected, etc. are displayed. |
| 2 A-M (audio mode) indication  | 11 AF (alternative frequency) indication  |
| 3 LD (loudness) indication   | 12 MANU (manual) indication   |
| 4 ST (stereo) indication   | 13 DAB (Digital audio broadcasting) indication  |
| 5 Preset channel indication (1 to 6)<br>Disc number indication (1 to 12)<br>* The disc numbers corresponding to the discs in the CD or MD changer light. | 14 RDM (random) indication  |
| 6 INFO (information) indication  | 15 RPT (repeat) indication  |
| 7 PTY (programme type) indication  | 16 DSP (Digital sound processor) indication   |
| 8 TP (traffic programme) indication  | 17 SCN (scan) indication  |
| 9 TA (traffic announcement) indication   | 18 DISC indication  |
|  | 19 BEQ (Beat EQ) indication   |

### 5. DCP


The control panel can be detached to prevent theft. When detaching the control panel, store it in the DCP (DETACHABLE CONTROL PANEL) case to prevent scratches. We recommend taking the DCP with you when leaving the car.

#### Removing the DCP


1. Hold down POWER button 3 for 1 second or longer to turn off the power.

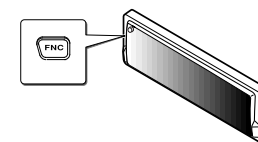


2. Deeply push in OPEN button 1 to unlock the FLIP DOWN PANEL.  
\* If the FLIP DOWN PANEL does not open fully, gently open it with your hand.

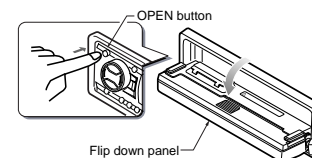

3. Pull the DCP toward you and remove it.

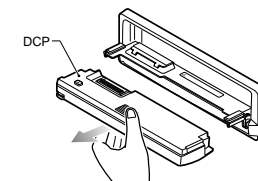


4. Close the HOLD FLAP.

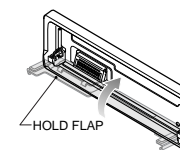

**CAUTION**  
 Be sure to close the HOLD FLAP for safety when removing the DCP.

#### Attaching the DCP

1. Insert the right side of the DCP into the source unit.
2. Insert the left side of the DCP into the source unit.

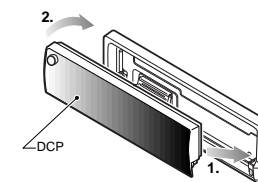

**CAUTION**

- The DCP can easily be damaged by shocks. After removing it, be careful not to drop it or subject it to strong shocks.
- If the FLIP DOWN PANEL is kept open, the DCP may drop due to vibration of the car. This results in damage to the DCP. So close the FLIP DOWN PANEL or remove the DCP to store into the case.
- The connector connecting the source unit and the DCP is an extremely important part. Be careful not to damage it by pressing on it with fingernails, screwdrivers, etc.

**Note:**  
 • If the DCP is dirty, wipe off the dirt with a soft, dry cloth only.

# Functions of Remote Control Unit Buttons

Button	Mode	Radio	Tape	CD changer MD changer	TV
18	FUNC	Turns power on and off. When pressed and held for 1 second: Turns power off. Switches among radio, tape, CD changer, MD changer, AUX, TV, DAB, DVD and DSP.			
19	BAND DISC UP PROG TOP	Switches reception band.	Switches the side of the tape.	Moves the next disc in increasing order.	Switches reception band.
20	VOLUME	Increases and decreases volume (in all modes).			
21	SEARCH	Moves preset channels up and down.	Fast-forward and rewinds tape. APC fast-forward and rewind.	Moves tracks up and down. When pressed and held for 1 second: Fast-forward/fast-backward.	Moves preset channels up and down.
22	PLAY/PAUSE	No function.	Switches between playback and pause.	Switches between playback and pause.	No function.
23	MUTE	Turns mute on and off.			
24	ISR	Recalls ISR radio station in memory. Press and hold for 2 seconds or longer: Stores current station into ISR memory (radio mode only).			
25	DISP	Switches among main display, sub display and clock display .			
26	SCN PS/AS	Preset scan. When pressed and held for 2 seconds: Auto store.	Fast-forward scan.	Scan play. When pressed and held for 1 second: Disc scan play.	Preset scan. When pressed and held for 2 seconds: Auto store.
27	RPT BLS	No function.	Repeat play. When pressed and held for 1 second: Blank tape skip function turns on and off.	Repeat play. When pressed and held for 1 second: Disc repeat play.	No function.
28	RDM DOLBY NR MONI	No function.	Select Dolby Noise Reduction mode.	Random play. When pressed and held for 1 second: Disc random play.	Switches between TV and VTR.

\* Some of the corresponding buttons on the source unit and remote control unit have different functions.

# 7. OPERATIONS

## Basic Operations

**Note:** Be sure to read this chapter referring to the front diagrams of chapter "3. CONTROLS" on page 5 (unfold).

### ⚠ CAUTION

Be sure to lower the volume before switching off the unit power or the ignition key. The unit remembers its last volume setting. If you switch the power off with the volume up, when you switch the power back on, the sudden loud volume may hurt your hearing and damage the unit.

The clock is displayed when the ignition key is turned to the ACC (accessory) or IGN (ignition-on) position even when the unit power is off. In some cars, the clock may momentarily disappear when the ignition key is turned to the START position. The clock will reappear after the engine has started and the ignition key is released to the IGN (ignition-on) position.

### Turning on/off the power

#### Note:

• Be careful about using this unit for a long time without running the engine. If you drain the car's battery too far, you may not be able to start the engine and this can reduce the service life of the battery.

1. Press POWER button [3].
2. The illumination and display on the unit light up. The unit automatically remembers its last operation mode and will automatically switch to display that mode.
3. Press and hold POWER button [3] for 1 second or longer to turn off the power for the unit.

#### Note:

• System check

The first time this unit is turned on after the wire connections are completed, it must be checked what equipment is connected. When the power is turned on, "SYSTEM CHCK" appears in the display, so press POWER button [3]. The system check starts within the unit. When the system check is complete, the power is turned off, so press POWER button [3] again.

### Selecting a mode

1. Press FNC button [3] to change the mode of operation.
2. Each time you press FNC button [3], the mode of operation changes in the following order:

Radio mode → TAPE mode → CD changer mode → MD changer mode → TV mode → DVD mode → DAB mode → DSP mode → AUX mode → Radio mode ...

\* External equipment not connected with CeNET is not displayed.

### Adjusting the volume

Turning the Rotary knob [14] clockwise increases the volume; turning it counterclockwise decreases the volume.

\* The volume level is from 0 (minimum) to 33 (maximum).

### Switching the display

Press DISP button [10] to select the desired display. Each time you press DISP button [10], the display switches in the following order:

 
Main display



Sub (title) display



Clock display



Main display...

\* Once selected, the preferred display becomes the display default. When a function adjustment such as volume is made, the screen will momentarily switch to that function's display, then revert back to the preferred display several seconds after the adjustment.

\* When you have entered a title in a CD, it appears in the sub display. If you have not entered a title, "NO-TITLE" appears in the title display instead. For information on how to enter a title, refer to the subsection "Entering titles" in the "Other Handy Functions".



## Setting the Beat EQ

This unit comes with 3 types of sound tone effects stored in memory. Select the one you prefer.

\* The factory default setting is "OFF".

Each time you press BEQ button [7], the tone effect changes in the following order:

"1 BASS BOOST" → "2 IMPACT" → "3 EXCITE" → "USER CUSTOM" → "TONE BYPASS" → "1 BASS BOOST" ...

- 1 BASS BOOST : bass emphasized
- 2 IMPACT : treble emphasized
- 3 EXCITE : bass and treble emphasized
- USER CUSTOM
- TONE BYPASS

## Adjusting the tone

Press A-M button [12] and select the item to adjust. Each time you press A-M button [12], the item changes in the following order:

- When "1 BASS BOOST" is set  
"BASS BOOST" → "BALANCE" → "FADER" → "ST NO TITLE"
- When "2 IMPACT" is set  
"HIGHT BOOST" → "BALANCE" → "FADER" → "ST NO TITLE"
- When "3 EXCITE" is set  
"IMPACT" → "BALANCE" → "FADER" → "ST NO TITLE"
- When "USER CUSTOM" is set  
"BASS<GAIN>" → "MID<GAIN>" → "TREB<GAIN>" → "BALANCE" → "FADER" → "ST NO TITLE"
- When "TONE BYPASS" is set  
"BALANCE" → "FADER" → "ST NO TITLE"

## Adjusting the bass

1. Press A-M button [12] and select "BASS<GAIN>".
2. Turning the Rotary knob [14] clockwise emphasizes the bass; turning it counterclockwise attenuates the bass.
  - \* The factory default setting is "0". (Adjustment range: -6 to +8)
3. When the adjustment is complete, press A-M button [12] several times until the function mode is reached.

## Adjusting the MID

1. Press A-M button [12] and select "MID<GAIN>".
2. Turning the Rotary Knob [14] clockwise emphasizes the MID; turning it counterclockwise attenuates the MID.
  - \* The factory default setting is "0" (Adjustment range: -6 to +6).
3. When the adjustment is complete, press A-M button [12] several times until function mode is reached.

## Adjusting the treble

1. Press A-M button [12] and select "TREB<GAIN>".
2. Turning the Rotary knob [14] clockwise emphasizes the treble; turning it counterclockwise attenuates the treble.
  - \* The factory default setting is "0". (Adjustment range: -6 to +6)
3. When the adjustment is complete, press A-M button [12] several times until the function mode is reached.

## Adjusting the balance

1. Press A-M button [12] and select "BAL".
2. Turning the Rotary knob [14] clockwise emphasizes the sound from the right speaker; turning it counterclockwise emphasizes the sound from the left speaker.
  - \* The factory default setting is "0". (Adjustment range: L13 to R13)
3. When the adjustment is complete, press A-M button [12] several times until the function mode is reached.

## Adjusting the fader

1. Press A-M button [12] and select "FAD".
2. Turning the Rotary knob [14] clockwise emphasizes the sound from the front speakers; turning it counterclockwise emphasizes the sound from the rear speakers.
  - \* The factory default setting is "0". (Adjustment range: F12 to R12)
3. When the adjustment is complete, press A-M button [12] several times until the function mode is reached.

### Adjusting the Beat EQ

1. Press BEQ button [7] and select the Beat EQ mode (1 to 3) to adjust.
2. Press A-M button [12] and select "BEQ".
3. Turning the Rotary knob [14] clockwise adjusts in the + direction; turning it counterclockwise adjusts in the – direction.
  - \* When 1 BASS BOOST is selected, you can adjust the bass in the range of  $\pm 3$ .
  - \* When 2 IMPACT is selected, you can adjust the treble in the range of  $\pm 3$ .
  - \* When 3 EXCITE is selected, you can adjust the bass and treble in the range of  $\pm 3$ .
4. When the adjustment is complete, press A-M button [12] several times until the function mode is reached.

### Turning on/off the loudness

The loudness effect emphasizes the bass and treble to create a natural sound tone. When you are listening to music at a low volume, it is recommended to use the loudness effect.

1. Press and hold LOUD button [12] for 1 second or longer to turn on the loudness effect. When the loudness effect is turned on, "LD" lights in the display.
2. Press and hold LOUD button [12] for 1 second or longer to turn off the loudness effect. "LD" goes off in the display.

### FM reception

For enhanced FM performance the **MAGITUNEES**® tuner includes signal actuated stereo control, Enhanced Multi AGC, Impulse noise reduction circuits and Multipath noise reduction circuits.

### Changing the reception area

This unit is initially set to USA frequency intervals of 10 kHz for AM and 200 kHz for FM. When using it outside the USA, the frequency reception range can be switched to the intervals below.

#### ● Setting the reception area

1. Press BND button [11] and select the desired radio band (FM or AM).
2. While pressing DISP button [10], each time you press and hold the number "6" of the Preset buttons [8] for 2 seconds or longer, the reception area switches from inside the USA to outside the USA or from outside the USA to inside the USA.
  - \* Any station preset memories are lost when the reception area is changed.

### Listening to the radio

1. Press FNC button [3] and select the radio mode.
2. Press BND button [11] and select the radio band. Each time the button is pressed, the radio reception band changes in the following order:  
FM1 → FM2 → FM3 → AM → FM1...
3. Press the right or left side of SEARCH button [15] to tune in the desired station.

### Tuning

There are 3 types of tuning mode available, seek tuning, manual tuning and preset tuning.

### Seek tuning

1. Press BND button [11] and select the desired band (FM or AM).
  - \* If "MANU" is lit in the display, press and hold BND button [11] for 1 second or longer. "MANU" in the display goes off and seek tuning is now available.
2. Press the right or left side of SEARCH button [15] to automatically seek a station. When the right side of SEARCH button [15] is pressed, the station is sought in the direction of higher frequencies; if the left side of SEARCH button [15] is pressed, the station is sought in the direction of lower frequencies.



## Manual tuning

There are 2 ways available: Quick tuning and step tuning.

When you are in the step tuning mode, the frequency changes one step at a time. In quick tuning mode, you can quickly tune the desired frequency.

1. Press BND button **[11]** and select the desired band (FM or AM).

\* If "MANU" is not lit in the display, press and hold BND button **[11]** for 1 second or longer. "MANU" lights in the display and manual tuning is now available.

2. Tune into a station.

### ● Quick tuning:

Press and hold the right or left side of SEARCH button **[15]** for 1 second or longer to tune in a station.

### ● Step tuning:

Press the right or left side of SEARCH button **[15]** to manually tune in a station.

## Recalling a preset station

A total of 24 preset positions (6-FM1, 6-FM2, 6-FM3, 6-AM) exists to store individual radio stations in memory. Pressing the corresponding preset button recalls the stored radio frequency automatically.

1. Press BND button **[11]** and select the desired band (FM or AM).
2. Press the corresponding Preset button **[8]** to recall the stored station.

\* Press and hold one of the Preset buttons **[8]** for 2 seconds or longer to store that station into preset memory.

## Manual memory

1. Select the desired station with seek tuning, manual tuning or preset tuning.
2. Press and hold one of the Preset buttons **[8]** for 2 seconds or longer to store the current station into preset memory.

## Auto store

Auto store is a function for storing up to 6 stations that are automatically tuned in sequentially. If 6 stations cannot be received, a previously stored station remains unoverwritten at the memory position.

1. Press BND button **[11]** and select the desired band (FM or AM).
2. Press and hold AS button **[4]** for 2 seconds or longer. The stations with good reception are stored automatically to the preset buttons.

## Preset scan

Preset scan receives the stations stored in preset memory in order. This function is useful when searching for a desired station in memory.

1. Press PS button **[4]**.
2. When a desired station is tuned in, press PS button **[4]** again to continue receiving that station.

### Note:

• Be careful not to press and hold PS button **[4]** for 2 seconds or longer, otherwise the auto store function engages and the unit starts storing stations.

## Instant station recall (ISR)

Instant station recall is a special radio preset that instantly accesses a favorite radio station at a touch of a button. The ISR function even operates with the unit in other modes.

### ● ISR memory

1. Select the station that you wish to store in ISR memory.
2. Press and hold ISR button **[9]** for 2 seconds or longer.

### ● Recalling a station with ISR

In any mode, press ISR button **[9]** to turn on the radio function and tune the selected radio station. "ISR" appears in the display. Press ISR button **[9]** again to return to the previous mode.

# Tape Operations

## Loading a tape

1. Press OPEN button [1] to access the cassette tape insertion slot behind the FLIP DOWN PANEL.
  2. Load a tape into the cassette tape insertion slot. "LOADING" appears in the display and starts playing.
- \* When a metal or chrome bias (70 $\mu$  sec) tape is inserted, the metal tape setting is selected automatically.
3. Close the FLIP DOWN PANEL.

### CAUTION

**Be careful not to catch your hand or fingers while closing the FLIP DOWN PANEL.**

#### Notes:

- If the FLIP DOWN PANEL does not open fully, gently open with your hand.
- Do not leave the FLIP DOWN PANEL open. Be sure to close it to avoid any possible mechanical damage.
- Do not put your hands, fingers or foreign objects into the cassette tape insertion slot.
- When a tape has already been loaded in the cassette tape insertion slot, another one cannot be inserted into it. Never try to insert another tape forcibly.

## Listening to a tape already inserted

Press FNC button [3] to select the tape mode. The tape starts playing automatically. If no tape is loaded in the unit, "NO CASS" appears in the display.

## Pausing tape play

1. Press Play/pause button [13] to pause tape playback. "PAUSE" appears in the display.
2. Press Play/pause button [13] again to resume tape playback.

## Ejecting a tape

1. Press OPEN button [1] to access the cassette Eject button [17] behind the FLIP DOWN PANEL.
2. Press Eject button [17] to eject a tape and take it out.
3. Close the FLIP DOWN PANEL.

### CAUTION

**Be careful not to catch your hand or fingers while closing the FLIP DOWN PANEL.**

#### Notes:

- If the FLIP DOWN PANEL does not open fully, gently open with your hand.
- The radio mode is selected automatically 4 seconds after Eject button [17] is pressed.  
If the auto antenna terminal for this unit is connected, the antenna is extended automatically. If you are in a location where the antenna may strike something, press FNC button [3] to switch the mode.

## Switching to the other side of the tape

Press PROG button [11] to change tape direction and playback.

- \* The tape mechanism automatically reverses direction and engage playback at the end of the tape (auto reverse).

## Fast-forwarding/rewinding

### ● FF(fast-forward):

Press the right side of SEARCH button [15].

### ● REW(rewind):

Press the left side of SEARCH button [15].

### ● Canceling FF/REW:

Press Play/pause button [13].

- \* When the end of the tape is reached with FF/REW, the mechanism automatically reverses tape direction and resumes playback.
- \* If you select another mode during FF/REW, it is selected with FF/REW continued.  
The mechanism automatically makes FF/REW stop when the end of the tape is reached.  
This function is called "monitor mode".

### APC (Auto Program Control) function

The APC function allows the tape to skip forward to the beginning of the next track or rewind to the start of the current track.

#### ● Skipping forward to the next track (“APC-FF”)

During tape playback, press the right side of SEARCH button [15] twice to fast-forward to the next track. The next track starts playing.

#### ● Skipping backwards to the start of the current track (“APC-REW”)

During tape playback, press the left side of SEARCH button [15] twice to rewind to the start of the current track. The current track plays from the beginning.

#### ● Canceling FF/REW APC to resume playback

Press Play/pause button [13].

\* If you select another mode during APC mode, it is selected with APC mode continued.

The mechanism automatically makes APC mode stop when it finds the next track (in APC-FF) or the start of the current track (in APC-REW). This function is called “**monitor mode**”.

### Dolby noise reduction system

The Dolby noise reduction system increases the volume level of high frequency sounds during recording and sets it back to their original level during play. This system reduces hissing noise which is typical of cassette tapes.

\* Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.

Dolby and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

1. Press DOLBY NR button [6] to select Dolby noise reduction. Each time you press DOLBY NR button [6], the Dolby changes in the following order:  
DOLBY B NR ON→DOLBY NR OFF→DOLBY B NR ON....
2. When DOLBY B NR ON is selected, “**DOLBY B NR**” appears in the display.

### Intro tape scan

The intro tape scan allows the first 10 seconds of all the tracks on the tape to be played. This function continues automatically until it is canceled.

1. Press SCN button [4] to start the intro tape scan. “**SCN**” lights in the display.

2. To cancel the intro tape scan, press SCN button [4] again. “**SCN**” goes off from the display and the current track continues to play.

\* When the end of the tape is reached during the intro tape scan, the tape mechanism automatically reverses direction and continues the intro tape scan.

\* If you select another mode during the intro tape scan, the mechanism automatically makes the intro tape scan stop when it finds the next track (APC function).

### Tape selection repeat

The tape selection repeat continuously plays the current track. This function continues automatically until it is canceled.

1. Press RPT button [5]. “**RPT**” lights in the display and the current track is repeated.
2. To cancel the repeat play, press RPT button [5] again. “**RPT**” goes off from the display and normal play resumes.

### Blank tape skip

The blank tape skip allows you to skip blank sections of tape that are over 12 seconds long.

1. Press and hold RPT button [5] for 1 second or longer. “**BLS**” lights in the display and the mechanism fastforward to the next track selection.
2. To cancel the blank tape skip, press and hold RPT button [5] for 1 second or longer again. “**BLS**” goes off from the display and normal play resumes.

#### Notes:

The APC, intro tape scan, tape selection repeat and blank skip may not work properly with tapes of the following qualities:

- Tapes on which the recording level is too low.
- Tapes on which there is much noise between selections.
- Tapes on which there are long pauses in the middle of selections.
- Tapes on which there are less than 4 seconds of blank space between selections.

# Other Handy Functions

## Setting the clock

1. Press and hold ADJ button [2] for 1 second or longer to switch to the adjustment selection display.
2. Press the right or left side of SEARCH button [15] to select "CLOCK".
3. Press ENT button [13].
4. Press the right or left side of SEARCH button [15] to select the hour or the minute.
5. Turn the Rotary knob [14] clockwise or counterclockwise to set the correct time.  
\* The clock is displayed in 12-hour format.
6. Press ENT button [13] to store the time into memory.
7. Press ADJ button [2] to return to the previous mode.

### Note:

• You cannot set the clock when it is displayed with only the ignition on. If you drain or remove the car's battery or take out this unit, the clock is reset. While setting the clock, if another button or operation is selected, the clock set mode is canceled.

## Entering titles

Titles up to 10 characters long can be stored in memory and displayed for radio stations and CDs. The numbers of titles that can be entered for each mode are as follows.

Mode	Number of titles
Radio mode	30 titles
TV mode	15 titles

CD changer mode	Number of titles
CDC655z connected	60 titles
CDC655Tz connected	100 titles
CDC1255z connected	50 titles

1. Press FNC button [3] to select the mode you want to enter a title (radio, CD changer or TV).  
\* Titles cannot be entered for MDs with this unit.
2. Select and play a CD in a CD changer or tune to an appropriate TV or radio station.
3. Press DISP button [10] and display the subtitle.
4. Press TITLE button [2]. "TITL" appears in the display and the cursor position flashes.
5. Press the right or left side of SEARCH button [15] to move the cursor.

6. Press DISP button [10] to select a character. Each time you press DISP button [10], the character changes in the following order:  
Capital letters → Numbers → Symbols → Capital letters...
7. Turn the Rotary knob [14] to select the desired character. Turning the Rotary knob [14] clockwise moves the cursor to the next character; turning it counterclockwise moves the cursor to the previous character.
8. Repeat steps 5 to 7 to enter up to 10 characters for the title.
9. Press and hold ENT button [13] for 2 seconds or longer to store the title into memory and cancel title input mode.

## Clearing titles

1. Play a CD in a CD changer or tune a radio station or TV station that you want to clear the title for.
2. Press DISP button [10] and display the subtitle.
3. Press TITLE button [2]. "TITL" appears in the display and the display switches to the title input display.
4. Press BND button [11].
5. Press and hold ENT button [13] for 2 seconds or longer to clear the title and cancel the title input mode.

## Hi / Lo dimmer control

You can adjust the reduced illumination level of the dimmer.

\* The factory default setting is "ON".

1. Press and hold ADJ button [2] for 1 second or longer to switch to the adjustment selection display.
2. Press the right or left side of SEARCH button [15] to select "DIMMER".
3. Turn the Rotary knob [14] clockwise to "ON" or counterclockwise to "OFF".
4. Press ADJ button [2] to return to the previous mode.

### Message display

When the unit is powered on or off, a message is displayed. The user can turn this message display ON or OFF.

\* The factory default setting is "ON".

1. Press and hold ADJ button **[2]** for 1 second or longer to switch to the adjustment selection display.
2. Press the right or left side of SEARCH button **[15]** to select "MESSAGE".
3. Turn the Rotary knob **[14]** clockwise or counterclockwise to set message display ON or OFF.
4. Press ADJ button **[2]** to return to the previous mode.

### AUX function

This system has an external input jack so you can listen to sounds and music from external devices when connected to this unit.

### Selecting AUX IN sensitivity

Make the following settings to select the sensitivity when sounds from external devices connected to this unit are difficult to hear even after adjusting the volume.

1. Press and hold the ADJ button **[2]** for 1 second or longer to set Adjust mode.
2. Press the SEARCH button **[15]** and select "AUX SENS".
3. Turn the Rotary knob **[14]** clockwise or counterclockwise as needed and select from "SENS HIGH", "SENS MID" or "SENS LOW".  
\* The factory default setting is "SENS MID".
4. Press ADJ button **[2]** to return the previous mode.

# 8. OPERATIONS OF ACCESSORIES

## CD Changer Operations

### CD changer functions

When an optional CD changer is connected through the CeNET cable, this unit controls all the CD changer functions. This unit can control a total of 2 changers (MD and/or CD).

Press FNC button [3] and select the CD changer mode to start play. If 2 CD changers are connected, press FNC button [3] to select the CD changer for play.

\* If "NO MAG" appears in the display, insert the magazine into the CD changer. "LOADING" appears in the display while the player loads (checks) the magazine.

\* If "NO DISC" appears in the display, eject the magazine and insert discs into each slot. Then, reinsert the magazine back into the CD changer.

### ⚠ CAUTION

CD ROM discs cannot be played in the CD changer.

### Pausing play

1. Press Play/pause button [13] to pause play. "PAUS" appears in the display.
2. To resume play, press Play/pause button [13] again.

### Displaying CD titles

This unit can display title data for CD-text CDs and user titles input with this unit.

1. Press DISP button [10] to display the title.
2. Each time you press and hold DISP button [10] for 1 second or longer, the title display changes in the following order:

User title → Disc title → Artist name → Track title

#### Note:

• If the CD playing is not a CD-text CD or no user title has been input, "NO-TITLE" appears in the display.

#### ● Scrolling a CD-text title

When a CD-text title is longer than 11 characters, you can scroll the display as follows.

1. Display the CD-text title (disc or track).
2. Press TITLE button [2]. The title scrolls.

### Selecting a CD

Each of the Direct button [8] corresponds to a disc loaded into the magazine.

#### ● Selecting a disc from 1 to 6

Press the corresponding Direct button [8] (1 to 6) to select the desired disc.

#### ● Selecting a disc from 7 to 12 (only when a 12 disc CD changer is used.)

Press and hold the corresponding Direct button [8] (7 to 12) for 1 second or longer to select the desired disc.

\* If a CD is not loaded in a slot of the magazine, pressing the Direct button [8] corresponding to its disc number is invalid.

### Selecting a track

#### ● Track-up

1. Press the right side of SEARCH button [15] to move ahead to the beginning of the next track.
2. Each time you press the right side of SEARCH button [15], the track advances ahead to the beginning of the next track.

#### ● Track-down

1. Press the left side of SEARCH button [15] to move back to the beginning of the current track.
2. Press the left side of SEARCH button [15] twice to move to the beginning of the previous track.

### Fast-forward/fast-backward

#### ● Fast-forward

Press and hold the right side of SEARCH button [15] for 1 second or longer.

#### ● Fast-backward

Press and hold the left side of SEARCH button [15] for 1 second or longer.



### Top function

The top function plays from the first track (track No. 1) of the disc.

#### ● When playing a disc 1 to 6

Press the Direct button [8] (1 to 6) with the same number as the CD playing.

#### ● When playing a disc 7 to 12 (only when a 12 disc CD changer is used).

Press and hold for 1 second or longer the Direct button [8] (7 to 12) with the same number as the CD playing.

\* If a CD is not loaded in a slot of the magazine, pressing the Direct button [8] corresponding to its disc number is invalid.

### Scan play

The scan play locates and plays the first 10 seconds of each track on a disc automatically. This function continues on the disc until it is canceled.

\* The scan play is useful when you want to select a desired track.

1. Press SCN button [4] to start track scanning. "SCN" lights in the display.
2. To cancel the scan play, press SCN button [4] again. "SCN" goes off from the display and the current track continues to play.

### Disc scan play

The disc scan play locates and plays the first 10 seconds of the first track on each disc in the currently selected CD changer. This function continues automatically until it is canceled.

\* The disc scan play is useful when you want to select a desired CD.

1. Press and hold SCN button [4] for 1 second or longer. "DISC" and "SCN" light in the display and the disc scan play starts.
2. To cancel the disc scan play, press SCN button [4] again. "DISC" and "SCN" go off from the display and the current track continues to play.

### Repeat play

The repeat play continuously plays the current track. This function continues automatically until it is canceled.

1. Press RPT button [5]. "RPT" lights in the display and the current track is repeated.
2. To cancel the repeat play, press RPT button [5] again. "RPT" goes off from the display and normal play resumes.

### Disc repeat play

After all the tracks on the current disc have been played, the disc repeat play automatically replays the current disc over from the first track. This function continues automatically until it is canceled.

1. Press and hold RPT button [5] for 1 second or longer. "DISC" and "RPT" light in the display and the disc repeat play starts.
2. To cancel the disc repeat play, press and hold RPT button [5] again. "DISC" and "RPT" go off from the display and normal play resumes on the current track.

### Random play

The random play selects and plays individual tracks on the disc in no particular order. This function continues automatically until it is canceled.

1. Press RDM button [6]. "RDM" lights in the display and the random play begins.
2. To cancel the random play, press RDM button [6] again. "RDM" goes off from the display and normal play resumes.

### Disc random play

The disc random play selects and plays individual tracks or discs automatically in no particular order. This function continues automatically until it is canceled.

1. Press and hold RDM button [6] for 1 second or longer. "DISC" and "RDM" light in the display and the disc random play starts.
2. To cancel the disc random play, press and hold RDM button [6] again. "DISC" and "RDM" go off from the display and normal play resumes from the current track.

# MD Changer Operations

## MD changer functions

When an optional MD changer is connected through the CeNET cable, this unit controls all the MD changer functions. This unit can control a total of 2 changers (MD and/or CD).

Press FNC button [3] and select the MD changer mode to start play. If 2 MD changers are connected, press FNC button [3] to select the MD changer for play.

\* If "NO DISC" appears in the display, load MDs into the MD changer.

## Pausing play

1. Press Play/pause button [13] to pause play. "PAUSE" appears in the display.
2. To resume play, press Play/pause button [13] again.

## Switching disc titles and track titles

This unit can display disc titles and track titles already entered on MDs. Titles up to 128 characters long can be displayed by scrolling the titles.

\* Titles cannot be entered for MDs with this unit.

1. Press DISP button [10] to display the title. The disc title or track title is displayed.
2. Each time you press and hold DISP button [10] for 1 second or longer, the display toggles between the disc title and the track title.

### ● Scrolling titles

When a title is longer than 11 characters, you can scroll through it with the following operation.

1. Display the MD title (disc or track).
2. Press TITLE button [2].

The display scrolls through the title.

## Selecting an MD

Each of the Direct button [8] corresponds to an MD loaded into the MD changer. Press the corresponding Direct button [8] (1 to 6) to select the desired disc.

\* If an MD is not loaded in a slot of the MD changer, pressing the Direct button [8] corresponding to its disc number is invalid.

## Selecting a track

### ● Track-up

1. Press the right side of SEARCH button [15] to move ahead to the beginning of the next track.

2. Each time you press the right side of SEARCH button [15], the track advances ahead to the beginning of the next track.

### ● Track-down

1. Press the left side of SEARCH button [15] to move back to the beginning of the current track.
2. Press the left side of SEARCH button [15] twice to move to the beginning of the previous track.

## Fast-forward/fast-backward

### ● Fast-forward

Press and hold the right side of SEARCH button [15] for 1 second or longer.

### ● Fast-backward

Press and hold the left side of SEARCH button [15] for 1 second or longer.

## Top function

The top function plays from the first track (track No. 1) of the disc. Press the Direct button [8] (1 to 6) with the same number as the MD playing.

\* If an MD is not loaded in a slot of the MD changer, pressing the Direct button [8] corresponding to its disc number is invalid.

## Scan play

The scan play locates and plays the first 10 seconds of each track on a disc automatically. This function continues on the disc until it is canceled.

\* The scan play is useful when you want to select a desired track.

1. Press SCN button [4] to start track scanning. "SCN" lights in the display.
2. To cancel the scan play, press SCN button [4] again. "SCN" goes off from the display and the current track continues to play.

## Disc scan play

The disc scan play locates and plays the first 10 seconds of the first track on each disc in the currently selected MD changer. This function continues automatically until it is canceled.

\* The disc scan play is useful when you want to select a desired MD.

1. Press and hold SCN button [4] for 1 second or longer. "DISC" and "SCN" light in the display and the disc scan play starts.
2. To cancel the disc scan play, press and hold SCN button [4] again. "DISC" and "SCN" go off from the display and the current track continues to play.

### Repeat play

The repeat play continuously plays the current track. This function continues automatically until it is canceled.

1. Press RPT button **[5]**. "RPT" lights in the display and the current track is repeated.
2. To cancel the repeat play, press RPT button **[5]** again. "RPT" goes off from the display and normal play resumes.

### Disc repeat play

After all the tracks on the current disc have been played, the disc repeat play automatically replays the current disc over from the first track. This function continues automatically until it is canceled.

1. Press and hold RPT button **[5]** for 1 second or longer. "DISC" and "RPT" light in the display and the disc repeat play starts.
2. To cancel the disc repeat play, press and hold RPT button **[5]** again. "DISC" and "RPT" go off from the display and normal play resumes on the current track.

### Random play

The random play selects and plays individual tracks on the disc in no particular order. This function continues automatically until it is canceled.

1. Press RDM button **[6]**. "RDM" lights in the display and the random play begins.
2. To cancel the random play, press RDM button **[6]** again. "RDM" goes off from the display and normal play resumes.

### Disc random play

The disc random play selects and plays individual tracks or discs automatically in no particular order. This function continues automatically until it is canceled.

1. Press and hold RDM button **[6]** for 1 second or longer. "DISC" and "RDM" light in the display and the disc random play starts.
2. To cancel the disc random play, press and hold RDM button **[6]** again. "DISC" and "RDM" go off from the display and normal play resumes from the current track.

### TV tuner functions

When an optional TV tuner is connected through the CeNET cable, this unit controls all TV tuner functions. To watch TV requires a TV tuner and monitor.

### Watching a TV

1. Press FNC button **[3]** and select the TV mode.
2. Press BND button **[11]** to select the desired TV band (TV1 or TV2). Each time the button is pressed, the input selection toggles between TV1 and TV2.
3. Press the right or left side of SEARCH button **[15]** to tune in the desired TV station.

### Watching a video

The TV tuner has a VTR input terminal to which 1 external device can be connected. Connect a 12V video cassette player (VCP) or video cassette recorder (VCR) to the TV tuner input terminal.

1. Press RDM button **[6]** to select VTR.
2. To return to the TV broadcast, press RDM button **[6]**.

### Tuning

There are 3 types of tuning mode available, Seek tuning, manual tuning and preset tuning.

### Seek tuning

1. Press BND button **[11]** to select the desired TV band (TV1 or TV2).
  - \* If "MANU" is lit in the display, press and hold BND button **[11]** for 1 second or longer. "MANU" in the display goes off and seek tuning is now available.
2. Press the right or left side of SEARCH button **[15]** to automatically seek a station. Press the right side of SEARCH button **[15]** to automatically tune up the frequency band to the next available TV station; press the left side to automatically tune down.

### Manual tuning

There are 2 ways available: Quick tuning and step tuning.

When you are in the step tuning mode, the frequency changes one step at a time. In quick tuning mode, you can quickly tune the desired frequency.

1. Press BND button **[11]** and select the desired band (TV1 or TV2).

\* If "MANU" is not lit in the display, press and hold BND button **[11]** for 1 second or longer. "MANU" lights in the display and manual tuning is now available.

2. Tune into a station.

#### ● Quick tuning:

Press and hold the right or left side of SEARCH button **[15]** for 1 second or longer to tune in a station.

#### ● Step tuning:

Press the right or left side of SEARCH button **[15]** to manually tune in a station.

### Recalling a preset station

A total of 12 TV stations can be stored (6-TV1 and 6-TV2). This allows you to select your favorite TV stations and store them in memory for later recall.

1. Press BND button **[11]** and select the desired TV band (TV1 or TV2).

2. To recall a stored TV station, press the desired Preset button **[8]** to select that station.

\* Press and hold one of the Preset buttons **[8]** for 2 seconds or longer to store the current station into the preset memory.

### Manual memory

1. Select the desired station with seek tuning, manual tuning or preset tuning.
2. Press and hold one of the Preset buttons **[8]** for 2 seconds or longer to store the current station to that preset memory.

### Auto store

Auto store selects 6 TV stations automatically and stores each one into a preset memory.

If there are not 6 stations with good reception, stations previously stored in memory remain and only the strong stations are stored into memory.

1. Press BND button **[11]** and select the desired TV band (TV1 or TV2).
2. Press and hold AS button **[4]** for 2 seconds or longer. The stations with good reception are automatically stored to the Preset buttons **[8]**.

### Preset scan

Preset scan allows the user to view each preset position before it automatically advances to the next preset. This function is useful for searching for desired TV station in memory.

1. Press PS button **[4]**.
2. When the desired station is found, press PS button **[4]** again to remain tuned to that station.

#### **Note:**

• Do not press and hold PS button **[4]** for 2 seconds or longer. Doing so will trigger the auto store function and start storing stations into memory.

### Setting the TV diver

You can change the reception setting for the TV antenna connected to the TV tuner.

1. Press and hold ADJ button **[2]** for 1 second or longer to switch to the adjustment selection display.
2. Press the right or left side of SEARCH button **[15]** to select "TV DIVER".
3. Press ENT button **[13]**.
4. Turn the Rotary knob **[14]** clockwise to set to "ON" or counterclockwise to set to "OFF".

#### **ON:**

Sets reception emphasizing the visual.

#### **OFF:**

Sets the diver setting to OFF.

5. Press ENT button **[13]**.
6. Press ADJ button **[2]** to return to the previous mode.

# AC Processor Operations

## DSP control function

If the DSP (DPH910), sold separately, is connected to this unit using the CeNET cable, all functions of the AC Processor can be controlled.

## DSF functions

There are 2 modes available in DPH910, STD mode and professional mode. Choose one of them and adjust the sound field and the sound quality.

### ● Functions common to each mode:

Auto loudness, etc.

### ● Standard mode:

Adjustment using the graphic equalizer function and the DSF function.

### ● Professional mode:

Adjustment using the VSE function and the parametric equalizer function.

\* When the STD mode is selected, adjustment for the professional mode cannot be made. On the contrary, when the professional mode is selected, adjustment for the STD mode cannot be made.

\* **For details on functions of each mode, refer to the owner's manual supplied with the DPH910.**

\* Hereafter the graphic equalizer is referred to as a G.EQ, the space equalizer referred to as VSE and the parametric equalizer referred to as P.EQ.

## Operations common to each mode

### Output adjustment of auto loudness, subwoofer and playback band

1. Press and hold ADJ button [2] for 1 second or longer to switch to the adjustment selection display.
2. Press the right or left side of SEARCH button [15] to select "SOUND".
3. Press ENT button [13].
4. Press the right or left side of SEARCH button [15] to select the adjustment item.

There are "A.LD LEVEL", "WOOFER OUT", "WOOFER LPF", "HPF" and "TEST TONE" available for the adjustment items.

\* For details on each adjustment item, refer to the owner's manual supplied with the DPH910.

5. Turn the Rotary knob [14] clockwise or counterclockwise to make the adjustment.
6. Pressing ENT button [13] returns to the adjustment selection display.
7. Press ADJ button [2] to return to the previous mode.

### Selecting the easy mode or the professional mode

\* The factory default setting is "STD".

1. Press and hold ADJ button [2] for 1 second or longer to switch to the adjustment selection display.
2. Press the right or left side of SEARCH button [15] to select "AC-P SEL".
3. Turn the Rotary knob [14] clockwise or counterclockwise to set the mode to "STD" or "PRO".
4. Press ADJ button [2] to return to the previous mode.

### Entering titles

You can give a title to the user memory of the DSF, G.EQ, VSE and P.EQ that you have adjusted yourself.

1. Press A-M button [12] to select the adjustment mode in which you want to give a title.
2. Press BND button [11] to select "USR". "USR" will be displayed in the function mode indication [10].
3. Press one of Preset buttons [8] to select the user memory to which you want to give a title.
4. Press TITLE button [2].
5. Press the right or left side of SEARCH button [15] to move the cursor.
6. Press DISP button [10] to select the character fonts.

There are capital letters, small letters, numbers, symbols and umlaut available for the character.

7. Turn the Rotary knob [14] clockwise or counterclockwise to select the character you want to input.
8. Repeat steps 5 to 7 to input the title.
9. Press and hold ENT button [13] for 2 seconds or longer to put the title into memory. The title input mode is cancelled.

## STD mode/G.EQ operations

### Note:

- The adjustment made in standard mode is not reflected in the adjustment in professional mode. On the contrary, the adjustment made in professional mode is not reflected in the adjustment in easy mode.

### G.EQ effect ON/OFF

While the “G.EQ” indication **[16]** is lit in the display, the G.EQ effect is set to “ON”.

\* The factory default setting is “ON”.

1. Press A-M button **[12]** and select “G.EQ”. While “G.EQ” is selected, “G.EQ” blinks in the display.
2. Press DISP button **[10]**.
3. Press A-M button **[12]**. “G.EQ” in the display is changed from blinking to lit or unlit.

\* When “G.EQ” is unlit, the G.EQ effect is set to OFF.

#### Note:

• If the G.EQ effect is set to OFF, the adjustment made in “G.EQ operations” is not reflected in the music source.

### Selecting a G.EQ menu

1. Press A-M button **[12]** and select “G.EQ”.
2. Press BND button **[11]** to select “BASC” (basic). “BASC” is displayed in the function mode indication **[10]** in the display.
3. Press one of Direct buttons **[8]** and select the desired G.EQ menu.

\* To select the user memory, press BND button **[11]** to select “USR” and press one of Direct buttons **[8]**.

### Editing/storing a G.EQ menu (User memory)

1. Select a G.EQ menu which you want to edit on the basis of.
2. Press and hold ADJ button **[2]** for 1 second or longer.
3. Press the right or left side of SEARCH button **[15]** to select the frequency to be adjusted. There are 50Hz, 100Hz, 200Hz, 400Hz, 1kHz, 3kHz and 12kHz available for the adjustment frequency.

\* For details on each adjustment item, refer to the owner’s manual supplied with the DPH910.

4. Turn the Rotary knob **[14]** clockwise or counter-clockwise to make the adjustment. The adjustment range is from -6dB to +6dB.
5. Repeat steps 3 to 4 to complete the adjustment and press ADJ button **[2]**.
6. Press and hold one of Direct buttons **[8]** for 2 seconds or longer to store the edited contents.

\* You can give a title to the user memory. For the inputting method of titles, refer to the subsection “Entering titles” in section “Operations common to each mode”.

## STD mode/DSF operations

### DSF effect ON/OFF

When the “DSF” indication **[16]** is lit in the display, the DSF effect is set to “ON”.

\* The factory default setting is “ON”.

1. Press A-M button **[12]** and select “DSF”.
2. Press DISP button **[10]**.
3. Press A-M button **[12]**. “DSF” in the display lit or unlit.

\* When “DSF” is unlit, the DSF effect is set to OFF.

#### Note:

• If the DSF effect is set to OFF, the adjustment made in “DSF operations” is not reflected in the music source.

### Setting the listening position menu

1. Press A-M button **[12]** and select “DSF”.
2. Press the right or left side of SEARCH button **[15]** to set the listening position type.

There are FULL SEAT, FRONT-RIGHT, FRONT-LEFT, FRONT (only front seats), REAR (only rear seats) and PASS available for the listening position types.

\* The factory default setting is “FULL SEAT”.

### Making fine adjustment of the listening position

1. Upon completion of setting the listening position, press ENT button **[13]**.
2. Press the right or left side of SEARCH button **[15]** to select “BALANCE” or “FADER”. The selected item blinks.
3. Turn the Rotary knob **[14]** clockwise or counter-clockwise to adjust the balance and the fader.
4. Press ENT button **[13]** to return to the DSF mode.

### Selecting a sound field menu

1. Press A-M button **[12]** and select “DSF”. “DSF” blinks in the display.
2. Press BND button **[11]** to select “BSC1” (basic-1) or “BSC2” (basic-2). “BSC1” or “BSC2” is displayed in the function mode indication **[10]** in the display.
3. Press one of Direct buttons **[8]** and select the desired sound field menu.

\* To select the user memory, press BND button **[11]** to select “USR” and press one of Direct buttons **[8]**.



### Editing/storing a sound field menu (User memory)

1. Select a sound field menu which you want to edit on the basis of.
2. Press and hold ADJ button [2] for 1 second or longer.
3. Press the right or left side of SEARCH button [15] to select the item to be adjusted.  
There are "EFFECT", "DELAY", "REAR MIX", "REV.TIME" or "ROOM SIZE" and "HIGH" or "LIVENESS" available for the items to be adjusted.  
\* For details on each adjustment item, refer to the owner's manual supplied with the DPH910.
4. Turn the Rotary knob [14] clockwise or counterclockwise to make the adjustment.
5. Repeat steps 3 to 4 to complete the adjustment and press ADJ button [2].
6. Press and hold one of Direct buttons [8] for 2 seconds or longer to store the edited contents.  
\* You can give a title to the user memory. For the inputting method of titles, refer to the subsection "Entering titles" in section "Operations common to each mode".

### Professional mode/VSE operations

#### Note:

- The adjustment made in professional mode is not reflected in the adjustment in easy mode. On the contrary, the adjustment made in easy mode is not reflected in the adjustment in professional mode.

#### VSE effect ON/OFF

While the "VSE" indication [16] is lit in the display, the S.EQ effect is set to "ON".

\* The factory default setting is "ON".

1. Press A-M button [12] and select "VSE".
2. Press DISP button [10].
3. Press A-M button [12]. "VSE" in the display lit or unlit.  
\* When "VSE" is unlit, the VSE effect is set to OFF.

#### Note:

- If the VSE effect is set to OFF, the adjustment made in "VSE operations" is not reflected in the music source.

### Selecting an VSE menu

1. Press A-M button [12] and select "VSE".
2. Press BND button [11] to select "BASC" (basic). "BASC" is displayed in the function mode indication [10] in the display.
3. Press one of Direct buttons [8] and select the desired VSE menu.  
\* To select the user memory, press BND button [11] to select "USR" and press one of Direct buttons [8].

### Editing/storing an VSE menu (User memory)

1. Select an VSE menu which you want to edit on the basis of.
2. Press and hold ADJ button [2] for 1 second or longer.
3. Press the right or left side of SEARCH button [15] to select the item to be adjusted.  
There are "DIFFUSE", "CAR WIDTH" and "CAR LENG" available for the items to be adjusted.  
\* For details on each adjustment item, refer to the owner's manual supplied with the DPH910.
4. Turn the Rotary knob [14] clockwise or counterclockwise to make the adjustment. The adjustment range is from 1 to 10 for each item.
5. Repeat steps 3 to 4 to complete the adjustment and press ADJ button [2].
6. Press and hold one of Direct buttons [8] for 2 seconds or longer to store the edited contents.  
\* You can give a title to the user memory. For the inputting method of titles, refer to the subsection "Entering titles" in section "Operations common to each mode".

### Professional mode/P.EQ operations

#### P.EQ effect ON/OFF

While the "P.EQ" indication [16] is lit in the display, the P.EQ effect is set to "ON".

\* The factory default setting is "ON".

1. Press A-M button [12] and select "P.EQ".
2. Press DISP button [10].
3. Press A-M button [12]. "P.EQ" in the display is changed from blinking to lit or unlit.  
\* When "P.EQ" is unlit, the P.EQ effect is set to OFF.

#### Note:

- If the P.EQ effect is set to OFF, the adjustment made in "P.EQ operations" is not reflected in the music source.

## AC Processor Operations

### Selecting a P.EQ menu

1. Press A-M button [12] and select "P.EQ". "P.EQ" blinks in the display.
2. Press BND button [11] to select "BASC" (basic). "BASC" is displayed in the function mode indication [10] in the display.
3. Press one of Direct buttons [8] and select the desired P.EQ menu.
  - \* To select the user memory, press BND button [11] to select "USR" and press one of Direct buttons [8].

### Editing/storing a P.EQ menu (User memory)

1. Select a P.EQ menu which you want to edit on the basis of.
2. Press and hold ADJ button [2] for 1 second or longer.
3. Press the right or left side of SEARCH button [15] to select the item to be adjusted.

There are correction channel, correction band, selection of the centre frequency, gain adjustment and selection of the Q-curve available for the items to be adjusted.

- \* For details on each adjustment item, refer to the owner's manual supplied with the DPH910.
4. Turn the Rotary knob [14] clockwise or counter-clockwise to make the adjustment.
  5. Repeat steps 3 to 4 to complete the adjustment and press ADJ button [2].
  6. Press and hold one of Direct buttons [8] for 2 seconds or longer to store the edited contents.
    - \* You can give a title to the user memory. For the inputting method of titles, refer to the subsection "Entering titles" in section "Operations common to each mode".

**Note:** Be sure to read this chapter referring to the front diagrams of chapter "3.CONTROLS" on page 5 (unfold).

 
## Digital Radio / DAB Operations

### DAB control function

When a CeNET cable is used to connect a DAB (sold separately), all functions can be operated.

### Listening to the DAB station

1. Press FNC button [3] to select DAB mode.
2. When the unit receives a DAB station, the display changes in the following order:  
Frequency channel → service label



### Switching displays

Press the DISP button [10] for 1 second during the Main (service label) display to select Main (service label) or Sub (PTY).


#### Note:

- The display shown in the normal reception mode and the preset reception mode is the same when a DAB station is received.
3. When the unit does not receive a DAB station, the display changes in the following order:

#### –Normal reception mode–



#### –Preset reception mode–

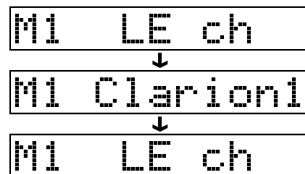

#### Notes:

- The number of programmes and broadcasting times depend on the DAB stations.
- When the strength of DAB signals is weak, audio output is muted.

### Seek tuning

1. Press FNC button [3] to select DAB mode.
2. Press and hold right or left for 1 second or longer using SEARCH button [15].



\* "SEEK" appears in the display.

3. "DAB" lights up in the display when the main unit receives a DAB station.

\* The main unit stops the seek tuning when it cannot find a DAB station. The display returns to the previous mode.

### Manual tuning

1. Press FNC button [3] to select DAB mode.
2. Press and hold BND button [11] for 1 second or longer. "MANU" lights up in the display.
3. Press the right or left SEARCH button [15] to select a station.

\* If no operation is performed for more than 7 seconds, manual tuning is cancelled and the display returns to the previous mode.

### Switching programmes

1. Press FNC button [3] to receive a DAB station.
2. Press the right or left SEARCH button [15] to switch programmes in the DAB station.

**Note:**

• The programme name may be the same depending on DAB programmes.

### Programme scan

This function scans through each receivable programme in a DAB station being received for 10 seconds sequentially. This is useful when you want to search for a desired programme.

1. Press FNC button [3] to receive a DAB station.
2. Perform the following operation depending on the connected model.

Press SCN button [4]. "SCAN" lights up and the unit starts scanning each programme for 10 seconds sequentially. Each time the main unit scans, the programme name is shown in the display.

3. To stop programme scan when a desired programme is tuned in.

Press SCN button [4].

### Manual memory

The main unit has a manual memory function for DAB programmes. Up to 18 programmes (6 programmes each) can be preset in the preset buttons.

[M1], [M2] and [M3]

1. Press FNC button [3] to select DAB mode.
2. Press BND button [11] to select any one shown above.
3. Press the right or left SEARCH button [15] to select a desired programme.
4. Press and hold one of Preset buttons (1 to 6) [8] for 2 seconds or longer to store the programme.

**Note:**

• The interrupt programme (PTY or INFO) cannot be written into a manual memory.

### Recalling a preset programme

1. Press FNC button [3] to select DAB mode.
2. Press BND button [11]. Each time you press BND button [11], the display changes in the following order:

[M1] → [M2] → [M3] → [M1]...

3. Press one of Preset buttons [8] to recall a preset programme.

**Note:**

• Press and hold Preset button [8] for 2 seconds or longer to store the programme currently being received. (Manual memory)

### AF function

The AF function switches to a different frequency on the same network in order to maintain optimum reception.

\* The factory default setting is "ON"

\* If the reception of the current broadcast station deteriorates, "SEARCHING FOR SAME STATION" or "SEARCH" appears in the display and the radio searches for the same programme on another frequency.

● **Switching OFF the AF function**

● **Switching ON the AF function**

● **AF function between RDS and DAB**

When the same programme is broadcast by both RDS and DAB, and this function is ON, the main unit switches to receiving the broadcast with the better reception automatically.

## INFO (Announcement)

In INFO standby mode, when the selected announcement programme starts, the main unit switches to the selected announcement programme automatically.

M1 EVENTS

### ● Setting INFO standby mode

If you press and hold ISR button [9] for 1 second or longer, "INFO" lights in the display and the main unit is set into INFO standby mode until the selected announcement is broadcast. When the selected announcement broadcast starts, the announcement item appears in the display. If you press and hold ISR button [9] for 1 second or longer while the selected announcement broadcast is being received, the selected announcement broadcast reception is cancelled and the main unit goes into INFO standby mode.

### ● Cancelling INFO standby mode

To cancel INFO standby mode, press and hold ISR button [9] for 1 second or longer.

### ● Information select

This is a function for selecting INFORMATION ON or OFF in Information interrupt mode.

You can set ON up to 6 information items.

You can select any of the 6 items below:

INFORMATION item	
ENGLISH	Contents
TRAVEL	TRANSPORT FLASH
WARNING	WARNING / SERVICE
NEWS	NEWS FLASH
WEATHER	AREA WEATHER FLASH
EVENT	EVENT ANNOUNCEMENT
SPECIAL	SPECIAL EVENT

1. Perform the following operation depending on the connected model.  
Press and hold ADJ button [2] for 1 second or longer.
2. Press the right or left SEARCH button [15] to select "INFO SEL", then push ENT button [13] to enter "INFO SEL" mode.
3. Press the right or left SEARCH button [15] to select an information item. You can select any of 6 items:

4. Perform the following operation depending on the connected model.

Turn the Rotary knob [14] clockwise or counterclock wise to set the information item for ON or OFF.

5. Press ADJ button [2] to return to the previous display.

## Switching the PTY and INFO display language

You can select one of 2 languages (English or French) for the PTY and INFO shown in the display.

\* The factory default setting is "English".

## TA (Traffic Announcement)

In TA standby mode, when a traffic announcement broadcast starts, the traffic announcement broadcast is received as top priority regardless of the function mode so you can listen to it. Traffic programme (TP) automatic tuning is also possible.

\* This function can only be used when "TP" is lit in the display. When "TP" is lit, this means that the RDS broadcast station being received has traffic announcement programmes.

### ● Setting TA standby mode

If you press ISR button [9] when only "TP" is lit in the display, "TP" and "TA" light in the display and the unit is set into TA standby mode until a traffic announcement is broadcast. When a traffic announcement broadcast starts, "TRA INFO" appears in the display. If you press ISR button [9] while a traffic announcement broadcast is being received, the traffic announcement broadcast reception is cancelled and the unit goes into TA standby mode.

### ● Cancelling TA standby mode

With "TP" and "TA" lit in the display, press ISR button [9]. The "TA" in the display goes off and TA standby mode is cancelled.

\* If "TP" is not lit, pressing ISR button [9] searches for a TP station.

### ● Searching for a TP station

When "TP" is not lit, if you press ISR button [9], "TA" in the display lights and the unit automatically receives a TP station.

#### Note:

• If a TP station is not received, the unit continues the search operation. Pressing ISR button [9] again goes off "TA" in the display and stops TP station searching.

### Auto store function for TP stations

You can automatically store up to 6 TP stations into preset memory. If the number of TP that can be received is less than 6, broadcast stations already stored in memory are left without being overwritten. With "TA" lit in the display, press and hold AS button [4] for 2 seconds or longer. The TP stations with the good reception sensitivity are stored into preset memory.  
 \* Even if you select FM1 or FM2, a TP station is stored into memory for FM3.

### PTY

This function enables you to listen to a broadcast of the selected programme type when it starts even if the unit is on a function mode other than radio.

- \* Some countries do not yet have PTY broadcast.
- \* In TA standby mode, a TP station has priority over a PTY broadcast station.

#### ● Setting PTY standby mode

When you press RDM button [6], "PTY" lights in the display and the PTY standby mode is turned on. When the selected PTY broadcast starts, the PTY item name appears in the display.

#### ● Cancelling PTY standby mode

When you press and hold RDM button [6] for 1 second or longer, "PTY" goes off in the display and PTY standby mode is cancelled.

#### ● Cancelling a PTY interrupt broadcast

Press RDM button [6] during the PTY interrupt broadcast, the PTY interrupt is cancelled and the unit returns to PTY standby mode.

### Selecting PTY

1. When you press RDM button [6], the unit goes into PTY select mode.
2. Press any one of Preset buttons [8]. Alternatively, turn the Rotary knob [14] clockwise or counterclockwise to select the desired PTY.  
 \* Below are the factory default settings stored for Preset buttons [8].

Preset number	PTY item	
	ENGLISH	Contents
1	NEWS	News
2	TOP 40	Top 40
3	COUNTRY	Country music
4	SOFT	Soft music
5	CLASSICL	Classical
6	R & B	Rhythm and Blues

3. The PTY select mode is cancelled automatically 7 seconds after a PTY is selected.

### PTY seek

1. When you press RDM button [6], the PTY select mode is turned on.
2. Select PTY.
3. Press the right or left side of SEARCH button [15]. If you press the right side, the unit seeks a PTY broadcast moving up the frequencies; if you press the left side, it seeks moving down the frequencies.  
 \* If no station with the selected PTY broadcast can be received, the unit returns to PTY select mode.

### PTY preset memory

1. When you press RDM button [6], the PTY select mode is turned on.
2. Turn the Rotary knob [14] clockwise or counterclockwise to select the desired PTY.

The 23 types of PTY below can be selected.

PTY item	
ENGLISH	Contents
NEWS	News
INFORM	Information
SPORTS	Sports
TALK	Talk
ROCK	Rock
CLS ROCK	Classic Rock
ADLT HIT	Adult Hits
SOFT RCK	Soft Rock
TOP 40	Top 40
COUNTRY	Country music
OLDIES	Oldies
SOFT	Soft music
NOSTALGA	Nostalgia
JAZZ	Jazz
CLASSICL	Classical
R & B	Rhythm and Blues
SOFT R&B	Soft Rhythm and Blues
LANGUAGE	Language
REL MUSC	Religious music
REL TALK	Religious talk
PERSNLTY	Personality
PUBLIC	Public
WEATHER	Weather

- If you press and hold any one of Preset buttons **[8]** for 2 seconds or longer, the selected PTY is stored into that preset channel memory.

### Emergency broadcast

If an emergency broadcast is received, all the function mode operations are stopped. "ALARM" appears in the display and the emergency broadcast can be heard.

#### ● Cancelling an emergency broadcast

If you press RPT button **[5]**, emergency broadcast reception is cancelled.

### Volume setting of TA, emergency broadcast (ALARM) and PTY

The volume for TA, ALARM and PTY interrupts can be set during TA, ALARM or PTY interrupt.

\* The factory default setting is "15".

During a TA, ALARM or PTY interrupt, turn the Rotary knob **[14]** clockwise or counterclockwise to set the volume to the desired level (0 to 33).

\* When the TA, ALARM or PTY interrupt ends, the volume returns to the level it had before the interrupt.

### DVD deck control

When an optional DVD deck (sold separately) is connected through the CeNET cable, this unit controls some DVD deck functions.

#### Listening to DVD

Press FNC button **[3]** and select the DVD mode.


#### Adjust the volume

Turning the Rotary Knob **[14]** clockwise increases the volume; turning it counterclockwise decreases the volume.

Other operations refer to DVD deck's owner's manual.



# 9. TROUBLESHOOTING

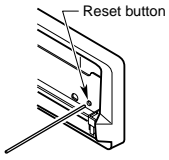	Problem	Cause	Measure
General	Power does not turn on. (No sound is produced.)	Fuse is blown.	Replace with a fuse of the same amperage. If the fuse blows again, consult your store of purchase.
		Incorrect wiring.	Consult your store of purchase.
	No sound output when operating the unit with amplifiers or power antenna attached.	Power antenna lead is shorted to ground or excessive current is required for remote-on the amplifiers or power antenna.	<ol style="list-style-type: none"> <li>1. Turn the unit off.</li> <li>2. Remove all wires attached to the power antenna lead. Check each wire for a possible short to ground using an ohm meter.</li> <li>3. Turn the unit back on.</li> <li>4. Reconnect each amplifier remote wire to the power antenna lead one by one. If the amplifiers turn off before all wires are attached, use an external relay to provide remote-on voltage (excessive current required).</li> </ol>
	Nothing happens when buttons are pressed.  Display is not accurate.	The microprocessor has malfunctioned due to noise, etc.	Turn off the power, then press OPEN button <b>[1]</b> and remove the DCP. Press the reset button for about 2 seconds with a thin rod. <div style="text-align: center;">  <p>Reset button</p> </div>
Tape	Sound quality is poor.	DCP or source unit connectors are dirty.	Wipe the dirt off with a soft cloth moistened with cleaning alcohol.
		Playback head is dirty.	Use a cleaning tape, etc., to clean the head.
	DOLBY NR button <b>[6]</b> is not pressed.	When listening to a tape recorded with Dolby NR, press DOLBY NR button <b>[6]</b> .	

# 10. ERROR DISPLAYS

If an error occurs, one of the following displays is displayed.  
Take the measures described below to eliminate the problem.

	Error Display	Cause	Measure
Tape	ERROR 1	Tape cannot be played due to defective tape such as cut tape.	Eject the tape then replace it with a new one.
	ERROR 2	Tape is caught and cannot be played.	Remove the caught or wound tape.
	ERROR 4	Tape mode cannot be detected.	This is a failure of tape mechanism and consult your store of purchase.
	ERROR 8	Tape is caught and cannot be ejected.	Eliminate the reason for which the tape is caught.
CD changer	ERROR 2	A CD inside the CD changer is not loaded.	This is a failure of CD changer's mechanism and consult your store of purchase.
	ERROR 3	A CD inside the CD changer cannot be played due to scratches, etc.	Replace with a non-scratched, non-warped disc.
	ERROR 6	A CD inside the CD changer cannot be played because it is loaded upside-down.	Eject the disc then reload it properly.
MD changer	ERROR H	Displayed when the temperature in the MD changer is too high and playback has been stopped automatically.	Lower the surrounding temperature and wait for a while to cool off MD changer.
	ERROR 2	An MD inside the MD changer is not loaded.	This is a failure of MD changer's mechanism and consult your store of purchase.
	ERROR 3	An MD inside the MD changer cannot be played due to scratches, etc.	Replace with a non-scratched, non-warped disc.
	ERROR 6	An MD inside the MD changer cannot be played because it is loaded upside-down.	Eject the disc then reload it properly.
		Displayed when a non-recorded MD is loaded in the MD changer.	Load a pre-recorded MD in the MD changer.

If an error display other than the ones described above appears, press the reset button. If the problem persists, turn off the power and consult your store of purchase.

# 11. SPECIFICATIONS

## **FM Tuner**

Frequency Range:  
87.9 MHz to 107.9 MHz

Usable Sensitivity:  
9 dBf

50dB Quieting Sensitivity:  
15 dBf

Alternate Channel Selectivity:  
70 dB

Stereo Separation (1 kHz):  
35 dB

Frequency Response ( $\pm 3$  dB):  
30 Hz to 15 kHz

## **AM Tuner**

Frequency Range:  
530 kHz to 1710 kHz

Usable Sensitivity:  
25  $\mu$ V

## **Tape Deck**

Wow & Flutter (WRMS):  
0.06%

Channel Separation (1 kHz):  
45 dB

Frequency Response ( $\pm 3$  dB):  
120  $\mu$ s (normal):  
30 Hz to 18 kHz

70  $\mu$ s (CrO<sub>2</sub>, FeCr, Metal):  
30 Hz to 20 kHz

Signal to Noise Ratio, 70  $\mu$ s (CrO<sub>2</sub>, FeCr, Metal)

Dolby NR OFF:  
58 dB

Dolby B NR:  
67 dB

## **Notes:**

- Specifications comply with JEITA Standards.
- Specifications and design are subject to change without notice for further improvement.

## **Audio**

Maximum Power Output:  
180 W (45 W X 4 ch) (JEITA)

Continuous Average Power Output:  
17 W X 4, into 4  $\Omega$ , 20 Hz to 20 kHz,  
1%THD

Bass Control Action (30 Hz):  
+15 dB/-12dB

MID Control Action (1kHz):  
 $\pm 12$ dB

Treble Control Action (10 kHz):  
 $\pm 12$  dB

Line Output Level (0VU A/C):  
1.8 V

## **General**

Power Supply Voltage:  
14.4 V DC (10.8 to 15.6 V allowable),  
negative ground

Current Consumption:  
Less than 15 A

Speaker Impedance:  
4  $\Omega$  (4  $\Omega$  to 8  $\Omega$  allowable)

Weight / Source unit:  
3.52 lb. (1.6 kg)

Weight / Remote control unit:  
1 oz. (30 g) (including battery)

Dimensions / Source unit:  
7" (Width) X 2" (Height) X 6-1/8" (Depth)  
[178 (W) X 50 (H) X 155 (D) mm]

Dimensions / Remote control unit:  
1-3/4" (Width) X 4-5/16" (Height) X 1-1/8" (Depth)  
[44 (W) X 110 (H) X 27 (D) mm]

