 
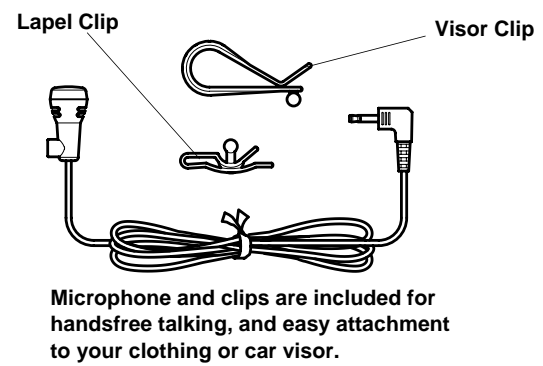 


Thank you for purchasing the RadioShack Handsfree Speaker/Charger with Microphone and Clips. It turns your wireless phone into a mobile speakerphone and charger, allowing safe, handsfree talking, and it charges your phone while in use. Just insert and attach a connector module (specific to your phone make and model), plug the speakerphone into any standard 12-volt power source, connect it to your phone, and plug in the microphone.

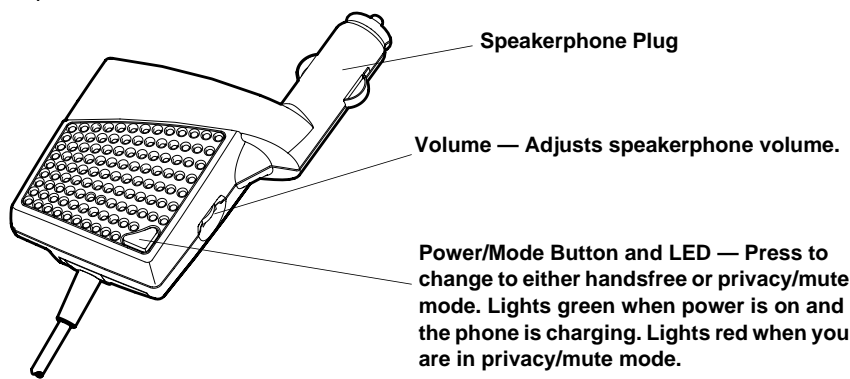

SAFECHAT™

⚠ WARNING ⚠
Never place a phone where it could damage or interfere with the operation of any passive safety device (airbags or seat belts).

 
📌 NOTE 📌

- If your cigarette-lighter socket or power outlet remains on when the vehicle is turned off, and you plan to leave your vehicle for more than a week, unplug the speakerphone. This prevents excessive battery discharge and possible difficulty in starting your vehicle.
- If your vehicle's cigarette-lighter is difficult to reach, outlet adapters are available at your local RadioShack store or online at www.RadioShack.com.
- You may need to turn the ignition to Accessory or ON to power the cigarette-lighter socket.
- Replacement microphones are also available at your local RadioShack store or online at www.RadioShack.com.
- To avoid feedback, position the microphone so it is not directly in line with the speaker.

PREPARATION


You can use a RadioShack phone holder, available at your local RadioShack store or online at RadioShack.com, to hold the phone upright. ⚠

1. Insert a connector module into the back of the speakerphone.

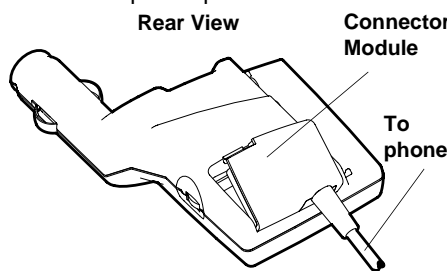


2. Tilt the connector module upright, insert the hook into the mating slot, then press down to secure it in place.

 To remove or change modules, insert a flat head screwdriver into the slot to release the latch. Lift the connector to remove it.

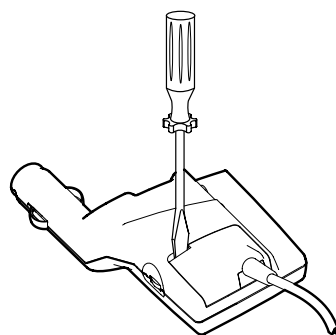


3. Insert the speakerphone's plug into your vehicle's cigarette-lighter socket or 12-volt power source. POWER lights. 📌

 4. Plug a phone connector into the slot on the base of the phone. The connector only fits one way; do not force it.

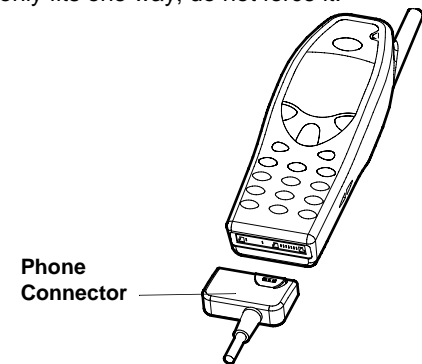

 5. Plug the microphone into the charger's HEADSET/MIC jack.

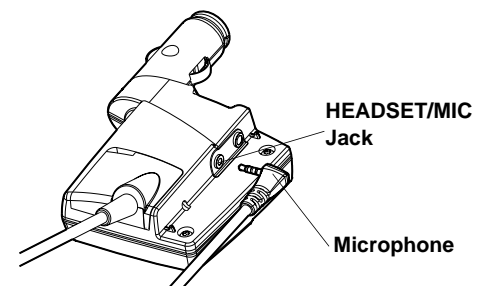

6. Attach the microphone to your car's visor using the visor clip, or to your clothing or seatbelt using the lapel clip. 📌

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

⚠ — Warning ! — Important 📌 — Note ⚡ — Caution 💡 — Hint

NOTE

Preparation

- Be sure to remove the lapel clip from your clothing before you leave or move about the vehicle.
- To prevent audio distortion, do not allow the microphone cord to touch the phone.

Changing Modes

- The phone and speakerphone may lose mode synchronization if the power is turned off or the phone is disconnected from handsfree mode. If this happens, press the Power/Mode button to select the desired mode.
- If you are unable to make a call in handsfree mode, contact your phone store to update the phone's software.
- When placing a call, you will not always hear the touch-tones through the speakerphone. This is normal.
- Many phones work in half duplex mode, meaning only one person can talk at a time. It may take a moment for the speakerphone to switch between you and the person you are talking to. You may need to pause for a moment before you hear the other person talk.

To attach the microphone to the visor, slide the visor clip onto the visor and tuck the wire into the space between the windshield glass and trim, or under the trim. Run the wire down to the dash edge, being careful not to put the wire where it can be pinched by the door.

To attach the microphone to your lapel, attach the lapel clip about six inches below your chin. Leave a comfortable length of cord between the microphone and the speaker. Wrap up the excess cord so it does not interfere with vehicle operation.

7. Turn the phone on if it has not turned on automatically. Refer to your phone's manual for phone operation instructions.

CHANGING MODES

Press the Power/Mode button to select handsfree or privacy/mute mode. When pressed, it changes color and function. It lights green for handsfree mode, and lights red for privacy and mute modes.

In handsfree mode, the phone's internal microphone and speaker are disabled and the phone operates as a speakerphone. You may talk and listen without holding the phone.

In privacy mode, the phone operates normally. Your phone's software determines whether the phone operates in privacy or mute.

In mute mode, the microphone is muted so the person on the other end of the line cannot hear you.

SPEAKERPHONE OPERATION

Your speakerphone makes and receives calls the same way whether in handsfree or privacy mode. Refer to your phone's manual for information on additional phone features.

ADJUSTING THE VOLUME

You can control the speakerphone's volume from your wireless phone or using the speakerphone's volume control. Reduce the volume to a comfortable level to minimize any echo.

To increase the speakerphone's volume, move volume towards the speakerphone's plug. To decrease the speakerphone's volume, move volume away from the plug.

On some phone models, the volume of the tones generated when pressing the buttons on the keypad cannot be controlled by the phone. If the tones are too loud, reduce the speakerphone's volume. When you are finished dialing, you may have to re-adjust the volume to a comfortable listening level.

A NOTE ABOUT QUALITY

Wireless phones use radio waves to accommodate many users on a radio network. Radio communications do not always provide the same voice quality and reliability as your landline phone. Your speakerphone/charger cannot improve the phone's performance. Variations in voice quality will be heard with the speaker and may be louder because they are amplified. If you are experiencing a badly distorted call, check to see if the phone has a good signal level. Low signal levels are typically associated with poor voice quality. If your signal level is good and you are still experiencing poor voice quality, hang up and redial the number to get a different channel.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99