



WIRELESS OFFICE DESKTOP SL DESIGN
INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG

 
Article number: 40700

Version: 1.00



<http://www.typhoon.de>

Connection Diagram

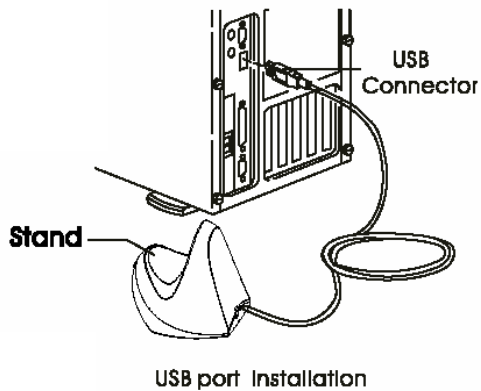

CE

Declaration of Conformity

We, the manufacturer/ importer
ANUBIS Electronic GmbH
Am Langfeld 38
66130 Saarbrücken
Germany

Declare that the product
Brand: TYPHOON
Model No: 40700
Model: WIRELESS OFFICE DESKTOP SL DESIGN

Herewith confirmed to comply with the requirements set out in the European Council Directive is fully in conformity to CE Mark Directive (93/68/ECC) and Electromagnetic Compatibility Directives (89/336/EEC, 92/31/ECC) and Low Voltage Directive (73/23/ECC), R&TTE directive 1999/5/EC. This declaration is based on the full compliance of the product with the guideline set down by the member states of the ECC Commission.

The Equipment was passed and the test performed according to :

EN 300 220-1 V1.3.1 (2000-09), EN 300 220-3 V1.1.1 (2000-09)
EN 301 489-1 V1.4.1 (2002-08), EN 301 489-3 V1.4.1 (2002-08)
EN 60950-1 : 2001

Saarbrücken, 07.11.05



ANUBIS Electronic GmbH. Am Langfeld 38.66130 Saarbrücken. Germany

Contents

INSTRUCTION MANUAL	1
Connection Diagram	2
CE	3
Declaration of Conformity	3
Contents.....	4
Safety.....	5
Introduction	6
Features.....	6
Installing the batteries.....	7
Installation of the mouse batteries.....	7
Installation of the keyboard batteries.....	7
USB connections	8
Scroll, Caps, Num locks status	11
Functions	12
Troubleshooting	13
Technical Specifications.....	14

Safety

A. Safety

- Always turn off the computer first before inserting the PS/2 connectors. For USB version, it is not necessarily since it is Plug-n-Play.
- When charging the wireless mouse, ensure the batteries are seated firmly in the compartment first.

B. Installation Guidelines

- Avoid exposing the Wireless Keyboard and Mouse set to environments that are excessively warm and humid (particularly in unventilated spaces or nearby heaters) or dusty.
- Do not place the Wireless Keyboard and Mouse set near windows under direct exposure to sunlight or in areas prone to water seepage.
- Do not place heavy objects on the Keyboard.
- Avoid excessive shock or vibration on the Wireless Keyboard and Mouse set.
- Clean the Wireless Keyboard and Mouse set exterior by wiping with mild cleaning solution. Do not use solvents!

C. Notes

- All other brand and product names are trademarks or registered trademarks of their respective holders.
- All specifications are subject to changes without prior notice.

Introduction

Sleek and beautifully designed wireless Mouse and Keyboard set, the Typhoon Wireless Office Desktop SL Design is full of functions and enhance your editing works. Works on 27MHz radio frequency technology, work without cables on your desk and enjoy full productivity with many useful Hotkeys for Office, Internet, Multimedia and PC tasks.

Slim and elegant, the Typhoon Wireless Office Desktop SL Design consist of a Wireless slim Keyboard with 104 standard keys plus 33 enhanced Hotkeys, Wireless Optical Mouse with 10 Hotkeys plus Scroll wheel, and receiver cum charger. The Wireless Optical Mouse is also rechargeable and ergonomically designed for comfort during constant use.

Features

 
- Wireless Office Keyboard set using radio frequency technology with 256 IDs per channel
- Slim designed with 33 enhanced keyboard hotkeys
- Extra Scroll wheel and volume knob designed into the Keyboard layout
- 10 button wireless optical mouse with receiver cum charging cradle
- Direct Euro sign access key and directional arrow keys
- Rechargeable mouse
- Wireless Receiver functions additionally as battery charger
- Reliable digital radio technology
- Operational range 1.5 meters
- Battery saving mode for longer battery life

Installing the batteries

The wireless keyboard uses two AA Alkaline batteries; the wireless mouse uses two AAA Ni-MH rechargeable batteries.


Installation of the mouse batteries

1. Open the battery compartment
2. Insert the batteries as shown on the picture inside the battery compartment.
3. Close the cover.

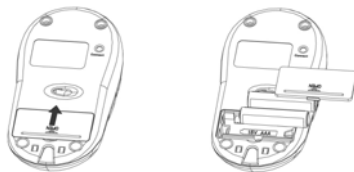

Installation of the keyboard batteries

 
1. Open the battery compartment at the bottom of the keyboard by pushing the cover to release the latch.
2. Insert the batteries as shown on the picture inside the battery compartment.
3. Close the cover.

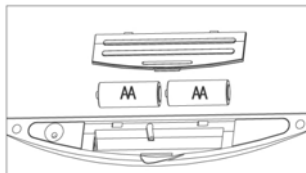

Receiver installation

USB connections

 The Receiver can be connected to the computer via the 1.5 meter USB cable into the USB port.

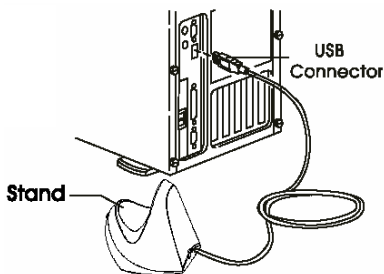

CAUTION:

 
Windows® 98 or higher are required for the USB installation.

For Windows, you might be prompted to insert the Windows software CD. Insert the software CD into the computer's CD-ROM drive if and when you are asked to do so. Then follow the instructions on the screen.

Receiver indicators

There are two indicators on the receiver (see the picture).


1. **Connect LED:** this indicator will flash when you press the Connect button (see the next chapter below for more details). When the receiver changes the ID successfully, the indicator will flash fast several times.
2. **Charge LED:** this indicator lights up whenever the mouse battery is charged, it will be turned off when the battery is full.

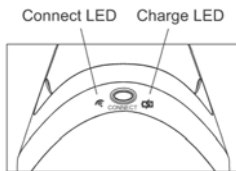

Changing the channel and security ID

The mouse and keyboard can be setup to work with 2 different Radio frequency channels (optional) and multiple security IDs. In this way you can have several wireless desktops installed in the same room without interference to each other. To change the channel and/or security ID follow the steps below:

 1. Press the Connect button at the bottom of the keyboard.
2. Press the Connect button on the receiver.
3. Press the Connect button at the bottom of the mouse.

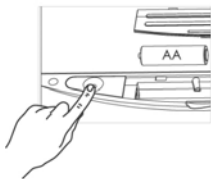

Note:

1. The Connect LED will be lighted up when the connection is established.
2. You will have to follow the same connection procedure whenever you replace the batteries.

Mouse battery recharging

The mouse uses two AAA size Ni-MH rechargeable batteries. After installation of the fresh batteries, it is recommended to charge them (place the mouse on the charging stand) for 15 hours to prolong their life. Please, make sure the Charge indicator is ON when you charge the mouse.

If you feel the wireless mouse does not work smoothly, then the most probable reason is that the batteries should be recharged. Please, put the mouse on the stand to charge them. Normally it takes 12 hours to get the batteries fully charged.

NOTE: Some computers turn the power of the USB port off in the sleep mode. In this case the battery won't be charged. Therefore you would have to keep your computer always ON to charge the mouse or disable the power management.

Software Installation

The supplied driver supports Windows® 98 SE, 2000 and XP.

The driver will be installed automatically if the auto-run is enabled in your computer, otherwise you can manually launch the installation by double clicking the file; setup.exe on the CD.

After successful software installation the icons of the keyboard and the mouse will appear in the Windows' Notification

area:



 
Mouse setup applet

Keyboard setup applet

You can double click (or use a right mouse button to view the popup menu) the icons to setup both keyboard and mouse.

Scroll, Caps, Num locks status

The status of the Scroll, Caps, Num locks will be seen in the Notification area too (under Windows® 2000 or XP) or will be shown just above the taskbar (under Windows® 98/ME).

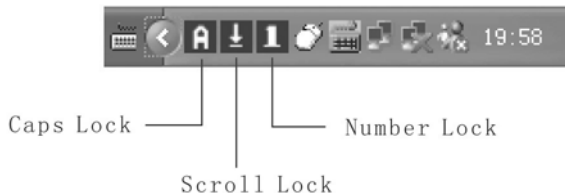


Functions

Keyboard hotkeys


The Multimedia keyboard has 33 hotkeys and one scrolling wheel.

 Internet Hotkeys:

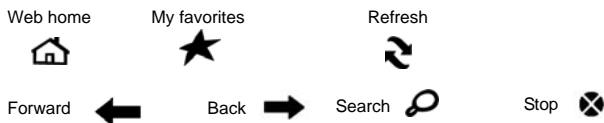

Internet Hotkeys are programmable:

 PC hotkeys:

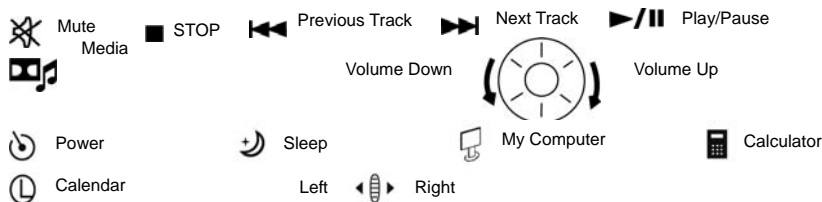

Office Hotkeys:



Troubleshooting

The “Office” Hot Keys are not working

The function keys F1 – F12 receive the extended “Office” Hot Key functions only if the “Office Lock” Key is also activated (F key on the right of the top row). These keys are assigned in line with the stipulations of Microsoft® and do not require any driver installation. If another application software is used then it may happen that the Hot Keys do not function or function differently. In the meantime Microsoft® recommends other manufacturers to support this functionality therefore many applications will correctly execute these functions. We recommend the use of Microsoft® Office 2000 or XP and the Internet Explorer Version 5 or higher.

The “€” key does not function

Please ensure that both the “Office Lock” – “F” as well as the “Num Lock” function is activated. If both LEDs are lit up, press the “€” key again and wait for a few seconds. Actual Windows® versions (98/2000/ME/XP) have the “€”-Symbol in the font selection and the currency settings. Earlier Windows® versions (3.x/95/NT) cannot show the “€”-Symbol. You should update these versions with the assistance of an upgrade. At the time of going to press these were available on the Microsoft® website (<http://www.microsoft.com/windows/euro.asp>).

USB 2.0 devices are not functioning correctly

Ensure that the connection to the computer is correctly setup. Please check with USB 2.0 devices whether your computer or the USB plug-in card supports USB 2.0. Should your USB 2.0 device still not function correctly update your operating system or replace the USB plug-in card in your computer.

The Keyboard is not working properly

Switch off your computer and pull out the PS/2 plug of the keyboard. Check the plug for bent or broken pins. If the plug looks normal then you plug it back into the corresponding PS/2 socket of the computer and check the correct position in the socket.

Technical Specifications

Wireless 27MHz radio frequency using single channel 256IDs to prevent interferences

Standard 104 keys Keyboard with 33 enhanced hotkeys:

- Office (13 hotkeys), Multimedia (8 hotkeys), PC functions (5 hotkeys) and Internet (7 hotkeys)
- Built-in 3D Scroll wheel and Volume knob
- 1 connect button
- 2 x AA alkaline batteries
- Large palm area
- Dimension: 485 x 203 x 22mm
- Weight: 1050g

Mouse with 5 hotkeys

- Scroll repeat up & down, Application switch, My computer, and Close
- 3 standard programmable keys
- 800dpi high resolution and rechargeable
- Red Optical sensor tracking speed: 16"/sec
- Scroll wheel
- 256IDs per channel
- Convenient Internet navigation and Office functions
- 3 levels of power saving with low battery indicator
- 2 x AAA 600mAh Ni-MH rechargeable batteries
- 1 connect button
- Dimension: 132 x 68 x 38mm
- Weight: 110g

Receiver and Charger

- Function as Keyboard and Mouse receiver and Mouse charger
- 1 connect button
- 360° operating angles
- Operating distance: Mouse with 1.2 meter and Keyboard with 1.8 meter
- Input: 5VDC from USB port
- Weight: 150g

Operating temperature: -5° - 40°C

Operating humidity: 20% - 90%

Package contents:

Typhoon Wireless Office Desktop SL Keyboard
Wireless Office Desktop SL Mouse
Receiver cum Charger
Driver and application CD-ROM Disc
Instruction manual

System requirements:

Intel® Pentium® III or later
128MB of system RAM or more
One available USB port
Windows® 98SE / ME / 2000 / XP
CD-ROM drive for driver and application installation

- end -