

SHARP®

MODEL
LC-32AX5X

LCD COLOUR TELEVISION

OPERATION MANUAL

AQUOS



HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

LC-32AX5X

LCD COLOUR TELEVISION ENGLISH

OPERATION MANUAL

Dear SHARP customer

Thank you for your purchase of the SHARP LCD colour TV product. To ensure safety and many years of trouble-free operation of your product, please read the Important Safety Precautions carefully before using this product.

Contents

Dear SHARP customer	1	Basic adjustment settings	16
Contents	1	Menu operation buttons	16
Trademarks	2	On-Screen Display	16
Important Safety Precautions	3	Menu items	17
Supplied accessories	4	Auto installation	18
Preparation	5	Programme setup	18
Inserting the batteries	5	Auto search	18
Using the remote control unit	5	Manual setting for each channel	19
Cautions regarding remote control unit	5	Search tuning	19
Setting the TV	6	Fine tuning	19
Protection against overturning	7	Colour system	19
Basic connection	8	Sound system (Broadcasting system)	20
Connecting to an antenna	8	Skipping channels	20
Connecting to the AC outlet	8	Sort	20
Setting the TV on the wall	9	Label	21
Removing the stand	9	Erase Programme	21
Part names	10	AV mode selection	22
TV (Front)	10	OPC (Optical Picture Control) setting	22
TV (Rear)	11	Picture adjustments	23
Remote control unit	12	Advanced	24
Watching TV	13	C.M.S. (Colour Management System)	24
Turning on the power	13	Colour temperature	24
Turning off the power	13	3D-Y/C	24
Simple button operations for changing channels	13	Film mode	25
Using Flashback (\$) on the remote control unit	14	I/P setting	25
Using MPX on the remote control unit	14	AV mode selection	26
Simple button operation for changing		Audio adjustment	26
volume/sound	15		
Sleep timer	15		
Still image	15		

Contents

Useful adjustment settings	27
Password setting for child lock (for TV input mode)	27
Input Label	28
Image position	28
Wide Screen Signalling (WSS)	29
Picture aspect ratio	29
WIDE mode (for TV/AV input mode)	30
Language setting for on-screen display	31
Audio Only	31
DNR (Digital Noise Reduction)	31
Input Select	32
Blue Screen	33
Colour system setting	33
Power Control	33
HDMI Setup	34
Useful features	35
Teletext function	35
Teletext language setting	36
Using external equipment	37
Displaying an external equipment image	37
Displaying a DVD image (Example)	37
Connecting a VCR	37
Connecting a DVD player	38
Connecting a game console or camcorder	38
Connecting an HDTV tuner	39
Appendix	40
Troubleshooting	40
RS-232C port specifications	41
Specifications	43
Optional accessory	43
Dimensional drawings	44

Trademarks

- “HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.”

Important Safety Precautions

 
- **Cleaning**—Unplug the AC cord from the AC outlet before cleaning the product. Use a damp cloth to clean the product. Do not use liquid cleaners or aerosol cleaners.



- **Water and moisture**—Do not use the product near water, such as bathtub, washbasin, kitchen sink, laundry tub, swimming pool and in a wet basement.



- **Do not place vases or any other water-filled containers on this product.** The water may spill onto the product causing fire or electric shock.




- **Stand**—Do not place the product on an unstable cart, stand, tripod or table. Doing so can cause the product to fall, resulting in serious personal injuries as well as damage to the product. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer.



- **When relocating the product** placed on a cart, it must be moved with utmost care. Sudden stops, excessive force and uneven floor surface can cause the product to fall from the cart.



 
- **Ventilation**—The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for built-in installation; do not place the product in an enclosed place such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.




- The LCD panel used in this product is made of glass. Therefore, it can break when the product is struck forcefully or with a sharp object. If the LCD panel is broken, be careful not to be injured by broken glass.



 - **Heat sources**—Keep the product away from heat sources such as radiators, heaters, stoves and other heat-generating products (including amplifiers).



 
- **To prevent fire, never place any type of candle or naked flames on the top or near the TV set.**



- **To prevent fire or shock hazard, do not place the AC power cord under the TV set or other heavy items.**




- **Do not place heavy objects on this product or stand on it.** Doing so could cause injury if the product overturns. Take special care near children and pets.

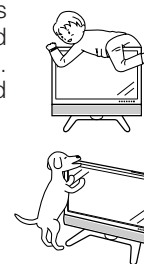

The LCD panel is a very high technology product with 3,147,264 thin film transistors, giving you fine picture details. Due to the very large number of pixels, occasionally a few non-active pixels may appear on the screen as a fixed point of blue, green or red. This is within product specifications and does not constitute a fault.

Precautions when transporting the TV

When transporting the TV, never carry it by holding onto the speakers. Be sure to always carry the TV by two people holding it with two hands—one hand on each side of the TV.





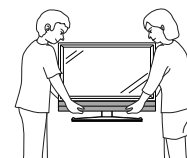


- **Do not display a still picture for a long time, as this could cause an afterimage to remain.**

- **Install the product in a place where the AC cord can be easily unplugged from an AC outlet and the AC INPUT terminal on the rear of the product.**

Supplied accessories

 Make sure the following accessories are provided with the product.

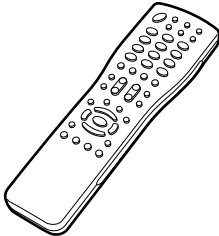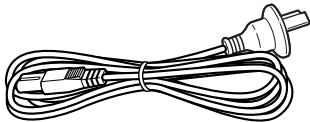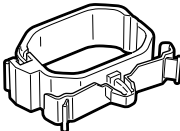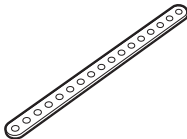Remote control unit	"AAA" size battery (× 2)	AC cord
		
Page 12	Page 5	Page 6
Cable clamp	Cable clamp	Operation manual
		
Page 6	Page 6	
Safety restraints		
		
Restraining band	Screw for band	Screws for clamps
		
Page 7		

NOTE


- Always use the AC cord supplied with the TV.
- The illustrations and on-screen displays in this operation manual are for explanation purposes and may vary slightly from the actual operations.

Preparation


Inserting the batteries

Before using the TV for the first time, insert two “AAA” size batteries (supplied). When the batteries become depleted and the remote control fails to operate, replace the batteries with new “AAA” size batteries.


1 Open the battery cover.

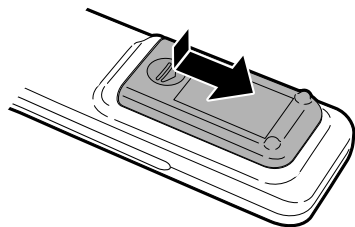

2 Insert two supplied “AAA” size batteries.

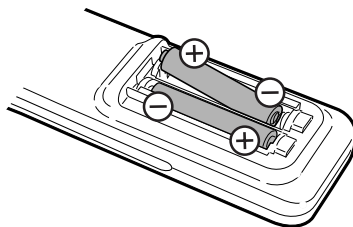

3 Close the battery cover.

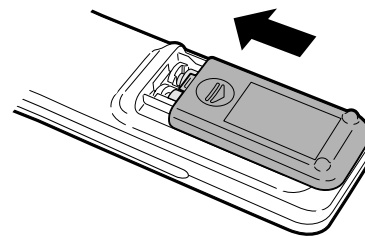

- Place batteries with their terminals corresponding to the (+) and (–) indications in the battery compartment.

CAUTION


Improper use of batteries can result in chemical leakage or explosion. Be sure to follow the instructions below.

- Do not mix batteries of different types. Different types of batteries have different characteristics.
- Do not mix old and new batteries. Mixing old and new batteries can shorten the life of new batteries or cause chemical leakage in old batteries.
- Remove batteries as soon as they have worn out. Chemicals that leak from batteries can cause a rash. If you find any chemical leakage, wipe thoroughly with a cloth.
- The batteries supplied with this product may have a shorter life expectancy due to storage conditions.
- If you will not be using the remote control unit for an extended period of time, remove the batteries from it.

Using the remote control unit


Use the remote control unit by pointing it towards the remote sensor window.

Objects between the remote control unit and sensor window may prevent proper operation.

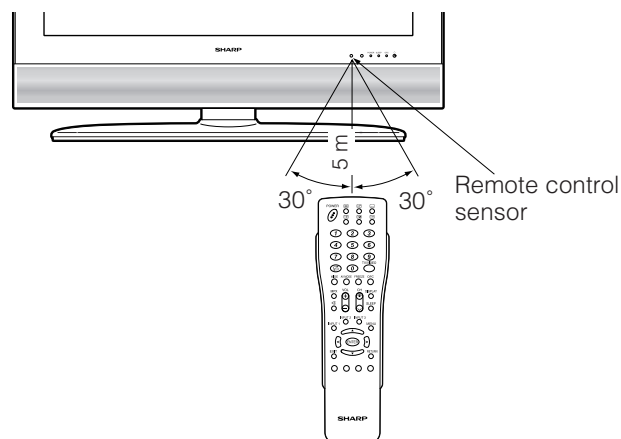

Cautions regarding remote control unit

- Do not subject the remote control unit to shock. In addition, do not soak the remote control unit with liquids, or place it in an area with high humidity.
- Do not install or place the remote control unit under direct sunlight. The heat may cause deformation of the unit.
- The remote control unit may not work properly if the remote sensor window of the TV is under direct sunlight or strong lighting. In such case, change the angle of the lighting or TV, or operate the remote control unit closer to the remote sensor window.

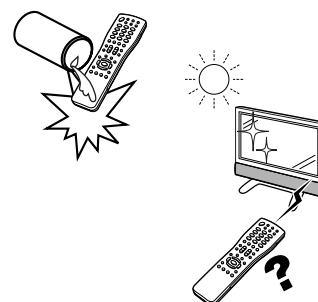


Setting the TV

Notes on installing the TV

- Avoid direct sunlight and place the TV in a well-ventilated location.
- Place the TV in a level location.


1 Removing the terminal cover

TV (rear view)

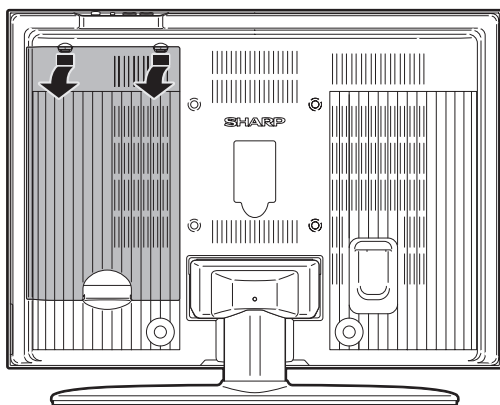

Press down the hooks to remove the cover toward you.


2 Connecting the AC cord, antenna, and external equipment to the TV

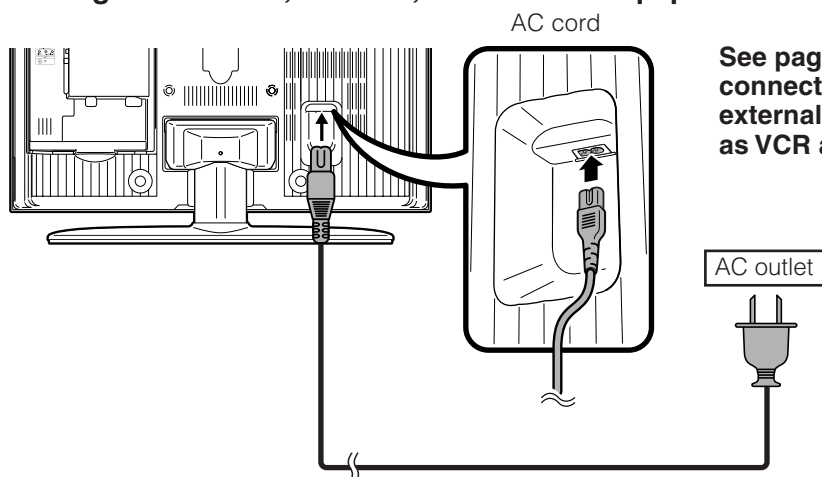

See pages 8 and 37–39 for connecting antennas and external equipment, such as VCR and DVD player.

- Place the TV close to the AC outlet, and keep the power plug within reach.

3 Bundling the cables and closing the terminal cover

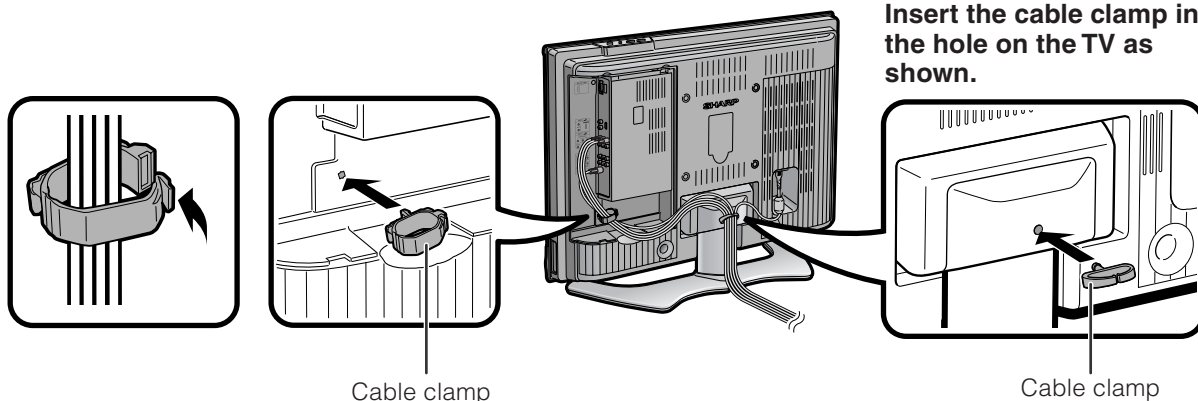

Insert the cable clamp in the hole on the TV as shown.

CAUTION

- TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT TOUCH UN-INSULATED PARTS OF ANY CABLES WITH THE AC CORD CONNECTED.


Preparation

Protection against overturning

There is a danger of the product overturning in the case of a disaster or sudden collision. Carry out the following tip-resistant measurement for your safety.



Anchoring the TV to the wall or a pillar

- 1 Fix the product with the 2 clamps (supplied), using the screws (supplied).
- 2 Fix the TV to the wall using extra strong ties (commercially available).

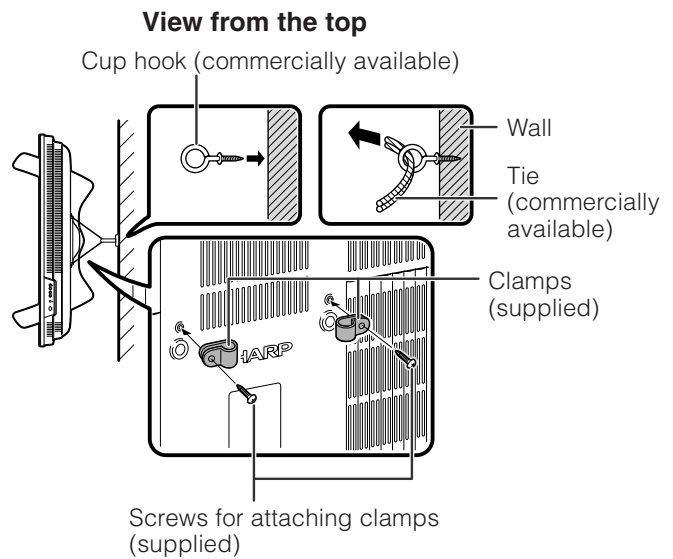

Fixing the TV to the table

- 1 Lay the TV down on cushioning (such as a blanket) over a table.
- 2 Attach the band (supplied) to the bottom of the stand using the screw (supplied).
- 3 Transfer the product to the table where you intend to fix the TV.
- 4 Fix the TV to the table by the band with a screw (commercially available).
 - Use a screw (commercially available) whose shape is compatible with the band.

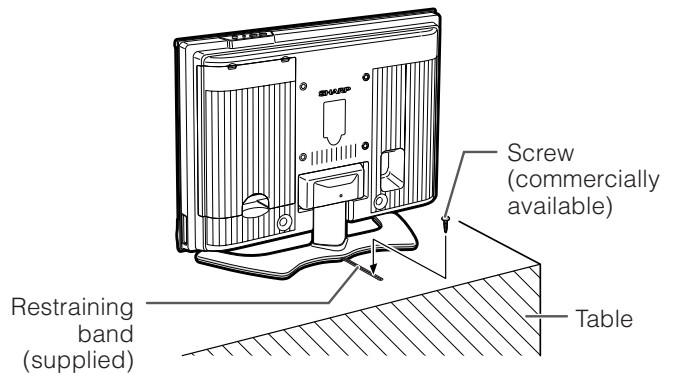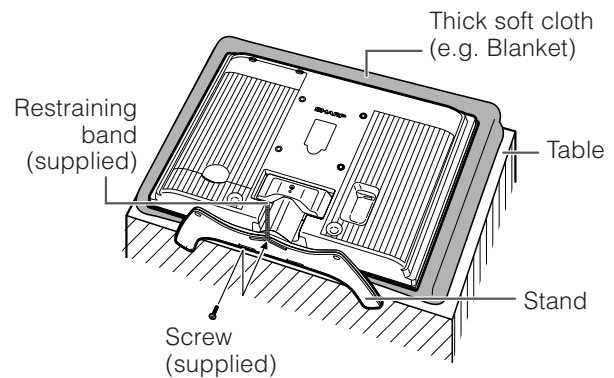

CAUTION

- As this product is heavy, use a table that is wide enough to support the product and capable of withstanding the product's weight. The table should be set where it will not be overturned.


Preparation

Simple operations for watching a TV programme


Basic connection

Connecting to an antenna

To enjoy a clearer picture, use an outdoor antenna. The following is a brief explanation of the types of connections that are used for coaxial cable.

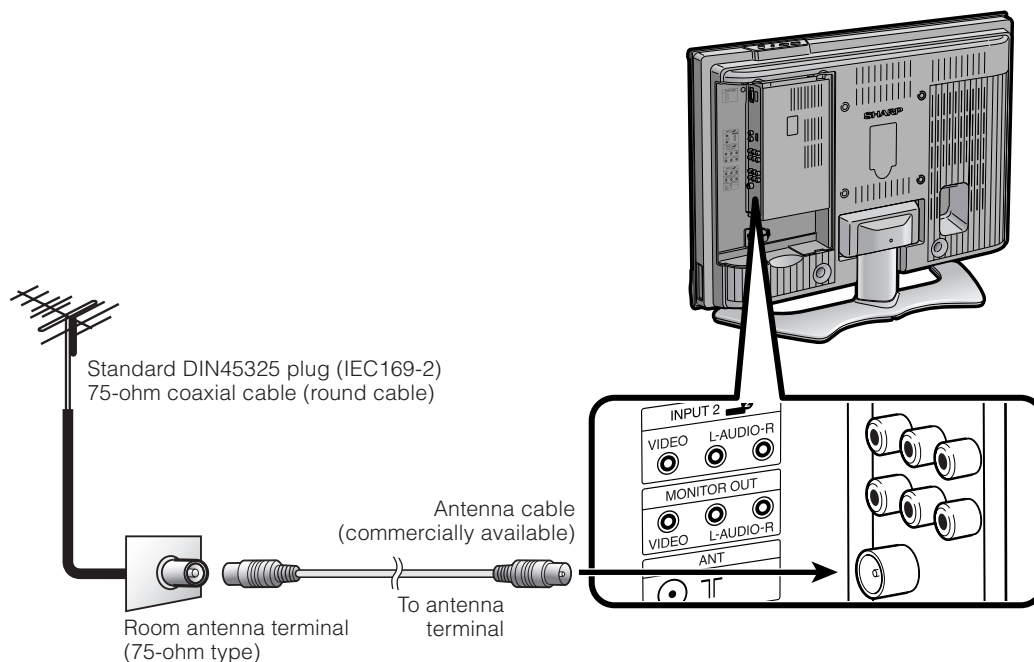

Connecting to the AC outlet

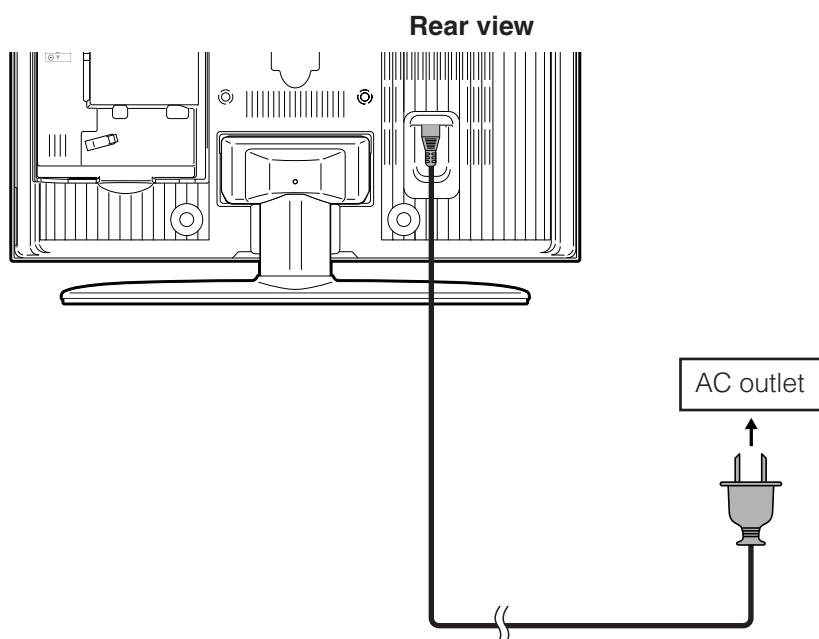

NOTE

- Always turn off the power of the TV when connecting the AC cord.
- Disconnect the AC cord from the AC outlet if the TV will not be used for a long period of time.

Preparation

Setting the TV on the wall

- You can mount the TV on the wall, using the optional AN-37AG2 bracket.
- For details, refer to the instructions supplied with the optional bracket.


CAUTION

- **Installing the Liquid Crystal Television requires special skill that should only be performed by qualified service personnel. Customers should not attempt to do the work themselves. SHARP bears no responsibility for improper mounting or mounting that results in accident or injury.**

<Example>


Hanging on the wall

Wall mount bracket. (See the bracket instructions for details.)

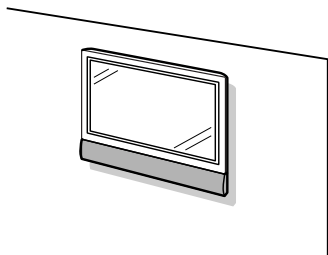

Regarding the angle when mounting the TV on the wall

- The angle to which you can tilt the wall-mounted TV is up to 5 degrees. Do not tilt it more than the maximum angle.
- Tilt the wall-mounted TV slowly when adjusting its angle.

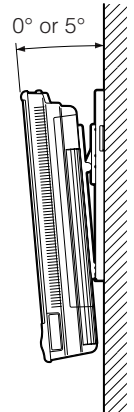

Removing the stand

For wall mounting with the optional bracket, remove the stand.


Before attaching/detaching stand

- Before detaching (or attaching) stand, unplug the AC cord from the AC outlet.
- Remove all terminal covers and connected cables.
- Lay the TV down on cushioning (such as a blanket) over a table.
- Make sure two or more people perform the operation.

CAUTION


- **Do not remove the stand from the TV unless using an optional bracket to mount it.**

1

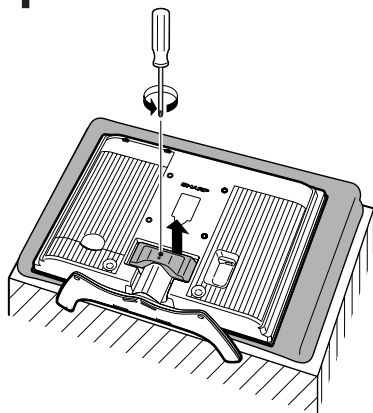


Unfasten the screw used to secure the cover in place.

2

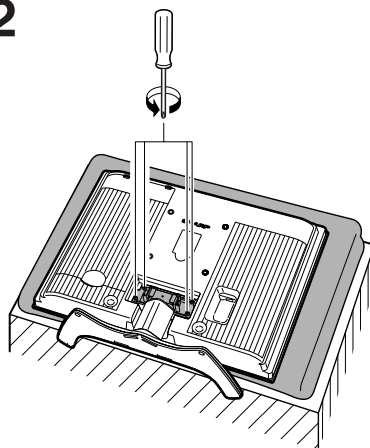

Unfasten the four screws used to secure the stand in place.

3

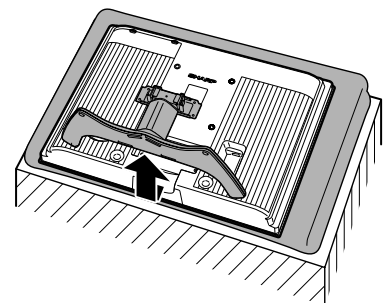


Detach the stand from the TV. (Hold the stand so it will not drop from the edge of the base area.)

NOTE

- To attach the stand, perform the above steps in reverse order.

Part names

TV (Front)

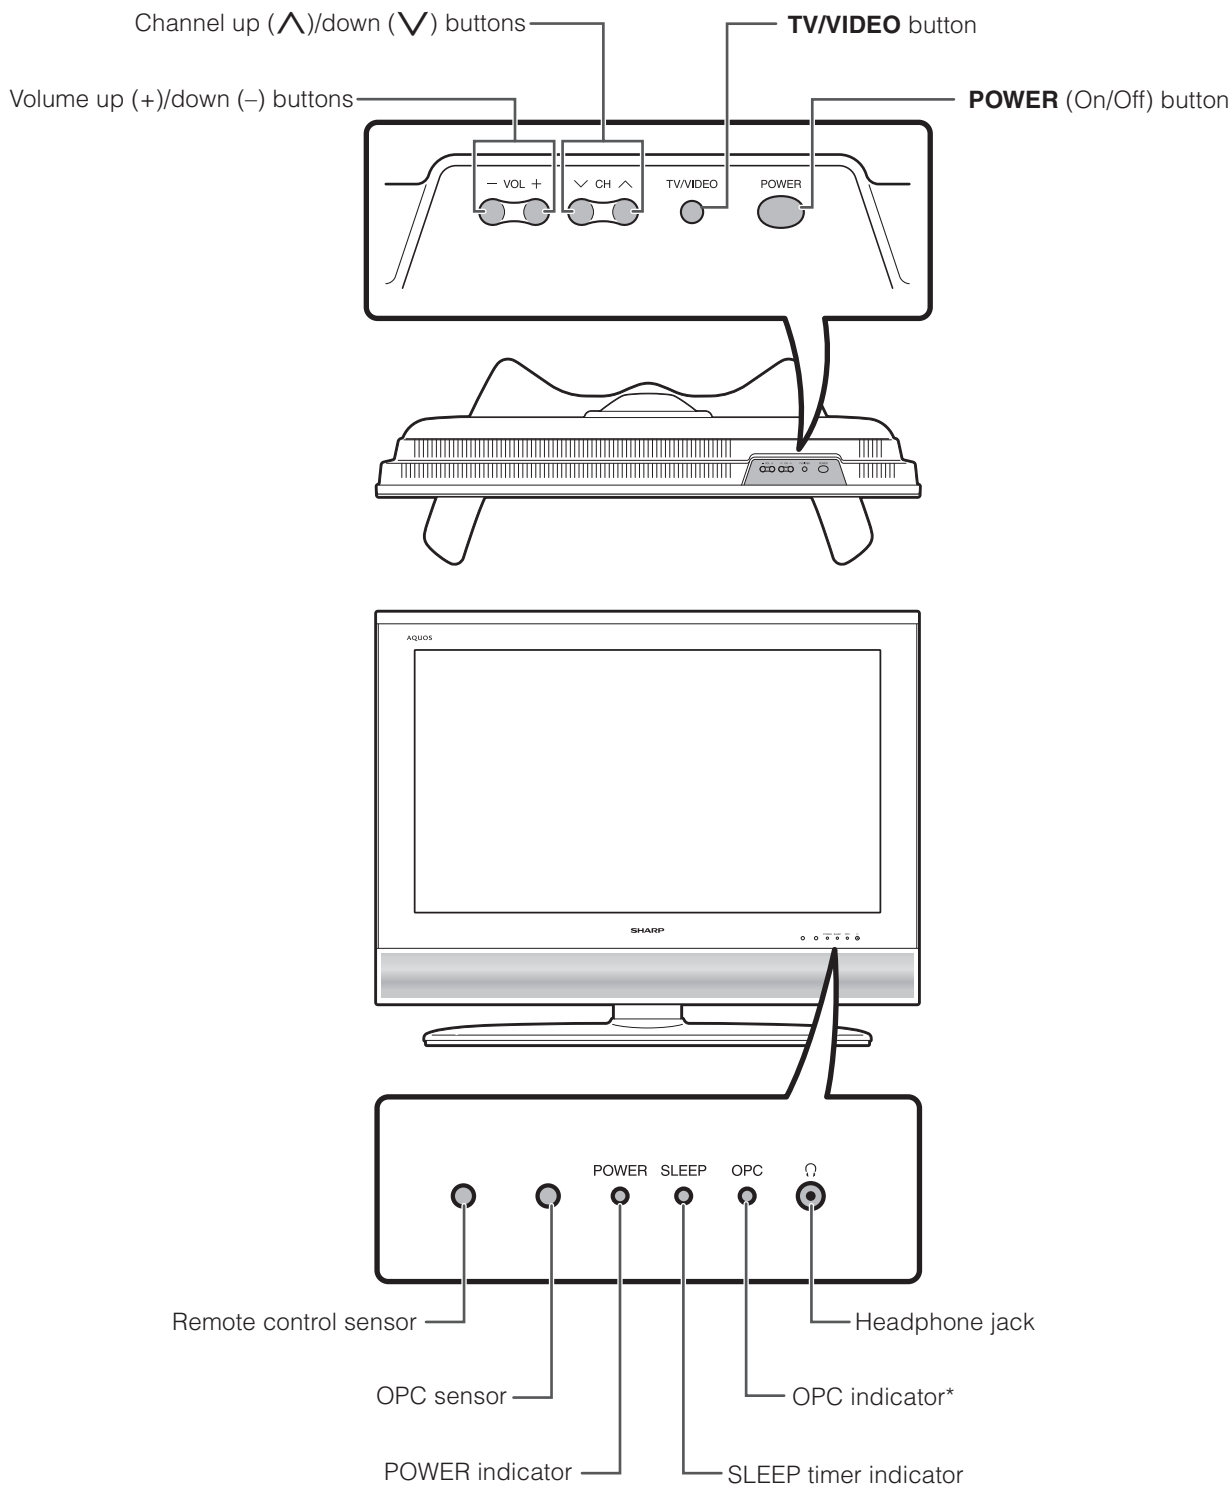

*OPC: Optical Picture Control
(See page 22.)


Regarding the headphone jack

- Use headphones with a stereo mini plug (Ø 3.5 mm).
- Be sure to unplug headphones from the jack when they are not in use.
- The speakers do not output volume when headphones are plugged in.
- Audio adjustments (page 26) do not affect the audio of connected headphones.
- You can set the volume to different levels for each input source.

Volume display when headphones are plugged in



TV (Rear)

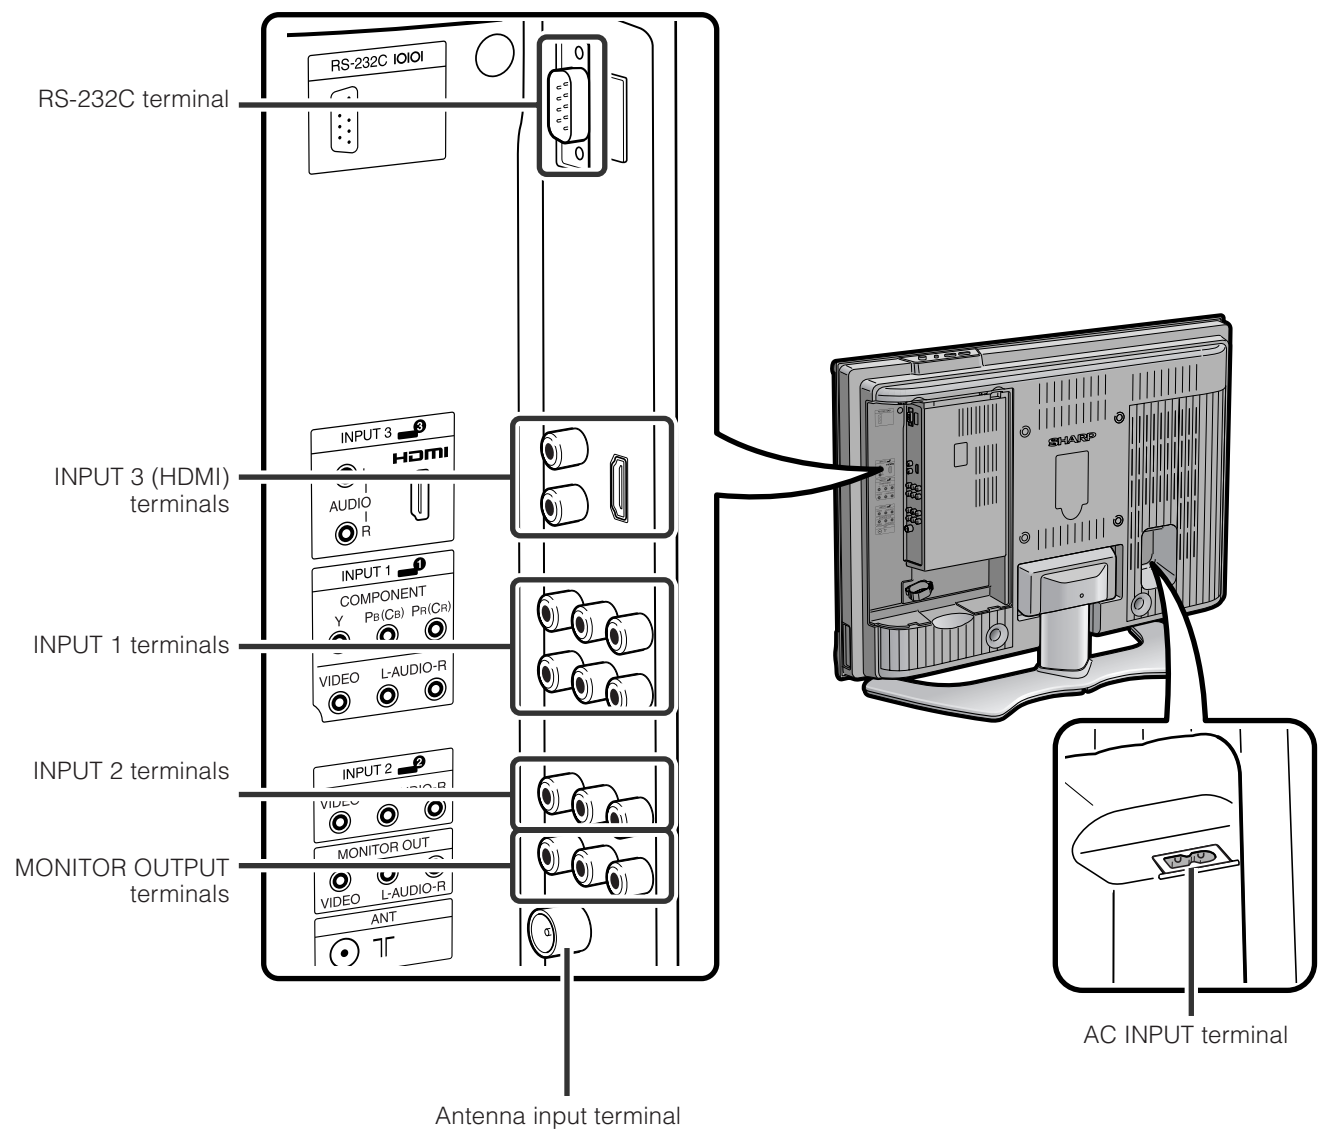

Remote control unit

(TELETEXT)
Select the TELETEXT mode. (all TV image, all TEXT image, TV/TEXT image) (See pages 35 and 36.)

POWER (STANDBY/ON)
To switch the power on and off. (See page 13.)

(Hold)
TELETEXT mode: Stop updating Teletext pages automatically. Press again to release the hold mode. (See page 35.)

0 - 9
Set the channel. (See page 13.)
TELETEXT mode: Set the page. (See page 35.)

(Flashback)
Press to return to the previous image in normal viewing mode. (See page 14.)

WIDE
Change the wide image mode. (See page 30.)

AV MODE
Select a video setting: AV MODE (STANDARD, MOVIE, GAME, USER, DYNMIC) (See page 22.)

MPX
Select the sound multiplex mode. (See page 14.)

VOL +/VOL -
Set the volume. (See page 15.)

(MUTE)
Mute the sound. (See page 15.)

INPUT2
Directly select and output the signal from the INPUT2 terminal. (See page 32.)

INPUT1
Directly select and output the signal from the INPUT1 terminal. (See page 32.)

▲/▼/◀/▶ (Cursor)
Select a desired item on the setting screen. (See page 16.)

EXIT
Return to the default screen.

(Reveal hidden for TELETEXT)
TELETEXT mode: Display hidden characters. (See page 35.)

(SUBTITLE for TELETEXT)
To turn the subtitles on and off. (See page 36.)

(Top/Bottom/Full)
TELETEXT mode: Set the area of magnification. (See page 35.)

(Subpage)
Display the Teletext subpage directly. (See page 36.)

TV/VIDEO (INPUT SOURCE)
Select an input source. (TV, INPUT 1, INPUT 2, INPUT 3) (See pages 32 and 37.)

OPC
To switch Optical Picture Control on and off. (See pages 22.)

FREEZE
Freeze a motion picture on the screen. (See page 15.)

DISPLAY
Display the programme information.

CH▲/CH▼
TV input mode: Select the channel. (See page 13.)
TELETEXT mode: Select the page. (See page 35.)

SLEEP
Set the Sleep timer. (See page 15.)


INPUT3
Directly select and output the signal from the INPUT3 terminal. (See page 32.)

MENU
Display the menu screen. (See page 16.)

ENTER
Execute a command.

RETURN
MENU mode: Return to the previous menu screen. (See page 16.)

Colour (RED/GREEN/YELLOW/BLUE)
TELETEXT mode: Select a page. (See page 35.)

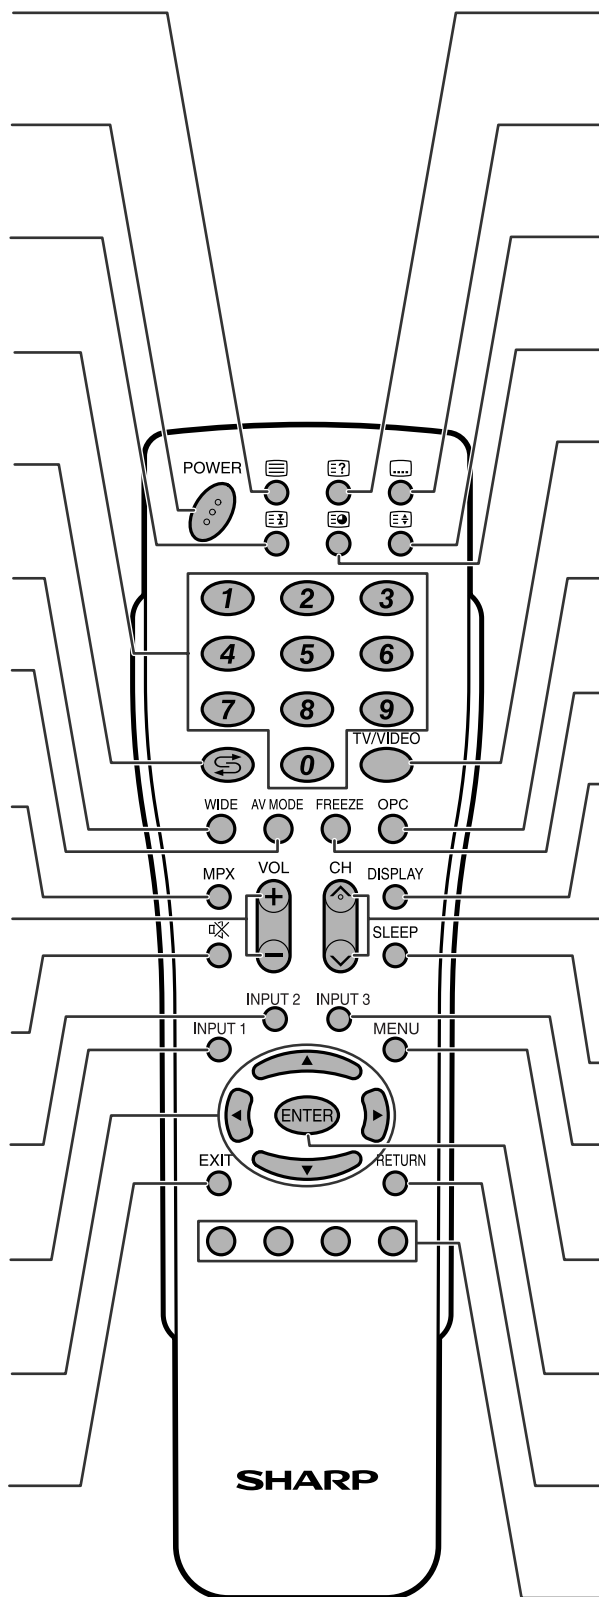

NOTE


- When using the remote control unit, point it at the TV.

Watching TV

Turning on the power

Press **POWER** on the TV.

- **POWER** indicator (Green): The TV is on. (After a few seconds, an image appears with sound.)
- After turning the power "ON" by pressing **POWER** on the TV, you can turn the power ON/OFF by pressing **POWER** on the remote control.

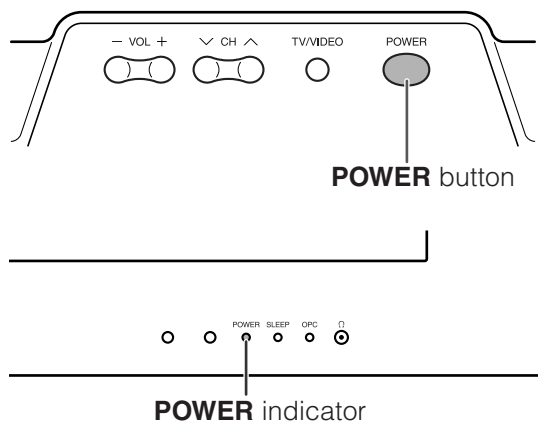

Turning off the power

Press **POWER** on the remote control.

- The TV enters standby mode and the image on the screen disappears.
- The POWER indicator on the TV changes from green to red.

Press **POWER** on the TV.

- The POWER indicator on the TV turns off.
- When the TV is turned off by **POWER** on the TV, you cannot turn on the power by pressing **POWER** on the remote control.


POWER indicator

Off	Power off
Red	The TV is in standby mode.
Green	The TV is on.

NOTE

- If you are not going to use this TV for a long period of time, be sure to remove the AC cord from the AC outlet.
- Minor power is consumed when the unit is in standby mode.

POWER button

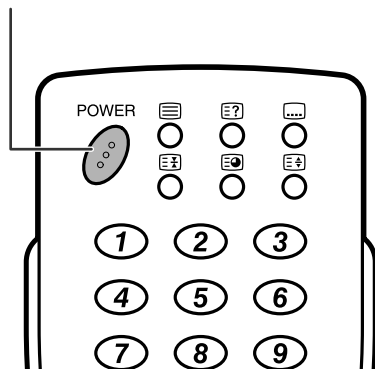


Simple button operations for changing channels

You can change channels in several ways.


Using CH ^/v on the remote control unit

- Press **CH ^** to increase the channel number.
- Press **CH v** to decrease the channel number.

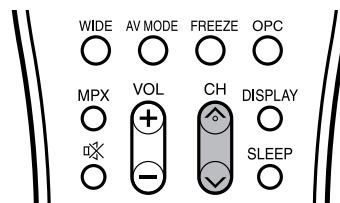


NOTE

- **CH ^/v** on the TV operates the same as **CH ^/v** on the remote control unit.

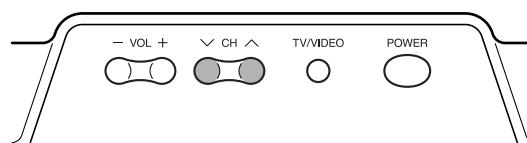

Using 0 – 9 on the remote control unit

Select the channels directly by pressing buttons **0** to **9**.

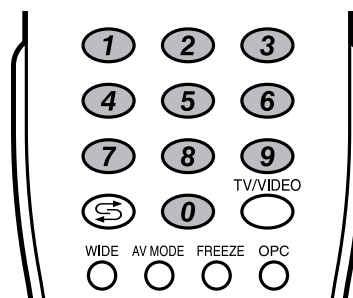

EXAMPLE

To select a 1-digit channel (e.g. channel 2):

- Press **0**, followed by **2**.

To select a 2-digit channel (e.g. channel 12):


- Press **1**, followed by **2**.

When viewing Teletext information


View a page directly which is 3-digit page number from 100 to 899 by pressing buttons **0** to **9**.

Channel display

Channel display changes approximately after 3 seconds as shown below.

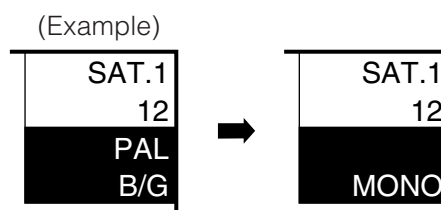

Using Flashback (↶) on the remote control unit

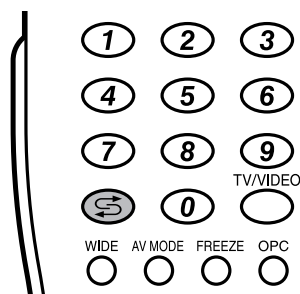


Press **↶** to switch the currently tuned channel to the previously tuned channel.
Press **↶** again to switch back to the currently tuned channel.

Press **↶** to toggle between the currently selected input source and the previously selected one.

Press **↶** to return to the previous page in TELETEXT mode.

Using MPX on the remote control unit

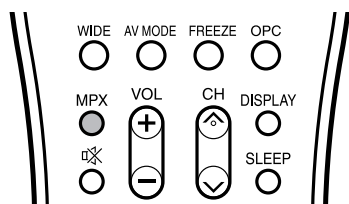


In the NICAM TV broadcasts

When receiving a stereo signal

Each time you press **MPX**, the mode switches between NICAM STEREO and MONO.


Stereo mode

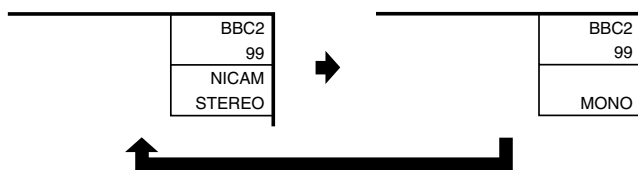

When receiving a bilingual signal

Each time you press **MPX**, the mode switches among NICAM CH A, NICAM CH B, NICAM CH AB and MONO.


Bilingual mode

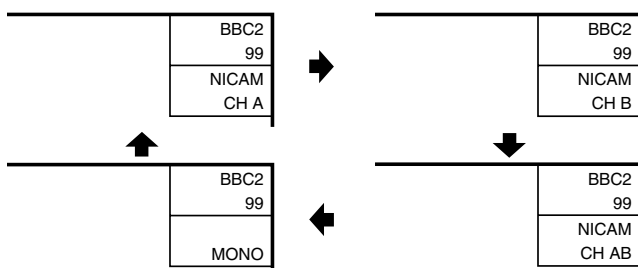

When receiving a monaural signal

Each time you press **MPX**, the mode switches between NICAM MONO and MONO.

Monaural mode

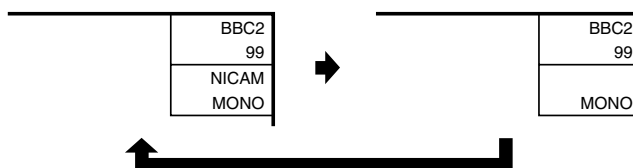


In the TV mode of A2 TV broadcasts

When receiving a stereo signal

Each time you press **MPX**, the mode switches between STEREO and MONO.


Stereo mode

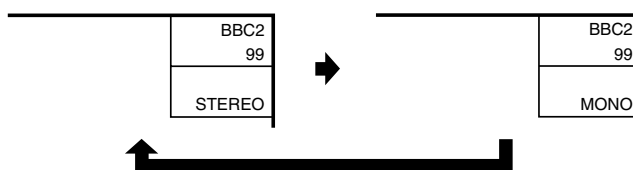

When receiving a bilingual signal

Each time you press **MPX**, the mode switches among CH A, CH B and CH AB.


Bilingual mode

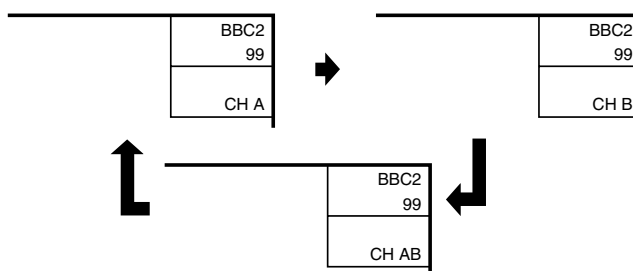

When receiving a monaural signal

When you press **MPX**, "MONO" displays.

 
Monaural mode



NOTE

- "BBC2" and "99" are tentative network name and channel.

Simple button operation for changing volume/sound

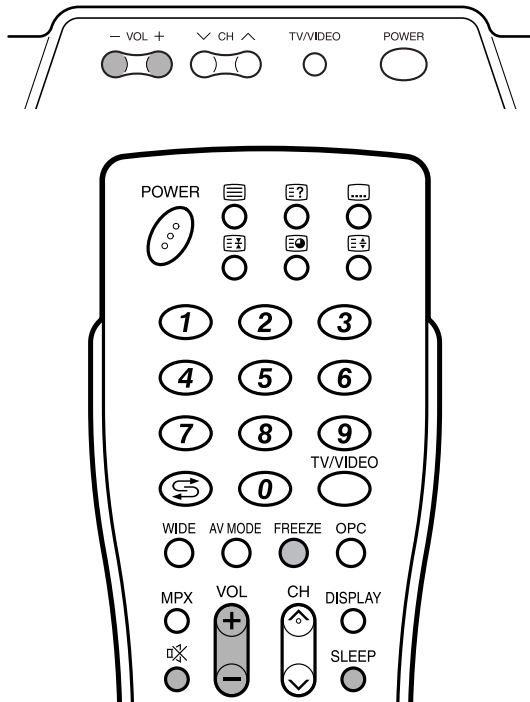

Changing the volume

You can change the volume on the TV or on the remote control unit.

- To increase the volume, press **VOL +**.
- To decrease the volume, press **VOL -**.



 NOTE

- “TV”, “INPUT1”, “INPUT2” and “INPUT3” modes can store volume adjustment values separately.

Using (Mute) on the remote control unit

✖ mutes the current sound output.

1

Press $\frac{1}{\times}$.

- The sound is silenced.
- “~~OK~~” has been displayed on the screen for 30 minutes.

Mute



 NOTE

- Within 30 minutes after pressing , press one of the buttons below to cancel the mute.
—VOL – /VOL +
—
- **Mute will be cancelled after 30 minutes. However, the TV will not suddenly output loud sound as the volume level will be set to 0 automatically. Increase the volume level by pressing VOL +.**

2

Press again within 30 minutes to cancel the mute.

- Before 30 minutes, the volume level returns to the previous setting.

 
Sleep timer

Allows you to set a time when the TV automatically switches to standby.

1

Press **SLEEP**.

- Remaining time displays when sleep timer has been set.



2

Each time you press **SLEEP**, the remaining time switches as shown below.

0 hr. 30 min. → 1 hr. 00 min. → 1 hr. 30 min.

 NOTE

- When the time has been set, countdown automatically starts.
- Five minutes before the preset of time expires, the remaining time displays each minute.
- Select "Off" by pressing **SLEEP** to cancel the sleep timer.

Still image

You can freeze a motion picture on the screen.

1

Press **FREEZE**.

2

Press **FREEZE** again to exit still image.


 NOTE

- When this function is not available, “No still image available.” will display.
- The still image automatically goes out after 30 minutes.

Basic adjustment settings

Menu operation buttons

Use the following buttons on the remote control to operate the menu.

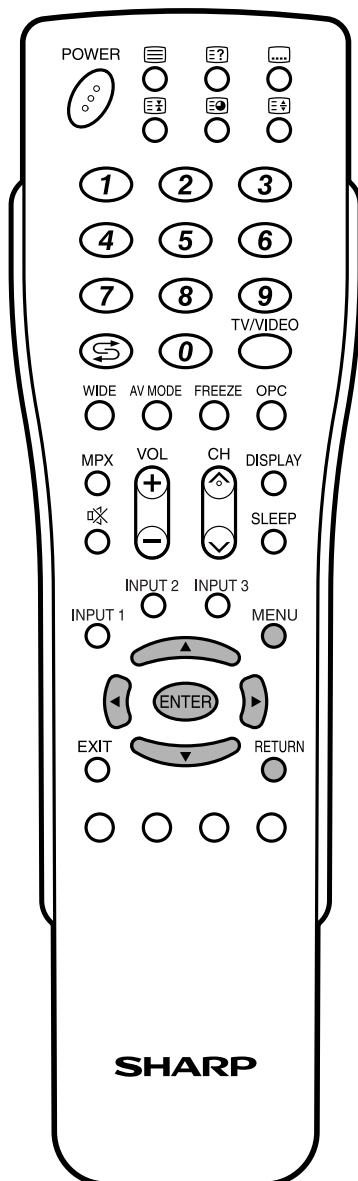

MENU: Press to open or close the menu screen.

▲/▼/◀/▶: Press to select a desired item on the screen or adjust a selected item.

ENTER: Press to go to the next step or complete the setting.


RETURN: Press to return to the previous step.

◀▶: Select ENTER: Enter RETURN: Back MENU: End

The bar above is an operational guide for the remote control. The bar will change in accordance with each menu setting screen.

On-Screen Display

Example

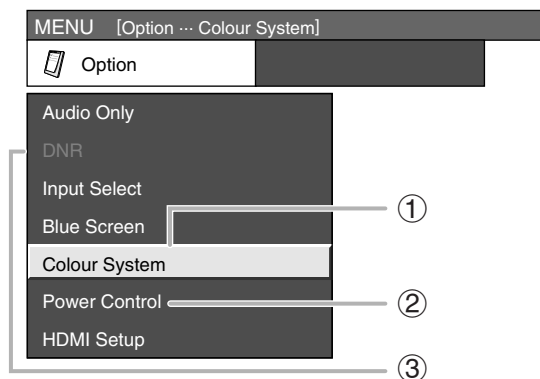

- ① Item displayed in yellow
- This indicates the item currently selected.
 - Press **ENTER** to go to the adjustment screen for this item.

- ② Item displayed in white
- This indicates an item can be selected.

- ③ Item displayed in grey
- This indicates that the item cannot be selected.
- *There are various reasons why items cannot be selected, but the main reasons are as follows:
1. Nothing is connected to the selected input terminal.
 2. The function is not compatible with the current input signal.

NOTE

- The screens in the operation manual are for explanation purposes (some are enlarged, others cropped) and may vary slightly from the actual screens.

Basic adjustment settings

Menu items

List of menu items to help you with operations

 Picture

AV Mode	Page 22
OPC	Page 22
Backlight	Page 23
Contrast	Page 23
Brightness	Page 23
Colour	Page 23
Tint	Page 23
Sharpness	Page 23
Advanced	
C. M. S.	Page 24
Colour Temp.	Page 24
3D-Y/C	Page 24
Film Mode	Page 25
I/P Setting	Page 25

 Audio

AV Mode	Page 26
Treble	Page 26
Bass	Page 26
Balance	Page 26

 Setup

Auto Installation	Page 18
Programme Setup	Pages 18-21
Child Lock	Page 27
Input Label	Page 28
Position	Page 28
WSS	Page 29
4:3 Mode	Page 29
Language	Page 31
Text Language	Page 36

 Option

Audio Only	Page 31
DNR	Page 31
Input Select	
Input1	Page 32
Blue Screen	Page 33
Colour System	Page 33
Power Control	
No Signal Off	Page 33
No Operation Off	Page 33
HDMI Setup	
Signal Type	Page 34
Colour Matrix	Page 34
Auto View	Page 34
Audio Select	Page 34


 NOTE

- Some menu items may not be displayed depending on the selected input source.

Basic adjustment settings

Auto installation


You can run auto installation again, even after setting up the preset channels.

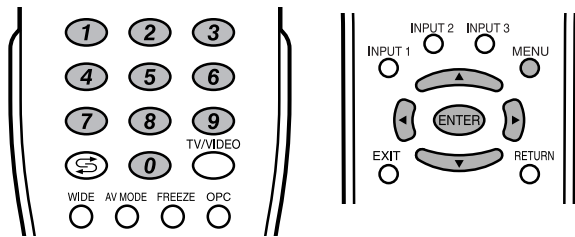

1 Press **MENU** and the MENU screen displays.


2 Press **◀/▶** to select “Setup”.

3 Press **▲/▼** to select “Auto Installation”, and then press **ENTER**.

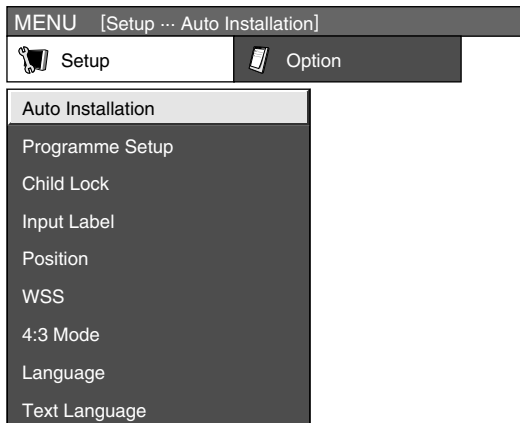

4 If you have already set the password, enter it here.

 - See page 27 for setting a password.



5 Press **▲/▼** to select “Yes”, and then press **ENTER**.

6 Press **▲/▼** to select the desired language listed on the screen, and then press **ENTER**. Press **▲/▼** to select the desired sound system, and then press **ENTER**. You do not need to do anything during the auto search. “Search is completed.” is displayed. Press **MENU** to exit.

Programme setup

You can run the auto search procedure again at any time by accessing the Setup menu and Programme Setup. Channels can be tuned automatically or manually.

Auto search

You can also automatically search by performing the procedure below. This is the same function as programme auto search in auto installation.


1 Press **MENU** and the MENU screen displays.

2 Press **◀/▶** to select “Setup”.

3 Press **▲/▼** to select “Programme Setup”, and then press **ENTER**.

If you have already set the password, enter it here.

- See page 27 for setting a password.

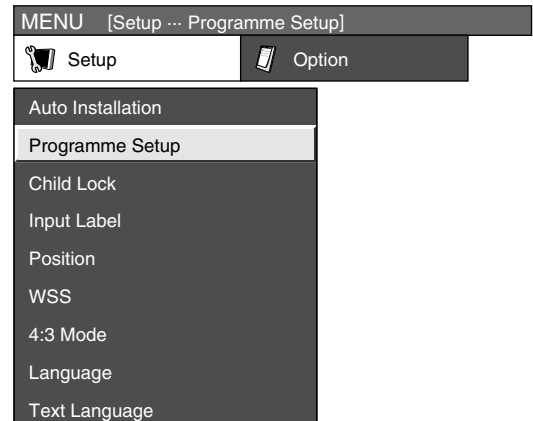

4 Press **▲/▼** to select “Auto Search”, and then press **ENTER**.

5 Press **▲/▼** to select “Yes”, and then press **ENTER**.

Press **▲/▼** to select the desired sound system, and then press **ENTER**.

“Search is completed.” is displayed. Press **MENU** to exit.

Basic adjustment settings

Manual setting for each channel

You can set some channel items manually. They are Search, Fine (TV frequency), Colour System, Sound System, and Skip.

- 1 Press **MENU** and the MENU screen displays.
- 2 Press **◀/▶** to select "Setup".
- 3 Press **▲/▼** to select "Programme Setup", and then press **ENTER**.
If you have already set the password, enter it here.
• See page 27 for setting a password.
- 4 Press **▲/▼** to select "Manual Adjust", and then press **ENTER**.
- 5 Press **▲/▼** to select "Yes", and then press **ENTER**.

Programme Setup "Manual Adjust" menu

01 SAT.1	02 PR07	03 KABEL		

You can select one of the following settings.

- ① **Search** (See page 19.)
- ② **Fine** (See page 19.)
- ③ **Colour system** (See page 19.)
- ④ **Sound system** (See page 20.)
- ⑤ **Skip** (See page 20.)

Search tuning

- 1 Press **▲/▼/◀/▶** to select the channel you want to edit, and then press **ENTER**.
• The selected channel information displays.
- 2 Press **▲/▼** to select "Search", and then press **ENTER**.

MENU [Setup --- Programme Setup]	
Search	
Fine	179.25 MHz
Colour System	NEXT
Sound System	
Skip	

- 3 As **ENTER** is pressed, the next channels will be searched in order.

Fine tuning

- 1 Press **▲/▼/◀/▶** to select the channel you want to edit, and then press **ENTER**.
• The selected channel information displays.
- 2 Press **▲/▼** to select "Fine", and then press **ENTER**.
- 3 Press **◀/▶** to adjust the frequency, and then press **RETURN** or **MENU**.
• Adjust while checking the background picture as a reference.

Search	
Fine	179.25 MHz
Colour System	
Sound System	
Skip	

- Instead of the method above, you can also set by directly entering the frequency number of the channel with **0 – 9**.
- When setting a frequency on the "Fine" screen, the last figure of the frequency needs to be "0" or "5".

EXAMPLE

- 179.25 MHz: Press **1 → 7 → 9 → 2 → 5**.
- 49.25 MHz: Press **0 → 4 → 9 → 2 → 5**.

Colour system

- 1 Press **▲/▼/◀/▶** to select the channel you want to edit, and then press **ENTER**.
• The selected channel information displays.
- 2 Press **▲/▼** to select "Colour System", and then press **ENTER**.
• Receivable colour systems are listed.

Colour system menu

Search	
Fine	AUTO
Colour System	PAL
Sound System	SECAM
Skip	NTSC 3.58
	NTSC 4.43
	PAL-60

- 3 Press **▲/▼** to select the optimum colour system, and then press **ENTER**.

Basic adjustment settings

Manual setting for each channel (continued)

Sound system (Broadcasting system)

- 1 Press **▲/▼/◀/▶** to select the channel you want to edit, and then press **ENTER**.
 - The selected channel information displays.

- 2 Press **▲/▼** to select “Sound System”, and then press **ENTER**.
 - Receivable sound systems (Broadcasting systems) are listed.

Sound system menu

MENU [Setup ... Programme Setup]	
Search	
Fine	B/G
Colour System	D/K
Sound System	I
Skip	M

- 3 Press **▲/▼** to select the optimum sound system, and then press **ENTER**.

NOTE

- Check the sound system if the sound output were not correct.

Skipping channels

Channels with “Skip” set to “On” are passed over when using **CH▲/▼** even if selected while watching the image from the TV.

- 1 Press **▲/▼/◀/▶** to select the channel you want to edit, and then press **ENTER**.
 - The selected channel information will be displayed.

- 2 Press **▲/▼** to select “Skip”, and then press **ENTER**.
 - Skip menu displays.

Skip menu

Search	
Fine	Off
Colour System	
Sound System	On
Skip	

- 3 Press **▲/▼** to set “Skip” to “On”, and then press **ENTER**.

Sort

Channel positions can be sorted freely.

- 1 Press **MENU** and the MENU screen displays.

- 2 Press **◀/▶** to select “Setup”.

- 3 Press **▲/▼** to select “Programme Setup”, and then press **ENTER**.
 - If you already set the password, enter it here.
 - See page 27 for setting a password.

- 4 Press **▲/▼** to select “Sort”, and then press **ENTER**.


- 5 Press **▲/▼** to select “Yes”, and then press **ENTER**.

- 6 Press **▲/▼/◀/▶** to select the channel you want to move, and then press **ENTER**.

- 7 Move it to the desired position by pressing **▲/▼/◀/▶**, and then press **ENTER**.
 - Please be aware that the neighboring channels are switched during this procedure.

(Example)

When moving channel 10 to channel 4's position.

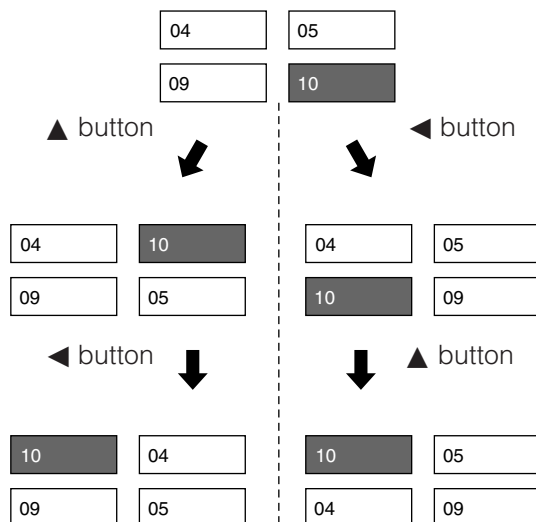

- 8 Repeat the steps 6 and 7 until all desired channels are sorted.

Basic adjustment settings

Label

Channels can be labelled freely.


- 1 Press **MENU** and the MENU screen displays.
- 2 Press **◀/▶** to select "Setup".
- 3 Press **▲/▼** to select "Programme Setup", and then press **ENTER**.
If you already set the password, enter it here.
• See page 27 for setting a password.
- 4 Press **▲/▼** to select "Label", and then press **ENTER**.
- 5 Press **▲/▼** to select "Yes", and then press **ENTER**.
- 6 Press **▲/▼/◀/▶** to select the channel you want to label, and then press **ENTER**.
- 7 Press **▲/▼** to select characters and **◀/▶** to move to the desired digit, and then press **ENTER** to complete the label setting.

Erase Programme

The individual programme can be erased.

- 1 Press **MENU** and the MENU screen displays.
- 2 Press **◀/▶** to select "Setup".
- 3 Press **▲/▼** to select "Programme Setup", and then press **ENTER**.
If you already set the password, enter it here.
• See page 27 for setting a password.
- 4 Press **▲/▼** to select "Erase Programme", and then press **ENTER**.
- 5 Press **▲/▼** to select "Yes", and then press **ENTER**.
- 6 Press **▲/▼/◀/▶** to select the channel you want to erase, and then press **ENTER**.
- 7 All the subsequent programmes move up.
- 8 Repeat the steps 6 and 7 until all desired channels are erased.

Erase programme menus

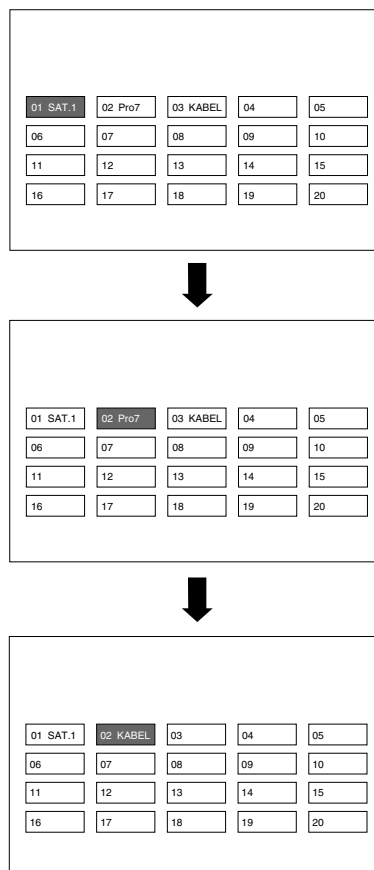


Basic adjustment settings

AV mode selection

AV mode gives you five viewing options to choose from to best match the system environment, which can vary due to factors like room-brightness, type of programme watched or the type of image input from external equipment.

Using AV MODE on the remote control unit

- 1 Press **AV MODE**.
 - Present AV mode displays.
- 2 Press **AV MODE** again before the mode displayed on the screen disappears.
 - The mode changes as shown below.

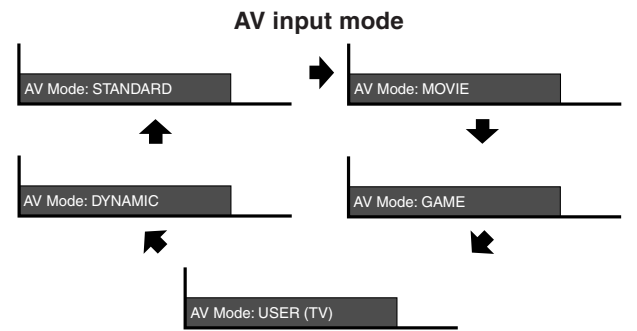

Using AV Mode on the menu screen

- 1 Press **MENU** and the MENU screen displays.
- 2 Press **◀/▶** to select “Picture”.
- 3 Press **▲/▼** to select “AV Mode”, and then press **ENTER**.
- 4 Press **▲/▼** to select the desired item, and then press **ENTER**.

Selected item	Description
STANDARD	For a highly defined image in a normally bright room
MOVIE	For a movie
GAME	Lowers image brightness for easier viewing.
USER	Allows the user to customise settings as desired. You can set the mode for each input source.
DYNAMIC	For a clear-cut image emphasising high contrast for sports viewing


NOTE

- You can select a different AV MODE item for each input mode. (For example, select STANDARD for TV input and DYNAMIC for VIDEO input.)

OPC (Optical Picture Control) setting

You can set the TV to automatically adjust the screen to suitable backlight brightness according to the lighting conditions.

Using OPC on the remote control unit

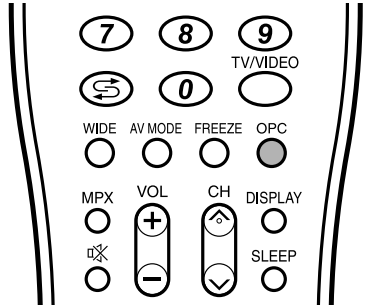

Press **OPC** to switch the OPC function on and off.

Using OPC on the menu screen

- 1 Press **MENU** and the MENU screen displays.
- 2 Press **◀/▶** to select “Picture”.
- 3 Press **▲/▼** to select “OPC”, and then press **ENTER**.
- 4 Press **▲/▼** to select the desired item, and then press **ENTER**.

Selected item	Description
Off	The brightness is fixed at the value set in “Backlight” (See page 23).
On	Automatically adjusts
On (Display)	Displays the OPC effect on the screen while adjusting the brightness of the screen.


NOTE

- Make sure no object obstructs the OPC sensor, which could affect its ability to sense surrounding light.

Basic adjustment settings

Picture adjustments

You can adjust the picture to your preference.
Follow the steps to adjust the picture.

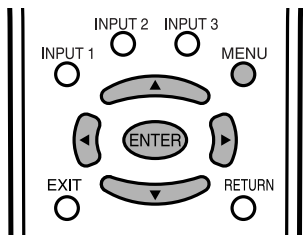


- 1 Press **MENU** and the MENU screen displays.
- 2 Press **◀/▶** to select “Picture”.
- 3 Press **▲/▼** to select a specific adjustment item.
- 4 Press **◀/▶** to adjust the item to your desired position.

NOTE

- For resetting all adjustment items to factory preset values, press **▲/▼** to select “Reset”, press **ENTER**, press **▲/▼** to select “Yes”, and then press **ENTER**.
- “Backlight” cannot be adjusted when “OPC” is set to “On” or “On (Display)”.

Adjustments items

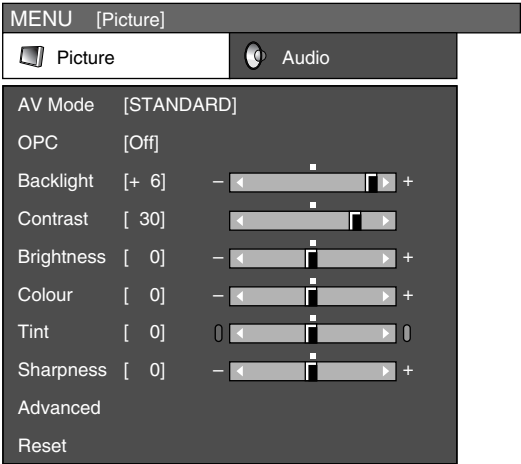

Selected item	◀ button	▶ button
Backlight	The screen dims	The screen brightens
Contrast	For less contrast	For more contrast
Brightness	For less brightness	For more brightness
Colour	For less colour intensity	For more colour intensity
Tint	Skin tones become purplish	Skin tones become greenish
Sharpness	For less sharpness	For more sharpness

NOTE

- Select “Advanced” and then press **ENTER** to set “C.M.S”, “Colour Temp.”, “3D-Y/C”, “Film Mode” or “I/P Setting”. See pages 24 and 25.

Basic adjustment settings

Advanced

Advanced setting enables you to set the picture adjustment in more detail. There are five options you can choose from.

C.M.S. (Colour Management System)


Colour tone is managed using the six-colour adjustment setting.

1 Press **MENU** and the MENU screen displays.

2 Press **◀/▶** to select "Picture".

3 Press **▲/▼** to select "Advanced", and then press **ENTER**.

4 Press **▲/▼** to select a specific adjustment item among "C.M.S.-Hue", "C.M.S.-Saturation" and "C.M.S.-Value", and then press **ENTER**.

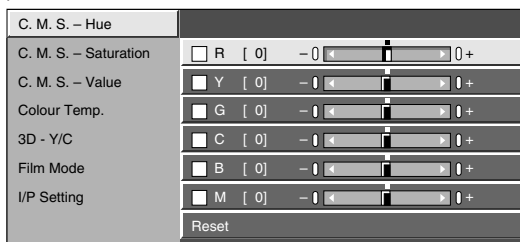

5 Press **◀/▶** to adjust the item to your desired position.

NOTE

- For resetting all adjustment items to factory preset values, press **▲/▼** to select "Reset", and then press **ENTER**.

Selected item	Description
C.M.S.-Hue	This is a standard to adjust the colour either more reddish or more bluish in tone.
C.M.S.-Saturation	Increases or decreases the saturation of a selected colour
C.M.S.-Value	A higher value makes the image brighter. A lower value makes the image darker.

Colour temperature

Adjusts the colour temperature to give the best white image.

1 Repeat steps 1 to 3 in **C.M.S. (Colour Management System)**.

2 Press **▲/▼** to select "Colour Temp.", and then press **ENTER**.

3 Press **▲/▼** to select the desired level, and then press **ENTER**.

Selected item	Description
High	White with bluish tone ↑↓ White with reddish tone
Mid-High	
Middle	
Mid-Low	
Low	

3D-Y/C

Provides high quality images with minimal dot crawl and cross colour noise.

1 Repeat steps 1 to 3 in **C.M.S. (Colour Management System)**.

2 Press **▲/▼** to select "3D-Y/C", and then press **ENTER**.



3 Press **▲/▼** to select the desired level, and then press **ENTER**.

Selected item	Description
Off	3D-Y/C off
Standard	Normal adjustment
Fast	For movie image
Slow	For still image

NOTE

- "3D-Y/C" is not selectable depending on the input signal type.
- 3D-Y/C may not operate depending on the input signal type or noisy input signal.

Basic adjustment settings

Film mode

Automatically detects a film-based source (originally encoded at 24/25 frames/second, depending on the vertical frequency), analyses it then recreates each still film frame for high-definition picture quality.

1 Press **MENU** and the MENU screen displays.

2 Press ◀▶ to select “Picture”.

3 Press ▲/▼ to select “Advanced”, and then press **ENTER**.

4 Press ▲/▼ to select “Film Mode”, and then press **ENTER**.

5 Press ▲/▼ to select “On”, and then press **ENTER**.

I/P setting

Adjusting the image and input signal can give you a more beautiful picture.

1 Repeat steps 1 to 3 in **Film mode**.

2 Press ▲/▼ to select “I/P Setting”, and then press **ENTER**.

3 Press ▲/▼ to select “Interlace” or “Progressive”, and then press **ENTER**.

NOTE

- The picture is progressive scan when Film Mode is “On”.

Basic adjustment settings

AV mode selection

This option links to “AV Mode” in the Picture menu.
(See page 22.)

Audio adjustment

For each selected AV mode, you can adjust the following three items: Treble, Bass, and Balance; to your preferred setting. After choosing the AV mode you want to adjust, next carry out audio adjustment.

1 Press **MENU** and the MENU screen displays.

2 Press ◀/▶ to select “Audio”.

Audio

Setup

STANDARD

Treble [0] – ◀ ▶ +

Bass [0] – ◀ ▶ +

Balance [0] L ◀ ▶ R

Reset

3 Press ▲/▼ to select a specific adjustment item.

4 Press ◀/▶ to adjust the item to your desired position.

Selected item	◀button	▶button
Treble	For weaker treble	For stronger treble
Bass	For weaker bass	For stronger bass
Balance	Decrease audio from the right speaker	Decrease audio from the left speaker


NOTE

- For resetting all adjustment items to factory preset values, press ▲/▼ to select “Reset”, press **ENTER**, press ▲/▼ to select “Yes”, and then press **ENTER**.

Useful adjustment settings

Password setting for child lock (for TV input mode)

Allows you to use a password to protect certain settings from being accidentally changed.

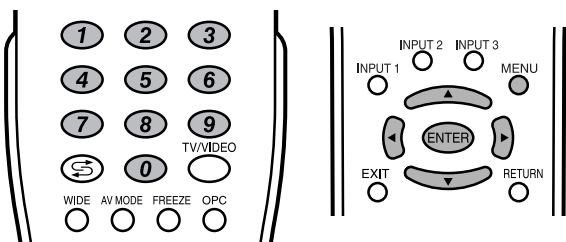

Setting a password

Register a 4-digit password number to use the Child Lock function.

1 Press **MENU** and the MENU screen displays.

2 Press **◀▶** to select "Setup".

3 Press **▲/▼** to select "Child Lock", and then press **ENTER**.

4 If you already set the password, enter it here.

5 Press **▲/▼** to select "Change Password", and then press **ENTER**.

Change Password	
Channel Setting	New Password - - - -
Reset	Reconfirm - - - -

6 Enter the 4-digit number as a password using **0 – 9**.

Change Password	
Channel Setting	New Password ■ - - -
Reset	Reconfirm - - - -

7 Enter the same 4-digit number as in step 6 to confirm.

NOTE

- To view a locked channel you must enter a password. When you select a locked channel, a password prompt message pops up.
- When no password is input for 20 seconds after the prompt message is displayed, the TV goes into standby mode.

Setting a channel

1 Repeat steps 1 to 4 in **Setting a password**.

2 Press **▲/▼** to select "Channel Setting", and then press **ENTER**.

3 Press **▲/▼** to select "Yes", and then press **ENTER**.

Change Password	
Channel Setting	Yes
Reset	No

4 Press **▲/▼/◀▶** to select the channel that you wish to apply the Child Lock, and then press **ENTER**.

- The Child Lock setting becomes effective only when the TV is turned off after the Child Lock is applied.

Resetting the password

Allows you to reset your password.

1 Repeat steps 1 to 4 in **Setting a password**.

2 Press **▲/▼** to select "Reset", and then press **ENTER**.

3 Press **▲/▼** to select "Yes", and then press **ENTER**.

Change Password	
Channel Setting	Yes
Reset	No


NOTE

- **As a precautionary measure, make a note of your password on the back of this operation manual, cut it out and keep it in a safe place that children cannot reach.**
- This function is only available for TV input mode.
- To relock a channel which has been temporarily unlocked by inputting the correct password, turn power off and then on again.

Useful adjustment settings

Input Label

You can assign each input source a label you like.

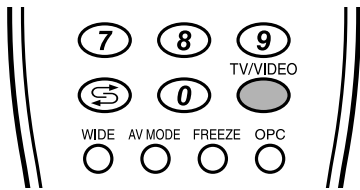

- 1 Press **TV/VIDEO** to select the desired input source.
- 2 Press **MENU** and the MENU screen displays.
- 3 Press **◀/▶** to select “Setup”.
- 4 Press **▲/▼** to select “Input Label”, and then press **ENTER**.
- 5 Press **▲/▼** to select characters and **◀/▶** to move to the desired digit to label the input source.
 - When you want to change the input label that you have already assigned to the default name, press **◀/▶** to move to “CLEAR” on the “Input Label” screen, and then press **ENTER**.
- 6 Repeat the above until the name is fully spelt out, and then press **MENU**.
 - The name can be 6 characters or less.
 - When you want to set an input source name of less than 6 characters, press **MENU** to exit from the labelling menu.



(Example)


NOTE

- You cannot change labels if the input source is TV.

Image position

For adjusting a picture's horizontal and vertical position.

- 1 Press **MENU** and the MENU screen displays.
- 2 Press **◀/▶** to select “Setup”.
- 3 Press **▲/▼** to select “Position”, and then press **ENTER**.
- 4 Press **▲/▼** to select “H-Pos.” or “V-Pos.”.
- 5 Press **◀/▶** to adjust the item to your desired position.

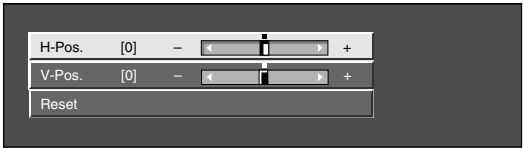

Selected item	Description
H-Pos.	Centres the image by moving it to the left or right.
V-Pos.	Centres the image by moving it up or down.

NOTE

- For resetting all adjustment items to the factory preset values, press **▲/▼** to select “Reset”, and then press **ENTER**.
- **Adjustments are stored separately according to input source.**
- Images may not be displayed properly depending on the settings and/or input signals.

Useful adjustment settings

Wide Screen Signalling (WSS)

WSS allows a television to switch automatically among the different screen formats.

- 1 Press **MENU** and the MENU screen displays.
- 2 Press ◀▶ to select “Setup”.
- 3 Press ▲▼ to select “WSS”, and then press **ENTER**.
- 4 Press ▲▼ to select “On” or “Off”, and then press **ENTER**.

NOTE

- Try to set WIDE mode if an image does not switch to the correct screen format. When the broadcast signal contains no WSS information, the function will not work even if enabled.

Picture aspect ratio

The WSS signal has 4:3 auto-switching that allows you to select between Normal and Panorama.

- 1 Press **MENU** and the MENU screen displays.
- 2 Press ◀▶ to select “Setup”.
- 3 Press ▲▼ to select “4:3 Mode”, and then press **ENTER**.
- 4 Press ▲▼ to select “Panorama” or “Normal”, and then press **ENTER**.

WSS signal 4:3 screen




4:3 mode “Panorama”




4:3 mode “Normal”



Selected item	Description
Panorama	Wide image without side bars
Normal	Normal range keeping 4:3 or 16:9 aspect ratio

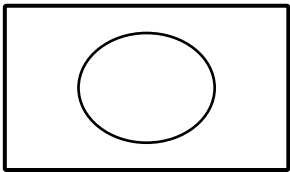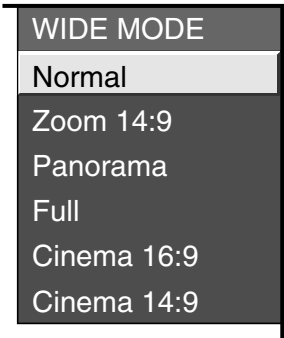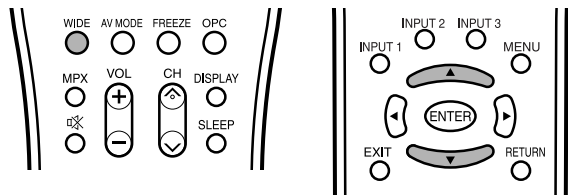

4:3 Mode set to "Panorama"

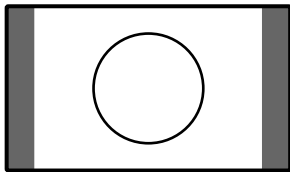

4:3 Mode set to "Normal"

WIDE mode (for TV/AV input mode)

Manual Selection

1

Press **WIDE**.

- The WIDE MODE menu displays.
- The menu lists the wide mode options selectable for the type of video signal currently received.

2

Press **WIDE** or **▲/▼** while the WIDE MODE menu displays on the screen.

- As you toggle down the options, each is immediately reflected on the TV.

Auto Selection

If you set "WSS" and "4:3 Mode" in the Setup menu on page 29, the optimum WIDE mode is automatically chosen for every broadcast containing the WSS information.

"WSS" menu

To enable Auto Selection, set "WSS" in the Setup menu to "On". (See page 29.)


"4:3 Mode" menu

To set the type of the wide screen, select "Panorama" or "Normal" in the 4:3 Mode menu. (See page 29.)

NOTE

- If the broadcast signal contains no WSS information, Auto Selection will not function even when the WSS option is enabled.

Selected item	Description
Normal	For 4:3 "standard" pictures. A side bar appears on each side.
Zoom 14:9	For 14:9 letterbox pictures. A thin side bar appears on each side, and you may also see bars on the top and bottom with some programmes.
Panorama	In this mode the picture is progressively stretched toward each side of the screen.
Full	For 16:9 squeeze pictures.
Cinema 16:9	For 16:9 letterbox pictures. Bars may appear on the top and bottom with some programmes.
Cinema 14:9	For 14:9 letterbox pictures. Bars may appear on the top and bottom with some programmes.

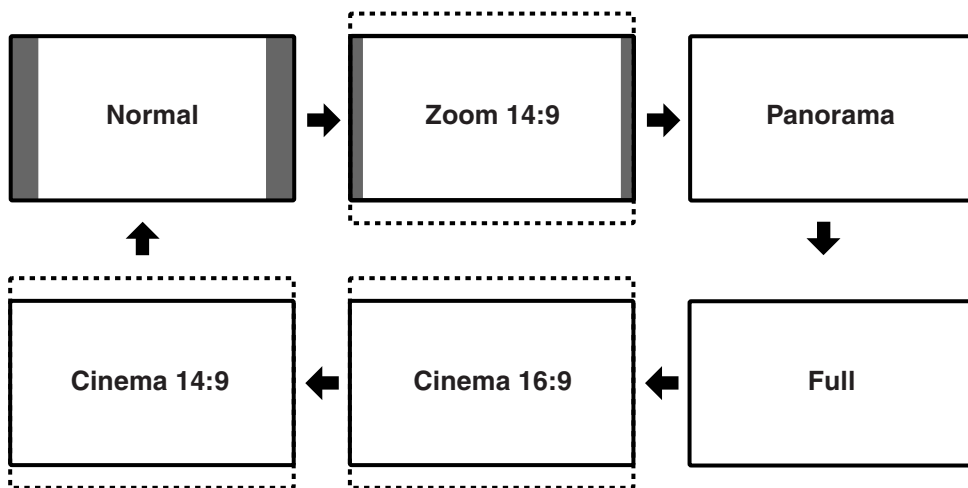

Useful adjustment settings

Language setting for on-screen display

You can also select a language from setup menu. Select from among 3 languages: English, Chinese and Arabic.

- 1 Press **MENU** and the MENU screen displays.
- 2 Press ◀▶ to select "Setup".
- 3 Press ▲▼ to select "Language", and then press **ENTER**.
- 4 Press ▲▼ to select the desired language listed on the screen, and then press **ENTER**.

Audio Only

When listening to music from a music programme, you can set the display off and enjoy audio only.

- 1 Press **MENU** and the MENU screen displays.
- 2 Press ◀▶ to select "Option".
- 3 Press ▲▼ to select "Audio Only", and then press **ENTER**.
- 4 Press ▲▼ to select "On", and then press **ENTER**.

Selected item	Description
On	Audio is output without screen image.
Off	Both screen images and audio are output.

NOTE

- When you make operations that change the picture on the TV such as by changing the input source, the Audio Only function is set to "Off".

DNR (Digital Noise Reduction)

Produces a clearer video image.

- 1 Press **MENU** and the MENU screen displays.
- 2 Press ◀▶ to select "Option".
- 3 Press ▲▼ to select "DNR", and then press **ENTER**.
- 4 Press ▲▼ to select the desired level, and then press **ENTER**.



Useful adjustment settings


Input Select

Selecting input source

Can use for selecting the input source.

Using TV/VIDEO on the remote control unit or on the TV

TV/VIDEO allows you to choose from the available input sources.

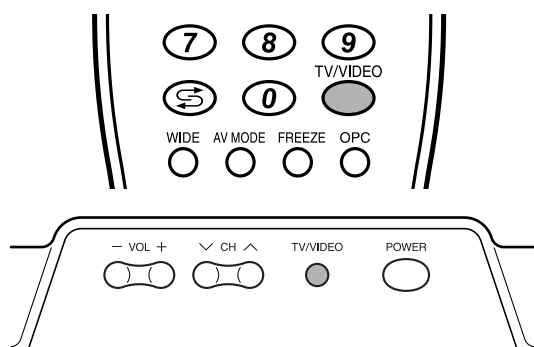


1 Press **TV/VIDEO** on the remote control unit or **TV/VIDEO** on the TV.

2 Press **TV/VIDEO** on the remote control unit or **TV/VIDEO** on the TV to select the input source.

- The image and sound from the selected input source are output on the TV.
- You can also select the input source by pressing **▲/▼**.

Using INPUT1, INPUT2 or INPUT3 on the remote control unit

INPUT1, INPUT2, or INPUT3 allows you to directly select the desired input source.

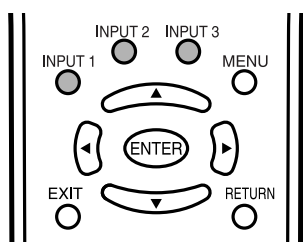

Press the desired input source button among **INPUT1, INPUT2 or INPUT3** on the remote control.

- The image and sound from the selected input source are output on the TV.

Selecting input signal type

For setting the signal type of external equipment.

1 Press **MENU** and the MENU screen displays.

2 Press **◀/▶** to select “Option”.

3 Press **▲/▼** to select “Input Select”, and then press **ENTER**.

4 Press **▲/▼** to select “Input1”, and then press **ENTER**.

5 Press **▲/▼** to select a signal type you want to set, and then press **ENTER**.

Input source	Selectable item
Input 1	Auto, Component, Video

NOTE

- If no (colour) image displays, try to change the other signal type.
- Check the operation manual of the external equipment for the signal type.
- When the signal type is set to “Auto”, the input terminal where cable is connected is automatically selected.
- When the signal type is set to “Auto” and multiple video signal cables are connected, the signal type is selected in the following prioritised order:
Input 1: Component→ Video

Useful adjustment settings

Blue Screen

Automatically turns the screen blue if no broadcast signal is received.

- 1 Press **MENU** and the MENU screen displays.
- 2 Press ◀/▶ to select "Option".
- 3 Press ▲/▼ to select "Blue Screen", and then press **ENTER**.
- 4 Press ▲/▼ to select "On", and then press **ENTER**.

Colour system setting

You can change the colour system to one that is compatible with the image on the screen.

- 1 Press **MENU** and the MENU screen displays.
- 2 Press ◀/▶ to select "Option".
- 3 Press ▲/▼ to select "Colour System", and then press **ENTER**.
- 4 Press ▲/▼ to select a compatible video signal system of your equipment, and then press **ENTER**.



NOTE

- Factory preset value is "AUTO".
- If "AUTO" is selected, colour system for each channel is automatically set. If an image does not display clearly, select another colour system (e.g. PAL, NTSC 4.43).

Power Control

Power Control setting allows you to save energy.

No Signal Off

When set to "Enable", the power will automatically shut down if no signal inputs for 15 minutes.

- 1 Press **MENU** and the MENU screen displays.
- 2 Press ◀/▶ to select "Option".
 - Power control menu displays.
- 3 Press ▲/▼ to select "Power Control", and then press **ENTER**.
- 4 Press ▲/▼ to select "No Signal Off", and then press **ENTER**.
- 5 Press ▲/▼ to select "Enable", and then press **ENTER**.
 - Five minutes before the power shuts down, remaining time displays every minute.

NOTE

- "Disable" is factory preset value.
- When a TV programme finishes, and the TV receives signal input, this function may not operate.

No Operation Off

When set to "Enable", the power will automatically shut down if there is no operation for 3 hours.

- 1 Press **MENU** and the MENU screen displays.
- 2 Press ◀/▶ to select "Option".
 - Power control menu displays.
- 3 Press ▲/▼ to select "Power Control", and then press **ENTER**.
- 4 Press ▲/▼ to select "No Operation Off", and then press **ENTER**.
- 5 Press ▲/▼ to select "Enable", and then press **ENTER**.
 - Five minutes before the power shuts down, remaining time displays every minute.

NOTE

- "Disable" is factory preset value.

Useful adjustment settings

HDMI Setup

HDMI (High-Definition Multimedia Interface) terminal selection.

NOTE


- Refer to your external equipment operation manual for the signal type.
- When connecting a DVI-HDMI conversion adaptor/cable to the HDMI terminals, the image may not come in clearly.

1 To watch an HDMI equipment image, select “INPUT3” using **TV/VIDEO** on the remote control unit or on the TV.

2 Press **MENU** and the MENU screen displays.

3 Press ◀▶ to select “Option”.

4 Press ▲/▼ to select “HDMI Setup”, and then press **ENTER**.
• The HDMI Setup can be selected only when “INPUT3” is selected.

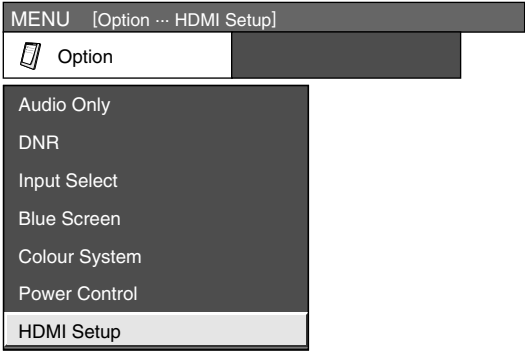

5 Press ▲/▼ to select the desired item or setting, and then press **ENTER**.

HDMI Setup items	Selectable items	Description
Signal Type	RGB/ YCbCr4:4:4/ YCbCr4:2:2	Select the video signal type from the HDMI terminal. User settings for this item are normally in effect only when the TV is connected with a DVI-HDMI conversion cable. When connected to an HDMI device, the TV automatically detects the “Signal Type” and ignores user settings before operating.
Colour Matrix	Auto/ ITU601/ ITU709	Select the video colour matrix type when a YCbCr signal is input. Select the YCbCr colour system when a YCbCr signal is input. When an RGB signal is input, the settings for this item are ignored. “Auto” should normally be selected.
Auto View	Enable/ Disable	Set whether or not to use WIDE MODE based on signal recognition, including an HDMI signal.
Audio Select	Digital/ Analogue	Select “Digital” for audio signal via the HDMI terminal. Select “Analogue” for audio signal via the AUDIO jack. (selectable only when using INPUT3 [HDMI] terminals.)

Useful features


Teletext function

What is Teletext?

Teletext broadcasts pages of information and entertainment to specially equipped television sets. Your TV receives Teletext signals broadcast by a TV network, and decodes them into graphical format for viewing. News, weather reports, sports information, stock exchange prices and programme previews are among the many services available.


Teletext mode

Teletext is turned on/off with  on the remote control unit. You can operate your TV in Teletext mode directly by inputting commands with the remote control unit.

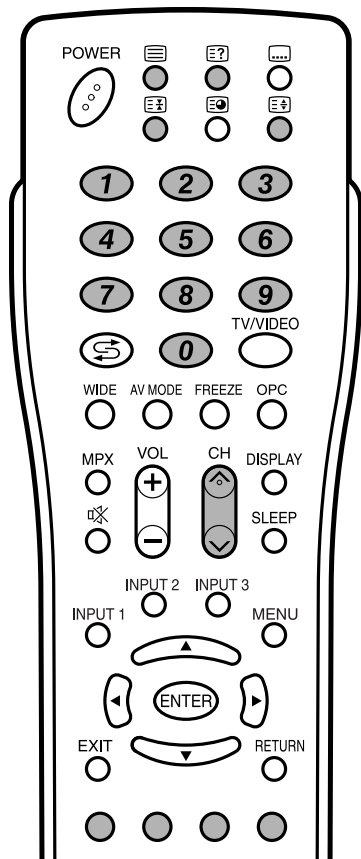

Turning on and off Teletext

- 1** Select a TV channel or external input source providing the Teletext programme.
- 2** Press  to display the Teletext.
- 3** Press  again to display the Teletext on the right screen and normal image on the left screen.
 - Each time you press , the screen switches as shown upper right.
 - If you select a programme with no Teletext signal, "No Teletext available." is displayed.

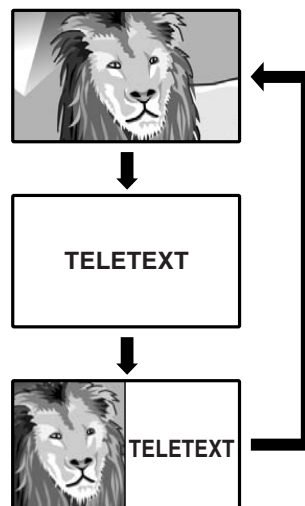


When viewing the Teletext information

- Press **CH**  to increase the page number.
- Press **CH**  to decrease the page number.

Button functions

Colour (RED/GREEN/YELLOW/BLUE):

You can select a group or block of pages displayed in the coloured brackets at the bottom of the screen by pressing the corresponding **Colour (RED/GREEN/YELLOW/BLUE)** on the remote control unit.

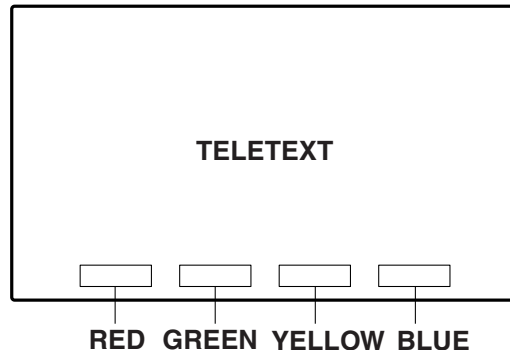


0 – 9:

Directly select any page from 100 to 899 by using **0 – 9**.

:

Each time you press , the TELETEXT image switches as shown below.

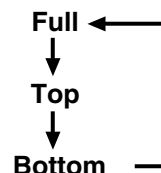

:

To reveal hidden information such as an answer to a quiz, press .

- Press  again to hide the information.

:


To stop updating Teletext pages automatically, press .

- Press  again to release the hold mode.

Useful features

Displaying Subtitle

You can display several subtitles as they are transmitted.

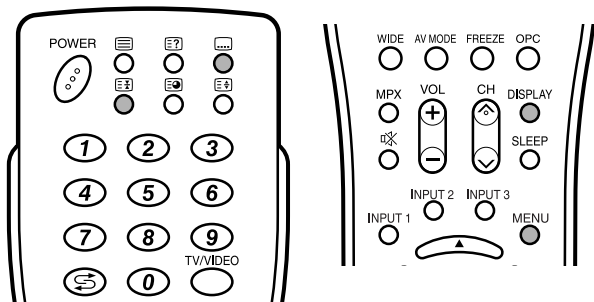

- 1 Press to display the subtitle.
 - Subtitle is updated by information sent by the broadcasting station.
 - To stop updating subtitle automatically, press .


- 2 Press to exit the subtitle screen.

NOTE

- Subtitle will not be displayed when the service does not contain the subtitle information.


Displaying Subpages

You can display several subpages as they are transmitted.

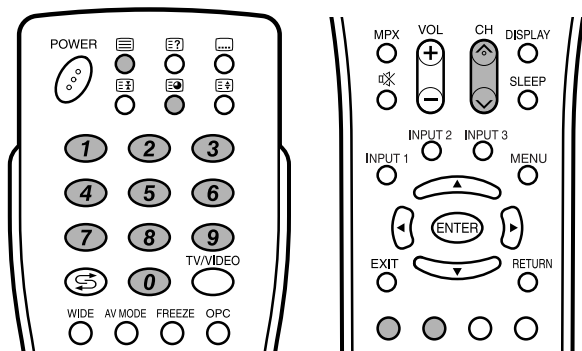

- 1 Press to display Teletext.
- 2 Press to display the subpage as shown below.

 Subpage screen



- 3 Select the desired subpage by using .
 - 0 – 9 directly selects the desired subpage.
- 4 Press to exit the subpage screen.

Teletext language setting

If Teletext information does not display correctly, perform the setting procedure below.


Select from among 4 kinds of language tables: West Europe, East Europe, Turkish/Greek, Arabic/Hebrew. Each table is compatible with the Teletext languages listed below.

- 1 Press **MENU** and the MENU screen displays.

- 2 Press to select “Setup”.

- 3 Press to select “Text Language”, and then press **ENTER**.

- 4 Press to select receivable teletext broadcasting language in your country, and then press **ENTER**.

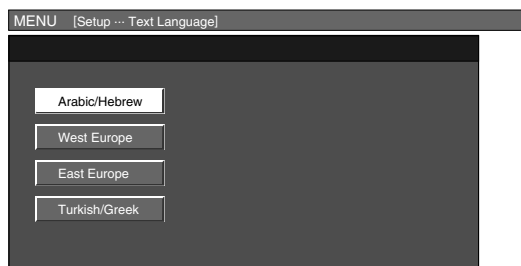

NOTE


- Teletext can display only when it is sent by a network. Not used to convert between languages.

Using external equipment

You can connect many types of external equipment to your TV, like a VCR, DVD player, HDTV tuner, game console and camcorder. To view external source images, select the input source from **TV/VIDEO** on the remote control unit or **TV/VIDEO** on the TV.

Displaying an external equipment image

Explanation here is for the setting when connecting DVD to INPUT1 terminal.

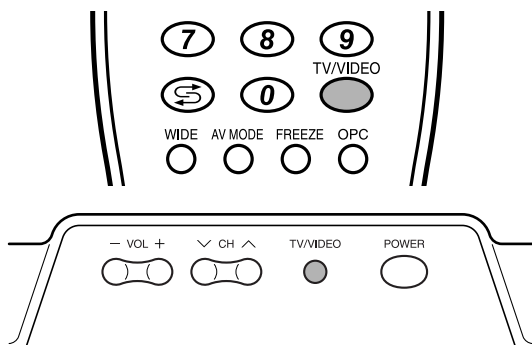

CAUTION

- To protect all equipment, always turn off the TV before connecting to a VCR, DVD player, HDTV tuner, game console, camcorder or other external equipment.


NOTE

- See pages 37 to 39 for external equipment connection.
- Please refer to the relevant operation manual (VCR, DVD player, etc.) carefully before making connections.
- Each time **TV/VIDEO** is pressed, the input source toggles.
- If the image does not come in clearly, you may need to change the input signal type setting on the "Input Select" menu.
- Refer to your external equipment operation manual for the signal type.

Displaying a DVD image (Example)

1


To watch a DVD image, select "INPUT1" using **TV/VIDEO** on the remote control unit or **TV/VIDEO** on the TV.

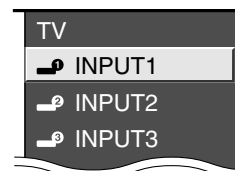

2

Select the desired signal type on "Input Select" in the "Option" menu. (See page 32.)

For INPUT1 signal

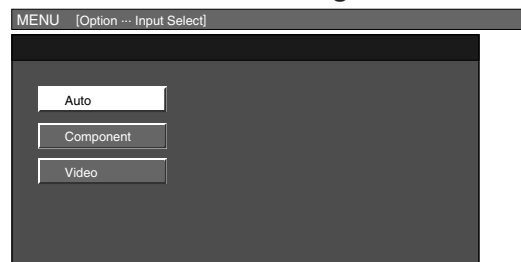


The setting is stored and can be selected.

Connecting a VCR

You can use the INPUT 2 terminal when connecting a VCR and other audiovisual equipment.

To watch an image from this input terminal, you need to select the input source (see page 37) and the input signal type (see page 32).

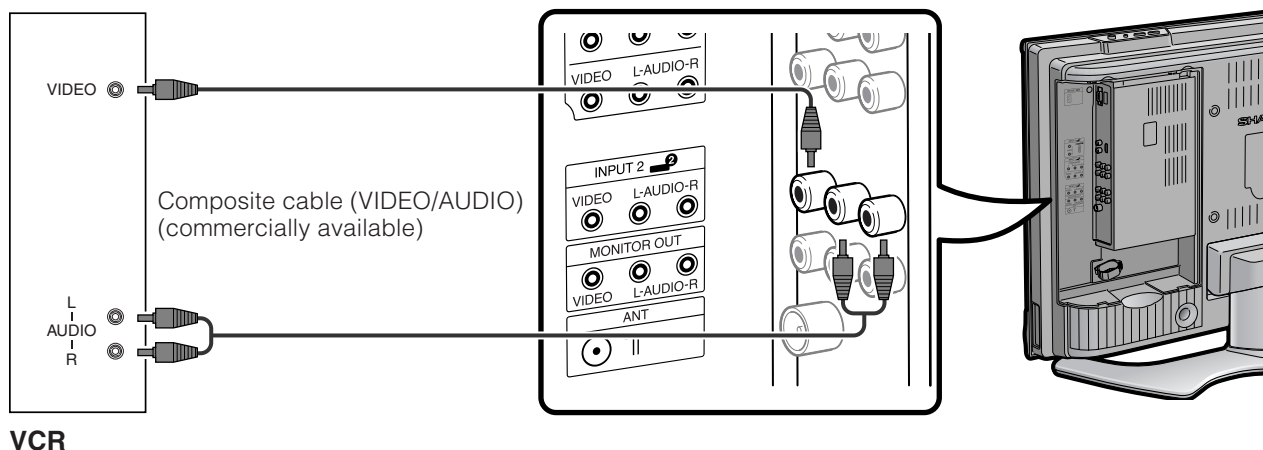


Using external equipment

Connecting a DVD player

You can use the INPUT 1 or INPUT 3 (HDMI) terminal when connecting to a DVD player and other audiovisual equipment.

NOTE

- When using a DVI-HDMI conversion adaptor, input the Audio Signal from the AUDIO terminal of INPUT 3.

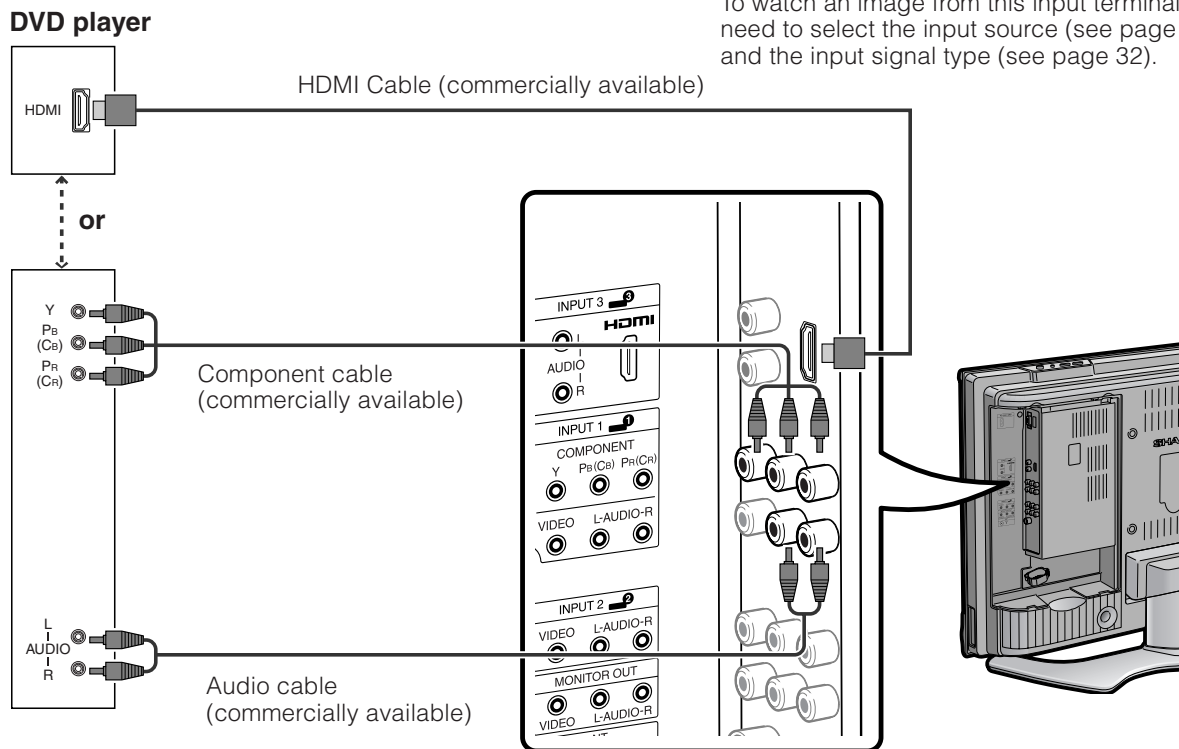

To watch an image from this input terminal, you need to select the input source (see page 37) and the input signal type (see page 32).


When using component cable, select "Component" for "Input Select" in the menu.

Connecting a game console or camcorder

A game console, camcorder and some other audiovisual equipment are conveniently connected using the INPUT 2 terminals.

NOTE

- You can also connect the game console to INPUT 1 terminals to enjoy clearer picture.

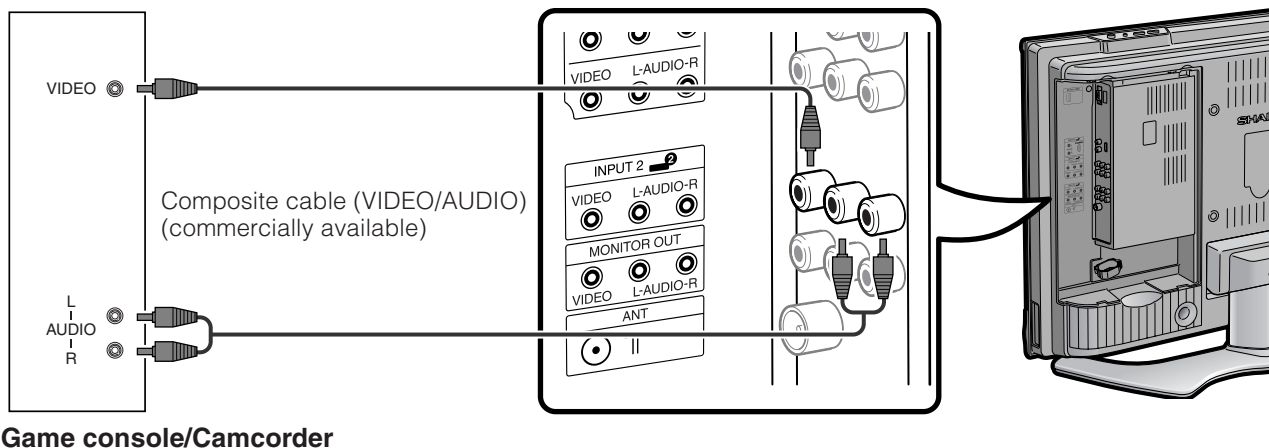


To watch an image from this input terminal, you need to select the input source (see page 37) and the input signal type (see page 32).

Using external equipment

Connecting an HDTV tuner

You can use the INPUT1 terminal when connecting to an HDTV tuner and other audiovisual equipment.

To watch an image from this input terminal, you need to select the input source (see page 37) and the input signal type (see page 32).

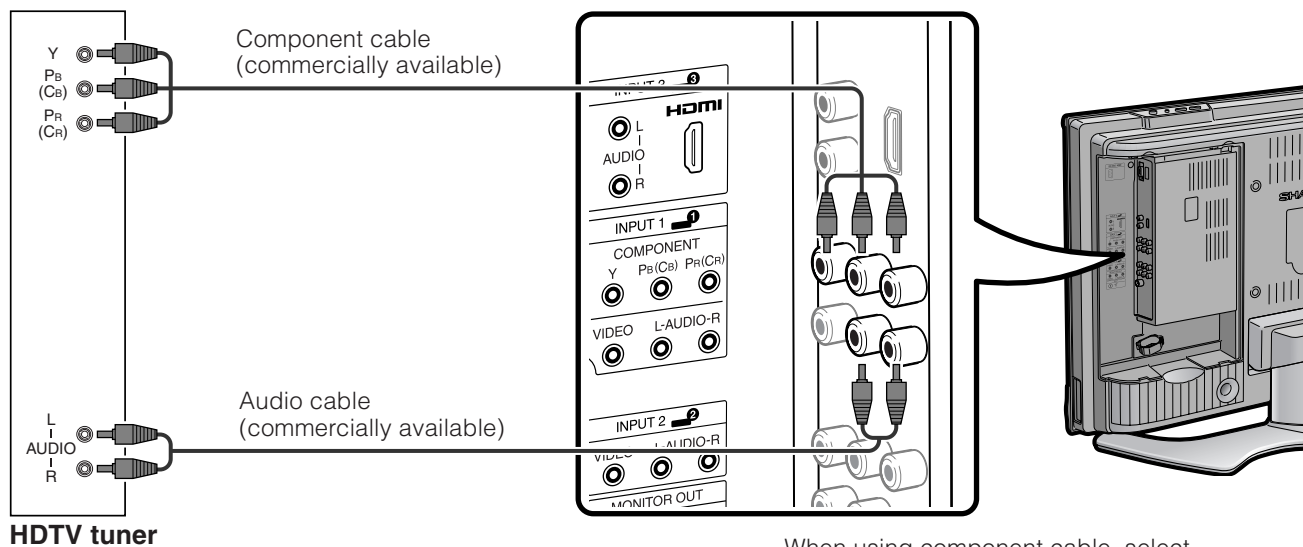

Appendix

Troubleshooting

Problem	Possible Solution
No power.	- Check if you pressed POWER on the remote control unit. (See page 13.) If the indicator on the TV lights up red, press POWER. - Is the AC cord disconnected? (See page 6.) - Has the power been turned on? (See page 13.)
Unit cannot be operated.	External influences such as lightning, static electricity, etc., may cause improper operation. In this case, operate the unit after first turning the power off the TV or unplugging the AC cord and re-plugging it in after 1 or 2 minutes.
Remote control unit does not operate.	- Are batteries inserted with polarity (+, -) aligned? (See page 5.) - Are batteries worn out? (Replace with new batteries.) - Are you using it under strong or fluorescent lighting? - Is a fluorescent light illuminated to remote control sensor?
Picture is cut off.	- Is the image position correct? (See page 28.) - Are screen mode adjustments such as picture size made correctly? (See pages 29 to 30.)
Strange colour, light colour, or dark, or colour misalignment.	- Adjust the picture tone. (See pages 23 to 25 and 31.) - Is the room too bright? The picture may look dark in a room that is too bright. - Check the colour system setting. (See pages 19 and 33.) - Check the input signal setting. (See page 32.)
Power is suddenly turned off.	- The unit's internal temperature has increased. Remove any objects blocking vent or clean. - Check the power control setting. (See page 33.) - Is sleep timer set? (See page 15.)
No picture.	- Is connection to other equipment correct? (See pages 37 to 39) - Has input signal setup been done correctly after connection? (See page 32.) - Is the correct input selected? (See page 32.) - Is picture adjustment correct? (See pages 23 to 25.) - Is the antenna connected properly? (See page 8.) - Is "On" selected in "Audio Only"? (See page 31.)
No sound.	- Is the volume too low? (See page 15.) - Make sure that headphones are not connected. (See page 10.)

Cautions regarding use in high and low temperature environments

- When the unit is used in a low temperature space (e.g. room, office), the picture may leave trails or appear slightly delayed. This is not a malfunction, and the unit will recover when the temperature returns to normal.
 - Do not leave the unit in a hot or cold location. Also, do not leave the unit in a location exposed to direct sunlight or near a heater, as this may cause the cabinet to deform and the LCD panel to malfunction.
- Storage temperature: -20°C to +60°C.

RS-232C port specifications

PC Control of the TV

- When a program is set, the TV can be controlled from the PC using the RS-232C terminal.
The input signal (PC/video) can be selected, the volume can be adjusted and various other adjustments and settings can be made, enabling automatic programmed playing.
- Attach an RS-232C cable cross-type (commercially available) to the supplied Din/D-sub RS-232C for the connections.

NOTE

- This operation system should be used by a person who is accustomed to using PCs.

Communication conditions


Set the RS-232C communications settings on the PC to match the communications conditions of the TV. The communications settings of the TV are as follows:

Baud rate:	9,600 bps
Data length:	8 bits
Parity bit:	None
Stop bit:	1 bit
Flow control:	None

Communication procedure

Send the control commands from the PC via the RS-232C connector.
The TV operates according to the received command and sends a response message to the PC.
Do not send multiple commands at the same time. Wait until the PC receives the OK response before sending the next command.

Command format

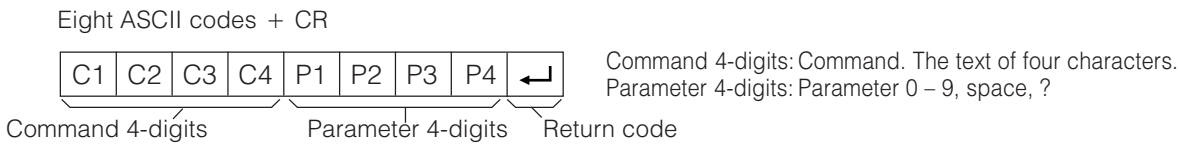

Parameter

Input the parameter values, aligning left, and fill with space(s) for the remainder. (Be sure that four values are input for the parameter.)
When the input parameter is not correct, "ERR" returns. (Refer to "Response code format".)

0			
0	0	0	9
–	3	0	
1	0	0	
0	0	5	5

When "?" is input for some commands, the present setting value responds.

?			
?	?	?	?

Appendix

Response code format

Normal response



Return code (0DH)

Problem response (communication error or incorrect command)



Return code (0DH)

Commands

- Commands not indicated here are not guaranteed to operate.

CONTROL ITEM	COMMAND	PARAMETER	CONTROL CONTENTS
POWER SETTING	P O W R	0 _ _ _	POWER OFF (STANDBY)
INPUT SELECTION A	I T G D	_ _ _ _	INPUT SWITCHING (TOGGLE)
	I A V D	* _ _ _	INPUT1 – 3 0: TV
CHANNEL	D C C H	* _ _ _	TV DIRECT CHANNEL (1 – 99)
	C H U P	_ _ _ _	CHANNEL UP
	C H D W	_ _ _ _	CHANNEL DOWN
INPUT SELECTION B	I N P 1	0 _ _ _	INPUT1 (AUTO)
	I N P 1	1 _ _ _	INPUT1 (COMPONENT)
	I N P 1	3 _ _ _	INPUT1 (VIDEO)
	I N P 2	0 _ _ _	INPUT2 (AUTO)
	I N P 2	1 _ _ _	INPUT2 (COMPONENT)
	I N P 2	3 _ _ _	INPUT2 (VIDEO)
	I N P 3	0 _ _ _	INPUT3 (AUTO)
	I N P 3	2 _ _ _	INPUT3 (S-VIDEO)
VOLUME	V O L M	* _ _ _	VOLUME (0 – 60)
	H P O S	* _ _ _	H-POSITION (AV) (– 10 – 10)
POSITION	V P O S	* _ _ _	V-POSITION (AV) (– 20 – 20)

CONTROL ITEM	COMMAND	PARAMETER	CONTROL CONTENTS
WIDE MODE	W I D E	0 _ _ _	TOGGLE
	W I D E	1 _ _ _	NORMAL
	W I D E	2 _ _ _	ZOOM 14:9
	W I D E	3 _ _ _	PANORAMA
	W I D E	4 _ _ _	FULL
	W I D E	5 _ _ _	CINEMA 16:9
MUTE	W I D E	6 _ _ _	CINEMA 14:9
	M U T E	0 _ _ _	TOGGLE
	M U T E	1 _ _ _	ON
AUDIO CHANGE	M U T E	2 _ _ _	OFF
	A C H A	_ _ _ _	TOGGLE
SLEEP TIMER	O F T M	0 _ _ _	OFF
	O F T M	1 _ _ _	SLEEP TIMER 30 MIN
	O F T M	2 _ _ _	SLEEP TIMER 1 HOUR
	O F T M	3 _ _ _	SLEEP TIMER 1 HOUR 30 MIN
	O F T M	4 _ _ _	SLEEP TIMER 2 HOUR
	O F T M	5 _ _ _	SLEEP TIMER 2 HOUR 30 MIN

NOTE

- If an underbar (_) appears in the parameter column, enter a space.
- If an asterisk (*) appears, enter a value in the range indicated in brackets under CONTROL CONTENTS.

Specifications

Item		Model	LC-32AX5X
LCD panel			32" (80 cm) Advanced Super View & BLACK TFT LCD
Number of dots			3,147,264 dots (1366 × 768 × 3 dots)
Video Colour System			PAL/SECAM/NTSC 3.58/NTSC 4.43/PAL 60
TV Function	TV-Standard		PAL: B/G, D/K, I SECAM: B/G, D/K, K/K ₁ NTSC: M
	Receiving Channel	VHF/UHF	44.25-863.25 MHz
		CATV	S1-S41ch (including Hyperband)
	TV-Tuning System		Auto Preset 99 ch
	STEREO/BILINGUAL		NICAM: B/G, I, D/K A2 stereo: B/G
Brightness			450 cd/m ²
Backlight life			60,000 hours (at Backlight Standard position)
Viewing angles			H : 176° V : 176°
Audio amplifier			10W × 2
Speakers			Ø 6.5 cm 4pcs
Terminals	Rear	ANTENNA IN	UHF/VHF 75 Ω DIN type
		INPUT 1	VIDEO in, AUDIO in, COMPONENT in (480I, 580I, 480P, 580P, 1080I/50Hz, 1080I/60Hz, 720P/60Hz)
		INPUT 2	VIDEO in, AUDIO in
		INPUT 3	HDMI (HDMI input) (480P, 580P, 1080I/50Hz, 1080I/60Hz, 720P/60Hz), AUDIO in
		MONITOR OUTPUT	VIDEO out, AUDIO out
		RS-232C	9 pin D-sub male connector
	Front	Headphones	Ø 3.5mm jack (Audio output)
OSD language			English/Chinese/Arabic
Power Requirement			AC 110-240 V, 50 Hz
Power Consumption			158 W (0.8 W Standby) (Method IEC60107)
Weight			17.4 kg (without stand) 20.7 kg (with stand)
Operating Temperature			0°C - 40°C

- As a part of policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

Optional accessory

The listed optional accessory is available for the LCD colour TV. Please purchase it at your nearest shop.

- Additional optional accessories may be available in the near future. When purchasing, please read the newest catalogue for compatibility and check the availability.


Part name	Part number
Wall mount bracket	AN-37AG2

Password

--	--	--	--

Dimensional drawings

Unit: mm

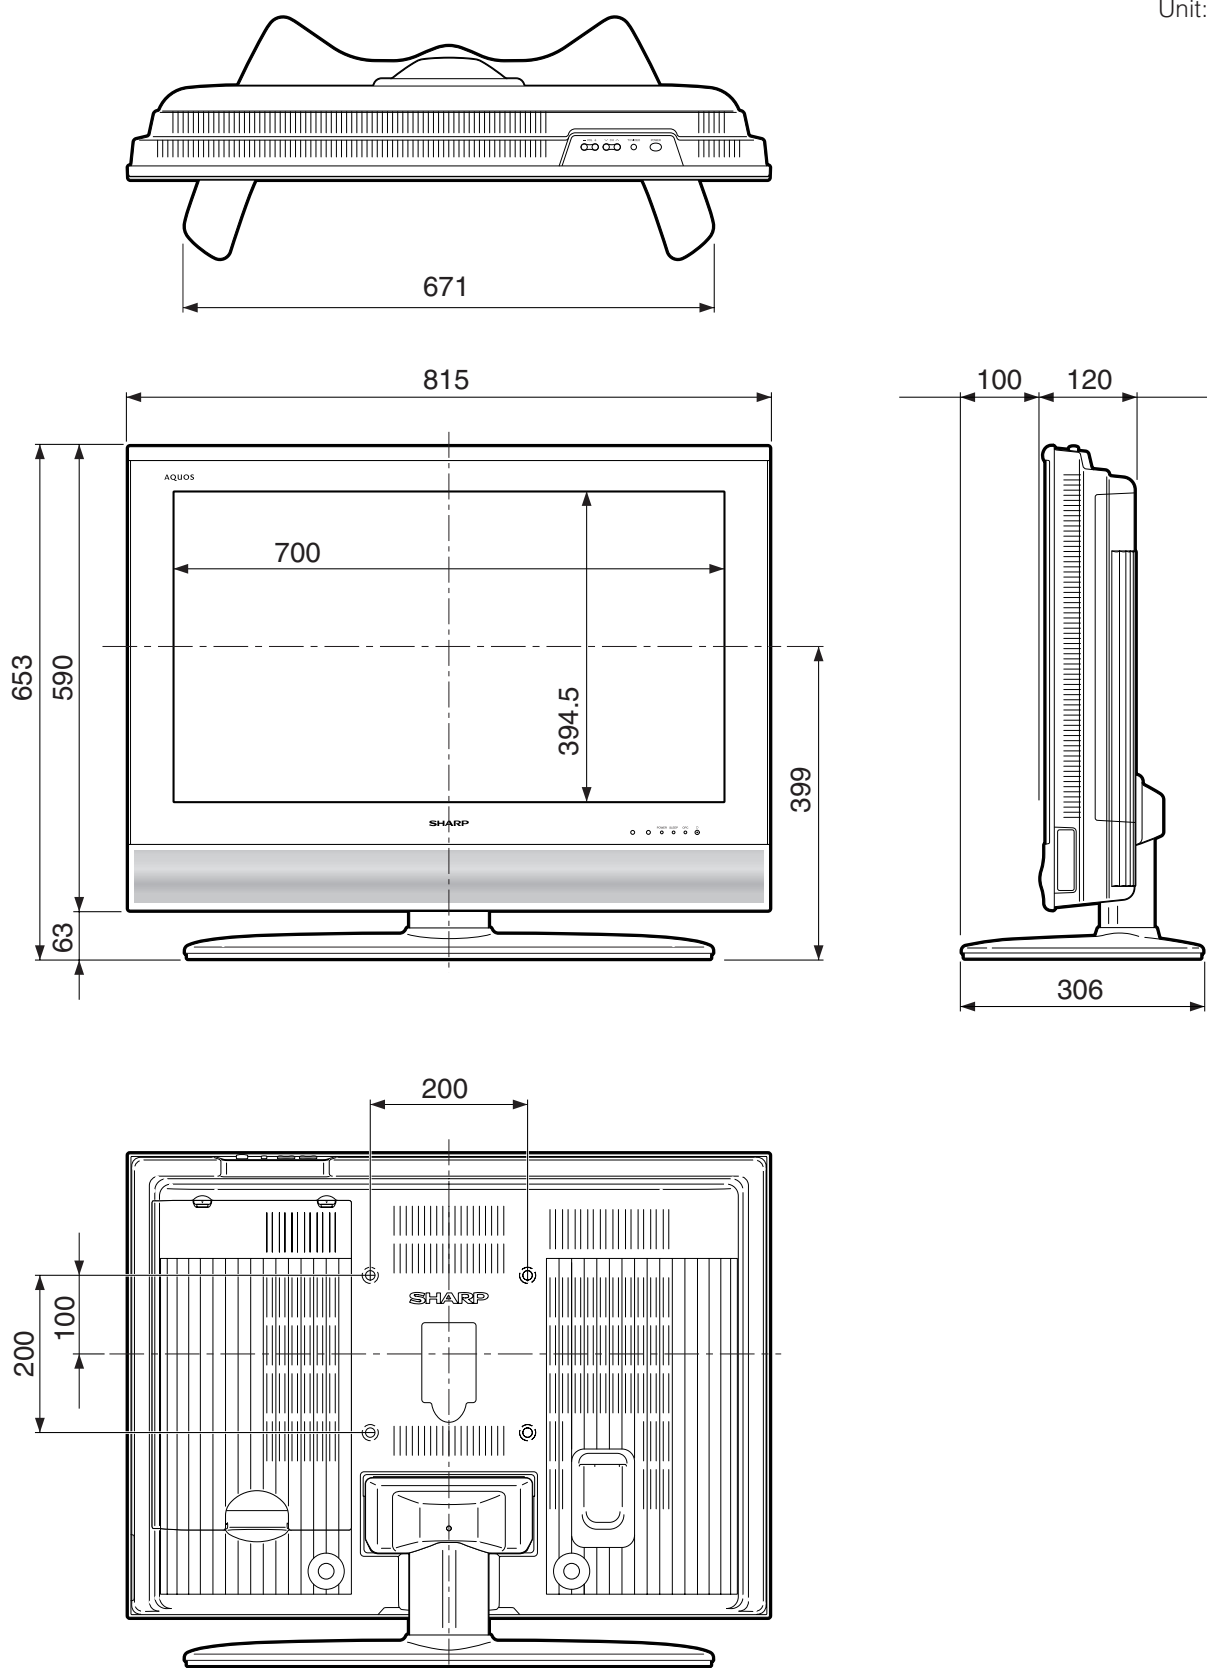

SHARP

FOR LOCATION ENQUIRIES WITHIN

AUSTRALIA

REGARDING YOUR LOCAL

SHARP APPROVED SERVICE CENTRE

VISIT OUR WEBSITE AT

www.sharp.net.au

OR CALL SHARP CUSTOMER CARE

1300 135 022

(LOCAL CALL COST APPLY WITHIN AUSTRALIA)

SHARP CORPORATION OF AUSTRALIA PTY LTD

SHARP

FOR LOCATION ENQUIRIES WITHIN

NEW ZEALAND

REGARDING YOUR LOCAL

SHARP APPROVED SERVICE CENTRE

VISIT OUR WEBSITE AT

www.sharp.net.nz

CONTACT YOUR SELLING DEALER/RETAILER

OR CALL

SHARP CUSTOMER SERVICES

TELEPHONE: 09 573 0111

FACSIMILE: 09 573 0113

SHARP CORPORATION OF NEW ZEALAND LIMITED

SHARP

WARRANTY

Consumer Electronic Products

Congratulations on Your Purchase!

This Sharp product is warranted against faults in materials and manufacture for a period of twelve (12) months from the date of original purchase.

If service is required during the warranty period, please contact your nearest Sharp Approved Service Centre. These repairs would be carried out at no charge to the owner, subject to the conditions specified herein.

The owner is responsible for any transportation and insurance costs if the product has to be returned for repair.

This warranty does not extend to accessories or defects or injuries caused by or resulting from causes not attributable to faulty parts or the manufacture of the product, including but not limited to, defect or injury caused by or resulting from misuse, abuse, neglect, accidental damage, improper voltage, liquid spillage, vermin infestation, software, or any alterations made to the product which are not authorised by Sharp.

Please retain your sales documentation, as this should be produced to validate a warranty claim.

This warranty is in addition to and in no way limits, varies or excludes any express and implied rights and remedies under any relevant legislation in the country of sale.

IMPORTANT

DO NOT RETURN THIS DOCUMENT TO SHARP

For your reference, please enter the particulars of your purchase below and retain, with your purchase documentation.

Model No. _____

Serial No. _____

Date of Purchase _____

Retailer _____

SHARP
SHARP CORPORATION OF
AUSTRALIA PTY. LIMITED
ABN 40 003 039 405
1 Huntingwood Drive
Huntingwood NSW2148
SHARP CORPORATION OF
NEW ZEALAND LIMITED
59 Hugo Johnston Drive
Penrose, Auckland
SPform030 (JUNE 2004)

IMPORTANT NOTICE: This warranty applies only to products sold in Australia & New Zealand

SHARP®

SHARP CORPORATION



Printed on post-consumer recycled paper.

Printed in Malaysia
TINS-C619WJZZ
06P08-MA-NG