

**vtech**<sup>®</sup>  
Innovation Beyond Technology™



# User's manual

[www.vtech.com](http://www.vtech.com)

Model: VT1047/  
VT1047-2

**DECT**

# Table of contents

<b>1. IMPORTANT SAFETY INSTRUCTIONS.....</b>	<b>1</b>		
<b>2. INSTALLING YOUR PHONE .....</b>	<b>2</b>		
2.1 Package contents.....	2		
2.2 Location.....	2		
2.3 Connecting the base station.....	2		
2.4 Installing and charging the batteries .....	4		
<b>3. GETTING TO KNOW YOUR PHONE.....</b>	<b>5</b>		
3.1 Overview of the Handset.....	5		
3.2 Base Station Overview.....	6		
3.3 Display Icons and Symbols .....	7		
3.4 Menu Structure.....	9		
3.5 Text and Digit Entry Table.....	9		
3.5.1 Latin Character Set.....	10		
<b>4. USING YOUR PHONE.....</b>	<b>11</b>		
4.1 Make a Call .....	11		
4.1.1 Preparatory Dialing.....	11		
4.1.2 Direct Dialing .....	11		
4.1.3 Call from the phonebook .....	11		
4.1.4 Call from the Call List .....	11		
4.1.5 Call from the redial list .....	11		
4.1.6 Call timer .....	11		
4.2 Answer a Call .....	12		
4.3 End a Call.....	12		
4.4 Adjust Earpiece and Handsfree Volume .....	12		
4.5 Mute a Call .....	12		
4.6 Set the Silent Mode.....	13		
4.7 Keypad Lock / Unlock .....	13		
4.8 Redial the last number .....	13		
4.8.1 Redial a Number from the Redial List .....	13		
4.8.2 Store a Redial Number into the Phonebook.....	14		
4.8.3 Delete a Redial Number.....	14		
4.8.4 Delete the Entire Redial List .....	14		
4.9 Find the Handset.....	15		
4.10 Make an Internal Call (For VT1047-2).....	15		
4.10.1 Intercom Another Handset.....	15		
4.10.2 Call All Handsets.....	15		
4.10.3 Transfer an External Call to another handset.....	16		
4.10.4 Make a 3-way Conference Call.....	16		
<b>5. PRIVATE PHONEBOOK.....</b>	<b>17</b>		
5.1 Add a New Phonebook Entry .....	17		
5.2 Search a Phonebook Entry .....	17		
5.3 View a Phonebook Entry .....	18		
5.4 Edit a Phonebook Entry.....	18		
5.5 Delete a Phonebook Entry .....	18		
5.6 Delete the Entire Private Phonebook .....	19		
5.7 Check the Phonebook Usage.....	19		
<b>6. CALLER DISPLAY (NETWORK DEPENDENT) .....</b>	<b>20</b>		
6.1 View the Call List.....	20		
6.2 Store a Call List Number into the Phonebook .....	20		
6.3 Delete an entry in the Call List .....	21		
6.4 Delete the entire list of the Call List.....	21		
6.5 View the Details of the Call List Entry.....	21		

# Table of contents

<b>7. PHONE SETTINGS .....</b>	<b>22</b>	<b>8. DEFAULT SETTINGS .....</b>	<b>32</b>
7.1 Date and Time Settings.....	22	<b>9. TROUBLESHOOTING .....</b>	<b>33</b>
7.1.1 Change the Date Format .....	22	<b>10. TECHNICAL SPECIFICATIONS.....</b>	<b>34</b>
7.1.2 Change the Time Format.....	22		
7.1.3 Set the Time .....	23		
7.1.4 Set the Date.....	23		
7.2 Alarm Settings.....	23		
7.2.1 Turn on/off the Alarm.....	24		
7.2.2 Set the Alarm Time (if the Alarm is set to be ON) .....	24		
7.3 Handset Settings.....	25		
7.3.1 Set the Ringer Melody for Internal Calls.....	25		
7.3.2 Set the Ringer Melody for External Calls .....	25		
7.3.3 Set the Ringer Volume .....	26		
7.3.4 Set Alert Tones.....	26		
7.3.5 Set the Handset Language.....	27		
7.3.6 Rename the Handset.....	27		
7.3.7 Choose the Information to be displayed in idle .....	27		
7.3.8 Set the Auto Answer.....	28		
7.4 Base Settings.....	28		
7.4.1 De-register a Handset .....	28		
7.4.2 Change the dial mode .....	29		
7.4.3 Change the Flash Time .....	29		
7.4.4 Change the System PIN Code .....	29		
7.4.5 ECO Mode Setting.....	30		
7.5 Registration .....	30		
7.6 Reset Your Phone.....	31		

# 1. IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all the instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
5. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
6. Unplug this product from the wall outlet and refer servicing to VTech under the following conditions:
  - When the power supply cord or plug is damaged or frayed.
  - If the product does not operate normally by following the operating instructions.
  - If the product has been dropped and the cabinet has been damaged.
  - If the product exhibits a distinct change in performance.
7. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
8. Do not use the telephone to report a gas leak in the vicinity of the leak.
9. Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities.
10. The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or unit damages. The manufacturer will not be held liable for damage arising from such non-compliance.
11. Do not use third party charging bays. The batteries may be damaged.
12. Please note the correct polarity while inserting the batteries.
13. Do not immerse batteries in water, do not place in fire.

If you have questions about this product, or having difficulty with setup or operation, call our VTech Electronics (HK) Ltd. Customer Service Centre Tel: 852-2776 3223  
Technical Inquiry Hotline Tel: 852-2667 7433

## 2. INSTALLING YOUR PHONE

### 2.1 Package contents

The package for VT1047/VT1047-2 contains the following items:

#### VT1047

- 1 Handset
- 1 Base station
- 1 AC power adapter
- 1 Telephone line cord
- 2 rechargeable batteries
- 1 Chinese user manual
- 1 English user manual

#### VT1047-2


- 2 Handsets
- 1 Base station
- 1 Charger with AC power adapter
- 1 Telephone line cord
- 4 rechargeable batteries
- 1 Chinese user manual
- 1 English user manual

### 2.2 Location

The maximum range between the base station and the handset is approximately 300 meters. Depending on the surrounding conditions as well as spatial and structural factors, the range may be reduced. The range indoors is normally less than outdoors.

## 2.3 Connecting the base station

1. Plug the power supply & line cord into the base station.
2. Plug the power supply & line cord into the wall socket.
3. Always use the cables provided in the box.

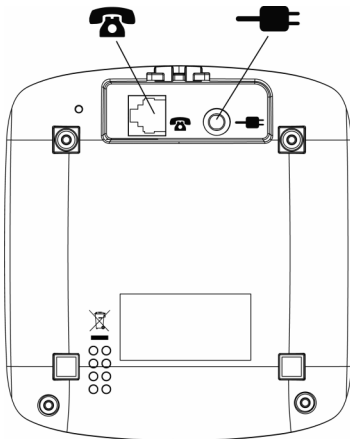


## 2.4 Installing and charging the batteries

1. Slide open the battery compartment cover.
2. Place the 2 batteries as indicated. Respect polarity.
3. Slide the battery compartment cover back.
4. Put the handset on the base or charger and charge for 14 hours first time. A beep will indicate if the handset is properly placed on the base or charger.

Use only the power pack provided for the base station.

Use only NiMH rechargeable batteries.

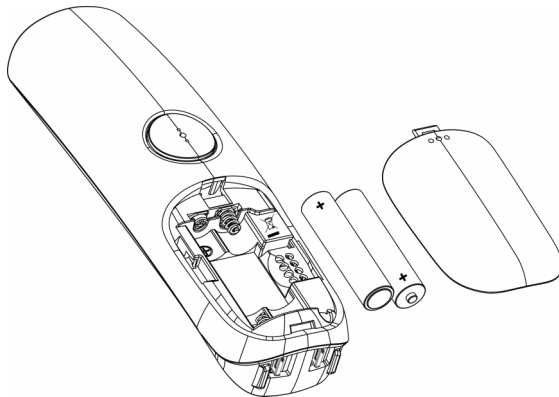

# 3. GETTING TO KNOW YOUR PHONE

## 3.1 Overview of the Handset

### 1. LEFT SOFT KEY (MENU/SELECT)

In idle mode: Press to access the main menu  
In sub-menu mode: Press to confirm the selection

During a call: Press to access Intercom/  
Phonebook/ Redial List/ Call List

### 2. RIGHT SOFT KEY (CLEAR/ BACK/MUTE/INTERCOM)

In main menu mode: Press to go back to idle screen

In sub-menu mode: Press to go back to previous level

In sub-menu mode: Press and hold to go back to idle screen

In editing / predialing mode: Press to clear a character / digit

In editing / predialing mode: Press and hold to delete all the characters / digits

During a call: Press to mute / unmute the microphone

In idle mode: Press to intercom another handset

### 3. UP

In idle mode: Press to access the call list  
In menu mode: Press to scroll up the menu items

In Phonebook list / Redial list / Call List: Press to scroll up the list

During a call: Press to increase the volume

In ringing: Press to increase the ringer volume

### 4. DOWN

In idle mode: Press to access the redial list  
In menu mode: Press to scroll down the menu items

In Phonebook list / Redial list / Call List: Press to scroll down the list


During a call: Press to decrease the volume

In ringing: Press to decrease the ringer volume

### 5. TALK ON

In idle / predialing mode : Press to make a call  
In Redial list / Call List / Phonebook entry: Press to make a call to the selected entry in the list

During ringing: Press to answer a call

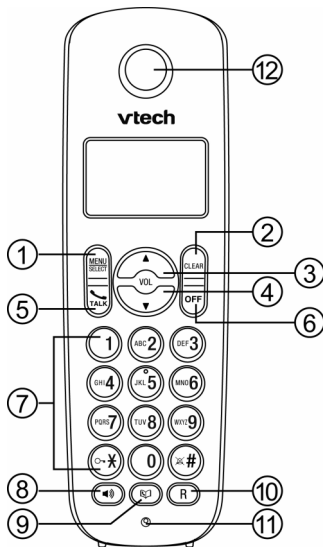

### 6. TALK OFF

During a call: Press to end a call and go back to idle screen

In menu / editing mode: Press to go back to previous menu

In menu / editing mode: Press and hold to go back to idle screen

In idle mode: Press and hold to power off the handset

In idle mode (when the handset is powered off): Press and hold to power on the handset

### 7. ALPHANUMERIC KEYPAD, \*, #

Press to insert a digit / character / \* / #

\* key in idle mode: Press and hold to enable or disable the keypad lock

\* key during a call (in Pulse mode): Press to switch to tone mode

# key in Idle mode: Press and hold to turn on / off the ringer

0 key in idle / predialing / number editing mode: Press and hold to insert a pause

# key in Call List mode: Press to review caller's number if applicable

### 8. SPEAKERPHONE

During a call: Press to turn on / off the speakerphone.

In Idle mode / predialing mode / Redial list / Call List / Phonebook entry: Press to make a call with speakerphone

During ringing: Press to answer a call with speakerphone

### 9. PHONEBOOK

In idle mode: Press to access the phonebook list

### 10. FLASH

In idle / predialing mode: Press to insert a flash

During a call: Press to dial a flash

### 11. MICROPHONE

### 12. EARPIECE




## 3.2 Base Station Overview

### 1. PAGE


Press to page your handset. The handset will ring for approximately 60 seconds.



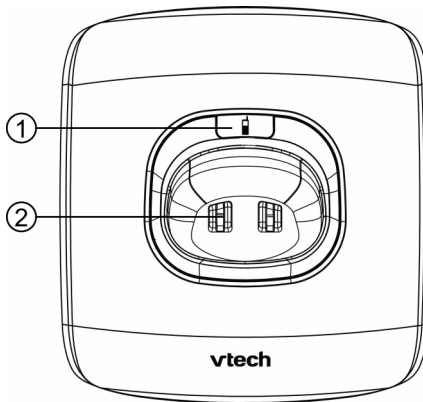



### 2. CHARGING CRADLE

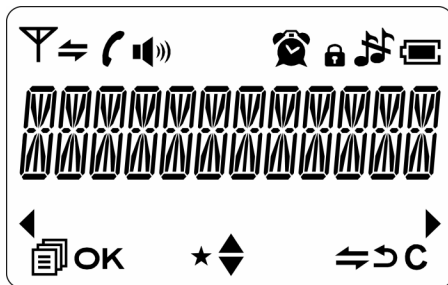


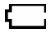







### 3.3 Display Icons and Symbols


The LCD display gives you information on the current status of the telephone.



	Scrolls up / down the menu items / Phonebook list / Redial list / Call List.
	Steadily on when the handset is in range of the base. Flashes when out of range of the base or not registered to the base.
	Steadily on when an intercom is in progress. Flashes when there is an incoming internal call.
	Indicates when a call is in progress.
	Indicates when handsfree is being used.
	Indicates when the ringer is switched off.

	Steadily on when an alarm is set. Flashes when the alarm time set before reaches.
	Indicates when the keypad is locked.
	Indicates when the battery is fully charged. Whole icon flashes when the battery performs initial charging. Internal block icon flashes when the battery is in final charging stage.
	Indicates when the battery needs to be charged. Flashes when low battery power level is detected.
	Indicates when more characters are existed before the text currently displayed.
	Indicates when more characters are existed after the text currently displayed.
 (MENU)	Press to select more menu options if applicable.
<b>OK</b>	Press to confirm the current selection if applicable.
★	Steadily on when a new call is received in call list. Turns off when a new call has been read.
 (INT)	Press to conduct Intercom call when idle.
 (BACK)	Press to go back to previous menu level or cancel the current action if applicable.
<b>C</b>	Press to clear a character or stop the alarm if applicable, press to mute / unmute during a call.

### 3.4 Menu Structure

In idle mode, press  will firstly access the Call List menu. Refer to the following for the menu structure.





Main Menu	CALL LIST	PHONEBOOK	BS SETTINGS	HS SETTINGS	REGISTRATION	DEFAULT
Sub menu	Review Call List  Under a selected Call List entry: ADD TO PB DELETE DELETE ALL DETAILS	Review phonebook list  Under a phonebook entry: ADD VIEW EDIT DELETE DELETE ALL PB STATUS	DELETE HS DIAL MODE FLASH TIME CHANGE PIN ECO MODE	ALARM RING SETUP TONE SETUP LANGUAGE RENAME HS HS DISPLAY AUTO ANSWER DATE & TIME		

### 3.5 Text and Digit Entry Table

The following tables show you where each letter and punctuation character can be found. This will be helpful when storing a name in the phonebook and renaming your handset.

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

**Writing Tips:**

1. Once a character is selected, the cursor will move to the next position after a short pause.
2. You can move the cursor within the text by ▲/▼ to amend the text entry.
3. Press  to delete the last character.
4. Press and hold  to delete the entire text string.

**3.5.1 Latin Character Set**

Key	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone number editing, date/time editing)
	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	
1	space	-	1								1
2	A	B	C	2							2
3	D	E	F	3							3
4	G	H	I	4							4
5	J	K	L	5							5
6	M	N	O	6							6
7	P	Q	R	S	7						7
8	T	U	V	8							8
9	W	X	Y	Z	9						9
0	0										0, P (Pause)
*	*	?	/	\	(	)					*
#	#	'	,	-	.	&					#



## 4. USING YOUR PHONE

### 4.1 Make a Call





#### 4.1.1 Preparatory Dialing

Enter the phone number and press  or  to dial the number. Press  to clear the entry.




#### 4.1.2 Direct Dialing

Press  or  to take the line and enter the phone number.



#### 4.1.3 Call from the phonebook

Press  to access the phonebook and press ▲/▼ to select the desired phonebook entry. Press  or  to dial out to the selected phonebook entry. Alternatively, press  to access the phonebook to get the desired phonebook entry.

#### 4.1.4 Call from the Call List

Press ▲ to access the Call List and press ▲/▼ to select the desired Call List entry. Press  or  to dial out to the selected Call List entry. Alternatively, press  to access the Call List from the main menu.

#### 4.1.5 Call from the redial list

Press ▼ to access the redial list and press ▲/▼ to select the desired redial number. Press  or  to dial out to the selected redial number.

#### 4.1.6 Call timer

Your handset automatically times the duration of every call. The call timer will display a few seconds after the call has made. It is shown in hours, minutes and seconds format (HH--MM--SS).

## 4.2 Answer a Call


If the handset is not on the base or charger:

When the phone rings, press  or  to answer a call.

If the handset is on the base or charger and if AUTO ANSWER is set to ON:

When the phone rings, pick up the handset to answer a call.

## 4.3 End a Call

During a call connection, press  to end the call.


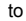
**OR**

Put the handset on the base or charger to end the call.

## 4.4 Adjust Earpiece and Handsfree Volume

There are 5 levels (VOLUME 1 to VOLUME 5) to choose from for each of earpiece and handsfree volume.



During a call:

Press / to select volume 1-5. The current setting is shown. When you end the call, the setting will remain at the last selected level.





## 4.5 Mute a Call

You can talk to someone nearby without letting the caller hear you during a call.





During a call:

Press  to mute the microphone and "MUTED" will display on the LCD. Your caller cannot hear you. Press  again to unmute the microphone.

## 4.6 Set the Silent Mode

In idle mode, press and hold  to turn off the handset ringer. The  icon is displayed on the LCD.  
In silent mode, press and hold  to turn on the handset ringer. The  icon will disappear.

## 4.7 Keypad Lock / Unlock

In idle mode, press and hold  to turn on the keypad lock. The  icon is displayed on the LCD.  
In keypad lock mode, press and hold  to turn off the keypad lock. The  icon will disappear.

## 4.8 Redial the last number





You can redial up to 5 of the last numbers called. If you have stored a name in the phonebook to go with the number, the name will be displayed instead. The most recent last number will display at the top of the redial list.

### 4.8.1 Redial a Number from the Redial List

1. In idle mode, press  to access the redial list.

Remarks:

If redial entry with name, press  to view the number.






2. Press / to browse the redial list.
3. Press  or  to dial to the selected redial number.

Note:


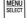
If there are no numbers in the redial list, the display shows "EMPTY".






## 4.8.2 Store a Redial Number into the Phonebook

1. Follow Steps 1 and 2 in section 4.8.1.
2. Press  and ▲/▼ to select ADD TO PB.
3. Press  to enter the name.
4. Press  to store the redial number into the phonebook.
5. Press  to select phonebook melody.
6. Press ▲/▼ to browse the melody list. The respective melody will be played when browsing the melody list.
7. Press  to confirm.






## 4.8.3 Delete a Redial Number

1. Follow Steps 1 and 2 in section 4.8.1.
2. Press  and ▲/▼ to select DELETE.
3. Press  to confirm.

## 4.8.4 Delete the Entire Redial List

1. Follow Steps 1 and 2 in section 4.8.1.
2. Press  and ▲/▼ to select DELETE ALL.
3. Press  to confirm.
4. Press  to confirm again.

## 4.9 Find the Handset

You can locate the handset by pressing  on the base station. All the handsets registered to the base will produce the paging tone and "PAGING" is displayed on the LCD. You can stop the paging by pressing  /  /  on any handset or  on the base again.

Note:

If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.



## 4.10 Make an Internal Call (For VT1047-2)

This feature is only applicable when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another handset and make conference calls. If the called handset is not answered within 60 seconds, the called handset will stop ringing and the calling handset will return to standby mode.

Note:

If only one handset is registered to the base station, press  will display "NOT POSSIBLE".



### 4.10.1 Intercom Another Handset

1. In idle mode, press  and the registered handsets will display except the calling handset.
2. Enter the desired handset number to intercom with.
3. The called handset rings and press  on the called handset to establish the internal call.

Note:





If two handsets are registered to the base station, press  will connect to another handset immediately.

### 4.10.2 Call All Handsets

1. In idle mode, press  and the registered handsets will display.
2. Press  to ring to all registered handsets.

### 4.10.3 Transfer an External Call to another handset


During an external call:

1. Press  and ▲/▼ to select INTERCOM.
2. Press  to select the desired handset to intercom with.
3. The external call is put on hold automatically and the called handset rings.
4. Press  on the called handset to establish an internal call.
5. Press  on the calling handset or put the calling handset on the base or charger to end the current call with the external party.
6. The external call is transferred to the called handset.

### 4.10.4 Make a 3-way Conference Call

The conference call feature allows one external call to be shared with two handsets (in intercom). The three parties can share the conversation and no network subscription is required.

During an external call:

1. Follow Steps 1 to 4 in section 4.10.3.
2. Press and hold  on the calling handset to establish the conference call.


Any handset hangs up during a conference call will leave the other handset still in connection with the external call.

## 5. PRIVATE PHONEBOOK

Your phone can store up to 20 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different melodies for your phonebook entries. Phonebook entries are stored alphabetically by name.






### 5.1 Add a New Phonebook Entry

In idle:

1. Press  to access the phonebook.


**OR**

Press  and ▲/▼ to select PHONEBOOK main menu item and then press  to access the phonebook.

2. Press  to select ADD.
3. Press  to enter the name.
4. Press  to enter the number.
5. Press  and ▲/▼ to select the desired melody for your phonebook entry.
6. Press  to store the phonebook entry.




### 5.2 Search a Phonebook Entry

In idle:

1. Press  to access the phonebook.
2. Enter the first character of the name by multi-tap.

### 5.3 View a Phonebook Entry

In idle:







1. Press  to access the phonebook.
2. Press ▲/▼ to select the desired phonebook entry.
3. Press  and ▲/▼ to select VIEW.
4. Press  and ▲/▼ to review the name, number and melody of the selected phonebook entry.

Note:

If number is more than 12 digits, press  or  to view the remaining digits.




### 5.4 Edit a Phonebook Entry

In idle:





1. Press  to access the phonebook.
2. Press ▲/▼ to select the desired phonebook entry.
3. Press  and ▲/▼ to select EDIT.
4. Press  and the current contents of the selected phonebook entry displays.
5. Edit the name and press .
6. Edit the number and press .
7. Press ▲/▼ to select the melody and press  to confirm.

### 5.5 Delete a Phonebook Entry

In idle:




1. Press  to access the phonebook.
2. Press ▲/▼ to select the desired phonebook entry.
3. Press  and ▲/▼ to select DELETE.
4. Press  to confirm.

## 5.6 Delete the Entire Private Phonebook

1. Press  to access the phonebook.
2. Press  and ▲/▼ to select DELETE ALL.
3. Press  to confirm.
4. Press  to re-confirm.

## 5.7 Check the Phonebook Usage

You can check how many phonebook entries have been occupied in your phone and how many phonebook entries are available for you to store in the phonebook.

1. Press  to access the phonebook.
2. Press  and ▲/▼ to select PB STATUS.
3. Press  to confirm.

## 6. CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed the Caller Line Identification service with your network service provider. Your phone can store up to 10 received calls with date/time information in the Call List. The number will be shown on the LCD when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternatively with the number. The handset will ring with the melody associated with that phonebook entry.

If the caller number is disabled to send caller information, "WITHHELD" will display.

If the caller number is not provided, "OUT OF AREA" will display.



In standby, if three unanswered calls are received, "3 NEW CALLS" will be displayed.


### 6.1 View the Call List

All received calls are saved in Call List with the latest call putting at the top of the list. When the call list is full, the oldest call will be replaced by a new call. The unanswered call which has not been read is marked with a ★ at the centre of the bottom line of the display.




1. Press ▲ to access the call list.



OR

Press  and ▲/▼ to select CALL LIST, and then press  to access the call list.



2. Press ▲/▼ to select the desired entry.
3. Press  to view the caller's number if applicable.

### 6.2 Store a Call List Number into the Phonebook




1. Follow Steps 1 and 2 in Section 6.1.
2. Press  and ▲/▼ to select ADD TO PB.
3. Press  to enter the name.
4. Press  and the selected call list number is displayed.

5. Edit the number if necessary.
6. Press  and ▲/▼ to select the melody.
7. Press  to confirm.




### 6.3 Delete an entry in the Call List

1. Follow Steps 1 and 2 in Section 6.1.
2. Press  and ▲/▼ to select DELETE.
3. Press  to confirm.

### 6.4 Delete the entire list of the Call List

1. Follow Steps 1 and 2 in Section 6.1.
2. Press  and ▲/▼ to select DELETE ALL.
3. Press  to confirm.
4. Press  to re-confirm.

### 6.5 View the Details of the Call List Entry

1. Follow Steps 1 and 2 in Section 6.1.
2. Press  and ▲/▼ to select DETAILS.
3. Press  to display the date and time of the selected call list entry.
4. Press  to go back to previous screen.







## 7. PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalize your phone the way you like it to work.





### 7.1 Date and Time Settings

You will need to set the correct time and date so that you know when you received call list entries.






#### 7.1.1 Change the Date Format

1. Press  and ▲/▼ to select HS SETTINGS.
2. Press  and ▲/▼ to select DATE & TIME.
3. Press  and ▲/▼ to select DATE FORMAT.
4. Press ▲/▼ to select your desired date format (DD-MM-YY or MM-DD-YY).
5. Press  to confirm.

#### 7.1.2 Change the Time Format

1. Press  and ▲/▼ to select HS SETTINGS.
2. Press  and ▲/▼ to select DATE & TIME.
3. Press  and ▲/▼ to select TIME FORMAT.
4. Press ▲/▼ to select your desired time format (12 HR or 24 HR).
5. Press  to confirm.






### 7.1.3 Set the Time

1. Press  and ▲/▼ to select HS SETTINGS.
2. Press  and ▲/▼ to select DATE & TIME.
3. Press  and ▲/▼ to select SET TIME.
4. Press  to enter the time information. The time entered will be in the format you set in Section 7.1.2.
5. Press  to confirm.

Note:

If time has been set before, the current time will display, otherwise, "00--00" will display.

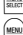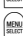

### 7.1.4 Set the Date

1. Press  and ▲/▼ to select HS SETTINGS.
2. Press  and ▲/▼ to select DATE & TIME.
3. Press  and ▲/▼ to select SET DATE.
4. Press  to enter the date information. The date entered will be in the format you set in Section 7.1.1.
5. Press  to confirm.


Note:

If date has been set before, the current date will display, otherwise, "01--01--10" will display.





## 7.2 Alarm Settings

You can use this phone to set an alarm clock. When an alarm is set, the  displays on the LCD. When the alarm time is reached, the  and "ALARM ON" flash on the LCD ringing with the alarm melody for a duration of 45 seconds. You can press any key to disable the alarm. If snooze function is activated, the alarm will sound again at the end of the snooze period of seven minutes.

Note:

- Key press is still applicable if handset keypad is locked and when the alarm time is reached.
- The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to VOLUME OFF, the alarm still sounds at VOLUME 1 level.
- During an external call or internal call, if an alarm is set and when the alarm time is reached, the  and "ALARM ON" will still flash. An alarm tone will be emitted from the earpiece to notify user the alarm time is reached. Once user press any key to disable the alarm, it will revert to the call duration screen.
- During paging or ringing, the alarm will not sound when the alarm time is reached. However, if snooze function is enabled, the alarm will sound again at the end of the snooze period provided that it's not ringing or in paging mode at the end of the snooze period.




### 7.2.1 Turn on/off the Alarm

- Press  and ▲/▼ to select HS SETTINGS.
- Press  and ▲/▼ to select ALARM.
- Press  and ▲/▼ to select ON/OFF.
- Press  to confirm.

Note:





If ON is selected, you will be asked to set the alarm time.

### 7.2.2 Set the Alarm Time (if the Alarm is set to be ON)

- Follow Steps 1 to 4 in Section 7.2.1.
- Enter the alarm time.
- Press  to set the snooze function.
- Press  and ▲/▼ to select ON or OFF.
- Press  to confirm.

## 7.3 Handset Settings

### 7.3.1 Set the Ringer Melody for Internal Calls





1. Press  and ▲/▼ to select HS SETTINGS.
2. Press  and ▲/▼ to select RING SETUP.
3. Press  and ▲/▼ to select INT RING.
4. Press  and ▲/▼ to select the desired ringer melody (a total of 10 melodies for your selection) for setting ringer melody for internal calls.

Note:

The respective ringer melody will be played while browsing the melody list.

5. Press  to confirm.

### 7.3.2 Set the Ringer Melody for External Calls




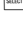
1. Press  and ▲/▼ to select HS SETTINGS.
2. Press  and ▲/▼ to select RING SETUP.
3. Press  and ▲/▼ to select EXT RING.
4. Press  and ▲/▼ to select the desired ringer melody (a total of 10 melodies for your selection) for setting ringer melody for external calls.

Note:


The respective ringer melody will be played while browsing the melody list.

5. Press  to confirm.

### 7.3.3 Set the Ringer Volume

1. Press  and ▲/▼ to select HS SETTINGS.
2. Press  and ▲/▼ to select RING SETUP.
3. Press  and ▲/▼ to select RING VOLUME.
4. Press  and ▲/▼ to select the desired ringer volume (a total of 6 ringer volume levels including VOLUME OFF).




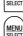

Note:

The respective ringer volume will be played during your selection.  
If VOLUME OFF is selected,  icon will display.





5. Press  to confirm.

### 7.3.4 Set Alert Tones





A single beep is emitted when you press a key. You can turn on or off the key tone. You can also turn on the alert tones when low battery and out of range are detected. Low battery tone will be emitted while you are talking with the phone to alert you that you need to charge up your battery.

1. Press  and ▲/▼ to select HS SETTINGS.
2. Press  and ▲/▼ to select TONE SETUP.
3. Press  and ▲/▼ to select KEY TONE / BATTERY TONE / OUT OF RANGE.
4. Press  and ▲/▼ to turn on or off these tones.
5. Press  to confirm.

### 7.3.5 Set the Handset Language





1. Press  and ▲/▼ to select HS SETTINGS.
2. Press  and ▲/▼ to select LANGUAGE.
3. Press  and ▲/▼ to select the desired language.
4. Press  to confirm.

### 7.3.6 Rename the Handset

1. Press  and ▲/▼ to select HS SETTINGS.
2. Press  and ▲/▼ to select RENAME HS.
3. Press  and enter the name of your handset.
4. Press  to confirm.





### 7.3.7 Choose the Information to be displayed in idle

You can choose to display time or handset name in your idle screen.

1. Press  and ▲/▼ to select HS SETTINGS.
2. Press  and ▲/▼ to select HS DISPLAY.
3. Press  and ▲/▼ to select HANDSET NAME or TIME.
4. Press  to confirm.

### 7.3.8 Set the Auto Answer


If you turn on the Auto Answer, you can pick up the call from the base or charger without pressing any key.

1. Press  and ▲/▼ to select HS SETTINGS.
2. Press  and ▲/▼ to select AUTO ANSWER.
3. Press  and ▲/▼ to turn on or off the auto answer feature.
4. Press  to confirm.

## 7.4 Base Settings






The current settings are marked an asterisk which is displayed at the rightmost of the menu item.

### 7.4.1 De-register a Handset





You are requested to enter the 4-digit PIN in order to de-register a handset from the base station. The  icon on the de-registered handset will blink.

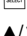Note:

You cannot de-register the handset that you are currently using.





1. Press  and ▲/▼ to select BS SETTINGS.
2. Press  and ▲/▼ to select DELETE HS.
3. Press  and you are requested to enter the 4-digit system PIN. (Default is 0000)
4. Enter the 4-digit system PIN.
5. Press  and a list of registered handsets is displayed.
6. Press ▲/▼ to select one of the handsets that you want to de-register.
7. Press  to confirm.

## 7.4.2 Change the dial mode

1. Press  and ▲/▼ to select BS SETTINGS.
2. Press  and ▲/▼ to select DIAL MODE.
3. Press  and ▲/▼ to select TONE or PULSE.
4. Press  to confirm.






## 7.4.3 Change the Flash Time

The flash time settings is country dependent. Please contact your local service provider for the correct settings.

1. Press  and ▲/▼ to select BS SETTINGS.
2. Press  and ▲/▼ to select FLASH TIME.
3. Press  and ▲/▼ to select your desired flash time (SHORT, MEDIUM, LONG).
4. Press  to confirm.

## 7.4.4 Change the System PIN Code

A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorized use. The default system PIN code is 0000.





1. Press  and ▲/▼ to select BS SETTINGS.
2. Press  and ▲/▼ to select CHANGE PIN.
3. Press  and you are requested to enter the 4-digit system PIN.
4. Enter the old system PIN.
5. Press  and enter the new system PIN.
6. Press  and enter the new system PIN again.




Note:  
If the new PIN entered in Step 6 is not matched with the new system PIN entered in Step 5, user is requested to enter the valid system PIN again in Step 5.





7. Press  to confirm.



#### 7.4.5 ECO Mode Setting

1. Press  and ▲/▼ to select BS SETTINGS.
2. Press  and ▲/▼ to select ECO MODE.
3. Press  and ▲/▼ to select ON or OFF.
4. Press  to confirm.

### 7.5 Registration





Your handset and base station is pre-registered. Up to five handsets can be registered to a single base station. If for some reason, the handset is not registered to the base station (  flashes even when the handset is near the base station), register your handset according to the following procedure.

1. Press and hold  on the base station for about five seconds, the base station is entered into registration mode.
2. Press  and ▲/▼ to select REGISTRATION.
3. Press  and you are requested to enter the 4-digit system PIN. (Default is 0000)
4. Enter the 4-digit system PIN.
5. Press  to confirm.

If the handset registration is successful, the  will stop flashing. The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the  will still flash.

## 7.6 Reset Your Phone

You can reset your phone to the default settings. After reset, all your personal settings and call list entries will be deleted, but your phonebook remains unchanged.


1. Press  and ▲/▼ to select DEFAULT.
2. Press  and you are requested to enter the 4-digit system PIN. (Default is 0000)
3. Enter the 4-digit system PIN.
4. Press  to confirm.
5. Press  to re-confirm.

## 8. DEFAULT SETTINGS

Items	Default Values
EXT RING	MELODY 1
INT RING	MELODY 2
Handset RING VOLUME	VOLUME 3
EARPIECE VOLUME	VOLUME 3
SPEAKER VOLUME	VOLUME 3
HANDSET NAME	HANDSET
KEY TONE	ON
BATTERY TONE	ON
OUT OF RANGE	ON
RINGER OFF	OFF
AUTO ANSWER	ON
HS DISPLAY	HS NAME
DATE FORMAT	DD--MM--YY
TIME FORMAT	24 HR
DATE	01--01--10
TIME	00--00
ALARM	OFF
MENU LANGUAGE	English
DIAL MODE	STONE
FLASH TIME	MEDIUM
SYSTEM PIN	0000
ECO MODE	ON

## 9. TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.

<b>Problem</b>	<b>Cause</b>	<b>Solutions</b>
No dialing tone when pressing  key.	<ul style="list-style-type: none"><li>a. The connection cord of the base station is not plugged in.</li><li>b. The adapter cord is not plugged in correctly in the base station.</li><li>c. The line is busy, as another handset is used.</li><li>d. Wrong connection cord</li></ul>	<ul style="list-style-type: none"><li>a. Check the connections. Unplug and plug back in the mains. Check that the telephone line cord has been plugged into the base station and the phone socket.</li><li>b. Check the base station plug and the 230V plug (remove and plug-in).</li><li>c. Wait until the line is unoccupied.</li><li>d. Use the original connection cord.</li></ul>
When connect to a PBX, no and/or wrong connection after dialing.	Dialing prefix is needed.	Insert the dialing prefix.
"SEARCHING" is displayed.	<ul style="list-style-type: none"><li>a. Base station out of range.</li><li>b. Base station not connected to mains.</li></ul>	<ul style="list-style-type: none"><li>a. Reduce the range.</li><li>b. Connect base station to mains.</li></ul>
The call does not work.	Service not activated or wrong operator or wrong setting.	Check your Subscription with network or change the dial mode.
No display.	Empty battery.	Recharge battery.

Please contact the technical support of the network provider for further information.

This telephone is not equipped with a grounding function! Therefore some of the functions may be limited when used in PBX systems.

For technical support, please call VTech Technical Inquiry Hotline Tel: 852-2667 7433.

## 10. TECHNICAL SPECIFICATIONS

<b>Basic Information</b>	
Dimensions	Handset: 15x5x2cm Base: 12x11x3cm Charger: 9x8x3cm
Weight	Handset: 120g Base: 120g Charger: 50g
Power consumption	Base: < 0.5W Charger: < 0.5W
Valid range	Indoor: 50m Outdoor: 300m
Handset Operating Time	Standby time: 100 hours Talk time: 10 hours
<b>RF Parameter</b>	
Transmission Power	Base: < 250mW Handset: < 250mW
Frequency	1.8GHZ
Number of Channels	10 channels
<b>Supply Power</b>	
Base	Input AC 100~240V 50/60HZ 100mA , output DC 6V 300mA SMPS
Charger	Input AC 100~240V 50/60HZ 100mA , output DC 6V 300mA SMPS
Handset	NIMH AAA rechargeable battery 1.2V 400mAH

## VTech Electronics (HK) Ltd.

21/F, C.N.T. House, No.120 Johnston Road, Wan Chai, Hong Kong.

Customer Service Centre Tel: 852-2776 3223

Technical Inquiry Hotline Tel: 852-2667 7433

91-003737-010-100