

Removing and Replacing the Calculator's Cover


Before starting

Holding the cover as shown in the illustration, slide the unit out of the cover

After you are finished@

Holding the cover as shown in the illustration, slide the unit out of the cover

 Always slide the keyboard end of the unit into the cover first. Never slide the display end of the unit into the cover.

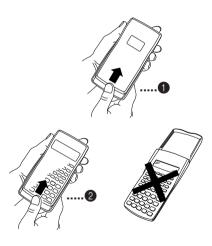

Safety Precautions

Be sure to read the following safety precautions before using this calculator. Keep this manual handy for later reference



Caution

This symbol is used to indicate information that can result in personal injury or material damage if ignored.

Batteries

- After removing the battery from the calculator, put it in a safe place where it will not get into the hands of small children and accidentally swallowed.
- Keep batteries out of the reach of small children. If accidentally swallowed, consult with a physician immediately.
- Never charge batteries, try to take batteries apart, or allow batteries to become shorted. Never expose batteries to direct heat or dispose of them by incineration.
- Misuse of batteries can cause them to leak and damage nearby items, and can create the risk of fire and personal injury.
 - Always make sure that the battery's positive ⊕ and negative ⊖ ends are facing correctly when you load it into the calculator.
 - Remove the battery if you do not plan to use the calculator for a long time.
 - Use only the type of battery specified for this calculator in this manual

Disposing of the Calculator

 Never dispose of the calculator by burning it. Doing so can cause certain components to suddenly burst, creating the risk of fire and personal injury.

- The displays and illustrations (such as key markings) shown in this User's Guide are for illustrative purposes only, and may differ somewhat from the actual items they represent.
- The contents of this manual are subject to change without notice.
- In no event shall CASIO Computer Co., Ltd. be liable to anyone for special, collateral, incidental, or consequential damages in connection with or arising out of the purchase or use of these materials. Moreover, CASIO Computer Co., Ltd. shall not be liable for any claim of any kind whatsoever against the use of these materials by any other party.

Handling Precautions

- Be sure to press the ON key before using the calculator for the first time.
- Even if the calculator is operating normally, replace the battery at least once every two years.
 - A dead battery can leak, causing damage to and malfunction of the calculator. Never leave a dead battery in the calculator.
- The battery that comes with this unit discharges slightly during shipment and storage. Because of this, it may require replacement sooner than the normal expected battery life.
- Low battery power can cause memory contents to become corrupted or lost completely. Always keep written records of all important data.
- Avoid use and storage in areas subjected to temperature extremes.

Very low temperatures can cause slow display response, total failure of the display, and shortening of battery life. Also avoid leaving the calculator in direct sunlight, near a window, near a heater or anywhere else it might be exposed to very high temperatures. Heat can cause discoloration or deformation of the calculator's case, and damage to internal circuitry.

 Avoid use and storage in areas subjected to large amounts of humidity and dust.

Take care never to leave the calculator where it might be splashed by water or exposed to large amounts of humidity or dust. Such conditions can damage internal circuitry.

- Never drop the calculator or otherwise subject it to strong impact.
- Never twist or bend the calculator.

Avoid carrying the calculator in the pocket of your trousers or other tight-fitting clothing where it might be subjected to twisting or bending.

- Never try to take the calculator apart.
- Never press the keys of the calculator with a ballpoint pen or other pointed object.
- Use a soft, dry cloth to clean the exterior of the calculator.

If the calculator becomes very dirty, wipe it off with a cloth moistened in a weak solution of water and a mild neutral household detergent. Wring out all excess moisture before wiping the calculator. Never use thinner, benzene or other volatile agents to clean the calculator. Doing so can remove printed markings and can damage the case.

Contents

Removing and Replacing the Calculator's Cover	1
Safety Precautions	2
Handling Precautions	3
Two-line Display	7
Before getting started	7
■ Modes	
■Input Capacity	8
■Making Corrections During Input	9
■ Replay Function	9
■ Error Locator	
■ Multi-statements	
Exponential Display Formats	
■ Decimal Point and Separator Symbols	
■ Initializing the Calculator	
Basic Calculations	11
■ Arithmetic Calculations	
■ Fraction Operations	
■Percentage Calculations	
■ Degrees, Minutes, Seconds Calculations	
■FIX, SCI, RND	
Mana and Oalandallana	16
Memory Calculations	
Answer Memory	. 16
■ Answer Memory Consecutive Calculations	. 16
■ Answer Memory ■ Consecutive Calculations Independent Memory	. 16 . 16
■ Answer Memory Consecutive Calculations	. 16 . 16
■ Answer Memory ■ Consecutive Calculations Independent Memory	. 16 . 16 . 17
■ Answer Memory	. 16 . 16 . 17 17 . 18
■ Answer Memory	. 16 . 16 . 17 17 . 18

■ Square Roots, Cube Roots, Roots, Squares,	
Cubes, Reciprocals, Factorials, Random Numbe	rs,
π , and Permutation/Combination	. 19
■ Angle Unit Conversion	. 20
■ Coordinate Conversion (Pol (x, y) , Rec (r, θ))	. 20
■ Engineering Notation Calculations	. 21
■ Inputting Engineering Symbols	. 21
Statistical Calculations	23
Standard Deviation	. 23
Normal Distribution	. 25
Regression Calculations	. 26
Complex Number Calculations	30
■ Absolute Value and Argument Calculation	. 31
■ Rectangular Form ↔ Polar Form Display	
■Conjugate of a Complex Number	
Base-n Calculations	32
Technical Information	34
■ When you have a problem	. 34
■ Error Messages	
■ Order of Operations	
■ Stacks	
■Input Ranges	
Power Supply	40
Specifications	

Two-line Display



The two-line display makes it possible to view both the calculation formula and its result at the same time

- The upper line shows the calculation formula.
- . The lower line shows the result

A separator symbol is displayed every three digits when the integer part of the mantissa has more than three digits.

Before getting started...

■ Modes

Before starting a calculation, you must first enter the correct mode as indicated in the table below.

To perform this type of calculation:	Perform this key operation:	To enter this mode:
Basic arithmetic calculations	MODE 1	COMP
Complex number calculations	MODE 2	CMPLX
Standard deviation	MODE MODE 1	SD
Regression calculations	MODE MODE 2	REG
Base-n calculations	MODE MODE 3	BASE

 Pressing the week key more than twice displays additional setup screens. Setup screens are described where they are actually used to change the calculator setup. • In this manual, the name of the mode you need to enter in order to perform the calculations being described is indicated in the main title of each section

Example: Complex Number Calculations

Note!

. To return the calculation mode and setup to the initial defaults shown below, press eller (Mode)

Calculation Mode: COMP

Angle Unit: Dea

Exponential Display Format: Norm 1. Eng OFF Complex Number Display Format: a+bi

Fraction Display Format: ab/c Decimal Point Character Dot

- · Mode indicators appear in the upper part of the display, except for the BASE indicators, which appear in the exponent part of the display.
- Engineering symbols are automatically turned off while the calculator is the BASE Mode.
- · You cannot make changes to the angle unit or other display format (Disp) settings while the calculator is in the BASE Mode.
- The COMP. CMPLX. SD. and REG modes can be used in combination with the angle unit settings.
- Be sure to check the current calculation mode (SD, REG, COMP. CMPLX) and angle unit setting (Deg. Rad. Gra) before beginning a calculation.

■ Input Capacity

- The memory area used for calculation input can hold 79 "steps." One step is taken up each time vou press a number key or arithmetic operator key (£, 🚍, 🗶, 😜). A SHIFT or ALPHA key operation does not take up a step, so inputting sill , for example, takes up only one step.
- You can input up to 79 steps for a single calculation. Whenever you input the 73rd step of any calculation, the cursor changes from "_" to "■" to let you know memory is running low. If you need to input more than 79 steps, you should divide your calculation into two or more parts.

Pressing the Anal key recalls the last result obtained, which
you can use in a subsequent calculation. See "Answer
Memory" for more information about using the Anal key.

■ Making Corrections During Input

- Use
 ■ and
 ■ to move the cursor to the location you want.
- Press IEL to delete the number or function at the current cursor position.
- Press im IMS to change to an insert cursor [3]. Inputting something while the insert cursor is on the display inserts the input at the insert cursor position.
- Pressing [IIIS], or returns to the normal cursor from the insert cursor.

■ Replay Function

- Pressing
 or
 recalls the last calculation you performed. You can then make any changes you want in the calculation and re-execute it.
- Pressing
 does not clear replay memory, so you can recall the last calculation even after you press
 C.
- Replay memory is cleared by any of the following actions.

When you press the N key

When you initialize modes and settings by pressing [SIRT] (or 3)

When you change from one calculation mode to another When you turn off the calculator.


■ Error Locator

Pressing
 or
 after an error occurs displays the calculation with the cursor positioned at the location where the error occurred.

■ Multi-statements

A multi-statement is an expression that is made up of two or more smaller expressions, which are joined using a colon (:).

• Example: To add 2 + 3 and then multiply the result by 4

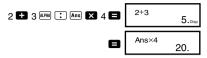

■ Exponential Display Formats

This calculator can display up to 10 digits. Larger values are automatically displayed using exponential notation. In the case of decimal values, you can select between two formats that determine at what point exponential notation is used

To change the exponential display format, press the week
key a number of times until you reach the exponential
display format setup screen shown below.

 Press 3. On the format selection screen that appears, press 1 to select Norm 1 or 2 for Norm 2.

Norm 1

With Norm 1, exponential notation is automatically used for integer values with more than 10 digits and decimal values with more than two decimal places.

• Norm 2

With Norm 2, exponential notation is automatically used for integer values with more than 10 digits and decimal values with more than nine decimal places.

All of the examples in this manual show calculation results using the Norm 1 format.

■ Decimal Point and Separator Symbols

You can use the display setup (Disp) screen to specify the symbols you want for the decimal point and 3-digit separator.

•	To change the decimal point and separator symbol set-
	ting, press the moek key a number of times until you reach
	the setup screen shown below.



- · Display the selection screen.
 - 1 |
- Press the number key (1 or 2) that corresponds to the setting you want to use.
 - 1 (Dot): Period decimal point, comma separator 2 (Comma): Comma decimal point, period separator

■ Initializing the Calculator

 Perform the following key operation when you want to initialize the calculation mode and setup, and clear replay memory and variables.

SHIFT CLR 3 (AII)

Basic Calculations

COMP

■ Arithmetic Calculations

Use the week key to enter the COMP Mode when you want to perform basic calculations.

- Negative values inside of calculations must be enclosed within parentheses. For details, see "Order of Operations."
- It is not necessary to enclose a negative exponent within parentheses.

 $\sin 2.34 \times 10^{-5} \rightarrow \sin 2.34 \text{ EXP} (-) 5$

• Example 1: $3\times(5\times10^{-9}) = 1.5\times10^{-8}$

3 X 5 EXP (-) 9 =

- Example 2: $5 \times (9+7) = 80$ 5 🗶 (9 🛨 7) 🖃
- You can skip all ① operations before 🖃.

■ Fraction Operations

Fraction Calculations

- Values are displayed in decimal format automatically whenever the total number of digits of a fractional value (integer + numerator + denominator + separator marks) exceeds 10.
- Example 1: $\frac{2}{3} + \frac{1}{5} = \frac{13}{15}$

2 @ 3 1 1 @ 5 1 13_15.

• Example 2: $3\frac{1}{4} + 1\frac{2}{3} = 4\frac{11}{12}$

3 @% 1 @% 4 🛨

1 @ 2 @ 3 = 4_ 11_12.

• Example 3: $\frac{2}{4} = \frac{1}{2}$

2 🐠 4 🖪

• Example 4: $\frac{1}{2} + 1.6 = 2.1$

1 🐠 2 🖶 1.6 🖃

Results of calculations that mix fraction and decimal values are always decimal.

Decimal ↔ Fraction Conversion

- Use the operation shown below to convert calculation results between decimal values and fraction values.
- Note that conversion can take as long as two seconds to perform.
- Example 1: 2.75 = $2\frac{3}{4}$ (Decimal \rightarrow Fraction)

2.75

a½ 2 13 14.

 $= \frac{11}{4} \quad \text{SHIFT d/c} \qquad \qquad 11 \, \downarrow \, 4.$

• Example 2: $\frac{1}{2} \leftrightarrow 0.5$ (Fraction \leftrightarrow Decimal)

1 🐠 2 🖪 💮 1 🗆 2.

a% 0.5

*a*½ 1_2.

• Example: $1\frac{2}{3} \leftrightarrow \frac{5}{3}$

(3) 1 (a½) 2 (a½) 3 (■ 1 1 2 1 3 ... (SHIP) (de) (5 1 3 ... (SHIP) (de) (1 1 2 1 3 ...

- You can use the display setup (Disp) screen to specify the display format when a fraction calculation result is greater than one.
- To change the fraction display format, press the week key a number of times until you reach the setup screen shown below.

- Display the selection screen.
 - 1 🕨
- Press the number key (1 or 2) that corresponds to the setting you want to use.
 - 1 (ab/c): Mixed fraction
 - 2(d/c): Improper fraction
- An error occurs if you try to input a mixed fraction while the d/c display format is selected.

■ Percentage Calculations

• Example 1: To calculate 12% of 1500 (180)

1500 X 12 SHIFT %

• Example 2: To calculate what percentage of 880 is 660 (75%)

660 🖶 880 SHIFT %

• Example 3: To add 15% onto 2500 (2875)

2500 X 15 SHIFT % +

• Example 4: To discount 3500 by 25% (2625)

3500 **■** 25 SHIFT % ■

• Example 5: To discount the sum of 168, 98, and 734 by 20% (800)

168 • 98 • 734 • Ans Sum \$10 A

- * As shown here, if you want to use the current Answer Memory value in a mark up or discount calculation, you need to assign the Answer Memory value into a variable and then use the variable in the mark up/discount calculation. This is because the calculation performed when % is pressed stores a result to Answer Memory before the key is pressed.
- Example 6: If 300 grams are added to a test sample originally weighing 500 grams, what is the percentage increase in weight? (160%)

300 **1** 500 SHIFT %

• Example 7: What is the percentage change when a value is increased from 40 to 46? How about to 48?

(15%, 20%)

46 **4**0 SHIFT %

■ Degrees, Minutes, Seconds Calculations

- You can perform sexagesimal calculations using degrees (hours), minutes, and seconds, and convert between sexagesimal and decimal values.
- Example 1: To convert the decimal value 2.258 to a sexagesimal value and then back to a decimal value

2.258 2.258

Sulf ::: 2°15°28.8

::: 2.258

• Example 2: To perform the following calculation: 12°34'56" × 3 45

12 ^{...} 34 ^{...} 56 ^{...} **★** 3.45 **■** 43°24°31.2

■ FIX, SCI, RND

 To change the settings for the number of decimal places, the number of significant digits, or the exponential display format, press the key a number of times until you reach the setup screen shown below.

Fix Sci	Norm
1 2	3

- Press the number key (1,2, or 3) that corresponds to the setup item you want to change.
 - 1 (Fix): Number of decimal places
 - 2 (Sci): Number of significant digits
 - (Norm): Exponential display format
- Example 1: 200 ÷ 7 × 14 =

200 🖶 7 💌 14 🖃	400.			
(Specifies three decimal places.)	400.000			
(Internal calculation continues 200 🖶 7 🖃	28.571			
■ 14 =	400.000			

The following performs the same calculation using the specified number of decimal places.

- Press (Norm) 1 to clear the Fix specification
- Example 2: 1 ÷ 3, displaying result with two significant digits (Sci 2)

©CI 3.3⁻⁰¹

Press (Norm) 1 to clear the Sci specification.

Memory Calculations COMP

Use the key to enter the COMP Mode when you
want to perform a calculation using memory.
COMP 1

■ Answer Memory

- Whenever you press after inputting values or an expression, the calculated result automatically updates Answer Memory contents by storing the result.
- In addition to ☐, Answer Memory contents are also updated with result whenever you press ☞ %, M+, ☞ M-, or ☞ ⑤ followed by a letter (A through F, or M, X, or Y).

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **

 **
- You can recall Answer Memory contents by pressing Ans.
- Answer Memory can store up to 12 digits for the mantissa and two digits for the exponent.
- Answer Memory contents are not updated if the operation performed by any of the above key operations results in an error.

■ Consecutive Calculations

- You can use the calculation result that is currently on the display (and also stored in Answer Memory) as the first value of your next calculation. Note that pressing an operator key while a result is displayed causes the displayed value to change to Ans, indicating it is the value that is currently stored in Answer Memory.
- The result of a calculation can also be used with a subsequent Type A function (x², x³, x⁻¹, x!, DRG►), +, −, ^(x³), ^x√⁻, ×, ÷, nPr and nCr.

■ Independent Memory

- Values can be input directly into memory, added to memory, or subtracted from memory. Independent memory is convenient for calculating cumulative totals.
- Independent memory uses the same memory area as variable M.
- To clear independent memory (M), input ① ser STO M (M+). 16 -

• Example:

$$23 + 9 = 32$$
 $23 + 9$ SMFF STD MM (M+) $53 - 6 = 47$ $53 - 6 = 6$ M± 45×2 SMFF MF- (Total) -11 REL MM (M+)

■ Variables

- There are nine variables (A through F, M, X and Y), which can be used to store data, constants, results, and other values.
- Use the following operation to delete data assigned to a
 particular variable: ① [STO] (A). This operation deletes the data assigned to variable A.
- Perform the following key operation when you want to clear the values assigned to all of the variables.



• Example: $\underline{193.2} \div 23 = 8.4$

$$193.2 \div 28 = 6.9$$

193.2 SHIFT STO A ÷ 23 =

Scientific Function Calculations

COMP

- Certain types of calculations may take a long time to complete.
- Wait for the result to appear on the display before starting the next calculation.
- $\pi = 3.14159265359$

■ Trigonometric/Inverse Trigonometric Functions

 To change the default angle unit (degrees, radians, grads), press the week key a number of times until you reach the angle unit setup screen shown below.

 Press the number key (1,2, or3) that corresponds to the angle unit you want to use.

$$(90^\circ = \frac{\pi}{2} \text{ radians} = 100 \text{ grads})$$

• Example 1: sin 63°52′41″ = 0.897859012

sin 63 ··· 52 ··· 41 ··· **=**

• Example 2: $\cos\left(\frac{\pi}{3} \operatorname{rad}\right) = 0.5$

• Example 3: $\cos^{-1} \frac{\sqrt{2}}{2} = 0.25 \pi \, (\text{rad}) \left(= \frac{\pi}{4} \, (\text{rad}) \right)$

SHIFT
$$\cos^{-1}$$
 ($\sqrt{}$ 2 \div 2) \blacksquare Ans \div SHIFT π \blacksquare

• Example 4: tan-1 0.741 = 36.53844577°

■ Hyperbolic/Inverse Hyperbolic Functions

• Example 1: sinh 3.6 = 18.28545536

• Example 2: $sinh^{-1} 30 = 4.094622224$

■ Common and Natural Logarithms/ Antilogarithms

• Example 1: log 1.23 = 0.089905111

[log 1.23 **□**

• Example 2: In 90 (= log_e 90) = *4.49980967*

In 90 **=**

 $\ln e = 1$

In ALPHA (e)

• Example 3: $e^{10} = 22026.46579$

SHIFT e^x 10

• Example 4: 10^{1.5} = *31.6227766*

SHIFT 10" 1.5

• Example 5: $2^{-3} = 0.125$

2 🔼 🗀 3 🖃

• Example 6: (-2)⁴ = 16

((-) 2) **^** 4 **=**

 Negative values inside of calculations must be enclosed within parentheses. For details, see "Order of Operations."

■ Square Roots, Cube Roots, Roots, Squares, Cubes, Reciprocals, Factorials, Random Numbers, π , and Permutation/Combination

• Example 1: $\sqrt{2} + \sqrt{3} \times \sqrt{5} = 5.287196909$

√2 + √3 × √5 =

• Example 2: $\sqrt[3]{5} + \sqrt[3]{-27} = -1.290024053$

1.290024053

SHIFT (5 + SHIFT (((() 27) =

• Example 3: $\sqrt[7]{123}$ (= $123^{\frac{1}{7}}$) = 1.988647795

7 SHIFT 🔽 123 🖪

• Example 4: $123 + 30^2 = 1023$

123 **±** 30 <u>x</u>² **=**

• Example 5: 123 = 1728

12 $[x^3]$

• Example 6: $\frac{1}{\frac{1}{3} - \frac{1}{4}} = 12$

(3x = 4x)x =

• Example 7: 8! = 40320

8 SHIFT [X!]

•	Example 8: To	generate	а	random	number	betweer
	0.000 and 0.99	a				

(The above value is a sample only. Results differ each time.)

- Example 9: $3\pi = 9.424777961$
- 3 SHIFT π
- Example 10: To determine how many different 4-digit values can be produced using the numbers 1 through 7
 - Numbers cannot be duplicated within the same 4-digit value (1234 is allowed, but 1123 is not).
 (840)



 Example 11: To determine how many different 4-member groups can be organized in a group of 10 individuals (210)

10 nCr 4 🖪

■ Angle Unit Conversion

• Press shift to display the following menu.

D R G 1 2 3

- Pressing 1, 2, or 3 converts the displayed value to the corresponding angle unit.
- Example: To convert 4.25 radians to degrees

■ Coordinate Conversion (Pol (x, y), Rec (r, θ))

Calculation results are automatically assigned to variables E and F.

 Example 2: To convert rectangular coordinates (1, √3) to polar coordinates (r, θ) (Rad)
r = 2 Pol(1 •
$\theta = 1.047197551$
• Press $^{\rm REL}$ ${\mathbb E}$ to display the value of $r,$ or $^{\rm REL}$ ${\mathbb F}$ to display the value of $\theta.$
■ Engineering Notation Calculations
• Example 1: To convert 56,088 meters to kilometers
→ 56.088 × 10 ³ 56088 ■ (km)
• Example 2: To convert 0.08125 grams to milligrams
\rightarrow 81.25 × 10 ⁻³ 0.08125 ■ (mg)
■ Inputting Engineering Symbols COMP CMPLX
 Turning on engineering symbols makes it possible for you to use engineering symbols inside your calculations. To turn engineering symbols on and off, press the key a number of times until you reach the setup screen shown below.
Disp 1
 Press 1. On the engineering symbol setting screen that appears, press the number key (1 or 2) that corresponds to the setting you want to use.

• **Example 1:** To convert polar coordinates $(r=2, \theta=60^{\circ})$

• Press $\mathbb{R}^{\mathbb{R}}$ \mathbb{E} to display the value of x, or $\mathbb{R}^{\mathbb{R}}$ \mathbb{F} to dis-

SHIFT Rec() 2 . 60) =

RCL F

to rectangular coordinates (x, y) (Deg)

x = 1


y = 1.732050808

play the value of y.

- (Eng ON): Engineering symbols on (indicated by "Eng" on the display)
- 2 (Eng OFF): Engineering symbols off (no "Eng" indicator)
- The following are the nine symbols that can be used when engineering symbols are turned on.

To input this symbol:	Perform this key operation:	Unit
k (kilo)	SHIFT k	10 ³
M (Mega)	SHIFT M	10 ⁶
G (Giga)	SHIFT G	10 ⁹
T (Tera)	SHIFT T	10 ¹²
m (milli)	SHIFT m	10⁻³
μ (micro)	SHIFT μ	10 ⁻⁶
n (nano)	SHIFT n	10-9
p (pico)	SHIFT P	10-12
f (femto)	SHIFT f	10 ⁻¹⁵

- For displayed values, the calculator selects the engineering symbol that makes the numeric part of the value fall within the range of 1 to 1000.
- Engineering symbols cannot be used when inputting fractions.
- Example: 9 ÷ 10 = 0.9 m (milli)

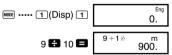

When engineering symbols are turned on, even standard (non-engineering) calculation results are displayed using engineering symbols.



Statistical Calculations



Standard Deviation



Use the week key to enter the SD Mode when you want to perform statistical calculations using standard deviation.

SD	MODE	MODE	1	J


- In the SD Mode and REG Mode, the key operates as the tey.
- Always start data input with [SCI] (ScI) to clear statistical memory.
- Input data using the key sequence shown below. <x-data> DT
- Input data is used to calculate values for n, Σx, Σx², x̄, σn and σn-1, which you can recall using the key operations noted nearby.

To recall this type of value:	Perform this key operation:
Σx^2	SHIFT S-SUM 1
Σx	SHIFT S-SUM 2
n	SHIFT S-SUM 3
\bar{x}	SHIFT S-VAR 1
Oπ	SHIFT S-VAR 2
⊙ n-1	SHIFT S-VAR 3

 Example: To calculate σ_{n-1}, σ_n, x̄, n, Σx, and Σx² for the following data: 55, 54, 51, 55, 53, 53, 54, 52

In the SD Mode:

SHIFT CLR 1 (ScI) (Stat clear)

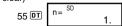

Each time you press To register your input, the number of data input up to that point is indicated on the display (n value).

54 DT 51 DT 55 DT

53 DT DT 54 DT 52 DT

Sample Standard Deviation $(\mathfrak{G}n-1)=1.407885953$ SHIFT S-VAR 3

Population Standard Deviation $(\sigma_n) = 1.316956719$ Sum $(\Sigma) = 53.375$ Sum of Values $(\Sigma x) = 427$ Sum of Squares of Values $(\Sigma x)^2 = 22805$ Sum $(Sum \times Sum \times S$

Data Input Precautions

- DT DT inputs the same data twice.
- You can also input multiple entries of the same data using [IIII]. To input the data 110 ten times, for example, press 110 [III] 10 [III].
- You can perform the above key operations in any order, and not necessarily that shown above.
- While inputting data or after inputting data is complete, you can use the A and V keys to scroll through data you have input. If you input multiple entries of the same data using V to specify the data frequency (number of data items) as described above, scrolling through data shows both the data item and a separate screen for the data frequency (Freq).
- You can then edit the displayed data, if you want. Input the new value and then press the key to replace the old value with the new one. This also means that if you want to perform some other operation (calculation, recall of statistical calculation results, etc.), you should always press the key first to exit data display.
- Pressing the T key instead of after changing a value on the display registers the value you input as a new data item, and leaves the old value as it is.
- You can delete a data value displayed using ▲ and ▼
 by pressing ஊ ⓒL. Deleting a data value causes all
 values following it to be shifted up.
- Data values you register are normally stored in calculator memory. The message "Data Full" appears and you will not be able to input any more data if there is no memory left for data storage. If this happens, press the key to display the screen shown below.

EditOFF ESC 1 2 Press 2 to exit data input without registering the value you just input.

Press I if you want to register the value you just input, without saving it in memory. If you do this, however, you will not be able to display or edit any of the data you have input.

- To delete data you have just input, press shift CL.
- After inputting statistical data in the SD Mode or REG Mode, you will be unable to display or edit individual data items any longer after perform either the following operations.

Changing to another mode

Changing the regression type (Lin, Log, Exp, Pwr, Inv, Quad)

Normal Distribution


SD

Use the week key to enter the SD Mode when you want to perform a calculation involving normal distribution.

In the SD Mode and REG Mode, the we key operates as the let key.

• Press SHIFT DISTR, which produces the screen shown below.

• Input a value from 1 to 4 to select the probability distribution calculation you want to perform.

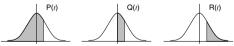

• Example: To determine the normalized variate $(\rightarrow t)$ for x=53 and normal probability distribution P(t) for the following data: 55, 54, 51, 55, 53, 53, 54, 52

 $(\rightarrow t = -$ **0.284747398**, P(t) = **0.38974**) 55 DT 54 DT 51 DT 55 DT 53 DT DT 54 DT 52 DT

53 SHIFT DISTR $4 (\rightarrow t)$


SHIFT DISTR 1 (P() (-) 0.28) = -25 -

Regression Calculations



Use the week key to enter the REG Mode when you want to perform statistical calculations using regression.

- In the SD Mode and REG Mode, the M+ key operates as the DT key.
- Entering the REG Mode displays screens like the ones shown below.

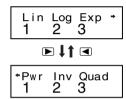

- Press the number key (1, 2, or 3) that corresponds to the type of regression you want to use.
 - 1 (Lin): Linear regression
 - 2 (Log): Logarithmic regression
 - 3 (Exp): Exponential regression
 - Power regression
 - ▶ ② (Inv): Inverse regression
 - ▶ 3 (Quad): Quadratic regression
- Always start data input with surf @R 1 (Scl) to clear statistical memory.
- Input data using the key sequence shown below.
 <x-data> <y-data> •
- The values produced by a regression calculation depend on the values input, and results can be recalled using the key operations shown in the table below.

To recall this type of value:	Perform this key operation:
Σx^2	SHIFT S-SUM 1
$\sum x$	SHIFT S-SUM 2
n	SHIFT S-SUM 3
Σy^2	SHIFT S-SUM 1
Σy	SHIFT S-SUM 2
$\sum xy$	SHIFT S-SUM 3
\bar{x}	SHIFT S-VAR 1
$x\sigma_n$	SHIFT S-VAR 2
<i>x</i> σ _{<i>n</i>-1}	SHIFT S-VAR 3
\bar{y}	SHIFT S-VAR 1
$y\sigma_n$	SHIFT S-VAR 2
y σ _{n-1}	SHIFT S-VAR 3
Regression coefficient A	SHIFT S-VAR 1
Regression coefficient B	SHIFT S-VAR 2
Regression calculation other	r than quadratic regression
Correlation coefficient r	SHIFT S-VAR 3
â	SHIFT S-VAR
ŷ	SHIFT S-VAR 2

• The following table shows the key operations you should use to recall results in the case of quadratic regression.

To recall this type of value:	Perform this key operation:
Σx^3	SHIFT S-SUM 1
$\sum x^2y$	SHIFT S-SUM 2
Σx^4	SHIFT S-SUM 🕨 🕽
Regression coefficient C	SHIFT S-VAR 🕨 🕽
<i>\$</i> 1	SHIFT S-VAR
<i>x</i> ̂2	SHIFT S-VAR 2
ŷ	SHIFT S-VAR

 The values in the above tables can be used inside of expressions the same way you use variables.

Linear Regression

- The regression formula for linear regression is: y = A + Bx.
- Example: Atmospheric Pressure vs. Temperature

Temperature	Atmospheric Pressure
10°C	1003 hPa
15°C	1005 hPa
20°C	1010 hPa
25°C	1011 hPa
30°C	1014 hPa

Perform linear regression to determine the regression formula terms and correlation coefficient for the data nearby. Next, use the regression formula to estimate atmospheric pressure at -5°C and temperature at 1000 hPa. Finally, calculate the coefficient of determination (r^2) and sample covariance

$$\left(\frac{\sum xy - n \cdot \bar{x} \cdot \bar{y}}{n-1}\right)$$

In the REG Mode:

1 (Lin)

SHIFT CLR 1 (ScI) = (Stat clear)

10 • 1003 DT

n= REG 1.

Each time you press DT to register your input, the number of data input up to that point is indicated on the display (n value).

15 🖸 1005 🖭

20 1010 DT 25 1011 DT

30 🖸 1014 🖭

Regression Coefficient A = 997.4

Regression Coefficient B = 0.56

SHIFT S-VAR 1 =

Correlation Coefficient r = 0.982607368

SHIFT S-VAR 🕨 🕨 3 😑

Atmospheric Pressure at -5°C = 994.6

((-) 5) SHIFT S-VAR **> 2 =**

Temperature at 1000 hPa = 4.642857143

1000 SHIFT S-VAR | | | | | | | 1 | | |

Coefficient of Determination = 0.965517241

SHIFT S-VAR \blacktriangleright \bullet 3 x^2



Logarithmic, Exponential, Power, and Inverse Regression

- Use the same key operations as linear regression to recall results for these types of regression.
- The following shows the regression formulas for each type of regression.

Logarithmic Regression	$y = A + B \cdot \ln x$
Exponential Regression	$y = A \cdot e^{B \cdot x} (\ln y = \ln A + Bx)$
Power Regression	$y = A \cdot x^B (\ln y = \ln A + B \ln x)$
Inverse Regression	$y = A + B \cdot {}^{1}/x$

Quadratic Regression

The regression formula for quadratic regression is:
 y = A + Bx + Cx².

• Example:

x_i	Уi
29	1.6
50	23.5
74	38.0
103	46.4
118	48.0

Perform quadratic regression to determine the regression formula terms for the data nearby. Next, use the regression formula to estimate the values for \hat{y} (estimated value of y) for xi = 16 and \hat{x} (estimated value of x) for yi = 20.

In the RFG Mode:

▶ (Quad)

SHIFT CLR 1 (Scl) (Stat clear)

29 1.6 DT 50 23.5 DT

74 • 38.0 DT 103 • 46.4 DT

118 • 48.0 DT

Regression Coefficient A = -35.59856934Regression Coefficient B = 1.495939413

SHIFT S-VAR ▶ 1 ■
SHIFT S-VAR ▶ 2 ■

Regression Coefficient B = 1.495939413

Regression Coefficient C = $-6.71629667 \times 10^{-3}$ [SHIFT] [S-WAR] [] [3]

ŷ when <i>xi</i> is 16 = -13.38291067	16 SHIFT S-VAR
\hat{x}_1 when y_i is $20 = 47.14556728$	20 SHIFT S-VAR • • • 1 =
\hat{x} 2 when v_i is 20 = 175.5872105	20 SHIFT S-VAR

Data Input Precautions

- DT DT inputs the same data twice.
- You can also input multiple entries of the same data using T. To input the data "20 and 30" five times, for example, press 20 30 T. 5 DT.
- The above results can be obtained in any order, and not necessarily that shown above.
- Precautions when editing data input for standard deviation also apply for regression calculations.
- Do not use variables A through F, X, or Y to store data when performing statistical calculations. These variables are used for statistical calculation temporary memory, so any data you may have assigned to them may be replaced by other values during statistical calculations.
- Entering the REG Mode and selecting a regression type (Lin, Log, Exp, Pwr, Inv, Quad) clears variables A through F, X, and Y. Changing from one regression type to another inside the REG Mode also clears these variables.

Complex Number Calculations



Use the Moot key to enter the CMPLX Mode when you
want to perform calculations that include complex
numbers.

- The current angle unit setting (Deg, Rad, Gra) affects CMPLX Mode calculations.
- Note that you can use variables A, B, C, and M only in the CMPLX Mode. Variables D, E, F, X, and Y are used by the calculator, which frequently changes their values. You should not use these variables in your expressions.
- The indicator "R→I" in the upper right corner of a calculation result display indicates a complex number result. Press I to toggle the display between the real part and imaginary part of the result.


- You can use the replay function in the CMPLX Mode. Since complex numbers are stored in replay memory in the CMPLX Mode, however, more memory than normal is used up.
- Example: (2+3i)+(4+5i) = 6+8i(Real part 6) 2 4 5 i (Imaginary part 8i)

■ Absolute Value and Argument Calculation

Supposing the imaginary number expressed by the rectangular form z=a+bi is represented as a point in the Gaussian plane, you can determine the absolute value (r) and argument (θ) of the complex number. The polar form is $r \angle \theta$.

• Example 1: To determine the absolute value (r) and argument (θ) of 3+4i (Angle unit: Deg)

 $(r = 5, \ \theta = 53.13010235^{\circ})$

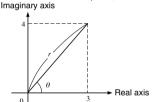

- The complex number can also be input using the polar form $r \angle \theta$.
- Example 2: $\sqrt{2} \angle 45 = 1 + i$ (Angle unit: Deg) 2 = 2 45

■ Rectangular Form ↔ Polar Form Display

You can use the operation described below to convert a rectangular form complex number to its polar form, and a polar form complex number to its rectangular form. Press

 $\mbox{\tiny Be-in}$ to toggle the display between the absolute value (r) and argument $(\theta).$

• Example: $1 + i \leftrightarrow 1.414213562 \angle 45$

• You select rectangular form (a+bi) or polar form $(r \angle \theta)$ for display of complex number calculation results.

- 1 (a+bi): Rectangular form
- $2(r\angle\theta)$: Polar form (indicated by " $r\angle\theta$ " on the display)

■ Conjugate of a Complex Number

For any complex number z where z=a+bi, its conjugate (\overline{z}) is $\overline{z}=a-bi$.

• Example: To determine the conjugate of the complex number 1.23 + 2.34*i* (Result: 1.23 - 2.34*i*)

SHIFT	Conjg	1	23	# 2	2 🖸 3	34 <i>i</i>		
						(SHIFT	Re⊷lm

Base-*n* Calculations (BASE)

Use the [600] key to enter the BASE Mode when you

want to perform calculations using Base-*n* values.

- In addition to decimal values, calculations can be performed using binary, octal and hexadecimal values.
- You can specify the default number system to be applied to all input and displayed values, and the number system for individual values as you input them.
- You cannot use scientific functions in binary, octal, decimal, and hexadecimal calculations. You cannot input values that include decimal part and an exponent.
- · If you input a value that includes a decimal part, the unit

automatically cuts off the decimal part.

- Negative binary, octal, and hexadecimal values are produced by taking the two's complement.
- You can use the following logical operators between values in Base-n calculations: and (logical product), or (logical sum), xor (exclusive or), xnor (exclusive nor), Not (bitwise complement), and Neg (negation).
- The following are the allowable ranges for each of the available number systems.

• Example 1: To perform the following calculation and produce a binary result:

Binary mode: AC BIN 0.

10111 🛨 11010 🖃

 $10111_2 + 11010_2 = 110001_2$

• Example 2: To perform the following calculation and produce an octal result:

LOGIC LOGIC 1 (d) 12

 Example 3: To perform the following calculation and produce a hexadecimal and a decimal result:

[LOGIC] [LOGIC] [3 (b) 1101

Decimal mode:

• Example 4: To convert the value 22_{10} to its binary, octal, and hexadecimal equivalents. (10110₂, 26₈, 16₁₆)

 Example 5: To convert the value 513₁₀ to its binary equivalent.

Binary mode: 0. b 0. b 0. b Math ERROR b

- You may not be able to convert a value from a number system whose calculation range is greater than the calculation range of the resulting number system.
- The message "Math ERROR" indicates that the result has too many digits (overflow).

Technical Information

■ When you have a problem.....

If calculation results are not what you expect or if an error occurs, perform the following steps.

- Press (MODE) (Mode) to initialize all modes and settings.
- Check the formula you are working with to confirm it is correct.
- 3. Enter the correct mode and try performing the calculation again.

If the above steps do not correct the problem, press the (III) key. The calculator performs a self-check operation and deletes all data stored in memory if any abnormality is detected. Make sure you always keep written copies of all important data.

■ Error Messages

The calculator is locked up while an error message is on the display. Press to clear the error, or press or to display the calculation and correct the problem. See "Error Locator" for details.

Math ERROR

Causes

- Calculation result is outside the allowable calculation range.
- An attempt to perform a function calculation using a value that exceeds the allowable input range.
- An attempt to perform an illogical operation (division by zero, etc.)

Action

 Check your input values and make sure they are all within the allowable ranges. Pay special attention to values in any memory areas you are using.

Stack ERROR

Cause

 The capacity of the numeric stack or operator stack is exceeded.

Action

- Simplify the calculation. The numeric stack has 10 levels and the operator stack has 24 levels.
- Divide your calculation into two or more separate parts.

Syntax ERROR

Cause

An attempt to perform an illegal mathematical operation.

Action

Press
 or
 to display the calculation with the cursor located at the location of the error and make required corrections.

Arg ERROR

- Cause
 - · Improper use of an argument
- Action
 - Press or to display the location of the cause of the error and make required corrections.

■ Order of Operations

Calculations are performed in the following order of precedence.

- ① Coordinate transformation: Pol (x, y), Rec (r, θ) Normal distribution: P(, Q(, R(
- 2 Type A functions:

With these functions, the value is entered and then the function key is pressed.

$$x^3, x^2, x^{-1}, x!, \circ$$

Engineering symbols

Normal distribution: $\rightarrow t$

$$\hat{x}$$
, \hat{x}_1 , \hat{x}_2 , \hat{y}

Angle unit conversions (DRG►)

- (3) Powers and roots: $^{\land}(x^y)$, $^x\sqrt{}$
- $(4) a^b/c$
- ⑤ Abbreviated multiplication format in front of π, e (natural logarithm base), memory name, or variable name: 2π, 3e, 5A, πA, etc.
- (6) Type B functions:

With these functions, the function key is pressed and then the value is entered.

then the value is entered in
$$e^{-x}$$
, 10^x

- Abbreviated multiplication format in front of Type B functions: 2 \(\sqrt{3} \), Alog2, etc.
- (8) Permutation and combination: nPr, nCr
- ∠ ⑨×, ÷
- 9 ×, ÷
- (11) and
- 12 xnor, xor, or


- Operations of the same precedence are performed from right to left. $e^x ln \sqrt{-120} \rightarrow e^x \{ ln (\sqrt{-120}) \}$
- · Other operations are performed from left to right.
- Operations enclosed in parentheses are performed first.
- When a calculation contains an argument that is a negative number, the negative number must be enclosed within parentheses. The negative sign (-) is treated as a Type B function, so particular care is required when the calculation includes a high-priority Type A function, or power or root operations.

Example:
$$(-2)^4 = 16$$
 $-2^4 = -16$

■ Stacks

This calculator uses memory areas, called "stacks," to temporarily store values (numeric stack) and commands (command stack) according to their precedence during calculations. The numeric stack has 10 levels and the command stack has 24 levels. A stack error (Stack ERROR) occurs whenever you try to perform a calculation that is so complex that the capacity of a stack is exceeded.

• Example:

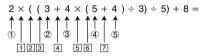

Numeric Stack Command Stack

① 2 ② 3 ③ 4 ④ 5
3 4 4 5
4 5
(5) A
🔍 🕶
:

nmai	าต 5น	3
1	×	
2	(
3	(
4	+	
5	×	
6	(
7	+	
:		

 Calculations are performed in sequence according to "Order of Operations." Commands and values are deleted from the stack as the calculation is performed.

■ Input Ranges

Internal digits: 12

Accuracy*: As a rule, accuracy is ±1 at the 10th digit.

Functions		Input Range		
sinx	DEG $0 \le x \le 4.499999999 \times 10^{10}$			
	RAD 0≦ x ≦785398163.3			
	GRA $0 \le x \le 4.999999999 \times 10^{10}$			
cosx	DEG	$0 \le x \le 4.500000008 \times 10^{10}$		
	RAD $0 \le x \le 785398164.9$			
	GRA $0 \le x \le 5.000000009 \times 10^{10}$			
tanx	DEG	Same as $\sin x$, except when $ x = (2n-1) \times 90$.		
	RAD	Same as $\sin x$, except when $ x = (2n-1) \times \pi/2$.		
	GRA	GRA Same as $\sin x$, except when $ x = (2n-1) \times 100$.		
sin⁻¹x	0< 1	r <1		
COS ⁻¹ X	$0 \le x \le 1$			
tan-1x	0≦ ₂	x ≤9.99999999×10 ⁹⁹		
sinhx	0≤ ₁	x ≦230.2585092		
coshx	-	., ====================================		
sinh ⁻¹ x	$0 \le x \le 4.999999999 \times 10^{99}$			
cosh ⁻¹ x	1≦ <i>x</i> ≦4.99999999×10 ⁹⁹			
tanhx	$0 \le x \le 9.99999999 \times 10^{99}$			
tanh-1x	$0 \le x \le 9.99999999 \times 10^{-1}$			
logx/lnx	0< x ≤9.99999999×10 ⁹⁹			
10 ^x	$-9.999999999\times10^{99} \le x \le 99.99999999$			
e^x	$-9.999999999 \times 10^{99} \le x \le 230.2585092$			
\sqrt{x}	$0 \le x < 1 \times 10^{100}$			
X ²	$ x < 1 \times 10^{50}$			
1/ <i>x</i>	$ x < 1 \times 10^{100}$; $x \neq 0$			
³ √ <i>X</i>	x	1× 10 ¹⁰⁰		
		20		

Functions	Input Range
x!	$0 \le x \le 69$ (x is an integer)
nPr	$0 \le n < 1 \times 10^{10}, 0 \le r \le n \ (n, r \text{ are integers})$ $1 \le \{n!/(n-r)!\} < 1 \times 10^{100}$
nCr	$0 \le n < 1 \times 10^{10}, 0 \le r \le n \ (n, r \text{ are integers})$ $1 \le [n!/\{r!(n-r)!\}] < 1 \times 10^{100}$
Pol(x, y)	$ x , y \le 9.999999999 \times 10^{49}$ $(x^2 + y^2) \le 9.999999999 \times 10^{99}$
$Rec(r, \theta)$	0≦ r ≦9.99999999×10 ⁹⁹ θ: Same as sin <i>x</i>
0, ,,	$ a , b, c < 1 \times 10^{100}$ $0 \le b, c$
÷ 0' "	x <1×10 ¹⁰⁰ Decimal \leftrightarrow Sexagesimal Conversions 0°0°0°≤ $ x $ ≤999999°59°
^(x ^y)	$x>0: -1\times 10^{100} < y \log x < 100$ x=0: y>0 $x<0: y=n, \frac{1}{2n+1} (n \text{ is an integer})$ However: $-1\times 10^{100} < y \log x < 100$
$x\sqrt{y}$	y>0: $x \neq 0$, $-1 \times 10^{100} < 1/x \log y < 100$ y=0: $x > 0$ y<0: $x = 2n + 1$, $\frac{1}{n}$ ($n \neq 0$; n is an integer) However: $-1 \times 10^{100} < 1/x \log y < 100$
a^{b}/c	Total of integer, numerator, and denominator must be 10 digits or less (including division marks).
SD (REG)	$ x < 1 \times 10^{50}$ $ y < 1 \times 10^{50}$ $ n < 1 \times 10^{100}$ $x\sigma_n, y\sigma_n, \bar{x}, \bar{y} : n \neq 0$ $x\sigma_{n-1}, y\sigma_{n-1}, A, B, r : n \neq 0, 1$ single calculation calculation error is ± 1 at the

 $^{^{\}star}$ For a single calculation, calculation error is ± 1 at the 10th digit. (In the case of exponential display, calculation error is ± 1 at the last significant digit.) Errors are cumulative in the case of consecutive calculations, which can also cause them to become large. (This is also true of

internal consecutive calculations that are performed in the case of $\,^{\alpha}\!(x^{y}),\,^{x}\!\sqrt{y}$, $x!,\,^{3}\!\sqrt{}$, $nPr,\,nCr,$ etc.) In the vicinity of a function's singular point and point of

In the vicinity of a function's singular point and point of inflection, errors are cumulative and may become large.

Power Supply

This calculator is powered by a single AA-size battery.

Replacing the Battery


Dim figures on the display of the calculator indicate that battery power is low. Continued use of the calculator when the battery is low can result in improper operation. Replace the battery as soon as possible when display figures become dim.

To replace the battery

1) Press [SHIFT] OFF to turn power off. Screw

② Remove the six screws that hold the back cover in place and then remove the back cover.

- 3 Remove the old battery.
- ④ Load a new battery into the unit with its positive ⊕ and negative ⊖ ends facing correctly.
- ⑤ Replace the back cover and secure it in place with the six screws.
- 6 Press N to turn power on.

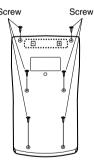

Auto Power Off

Calculator power automatically turns off if you do not perform any operation for about six minutes. When this happens, press (M) to turn power back on.

Specifications

Power Supply: Single AA-size battery (R6P (SUM-3))

Battery Life: Approximately 17,000 hours continuous

display of flashing cursor.

Approximately 2 years when left with

power turned off.

Dimensions: 20.0 (H) \times 78 (W) \times 155 (D) mm

 $^{13/16''}$ (H) \times $^{31/16''}$ (W) \times $^{61/8''}$ (D)

Weight: 133 g (4.7 oz) including battery

Power Consumption: 0.0002 W

Operating Temperature: 0°C to 40°C (32°F to 104°F)

CASIO_®

CASIO COMPUTER CO., LTD.

6-2, Hon-machi 1-chome Shibuya-ku, Tokyo 151-8543, Japan