

# WINAUTO



(044)361-05-06

ICQ:495-089-192

(067)469-02-12

ICQ:613-211-859

(099)048-99-03

(093)672-77-76

## User's Manual

DVD/CD/USB/SD receiver Boss Audio BV9965I

In the online store Winauto you also can buy [DVD/USB receiver Boss Audio BV9965I](http://winauto.ua). Delivery in Kyiv and throughout Ukraine with payment upon receipt!

[winauto.ua](http://winauto.ua)



Archive - Audio, video - Sound and Components - Car Safety and security - Car DVRs, cameras, parking - Car Goods - Automotive Lighting - Tweak - Car Chemicals and Power Supply - Sale -



## User's Manual

### BV9965

**IN-DASH DVD/MP3/CD AM/FM  
RECEIVER WITH MOTORIZED  
FLIP-OUT 7" (178mm) TOUCHSCREEN  
WIDESCREEN DIGITAL TFT MONITOR  
WITH USB AND SD MEMORY CARD PORTS  
AND FRONT PANEL AUX INPUT**



### BV9965

**IN-DASH DVD/MP3/CD AM/FM RECEIVER  
WITH MOTORIZED FLIP-OUT 7" (178mm)  
TOUCHSCREEN WIDESCREEN DIGITAL TFT MONITOR  
WITH USB AND SD MEMORY CARD PORTS AND  
FRONT PANEL AUX INPUT**

**BOSS**<sup>®</sup>  
AUDIO SYSTEMS

BOSS Audio Systems  
3451 Lunar Court • Oxnard, CA 93030

[www.bossaudio.com](http://www.bossaudio.com)

**800.999.1236**

**BOSS**<sup>®</sup>  
AUDIO SYSTEMS

Boss Audio Systems is not affiliated with Apple, Inc.

09.2011



iPod® is a trademark of Apple, Inc.  
registered in the U.S. and other countries.

**tech support: [www.bossaudio.com/support](http://www.bossaudio.com/support)**

**ACCESSORY**

Accessory	Quantity
User Manual	2PCS
Wire	1PC
USB Cable	1PC
Keys	2PCS
Install metal bar	1PC
Remote controller	1PC
Warranty card	2PCS
IPOD Cable	1PC

**DVD Parental control function****DVD Parental control function**

★ DVD Parental control function: The default set for DVD is #8 adult, which means all grades of DVD can be read without entering password. To change the default grade, you need to follow the below procedure: Press SETUP button on the remote, display will show the system set up menu and the submenu, select password and enter 0000, you will be able to choose the DVD grade as default.



**INSTRUCTIONS****TROUBLE SHOOTING**

 
PROBLEM	CAUSE	SOLUTION
Cannot power on	Check fuse	Change fuse same as the old one
	Some factors cause MPU wrong operation	Press RES button on the panel by penpoint, then, power on
After ignition switch off ,setting information all lose	Change battery or fuse	Reset information and save
Poor performance of radio station	Weak signal	Move the car to another place, then research
Connot load disk	There is a disk inside	Remove disc before inserting another one
Cannot play disc	Disc is scratched	Change new disc
	Put wrong side of disc into the unit	Insert in the disk with sign side up
	Lens is dirty	Clean lens by lens clean disc
Cannot switch language/subtitle	There is only one language/ subtitle in disc	If disc is not with multi-language/subtitle, it cannot switch language/subtitle
No image	Other factors cause MPU wrong operation	Press [RES] button on the panel by penpoint, then, power on
Cannot watch image during driving	It's not allowed to watch image during driving	Park the car in a safe place, put the car stall in " P " postion, pull up the hand brake, parking brake wire must be grounded

**INSTRUCTIONS****CONTENTS**

Panel Introduction .....	02
<b>Basic Functions</b> .....	03
<b>Remote Control Function</b> .....	05
Turn the Unit On/Off .....	07
Enter into the Main Interface .....	07
Play SD card/USB memory device .....	07
Radio Function Operation .....	08
Disc Function Operation .....	09
Play/Eject Disc .....	09
DVD/VCD Disc Playback .....	09
CD Disc Playback .....	09
MP3/WMA Format Disc Playback .....	09
Touch Menu Function .....	09
iPod function operation (Optional) .....	11
External input operation (Optional) .....	11
Other Function Operations .....	11
Rear view function .....	11
General setting .....	12
Time setting .....	12
Language Setup .....	12
Video Setup .....	12
Audio setting .....	13
Steering Wheel Setup(Optional) .....	13
Touch calibration .....	13
Wiring Diagram .....	15
Trouble shooting .....	16
Accessory .....	17
DVD Parental control function .....	17

## INSTRUCTIONS

## PANEL ARRANGEMENT

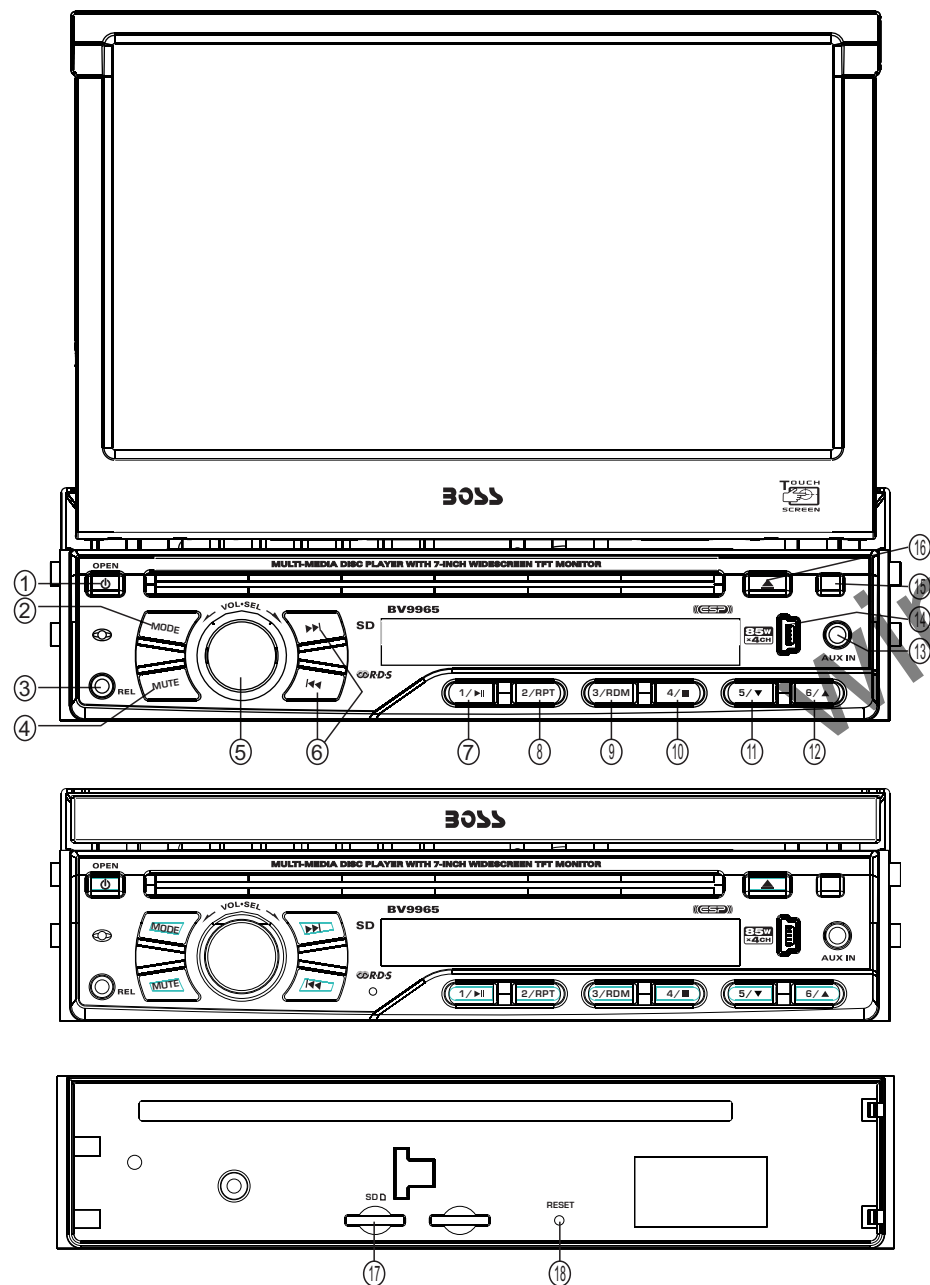


## INSTRUCTIONS

## WIRING DIAGRAM

This player is equipped with ISO standard connector, please follow below instruction:

 - Red - ACC ON (+12V)
- Yellow - 12 V Constant
- Black - Ground wire
- Blue - Power Antenna / Remote Amp Turn On
- Orange - Back-Up Camera Trigger (+)
- Grey/Grey black - Right front speaker (+/-)
- White/White black - Left front speaker (+/-)
- Purple/Purple black - Right rear speaker (+/-)
- Green/Green black - Left rear speaker (+/-)
- Pink - Parking Brake (-)

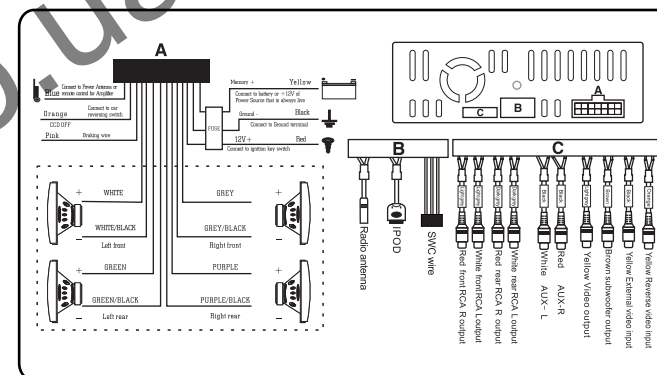

## Note:


The "PARKING BRAKE" wire must be connected to the parking brake system of your car. When the parking brake is engaged, the LCD will be allowed to view your video. If not, the screen will produce an image saying, "PARKING BRAKE". This is a safety feature designed for the driver not to watch a video while driving. The video output on this unit will not be affected by this.

## INSTRUCTIONS

### Calibration to re-gain touch

 
★ Please follow the below instructions to calibrate when there is no touch or touch is not accurate.

**Step 1:** Press the mode button in the unit to switch to DVD mode.


**Step 2:** Insert a DVD disc, after DVD is loaded, press the stop button “” (as show in picture 1.) in the remote short, the unit will display as show in picture 2.




Picture ( 1 )

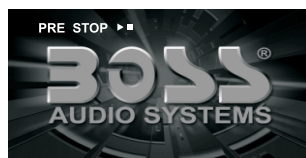

Picture ( 2 )

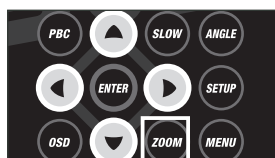 

**Step 3:** Press “” in the remote as show in picture (3), the unit will display as show in picture (4)

 


Picture ( 3 )




Picture ( 4 )

**Step 4:** Press “” button in the remote and then quickly press “” button and you will enter the touch calibration interface.

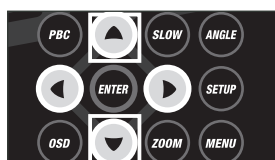

Picture ( 5 )

 

Picture ( 6 )

**Step 5:** User the touch pen to touch the center of the cross cursor, the cross cursor will move from the center to top left corner, top right corner, right down, left down, when the cross cursor stop at each corner, touch the center of the cursor. Then the panel will display OK and leave the calibration interface and the unit regained touch.



Picture ( 7 )

## INSTRUCTIONS

### BASIC FUNCTION

 
#### 1. OPEN

Press the button to open/close the screen.

#### 2. MODE Button

When the unit is power on, Repeat press this button can switch to different function mode as following picture.

**Note:** When the device without connecting to USB, SD, or DVD no disc inside, the system will automatically skip these related working mode.

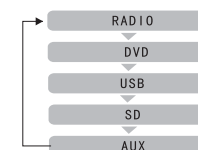

#### 3. RELEASE Button


Press this button to release the panel.

#### 4. MUTE/TFT on/off Button

Press this button to shut off sound output, repress this button to resume sound output; Long press this button longer to turn on/off TFT LCD display.

#### 5.(VOL/SEL) Volume adjustment mode

Repeat pressing this button can select the VOL. BAS. TRE. FAD adjustment mode. Then can rotate the button to adjust VOL. BAS. TRE. FAD as you like.

**6. SEEK Knob/( / )/(SEEK+/SEEK-)/(SEEK/SEEK)(Speed forward/backward/Select station/song)**  
In radio mode, press/rotate the knob to select station upward/backward. Long press/rotate the knob to automatically scan station.

In playback mode, short press/rotate the knob to select song upward/backward, long press/rotate it to achieve speed forward/backward function.

#### 7.Number Button 1 /

In radio mode, press this button to hear radio preset;

In disc playback mode, press this button for Play/Pause.

#### 8.Number Button 2/RPT (Repeat Playback)

In radio mode, press this button to hear radio preset;

In disc playback mode, press this button to repeat the current track indefinitely.

#### 9 .Number Button 3/RDM (Random playback)

In radio mode, press this button to hear radio preset;

In disc playback mode, press this button to play tracks on the disc in random order.

## INSTRUCTIONS

### 10. Number Button 4/■

In radio mode, press this button to hear radio preset;  
In disc playback mode, press this button for to stop playback.

### 11. Number Button 5/▼

In playback mode, press the button to select the next song.

### 12. Number Button 6/▲

In playback mode, press the button to select the previous song..

### 13. AUX

Insert AUX input cable, then press AUX con enters AUX mode.

### 14. USB

Insert USB device, the unit will play the files automaticlly.

### 15. IR

To receive infrared signal from the remote controll.

### 16.▲

When there is a disc in the unit, press the button to eject the disc.

### 17. SD


Insert SD/MMC card, the unit will play the files automaticlly.

### 18. RESET

If the unit or its connected device does not work normally, use prong object to press the button.  
After the unit restart, the setup returns to its previous status.

## INSTRUCTIONS

### Audio setting


Click  icon on setup interface to access audio setting interface, as shown in right(PIC 1) diagram:

You can turn on or turn off the existing functions on audio setting interface.




PIC 1

### Steering wheel setting

- I. Click  icon on setup interface so as to access steering wheel setting interface.
- II. Connect anode and cathode of direction control wire of the car with anode and cathode of direction control wire of this device, and press the buttons on steering wheel one by one and record the corresponding sequence and functions, then click **[Allocation]**.
- III. Click the button of steering wheel needs to be allotted so as to select the corresponding setting function, such as volume +.
- IIII. Buttons on steering wheel shall display the corresponding functions, such as volume + .
  - To modify function settings, repeat procedures 3~4. Click [Enter] to save the settings.
  - To reset functions, click [Reset] icon, all the settings set before shall be cleared, repeat procedures 3~4 for resetting.

### Touch calibration

If touch calibration error occurs, you can adjust the touch coordinate by “Touch calibration”.

Click  icon on setup interface, input password [888888] to confirm to access touch calibration interface, as shown in below diagram:

### Touching methods


Use touch pen to click the center of “+” icon, and move along with center of “+” icon so as to calibrate the screen. It shall automatically save data and exit after screen calibration. Please accurately click all positions on screen, or the accuracy of touch calibration shall be affected.


## INSTRUCTIONS

### Access setup interface

Click [Setup] icon on main interface to access setup interface.

### General setting

Click  icon on setup interface to access general setting interface, as shown in below PIC 1 diagram:

In general setting interface, you can select to turn on or turn off the existing functions. You can set wallpaper and opening picture you like and check version number of DV/DC, click  icon to browse up/down.


### Wallpaper selection



Click  icon on wallpaper bar ,  direction icon shall pop up, click it to select wallpaper.

### Opening picture

Click  icon on opening picture bar ,  direction icon shall pop up, click it to select opening picture.

### Time setting

Click  icon on setup interface to access time setting interface, as shown in below PIC 2 diagram:

Click  icon on time bar , time setting interface shall display, as shown in below PIC 3 diagram:

Click  icon beside hour and minute to separately set hour and minute.



PIC 1






PIC 2




PIC 3

### Language Setup

During use, you can select your familiar language to display menu by language setup. Click  icon on setup interface to access language setting interface, as shown in right (PIC 4) diagram:

Click the corresponding  icon on the language bar desired to be set so as to switch the language type, when there are more than 3 languages,  direction icon shall pop up, click it to select your familiar language.

### Video setting

Click  icon on setup interface to access video setting interface, as shown in right (PIC 5) diagram:

At video setting interface, you can adjust brightness, contrast, saturation and hue of the video.




PIC 4



PIC 5

## INSTRUCTIONS
 
### REMOTE CONTROL FUNCTION

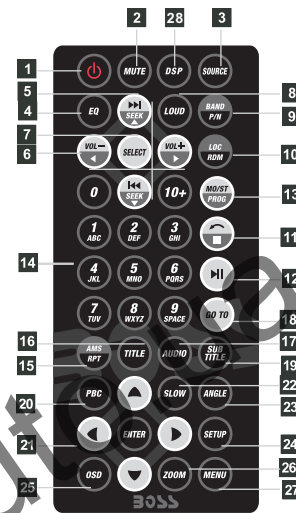

1 POWER ON/OFF	15 AMS/RPT
2 MUTE	16 TITLE
3 SOURCE	17 AUDIO
4 EQ	18 SET PLAYING TIME
5 SEEK+/SEEK-	19 SUBTITLE
6 VOL+/VOL-	20 PBC/MENU
7 SEL	21 UP/DOWN/L/R ENTER
8 LOUD	22 SLOW
9 BAND/ P/N	23 ANGLE
10 LOC / RDM	24 SET UP
11 STOP	25 OSD
12 PLAY/PAUSE	26 ZOOM
13 ST/PROG	27 MENU
14 0-10+	28 DSP

#### 1. POWER

Press once to switch on, press again to switch off.

#### 2. MUTE Button

Press once to turn off audio output, press again to resume volume level.

#### 3. SOURCE Button

Press this button to choose audio sources.

#### 4. EQ Button

Press this button to choose POP, ROCK, CLASS, EQ off.

#### 5. SEEK + (▶▶) / SEEK - (◀◀) Button

Press this button to manual turning, speed or quick back, previous song and next song.

#### 6. VOL + (→) / VOL - (←)

Press this button to increase or decrease volume level.

#### 7. SEL Button

Press this button to choose sound feature.

#### 8. LOUD Button

Press this button to startup LOUD function.

#### 9. BAND - P/N Button

In radio mode, press this button to choose band. In VCD, DVD mode, press this button to choose AUTO, PAL or NTSC system.

#### 10. LOC/RDM Button

In radio mode, press this button to switch between local and direction. In VCD, CD mode, press this key to randomly play.

#### 11. STOP Button

Press this button to stop playing.

#### 12. PLAY/PAUSE Button

Press this button to switch between play and pause. In stop mode, press this button to play.

#### 13. ST/ PROG Button

In radio mode, press this button to choose stereo or mono station. In audio mode, it can help STOP button to programmed play.



## INSTRUCTIONS

### 14. 0 - 10 + Button

Press this button to choose desired song, section, preset stations.

\* Decimal numbers, for example the 19th song, press 1,9 button;

\* Centesimal numbers, for example, the 120th song, press 1,2,0 button.

### 15. AMS / RPT Button

In radio mode, press this button to browse stored stations. In audio mode, press this button to play repeatedly.

### 16. TITLE Button

In DVD mode, press this button to play back to the top menu of disc.

### 17. AUDIO Button

In DVD mode, press this button to switch language of dialogue. In VCD mode, press this button to choose left track, right track, and stereo.

### 18. SET Playing Time

In DVD mode, press this button, you can define playing time.

### 19. SUBTITLE Button

In DVD mode, press this button to switch language of subtitle.

### 20. PBC Button

In VCD mode, press this button to display all song menus, work with number button to choose songs.

### 21. UP, DOWN, LEFT, RIGHT, ENTER Button

In DVD mode, press this button to move cursor up, down, left, right to choose item in menu. Press the enter button to confirm choice.

### 22. SLOW Button

In audio mode, press this button to slow backward and slow forward.

### 23. ANGLE Button

In DVD mode, press this button to change play angle.

### 24. SETUP Button

In audio mode, press this button to choose different set items.

### 25. OSD Display

Press this button to display the title chapter and the left time.

### 26. ZOOM Button

In DVD/VCD mode, press this button to ZOOM in.

### 27. MENU Button

Press button to back to the main menu.

 
### 28.DSP

Press this button to show the time.


### BATTERY CHANGE

When control distance of remote control becomes shorter or no function, please change battery. Please confirm polarity before change.


One hand press stopper, then pull out battery.

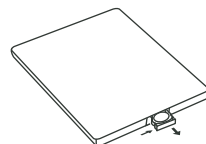

Put battery into controller.

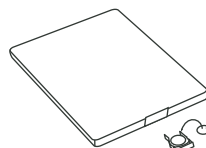 


Insert battery holder into controller.

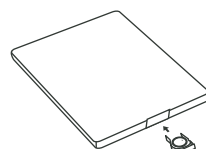 

## INSTRUCTIONS

### iPod function operation

 Connect to iPod first, touch [iPod] icon on main interface to access iPod interface, as shown in below diagram.

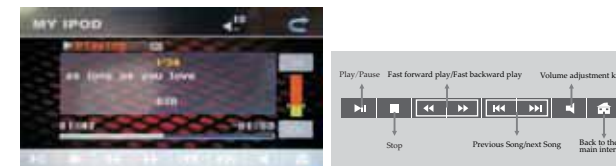

### External input operation

Connect the video input plug with external video input jack, and connect the audio input plug with external audio input jack.

 
Touch [Input] icon on main interface to access external input interface.

Audio – You can adjust the volume, bass, pitch for input audio.

You can adjust the speaker volume by adjusting the front and back, left and right column.

Video – You can adjust the brightness, contrast, saturation and hue for input video.

You can also choose the video standard mode.

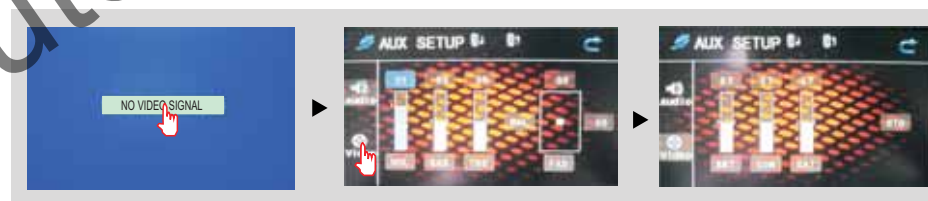


### Other functions

#### Rearview function

In any running state, the video signal can switch to reverse video state when reversing the car, and the system shall return to its initial running state after reversing the car.

#### ⚠ Warning

 Do not rely on CCD system completely, **please make sure you use your direct eyesight while driving**. Back rearview system only assists in driving. As the distance range of rearview system is limited, completely relying on the rearview system during driving may cause accidents.

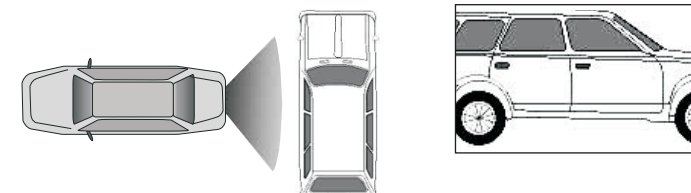

Reverse field simulation

Rearview backup image

## INSTRUCTIONS

### Access next menu

Touch it to access the next menu interface.

### Time setting

Touch this button to access time setting interface.

### Stereo on/off

Touch it so as to turn on/off stereo.

### Return to root menu

Touch this icon, it shall return to root menu of disk in DVD state and access PBC menu playing in VCD state. All chapters in the disk shall be displayed on the interface, touch the chapter icon directly for playing.

### Access title menu

Press this button to return to title menu of the disk. Directly click menu bar at title menu interface for playing.

### Repeat play

In playing state, touch this button to start repeat play function: Chapter repeat — Title repeat — Off.

During VCD playing, this function only works when PBC is off.

### Language selection

Touch this button to select language.

### Digit keyboard

Touch this button and digit keyboard shall appear, click number buttons directly to select tracks for playing.

### Randomly play



Touch this button to instantly play each song. Press again to back to the normal play.

### Zoom in/Zoom out image

Touch this button to zoom in /zoom out the image.

## INSTRUCTIONS

### Turn on/off Host

When the ignition switch is put in ACC or ON position, Press[  ] button on the front panel to turn on the unit. After the host starts, hold [  ] button for 3 seconds, the host will turn off.

### Access main interface

In boot-up state, press POWER button on the panel to switch to main interface, as shown in below picture:

Touch the function icons so as to access the corresponding function operations.



### USB/SD Card function operation

When there is a USB device/SD card connected, the unit can conduct the playback of audio/video/image files in the USB device/SD card.



### Insert/Eject USB storage device

1. Connect a USB recorded with media information to the unit by a USB connecting cable.
2. When there is a need to eject the USB device, exit the USB device playback screen first, and then take out the device.

### Insert/Eject SD card

1. Insert a SD card recorded with media information into the SD card slot in the unit correctly until it is locked.
2. When pulling out the SD card, exit SD card playing state first, then press the SD card and it shall pop up after unlocking.

### Enter/exit

Insert a USB storage device or SD card to automatically play data contained in it. If the unit has connected with a USB device or SD card, touch[  ] in the main interface to enter into the external storage playback interface; Touch[  ] to enter into the SD card playback interface. During playback, touch the top center area of the screen to pop up the touch menu, operate touch menu to perform various playback controls.

### Play


After SD card/USB removable device being read out, the operation methods are similar to disk operation methods.

## INSTRUCTIONS

### Radio Function Operation

#### ★Enter/exit

Touch [ RADIO ] icon in the main interface to enter into the radio interface.

Touch  icon to return to main interface, and then touch other function icons so as to exit radio mode.

#### ★Band selection


Click [BND] icon so as to switch among AM1, AM2, Fm1, FM2, FM3 bands.

#### ★Search/Save radio stations

• Short press [Scan] icon to browse the stored radio stations.

• FM band can save 18 radio stations (Six stations for FM1/FM2/FM3), AM band can save 12 radio stations (Six stations for AM1/AM2).

#### ★Scan radio

Short press  icon to manually fine-tune radio stations upward/downward.

Long press  icon to automatically search and save radio stations.

#### ★Sound setting

Click [Sound] icon can switch to different sound mode.

#### ★Turn on/off the Long/Short-range

Click [Long/Short-range] icon so as to turn on/off Long/Short-Range function.

Note: This function is available only when FM band is selected.

#### ★Loudness on/off

Click [Loudness] icon so as to turn on/off loudness function.

#### ★Stereo on/off


When receiving stereo signals, click [Stereo] icon to turn on/off stereo.

#### ★Mute on/off

Click [Mute] icon to turn on/off mute function

#### ★TFT on/off

Click  icon to turn off TFT, and then click the screen area so as to turn on TFT.

Click  icon so as to slide screen angle.


### RDS Function

 
RDS function provides series information (such as traffice information, name of station), and can automatically switch to the station with stronger signal and carries the same program.

**AF** AF: touch the button to turn on/off AF mode

**TA** TA: touch the button to turn on/off TA mode

**PTY** PTY: touch the button the screen displays program types, users can search station according to program type

 If the unit does not have RDS function, it has no AF/TA/PTY function. The corresponding icon appears grey.

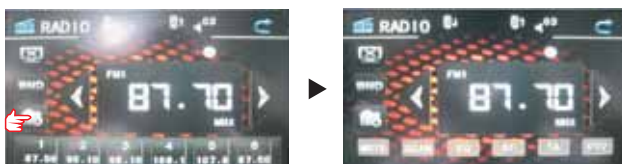

## INSTRUCTIONS

 
### Disc Function Operation

#### ★ Play/eject disc

##### Play disc

Insert the disc into the disc slot with the printing surface up, system will detect the disc and automatically take it in to read and play.

##### Eject disc

(1) Click  button on the panel to eject the disc.

(2) If a disc has not been took away 15 seconds after it is ejected, system will automatically take in the disc but not play.

**▲ Do not insert two discs or more.**

#### ★DVD/VCD disc playback

During playback of disc, touch the middle lower area of the screen to pop up the touch menu, operate the touch menu to perform various playback controls. **(PIC 1)**

#### ★CD Disc Playback

After a CD is inserted, system shall access **disc** reading state immediately.

When there is a **disc** in the device, click [Disc] at the main interface so as to access **disc** reading state.

After the **disc** being read out, system shall automatically play in sequence.

#### ★MP3/JPEG/MPEG4 disk playing

When the **disc** contains readable files, such as MP3/JPEG/MPEG4 files, it shall be automatically read out and played after slipping into DVD player.

During playing, touch the screen area and the touch menu shall pop up. Operate the touch menu for various playing.

#### ★Touch Menu Function Description

 — Play/pause

Touch the button to pause, retouch it to continue to play.

 — Stop


Touch the button to enter into prestop status.

 
 — Fast forward/backward

Consecutively touch this button to select the speed of fast-forward/fast-backward.

 — The previous/next song

Touch the button to select the previous/next song.

 — Volume adjustment button

Touch this button and volume adjustment modulation shall pop up, touch  button to adjust the volume.



PIC 1

