

Confidence by Control



SIDE-POWER Thruster Systems

Installation & User Manual Radio Remote 8980 / 8981



SLEIPNER MOTOR AS
P.O. Box 519
N-1612 Fredrikstad
Norway
Tel: +47 69 30 00 60
Fax: +47 69 30 00 70



www.side-power.com
sidepower@sleipner.no

Made in Norway

© Sleipner Motor AS version 3.3 - 2009

Contents

Model range.....	2
Technical specifications.....	3
Important precautions.....	4
Receiver installation.....	6
"Visual" wiring diagram.....	6
Programming additional transmitters.....	7
Replacing the batteries.....	8
User precautions.....	9
How to use Sidepower thrusters.....	10
Service Partners.....	12

Model range

The radio remote control can control a single bow thruster or a bow and stern thruster combined. The receiver can receive the signals of up to four transmitters.

Remote control kit (8980) consists of:

- Receiver: Part# 8918A
- Transmitter (incl. battery): Part# 8981
- Holding bracket for transmitter unit: Part# 8926

Additional transmitters can be ordered separately: Part# 8981

- **Part# 8980**
The transmitter and the receiver have the same factory preset code so no programming is necessary. The battery is already inserted in the transmitter.
- **Additional transmitter(s) Part#8981**
When additional transmitters are to be used, the receiver must be programmed again for all transmitters (please see programming section on page 6).



We **Sleipner Motor AS** declare that this device complies with health and safety requirements according to the Directive 89/336/EEC of 23 May 1989 amended by 92/31/EEC and 93/68/EEC.



Technical specifications



	Transmitter	Receiver
Model	8981	8918A
Power feed	2 x 3V battery (type: CR2032)	From thruster
Frequency (MHz)	433,92	433,92
Address range	65.000	65.000
Operation temp.	-150C / +550C	-150C / +550C
Technology	S.M.T.	S.M.T.
HxWxD (mm)	95x48x25	90x60x30
Weight (g)	60	135

Important precautions

- You must always install at least one original Sidepower panel.
- With the boat on land, only run the thruster for a fraction of a second, as without resistance it will accelerate very fast to a damaging rpm.
- This manual is intended to support educated / experienced staff and is therefore not sufficient in all details for the correct installation.
- When installed in boats approved or classified according to international or special national rules, the installer is responsible for following the demands in accordance with these regulations / classification rules. The instructions in this guide can not be guaranteed to comply with all different regulations / classification rules.
- The transmitter and the receiver have the same factory preset code so no programming is necessary. When additional transmitters are to be used, the receiver must be programmed again for all transmitters (please see programming section on page 7).
- If a Sidepower automatic main switch is fitted, the "OFF" button on your transmitter will shut off the main switch providing no other control panels are "ON".



Receiver installation

Prior to installation, it is important that the responsible installer reads this guide to ensure necessary acquaintance with this product.

Warning!

- Remote receiver power supply negative lead must be connected to the thrusters's negative lead.

Caution!




- Install the receiver minimum 1 meter (3ft and 3in) from high power cables and NMEA cables or other sources of electrical interference, i.e. navigation instruments, radio communication devices, electro motors and generators.
- Install the receiver outside of shielded areas for radio signals, i.e. Boxes made of steel or other material with shielding properties.
- Install the receiver in a dry environment, with cables pointing downwards. (The receiver assembly is not waterproof.)
- When additional transmitters are to be used, the receiver must be programmed again for all transmitters (please see programming section on page 7).
- The receiver must have a separate power supply fitted with a 5 Amp fuse in the positive lead that has either a separate power switch or is shut of by the thrusters system main power switch. The receiver can not be powered by the thrusters's control looms even if you find positive and negative lead there.
- Mount the receiver using the two screw holes (please see picture on page 6).

Optimised installation (Fig. 1 - 3)

- The receiver antenna must be placed in a vertical position minimum 1 meter (3ft 3in) above sea level.
- The receiver has an extended antenna of 2 meters (6ft 6in). If there is a problem with signal transferring, try to move the extended antenna to a more optimised position.
 - Above sea level
 - Away from sources of electrical interference.


Note! Faulty installation will render all warranty given by Sleipner Motor AS void.



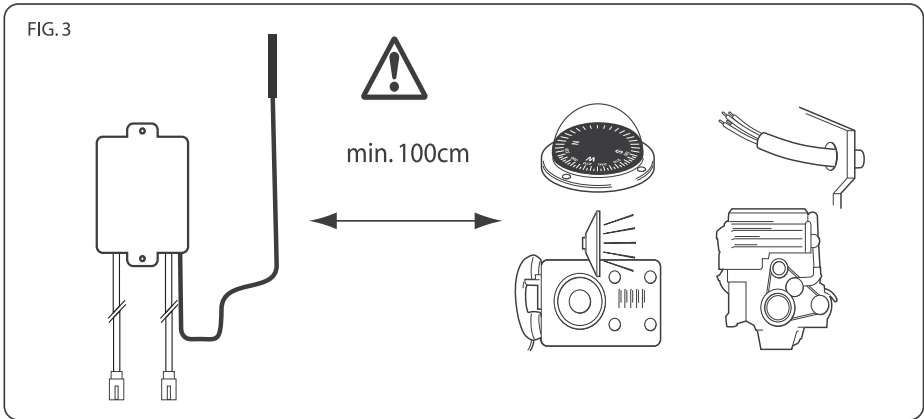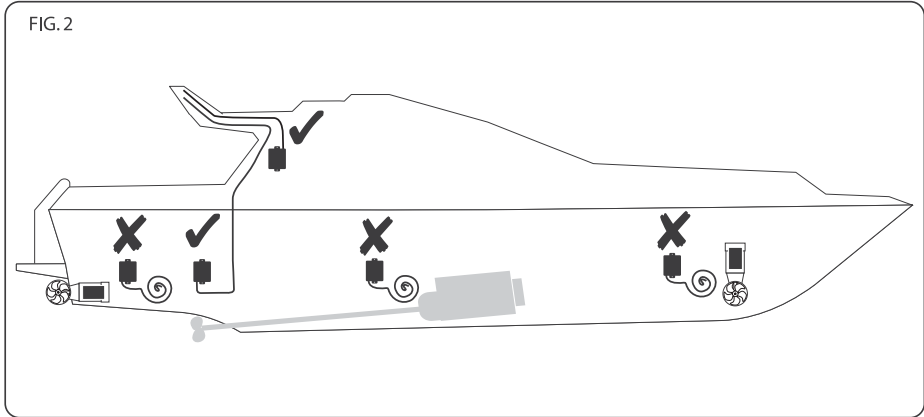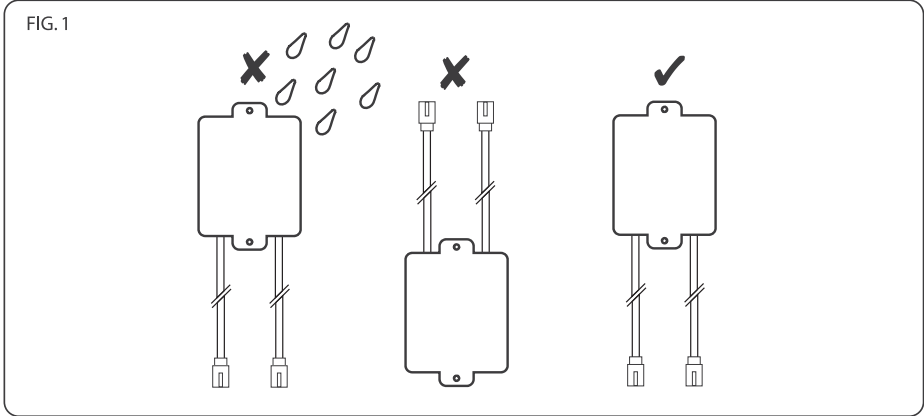


Receiver installation


Mount the receiver by using the 2 screwholes.

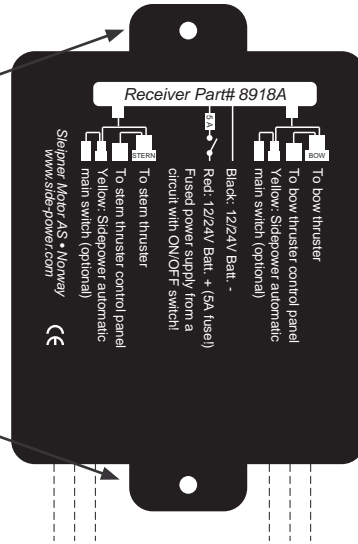

Visual wiring diagram

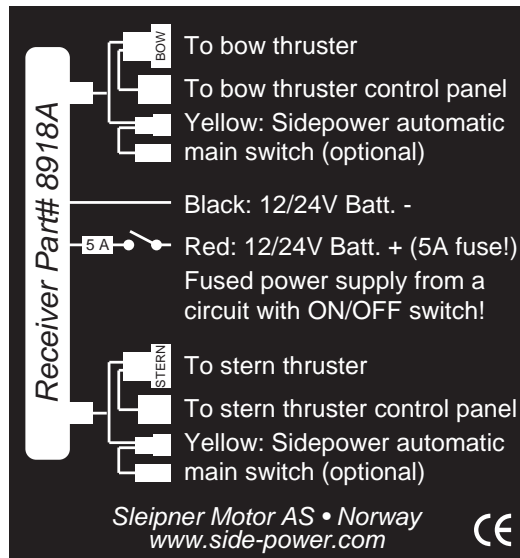

Programming additional receivers

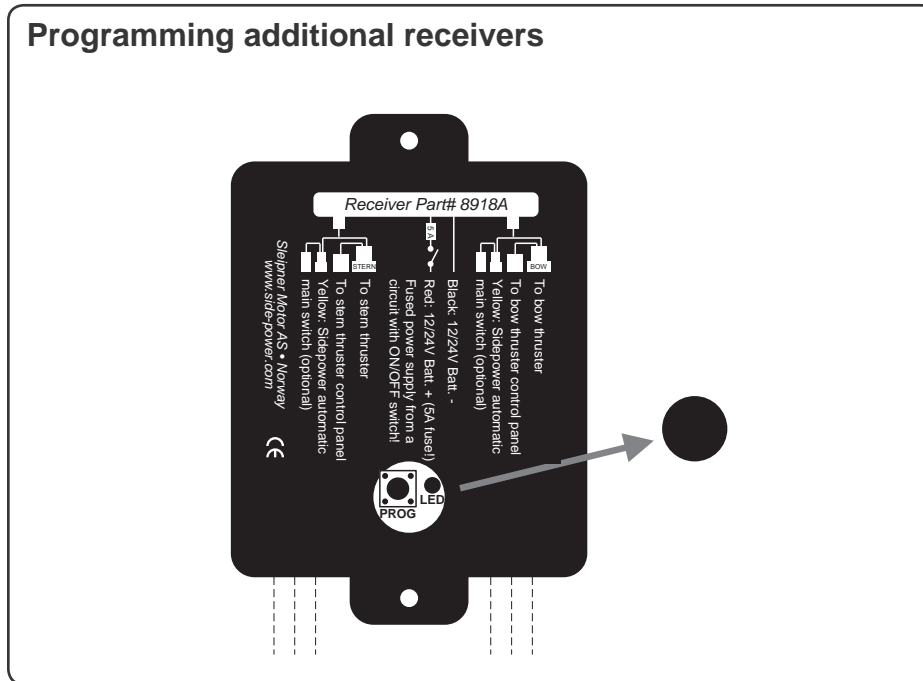


The original transmitter and receiver have the same factory preset code so that no programming is necessary. When additional transmitters are to be used, the receiver must be programmed again for all transmitters.

1. Deactivate the receiver and all transmitters (press "OFF" on all transmitters).
Turn off the main power switch for the thruster(s).
2. Turn on the power to the receiver.
3. Remove the plastic plug from the receiver box (as shown above).
4. Press the "PROG" button at the receiver. The receiver is then in "Program mode".
The receiver will stay in Program mode for 30 seconds, indicated by blinking LED
5. The receiver and transmitter are programmed by pressing both "ON" buttons on the transmitter for about 2 seconds. During this 2 seconds the LED will change from blinking to continuous light when the programming signal is received. Turn off transmitter.
6. Additional transmitters must be programmed according to step 5 within the same 30 seconds time period when the receiver is in "Program mode".
7. Wait until the LED stops to blink. The total "Program mode" time is about 30 seconds.
The programming is now finished.
8. Turn on the transmitter(s) and check that the receiver LED is blinking slowly (User mode)
9. Turn off the power to the receiver and put the plastic plug back in place.



Replacing the batteries

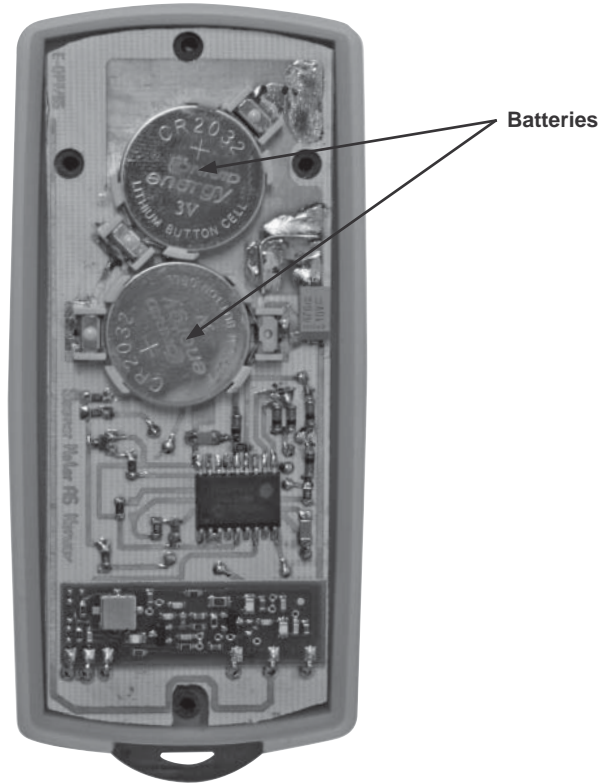

WARNING:

Before working on the transmitter, deactivate the transmitter and the receiver (push "OFF" on the transmitter(s)) and turn off the power to the receiver as well as the thruster mainswitch.


1. Open the transmitter.
2. Take out the batteries.
3. Insert the new batteries (Type CR2032, 3V - Brand name recommended). Be sure to insert the battery with the positive pole up.
4. Close the transmitter. Put the cover back in place, ensure that the rubber seal between remote upper and lower part is located correctly. Place the 3 screws (remember sealing washer) in their recessed holes and tighten.



Important user precautions

- Ensure that you know the location of the main battery switch that disconnects the thruster from all power sources (batteries) so that the thruster can be turned off in case of a malfunction.
- If a Sidepower automatic main switch is fitted, the “OFF” button on your transmitter will shut off the main switch providing no other control panels are “ON”.
- How to activate the system
Turn on the main power source for the thruster system. Turn on the power to the receiver. The thruster system is then activated by pushing the two “ON” buttons on the transmitter (see page 9). To turn off the radio remote control push the “OFF” button on the transmitter.
- ‘Auto-Off’ after appr. 4 minutes for safety reasons
When using a single transmitter
The system turns off automatically appr. 4 minutes after the last usage.
When using more than one transmitter or additional ‘radio-link’ control panels
The system turns off automatically appr. 4 minutes after the last usage of the control unit that initially activated the system even if other control units have been operated in the meantime. The system is off even if these other control units still show the blinking LED on the transmitter. To use these transmitters, the system must be activated again by pushing the two “ON” buttons.
- Remember to turn off the radio remote control by pushing the “OFF” button on the transmitter and to turn off the power switch for the receiver when you have finished your maneuvering.
- The maximum continuous usage time of the electrical thruster is approx. 3 minutes. The electro motor has a built in thermal cut-off switch that will shut it off when overheating and re-engage it when it has cooled down some. This should be considered when planning your maneuvering.
- Never use a thruster close to somebody in the water, as the thruster will draw objects close by into the tunnel and contact with the rotating propellers will cause serious injuries.
- Never run a thruster for more than one second when the boat is not in the water, as this can damage the electromotor seriously.
- If the thruster stops giving thrust while the electromotor is running, chances are that there is a problem in the drive-system. You must then immediately stop trying to run it, and turn it off, as running the electromotor for more than a few seconds without resistance from the propeller, can cause serious damage to the electromotor.
- When leaving the boat always turn off the main power switch for the thruster and turn off the power to the receiver.
- We advise to always keep the main engine(s) running while using a thruster. This will keep the batteries in a good charge condition. This will also give better performance to the thruster, as a higher voltage at the thruster results in a higher torque (power) in the electromotor.
- Make sure that only one control is used at the same time, if two panels are operated in opposite directions at the same time the thruster will not run at all. If they are operated in the same direction the thruster will run in this direction.



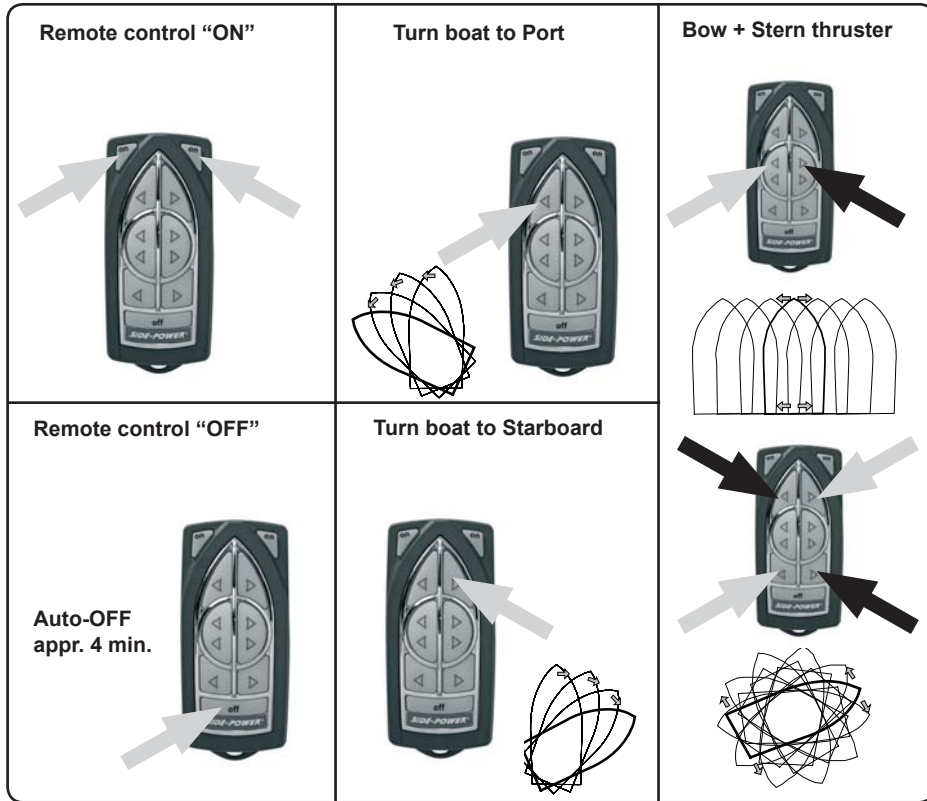

How to use a bowthruster

1. Turn the main power switch for the bow thruster on. Turn on the power to the receiver.
2. Turn on the transmitter by pushing the transmitter's two "ON" buttons. The remote system is now activated and then turns off automatically appr. 4 min. after the last usage (see page 9).
3. Please take some time to exercise thruster usage in open water to avoid damages to your boat.
4. Turn the bow in the desired direction by pushing the red button for port movement or the green button for starboard movement.

How to use a bow & stern thruster combined

The combination of a bow and stern thruster offers total manouverability to the boat and the opportunity to move the bow and the stern separately of each other. The remote middle buttons gives you the opportunity to operate both thrusters in the same direction with one keypress, making sideways movement easier.


Remote Control Deactivation

Push the transmitter's "OFF" button (the remote control deactivates automatically after appr. 4 minutes after the last usage). Turn off the power switch for the receiver.

- If in doubt, try in open water first!



Electric schematics

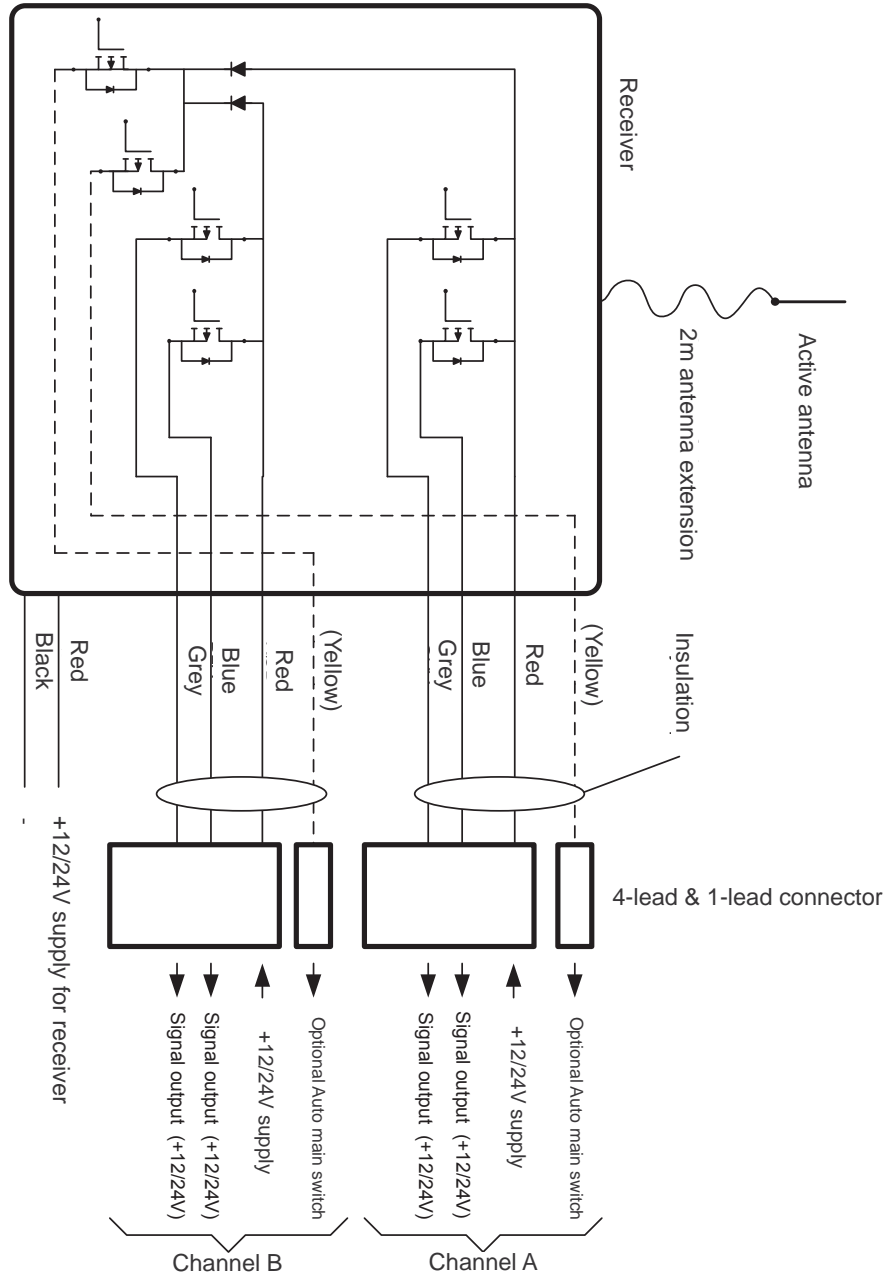

Service Centres

Argentina

Trimer SA
Buenos Aires
Tel: +54 11 4580 0444
Fax: +54 11 4580 0440
www.trimer.com.ar
trimer@trimer.com.ar

Australia

AMI Sales
Freemantle, WA
Tel: +61 89 331 0000
Fax: +61 89 314 2929
ami@amisales.com.au

Austria

G. Ascherl GmbH
Hard, Bregenz
Tel: +43 5574 899000
Fax: +43 5574 89900-10
www.ascherl.at
office@ascherl.at

Benelux

ASA Boot Electro
Watergang
Tel: +31 20 436 9100
Fax: +31 20 436 9109
www.asabootelectro.nl
info@asabootelectro.nl

Brazil

Electra Service Ltda.
Guaruja
Tel: +55 13 3354 3599
Fax: +55 13 3354 3471
www.electraservice.br.com
albertoni@electraservice.com.br

Bulgaria

Yachting BG
Burgas
tel: +359 56 919090
fax: +359 56 919091
www.yachting.bg
info@yachting.bg

Canada

Imtra Corporation
New Bedford, MA
Tel: +1 508 995 7000
Fax: +1 508 998 5359
www.imtra.com
side-power@imtra.com

China/Hong Kong

Storm Force Marine Ltd.
Wanchai, Hong Kong
Tel: +852 2866 0114
Fax: +852 2866 9260
www.stormforcemarine.com
sales@stormforcemarine.com

Croatia

Yacht Supplier
Icici
Tel: +385 51 704 500
Fax: +385 51 704 600
acy@net.hr

Cyprus

Ocean Marine Equipment Ltd
Limassol
Tel: +357 253 69731
Fax: +357 253 52976
oceanm@spidemet.com.cy

Denmark

Gertsen & Olufsen AS
Hørsholm
Tel: +45 4576 3600
Fax: +45 4576 1772
www.gertsen-olufsen.dk
info@gertsen-olufsen.dk

Estonia/Latvia/Lithuania

Miltec Systems OU
Tallin
Tel: +372 5013997
Fax: +372 6442211
www.miltec.ee
tony@miltec.ee

Finland

Nautikulma OY
Turku
Tel: +358 2 2503 444
Fax: +358 2 2518 470
www.nautikulma.fi
nautikulma@nautikulma.fi

France

Kent Marine Equipment
Nantes
Tel: +33 240 921 584
Fax: +33 240 921 316
www.kent-marine.com
contact@kent-marine.com

Germany

Jabsco GmbH
Norderstedt
Tel: +49 40 535 373-0
Fax: +49 40 535 373-11

Greece

Amaltheia Marine
Athens
Tel: +30 210 2588 985
Fax: +30 210 2588 986
www.amaltheiamarine.com
amalmar@otenet.gr

Iceland

Maras EHF
Reykjavik
Tel: +354 555 6444
Fax: +354 565 7230
www.maras.is
gummi@maras.is

India

Indo Marine Engineering Co. Pvt. Ltd
Pune, Maharashtra
Tel: +91 20 2712 3003
Fax: +91 20 2712 2295
siddharth@indogroup-asia.com

Ireland

Sleipner Motor Ltd.
South Brent
Tel: +44 1364 649 400
Fax: +44 1364 649 399
andy@sleipner.co.uk

Israel

Atlantis Marine Ltd.
Tel Aviv
Tel: +972 3 522 7978
Fax: +972 3 523 5150
www.atlantis-marine.com
atlantis@inter.net.il

Italy

Saim S.P.A.
Assago-Milan
Tel: +39 02 488 531
Fax: +39 02 488 254 5
www.saim-group.com

Japan

Turtle Marine Inc.
Nagasaki
Tel: +81 95 840 7977
Fax: +81 95 840 7978
www.turtle-marine.com
info@turtle-marine.com

Malta

S & D Yachts Ltd.
Cali
Tel: +356 21 339 908
Fax: +356 21 332 259
www.sdyachts.com
info@sdycharts.com

New Zealand

Advance Trident Ltd.
Auckland
Tel: +64 9 845 5347
Fax: +64 9 415 5348
www.advancetrident.com
service@advancetrident.com

Norway

Sleipner Motor AS
Fredrikstad
Tel: +47 69 30 00 60
Fax: +47 69 30 00 70
www.side-power.com
sidepower@sleipner.no

Poland

Taurus Sea Power SP. Z.O.O
Gdansk
Tel: +48 58 344 30 50
Fax: +48 58 341 67 62

Portugal

Krautli Portugal Lda.
Lisboa
Tel: +351 21 953 56 00
Fax: +351 21 953 56 01
www.krautli.com
contact@krautli.pt

Russia

Standarte
Starbeyevo
Tel: +7 495 575 67 23
Fax: +7 495 575 39 77
www.standarte.ru
info@standarte.ru

South Africa

C-Dynamics
Cape Town
Tel: +27 21 555 3232
Fax: +27 21 555 3230
www.c-dynamics.co.za
info@c-dynamics.co.za

Spain

Imnasa Marine Products
Girona
Tel: +34 902 300214
Fax: +34 902 300215
www.imnasa.com
imnasa@imnasa.com

Sweden

Sleipner AB
Strömstad
Tel: +46 526 629 50
Fax: +46 526 152 95
www.sleipnerab.se

Switzerland

Marine Parts Technics AG
Volketswil
Tel: +41 1 997 40 90
Fax: +41 1 997 40 94
www.marineparts.ch
info@marineparts.ch

Singapore/Malaysia/ Indonesia/Vietnam/Phillipines

Island Marine Services Pte Ltd
Singapore
Tel: +65 6795 2250
Fax: +65 6795 2250
www.island-marine.com
karl@island-marine.com

Taiwan

Mercury Marine Supply
Kaohsiung
Tel: +886 7 3317 293
Fax: +886 7 3314 232

Turkey

Denpar Ltd.
Istanbul
Tel: +90 212 346 1332
Fax: +90 212 346 1329
seda@denpar.com

UK

Sleipner Motor Ltd.
South Brent
Tel: +44 1364 649 400
Fax: +44 1364 649 399
andy@sleipner.co.uk

United Arab Emirates

Teignbridge Propellers & Marine
Equipment Co. Ltd.
Dubai
Tel: +971 4 324 0084
Fax: +971 4 324 0153
teignpro@emirates.net.ae

USA

Imtra Corporation
New Bedford, MA
Tel: +1 508 995 7000
Fax: +1 508 998 5359
www.imtra.com
side-power@imtra.com

