

AZiO External HD Kit

User's Guide



AZiO®

Table of Contents

Overview	3
Precautions!	4
Package Contents	5
System Requirements for PC	6
System Requirements for Mac	7
Technical Specifications	8
Installing a 3.5" Hard Drive	9
Setting up the Drive	17
Naming your Drive	19
Partitioning/Formatting the Drive	20
Formatting for Mac & PC compatibility	20
Partitioning/Formatting in Windows XP or 2000	20
Partitioning/Formatting in Windows Me or 98SE	21
Formatting in Mac OS X	21
Formatting in Mac OS 9	22
How to safely dismount the Drive	23
AZiO External HD Kit: Features Explored	24
Hi-Speed USB 2.0	24
FireWire 400	24
Serial ATA	25
Frequently Asked Questions	26
Troubleshooting	28
Troubleshooting for PC users	28
Troubleshooting for Mac users	29
Warranty	32
Contact Information	33
Notices	34

Overview

Thank you for purchasing the AZiO External HD kit, one of the most stylish and practical data storage solutions available. The AZiO HD Kit can convert your internal 3.5" hard disk drive into a hi-speed external storage device. Use it to store your collection of documents, photos, media files, and/or backup a copy of all your important data. This external drive kit is very easy to install, is hot-swappable, and is backed by AZiO Corporation's 1-year Limited Warranty.

This AZiO product features high-quality construction, advanced external interface technology, and state-of-the-art industrial design, assured to provide you with years of reliable performance.

The information in this guide pertains to the following models:

ENC311-C41:	USB 2.0 + FireWire 1394a Interface
ENC311-U41:	USB 2.0 Interface
ENC311SU31:	eSATA + USB 2.0 Interface
ENC311SU41:	eSATA + USB 2.0 Interface

This guide contains important information for the proper installation, use, and care of your AZiO product. Please read this guide carefully and retain it for future reference.

Precautions!

Failure to follow the precautions below may result in damage to the device, loss of data, and voiding of the warranty.


- If using your AZiO product as a general-purpose storage device (as opposed to a backup device) AZiO strongly recommends that you backup the files stored on the device. AZiO will not be responsible for loss of data or corruption; nor will AZiO perform recovery of lost data or files.
- Do not attempt to disassemble or modify the internal components. If the device is malfunctioning, contact AZiO Technical Support via the Support page at www.aziocorp.com/support.php or call (909) 468-1198 (Pacific Time) during regular business hours.
- Dual-interface devices: Use only one interface at a time.
- Do not expose the device to rain or use it in damp or wet conditions.
- Never place containers of liquids on the device. This can damage the device and increase the risk of electric shock, short-circuiting, fire, or personal injury.
- Do not use the device in temperatures outside the range of 40° F - 130° F.
- Do not use a third party AC adapter or power cord.
- Do not bump, jar or drop the device.
- Do not disconnect any cables while the device is powered on without first un-mounting the device.

Package Contents

- 1) AZiO External HD Enclosure
- 2) AC Adapter & Power Cord
- 3) Software CD
- 4) Vertical Placement Stand
- 5) Quick-Start Guide
- 6) Mail-In Registration Card
- 7) USB 2.0 Cable
- 8) 6-pin to 6-pin FireWire Cable **(ENC311-C41 Only)**
- 9) eSATA to eSATA Cable **(ENC311SU31 & ENC311SU41)**

**If you are missing any item listed above, please contact Customer Service at support@aziocorp.com, or call (909) 468-1198.*

System requirements for PC

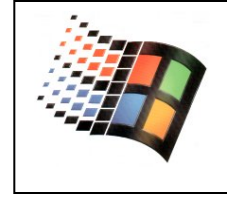

- Minimum 233 Mhz
- Windows XP, 2000, Me or 98SE
- Available interface port:
 - USB 2.0 Users: USB Port
 - FireWire 1394a Users: 6-pin FireWire Port
 - eSATA Users: External Serial ATA (eSATA) Port

Windows XP (USB 2.0) users:

You must have Windows XP Service Pack 1 or later or the drive will operate at USB 1.1 speeds. Go to www.microsoft.com and click on the Windows Update link.

Windows 2000 users:

In order to use the USB 2.0 or the FireWire connection, you must have Windows 2000 Service Pack 4 or later. Go to www.microsoft.com and click on the Windows Update link.

Windows Me (USB 2.0) users:

We strongly recommend getting the latest updates. Go to www.microsoft.com and click on the Windows Update link.

Windows 98SE users:

- In order to use the USB 2.0 connection you must install the USB 2.0 driver included on the supplied CD. (See "Mounting a USB-Connected Drive" for instructions).
- In order to use the FireWire connection, you will need Windows 98 Second Edition 1394 Storage Supplement. You can download it at <http://www.microsoft.com/windows98/downloads/default.asp>.

System Requirements for Mac



- Power Macintosh (G5, G4, G3, Mac mini, iBook, PowerBook, or iMac)
- Mac OS 9 or Mac OS X
- ENC-303SU eSATA: MAC OS 10.2 or later
- Available interface port:
 - USB 2.0 users: USB Port
 - FireWire 1394a users: 6-pin FireWire Port
 - eSATA Users: External Serial ATA (eSATA) Port

Mac OS 9 Users:

- Mac OS 9 does not support USB 2.0. If using the USB 2.0 interface on OS 9, the device will operate at USB 1.1 speed.
- For FireWire connectivity, Mac OS 9 requires FireWire software version 2.7 or later. If you have Mac OS 9.1 or later you already have FireWire 2.7 or later. Mac OS 9 updates are available at <http://docs.info.apple.com/article.html?artnum=75288>.



USB 1.1 Compatibility:

This device is backward compatible with USB 1.1. However, if you connect this device to a USB 1.1 port, it will operate at USB 1.1 speeds (up to 12 Mbps).



FireWire users with laptops:

If your laptop has a 4-pin FireWire port, you will need to obtain a 6-pin to 4-pin FireWire cable (not included).



eSATA users with SATA ports:

If your computer has a SATA port, please upgrade to eSATA by using the included SATA to eSATA converter bracket.

Technical Specifications

Model

USB 2.0 ENC311-U41
USB 2.0 + FireWire 400 ENC311-C41
USB 2.0 + eSATAENC311SU31/ENC311SU41

Dimensions:

Length x Width x Height (inches) 8.4" x 5.1" x 1.2"
Length x Width x Height (mm) 213 x 129 x 30

Weight 1.5 lbs

Interface Transfer Rate (max. Mbps)

USB 2.0 480
FireWire 400 400
eSATA 3,000

Chassis (approved/recognized) FCC/CE/UL

Power Requirement +5VDC & +12VDC

Startup Current (max A) 2.0 (12V)

External Power Supply 34W Switching

AC Input 100-240V ~ 47/63Hz 1.2A

DC Output 5.0V (2.0A), 12.0V (2.0A)

Installing a 3.5" Hard Drive

1. Configure your IDE Hard Drive as a Master

(Does not apply for SATA Hard Drives)

Your IDE drive has a jumper block at the back (situated between the ATA interface connector and the power connector). The jumper block has an array of pins. You may need to plug one or more jumpers onto specific pins in order to configure the drive as a master. Your drive most likely came with jumpers already attached to the jumper block.

Each IDE drive manufacturer has a different jumper arrangement for specific drive configurations (master, slave, cable select, etc). Refer to the instructions that came with your drive and, if necessary, arrange the jumper(s) so that the drive is configured as a master. You should use small needle-nose pliers or tweezers to remove/insert jumpers.

If you do not have your drive's manual, most manufacturers make manuals available for download from their websites. Be sure to download the correct manual for your specific model as jumper configurations can differ from model to model.

2. Disassemble the Drive Kit

Using a Philips screw driver, remove all four screws located on both sides of the UPPER aluminum enclosure cover. (Do not remove the screws for the bottom aluminum case).




Open the drive kit by carefully remove the top cover from the body chassis.



Warning: When handling the opened kit, never touch the PCB (printed circuit board). It contains sensitive electronics that can be easily damaged.

Unscrew both hard drive brackets and remove them for hard drive installation.

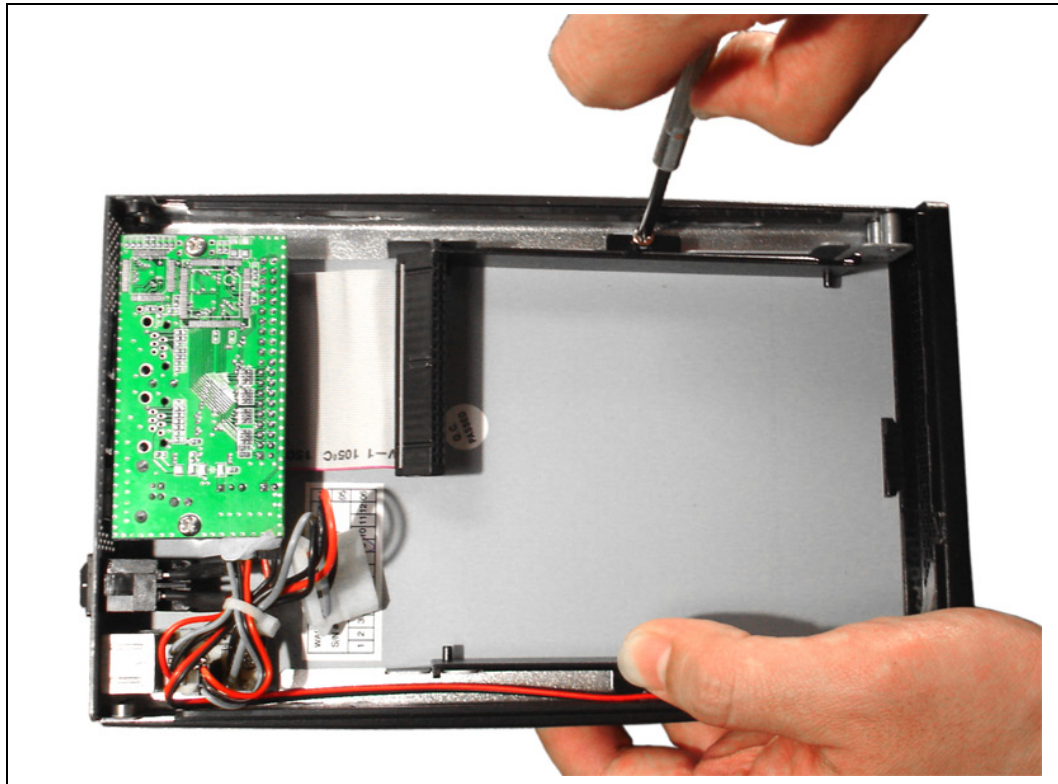


3. Install the Hard Drive into the Drive Kit


The Drive Kit PCB contains the interface connector and the power cable. Orient your 3.5" hard drive so that the drives connectors are aligned with the interface connector and the power cable. Match the bracket pins to the hard drive and snap on the support brackets to the drive.



While holding on to the hard drive brackets, connect the power and flat-ribbon IDE cables to the drive. For SATA drives, there will not be a flat-ribbon cable. Simply install the hard drive into the interface connector. Insert the drive unit onto the bottom chassis of the drive kit.

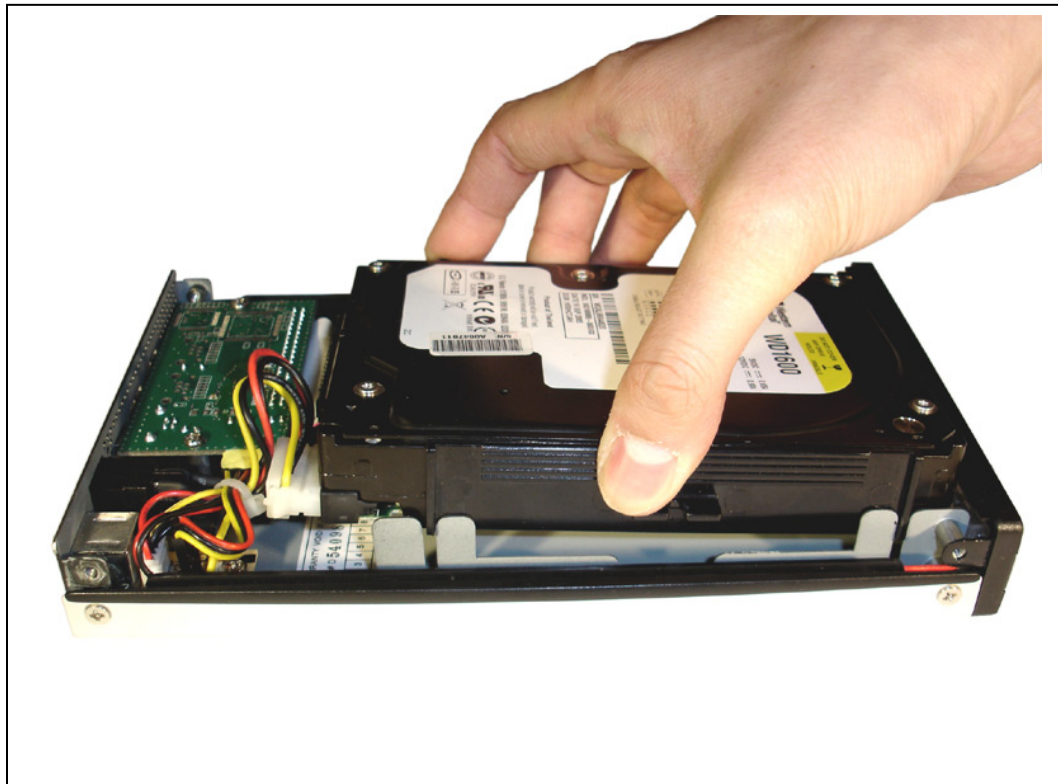

Screw the hard drive brackets securely onto the support brace of the drive kit.

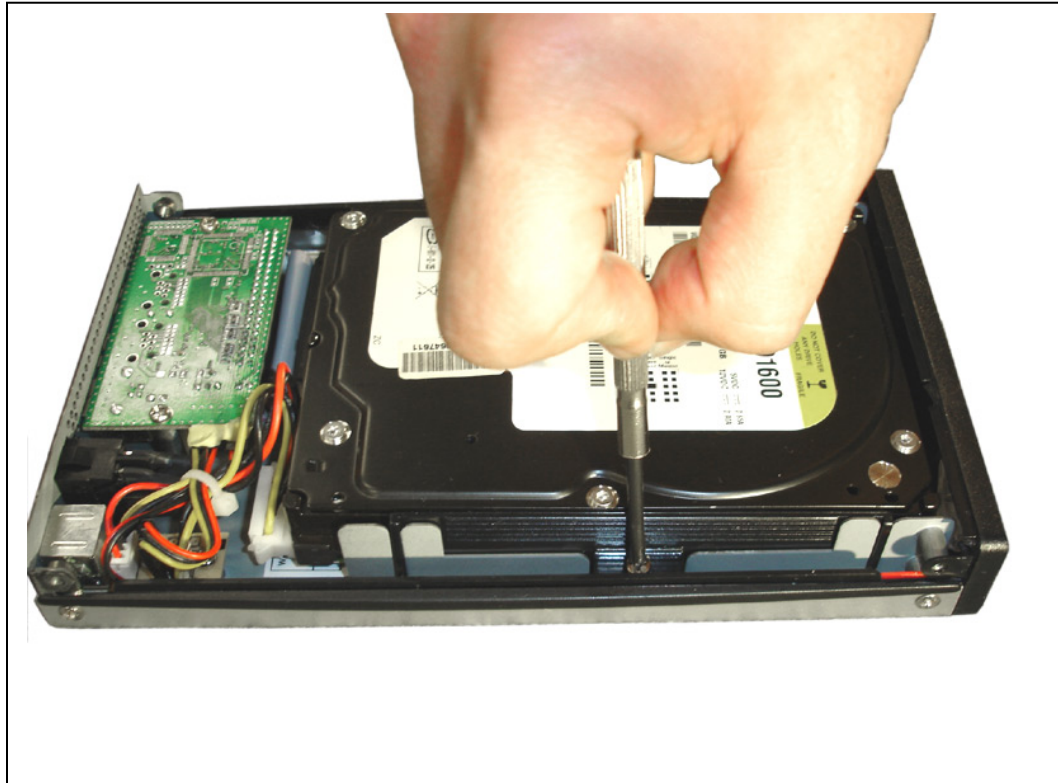

4. Re-assemble the Drive Kit

Close the drive kit by carefully replacing the top cover back onto the enclosure base.



Screw the top aluminum cover securely back onto the enclosure base.
Make sure the AZiO logo is facing the front of the drive kit.



Setting up the Drive

Mounting the Drive

This section assumes that your Drive is already formatted for your computer's operating system. If this is not the case, format the Drive according to the instructions in the section "Formatting the Drive" and then return to this section.

Mac Users:

Once the Drive has been properly connected and powered on, it should mount on your desktop.

Windows 2000/XP Users:

Once the Drive has been properly connected and powered on, you should see a new hard drive icon and drive letter in My Computer/Windows Explorer.

Windows 98SE and Me Users:

[FireWire Users]

Once the Drive has been properly connected and powered on, you should see a new hard drive icon with a new drive letter in My Computer/Windows Explorer. If your computer cannot detect the Drive, you may need to manually search for and install the driver named GPIO98.SYS. If you have Windows 98 Second Edition Storage Supplement, this file should be located at C:\WINDOWS\SYSTEM\IOSUBSYS\GPIO98.SYS.

[USB 2.0 Users]

Windows Me Users

Once the Drive has been properly connected and powered on, you should see a new hard drive icon and drive letter in My Computer/Windows Explorer. If this is not the case, you will need to update your Windows Me. To get the latest update, go to www.microsoft.com and click on Windows Update link.

Windows 98SE Users

1. After the drive has been properly connected and turned on, the Add New Hardware Wizard should appear with the message: "Found New Hardware USB 2.0 Storage Adapter." Click Next.
2. You will then see the message: "What do you want windows to do?" with two options. Select "Search for the best driver for your device (Recommended)." Click Next.
3. In the next window that appears, check the box labeled CD-ROM drive. Click Next.

4. You will then see the message: "Windows is now ready to install the best driver for this device..." Click Next.
5. Once the installation is complete, you will see the message "Windows has finished installing the software..." Click Finish and then eject the CD. You should now see a new icon (a gray box with a green arrow) next to the time display on your system tray.

Naming your Drive

If you didn't already, you may want to give your Drive a unique name to distinguish it from other storage devices connected to your computer. Usually, you assign a name to a hard drive during the formatting setup process. However, you can change the name of a hard drive at any time.

Mac Users:

1. Locate the Drive icon on your computer's Desktop.
2. Click and hold the mouse button on the icon's label until it is highlighted.
3. Type in a name and press Return/Enter.

PC Users:

1. Double-click on My Computer.
2. In the My Computer window click on the Drive icon.
3. In the File menu, select Properties.
4. Under the General tab of the Properties window, type a name in the text field beside the Drive icon.

Partitioning/Formatting the Drive

PARTITIONING/FORMATTING A HARD DRIVE ERASES ALL DATA STORED ON THE DRIVE! BEFORE YOU FORMAT THE DRIVE, BE SURE TO SAVE A COPY OF ANY FILES YOU WISH TO KEEP TO ANOTHER STORAGE DEVICE.

Follow the instructions in this section if your IDE hard drive was not already formatted prior to installation, or if you want to re-format the drive.

Formatting for Mac & PC Compatibility

If you need both PC and Mac compatibility, you have two formatting options:

1. Format the Drive on a PC with FAT32 file system.
2. Format the Drive on Mac OS 10.3 or later with the MS-DOS file system.

Mac OS 10.2 Users:

FAT32/MS DOS-formatted disks or disk partitions that are larger than 128 GB will not mount on Mac OS 10.2 through 10.2.8. There are several ways to resolve this issue:

1. Format the Drive using the Mac OS Extended file system.
2. Partition the Drive so that no partition is larger than 128 GB.
3. Upgrade to Mac OS 10.3 or later. Go to <http://docs.info.apple.com/article.html?artnum=107483> for details.

Mac OS X v.10.3+ Users:

If you connect an NTFS-formatted disk to a Mac running Mac OS X v.10.3 or later, the computer can read the Mac-compatible files but you will not be able to save any data to the disk.

Partitioning/Formatting the Drive in Windows 2000 or XP

If the external hard drive does not mount after you have plugged-in and turned on your external drive, you will need to partition and format the drive by doing the following:

1. Right-click on My Computer, click on Manage.
2. Click on Disk Management. A list of all the drives in your system will be displayed.
3. If the Write Signature and Upgrade Disk Wizard auto-starts, you can use this wizard to initialize the hard disk and create partition/format the drive.

4. Otherwise, locate the respective drive listed in the lower right side of the window. Right-click on the drive, make a new partition and format the drive. NOTE: Be sure to select the correct drive as partitioning and/or formatting will wipe out all the data on the disk.
5. In the File System pop-up menu, select NTFS. Do not select FAT32 as you cannot format the Drive using FAT32 file system on Windows 2000 or XP.
6. In the Allocation Unit Size pop-up, select "Default allocation size".
7. In the Volume label field, type in a name for the Drive. You should give the drive a unique name that will allow you to easily distinguish it from other hard drives or storage devices.
8. Click Start. Once the format process is complete, the Drive will be ready for use.

Partitioning/Formatting the Drive in Windows 98SE or Me

If the external hard drive does not mount after you have plugged-in and turned on your external drive, you will need to partition and format the drive by doing the following:

1. Right-click on My Computer and click on Properties.
2. Click on Device Manager.
3. Click on Disk Drives.
4. Double-click on the drive that corresponds to the external drive.
5. Click on Settings tab.
6. Make sure the Removable check-box is selected.
7. Click Ok and then restart the computer.
8. After the computer restarts, double-click on My Computer. The external drive will now appear. Double-click the drive and you will be prompted to format the drive.
9. Under Format type, select Full. Everything else should be left at the default setting. In the label field under Other options you may assign a name to the Drive. Click Start. Once the process is complete, the Drive will be ready for use.

Formatting the Drive in Mac OS X

1. Launch the Disk Utility application (Applications folder > Utilities folder > Disk Utilities). The Disk Utilities window will open with a small window at on the left side and a large window with a series of tabs at the top.
2. You should see the Drive listed in the left window. Click on the Drive to highlight it. Information on the Drive will appear in the information window.
3. Click on the Erase tab. In the Erase window you will see a Volume Format pop-up menu and a Name field.

4. From the Volume Format pop-up, select Mac OS Extended.
5. In the Name field, type in a name for the Drive.
6. Click Erase. You should see a warning alert pop-up. Click Erase. Once initializing is complete, you should see the Drive listed in the left window of the Disk Utility screen with whatever name you assigned. Quit Disk Utility and you should now see the Drive icon on the Desktop.

Formatting the Drive in Mac OS 9

Before you can re-format the Drive you will need to restart your computer from the Mac OS 9 System Software CD that came with your computer or which you purchased as an upgrade.

1. Insert the System Software CD into you CD drive.
2. With your AZiO External Drive connected and powered on, restart the computer and hold down the C key while the computer is starting up.
3. You will see an alert message: "This disk is unreadable by this computer. Do you want to initialize the disk?" Click OK.
4. In the Name field, type in a name for your Drive.
5. From the Format menu, select Mac OS Extended.
6. Click Initialize. When prompted with a warning message, click Continue. Once initializing is complete, you should see the Drive mounted on your Desktop with the name you assigned.
7. Restart your computer and eject the Mac OS 9 CD.

How to safely dismount the drive

NEVER TURN OFF YOUR EXTERNAL DRIVE WITHOUT DISMOUNTING IT FIRST. YOU MAY LOSE DATA OR DAMAGE THE DRIVE.

When a device, such as a hard drive, is “mounted” to a computer, that means the computer has detected the device and established a communications link with it. When you dismount a device, the communications link is severed and the computer can no longer access it.

PC Users

1. Make sure your computer is no longer accessing the AZiO External Drive.
2. In the system tray at the bottom of your screen, click the Safely Remove icon.
3. Select the Drive. After a few seconds, Windows will give you a message that it is safely to remove the device.
4. Click OK. The Drive has dismounted. You can then safely turn off or disconnect the drive.

Mac Users

Drag the Drive's icon to the Trash. The Drive will dismount and you can then safely turn off or disconnect the drive.

AZiO EXTERNAL HD KIT: Features Explored

Hi-Speed USB 2.0

USB (Universal Serial Bus) is an interface technology for the serial transmission of digital data. The original standard (USB 1.x) had an interface transfer rate of up to 12 Mbps. USB 2.0 has a maximum interface transfer rate of 480 Mbps (60 Megabytes/s)- That's up to 40 times faster than USB 1.

Supports up to 127 devices

Connecting more than one or two USB devices to a computer usually requires the use of one or more USB-equipped hubs; a hub can typically accommodate several USB devices.

Plug & Play

You do not need to assign ID numbers, or connect terminators. On most operating system you do not need to install drivers.

Hot-Pluggable

Devices can be added/removed while the computer is on and running. Always dismount a hard drive before turning it off/disconnecting it.

FireWire 400

(ENC-302C)

Also known as i.Link or IEEE 1394, FireWire is a serial data input/output technology developed by Apple Computer and Texas Instruments. FireWire offers high-speed communication and isochronous real-time data services, commonly used for connection of data storage devices and digital video cameras.

400 Mbps Interface Transfer Rate

FireWire 400 can transmit data at up to 400 Mbps (50 MB/s). FireWire supports both isochronous and asynchronous data transfers. Isochronous mode provides guaranteed transmission of data at defined intervals; it's used when delayed or out-of-order data frames are unacceptable, such as for capturing digital video. In Asynchronous mode the intervals between transmissions can vary and data can be resent if missed. Asynchronous mode is used for routine data transfers.

Support up to 63 devices

FireWire devices can be linked in a daisy-chain, where the devices are connected to each other in series. A hub is only required when a very large number of devices will share the same FireWire bus. With the use of FireWire hubs, up to 63 devices can be linked on a single FireWire bus. FireWire equipped AZiO Enclosures come with two FireWire ports: One port is for connecting the device

to your computer and the other can be used for daisy-chaining other FireWire devices.

Peer-to-peer, host-independent architecture

Data transmissions between FireWire devices on the same bus can take place without the need for input from the host computer. This independence from the host is one of the reasons FireWire devices are, on average, faster than USB 2.0 devices in routine day-to-day use, even though the rated maximum data transfer is lower than that for USB 2.0.

Plug & Play

You do not need to assign ID numbers, or connect terminators. On most operating system you do not need to install drivers.

Hot-Pluggable

Devices can be added/removed while the computer is on and running. Always dismount a hard drive before turning it off/disconnecting it.

Serial ATA

(ENC-303SU)

Serial ATA is a computer bus technology primarily designed for transfer of data to and from a hard disk. It is the successor to the legacy Advanced Technology Attachment standard (ATA, also known as IDE). This older technology was retroactively renamed Parallel ATA (PATA) to distinguish it from Serial ATA. Currently, most PC motherboards or PCI SATA add-on cards do not have an eSATA connector. eSATA may be enabled through the addition of a SATA to eSATA bracket (conveniently included by AZiO).

External SATA (eSATA)

Initially SATA was designed as an internal interface technology. Designers quickly realized the new interface could reliably be expanded outside the PC. SATA is now “out of the box” as an external standard, with specifically defined cables, connectors, and signal requirements as passed in mid-2004.

Key benefits of eSATA

- Up to six times faster than contemporary external storage solutions: USB 2.0 and FireWire 400.
- Hot-Pluggable: Devices can be added/removed while the computer is on and running.
- Robust and user friendly external connection.
- Up to 2-m shielded cables and connectors.

Frequently Asked Questions

Q: Can I use my External Drive on two computers at the same time?

A: No. The Drive can only be used with one computer at a time. If you connect the Drive to two computers at the same time, you may damage the Drive and the computer.

Q: Can I format the Drive for multiple operating systems?

A: If you need both Mac and PC compatibility, you can format the Drive using the FAT32 file system (on a PC) or the MS-DOS file system (on a Mac). Note: FAT32/MS-DOS formatted disks or disk partitions that are greater than 128 GB will not mount on Mac OS 10.2 through 10.2.8.

Q: What is the difference between FAT32 and NTFS?

A: FAT32 is an older and more compatible file system but it has certain limitations, such as file size (maximum 4 GB). NTFS is more secure and has fewer limitations. The NTFS file system can only be used on Windows 2000 and XP. If you plan to use your drive on Windows 2000/XP only, consider reformatting the Drive using the NTFS file system. If you plan to use your drive on a Mac OS only, consider reformatting the Drive using the Mac OS Extended file system.

Q: Does the AZiO External Drive work on Windows XP Media Center Edition?

A: No. It is not supported at this time.

Q: Do I need drivers for my External Hard Drive?

A: For USB 2.0 on Windows 98SE, you will need to install the USB 2.0 driver found on the supplied USB 2.0 Installation CD. All other supported operating systems have the necessary USB 2.0 driver built in, with the exception of Mac OS 9, which supports USB 1 but not USB 2.0. You can connect the Drive to a USB 1 port, but it will operate at USB 1 speeds (up to 12 Mbps). Depending on your operating system, you may need to download an update from the OS manufacturer.

Q: Is the AZiO External Drive compatible with Windows 95, 98 (1st Edition), or NT 4.0?

A: No.

Q: What should the jumper settings on my hard drive be set to?

A: The jumper should be set to "MASTER" or "SINGLE". This does not apply for SATA hard drives.

Q: Does the External Drive Kit support drives larger than 250gb?

A: Yes, our hard drive kits does not have a capacity limitation as of now.

Q: Can I use both the USB 2.0 and FireWire/eSATA interfaces of my Drive at the same time?

A: No. If you do, you may lose data, damage the Drive, or even damage your computer.

Q: Why doesn't the FireWire Cable fit my FireWire port?

A: The supplied FireWire cable uses 6-pin connectors at both ends, but many laptops have a 4-pin FireWire port. In order to connect the Drive to your laptop via FireWire, you will need to obtain a 6-pin to 4-pin cable.

Q. Why doesn't the eSATA Cable fit my SATA port?

A: The supplied eSATA cable uses the new External SATA standard at both ends, but many computers still uses the older internal SATA "L-Shape" interface standard. In order to connect the Drive to your computer, please use the included eSATA to SATA converter bracket.

Q. What's the difference between SATA and eSATA?

A: Initially SATA was designed as an internal interface technology. The original cable design for internal use does not address EMI, ESD, or other attributes required by an external interconnect. As the desire for external Serial ATA drives became more popular, the Serial ATA II Work Group developed the External Serial ATA (eSATA) standard to satisfy these requirements.

Q. Why does my drive shows less capacity than specification?

A. Hard drive capacity is defined in terms of decimal (base 10) capacity. In decimal notation, one megabyte (MB) is equal to one million bytes and one gigabyte (GB) is equal to one billion bytes. We are most accustomed to the decimal system in everyday life. However, computer use the binary (base 2) numbering system. In the binary number system, one megabyte is equal to 1,048,576 bytes, and one gigabyte is equal to 1,073,741,824 bytes.

Troubleshooting

If you experience a problem with your AZiO product, you should take the following actions in the order specified.

1. Make sure you have followed all of the instructions in this guide.
2. Consult the Troubleshooting sections of this guide.
3. If the issue you are having is still not resolved, contact AZiO Customer Care by one of the following options:
 - a) via LiveChat at our website's support page, www.aziocorp.com/support.php.
 - b) via support form from our website at http://www.aziocorp.com/contact_support.php.
 - c) via telephone at (909) 468-1198.

Troubleshooting for PC Users

Q: The Power will not go on when I turn on the Drive.

A: Make sure all your connections are secure. Make sure you properly connected the Drive's internal power cable to the installed hard disk drive.

Q: My computer does not recognize the Drive.

A: Make sure all of your connections are secure. If you have an add-on card, make sure it is working properly and/or update the driver. Make sure you properly connected the Drive's internal power cable to the installed IDE drive. Make sure you have all the latest updates for your operating system. Make sure your Drive is partitioned and formatted using a file system that is compatible with your computer.

Q: The drive gives me a "Device cannot start. Code (10)."

A: This is a power issue. Make sure your connections are secure. The other possibility is that the Drive has malfunctioned and requires service.

Q: I don't see the Drive in "My Computer", but it does appear in Device Manager. (Windows XP & 2000 only)

A: You are probably using a brand new hard drive. You can initialize, partition, and format unrecognized drives using Disk Management in Windows 2000/XP.

Q: How do I use Disk Management for Windows 2000/XP?

A: Under Windows 2000/XP, you need to use the utility called Disk Management. Using Disk Management You might need to be logged on as an administrator or a member of the Administrators group in order to perform some tasks. Disk Management is a system utility for managing hard disks and the partitions or volumes that they contain. With Disk Management, you can initialize new disks,

create volumes, and format volumes with the FAT, FAT32, or NTFS file systems. Disk Management enables you to perform most disk-related tasks without shutting down your computer; most configuration changes take effect immediately. To open Disk Management Open Computer Management (Local). In the console tree, click Disk Management. Notes To open Computer Management, click Start, and then click Control Panel. Click Performance and Maintenance, click Administrative Tools, and then double-click Computer Management. For information about using Disk Management, in Computer Management, click Help **CAUTION:** Doing the following will erase any existing data on the drive.

Q: After I connected the Drive to my PC, I got the following alert message: “Hi-Speed USB device is plugged into non-Hi-Speed USB Hub.” What does this mean?

A: Windows 2000 and XP users will get this alert message if you plug the Drive into a USB port that only supports USB 1.1. This is fine, except the Drive will operate at USB 1.1 speeds (up to 12 Mbps).

Q: When using a USB 2.0 connection, the Drive seems to be operating slower than the rated 480 Mbps.

A: First, in order to reach USB 2.0 speeds, you need a connection that supports USB 2.0. If the connection only supports USB 1.1 the Drive will operate at USB 1.1 speeds (up to 12 Mbps). The Drive will auto-sense the speed of your USB port and adjust between USB 1.1 and USB 2.0 speed. Second, 480 Mbps is the *maximum* interface transfer rate of USB 2.0. Actual data transfer rates will vary depending on a number of factors, including available CPU resources.

Troubleshooting for Mac Users

Q: The Power will not go on when I turn on the Drive.

A: Make sure all your connections are secure. Make sure you properly connected the Drive's internal power cable to the installed hard disk drive.

Q: My computer does not recognize the Drive.

A. First, make sure all the connections are secure. Second, check if your AZiO Drive is listed in the Apple System Profiler. If the driver listed is “USB Authoring Support” or “Toast USB Support”, disable this Extension(s) in the Extensions Manager, as they can cause a conflict with the Drive.

Q: When I connected the Drive to my computer, I got the following alert message: “Please insert disk ‘untitled’.”

A: If you get this alert message, your Mac is not recognizing your AZiO Drive and the mouse cursor may even freeze on screen. If this happens, hold down the Apple/Control key and press the Period “.” Key. You should regain control of your mouse. Restart your computer and rebuild the Desktop. (Refer to the manual



that came with your Mac for instructions on how to rebuild the Desktop. It is good practice to periodically rebuilt the Desktop anyways). After your Mac reboots, the AZiO Drive should mount normally and you should not have this problem again.

Q: I setup my AZiO External Drive on Mac OS 9 and it was working fine. Then when I upgraded to Mac OS X my computer asked me to re-initialize the Drive.

A: If this message appears, you have no choice but to re-initialize (reformat) the AZiO Drive in order to use it on Mac OS X. You will need to copy the data stored on your Drive to another storage device before upgrading to Mac OS X. After the upgrade is complete, re-initialize the Drive on Mac OS X, and then copy the data back to it.

Q: Why is my AZiO External Drive asking me to initialize it? It was already formatted and it contains data.

A: On Mac OS 9, you may need to initialize a hard drive the first time you connect it to your computer, even though the hard drive may have already been formatted. Another reason is that the file system might have become corrupted, in which case it needs to be repaired. Use disk utility software, such as Norton Utilities, to repair the disk. Periodic testing of a hard drive is recommended to keep it in good working order.

Q: Why can't I transfer files larger than 2 GB?

A: This is a limitation of FAT32 file system. If you plan to use the AZiO Drive on Mac OS only, and you do not need Windows compatibility, consider re-formatting the Drive using the Mac OS Extended file system.

Warranty

Limited 1 Year Warranty

AZiO Corporation warrants this product against defect in material or workmanship for 1 year from the date of purchase. If this product proves to be defective, contact AZiO Corporation's customer care for repair or replacement of your unit. Return requests can not be process without the proof of original date of purchase. This warranty applies only to the original purchase of the product and is not transferable. This warranty does not cover any incompatibilities due to the user's computer, hardware, software or related system configuration in which the product interfaces. The warranty does not cover any damage caused by negligence, abuse, or non-authorized modifications. To the maximum extent permitted by applicable law, in no event shall AZiO Corporation, its affiliates, or its dealers be liable for any special, incidental, indirect or consequential damages whatsoever regardless of cause or form of action.

Contact Information

Address:

19977 Harrison Ave.
Walnut, CA 91789

Telephone:

(909) 468-1198

Fax:

(909) 839-2629

Website:

www.aziocorp.com

Customer Service:

support@aziocorp.com

Technical Support:

support@aziocorp.com

Pre-Sale Questions:

sales@aziocorp.com



Notices

COPYRIGHTS

Copyright © 2006 AZiO Corporation. All rights reserved. No part of this publication may be reproduced stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of AZiO Corporation.

TRADEMARKS

The AZiO name and its logo are registered trademarks of AZiO Corporation. Other trademarks mentioned or appearing in this document are the property of their respective owners.

CHANGES

The material in this document is for information only and subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AZiO assumes no liability resulting from errors or omissions in this document, or from the use of the information contained herein. AZiO reserves the right to make changes or revisions in the product design or the product manual without reservation and without obligation to notify any person of such revisions and changes.

FCC Information

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

