

# BT eFrame 1000 User Guide



Bringing it all together



# Welcome

to your BT eFrame 1000.

- Create a slide show of your favourite digital photos
- Add MP3 tracks to accompany your slide shows
- Transfer photos and tracks wirelessly or via USB cable from your PC
- Compatible with SD, MMC, MS and CF memory cards
- Download photos from your Flickr™ account via an RSS feed
- Display photos in landscape or portrait formats
- Calendar and clock view with embedded photo slideshow
- 128Mb memory
- Remote control

This User Guide provides you with all the information you need to get the most from your BT eFrame 1000.

You must first set up your BT eFrame 1000 before you can use it. This doesn't take long as it is easy to do.

Just follow the simple instructions on the next few pages.

#### **Need help?**

If you have any problems using your BT eFrame 1000 please contact the Helpdesk on 0808 100 9889\* or email [bteframes@staffords.ltd.uk](mailto:bteframes@staffords.ltd.uk)

Alternatively, you may find the answer in 'Help' at the back of this guide.

\* Calls made from within the UK mainland network are free. Mobile and International call costs may vary.

#### **Got everything?**


- BT eFrame 1000
- Remote control
- Stand (already attached)
- Mains power adaptor (item code 038349)
- USB cable
- BT eFrame 1000 Manager PC software CD-ROM

# In this guide


<b>Getting to know your BT eFrame 1000</b>	
Front, back and side.....	5
Display icons .....	6
Remote control.....	7
Using the BT eFrame menu .....	7
<b>Getting started</b>	
Setting up .....	8
<b>Using BT eFrame 1000 manager</b>	
Copy photos from your computer.....	16
Add or remove access to photos from My Computer .....	17
Copy music.....	17
<b>Flickr™ RSS feeds.....</b>	<b>18</b>
Set up and use Flickr™ RSS feeds .....	18
<b>Software Update.....</b>	<b>20</b>
<b>Uninstall .....</b>	<b>20</b>
<b>Using your BT eFrame 1000</b>	
Display the main menu.....	21
Navigating the main menu .....	21
Automatic slideshow and calendar .....	21
<b>Photos .....</b>	<b>22</b>
Select source of photos .....	23
Display photos from a memory card or camera... ..	24
Delete photos & folders .....	25
<b>Music.....</b>	<b>25</b>
Download tracks.....	25
Play tracks.....	26
<b>Slideshow.....</b>	<b>27</b>
Start slideshow .....	27
Rotate and zoom images during slideshow .....	27
<b>Settings</b>	
My networks .....	29
Slide show.....	30
Music.....	30
Screensaver.....	31
Time and Date settings.....	33
Brightness.....	35
Frame name .....	36
Information .....	37
Copy .....	37
Settings reset .....	38
Factory reset .....	38
<b>Help.....</b>	<b>39</b>
<b>General information</b>	
Safety information .....	40
Cleaning.....	40
Product disposal instructions.....	40
Guarantee .....	41
Technical information.....	41

# Getting to know your BT eFrame 1000


Front

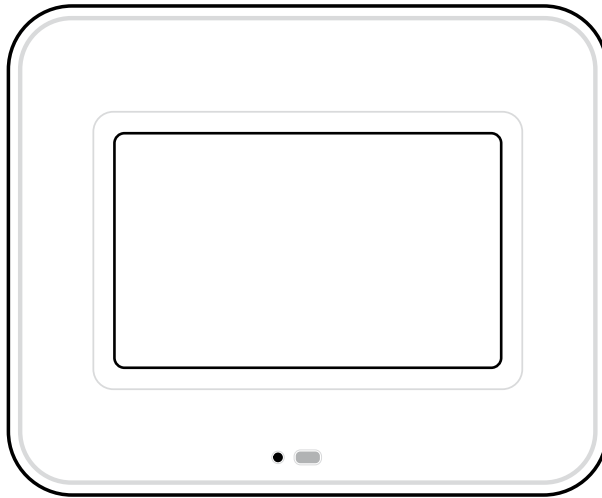

Side

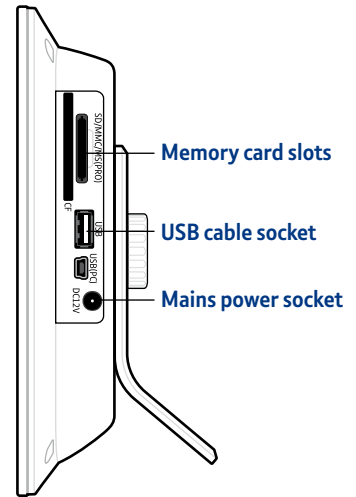

Back

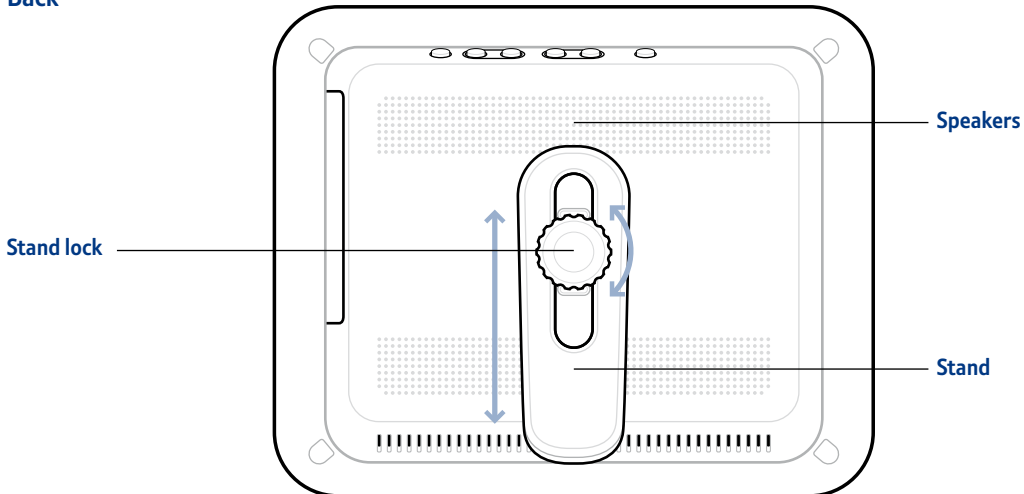

## Top

### Power

Press to switch on or off.

### LEFT / RIGHT


Press to scroll through menu options.

### UP / DOWN

Press to scroll through menu options.

### OK / Select

Press to select the option displayed.

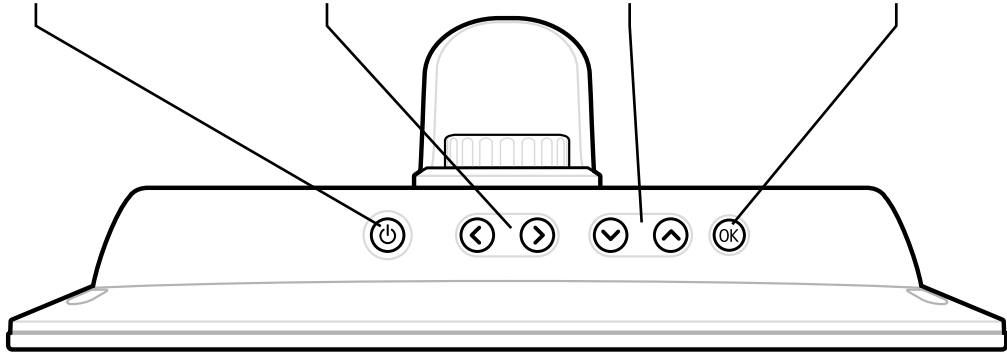

## Display icons

Meanings of the icons that you may sometimes see in the bottom right hand corner of your BT eFrame 10000 screen.

Photos displayed are from the memory card (SD/MMC/XD/MS and CF)



Photos displayed are from Nand flash (internal storage space)



Photos displayed are from the network (PC or Flickr™)



Photos displayed are from the flash drive



Connected to the internet




Connected to the local area network






## Remote control

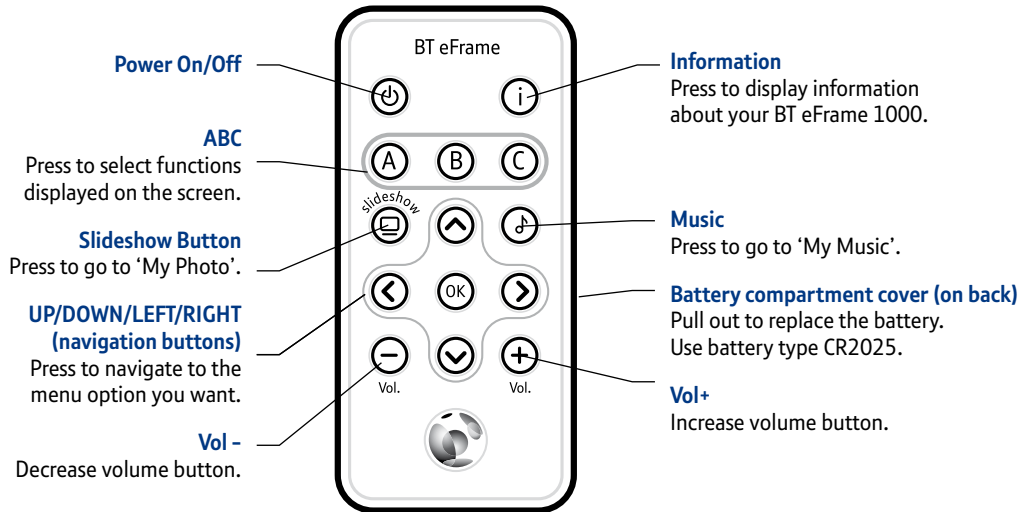
Please remove the protective tab covering the battery compartment before use.



## Using the BT eFrame menu

Use the  and  buttons to scroll up and down the menu.

Press  to select options.


Press  repeatedly to return to the main menu at any time.

# Getting started

## Setting up

### 1. Set up the eFrame.

Loosen the knob on the back of the frame and move the stand to adjust the angle of the display. You can position the stand in portrait or landscape format. Make sure you tighten the knob securely after adjustment.

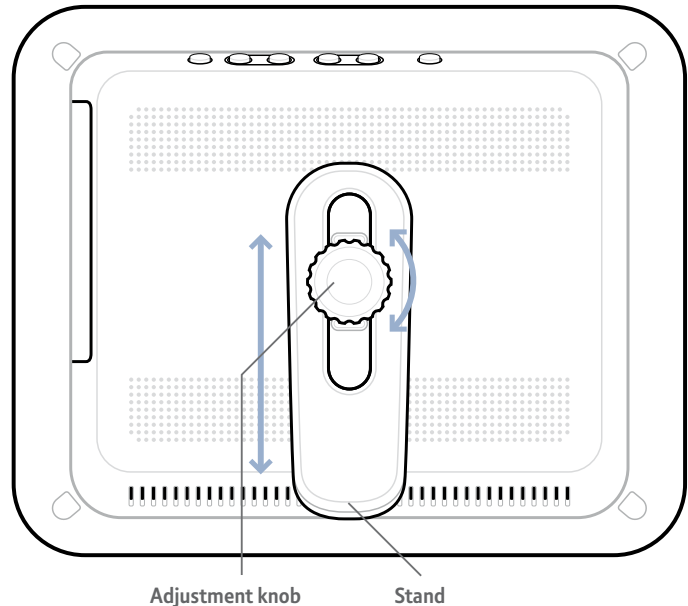



Plug the mains power adaptor into the side of the BT eFrame, then plug the other end into the wall socket and switch the power on.

**Only use the cables provided.**



The Welcome screen is displayed.

## 2. Set up Wizard

On the remote, press **OK** to start the Setup Wizard.

Follow the on screen prompts



If you experience any problems, please call the Helpline on 0808 100 9889\* or email [bteframes@staffords.ltd.uk](mailto:bteframes@staffords.ltd.uk)

### 3. Set the time and date

The **H**our box is highlighted. Press  $\uparrow$  or  $\downarrow$  to set the hour.

Press  $\rightarrow$  to highlight the **M**inute box. Press  $\uparrow$  or  $\downarrow$  to set the Minute.

Press  $\rightarrow$  to highlight and set the **Y**ear, **M**onth and **D**ay.

Press  $\circ$  to Save.



#### 4. Scan for wireless networks



Press **OK** to search for available wireless connections.


Alternatively if you already know the details of your wireless connection and prefer to enter manually press the **A** button and follow the on screen instructions.



The screen lists all available hubs or routers. The strongest signal is shown at the top. Password protected hubs are indicated by a **+** symbol.





If you experience any problems, please call the Helpline on 0808 100 9889\* or email [bteframes@staffords.ltd.uk](mailto:bteframes@staffords.ltd.uk)


Scroll  or  to highlight the hub or router you want to connect to.

Press .

If you have selected a router that requires you to enter an encryption key or wireless key (one with a locked symbol), you will be prompted to enter that key now.


If you use a BT Home Hub or router, then the wireless key is usually shown on the back.

Press  /  /  /  to select a character and press .

When you have entered the full code, scroll to **OK** on the screen and select .



Screen shows **CONNECTING** and then once successful the following screen is shown:

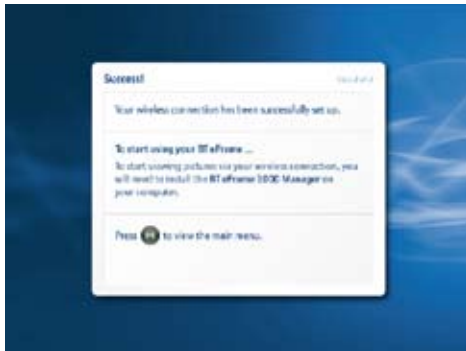

Press **OK** to display the main menu.



**WARNING**

Do not locate your BT eFrame 1000 in the bathroom or other humid areas.

**5. Install BT eFrame 1000 Manager software**

Insert the software CD provided into your computer. The program will start automatically.

The wizard will then prompt you to install the BT eFrame 1000 Manger from the CD-ROM.

The software lets you:

- copy photos and music from your PC to your BT eFrame 1000.
- display photos stored on your PC.
- display photos from the Flickr™ website on your BT eFrame 1000.
- upgrade your BT eFrame 1000 firmware.

Follow the on-screen prompts to install.

When installation is completed, the BT eFrame 1000 Manager icon will appear on your desktop.



When you install and run the software you may be prompted with the following screen below. If this happens, just click **Unblock**.



Your BT eFrame 1000 is now ready for use.

# Using BT eFrame 1000 Manager

Once the BT eFrame 1000 Manager software has been installed, you can use your PC to add new photos or music to your frame.

## Copy photos from your computer

You can copy photos from your computer either wirelessly or via the USB cable connected to your BT eFrame 1000.



1. Click on the BT eFrame 1000 icon to open the BT eFrame 1000 Manager.
2. Click **Copy Photos**.
3. Click **Browse** and select the folder or photo you want to copy.  
Or  
Drag and drop photos or folders to the screen.
4. If necessary, select which eFrame you want to copy your photos to.
5. From your photo folder, drag and drop photos to the BT eFrame 1000 copy screen.



6. Click **Copy**. Your BT eFrame 1000 shows the copying progress then displays the picture.
7. Click **Cancel** to stop copying.

### Add or remove access to photos from My Computer

1. On your PC, click **BT eFrame 1000 Manager**.
2. Click on **Photos on My Computers**. Make sure the box 'Enable my eFrame to display pictures from my Computers wirelessly' is ticked.
3. Click on **Add**, and select the photo folder you want to access.
4. Click **Add** to add another folder to the access list or **Remove** to delete a folder from the access list.

### Copy music

You can copy music wirelessly or when the USB cable is connected to your BT eFrame 1000.




1. Click on the BT eFrame 1000 icon to open the BT eFrame 1000 Manager.
2. Click **Copy Music**.
3. Click **Browse** and select the folder or track you want to copy.  
  
Or  
  
Drag and drop tracks or folders to the screen.
4. Click **Copy**. Your BT eFrame 1000 shows the copying progress then displays the track.

## Flickr™ RSS feeds

RSS stands for “Really Simple Syndication” and enables you to publish your photos online for sharing and downloading to your BT eFrame 1000.

### Set up and use Flickr™ RSS feeds

#### From your PC

1. Click on the BT eFrame 1000 icon on the desktop to open the BT eFrame 1000 Manager software.
2. Click on **Manage Flickr™ Albums** (this will open the internet browser on the Flickr™ homepage).
3. Log into your account.
4. Locate the  and drag into the BT eFrame 1000 Manager. (Note: photos must be set to “Public” to allow them to be streamed to your frame).

5. Select the BT eFrame you want to copy to (if you have more than one) by clicking the drop-down box and selecting from the list.
6. Press **Update**. A progress bar will indicate that the link is successful.
7. Press **Menu** to return to main menu.

### **From the BT eFrame 1000**

1. Click on **Photos** from the main menu.
2. Select **Flickr™**.
3. Press **OK**.
4. All of the folders that have been selected in the eFrame 1000 Manager software are shown and when highlighted the folder name is displayed.
5. Scroll to the folder that you want to stream to your eFrame and press **OK**.
6. Thumbnails of the files on the folder are shown and you have the option to copy these to the internal memory or press slideshow and the images will now be displayed as a slideshow.


## Software Update

As new features become available, you can receive software upgrades for your BT eFrame 1000.

1. At your computer, click on the BT eFrame 1000 Manager.
2. Click **Software Update**. You are taken to the BT eFrame update page. Follow the onscreen prompts to update your software.

## Uninstall

You can safely remove your BT eFrame 1000 software from your computer.

1. At your computer, press **Start, Control Panel** then **Add/Remove** programs.
2. Scroll  to BT eFrame then click **Uninstall**.

# Using your BT eFrame 1000

## Display the main menu

1. When the BT eFrame 1000 is plugged in and switched on, press ⏪ on the remote control until the menu appears.

## Navigating the main menu



1. Scroll ⬆ or ⬇ to highlight the option you want.
2. Press ⏹.
3. To return to the main menu at any time, press ⏪ until the menu appears.

## Automatic slideshow and calendar

If you do not press any button for 30 seconds, the screensaver of a calendar/ clock or slide show screen will automatically start unless you have set the Screensaver menu to “Off”, then the eFrame will not change.

Press the ⏩ key for full screen slideshow and then ⏪ key to go back to the calendar screen or previous screen.

## Photos

You can select photos for your slide show from:

- **Internal Storage**  
You can copy and store photos on the 128Mb internal memory.
- **Flickr™**  
This lets you view photos stored in a Flickr™ account.  
To set up, see BT eFrame 1000 Manager, page 18.
- **Memory cards**  
Display photos on a memory card inserted into your BT eFrame 1000.
- **Photos on my computer**  
This lets you view photos stored on your computer. To set up, see BT eFrame 1000 Manager, page 16.

## Select source of photos

1. From the BT eFrame 1000 main menu, highlight Photos and press **(OK)**.



2. Scroll **(↑)** and **(↓)** to select from:

### Internal Storage

### Memory card (this will show as the card inserted, e.g. SD)

### Flickr™

### Photos on my computers


3. Press **(→)** to select the option you want.
4. Scroll **(↑)** or **(↓)** to the folder or photo you want.
5. Press **(OK)** to add the photo or file to your slideshow.

If you select Internal storage or a memory card, all the photos are displayed as thumbnails.

Scroll **(↑)** or **(↓)** through the photos and press **(A)** to copy the photos you want to the slideshow or **(B)** to delete the photo.

To download photos from your computer, see page 16.

To view photos from Flickr™ see page 18.

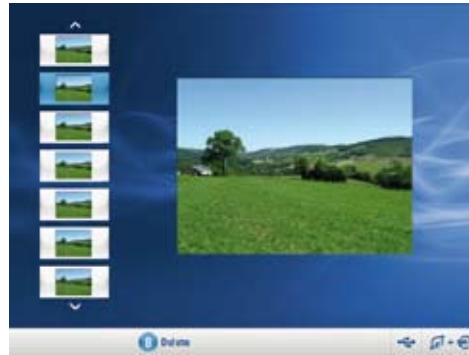

### Display photos from a memory card or camera


Your BT eFrame 1000 takes SD, MMC, MS Pro and CF memory cards

1. Insert your memory card into the correct slot at the side of your frame.






Or

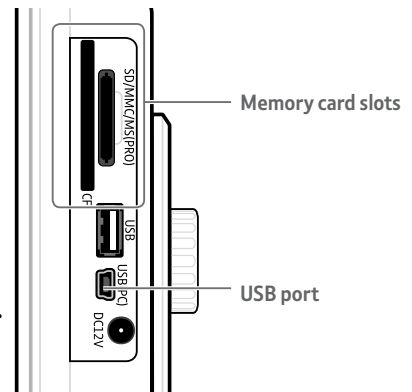Connect the USB cable between your camera and the frame.









The screen shows **LOADING...**





2. Thumbnails of photos are displayed on the left hand side of the screen.
3. To copy each photo to the BT eFrame 1000 memory, scroll  or  to the photo you want and press  on the remote control.
4. To delete the photo from the memory card, press .
5. Press  to finish.

### Delete photos and folders

1. Press  to open the main menu.
2. Press  to select **Photos**.
3. Press  to select **Internal Storage**.
4. Scroll  or  to the folder or photo you want and press .
5. Press  to confirm or  to cancel.

## Music

Store and play MP3 tracks. Select a track to accompany your slideshows.

### Download tracks

You can play tracks from:

- Memory cards inserted into your BT eFrame 1000.
- MP3 files copied onto your BT eFrame 1000.

To download tracks from your computer, see Copy Music, page 17.

#### To set default music volume

To select the standard volume which tracks are always played at, see Settings and then Music, page 30.

### Play tracks

1. Press **⏪** to open the main menu.
2. Scroll **⏴** to **My Music** and press **OK**.
3. Scroll **⏴** or **⏵** to the available options and press **OK**.

When a track is playing the screen shows the track details:



Press **A** to pause playback.

Press **B** to stop playback.

Press **C** to change the order of playback.

Press **Vol. -** or **Vol. +** adjust the volume.

Press **⏪** to return to the main menu.

Press **OK** to display full screen slideshow.

# Slideshow

## Start slideshow

1. Press **⏪** to open the main menu.
2. Scroll **⏴** to **Slideshow** and press **OK**.



## Rotate and zoom images during slideshow

1. While the slide show is running, press **⏩**.
2. Press **A** to zoom in and out. (When a photo is enlarged, press **⏴**, **⏪** or **⏩** to select the best screen image.)  
Press **B** to rotate the image anti-clockwise.  
Press **C** to rotate the image clockwise.  
Press **⏴** to display the previous picture.  
Press **⏩** to display the next picture.

Or

Press ⏪ to display the main menu

If you do not press any button for 30 seconds, the zoom and rotate button are removed from the screen.

# Settings

Change the way your BT eFrame 1000 works using options under the Settings menu.



## My Networks






 

### Scan for new wireless connections





Find and connect to new BT Home Hubs or compatible routers.




1. Press ⏪ to display the main menu, scroll ⏴ to **Settings** and press ⏹.
2. **My Network** is highlighted. Press ⏹.
3. Available networks are displayed. Scroll ⏴ or ⏵ to the network you want and press ⏹.
4. Press ⏪ until the main menu is displayed.

If required, use the on screen keyboard to enter the details required. Then scroll to **OK** on the keyboard and press ⏹ on the remote.

## Slide show


1. Press  to display the main menu, scroll  to **Settings** and press .
2. Scroll  to **Slide Show** and press .
3. Scroll  or  to select:


**Transition Time** – Press  then  or  to set the length of time each photo is displayed. Press  to select.

**Transition Effects** – Press  then  or  to set the way each photo changes.

Press  to select.








**Play Order** – Press  then  or  to the option you want.

Press  to select. The option selected is marked with a ✓.

4. Press  repeatedly to save the settings and return to the main menu. After 30 seconds, the slide show will begin.

## Music

Set the default playback volume and select playback options including Sequential, Repeat and Shuffle.

1. Press  to open the main menu.
  2. Scroll  to **Settings** and press .
  3. Scroll  to **Music** and press .
- Scroll  or  to select from:


**Volume** – Press **OK** to display the volume bar. Press **vol. -** or **vol. +** to adjust the volume.

Press **OK**.

**Play Options** – Press **OK** then scroll **^** or **v** to the option you want and press **OK**.

4. Press **<** repeatedly to save the settings and return to the main menu.

## Screen Saver

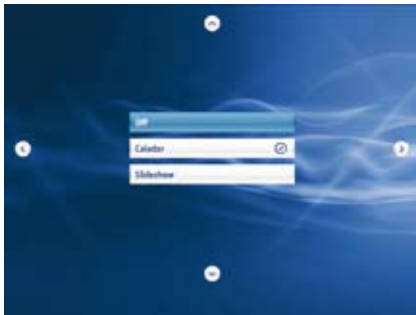

Your BT eFrame 1000 gives you the option of displaying a clock and calendar screensaver showing a small slide show of photos instead of a full screen slide show.


### Select Screensaver

1. If necessary, press ⬅ until the main menu is displayed.
2. Scroll ▼ to **Settings** and press Ⓚ.
3. Scroll ▼ to **Screensaver** and press Ⓚ.
4. Scroll ▲ or ▼ to select from:

**Off** – Press Ⓚ then ⬅ until the main menu is displayed.

**Calendar** – Press Ⓚ then ⬅ until the main menu is displayed.

**Slide Show** – Press Ⓚ then ⬅ until the main menu is displayed.

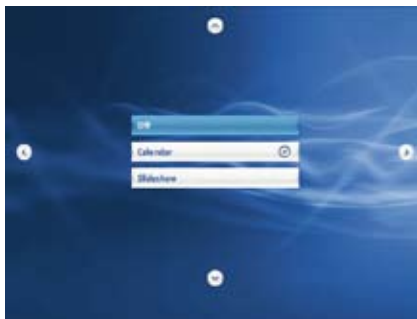

- When set to Off the screen will remain on whichever menu screen you are on.
- When set to Calendar or Slideshow, these will start automatically after 30 seconds.



# Time and Date settings

## Current time and date



1. The **Hour** box is highlighted. Press  $\uparrow$  or  $\downarrow$  to set the hour.
2. Press  $\rightarrow$  to highlight the **Minute** box. Press  $\uparrow$  or  $\downarrow$  to set the Minute.
3. Press  $\rightarrow$  to highlight and set the **Year, Month and Day**.
4. Press  $\text{OK}$  to Save.

## British Summer Time

When set to On, your BT eFrame 1000 will automatically adjust the time setting for BST.

1. Scroll  $\uparrow$  or  $\downarrow$  to **On** or **Off** and press  $\text{OK}$ .
2. Press  $\leftarrow$  to return to the main menu.

## Sleep setup



Set your BT eFrame 1000 to switch on and off at specific times.

1. Press **⏪** to display the main menu, scroll **⏴** to **Settings** and press **OK**.
2. Scroll **⏴** to **Time and Date** and press **OK**.
3. Scroll **⏴** to **Sleep Setup** and press **OK**.
4. To switch sleep function on, press **⏴** or **⏵** to tick the box **Enable Sleep**.
5. Press **⏴** and **⏵** to highlight the **Wake Up** or **Shut Down** hour or minute boxes then press **⏴** or **⏵** to set the time.
6. When you have set the time, press **OK** to return to the previous menu level.
7. Press **⏴** / **⏵** / **⏪** / **⏩** to select a character and press **OK**.
8. When the name is complete scroll to **OK** on the screen and press **OK** on the remote.
9. Press **⏪** to return to the main menu. After 30 seconds the slide show will begin.

# Brightness















Adjust the brightness of the screen to suit different lighting conditions.

1. Press to display the main menu, scroll to **Settings** and press .
2. Scroll to **Brightness** and press .
3. Scroll or to the brightness level you want. Press to confirm.
4. Press repeatedly to save the settings and return to the main menu. After 30 seconds, the slide show will begin.

## Frame name

### Name your BT eFrame

Make your BT eFrame 1000 easy to recognise when it is displayed on another device such as your computer. This is especially useful if you have more than one frame.

1. Press  to display the main menu, scroll  to **Settings** and press .
2. Scroll  to **Frame Name** and press .
3. Press  /  /  /  to select a character and press .
4. When the name is complete scroll to **OK** on the screen and press  on the remote.
5. Press  to return to the main menu. After 30 seconds the slide show will begin.

## Information

Display details about your BT eFrame 1000.







1. Press to display the main menu, scroll to **Settings** and press .
2. Scroll to **Information** and press .
3. Press to return to the main menu. After 30 seconds the slide show will begin.

## Copy

Copy photos or music tracks between a memory card and the internal memory.









1. Press to display the main menu, scroll to **Settings** and press .
2. Scroll to **Copy** and press .
3. Press to display the list of available files.

4. Scroll  or  to the one you want and press  to begin copying
5. Press  to return to the main menu. After 30 seconds the slide show will begin.

## Settings reset









### Settings reset

This will reset your BT eFrame 1000 to its original settings.

1. On the remote control, press  until the main menu is displayed.
2. Scroll  to **Settings** and press .
3. Scroll  or  to **Settings Reset** and press .
4. Press  to confirm or  to cancel.

### Factory reset

This will permanently delete all photos, music and settings on your BT eFrame 1000.

1. On the remote control, press  until the main menu is displayed.
2. Scroll  to **Settings** and press .
3. Scroll  or  to **Factory Reset** and press .
4. Press  to confirm or  to cancel.

Please note a factory reset will delete all photos and music on your BT eFrame 1000.

## How many pictures will my BT eFrame 1000 hold?

This varies, depending on the file size of each picture and the capacity of the memory card you are using.

Your BT eFrame has an internal memory of 128MB.

To calculate how many pictures your memory card can hold, divide the capacity of your card by the average file size of your images. The number of images will increase if you shoot in a lower resolution mode, and decrease if you shoot in a higher resolution mode.

Card Size	No. of Pictures
-----------	-----------------

Based on a camera taking digital pictures of 3.2MB file size:

64MB	20
128MB	40
256MB	80
512MB	160
1GB	312

## What media formats can I display?

Your BT Digital Photo Frame supports the JPEG format loaded from your digital camera. It may not read all images downloaded from the internet.

### Does not read my memory card

Make sure your memory card is compatible with the BT Digital Photo Frame: SD, MMC, MS Pro or CF.

Check that the card is inserted all the way into the correct slot.

### Some photos load faster than other.

Pictures with a higher resolution take longer to load.

# General information

## Safety information

- Handle your product with care.
- Avoid touching the LCD screen as skin oils can be difficult to remove.
- Place your digital frame on a stable, level surface.
- Do not expose to direct sunlight or high temperatures.
- Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.
- Only use the power adaptor supplied (item code 038349). Using an unauthorised power supply will invalidate your guarantee and may damage the eFrame.
- Do not open the eFrame. This could expose you to high voltages and other risks. Contact the Helpline on 0808 100 9889\* for all repairs.
- Do not expose your eFrame to fire, explosive or other hazardous conditions.

## Cleaning

Clean the screen and frame with a soft, lint-free cloth to remove dust.

If the screen is still not clean, apply a small amount of non-ammonia, non-alcohol based glass cleaner using a soft lint-free cloth. Please note that using a chemical/alcohol cleaner could damage the screen and display case.

## Product disposal instructions



The symbol shown here and on the product means that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.

The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimise the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

### Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product as per your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased.

### Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.



---

## Guarantee

Your BT eFrame is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below, the guarantee will provide for the repair of, or at BT's or its agent's discretion, the option to replace the BT eFrame or any component thereof, which is identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished or repaired product.

### **The conditions of this guarantee are:**

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is provided.
- The equipment is returned to BT or its agent as instructed.

This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

This guarantee does not affect your statutory rights.

## R&TTE Directive & Declaration of Conformity

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive (1999/5/EC). For a copy of the Declaration of Conformity please contact the BT eFrame Helpline on 0808 100 9889\* or go to [www.bt.com/help/eframes](http://www.bt.com/help/eframes)

## Technical information

Unit Size	95 x 195 x 240mm
Display Area	8" TFT LCD
Resolution	800 x 600
A.C. Adapter	AC110—240V (50HZ—60HZ)
Unit Input Voltage	12VDC@1.5A
Operating Temperature	0°C - 50°C
Weight	795 gms
Formats	JPEG
Media	SD, MMC, MS Pro and CF memory cards
Maximum no. of Images	varies, depending on image file size
Default Start Mode	Auto Slide Show



Working together, supporting energy saving products

BT & British Gas have joined forces to help our customers find new ways to save energy around the home, so we can all do our bit for the environment & save money too!

BT is a **sustainability leader**

{ To find out how we're  
making our products  
greener visit

[bt.com/betterworld/products](http://bt.com/betterworld/products) 

### Offices worldwide

The services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

© British Telecommunications plc 2008.  
Registered Office: 81 Newgate Street, London EC1A 7AJ.  
Registered in England No. 1800000.  
Printed in China

Designed and produced by The Art & Design Partnership Ltd.

BT eFrame 1000 (09/08) Issue 1

